



IBM Systems

IBM ToolsCenter Bootable Media Creator Installation and User's Guide

Version 9.63





IBM Systems

IBM ToolsCenter Bootable Media Creator
Installation and User's Guide

Version 9.63

Note

Before using this information and the product it supports, read the information in “Notices” on page 55.

Edition Notice

This edition applies to version 9.63 of IBM ToolsCenter Bootable Media Creator and to all subsequent releases and modifications until otherwise indicated in new editions.

© Copyright IBM Corporation 2009, 2014.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

About this publication	v
Conventions and terminology	v
Publications and related information	v
Web resources	v
How to send your comments	vi

Chapter 1. Technical overview	1
--	----------

Chapter 2. Downloading IBM ToolsCenter Bootable Media Creator . . . **3**

Hardware and software requirements	3
Hardware requirements.	3
Supported hardware.	4
Supported operating systems	6
Supported tools	7
Supported browsers	7
Supported bootable media.	7
Downloading IBM ToolsCenter Bootable Media Creator	7
Updating IBM ToolsCenter Bootable Media Creator	7

Chapter 3. Creating and updating bootable media **11**

Creating bootable media	11
Creating bootable media combining firmware and operating system updates.	15
Creating bootable media for a specific firmware update	15
Creating bootable media that acquires updates from an NFS or Samba server	16
Creating an IBM ServerGuide Setup and Installation CD	19
Updating existing bootable media	21

Chapter 4. Using bootable media **27**

Booting from bootable media using the graphical interface	27
Booting from bootable media using the text interface	28

Chapter 5. Troubleshooting and support **29**

Limitations and problems.	29
Workarounds.	32
IBM ToolsCenter Bootable Media Creator log file	34
Getting help and technical assistance	34
Before you call	34
Using the documentation.	35
Getting help from the World Wide Web	35
Software service and support	35
Hardware service and support	35

Appendix A. Accessibility features for IBM ToolsCenter Bootable Media Creator **37**

Appendix B. IBM ToolsCenter Bootable Media Creator commands **39**

How to read syntax diagrams	39
Configuration file	39
<i>ibm_utl_bomc_v.r.m_distribution</i> - Create bootable media using the CLI	42

Notices **55**

Index **59**

About this publication

This publication provides information about how to download and use IBM® ToolsCenter Bootable Media Creator, including creating and using bootable media to update, diagnose, and deploy IBM systems, troubleshooting and support, and a command reference.

Conventions and terminology

Paragraphs that start with a **Note**, **Important**, or **Attention** in bold have specific meanings that highlight key information.

Note: These notices provide important tips, guidance, or advice.

Important: These notices provide information or advice that might help you avoid inconvenient or difficult situations.

Attention: These notices indicate possible damage to programs, devices, or data. An attention notice appears before the instruction or situation in which damage can occur.

Publications and related information

To view a PDF file, you need Adobe Acrobat Reader, which can be downloaded for free from the Adobe website at www.adobe.com/products/acrobat/readstep.html

Publications

The most recent version of IBM Bootable Media Creator (BoMC) Publications are available for download at: <http://www-947.ibm.com/support/entry/portal/docdisplay?lnocid=MIGR-5089515>.

Web resources

The following websites provide tool and information resources for IBM ToolsCenter Bootable Media Creator.

Websites

- IBM Bootable Media Creator
<http://www-947.ibm.com/support/entry/portal/docdisplay?lnocid=TOOL-BOMC>
Use this website to download the IBM ToolsCenter Bootable Media Creator tool and documentation.
- IBM ToolsCenter
<http://www-947.ibm.com/support/entry/portal/docdisplay?lnocid=tool-center>
Use this website to download tools that support IBM System x® and IBM BladeCenter® products.

These websites provide information about product compatibility and support, warranties and licenses, and various technical resources:

- IBM BladeCenter Support and services

<http://www-03.ibm.com/systems/bladecenter/support/>

- IBM ServerProven®
www.ibm.com/servers/eserver/serverproven/
- IBM System x Support and services
<http://www-03.ibm.com/systems/x/support/>

Forums

Use these websites to learn about various forums that are available to discuss technology-related and product-related issues pertaining to IBM System x and IBM BladeCenter hardware and software products. These websites include links for obtaining the forums using Rich Site Summary (RSS) feeds.

- IBM System x Forum
<https://www.ibm.com/developerworks/community/forums/html/forum?id=11111111-0000-0000-0000-000000002691#topicsPg=0>
- IBM BladeCenter Forum
<https://www.ibm.com/developerworks/community/forums/html/forum?id=11111111-0000-0000-0000-000000000819>

How to send your comments

Your feedback is important in helping to provide the most accurate and highest quality information.

If you have any comments about this publication or any other IBM ToolsCenter for System x and BladeCenter publication:

- Go to the IBM ToolsCenter for System x and BladeCenter Information Center information center website at <http://publib.boulder.ibm.com/infocenter/toolsctr/v1r0/index.jsp>. There you will find the feedback page where you can enter and submit comments.
- Complete one of the forms at the back of any IBM ToolsCenter for System x and BladeCenter publication and return it by mail, by fax, or by giving it to an IBM representative.

Chapter 1. Technical overview

You can use IBM ToolsCenter Bootable Media Creator to create bootable media that is suitable for applying firmware updates, running preboot diagnostics, and deploying Windows operating systems on supported IBM System x and BladeCenter systems.

IBM System x and BladeCenter tools each have their own bootable CD. Using IBM ToolsCenter Bootable Media Creator, you can create a single bootable image on supported media (such as CD, DVD, ISO image, USB flash drive, or set of PXE files) that bundles multiple IBM System x and BladeCenter tools and updates from UpdateXpress System Packs, which contain Windows and Linux firmware and device driver updates. You can also create an IBM ServerGuide Setup and Installation CD for deploying Windows operating systems and updates on supported systems.

Important: Device drivers are not included on the bootable image and must be updated separately.

IBM ToolsCenter Bootable Media Creator can acquire the latest bootable environment, UpdateXpress System Pack, individual updates, and IBM Preboot Dynamic System Analysis from the local system or download these tools and the IBM ServerGuide from the IBM website. An Internet connection is required to download tools and updates from the IBM website. You can use an HTTP proxy when connecting to the Web. If you use an HTTP proxy, the HTTP server must support Secure Sockets Layer (SSL).

You can run only one instance of IBM ToolsCenter Bootable Media Creator on a system at a time, whether it is started from the graphical or command-line interface. This includes instances of IBM ToolsCenter Bootable Media Creator that are bundled in other tools, such as UpdateXpress System Pack Installer.

Beginning with IBM ToolsCenter Bootable Media Creator 9.63, Bootable Media Creator filters the update packages included in the bootable media based on the purpose of the media and the machine types you have selected.

- For deployment media containing the IBM ServerGuide, which is a Windows-based tool, the Windows PE update packages for the machine types you have selected are added to the media.
- For diagnostic or update media, which use Linux-based tools, only the Linux update packages for your selected machine types are included. Previous versions of the tool included all available update packages, resulting in significantly larger media.

Prerequisites: You must have administrator or root-equivalent operating-system privileges to use IBM ToolsCenter Bootable Media Creator.

Chapter 2. Downloading IBM ToolsCenter Bootable Media Creator

This section provides information about the hardware and software requirements, downloading instructions, and updating procedures.

Hardware and software requirements

IBM ToolsCenter Bootable Media Creator has specific requirements for hardware and software. These requirements include support for supported operating systems and hardware for running IBM ToolsCenter Bootable Media Creator, and support for certain hardware for creating and using bootable media.

Hardware requirements

To successfully run IBM ToolsCenter Bootable Media Creator, the system where you install IBM ToolsCenter Bootable Media Creator must meet certain hardware requirements.

- The system running IBM ToolsCenter Bootable Media Creator must have 1.5 GB or more of available disk space.

Note: The required disk space depends on the size of bootable media that you want to create. You must have at least 4 times the disk space used by the working directory, which includes the bootable environment, update packages, and tools. For example, if you create a bootable ISO image and the working directory size is 600 MB, the required free disk space is $4 * 600 \text{ MB} = 2.4 \text{ GB}$.

- The Intel or AMD x86 processor processor-based systems that are booted using the created bootable media must have 1.5 GB or more of available memory.
- For PXE media, you must have at least 4 times the memory of the created PXE image. For example, if the created PXE image is 600 MB, the required memory is $4 * 600 \text{ MB} = 2.4 \text{ GB}$ to boot the PXE image.

EFI Boot

Bootable Media Creator (BoMC) supports creating EFI bootable media. UEFI supports two types of boot modes: *Legacy* and *EFI*. This requires that the boot modes in the UEFI setting are set to *UEFI Only* or *UEFI and Legacy*. Beginning with version 9.20, BoMC no longer supports the *legacy only* boot mode.

IPv6 enablement

Beginning with version 9.20, Bootable Media Creator supports IPv6 addressing. This section provides information about enabling IPv6 compatibility.

Serial over LAN connections

To use the Bootable Media Creator on a Serial over LAN connection in an IPv6 network, the following criteria is required:

- The Advanced Management Module (AMM) on the IBM BladeCenter has a firmware level that supports IPv6 with both Serial over LAN and IPv6 must be enabled.
- The network connectivity between the SOL console and the BladeCenter uses IPv6.
- Network connectivity for a file transfer in unattended mode has been set up prior to establishing the SOL connection.

Acquisition

- Bootable Media Creator can perform acquisition over a direct LAN connection using IPv6.
- Bootable Media Creator can perform acquisition and update the support list through a proxy server with IPv6 enabled. Network connectivity from the proxy server to the destination server is not restricted to IPv6.

Connection test

- You can test connectivity from the HTTP Proxy page of the Bootable Media Creator by supplying an IPv6 address enclosed in brackets as shown here: [2002:325b:1000::97d:5a20].
- The IPv6 protocol stack is preinstalled on the system running Bootable Media Creator.

Supported hardware

You can use IBM ToolsCenter Bootable Media Creator to create bootable media that supports various IBM System x and BladeCenter systems.

Supported systems

You can run IBM ToolsCenter Bootable Media Creator on any x86 system running a supported operating system.

You can create bootable media for any supported IBM system. The following systems are supported by IBM ToolsCenter Bootable Media Creator:

IBM BladeCenter servers:

IBM BladeCenter HS22, machine type 1936, 7809, 7870

IBM BladeCenter HS22V, machine type 1949, 7871

IBM BladeCenter HS23, machine type 7875

IBM BladeCenter HS23E, machine type 8038, 8039

IBM BladeCenter HX5, machine type 1909, 7872, 7873

IBM Flex System servers:

IBM Flex System x220 Compute Node, machine type 2585, 7906

IBM Flex System x222 Compute Node, machine type 7916

IBM Flex System x240 Compute Node, machine type 7863, 8737, 8956

IBM Flex System x280 X6/480 X6/x880 X6 Compute Node, machine type 4259, 7903

IBM Flex System x440 Compute Node, machine type 7917

IBM System x and xSeries servers:

IBM NeXtScale nx360 M4, machine type 5455

IBM Smart Analytics System, machine type 7949

IBM System x3100, machine type 4348

IBM System x3100 M4, machine type 2582

IBM System x3100 M5, machine type 5457

IBM System x3200, machine type 4362, 4363

IBM System x3200 M2, machine type 4367, 4368

IBM System x3200 M3, machine type 7327, 7328
IBM System x3250, machine type 4364, 4365, 4366
IBM System x3250 M2, machine type 4190, 4191, 4194
IBM System x3250 M3, machine type 4251, 4252, 4261
IBM System x3250 M4, machine type 2583
IBM System x3250 M5, machine type 5458
IBM System x3300 M4, machine type 7382
IBM System x3350, machine type 4192, 4193
IBM System x3400 M2 and x3500 M2, machine type 7836, 7837, 7839
IBM System x3400 M3, machine type 7378, 7379
IBM System x3455, machine type 7940, 7941
IBM System x3500 M3, machine type 7380
IBM System x3500 M4, machine type 7383
IBM System x3530 M4, machine type 7160
IBM System x3550 M3, machine type 4254, 7944
IBM System x3550 M4, machine type 7914
IBM System x3620 M3, machine type 7376
IBM System x3630 M3, machine type 7377
IBM System x3630 M4, machine type 7158
IBM System x3650 M2, machine type 4199, 7947
IBM System x3650 M3, machine type 4255, 5454, 7945
IBM System x3650 M4, machine type 5460, 7915
IBM System x3650 M4 BD, machine type 5466
IBM System x3650 T, machine type 7980
IBM System x3655, machine type 7943
IBM System x3690 X5, machine type 7147, 7148, 7149, 7192
IBM System x3750 M4, machine type 8722, 8733
IBM System x3750 M4, machine type 8752, 8718
IBM System x3750 X5, machine type 7148, 7149
IBM System x3755 M3, machine type 7164
IBM System x3800, machine type 8866
IBM System x3850 X5, machine type 7143, 7145, 7191
IBM System x3850 X6/x3960 X6, machine type 3837, 3839
IBM System x3950, machine type 7366, 8878
IBM System x3950 X5, machine type 7143, 7146, 7191
IBM System x iDataPlex Direct Water Cooled dx360 M4, machine type 7918,7919
IBM System x iDataPlex dx360 M2, machine type 6380, 7321, 7323

IBM System x iDataPlex dx360 M3, machine type 6391

IBM System x iDataPlex dx360 M4, machine type 7912, 7913

Note: The following systems support both single node and multi node:

- IBM BladeCenter HX5
- IBM System x3850 X5
- IBM System x3950 X5

Supported operating systems

You can run IBM ToolsCenter Bootable Media Creator on systems running on one of the following operating systems, which includes 32-bit and 64-bit versions.

- **Windows:**
 - Windows Server 2012
 - Windows Server 2012 R2
 - Windows Small Business Server 2011
 - Windows Server 2008 R2
 - Windows Server 2008 Web, Standard, and Enterprise Edition (supports only Service Pack 1)
 - Windows Server 2003 Enterprise and Standard Editions, Release 2 (supports only Service Pack 2)
 - Windows Server 2003 Enterprise and Standard Editions (supports only Service Pack 2)
 - Windows Small Business Server 2003 Enterprise and Standard Editions, Release 2 (supports only the latest Service Pack)
 - Windows Small Business Server 2003 Enterprise and Standard Editions (supports only the latest Service Pack)
 - Windows Storage Server 2003, Release 2 (supports only the latest Service Pack)
 - Windows Storage Server 2003 (supports only the latest Service Pack)
 - Windows 7
 - Windows Vista Ultimate Editions
 - Windows XP Professional Edition
- **Linux:**
 - Red Hat Enterprise Linux AS, ES, and WS, version 7.0 with and without the Xen Kernel
 - Red Hat Enterprise Linux AS, ES, and WS, version 6.0 with and without the Xen Kernel (supports Update 1, 2, 3, 5)
 - Red Hat Enterprise Linux AS, ES, and WS, version 5.0 with and without the Xen Kernel (supports Updates 2-10)
 - Red Hat Enterprise Linux AS, ES, and WS version 4.0 (supports Updates 7-9)
 - SUSE Linux Enterprise Server 11 with or without the Xen Kernel (supports Service Pack 1, 2, 3)
 - SUSE Linux Enterprise Server 10 with or without the Xen Kernel (supports Service Packs 2-4)

Notes:

- Since there is no executable file for the Windows 64-bit operating system, you can run the executable file for the Windows 32-bit operating system through Windows on Windows (WOW).
- You cannot run IBM ToolsCenter Bootable Media Creator on Windows Preinstallation Environment (WinPE).

Supported tools

You can bundle these tools on the bootable media:

- IBM ServerGuide
- Preboot Dynamic System Analysis
- UpdateXpress System Pack Installer

Supported browsers

To use the graphical interface for creating bootable media, at least one of the supported browsers must be accessible to the IBM ToolsCenter Bootable Media Creator:

- Firefox 2.0 or higher
- Internet Explorer 6.0 or higher. Windows Server 2003 requires Internet Explorer 7.0 or later
- Mozilla 1.7 or later
- SeaMonkey 1.1.4 or later

Supported bootable media

IBM ToolsCenter Bootable Media Creator creates bootable images on several forms of media, including CD, DVD, ISO image, PXE files, or USB flash drive.

Supported PXE servers

You can create bootable Preboot Execution Environment (PXE) files for the following PXE servers:

- Altiris PXE server (Windows only)
- Dynamic Host Configuration Protocol (DHCP) server (Linux only)
- Trivial File Transport Protocol (TFTP) server (Linux only)

Supported USB flash drives

You can create bootable media on the following USB flash drives:

- Lexar USB flash drives, including JumpDrive Lightning 1-GB, 2-GB, 4-GB, 8-GB, 16-GB, and 32-GB
- SanDisk USB flash drives, including Cruzer Micro 1-GB, 2-GB, 4-GB, 8-GB, 16-GB, and 32-GB

Downloading IBM ToolsCenter Bootable Media Creator

After downloading IBM ToolsCenter Bootable Media Creator, you can start using it. Bootable Media Creator is a self-extracting application and does not need to be installed. It is extracted automatically to a temporary directory when it is run. The temporary directory is random and changes each time you run the tool.

About this task

You can download Bootable Media Creator from the IBM Bootable Media Creator website at <http://www-947.ibm.com/support/entry/portal/docdisplay?lnocid=TOOL-BOMC>.

Updating IBM ToolsCenter Bootable Media Creator

You can check the Web for a newer version of IBM ToolsCenter Bootable Media Creator and download it to your local system if an update is available.

About this task

Complete the following procedure to update Bootable Media Creator:

Procedure

1. On a command line, enter the command name with no options to start the IBM ToolsCenter Bootable Media Creator wizard. The command name depends on the operating system from which you are running the command. The following table lists the name of the command for each supported operating system.

Operating system	Command name
Windows	ibm_utl_bomc_v.r.m_windows_i386.exe
Red Hat Enterprise Linux 7.0	ibm_utl_bomc_v.r.m_rhel7_x86-64.bin
Red Hat Enterprise Linux 6.0	ibm_utl_bomc_v.r.m_rhel6_i386.bin
Red Hat Enterprise Linux 6.0 64-bit	ibm_utl_bomc_v.r.m_rhel6_x86-64.bin
Red Hat Enterprise Linux 5.0	ibm_utl_bomc_v.r.m_rhel5_i386.bin
Red Hat Enterprise Linux 5.0 64-bit	ibm_utl_bomc_v.r.m_rhel5_x86-64.bin
Red Hat Enterprise Linux 4.0	ibm_utl_bomc_v.r.m_rhel4_i386.bin
Red Hat Enterprise Linux 4.0 64-bit	ibm_utl_bomc_v.r.m_rhel4_x86-64.bin
SUSE Linux Enterprise Server 11	ibm_utl_bomc_v.r.m_sles11_i386.bin
SUSE Linux Enterprise Server 11 64-bit	ibm_utl_bomc_v.r.m_sles11_x86-64.bin
SUSE Linux Enterprise Server 10	ibm_utl_bomc_v.r.m_sles10_i386.bin
SUSE Linux Enterprise Server 10 64-bit	ibm_utl_bomc_v.r.m_sles10_x86-64.bin

The License Agreement page opens.

2. Accept the license agreement and proceed to the Welcome page.
3. To check the Web for the latest version of IBM ToolsCenter Bootable Media Creator and download the newer version, click **Check for the latest version of this tool** and save the file in the directory where the command was run.
4. Click **Next**.
5. On the HTTP Proxy page, complete the following steps:
 - a. Select a proxy option:

Do not use proxy

Select this radio button if you do not require an HTTP proxy to connect to the Web.

Use proxy

Select this radio button if you require an HTTP proxy to connect to the Web, and then complete these fields:

Host name

The host name, IP address, or domain name of the HTTP proxy server.

Port The port number of the HTTP proxy server.

- b. If credentials must be specified to authenticate to the HTTP proxy server, select the **Authenticate using the following credentials** check box and then complete these fields:

User name

The user name to use for authenticating to the HTTP proxy server.

Password

The password for the specified user name.

- c. To test the connection to the specified HTTP proxy server, click **Test Connection**.
6. Click **Next**.
7. If a new version is:
 - Not available, click **Next** to continue creating bootable media, or click **Cancel** to close the wizard.
 - Is available, click **Download Now** to download the latest version.

Chapter 3. Creating and updating bootable media

Creating bootable media

You can create a new bootable image using one of the supported bootable media: ISO image, CD, DVD, USB flash drive, or PXE files.

About this task

Complete the following procedure to create bootable media.

Procedure

1. On a command line, enter the command name with no options to start the IBM ToolsCenter Bootable Media Creator wizard. The command name depends on the operating system where you are running the command. The following table lists the name of the command for each supported operating system.

Operating system	Command name
Windows	ibm_utl_bomc_v.r.m_windows_i386.exe
Red Hat Enterprise Linux 7.0	ibm_utl_bomc_v.r.m_rhel7_x86-64.bin
Red Hat Enterprise Linux 6.0	ibm_utl_bomc_v.r.m_rhel6_i386.bin
Red Hat Enterprise Linux 6.0 64-bit	ibm_utl_bomc_v.r.m_rhel6_x86-64.bin
Red Hat Enterprise Linux 5.0	ibm_utl_bomc_v.r.m_rhel5_i386.bin
Red Hat Enterprise Linux 5.0 64-bit	ibm_utl_bomc_v.r.m_rhel5_x86-64.bin
Red Hat Enterprise Linux 4.0	ibm_utl_bomc_v.r.m_rhel4_i386.bin
Red Hat Enterprise Linux 4.0 64-bit	ibm_utl_bomc_v.r.m_rhel4_x86-64.bin
SUSE Linux Enterprise Server 11	ibm_utl_bomc_v.r.m_sles11_i386.bin
SUSE Linux Enterprise Server 11 64-bit	ibm_utl_bomc_v.r.m_sles11_x86-64.bin
SUSE Linux Enterprise Server 10	ibm_utl_bomc_v.r.m_sles10_i386.bin
SUSE Linux Enterprise Server 10 64-bit	ibm_utl_bomc_v.r.m_sles10_x86-64.bin

2. On the Welcome page, type a description in the **Descriptive name** field. The descriptive text is displayed on the screen when you use the bootable media.
3. Click **Next**.
4. On the Media Purpose page, complete these fields and then click **Next**:

Updates

Select this check box to bundle UpdateXpress System Pack Installer and firmware updates for the targeted systems on the bootable media.

Notes:

- If you create bootable media on a system that is the same machine type as the target system or a system that is in the supported systems list, the machine type is automatically highlighted and selected.
- Updating firmware is performed using UpdateXpress System Pack Installer.

- This function updates only firmware. Device drivers must be updated separately.
- IBM Intellistation Pro is not supported.

Include firmware updates in the bootable media

This option is displayed only if you have selected **Deployment**. By default, the IBM ServerGuide Setup and Installation CD includes only device driver updates. Select this checkbox to include firmware updates on the CD. The firmware updates are deployed after the operating system deployment is finished.

Diagnostics

Select this check box to bundle Dynamic System Analysis on the bootable media. This option is disabled if you select **Deployment**.

Deployment

Select this check box to create an IBM ServerGuide Setup and Installation CD. This option is disabled if you select **Diagnostics**. Selecting this option disables the following options:

Diagnostics

Enable Task Autorun

Create the media to use tui mode

Note: This option is only displayed on Windows platforms.

Enable Task AutoRun

Select this check box to automatically start the selected tool, either UpdateXpress System Pack Installer or Dynamic System Analysis, when you boot from the media. This option cannot be selected with **Deployment**.

Create media to use a text-based (non-graphical) user interface

Select this check box to start the tools in a text user interface. If this checkbox is not selected, the tools start in a graphical user interface. This option cannot be selected with **Deployment**.

5. On the Acquire Location page, complete these fields and then click **Next**:

Check the IBM website

Select this radio button to acquire the latest updates from the IBM website before creating the bootable media.

UpdateXpress System Pack (UXSPs)

Select this radio button to acquire complete UpdateXpress System Packs. UpdateXpress System Pack contains an integration-tested bundle of online, firmware updates for each System x and BladeCenter system. This is the preferred method to obtain updates.

Latest available individual updates

Select this radio button to acquire individual updates.

Look in a local directory

Select this radio button to acquire updates, tools, and boot environment from the local system. Type the fully qualified path and file name in the given field, or click the **Browse** to select the file.

6. On the HTTP Proxy page, complete the following steps:
 - a. Select a proxy option:

Do not use proxy

Select this radio button if you do not require an HTTP proxy server to connect to the Web.

Use proxy

Select this radio button if you require an HTTP proxy server to connect to the Web, and then complete these fields:

Host name

The host name, IP address, or domain name of the HTTP proxy server.

Port The port number for the HTTP proxy server.

- b. If credentials must be specified to authenticate to the HTTP proxy server, select the **Authenticate using the following credentials** check box and enter the following credential information:

User name

The user name to use for authenticating to the HTTP proxy server.

Password

The password for the specified user name.

- c. To test the connection to the specified HTTP proxy server, click **Test Connection**.

7. Click **Next** to go to the Targeted Systems page.

8. On the Targeted Systems page, select one or more machine types that you want the bootable media to support and then click **Next**. Use **Update List** to update the system support list for all functions.

Use **Rollback** to roll back to the original system support lists bundled with each function.

Tips:

- Click **Select All** to select all machine types or click **Unselect All** to unselect all machine types.
 - You can manually add or delete machine types for IBM systems using the **Add** or **Delete** button.
 - If a function is not supported by a system, selection of the unsupported function is disabled for that system.
 - To add support for new systems or updates released after the current version of the Bootable Media Creator, use **Update List** to update the support list from the IBM website.
9. On the Target Directory page, specify the directory where you want to store the downloaded files.
10. On the Media Format page, specify the format to use for the bootable media.
- To create an ISO image:
 - a. For **Device type**, select **CD/DVD**.
 - b. Select **Write to image file** and then type the fully qualified path and file name for the ISO image in the given field.
 - To create a CD or DVD:
 - a. For **Device type**, select **CD/DVD**.
 - b. Select **Write directly to device** to write the bootable medium to the specified CD or DVD drive.
 - c. For **Disk**, select the letter associated with the CD or DVD drive for Windows (such as E:) or the device name for Linux (such as /dev/hdb).

- To create a USB flash drive:
 - a. For **Device type**, select **USB**.
 - b. Select **Write directly to device** to write the bootable medium to the specified USB flash drive.
 - c. For **Disk**, select the letter associated with the USB flash drive for Windows (such as E:) or the device name for Linux (such as /dev/hdb).
 - To create PXE files:
 - a. For **Device type**, select **PXE**.
 - b. For **PXE TFTP server address**, specify the IP address of the TFTP server to use for PXE boot.
 - c. For **Directory to write PXE files to**, select the fully qualified path or click **Browse** to select the path where you want to write the PXE files in the given field.
11. Click **Next**. If you selected only UXSPI functions on the Media Purpose page, the Unattended Mode Configuration page is displayed. Complete the following applicable fields:

Do not use unattended mode

Select this radio button to disable unattended mode.

Use unattended mode

Select this radio button to enable unattended updates. If you select this option you must complete the following additional fields:

Upload log files to:

Use this list to choose where to place the log files when unattended updates are complete. Your choices are:

- TFTP Server
- FTP Server
- NFS Share
- Samba Server
- USB Drive

Note:

- a. To upload log files to a TFTP, FTP, or Samba server, or to an NFS share, the directory where the files are to be uploaded must already exist (it will not be created as part of the upload process), and it must allow anonymous access.
- b. To upload the unattended log package to the specified location, you must ensure that you can perform the following actions, if you are using the SLES 10 x86-64 operating system environment:
 - For Samba shares: `mount -t cifs //$address/$directory $mount_point -o user=anonymous, password=anonymous`
 - For NFS shares: `mount -t nfs $address:$directory $mount_point`
 - For FTP and TFTP uploads, ensure that the local file can be uploaded to the address and directory specified in the **FTP** or **TFTP** command.

Server Address

The address of the server where the log files will be loaded.

Save to directory

Indicates the directory where the logs are saved.

12. On the Confirm Choices page, review the configuration information you provided for creating the bootable media.
13. Optional: Click **Save** to save this configuration information to a file, which you can import into this tool to recreate this bootable media at a later time.
14. Click **Next**.

The Creation Progress page is displayed. IBM ToolsCenter Bootable Media Creator acquires UpdateXpress System Pack updates if appropriate, Dynamic System Analysis if specified, and then creates the bootable media. A progress bar indicates that the acquisition and creation are in progress and shows the percentage of progress.
15. When the bootable media is finished, click **Next**.
16. Click **Finish**.

Creating bootable media combining firmware and operating system updates

This topic explains the steps for combining firmware updates with operating system updates into a single bootable media.

When creating firmware update media, the Bootable Media Creator copies the required Linux updates directly from the root of the working directory. Operating system updates can be located in another directory. To include additional updates on firmware update media, follow these steps:

1. Create a subdirectory in the working directory to hold the updates. For example: *workingdirectory\windows_updates*.
2. Use the UpdateXpress System Pack Installer to download updates to this directory.
3. Create the media. The directory that you created is created as a subdirectory of the root directory on the bootable media, and includes the UpdateXpress System Pack Installer.

You can now use the media on a Windows system by executing the command: *X:\windows_updates\uxspi400.exe*, where *X*: is the drive of the bootable media.

Creating bootable media for a specific firmware update

You can create bootable media that contains a specific firmware update, such as BIOS or Baseboard Management Controller (BMC).

About this task

Complete the following procedure to create bootable media for a specific firmware update:

Procedure

1. Download the firmware update, such as BIOS or BMC, to the working directory on the local system. Be sure to download both the binary files and the XML file used by the UpdateXpress System Pack Installer, or UpdateXpress cannot detect the update. You can download updates from the IBM Support Portal website at <http://www-947.ibm.com/support/entry/portal>.

2. Create a bootable media using the downloaded firmware update. For example, enter the following command from a system running Windows to create an ISO image using the update file located in the `c:\workingdir` directory. The UpdateXpress System Pack Installer tool and bootable environment are acquired from the IBM website by default.

```
ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi --iso=bmc.iso --local=c:\workingdir
```

Note: If no machine type is specified, the default value is **A11**, which will download all available machine types.

Creating bootable media that acquires updates from an NFS or Samba server

You can create bootable media that acquires UpdateXpress System Pack Installer or individual updates from an NFS or Samba server.

About this task

Complete the following procedure to create bootable media for Linux systems that acquires updates from an NFS or Samba server.

Procedure

1. Create a `start.sh` file in the working directory, and customize it with information for NFS or Samba. The following text shows a sample `start.sh` file.

```
#!/bin/sh
#
# This script prepares the current Linux environment for ToolsCenter.
export PATH=$PATH:/sbin:/usr/sbin:/usr/local/sbin:/root/bin:/usr/local|
/bin:/usr/bin:/usr/X11R6/bin:/bin:
/usr/games:/usr/lib/mit/bin:/usr/lib/mit/sbin

cp -f /toolscenter/media_check.sh /tmp/media_check.sh
chmod +x /tmp/media_check.sh

cd /toolscenter/
chmod -R +x * /dev/null 2>/dev/null
dos2unix /toolscenter/bomc.config > /dev/null 2>&1

#disable Ctrl+z and Ctrl+c
trap "" 2 20

BOMC_MENU=/toolscenter/menu/show_menu.sh
BOMC_LOG_FILE=/tmp/bomc.log
BOMC_REMOTE_CHECK=/toolscenter/menu/check_remote.sh

# Export the UXSPI_TIMEOUT environment to uxspi
TIMEOUT=60
if cat bomc.config | grep IBM_SYSTEM_TIMEOUT > /dev/null 2>&1
then
    TIMEOUT=`cat bomc.config | grep IBM_SYSTEM_TIMEOUT | sed 's
/IBM_SYSTEM_TIMEOUT=//'`
fi
export UXSPI_TIMEOUT=${TIMEOUT}

#Export environment for UXSPI UXSP's/latest
if cat bomc.config | grep "IBM_SYSTEM_LATEST=YES" > /dev/null 2>&1
then
    export UXSPI_LATEST=1
fi

# setup a mount point
mkdir -p /bomcmount
# NFS mount (replace i-192.168.196.61:/nfsbooti- with your NFS serveri
-s IP and directory)
mount -t nfs 192.168.196.61:/nfsboot /bomcmount -o unlock
# Samba mount (replace i-//192.168.253.26/sambarooti- with your Samba
serveri-s IP and
# directory)
#mount -t cifs //192.168.253.26/sambaroot /bomcmount -o user=Guest,
```

```

password=passw0rd

# SEP environment variable
export SEP_REPOSITORY_PATH=/toolscenter
export SEP_INSTALL_PATH=/tmp

# UXSPI environment variable
export UXLITE_CLEAN_INVFILE=1
export UXSPI_CLEAN_INVFILE=1
export UXSPI_BOOTABLE=/bomcmount

if [ -d /toolscenter/uxspi ]
then
    export UXSPI_BINARY_PATH=`find /toolscenter/uxspi -name 'uxspi*.anyos'
| sort | tail -n 1`
else
    export UXSPI_BINARY_PATH=""
fi
export UXSPI_GUI_CMD="xterm -geometry 170x59 +sb -e ${UXSPI_BINARY_PATH}"
if [ "${UXSPI_LATEST}" = "1" ]
then
    export UXSPI_TUI_CMD="${UXSPI_BINARY_PATH} update --tui --firmware -l
${UXSPI_BOOTABLE}
--timeout=${UXSPI_TIMEOUT} -L"
else
    export UXSPI_TUI_CMD="${UXSPI_BINARY_PATH} update --tui --firmware -l
${UXSPI_BOOTABLE}
--timeout=${UXSPI_TIMEOUT}"
fi

${BOMC_REMOTE_CHECK} /toolscenter
if [ $? -eq 0 ]; then
    echo "Remote mounting via remote IMM/network" >> ${BOMC_LOG_FILE}
else
    echo "NOT mounted via remote IMM/network" >> ${BOMC_LOG_FILE}
    export UXSPI_REDUCE_COPY=1
fi
# DSA environment variable
export DSA_PATH=/tmp/embed:/tmp/embed/qlogic:/usr/X11R6/lib64:/usr/X11R6/lib
export DSA_GUI_CMD="xterm -geometry 170x59 +sb -e /toolscenter/dsa/start.sh --gui"
export DSA_CMD_CMD="xterm -geometry 170x59 +sb -e /toolscenter/dsa/start.sh --cmd"
export DSA_TUI_CMD="/toolscenter/dsa/start.sh --cmd"

# Export environment for exit script command
if cat bomc.config | grep "IBM_SYSTEM_MEDIA_EJECT=NO" > /dev/null 2>&1
then
    export BOMC_EXIT_CMD="/toolscenter/tcexit_noeject.sh"
else
    export BOMC_EXIT_CMD="/toolscenter/tcexit.sh"
fi
# Export environment for UXSPI autorun command
if cat bomc.config | grep "IBM_SYSTEM_AUTORUN=uxspi" > /dev/null 2>&1
then
    export UXSPI_AUTORUN=1
fi

# Export the unattended mode environment variable
UNATTD_FULLSTR=`cat bomc.config | grep IBM_SYSTEM_UNATTENDED | sed 's
/IBM_SYSTEM_UNATTENDED=//`
if echo ${UNATTD_FULLSTR} | grep '[tftp://|ftp://|nfs://|smb://|usb:]'
> /dev/null 2>&1
then
    echo "Unattended mode specified by user" >> ${BOMC_LOG_FILE}
    export BOMC_UNATTENDED_MODE=1
fi

if [ $# -eq 0 ]
then
    echo "Running in non SOL mode" >> ${BOMC_LOG_FILE}
    export DSA_TUI_CMD="/toolscenter/dsa/start.sh --cmd"
    if [ "${BOMC_UNATTENDED_MODE}" = "1" ]
    then
        echo "Calling show_menu.sh unattended" >> ${BOMC_LOG_FILE}
        ${BOMC_MENU} unattended
    else
        echo "Calling show_menu.sh attended" >> ${BOMC_LOG_FILE}
        ${BOMC_MENU} attended
    fi
else

```

```

if [ "$1" = "serial" ]
then
    echo "Running in SOL mode - Console" >> ${BOMC_LOG_FILE}
    export BOMC_SOL_MODE=1
    export DSA_TUI_CMD="/toolscenter/dsa/start.sh serial --cmd"
if [ "${BOMC_UNATTENDED_MODE}" = "1" ]
then
    echo "Calling show_menu.sh unattended" >> ${BOMC_LOG_FILE}
    ${BOMC_MENU} unattended
else
    echo "Calling show_menu.sh attended" >> ${BOMC_LOG_FILE}
    ${BOMC_MENU} attended
fi
elif [ "$1" = "serial-on" ]
then
    while [ 1 ];do
        clear
        echo "ToolsCenter started on SOL console.....type \"reboot\"
to reboot the system"
        read INPUT
        if [ "${INPUT}" = "reboot" ]
        then
            echo "Rebooting the system ..."
            ${BOMC_EXIT_CMD} reboot
            exit
        elif [ "${INPUT}" = "r2d2" ]
        then
            sh
        fi
    done
fi
fi

# Exit ToolsCenter
echo "Using Exit Script: ${BOMC_EXIT_CMD}...."
sleep 3

if [ "${BOMC_UNATTENDED_MODE}" = "1" ]
then
    # Shut down the system when it's unattended image
    ${BOMC_EXIT_CMD} shutdown
elif cat bomc.config | grep "IBM_SYSTEM_PXE_FILE=NULL" > /dev/null 2>&1
then
    echo "Rebooting the system ..."
    ${BOMC_EXIT_CMD} reboot
else
    # Shut down the system when it's PXE image
    echo "Shut down the system ..."
    ${BOMC_EXIT_CMD} shutdown
fi
exit 0

```

Note: You must ensure the following:

- The `UXSPI_BOOTABLE` environment variable has been exported as your NFS or Samba mounting folder. In this example: `/bomcmount`.
- The `UXSPI_REDUCE_COPY` environment variable is **not** exported, as this can cause network connection problems when performing firmware updates.

2. Create a bootable media. For example, enter the following command from a system running Windows:

```
ibm_utl_bomc_v.r.m_windows_i386.exe -m 8843 --cd=E: -l workingdir
```

What to do next

Before you boot the target system using the created bootable media:

- Place UpdateXpress System Pack or individual updates on the NFS or Samba server.
- Ensure the target system has access to the NFS or Samba server.

Creating an IBM ServerGuide Setup and Installation CD

You can use Bootable Media Creator to create an IBM ServerGuide Setup and Installation CD.

Before you begin

Creation of an IBM ServerGuide CD is only supported on Windows operating systems, and requires that you have installed the Microsoft Windows Automated Installation Kit (AIK), English version. You can download the AIK from <http://www.microsoft.com>.

The amount of drive space required to create an IBM ServerGuide Setup and Installation CD depends on the options selected.

- Creating an IBM ServerGuide Setup and Installation CD for deployment only requires 1.5 GB of space, regardless of the number of systems selected. The generated ISO image is approximately 700 MB in size, and will fit on a CD.
- If you select **Updates**, the amount of space required depends on the number of systems selected for update. If all systems are selected, approximately 6 GB of drive space is required. The resulting ISO image will be approximately 3.3 GB, and require a DVD.

About this task

Complete the following procedure to create an IBM ServerGuide Setup and Installation CD:

Procedure

1. On a command line, enter **ibm_ut1_bomc_v.r.m_windows_i386.exe** to start the IBM ToolsCenter Bootable Media Creator wizard.
2. On the Welcome page, type a description in the **Descriptive name** field. The descriptive text is displayed on the screen when you use the bootable media.
3. Click **Next**.
4. On the Media Purpose page, select the following fields:

Updates (optional)

Includes device driver updates and the UpdateXpress System Pack Installer on the IBM ServerGuide Setup and Installation CD.

Notes:

- If you create bootable media on a system that has the same machine type as the target system or a system that is in the supported systems list, the machine type is automatically highlighted and selected.
- IBM IntelliStation Pro is not supported.

Include firmware updates in the bootable media

This option is displayed only if you have selected **Deployment**. By default, the IBM ServerGuide Setup and Installation CD includes only device driver updates. Select this checkbox to include firmware updates on the CD. The firmware updates are deployed after the operating system deployment is finished.

Deployment

Select this check box to create the IBM ServerGuide Setup and Installation CD.

Note: This option is only displayed on Windows platforms.

Deploy Windows 64 bit

Select this radio button to deploy 64-bit versions of Windows

Deploy Windows 32 bit

Select this radio button to deploy 32-bit versions of Windows

5. Click **Next** to proceed to the Acquire Location page.
6. On the Acquire Location page, complete these fields and then click **Next**:

Check the IBM website

Select this radio button to acquire the latest updates from the IBM website before creating the bootable media.

UpdateXpress System Pack (UXSPs)

Select this radio button to acquire complete UpdateXpress System Packs. UpdateXpress System Pack contains an integration-tested bundle of online, firmware updates for each System x and BladeCenter system. This is the preferred method to obtain updates.

Latest available individual updates

Select this radio button to acquire individual updates.

Look in a local directory

Select this radio button to acquire updates, tools, and boot environment from the local system. Type the fully qualified path and file name in the given field, or click the **Browse** to select the file.

7. On the HTTP Proxy page, complete the following steps:
 - a. Select a proxy option:

Do not use proxy

Select this radio button if you do not require an HTTP proxy server to connect to the Web.

Use proxy

Select this radio button if you require an HTTP proxy server to connect to the Web, and then complete these fields:

Host name

The host name, IP address, or domain name of the HTTP proxy server.

Port The port number for the HTTP proxy server.

- b. If credentials must be specified to authenticate to the HTTP proxy server, select the **Authenticate using the following credentials** check box and enter the following credential information:

User name

The user name to use for authenticating to the HTTP proxy server.

Password

The password for the specified user name.

- c. To test the connection to the specified HTTP proxy server, click **Test Connection**.
8. Click **Next** to go to the Targeted Systems page.
9. On the Targeted Systems page, select one or more machine types that you want the bootable media to support and then click **Next**. Use **Update List** to update the system support list for all functions.

Use **Rollback** to roll back to the original system support lists bundled with each function.

Tips:

- Click **Select All** to select all machine types or click **Unselect All** to unselect all machine types.
 - You can manually add or delete machine types for IBM systems using the **Add** or **Delete** button.
 - If a function is not supported by a system, selection of the unsupported function is disabled for that system.
 - To add support for new systems or updates released after the current version of the Bootable Media Creator, use **Update List** to update the support list from the IBM website.
10. On the Media Format page, complete one of the following tasks to specify the format to use for the bootable media:
 - To create an ISO image:
 - a. For **Device type**, select **CD/DVD**.
 - b. Select **Write to image file** and then type the fully qualified path and file name for the ISO image in the given field.
 - To create a CD or DVD, complete these fields:
 - a. For **Device type**, select **CD/DVD**.
 - b. Select **Write directly to device** to write the bootable medium to the specified CD or DVD drive.
 - c. For **Disk**, select the letter associated with the CD or DVD drive for Windows (such as E:) or the device name for Linux (such as /dev/hdb).
 11. On the Confirm Choices page, review the configuration information you provided for creating the IBM ServerGuide Setup and Installation CD.
 12. Optional: Click **Save** to save this configuration information to a file, which you can import into this tool to recreate the IBM ServerGuide Setup and Installation CD at a later time.
 13. Click **Next**.

The Creation Progress page is displayed. IBM ToolsCenter Bootable Media Creator acquires the IBM ServerGuide package and UpdateXpress System Pack updates if you specified them, and then creates the IBM ServerGuide Setup and Installation CD or CD image. A progress bar indicates that the acquisition and creation are in progress and shows the percentage of progress.
 14. When the bootable media is finished, click **Next**.
 15. Click **Finish**.

What to do next

To use the completed CD, insert it in the target server, boot the server, and follow the on-screen prompts.

Updating existing bootable media

You can update bootable images on writable media using the image's configuration file created by IBM ToolsCenter Bootable Media Creator.

About this task

Complete the following procedure to update existing bootable media.

Procedure

1. On a command line, enter the command name with no options to start the IBM ToolsCenter Bootable Media Creator wizard. The command name depends on the operating system where you are running the command. The following table lists the name of the command for each supported operating system.

Operating system	Command name
Windows	ibm_utl_bomc_v.r.m_windows_i386.exe
Red Hat Enterprise Linux 7.0	ibm_utl_bomc_v.r.m_rhel7_x86-64.bin
Red Hat Enterprise Linux 6.0	ibm_utl_bomc_v.r.m_rhel6_i386.bin
Red Hat Enterprise Linux 6.0 64-bit	ibm_utl_bomc_v.r.m_rhel6_x86-64.bin
Red Hat Enterprise Linux 5.0	ibm_utl_bomc_v.r.m_rhel5_i386.bin
Red Hat Enterprise Linux 5.0 64-bit	ibm_utl_bomc_v.r.m_rhel5_x86-64.bin
Red Hat Enterprise Linux 4.0	ibm_utl_bomc_v.r.m_rhel4_i386.bin
Red Hat Enterprise Linux 4.0 64-bit	ibm_utl_bomc_v.r.m_rhel4_x86-64.bin
SUSE Linux Enterprise Server 11	ibm_utl_bomc_v.r.m_sles11_i386.bin
SUSE Linux Enterprise Server 11 64-bit	ibm_utl_bomc_v.r.m_sles11_x86-64.bin
SUSE Linux Enterprise Server 10	ibm_utl_bomc_v.r.m_sles10_i386.bin
SUSE Linux Enterprise Server 10 64-bit	ibm_utl_bomc_v.r.m_sles10_x86-64.bin

2. On the Welcome page, type a description in the **Descriptive name** field. The descriptive text is displayed on the screen when you use the bootable media.
3. Click **Load in a previously saved configuration** to load settings that are defined in a specific configuration file.
4. Click **Next**.
5. Type the fully qualified path and file name for the configuration file, and then click **Next**.
6. On the Media Purpose page, complete these fields and then click **Next**:

Updates

Select this check box to bundle UpdateXpress System Pack Installer and firmware updates for the targeted systems on the bootable media.

Notes:

- If you create bootable media on a system that is the same machine type as the target system or a system that is in the supported systems list, the machine type is automatically highlighted and selected.
- Updating firmware is performed using UpdateXpress System Pack Installer.
- This function updates only firmware. Device drivers must be updated separately.
- IBM Intellistation Pro is not supported.

Include firmware updates in the bootable media

This option is displayed only if you have selected **Deployment**. By

default, the IBM ServerGuide Setup and Installation CD includes only device driver updates. Select this checkbox to include firmware updates on the CD. The firmware updates are deployed after the operating system deployment is finished.

Diagnostics

Select this check box to bundle Dynamic System Analysis on the bootable media. This option is disabled if you select **Deployment**.

Deployment

Select this check box to create an IBM ServerGuide Setup and Installation CD. This option is disabled if you select **Diagnostics**. Selecting this option disables the following options:

Diagnostics

Enable Task Autorun

Create the media to use tui mode

Note: This option is only displayed on Windows platforms.

Enable Task AutoRun

Select this check box to automatically start the selected tool, either UpdateXpress System Pack Installer or Dynamic System Analysis, when you boot from the media. This option cannot be selected with **Deployment**.

Create media to use a text-based (non-graphical) user interface

Select this check box to start the tools in a text user interface. If this checkbox is not selected, the tools start in a graphical user interface. This option cannot be selected with **Deployment**.

7. On the Acquire Location page, complete these fields and then click **Next**:

Check the IBM website

Select this radio button to acquire the latest updates from the IBM website before creating the bootable media.

UpdateXpress System Pack (UXSPs)

Select this radio button to acquire complete UpdateXpress System Packs. UpdateXpress System Pack contains an integration-tested bundle of online, firmware updates for each System x and BladeCenter system. This is the preferred method to obtain updates.

Latest available individual updates

Select this radio button to acquire individual updates.

Look in a local directory

Select this radio button to acquire updates, tools, and boot environment from the local system. Type the fully qualified path and file name in the given field, or click the **Browse** to select the file.

8. On the Targeted Systems page, select one or more machine types that you want the bootable media to support and then click **Next**. Use **Update List** to update the system support list for all functions.

Use **Rollback** to roll back to the original system support lists bundled with each function.

Tips:

- Click **Select All** to select all machine types or click **Unselect All** to unselect all machine types.

- You can manually add or delete machine types for IBM systems using the **Add** or **Delete** button.
 - If a function is not supported by a system, selection of the unsupported function is disabled for that system.
 - To add support for new systems or updates released after the current version of the Bootable Media Creator, use **Update List** to update the support list from the IBM website.
9. On the Target Directory page, specify the directory where you want to store the downloaded files.
 10. On the Targeted Systems page, select one or more machine types that you want the bootable media to support and then click **Next**. Use **Update List** to update the system support list for all functions.

Use **Rollback** to roll back to the original system support lists bundled with each function.

Tips:

- Click **Select All** to select all machine types or click **Unselect All** to unselect all machine types.
- You can manually add or delete machine types for IBM systems using the **Add** or **Delete** button.
- If a function is not supported by a system, selection of the unsupported function is disabled for that system.
- To add support for new systems or updates released after the current version of the Bootable Media Creator, use **Update List** to update the support list from the IBM website.

11. On the HTTP Proxy page, complete the following steps:

- a. Select a proxy option:

Do not use proxy

Select this radio button if you do not require an HTTP proxy server to connect to the Web.

Use proxy

Select this radio button if you require an HTTP proxy server to connect to the Web, and then complete these fields:

Host name

The host name, IP address, or domain name of the HTTP proxy server.

Port The port number for the HTTP proxy server.

- b. If credentials must be specified to authenticate to the HTTP proxy server, select the **Authenticate using the following credentials** check box and enter the following credential information:

User name

The user name to use for authenticating to the HTTP proxy server.

Password

The password for the specified user name.

- c. To test the connection to the specified HTTP proxy server, click **Test Connection**.

12. On the Media Format page, specify the format to use for the bootable media.

- To create an ISO image:
 - a. For **Device type**, select **CD/DVD**.

- b. Select **Write to image file** and then type the fully qualified path and file name for the ISO image in the given field.
 - To create a CD or DVD:
 - a. For **Device type**, select **CD/DVD**.
 - b. Select **Write directly to device** to write the bootable medium to the specified CD or DVD drive.
 - c. For **Disk**, select the letter associated with the CD or DVD drive for Windows (such as E:) or the device name for Linux (such as /dev/hdb).
 - To create a USB flash drive:
 - a. For **Device type**, select **USB**.
 - b. Select **Write directly to device** to write the bootable medium to the specified USB flash drive.
 - c. For **Disk**, select the letter associated with the USB flash drive for Windows (such as E:) or the device name for Linux (such as /dev/hdb).
 - To create PXE files:
 - a. For **Device type**, select **PXE**.
 - b. For **PXE TFTP server address**, specify the IP address of the TFTP server to use for PXE boot.
 - c. For **Directory to write PXE files to**, select the fully qualified path or click **Browse** to select the path where you want to write the PXE files in the given field.
13. Click **Next**. If you selected only UXSPI functions on the Media Purpose page, the Unattended Mode Configuration page is displayed. Complete the following applicable fields:

Do not use unattended mode

Select this radio button to disable unattended mode.

Use unattended mode

Select this radio button to enable unattended updates. If you select this option you must complete the following additional fields:

Upload log files to:

Use this list to choose where to place the log files when unattended updates are complete. Your choices are:

- TFTP Server
- FTP Server
- NFS Share
- Samba Server
- USB Drive

Note:

- a. To upload log files to a TFTP, FTP, or Samba server, or to an NFS share, the directory where the files are to be uploaded must already exist (it will not be created as part of the upload process), and it must allow anonymous access.
- b. To upload the unattended log package to the specified location, you must ensure that you can perform the following actions, if you are using the SLES 10 x86-64 operating system environment:

- For Samba shares: `mount -t cifs //$address/$directory $mount_point -o user=anonymous, password=anonymous`
- For NFS shares: `mount -t nfs $address:$directory $mount_point`
- For FTP and TFTP uploads, ensure that the local file can be uploaded to the address and directory specified in the **FTP** or **TFTP** command.

Server Address

The address of the server where the log files will be loaded.

Save to directory

Indicates the directory where the logs are saved.

14. On the Confirm Choices page, review the configuration information you provided for creating the bootable media.
15. Optional: Click **Save** to save this configuration information to a file, which you can import into this tool to recreate this bootable media at a later time.
16. Click **Next**.
The Creation Progress page is displayed. IBM ToolsCenter Bootable Media Creator acquires UpdateXpress System Pack updates if appropriate, Dynamic System Analysis if specified, and then creates the bootable media. A progress bar indicates that the acquisition and creation are in progress and shows the percentage of progress.
17. When the bootable media is finished, click **Next**.
18. Click **Finish**.

Chapter 4. Using bootable media

You can use the Menu program to select which tools to include with Bootable Media Creator bootable media, such as DSA or UXSPI.

About this task

The Menu program can be run from a graphical user interface or from a text user interface.

Procedure

1. Select one of the following options:
 - To use the bootable ISO image, you must burn the ISO image onto a CD or DVD or mount the ISO image to a server using the virtual media function in BladeCenter Advanced Management Module (AMM), IMM, or Remote Supervisor Adapter (RSA) II card, or another equivalent function.
 - To use the bootable PXE files, complete these steps:
 - a. Copy the PXE files (pxelinux.cfg/default, img3a, img2a, pxelinux.0, trootfs, bsb1.lss, bsb.msg and tc.zip) to the content directory on the TFTP server.
 - b. Configure the PXE boot server to use pxelinux.0 as the boot file.
 - c. Verify the PXE boot server and Trivial File Transport Protocol (TFTP) boot server are up and running.
2. Optional: If the device you want to boot from is not first or second in the boot order, press **F12** to select a device.
3. If the --autorun option was not specified when the bootable media was created, from the Menu, select a tool to manually start. When the selected tool is ready, the Menu for the graphic user interface or interactive text-user interface is displayed.
4. Click **Exit** to close the Menu program. The targeted system shuts down if it is PXE booting or performing an unattended update, otherwise it reboots.

Booting from bootable media using the graphical interface

The Menu program runs when the IBM ToolsCenter for System x and BladeCenter bootable media is booted. The graphical version of the Menu program runs in interactive mode (where you can select the function you want to use) or unattended mode, for example, if you selected to automatically run UpdateXpress System Pack Installer when the bootable media is booted.

About this task

The following procedure explains how to perform updates and diagnostics using bootable media. To deploy a supported Windows operating system on IBM System x and BladeCenter servers, boot the target server from an IBM ServerGuide Setup and Installation CD and follow the on-screen prompts.

Procedure

1. If the graphic interface mode was selected when the bootable media was created, then the IBM ToolsCenter Customized Media utility starts

automatically when you boot from the bootable media. The Welcome page is displayed, showing the descriptive name of the bootable media, a list of the targeted machines, and a list of functions.

2. Complete these steps to install updates:
 - a. On the Welcome page, click **Updates**.
 - b. On the Updates page, click the **click here to start update** link. The UpdateXpress System Pack Installer is displayed.
 - c. Select one or more updates to install.
3. Complete these steps to perform diagnostics:
 - a. On the Welcome page, click **Diagnostics**. The Diagnostics page is displayed.
 - b. On the Diagnostics page, select one of the following options:
 - Click **click here to start diagnostics (GUI)** to start the graphical user interface.
 - Click **click here to start diagnostics (CLI)** to start the diagnostic command line interface.
 - c. Use the Dynamic System Analysis tool to perform diagnostics.

Booting from bootable media using the text interface

The Menu program runs when the IBM ToolsCenter for System x and BladeCenter bootable media is booted. The text version of the Menu program runs in interactive mode (which allows you to select the function that you want to use) or unattended mode. An example of unattended mode would be selecting to automatically run UpdateXpress System Pack Installer when the bootable media is booted. The menu program only supports Update or Diagnostic functions.

About this task

The following procedure explains how to perform updates or diagnostics using bootable media. If **Create media to use a text-based (no-graphical) user interface** is selected when the bootable media is created, then the IBM ToolsCenter Customized Media utility starts automatically when you boot from the bootable media. The Welcome page displays a list of functions that you can perform.

Procedure

1. To select the Updates function, enter **1** and then enter **y**. The UpdateXpress System Pack Installer utility is displayed.
2. Select one or more of the updates to install.

Note: Updates start to install when the **Automatic update countdown** reaches **0**.

3. To start Diagnostics function, enter **2** and then enter **y**. The Dynamic System Analysis tool is displayed. Use the Dynamic System Analysis tool to perform diagnostics on the system.

Chapter 5. Troubleshooting and support

Use this section to troubleshoot and resolve problems with IBM ToolsCenter Bootable Media Creator.

For solutions to problems that other customers have encountered, see the IBM System x Forum customer forum at <https://www.ibm.com/developerworks/community/forums/html/forum?id=11111111-0000-0000-0000-000000002691#topicsPg=0>.

Limitations and problems

The following known limitations and problems are applicable to IBM ToolsCenter Bootable Media Creator.

BoMC version 9.50 and later releases only support the latest Customized Linux Kernel

Beginning with BoMC 9.50, the latest customized Linux kernel uses grub as the boot loader. For BoMC 9.50 and later releases, BoMC only supports customized Linux kernel with v1.41. There is no compatible support for the previous version. If users create media from a local repository and specify the option `--toolzip` or `-t`, BoMC reports the following warning message: The bootable environment is not the supported version. It may cause failure to create media. Are you sure you want to continue? (y or n)

BoMC does not support Mellanox firmware updates

BoMC does not support updating Mellanox firmware.

Only tftp server running on Linux OS is supported when creating PXE directory with BoMC.

If you are creating a PXE directory with BoMC, only a tftp server running on a supported version of Linux OS can be used.

BoMC does not support `/dev/sda` for the `--unattended` option

BoMC does not support the use of `/dev/sda` for the `--unattended` option for the usb protocol.

OpenSSL on ESXi4.1, ESXi5.0, and ESXi5.1 can only support TLS level 1.0

OpenSSL on ESXi4.1, ESXi5.0, and ESXi5.1 can only support TLS level 1.0. If you set the IMM TLS min level to 1.1 or 1.2, TC will fail to get and set the IMM configuration through the ESXi system.

BoMC does not check the arguments specified for the `-vlan-id` and `-vlan-ip` commands

BoMC only calls the `-vlan-id` and `-vlan-ip` commands to do the configuration. If there is any usage error causing the configuration to fail, BoMC will not check the arguments specified with these commands.

Greeting artwork does not show when booting a uEFI platform

When loading the bootable environment on a non-Unified Extensible Firmware Interface (uEFI) platform, the greeting artwork is displayed stating the following message: Starting IBM ToolsCenter Customized Media (*version*). When loading the bootable environment on a uEFI platform (for example: IBM BladeCenter HS22, IBM System x3650 M2, x3550 M2, and iDataPlex dx360 M2), only the message is displayed.

You must have access to the Internet to acquire updates and bootable environment

IBM ToolsCenter Bootable Media Creator can acquire updates and the bootable environment from IBM. Access to the Internet is required to acquire those files. You might need to disable the firewall to access the website. IBM ToolsCenter Bootable Media Creator uses port 443 for HTTPS and port 80 for HTTP.

For Serial over LAN (SOL) support, the serial console argument must be specified before the tty1 console argument

When you specify a serial console argument (ttyS0 or ttyS1) and the tty1 console argument using the `--kernel-args` option, you must specify the serial console first.

Example:

```
--kernel-args="vga=0x317 root=/dev/ram0 ramdisk_size=100000 media_boot=yes console=ttyS1,19200 console=tty1"
```

You cannot assign multiple static IP addresses

You can assign a custom static IP address to only one NIC in a system. Options are provided to specify IP addresses sequentially beginning with the default value of 192.168.0.100, or sequentially beginning with a static IP address that you specify. See the `kernel-args` parameter for more information.

iDataPlex dx360 M2 (machine type 7321) system might fail to boot from ToolsCenter USB key

This problem can occur when a SATA drive is attached to the onboard storage controller and is configured as an IDE interface in Compatibility mode in the system BIOS. This is currently a limitation.

iDataPlex dx360 M2 (machine type 7321) system might fail to boot from ToolsCenter USB key the second time

When using the bootable USB key created by IBM ToolsCenter Bootable Media Creator to boot the iDataPlex dx360 M2 (machine type 7321), if you exit from the ToolsCenter program, reboot the system immediately, and attempt to boot from the same USB key again, the system might fail to boot from USB key. If this occurs, the following message is displayed: Boot Fail. Press Enter to Continue. Press **Enter** to return back to the boot device selection menu.

UXSP packages may not be available for newly-released servers

When you are using **creating update media** for newly-released IBM systems, the creation will fail if no UXSP package is available for these systems on the IBM website. In this case, select **Acquire latest individual updates** to acquire any available updates that have not yet been included in a UXSP.

Some functions may not work properly when loading a configuration generated by a different distribution of the Bootable Media Creator

Some functions of the Bootable Media Creator may not work properly when loading a configuration that was created using the Bootable Media Creator for Linux using Bootable Media Creator for Windows, or vice versa.

Listing all available update packages for tools from the IBM website can take more than 15 minutes

Additional update packages for tools may be required to perform the selected tasks such as updating, diagnostics and deployment on some IBM systems. If you specify acquiring packages for multiple machine types from

the IBM website when creating bootable media, it can take more than 15 minutes to list all the available update packages. If you select more machine types and tools, it can take even longer to list the available packages.

IBM eServer xSeries 336, 346 and 236 systems fail to boot from USB key

This problem can occur when booting these systems from the created bootable USB key. If this occurs, the following error message is displayed: Could not find kernel image. To fix the problem, try defragmenting the USB key using the Windows defragment tool, then try booting from the key again.

If the symptoms persist, perform a full format of the USB key, then rebuild the image using the Bootable Media Creator.

CD-RW bootable media fails to deploy Windows operating systems

This problem can occur when deploying Windows operating systems from CD-RW bootable media. If this occurs, the following error message is displayed: There was an error copying files.

To avoid this problem, use CD-R or DVD-R(W) media.

Deployment media creation fails when the path to the working directory is long

When creating an IBM ServerGuide Setup and Installation CD using the Microsoft Windows Automated Installation Kit for Windows 7 (AIK 2.0) or the Microsoft OEM Pre-installation Kit 2.0, the path to the specified *workingdir* must be less than 76 characters.

No operating systems are selectable in ServerGuide

You cannot continue past the operating system selection screen in ServerGuide without selecting an operating system. This condition occurs when the ServerGuide bootable image was created for a different architecture than the one on the target system. You must use the **arch** parameter to specify the architecture to be supported when creating a ServerGuide image.

CD Media will not eject when using USB CD-ROM on System x3850 X5/x3950 X5 (machine types 7145, 7146)

This problem can occur when booting these systems from the created bootable CD media using a USB CD-ROM. The media might fail to eject automatically when exiting ToolsCenter, even when using the default configuration setting.

If the problem persists, power off the system, then power the system back on, and manually eject the media during the early portion of the boot process.

Linux platforms require libcurl v7.15 or later for image creation phase

To perform acquisition and connection tests in an IPv6 environment on supported Linux platforms, you must ensure that the libcurl file transfer utility is version 7.15 or later.

Mixed IP address standards not supported

Bootable Media Creator 9.63 supports both IPv4 and IPv6 addressing. However, for file transfers by FTP or TFTP, **all** of the addresses you use must be either IPv4 or IPv6. Mixing IPv4 and IPv6 addresses is not supported for this function.

Some systems do not recognize some USB keys

Some IBM systems do not recognize SanDisk SDCZ36 4 and 8 GB USB keys. If you experience difficulty using one of these keys, try a different type of USB key.

No hints for memtest when creating bootable media with both DSA and UXSPI for Serial Over LAN

When using bootable media that includes both DSA and UXSPI for a Serial Over LAN deployment, no hints for the user to input memtest are displayed on the Serial Over LAN console.

To avoid this problem, create separate images for DSA and UXSPI.

Using CTRL+C to halt execution of UXSPI in TUI mode halts further input

When running UXSPI in a bootable environment in Text User Interface (TUI) mode, using CTRL+C to stop execution prevents further input. The tool returns to the Home menu, but the screen is corrupted and further input will fail.

CD creation might fail when there are more than 15 SCSI controllers in the system

Creation of a CD might fail if more than 15 SCSI controllers are enabled on the burning system. This is caused by a limitation of the `cdrecord` utility used by Bootable Media Creator to burn the CD.

To avoid this problem, disable some of the SCSI storage devices to decrease the number of SCSI controllers recognized by the `cdrecord` utility.

64-bit Linux requires compat-libstdc++

To run 32-bit binaries and utilities, including Bootable Media Creator, 64-bit Linux operating systems require the compatibility library `compat-libstdc++`. You can use the following command to determine whether this library is installed:

```
rpm -qa | grep compat-libstdc++-296
```

Updating Preboot Dynamic System Analysis in a bootable environment requires >1GB of memory

Updating pDSA in a bootable environment using UXSPI might fail if the target system does not have more than 1GB of memory. To avoid this problem, the target system should have at least 2GB of memory.

PXE boot may fail if the network connection is slow

A slow or busy network connection can cause PXE boot to fail. If your PXE boot fails due to a slow network connection, retry the process.

IBM System x3755 with iBMC cannot boot from USB

IBM System x3755 with iBMC cannot boot from a BoMC-created USB image. To work around this issue, use a different method to deliver the BoMC boot image.

Workarounds

The following workarounds are applicable to IBM ToolsCenter Bootable Media Creator.

When deploying Windows 2008 editions on an IBM System x3250 M5 with or without ServeRAID C100 enabled, a blue screen might occur

To avoid this problem, complete the following steps:

Workaround:

1. Open **uEFI** settings.
2. Open the **Device and I/O Ports** setting.
3. If the ServeRAID C100 is enabled, change the **onboard SATA ports as** to RAID or IDE.
4. If the ServeRAID C100 is not enabled, change the **onboard SATA ports as** to IDE.
5. Save the settings changes. The system will work normally when you reboot from the ServerGuide.

The keyboard does not work when confirming to exit ToolsCenter program

After booting a system with bootable media created using IBM ToolsCenter Bootable Media Creator, when you select to exit the ToolsCenter program, you are prompted to confirm the exit action. The keyboard cannot be used to confirm the exit action.

Workaround: Use the mouse to confirm the exit action, or create the media to run in TUI mode.

cygwin1.dll conflict

IBM ToolsCenter Bootable Media Creator ships the `cygwin1.dll` (version 1.5.24, renamed to `cygwinz.dll`), which is required by the `mkisofs.exe` and `cdrecord.exe` utilities. The cygwin DLL does not support multiple versions running at the same time. You must exit all other applications that depend on `cygwin1.dll` before running IBM ToolsCenter Bootable Media Creator on a Windows System.

IBM ToolsCenter Bootable Media Creator might fail to burn a CD or DVD if it runs on RHEL3 with an IDE CD-ROM or IDE DVD-ROM

Add `hdx=ide-scsi` to the boot loader configuration file. For example: `/etc/lilo.conf` for LILO or `/boot/grub/menu.lst` for GRUB), where `hdx` is either `hda`, `hdb`, `hdc`, or `hdd`, depending on where your CD or DVD drive is located.

USB flash drives that are used by Linux are not recognized by Windows

To enable Windows to recognize the USB flash drive so that it can be used by IBM ToolsCenter Bootable Media Creator on a Windows system, format the USB flash drive on a Linux system to FAT32 file format using the `mkdosfs` utility. For example: `mkdosfs -I -F 32 /dev/sdb`.

Failure when burning created ISO files to CD/DVD, or created CD/DVD fails to boot

If you are unable to burn created ISO files to CD or DVD media, or if the CD or DVD you have created fails to boot, try using an alternative media writing software or use a different brand and type of media.

IBM BladeCenter HS22 fails to boot from SanDisk 4GB bootable USB key

When using the SanDisk 4GB bootable USB key created by Bootable Media Creator to boot HS22 (machine type 7870), the system might boot directly into the OS environment installed on the hard disk drive but not boot into the USB key.

Workaround: Update the uEFI firmware or use a Lexar USB key or a bootable CD.

USB key automatically mounts in noexec mode on SLES 10 sp4

As a security measure, USB keys can be mounted in **noexec** mode, which prevents executable files on the key from running. This will prevent you from using the BoMC binary, even after using `chmod` to change permissions.

Workaround: Copy the binary to the hard drive of the system, use `chmod` to give it proper permissions, and execute from the hard drive.

IBM ToolsCenter Bootable Media Creator log file

Each log record includes: the version, command line arguments, program runtime data, and detailed trouble shooting information. New log information is appended to the `bomc963.log` file.

The IBM ToolsCenter Bootable Media Creator log file, `bomc963.log`, is located in the following directories:

- Windows: `%SystemDrive%\IBM_Support\`
- Linux: `/var/log/IBM_Support/`

Getting help and technical assistance

Use this information to locate technical assistance for your IBM System x, BladeCenter, and IntelliStation tools.

About this task

If you need help, service, or technical assistance or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you. This section contains information about where to go for additional information about IBM and IBM products, what to do if you experience a problem with your system, and whom to call for service, if it is necessary.

Before you call

Review and use this information before you call IBM Service and Support to report a problem.

About this task

Complete these steps to try and resolve the problem yourself:

- Ensure that you have the latest version of the tool installed.
- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Use the troubleshooting information in your system documentation, and use the diagnostic tools that come with your system.
- Go to the IBM Support Portal at <http://www-947.ibm.com/support/entry/portal/docdisplay?lndocid=SERV-DSA> to check for technical information, hints, tips, and new device drivers.
- Use an IBM discussion forum on the IBM website to ask questions.

You can solve many problems without assistance by following the troubleshooting procedures that IBM provides in the online help or in the documentation that is provided with your IBM product. The documentation that comes with IBM systems also describes the diagnostic tests that you can perform. Most systems, operating systems, and programs come with documentation that contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

Using the documentation

Information about your IBM system, preinstalled software, or an optional device is available in the documentation that comes with the product. Product documentation can include: information centers, online documents, printed documents, readme files, and help files.

About this task

The troubleshooting information in your system documentation has instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might indicate that you need additional or updated device drivers or other software.

IBM Support Portal has the latest technical information, device drivers, and updates.

The IBM Publications Center has additional documentation.

Getting help from the World Wide Web

You can get the latest information about IBM systems, optional devices, services, and support from this list of IBM website links.

- IBM System x Support and services at: <http://www-03.ibm.com/systems/x/support/>
- IBM BladeCenter Support and services at: <http://www-03.ibm.com/systems/bladecenter/support/>
- IBM Workstations at: <http://www-03.ibm.com/systems/intellistation/>
- IBM Flex System Overview at: <http://www-03.ibm.com/systems/pureflex/flex-converged-infrastructure.html>

Software service and support

You can get assistance for your IBM System x and BladeCenter tools by contacting IBM Service and Support.

- IBM Support Line provides fee-based telephone assistance with usage, configuration, and software problems for IBM System x servers, BladeCenter products, IntelliStation[®] workstations, and other components. For information about which products are supported by Support Line in your country or region, see the IBM Supported product list website at <http://www-03.ibm.com/systems/x/support/>.
- In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).
- For a directory of worldwide IBM support telephone numbers, see the IBM Directory of worldwide contacts website at <http://www.ibm.com/planetwide/>.
- For IBM IT services, see the IBM IT Services website at <http://www-935.ibm.com/services/us/en/it-services/gts-it-service-home-page-1.html>.

Hardware service and support

You can get assistance with ordering new equipment or requesting IBM service support. Hardware service and support is available from IBM Services or from your IBM reseller, if your reseller is an authorized IBM warranty service provider.

- In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. For the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

- In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m. For a directory of worldwide IBM support telephone numbers, see the IBM Directory of worldwide contacts website at: <http://www.ibm.com/planetwide/>.

Appendix A. Accessibility features for IBM ToolsCenter Bootable Media Creator

Accessibility features help users who have a disability, such as restricted mobility or limited vision, to use information technology products successfully.

Accessibility features

The following list includes the major accessibility features in IBM ToolsCenter Bootable Media Creator:

- Can be operated using only the keyboard
- Communicates all information independent of color
- Supports the attachment of alternate output devices
- Provides online documentation in an accessible format
- (Microsoft® Windows® systems only) Supports interfaces commonly used by screen readers and screen magnifiers

The IBM ToolsCenter Bootable Media Creator topic collection in the IBM ToolsCenter for System x and BladeCenter information center, and its related publications, are accessibility-enabled.

Keyboard navigation

This product uses standard Microsoft Windows navigation keys.

IBM and accessibility

See the IBM Human Ability and Accessibility Center website at www.ibm.com/able for more information about the commitment that IBM has to accessibility.

Appendix B. IBM ToolsCenter Bootable Media Creator commands

IBM ToolsCenter Bootable Media Creator includes a single command that you can use to create bootable media.

How to read syntax diagrams

Review the following conventions to understand how to read syntax diagrams used in the command descriptions.

The syntax diagram consists of options and option arguments.

- *Options* consist of a hyphen and single letter or two hyphens and multiple letters. For example: -h or --help. Options can be followed by one or more *option arguments*.
- *Option arguments* are placed after the option. For example: [--cd=*volume*] In this example *volume* is the option argument.

Consider these conventions when reading syntax diagrams:

- Options that are enclosed in brackets ([]) are optional. Do not include these brackets in the command.
- Options that are enclosed in braces ({}) are required. Do not include these braces in the command.
- Options that are not enclosed in either brackets or braces are required.
- The names of options are case sensitive and must be typed exactly as shown. Options preceded by two dashes (--) must be specified in their entirety.
- The names of option arguments that require substitution by actual values are italicized.
- The pipe (|) character signifies that you choose one option or the other. For example, [a | b] indicates that you can choose either a or b, but not both. Similarly, {a | b} indicates that you must choose either a or b.
- An ellipsis (...) signifies that you can repeat the option argument on the command line.

Configuration file

Each time you create bootable media, configuration information is saved in a file named **bomc.config** in the working directory and on the bootable media.

Notes:

- When you boot a system using bootable media, the tools that are bundled on the bootable media check the configuration file to read the user-specified command line (CL) options, such as: --tui, --timeout, and --latest .
- You can create bootable media using the configuration file by copying the configuration file to the working directory, modifying the settings, and then running the **bomc.exe --configfile=working_directory\bomc.config** command.
- For security purposes, the proxy user ID and password are not saved in the configuration file.

The configuration file uses the Java™ property file format *name=value*. The default values specified in this file are listed in the following table.

Configuration setting	Equivalent Command Line Interface (CLI) option	Default value
IBM_SYSTEM_ACQUIRE	<code>--no-acquire</code>	YES Notes: <ul style="list-style-type: none"> • YES: The <code>--no-acquire</code> option <i>is not</i> specified. • NO: The <code>--no-acquire</code> option <i>is</i> specified.
IBM_SYSTEM_AUTORUN	<code>--autorun={uxspi dsa none}</code>	The first value specified by the function option.
IBM_SYSTEM_CD	<code>--cd=volume</code>	NULL
IBM_SYSTEM_DEPLOY_ARCHITECTURE	<code>--arch=x86 x64</code>	x64
IBM_SYSTEM_FORCE_OVERWRITE	<code>--force</code>	NO Notes: <ul style="list-style-type: none"> • YES: The <code>--force</code> option <i>is</i> specified. • NO: The <code>--force</code> option <i>is not</i> specified.
IBM_SYSTEM_FUNCTION	<code>--function=uxspi,dsa,serverguide</code>	uxspi
IBM_SYSTEM_ISO_FILE	<code>--iso=file_name</code>	NULL
IBM_SYSTEM_KERNEL_ARGS	<code>--kernel-args="key=value[key=value...]"</code>	NULL
IBM_SYSTEM_LATEST	<code>--latest</code>	NO
IBM_SYSTEM_MACHINETYPE	<code>-m [all {machine_type[,machine_type] none} --machine-type=[all {machine_type[,machine_type] none}]</code>	NULL
IBM_SYSTEM_MEDIALABEL	<code>--description=description</code>	Bootable media - <i>date</i>
IBM_SYSTEM_NO_FIRMWARE_UPDATE	<code>--no-firmware</code>	NULL
IBM_SYSTEM_NO_TIMESTAMP	There is no corresponding CLI option. This value can only be set in the bomc.config file.	NO By default, the unattended mode log package is named: <code>UXSPI_mt_serialnumber_timestamp.tar.gz</code> Note: Setting the value of this option to <i>YES</i> , removes the timestamp from the name of the file that is uploaded: <code>UXSPI_mt_serialnumber.tar.gz</code>
IBM_SYSTEM_PAUSE_ON_ERROR	There is no corresponding CLI option. This value can only be set in the bomc.config file.	60 Specifies the length of time, in seconds, to pause during upload of the unattended package in the event of an error to give the user time to respond.

Configuration setting	Equivalent Command Line Interface (CLI) option	Default value
IBM_SYSTEM_PROXY_ADDRESS	<code>--proxy-address=address</code>	NULL
IBM_SYSTEM_PROXY_PASSWORD	<code>--proxy-password=password</code>	NULL Note: This password is not saved in the configuration file.
IBM_SYSTEM_PROXY_PORT	<code>--proxy-port=port</code>	NULL
IBM_SYSTEM_PROXY_USER	<code>--proxy-user=user_ID</code>	NULL
IBM_SYSTEM_PXE_FILE	<code>--pxe=directory</code>	NULL
IBM_SYSTEM_PXE_TFTP_ADDRESS	<code>--tftp-pxe-address=ip_address</code>	9.123.196.61
IBM_SYSTEM_TIMEOUT	<code>--timeout=1-65535</code>	60
IBM_SYSTEM_TOOL_FILE	<code>-t file_name --toolzip=file_name</code>	ibm_utl_boot_tools-141_anyos_x86-64.zip
IBM_SYSTEM_TUI	<code>--tui</code>	NO Notes: <ul style="list-style-type: none"> • YES: The <code>--tui</code> option is specified. • NO: The <code>--tui</code> option is not specified.
IBM_SYSTEM_UNATTENDED	<code>--unattended=protocol://address/directory</code>	NULL
IBM_SYSTEM_UPDATE_HBACNA	<code>--new</code>	NO Notes: <ul style="list-style-type: none"> • YES: The <code>--new</code> option is specified. • NO: The <code>--new</code> option is not specified.
IBM_SYSTEM_USB_KEY	<code>--usbkey=volume</code>	NULL
IBM_SYSTEM_VLANID	<code>-vlan-id=0-4095</code>	NULL
IBM_SYSTEM_VLANIP	<code>-vlanip=ip_address</code>	NULL
IBM_SYSTEM_WORKINGDIR	<code>-l directory --local=directory</code>	The current directory where the tool is being run from.

Example

This is an example of a configuration file:

```
IBM_SYSTEM_MACHINETYPE=8853
IBM_SYSTEM_WORKINGDIR=D:\\workingdir
IBM_SYSTEM_TOOL_FILE=ibm_utl_boot_tools-100_anyos_x86-64.zip
IBM_SYSTEM_ACQUIRE=YES
IBM_SYSTEM_FUNCTION=uxspi
IBM_SYSTEM_ISO_FILE=NULL
IBM_SYSTEM_PXE_FILE=NULL
IBM_SYSTEM_USB_KEY=NULL
IBM_SYSTEM_CD=bootable.iso
IBM_SYSTEM_PROXY_PASSWORD=NULL
IBM_SYSTEM_PROXY_USER=NULL
IBM_SYSTEM_PROXY_PORT=NULL
IBM_SYSTEM_PROXY_ADDRESS=NULL
IBM_SYSTEM_AUTORUN=NULL
IBM_SYSTEM_TIMEOUT=60
IBM_SYSTEM_FORCE=NO
IBM_SYSTEM_LATEST=NO
```

```
IBM_SYSTEM_TUI=NO
IBM_SYSTEM_KERNEL_ARGS=NULL
IBM_SYSTEM_MEDIALABEL="Bootable Media - [time]"
```

ibm_utl_bomc_v.r.m_distribution - Create bootable media using the CLI

Use the `ibm_utl_bomc_v.r.m_distribution` command to create bootable media for CD, DVD, ISO, PXE files, or USB flash drive, where *v.r.m* is the version of IBM ToolsCenter Bootable Media Creator and *distribution* is the operating system on which IBM ToolsCenter Bootable Media Creator runs. The bootable media includes all updates from the UpdateXpress System Pack Installer directory.

Syntax

```
ibm_utl_bomc_v.r.m_distribution --help

ibm_utl_bomc_v.r.m_distribution --version

ibm_utl_bomc_v.r.m_distribution --license

ibm_utl_bomc_v.r.m_distribution --check-update

ibm_utl_bomc_v.r.m_distribution --configfile=file_name

ibm_utl_bomc_v.r.m_distribution --update-supportlist [--show-supportlist]

ibm_utl_bomc_v.r.m_distribution --rollback-supportlist [--show-supportlist]

ibm_utl_bomc_v.r.m_distribution [--description=description][--
function=uxspi | dsa | serverguide] [--vmware-esxi-update=3.5] [--cd=volume
| --iso=file_name | --pxe=directory | --usbkey=volume] [--autorun=tool]
[--machine-type=type] [--tftp-pxe-address=address] [--local=directory]
[--toolzip=file_name] [--latest] [--no-acquire] [--force] [--tui]
[--kernel-arg="options"] [--proxy-address=address --proxy-port=port]
[--proxy-user=user --proxy-password=password] [--timeout=seconds]
[--arch=x86 | x64] [--no-firmware] [--tftp-pxe-address=ip_address]
[unattended=protocol://address/directory]
```

Description

Prerequisites:

- You must have administrator or root-equivalent operating system privileges to use IBM ToolsCenter Bootable Media Creator.
- An Internet connection is required to download tools and updates from the IBM website.
- If you use an HTTP proxy to connect to the Web, the HTTP server must support Secure Sockets Layer (SSL).

Restriction: You can run only one instance of IBM ToolsCenter Bootable Media Creator on a system at a time, regardless of whether it is started from the graphical or command-line interface. This includes instances of IBM ToolsCenter Bootable Media Creator that might be bundled in other tools, such as UpdateXpress System Pack Installer.

If you run this command with no options, the graphical interface is displayed.

While Bootable Media Creator is busy waiting for operations that take more than a few seconds to finish (such as acquiring updates or inventory collection), a series of dots (.) is displayed, about one dot for every 2 seconds.

If you do not specify a bootable media option (`--cd`, `--iso`, `--pxe`, or `--usbkey`), then the updates for the specified machine type are downloaded to the specified working directory.

Tips: Consider these guidelines when using this command:

- The command name is different for each supported operating system.
- The command names are case sensitive and must be entered using lower case.
- You can specify options in any order.
- You can specify an option only once.
- (Windows only) Directory paths can be delimited using the slash (/) or backslash (\) character. If a path contains spaces, enclose the entire path in quotation marks.
- (Linux only) Directory paths must be delimited using the slash (/) character. If a path contains spaces, specify the space prefixed with the backslash (\) escape character.

Options

v.r.m_distribution

Specifies the version and operating system on which this command is being run.

Operating system	Command name
Windows	ibm_utl_bomc_v.r.m_windows_i386.exe
Red Hat Enterprise Linux 7.0	ibm_utl_bomc_v.r.m_rhel7_x86-64.bin
Red Hat Enterprise Linux 6.0	ibm_utl_bomc_v.r.m_rhel6_i386.bin
Red Hat Enterprise Linux 6.0 64-bit	ibm_utl_bomc_v.r.m_rhel6_x86-64.bin
Red Hat Enterprise Linux 5.0	ibm_utl_bomc_v.r.m_rhel5_i386.bin
Red Hat Enterprise Linux 5.0 64-bit	ibm_utl_bomc_v.r.m_rhel5_x86-64.bin
Red Hat Enterprise Linux 4.0	ibm_utl_bomc_v.r.m_rhel4_i386.bin
Red Hat Enterprise Linux 4.0 64-bit	ibm_utl_bomc_v.r.m_rhel4_x86-64.bin
SUSE Linux Enterprise Server 11	ibm_utl_bomc_v.r.m_sles11_i386.bin
SUSE Linux Enterprise Server 11 64-bit	ibm_utl_bomc_v.r.m_sles11_x86-64.bin
SUSE Linux Enterprise Server 10	ibm_utl_bomc_v.r.m_sles10_i386.bin
SUSE Linux Enterprise Server 10 64-bit	ibm_utl_bomc_v.r.m_sles10_x86-64.bin

where *v.r.m* is the version, release and modification of IBM ToolsCenter Bootable Media Creator (for example, 9.6.3).

`--arch=x86 | x64`

Specifies the architecture type to be supported by the created ServerGuide image. The default value is x64. Valid values are x86 and x64.

`--autorun={uxspi | dsa | none}`

Specifies the tool that will run automatically when the created bootable media boots from an IBM system. You can specify one of these tools:

- **uxspi:** Runs UpdateXpress System Pack Installer automatically when the bootable media is booted. This is the default value.

- **dsa**: Runs the Dynamic System Analysis tool automatically when the bootable media is booted.
- **none**: No tool runs automatically when the bootable media is booted.

Note: This option is not valid if the `serverguide` option was selected with the `--function` option.

--cd=*volume*

Creates a bootable CD or DVD identified by the specified volume.

(Windows only) *Volume* specifies the volume letter where the CD or DVD is located. Include the colon character (for example, `--cd=d:`)

(Linux only) *Volume* specifies the CD or DVD device name (for example, `--cd=/dev/cdrom`).

Attention: If the CD or DVD is read-writable, existing data will be deleted, regardless of whether the `--force` option is specified. No warning is displayed if data currently exists on the CD or DVD.

Note: You cannot combine this option with the `--iso`, `--pxe`, and `--usbkey` options.

--check-update

Checks the web for the latest version of IBM ToolsCenter Bootable Media Creator, and downloads the newer version, if available, to the directory in which this command is running.

Notes:

- IBM ToolsCenter Bootable Media Creator is ready to run after it is downloaded. It does not need to be installed.
- If `--check-update` is used in combination with other options; the other options are ignored.

--configfile=*file_name*

Retrieves option arguments from the specified configuration file

Example: `--configfile=c:\path\config.txt`

Notes:

- You cannot combine this option with any other options.
- The specified configuration options are saved in a configuration file named `bomc.config` in the working directory and bootable media each time you create a bootable media.

--description=*description*

Specifies descriptive text that is displayed on the screen when you boot the target system using the created bootable media.

Note: If you do not specify descriptive text, "Bootable media - *date*" is displayed by default, where *date* is the date that the bootable media was created.

--force

Overwrites existing data on the bootable media (ISO image, USB flash drive, or PXE files) without displaying a warning message. If this option is not specified, existing bootable media is not overwritten.

Note: Existing data on a read/writable CD or DVD is automatically overwritten, regardless of whether this option is specified.

--function=uxspi,dsa,serverguide

Includes the specified tools on the bootable CD, DVD, or USB flash drives. You can specify one or more of these tools, separated by a comma.

Note:

- If **dsa** is selected, the bootable media will contain a stand-alone memory test utility that will not be run by default.
- The **serverguide** option is supported for Windows only.
- You cannot combine the **dsa** and **serverguide** options.

-h | -? | --help

Detailed information about the command is displayed, including the syntax, a description of the command, a description of the options, error codes, and examples.

--iso=file_name

Creates a bootable ISO 9660 file with the specified file name (for example, `--iso=bios.iso`).

Notes:

- The specified file name must end in "iso" (for example, `bios.iso`).
- By default, the ISO file is created in the working directory, specified by the **--local** option. To create the file in a different directory, specify the path and file name (for example, `c:\bios.iso` or `..\bios.iso`).
- You cannot combine this option with the **--cd**, **--pxe**, and **--usbkey** options.

--kernel-args="key=value[key=value...]"

Appends the specified kernel arguments to the boot loader configuration file, such as `imgla.cfg` or `pxelinux.cfg`. For example, for Serial Over LAN (SOL) support specify: `--kernel-args="console=ttyS1,19200 console=tty1"`.

Notes:

- This option is not valid when **serverguide** is selected as the **function** option.
- The kernel options are in addition to other options that are already specified in the bootable media itself.
- Enclose the key-value pairs in quotation marks.
- Separate the key-value pairs using a space.
- When you specify a serial console argument (`ttyS0` or `ttyS1`) and the `tty1` console argument using the **--kernel-args** option, you must specify the serial console first.

Note: Using the ipstatic and ipstatic6 options

The **ipstatic** optional kernel parameter is used to assign IPv4 addresses to NICs. If you use the `ipstatic` option, be aware of the following limitations:

- If you do *not* specify an **ipstatic** or **ipstatic6** kernel argument, IP addresses will be assigned to all NICs using DHCP.
- If you specify `ipstatic=auto`, IP addresses will be assigned to all NICs sequentially, beginning with 192.168.0.100, and adding addresses incrementally until reaching 192.168.0.255.

- You can specify the IP address of a single NIC explicitly:
`ipstatic=eth0;192.168.0.125:255.255.255.0:192.168.0.1`. This will set one NIC to the specified address. Note that for NIC firmware updates to succeed, the NICs must be configured with an IP address. Therefore, if you use this option and are performing firmware updates, only the NIC specified in the argument (in this example, `eth0`) will succeed. Firmware updates for all of the other NICs in the system will fail.
- You can specify a starting IP address and allow the `auto` parameter to assign IP addresses sequentially beginning with that address, as shown below.
`ipstatic=eth0;192.168.0.125:255.255.255.0:192.168.0.1;auto`
- If you specify a static IPv4 address when creating a PXE image, the boot will fail as this will force an address reassignment, which will cause the connection between the target server and the PXE server to be lost.

The **`ipstatic6`** optional kernel parameter is used to assign IPv6 addresses to NICs. If you use the **`ipstatic6`** option be aware of the following limitations:

- If you do *not* specify an **`ipstatic`** or **`ipstatic6`** kernel argument, IP addresses will be assigned to all NICs using DHCP.
- If you specify `ipstatic6=auto`, IP addresses will be assigned to all NICs sequentially, beginning with adapter `eth0` and `2001::1234:abcd/64` and adding addresses incrementally. That is, `eth1` will receive address `2001::1234:abce/64`, `eth2` will receive address `2001::1234:abcf/64`, and so on.
- You can specify the IPv6 address of a single NIC explicitly:
`ipstatic6=eth0;2001::1234:abcd/64`. This will set one NIC to the specified address. Note that in order for NIC firmware updates to succeed, the NICs must be configured with an IP address. Therefore, if you use this option and are performing firmware updates, only the NIC specified in the argument (in this example, `eth0`) will succeed. Firmware updates for all of the other NICs in the system will fail.
- You can specify a starting IPv6 address and allow the `auto` parameter to assign IP addresses sequentially beginning with that address, as shown below.
`ipstatic6=eth0;2001::1234:abcd/64;auto`
- If you specify an IPv6 address with no postfix, the postfix will be set to 0 by default.
- If you specify an IPv6 static address when creating a PXE image, the boot might fail, as there is no remote boot specification for IPv6 equivalent to PXE.

--latest

Acquires the latest individual updates from the IBM website and places the files in the working directory specified by the **`--local`** option. If not specified, this command acquires complete UpdateXpress System Packs.

Notes:

- IBM ToolsCenter Bootable Media Creator acquires the latest tools and boot environment automatically each time this command is run if they do not already exist in the working directory specified by the **`--local`** option.
- ISO files that are located in the specified working directory are not copied to the bootable media being created.

--license

License information is displayed and then exits.

-l *directory* | --local=*directory*

Specifies the fully-qualified working directory (for example, --local=c:\workingdir).

This is the directory that contains the files needed to create the bootable media. This is also the default directory where the bootable ISO image and Preboot Execution Environment (PXE) files are created. If not otherwise specified with the --iso or --pxe options.

Notes:

- If you specify the --no-acquire option, this directory must contain all of the files needed to create the bootable media, including the UpdateXpress System Packs, tools, and boot environment. The files must be in specific locations within this directory.
- HTTP and FTP URL style addresses are not supported.

-m [all | {*machine_type* [, *machine_type*] | none] | --machine-type=[all | {*machine_type* [, *machine_type*] | none]

Targets one or more specified machine types, separated by a comma (for example, --machine-type=4362, 4363). If you specify *all*, this command creates bootable media that supports all IBM System x and BladeCenter machine types.

Notes:

- Beginning with BoMC 9.51, if you specify the -m all option to acquire all firmware packages for all supported systems, the machine type list to the ECC server will include all of the systems in the support list for BoMC, not "all".
- The machine type must be a 4-digit number. The wildcards are not allowed.
- Spaces are not allowed in a comma separated list.
- You can find a list of valid machine types from the IBM ToolsCenter Bootable Media Creator graphical user interface.

--new

Allows you to choose to update all firmware packages later with the following options:

- It can be detected after system boots into the media.
- The package version on the media is larger than the version installed on the target system.
- In the **updateSelection** field of the package's XML file, the value is specified as *never*.

Note: --new only works in TUI mode.

--no-acquire

Acquires UpdateXpress System Pack or individual updates from existing files in the working directory. If this option is not specified, UpdateXpress System Pack or individual updates are acquired from the IBM website.

--no-eject

Prevents ejection of the CD/DVD in the media tray after the Bootable Media Creator exits. If this option is not specified, the media will be ejected.

Note: This option is not valid if the serverguide option was selected with the --function option.

--no-firmware

Indicates that no firmware updates are to be included in the IBM ServerGuide Setup and Installation CD.

--proxy-address=address

Specifies the host name, IP address, or DNS address for the HTTP proxy server (for example, `--proxy-address=10.0.0.10`).

Notes:

- Specify this option if you require an HTTP proxy to connect to the web.
- If you specify this options, you must also specify the **--proxy-port** option.

--proxy-password=password

Specifies the proxy user password for authenticating to the HTTP proxy server.

Notes:

- Specify this option if you require an HTTP proxy to connect to the web and credentials must be provided to authenticate to the HTTP server.
- If you specify this options, you must also specify the **--proxy-user** option.
- The proxy password is not persistent and is not stored in the configuration file.

--proxy-port=port

Specifies the proxy port number for the HTTP proxy server.

Notes:

- Specify this option if you require an HTTP proxy to connect to the web.
- If you specify this options, you must also specify the **--proxy-address** option.

--proxy-user=user_ID

Specifies the proxy user ID for authenticating to the HTTP proxy server.

Notes:

- Specify this option if you require an HTTP proxy to connect to the web and credentials must be provided to authenticate to the HTTP proxy server.
- If your proxy server does not require a password, this option can be omitted.
- The proxy user ID is stored in the configuration file, but the proxy password is not stored.

--pxe=directory

Creates bootable Preboot Execution Environment (PXE) files in the specified directory (for example, `--pxe=pxe_dir`).

Notes:

- The specified directory is relative to the working directory specified by the **-l** | **--local** option.
- You cannot combine this option with the **--cd**, **--iso**, and **--usbkey** options.
- The PXE files include `pxelinux.cfg/default`, `img3a`, `img2a`, `pxelinux.0`, `tcrootfs` and `tc.zip`.
- You cannot use this option if `serverguide` was chosen with the **--function** option.

--rollback-supportlist

Reverts to the original bundled system support list for each function.

--show-supportlist

Shows the system support list currently in use for each function (diagnostic, update, and deployment).

--timeout=1-65535

Specifies the amount of time, in seconds, that you have to press a key before the specified tool starts automatically after you boot using the bootable media. You can specify 1 - 65535 seconds. The default value is 60 seconds.

Note: This option is not valid if the `serverguide` option was selected with the `--function` option.

--tftp-pxe-address=ip_address

Specifies the IP address of the TFTP server to use for PXE booting.

-t file_name | --toolzip=file_name

Uses the specified bootable-environment file that exists in the working directory instead of acquiring it from the IBM website.

Note: This option is not valid if the `serverguide` option was selected with the `--function` option.

--tui

Runs the selected tools in a text user interface. If this option is not specified, the tools run in a graphical user interface.

Note: This option is not valid if the `serverguide` option was selected with the `--function` option.

--unattended=protocol://address/directory

Specifies that the created media is to run in unattended mode, and indicates the upload location for the log file package. When using this option, the `--autorun` parameter is disabled.

protocol

specifies the protocol to use when uploading the log file package. Valid values are:

tftp
ftp
nfs
smb
usb

Note:

1. In order to specify a port number when using an IPv6 address with FTP and TFTP, you must enclose the IPv6 address in brackets, as shown:
`--unattended=tftp://[2001::1234:abcd]:21/logdir`
2. Use of IPv6 addressing with NFS is not supported.

address

indicates the address of the server.

directory

indicates the name of the directory.

--update-supportlist

Updates the system support list for all functions by acquiring a new ECC list.

Note: You can use the **--update-supportlist** (CLI) or the **Update List** button (GUI) to update the support list from the IBM website. This enables the tool to support new systems or new versions of VMWare ESXi update that are released after the current version of the tool.

--usbkey=*volume*

Creates a bootable USB flash drive identified by the specified volume.

(Windows only) *Volume* specifies the USB flash drive. Include the driver letter and the colon character (for example, **--usbkey=d:**).

(Linux only) *Volume* specifies the device name of the USB flash-drive (for example, **--usbkey=/dev/sdb4**). Existing data will be deleted from the USB flash drive.

Notes:

- You cannot combine this option with the **--cd**, **--iso**, and **--pxe**
- You cannot use this option if **serverguide** was chosen with the **--function** option.
- Only **4** is supported as a primary partition number for the Linux operating systems. Volume specified in the option **--usbkey** is like **/dev/sdx4**, in which **sdx** is the hard drive of USB key.

-V | --version

Display the version of IBM ToolsCenter Bootable Media Creator.

--vlan-id

Allows you to set the vlan-id.

--vlan-ip

Allows you to set the vlan-ip address.

Note: The **--vlan-id** and **--vlan-ip** options should be used together. If only one is specified, error code 245 will be returned. If both are specified, BoMC adds the following configuration options to the **bomc_config** file:

- **IBM_SYSTEM_VLANID=*vlan-id value***
- **IBM_SYSTEM_VLANIP=*vlan-ip address***

Exit status

The following table contains the codes returned by this command.

- **0:** The operation completed successfully.
- **101:** An option argument is not valid.
- **120:** FTP error: Failed to download file(s).
- **200:** One or more files were not saved.
- **201:** The specified directory could not be created.
- **202:** An applicable update is not available for specified machine-type.
- **203:** Acquisition error: Failed to find update by specified update id: %s.
- **204:** An unrecoverable error occurred while downloading updates from the IBM update repository.
- **205:** One or more specified machine types are not valid.
- **220:** The bootable environment is not found in the working directory.
- **221:** The specified directory or file is not found.
- **222:** The specified directory or files cannot not be created.
- **223:** The specified zip file cannot be uncompressed.
- **224:** The specified zip file does not have the .zip extension
- **225:** No suitable updates were found. SLES10 updates are needed in the created bootable media. Acquire SLES10 updates before creating bootable media.

- **226:** The mode change failed on one or more files.
- **227:** The specified ISO file does not have the .iso extension
- **228:** The ISO file cannot be created.
- **229:** The CD or DVD cannot be burned.
- **230:** The specified volume name for the USB flash drive is not found.
- **231:** The function cannot be performed.
- **232:** The USB flash drive has not been initialized.
- **235:** The specified volume is not a valid CD or DVD volume.
- **240:** A newer version of IBM ToolsCenter Bootable Media Creator is not available. You are running the latest tool.
- **245:** VLAN id and ip should be specified together.
- **255:** An unknown error occurred.

Examples

1. Check for a new version of IBM ToolsCenter Bootable Media Creator

This example illustrates how to check for and download a new version of IBM ToolsCenter Bootable Media Creator on a Linux environment.

```
Windows ibm_utl_bomc_9.63_windows_i386.exe --check-update
```

```
Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --check-update
```

2. Download the latest UpdateXpress System Pack updates and the boot environment

This example illustrates how to download the latest UpdateXpress System Pack updates and the latest boot environment for systems with machine type 8843. Files are copied to the c:\workingdir directory.

```
Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi -m 8843  
-l c:\workingdir
```

```
Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi -m 8843  
-l c:/workingdir
```

3. Create a bootable CD using an HTTP proxy

This example illustrates how to create a bootable CD for a system with machine type 8843. The updates and files are acquired from an HTTP proxy server with IP address hkce01.hk.ibm.com and using port 80.

Note: The HTTP proxy server must support SSL.

```
Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi -m 8843  
--cd=E: -l workingdir --proxy-address=hkce01.hk.ibm.com --proxy-port=80
```

```
Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi -m 8843  
--cd=/dev/hda -l workingdir --proxy-address=hkce01.hk.ibm.com  
--proxy-port=80
```

4. Create a bootable ISO image

This example illustrates how to create a bootable ISO image named tc.iso for a system with machine type 8843 that includes the UpdateXpress System Pack Installer. UpdateXpress System Pack Installer runs automatically when the bootable media boots. The tc.iso file is created in the workingdir directory.

```
Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi -m 8843  
--iso=tc.iso -l c:\workingdir --autorun=uxspi
```

```
Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi -m 8843  
--iso=tc.iso -l workingdir --autorun=uxspi
```

5. Create bootable USB flash drive

This example illustrates how to create a bootable USB flash drive for a system with machine type 8843 that includes the UpdateXpress System Pack Installer. The updates and files are acquired the IBM website. For the Windows example, the USB flash drive uses the F: drive. For the SLES10 example, the USB flash drive uses the /dev/sdb device.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi -m 8843  
--usbkey=F: -l c:\working_dir
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi -m 8843  
--usbkeykey=/dev/sdb4 -l working_dir
```

6. Create bootable PXE files

This example illustrates how to create bootable PXE files (including pxelinux.cfg/default, initrd.gz, vmlinix, pxelinux.0, tcrootfs and tc.zipin) in the c:\workingdir\pxedir directory for a system with machine type 8843 that includes the UpdateXpress System Pack Installer. The updates and files are acquired the IBM website. UpdateXpress System Pack Installer runs automatically when the bootable media boots.

Note: This example requires you to change the Trivial File Transfer Protocol (TFTP) IP address of pxelinux.cfg/default. For more information, see Chapter 4, “Using bootable media,” on page 27.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi -m 8843  
--pxe=pxedir -l workingdir --tftp-pxe-address=192.168.1.6  
--autorun=uxspi
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi -m 8843  
--pxe=pxedir -l workingdir --tftp-pxe-address=192.168.1.6  
--autorun=uxspi
```

7. Create bootable media using a configuration file

This example illustrates create bootable media using option arguments that are set in the c:\config.txt configuration file.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --configfile=c:\config.txt
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --configfile=/root/  
config.txt
```

8. Create bootable media with a single update

This example illustrates how to create a bootable ISO image named bios.iso using the existing BIOS firmware update located in the working_dir directory. The UpdateXpress System Pack Installer tool and bootable environment are acquired from the IBM website by default.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi  
--no-acquire --iso=bios.iso -l c:\working_dir
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi  
--no-acquire --iso=bios.iso -l working_dir
```

9. Create bootable media using files on the local system

This example illustrates how to create a bootable ISO image named tc.iso for a system with machine type 8843 that includes the UpdateXpress System Pack Installer. The updates and files are acquired from the c:\workingdir directory on the local system. The tc.iso file is created in the c:\workingdir directory.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --function=uxspi -m 8843  
--iso=tc.iso -l workingdir --no-acquire
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=uxspi -m 8843
--iso=tc.iso -l workingdir --no-acquire
```

10. Create a bootable diagnostics CD using an HTTP proxy

This example illustrates how to create a bootable diagnostics CD. The Dynamic System Analysis tool and bootable files are acquired from an HTTP proxy server with IP address `hkce01.hk.ibm.com` using port 80.

Note: The HTTP proxy server must support SSL.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --function=dsa --cd=E: -l
workingdir --proxy-address=hkce01.hk.ibm.com --proxy-port=80
--autorun=none
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=dsa
--cd=/dev/hda -l workingdir --proxy-address=hkce01.hk.ibm.com
--proxy-port=80 --autorun=none
```

11. Create a bootable diagnostics USB flash drive

This example illustrates how to create a bootable diagnostic USB flash drive. For the Windows example, the USB flash drive uses the F: drive. For the SLES10 example, the USB flash drive uses the `/dev/sdb4` device.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe --function=dsa --usbkey=F:
-l c:\working_dir --autorun=none
```

```
> Linux ./ibm_utl_bomc_9.63_sles10_i386.bin --function=dsa
--usbkeykey=/dev/sdb4 -l working_dir --autorun=none
```

12. Create an IBM ServerGuide Setup and Installation CD

This example illustrates how to create a bootable IBM ServerGuide Setup and Installation CD.

```
> Windows ibm_utl_bomc_9.63_windows_i386.exe
--function=uxspi,serverguide -m 8843 -l=c:\workingdir --cd=E:
--arch=x86 --no-firmware
```

Notices

Use this information to understand the legal notices for this documentation.

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.

For license inquiries regarding double-byte (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

IBM World Trade Asia Corporation
Licensing 2-31 Roppongi 3-chome, Minato-ku
Tokyo 106-0032, Japan

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

IBM Corporation
MW9A/050
5600 Cottle Road
San Jose, CA 95193
U.S.A.

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this information and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement, or any equivalent agreement between us.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

If you are viewing this information softcopy, the photographs and color illustrations may not appear.

Trademarks

IBM, the IBM logo, and [ibm.com](http://www.ibm.com)[®] are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at "IBM Copyright and trademark information" at www.ibm.com/legal/copytrade.shtml.

Adobe and the Adobe logo are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States, and/or other countries.

Intel is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

Index

A

accessibility
 features 37
 keyboard 37
 shortcut keys 37

B

BIOS 15, 16
BMC 15, 16
bootable media
 updating 22
bootable media, supported 7
bootable-media, creating 11, 19

C

command 42
configuration file
 files
 configuration 39
 settings, configuration 39
contacting support 29
conventions, syntax diagram 39
creating bootable-media 11, 15, 16

D

disability 37
downloading
 latest version 8
downloading IBM ToolsCenter Bootable
 Media Creator 7
downloading IBM ToolsCenter Bootable
 Media Creator 3

F

features, accessibility 37

H

hardware
 requirements 3
 supported 4

I

IBM ToolsCenter Bootable Media Creator
 downloading 3, 7
 downloading latest version 8

K

keyboard 37
known problems 29

L

legal notices 55
limitations 29
log file
 files
 log 34

O

operating systems, supported 6

P

problem solving 29
problems 29

R

requirements
 hardware 3

S

ServerGuide 19
shortcut keys 37
solving problems 29
support, contacting 29
supported bootable media 7
supported hardware 4
supported operating systems 6
supported tools 7
syntax diagram conventions 39

T

tools, supported 7
trademarks 56
troubleshooting 29

U

updating
 bootable media 22
using bootable media 27, 28

W

web resources v
workarounds 32

Readers' Comments — We'd Like to Hear from You

IBM Systems
IBM ToolsCenter Bootable Media Creator
Installation and User's Guide
Version 9.63

We appreciate your comments about this publication. Please comment on specific errors or omissions, accuracy, organization, subject matter, or completeness of this book. The comments you send should pertain to only the information in this manual or product and the way in which the information is presented.

For technical questions and information about products and prices, please contact your IBM branch office, your IBM business partner, or your authorized remarketer.

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you. IBM or any other organizations will only use the personal information that you supply to contact you about the issues that you state on this form.

Comments:

Thank you for your support.

Send your comments to the address on the reverse side of this form.

If you would like a response from IBM, please fill in the following information:

Name

Address

Company or Organization

Phone No.

Email address



Fold and Tape

Please do not staple

Fold and Tape




NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

International Business Machines Corporation
ATTN: Dept 4NZA
PO Box 12195
Research Triangle Park, NC
USA 27709-2195

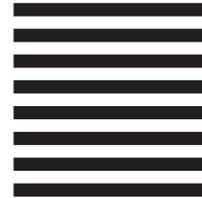

Fold and Tape

Please do not staple

Fold and Tape



Printed in USA