

# **Managing the 3746-9x0 as an APPN Network Node Using NetView/390**

IBM Advanced Technical Support  
Gaithersburg, MD USA

December 2000

# Abstract

Many new users of the 3746-9x0 APPN Network Node Processor are migrating from a 374x NCP subarea environment. This presentation is intended to point out some of the major differences in these two environments, as well as to provide information and examples for using Tivoli NetView for OS/390 to manage the 3746 as an APPN Network Node.

# Agenda

- Some Subarea - APPN differences
- 3746 Network Management using NetView
  - ▶ NetView SNA Topology Manager
    - With and without NetView graphics
  - ▶ NetView RUNCMD support for managing 3746 APPN functions
  - ▶ NetView Alerts generated by the 3746
- Summary

# Some Subarea - APPN differences

Particularly for those who may be migrating from a 374x/NCP environment


- VTAM displays
  - ▶ Line / PU / LU definitions replaced by SW\_Maj\_Node / PU / LU
  - ▶ Information previously provided by NCP-oriented VTAM commands now obtained by APPN-oriented commands
    - e.g., D NET, TOPO
  - ▶ Some user-written NetView CLISTs may need modification
- Activating / deactivating 3746 ports and links
  - ▶ Not a VTAM 'V NET' command
  - ▶ Use NetView command or 3746 Controller Configuration and Management (CCM) console
- Displaying 3746 APPN resource information
  - ▶ Use NetView command or CCM console
- New set of APPN and other Alerts from the 3746

# What is needed to implement graphic 3746 APPN management by NetView?

(See next chart for pictorial representation)

- **Resource Object Data Manager (RODM)**
  - ▶ Stores topology and status information in main storage cache
- **Graphic Monitor Facility Host Subsystem (GMFHS)**
  - ▶ Provides interface to graphics workstation(s)
  - ▶ RODM and GMFHS are components of NetView but run in separate address spaces
- **SNA Topology Manager (SNATM)** component of NetView
  - ▶ Started by activation of FLBTOPO autotask
- **VTAM Topology Agent** active
  - ▶ VTAM startup option or F NET,VTAMOPTS,OSIMGMT=YES
- **3746 APPN Topology Agent** active
- NetView 'TOPOSNA MONITOR' command
- At the NetView graphics workstation(s):
  - ▶ **NetView GMF or NetView Management Console (NMC)** installed & running on server and client workstation(s)
  - ▶ Establish **LU6.2 or IP (NMC only) connection** between NetView and server workstation

# NetView Graphics Environment

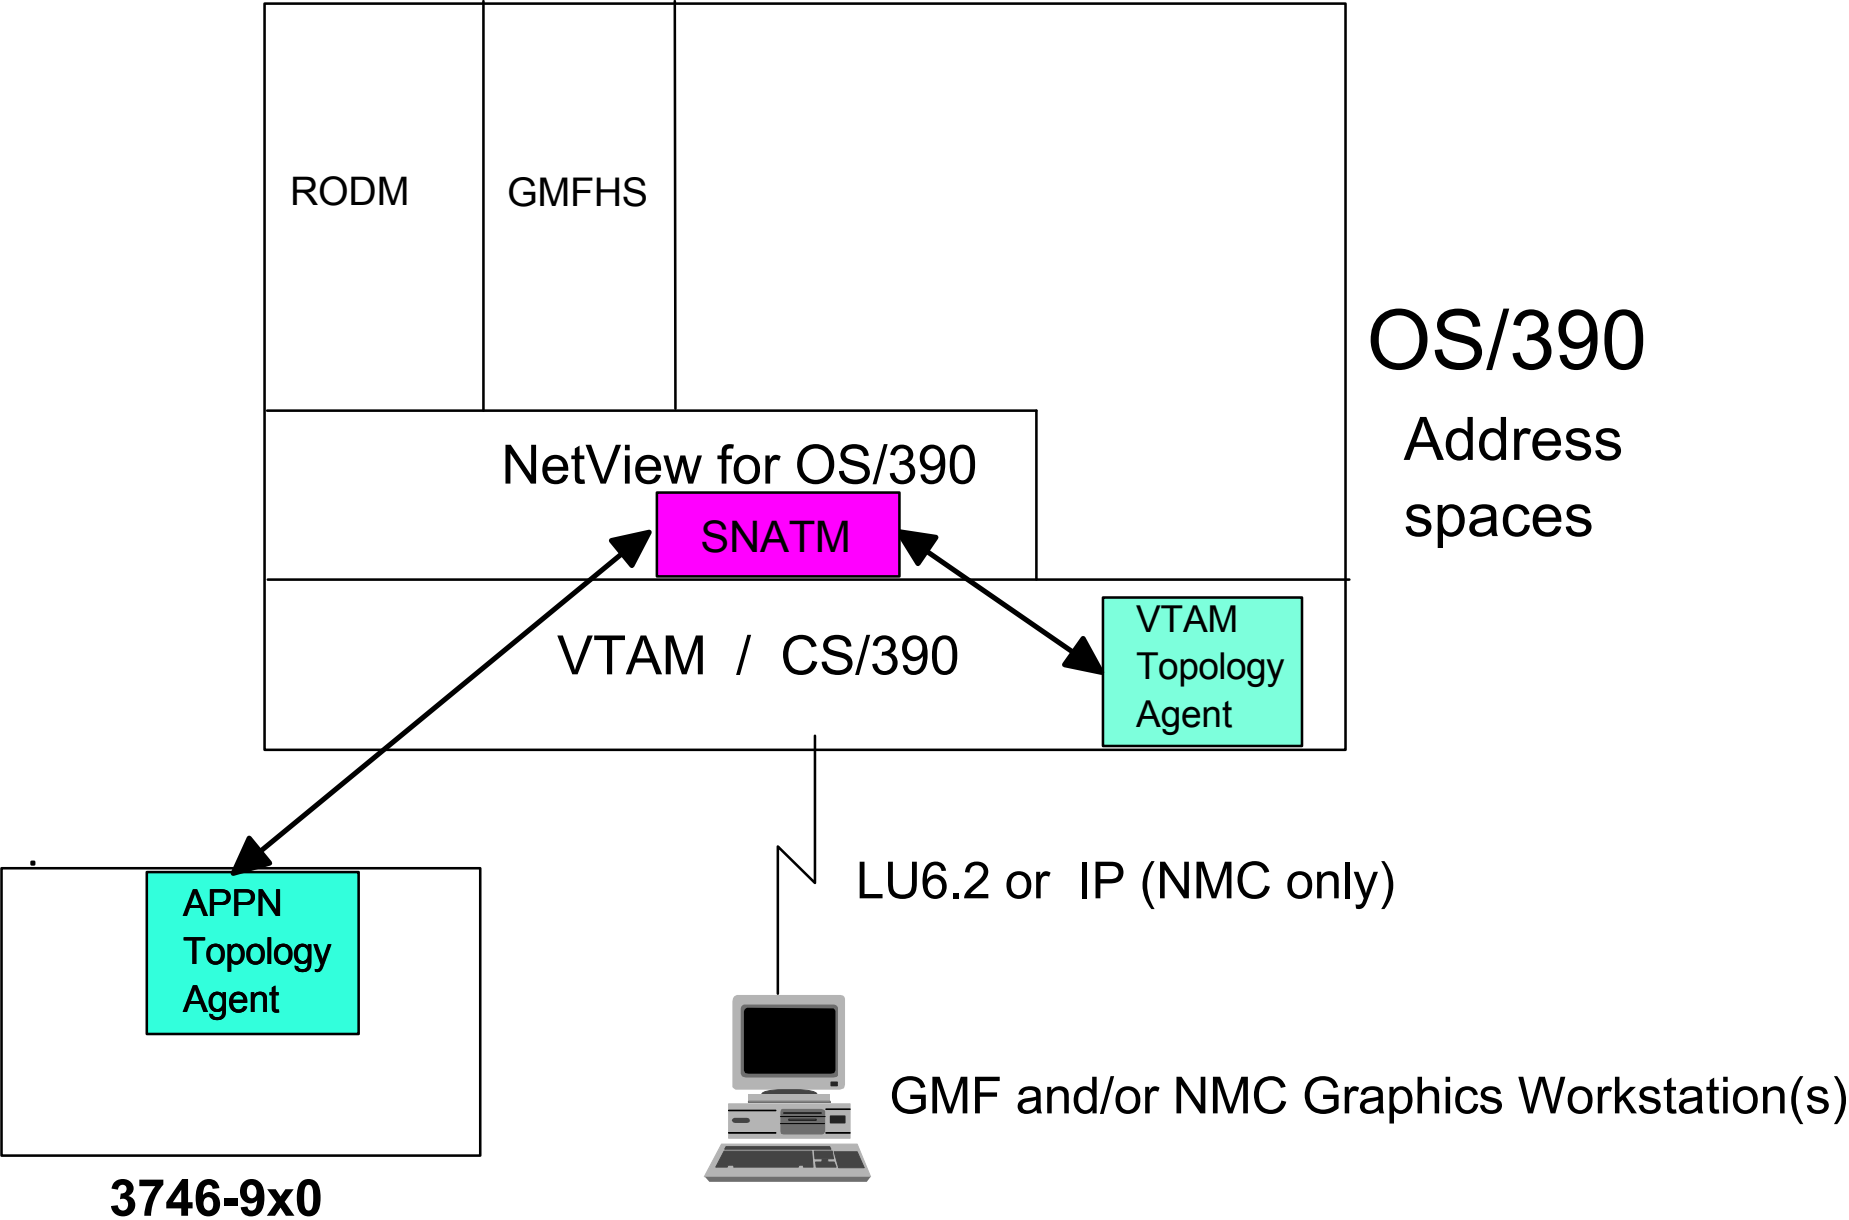

# 3746 Network Node Management from NetView SNA Topology Manager (SNATM)

- Monitor APPN/HPR network topology
  - ▶ Connectivity between network nodes
- Monitor APPN/HPR local topology
  - ▶ Transmission groups
  - ▶ Ports
  - ▶ Logical Links
  - ▶ Adjacent network nodes
  - ▶ End nodes
  - ▶ LEN nodes
- Activate / deactivate ports and links
- Perform other APPN management functions
  - ▶ Details later in presentation

## Notes on the following charts

The next chart depicts the system configuration used to create the subsequent screen captures. Note that the link-attached 3174 on the left of the chart is the 'star of the show'; it is the device we used to demonstrate much of NetView's 3746 APPN management capabilities.


The screen captures were created using GMF (NetView Graphic Monitor Facility). The NMC (NetView Management Console) Java-based displays are very similar, and the functions demonstrated are identical on GMF or NMC.




# 3746-900 APPN configuration

This 3174 is the network component that will be used to demonstrate the NetView APPN capabilities.


Note:  
The 3174 is a PU2 that communicates with VTAM through DLUR/DLUS.

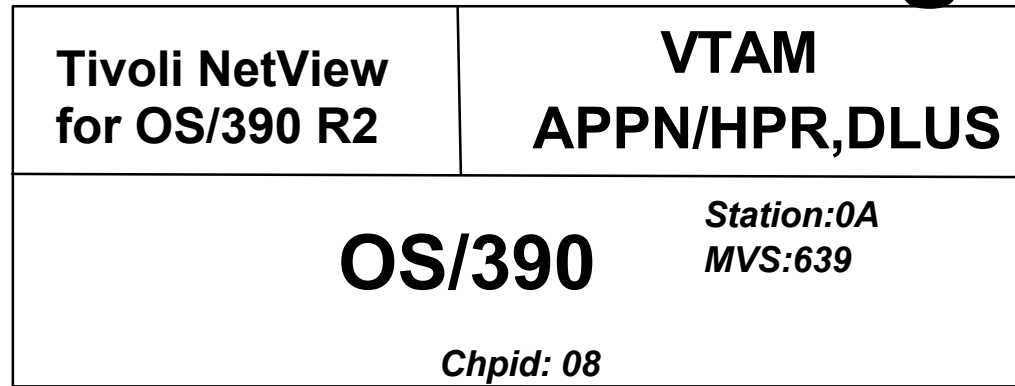

- 3746 Ports:
- 2240 ESCON
  - 2440 LINE (LIC 11)
  - 2080 SERV.RING
  - 2144 TIC 3
  - 2496 TIC 3
  - 2440 LINE (LIC 11)
  - 2444 LINE (LIC 11)
  - 2400 LINE (LIC 12)

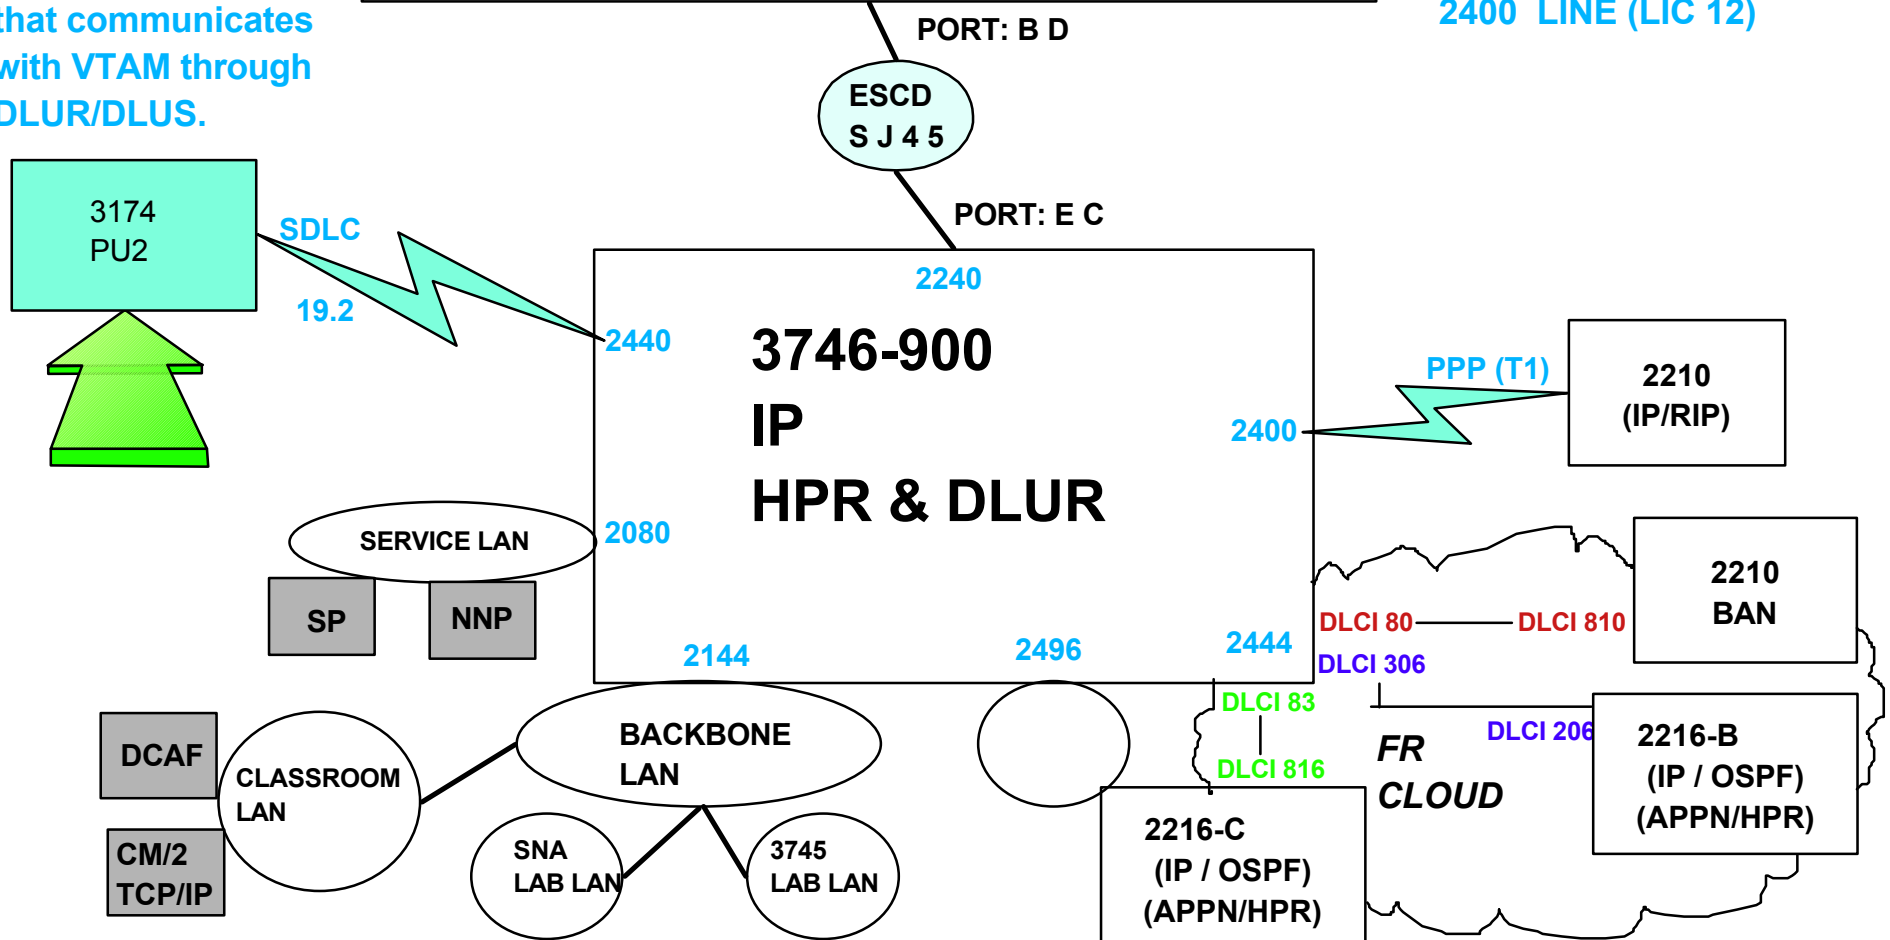


# GMF View of an APPN Network backbone

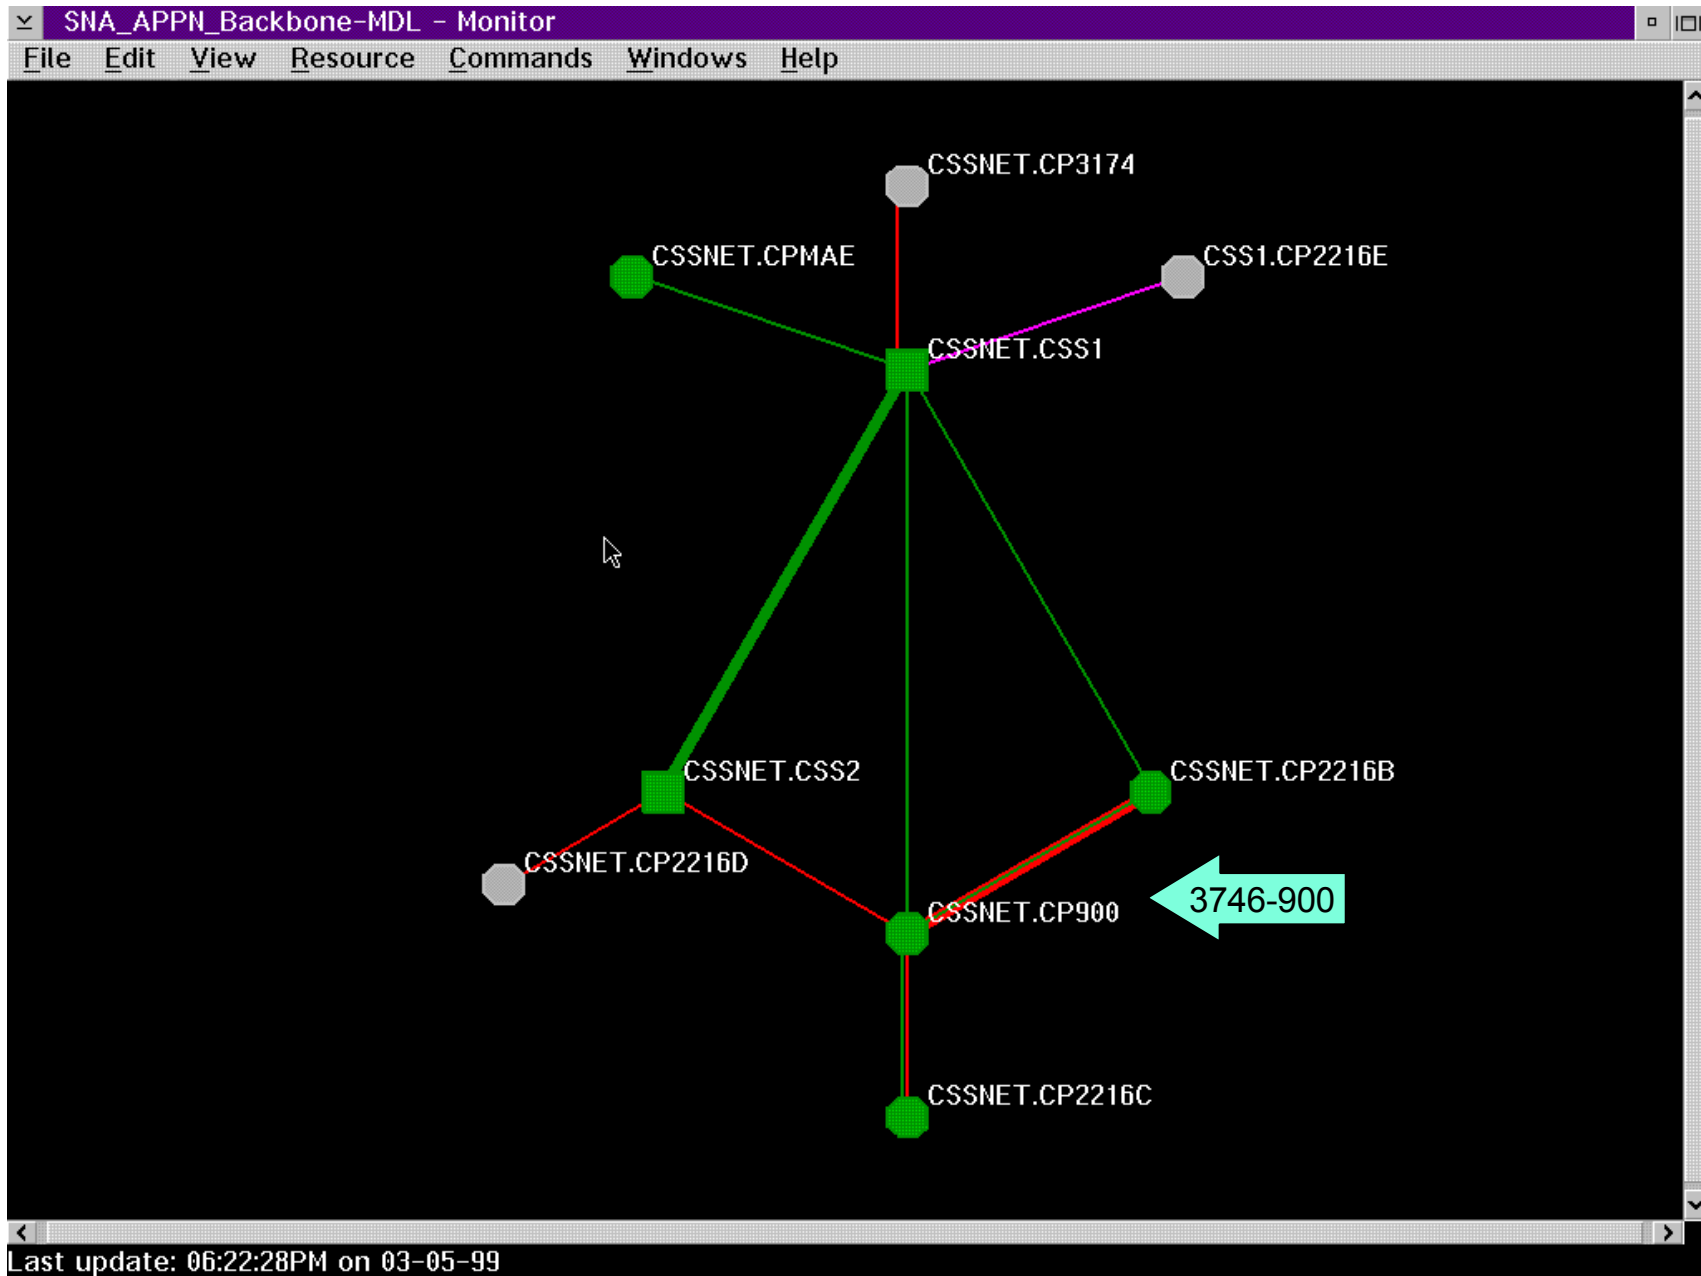


# GMF View of a 3746-900 and its transmission groups

(TG 21 between CP900 and CSS1 is highlighted)

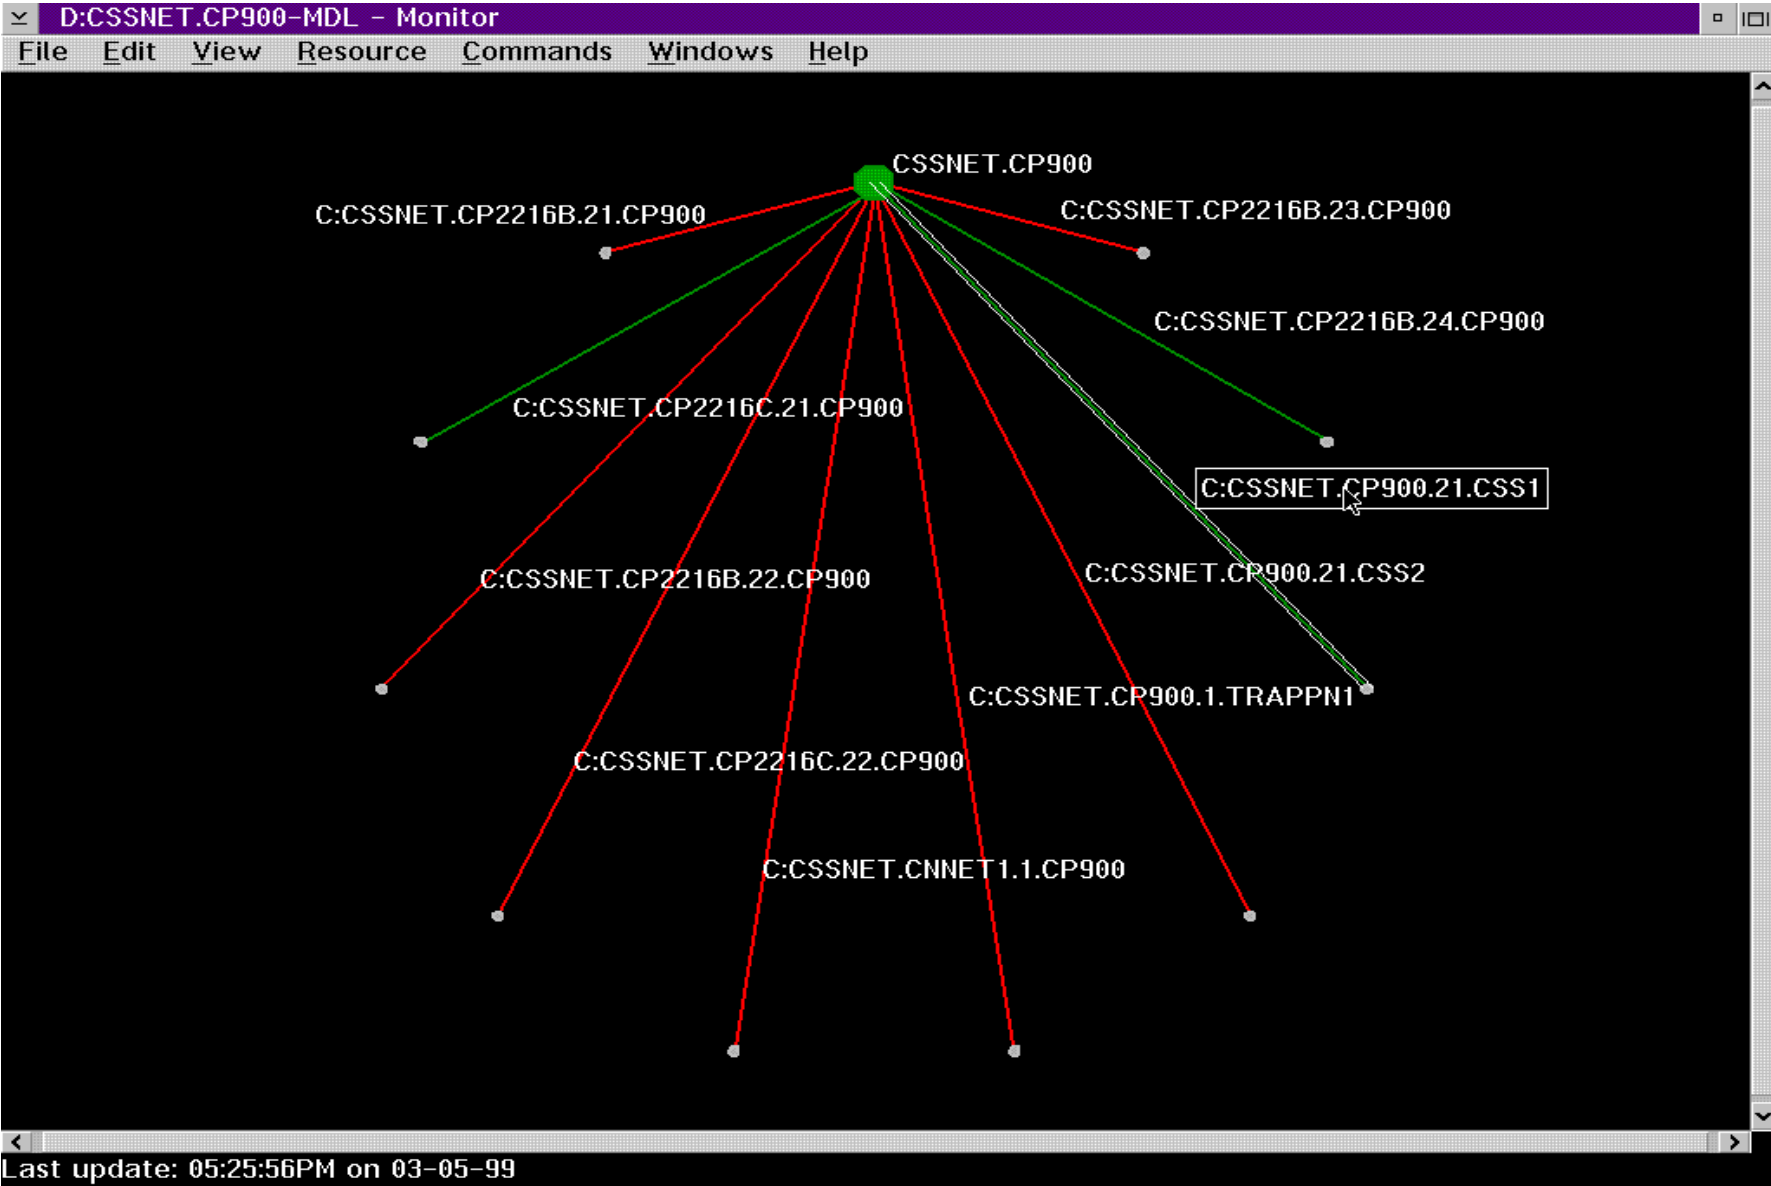

# Displaying ports and logical links on a 3746-900 from GMF

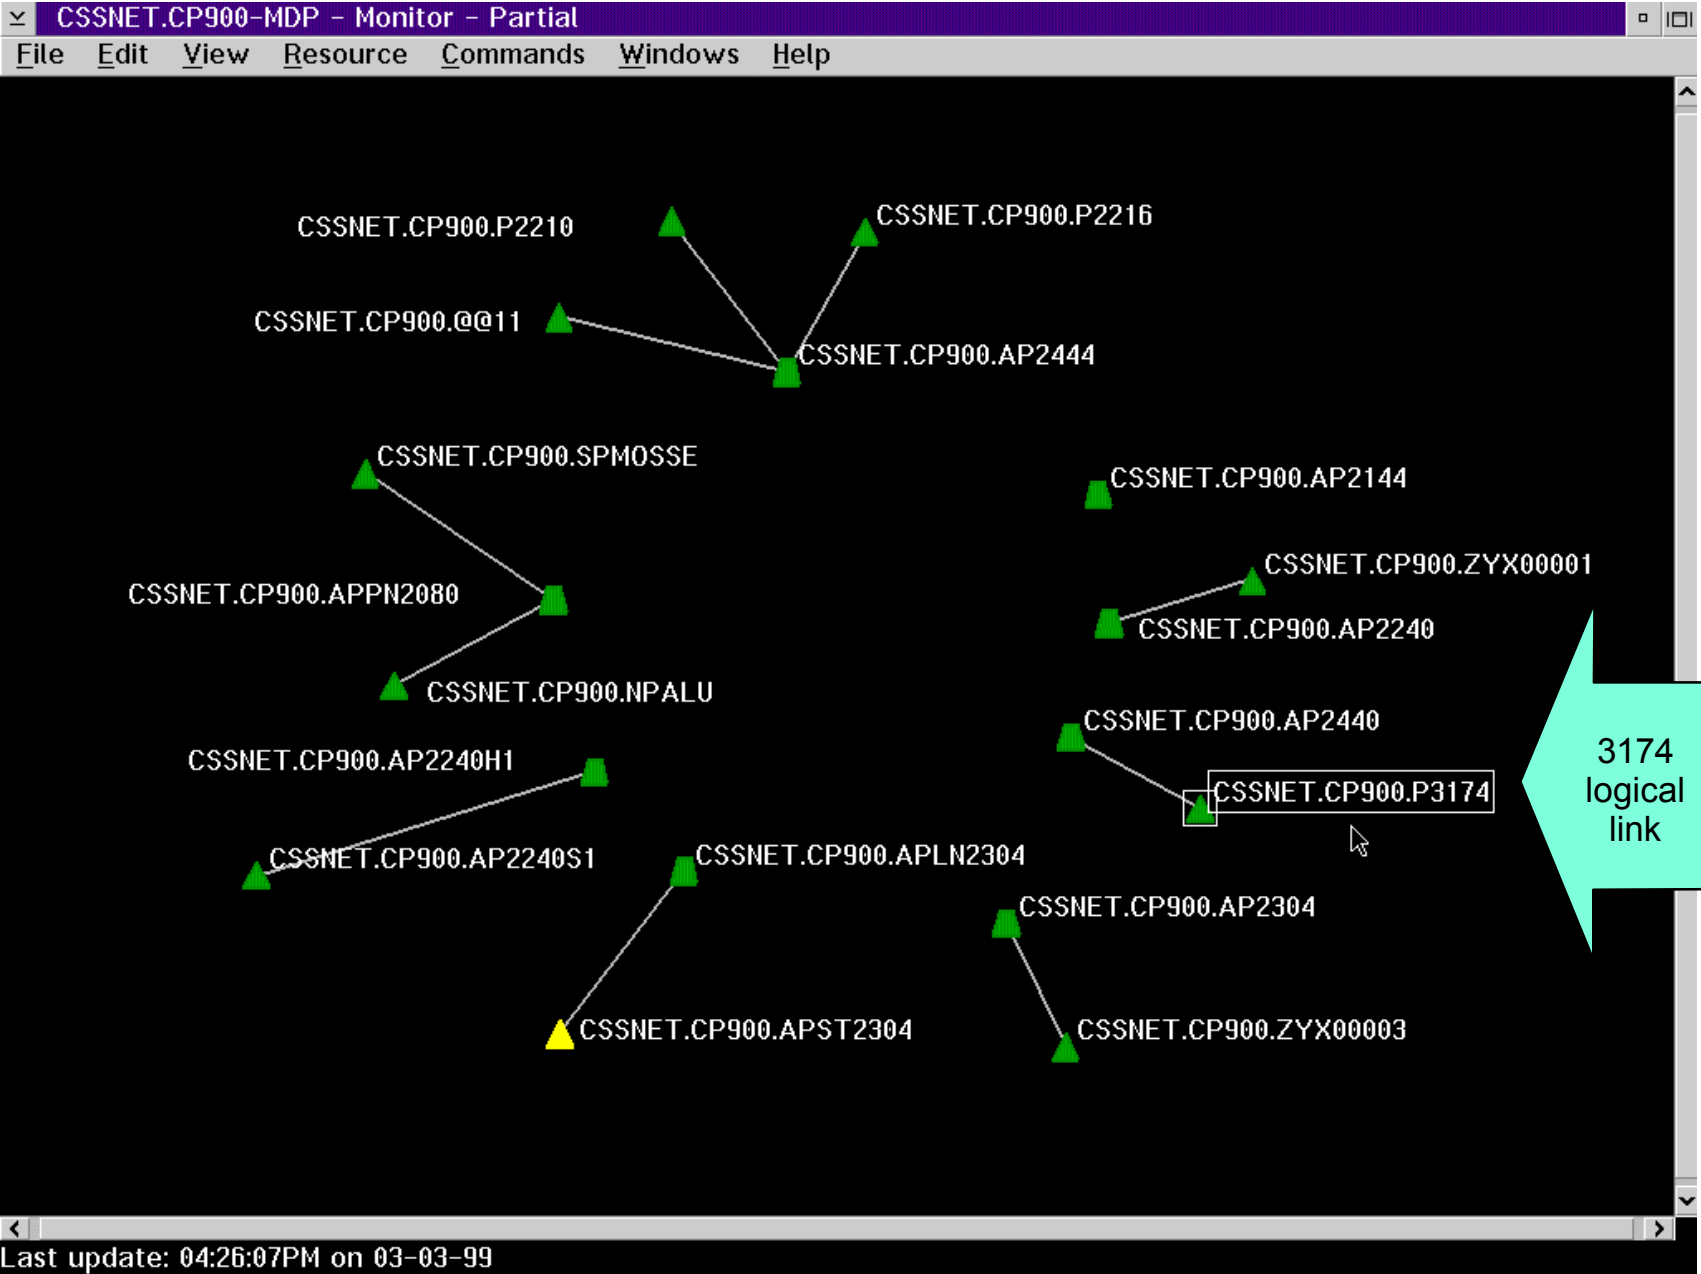


# The VTAM Switched Major Node definition for the 3174 PU/LU

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NETVIEW.BRWS ----- BROWSE ET3174 (DSIVTAM ) --- LINE 00000 TO 00010 OF 00010
                                                                    SCROLL ==> CSR
-----+-----1-----+-----2-----+-----3-----+-----4-----+-----5-----+-----6-----+-----7-----+-----
***** TOP OF DATA *****
ET3174      VBUILD TYPE=SWNET
* -----*
*          SWNET MACRO FOR 3746-900 DLUR SUPPORTED SDLC 3174          *
* -----*
*
PU3174S PU ADDR=01,USSTAB=USS3270A,                                     C
          MODETAB=AMODETAB,DLOGMOD=M2SDLCQ,                           C
          ANS=CONTINUE,DISCNT=NO,                                     C
          IDBLK=999,IDNUM=37461
DLU74S1 LU LOCADDR=02
***** BOTTOM OF DATA *****
CMD==>
TO SEE YOUR KEY SETTINGS, ENTER 'DISPFK'
2B=C
```


# Context menu for a logical link

Press right mouse button while mouse pointer is over object to get context menu

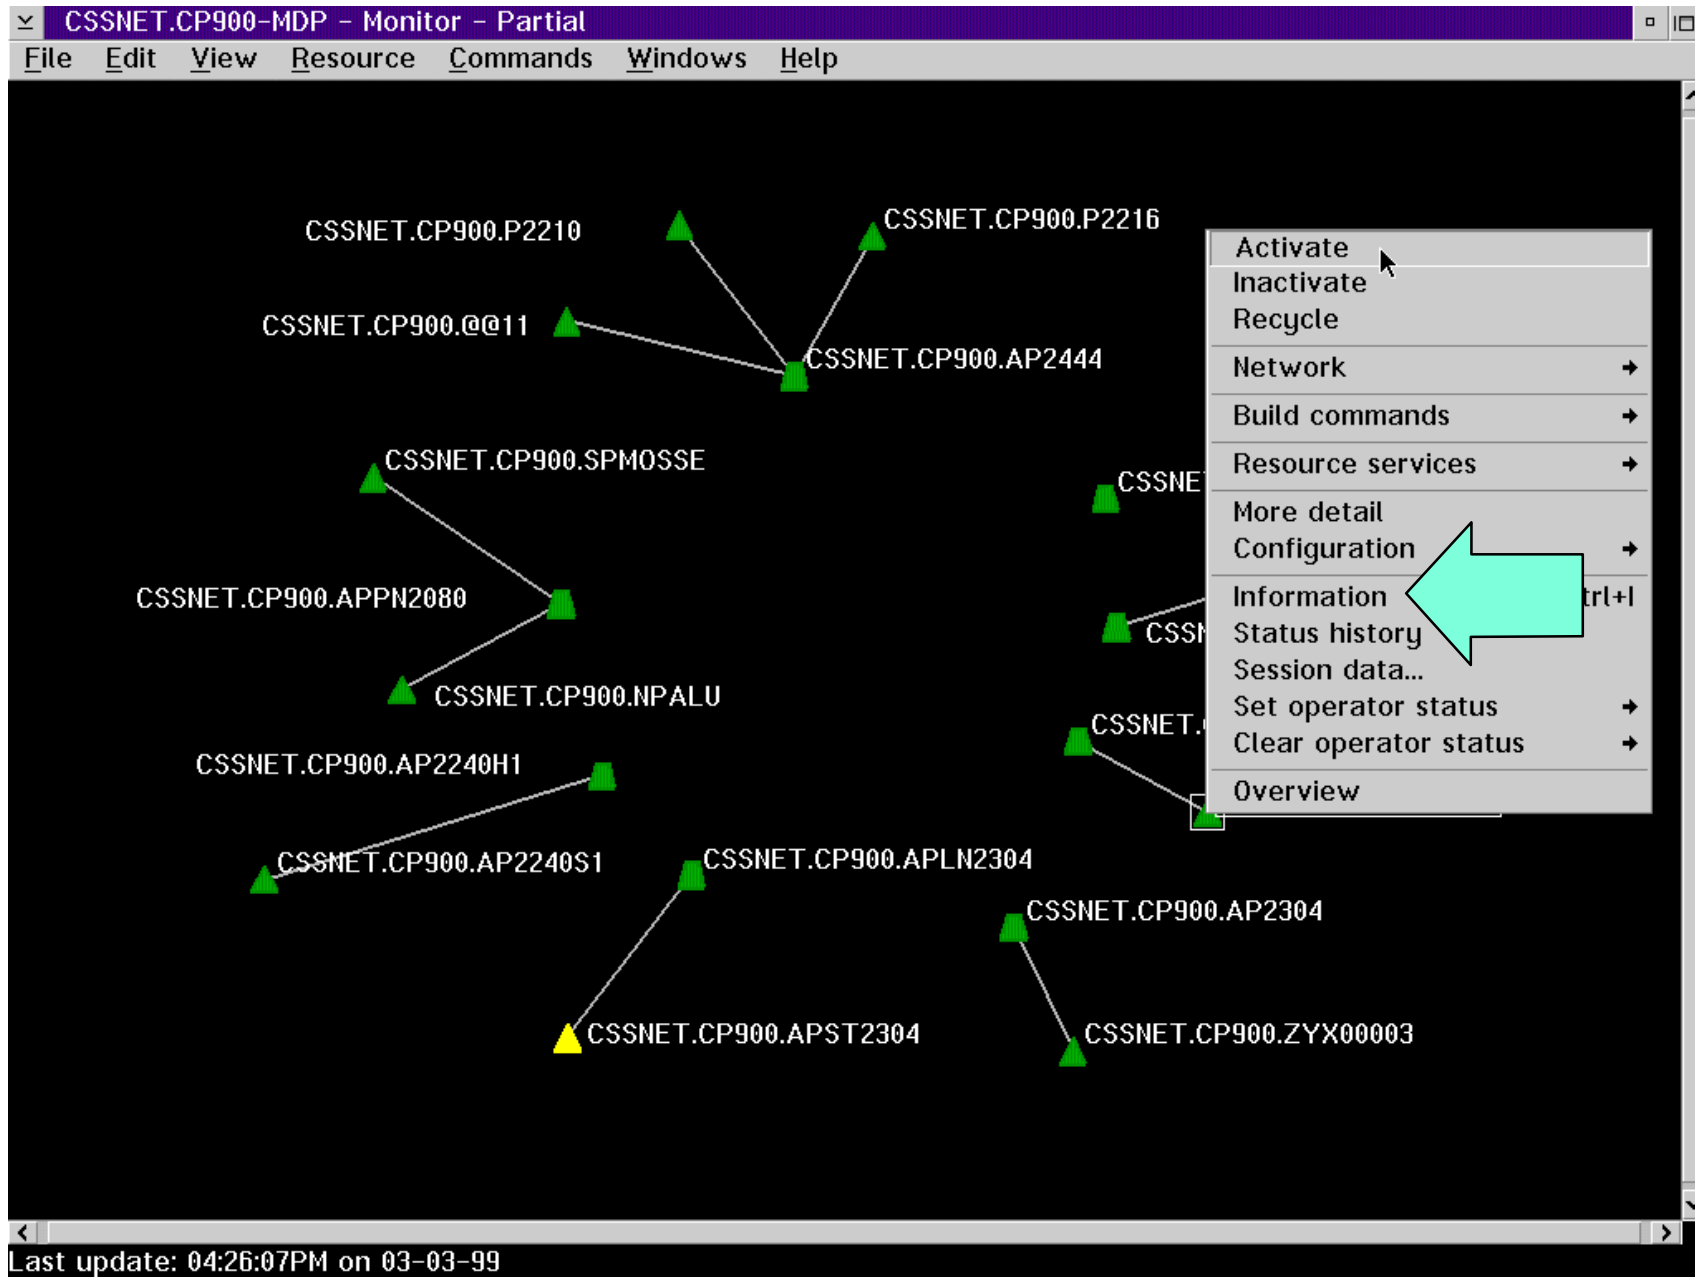

# Information available to the operator about the resource


Select 'Information' from context menu

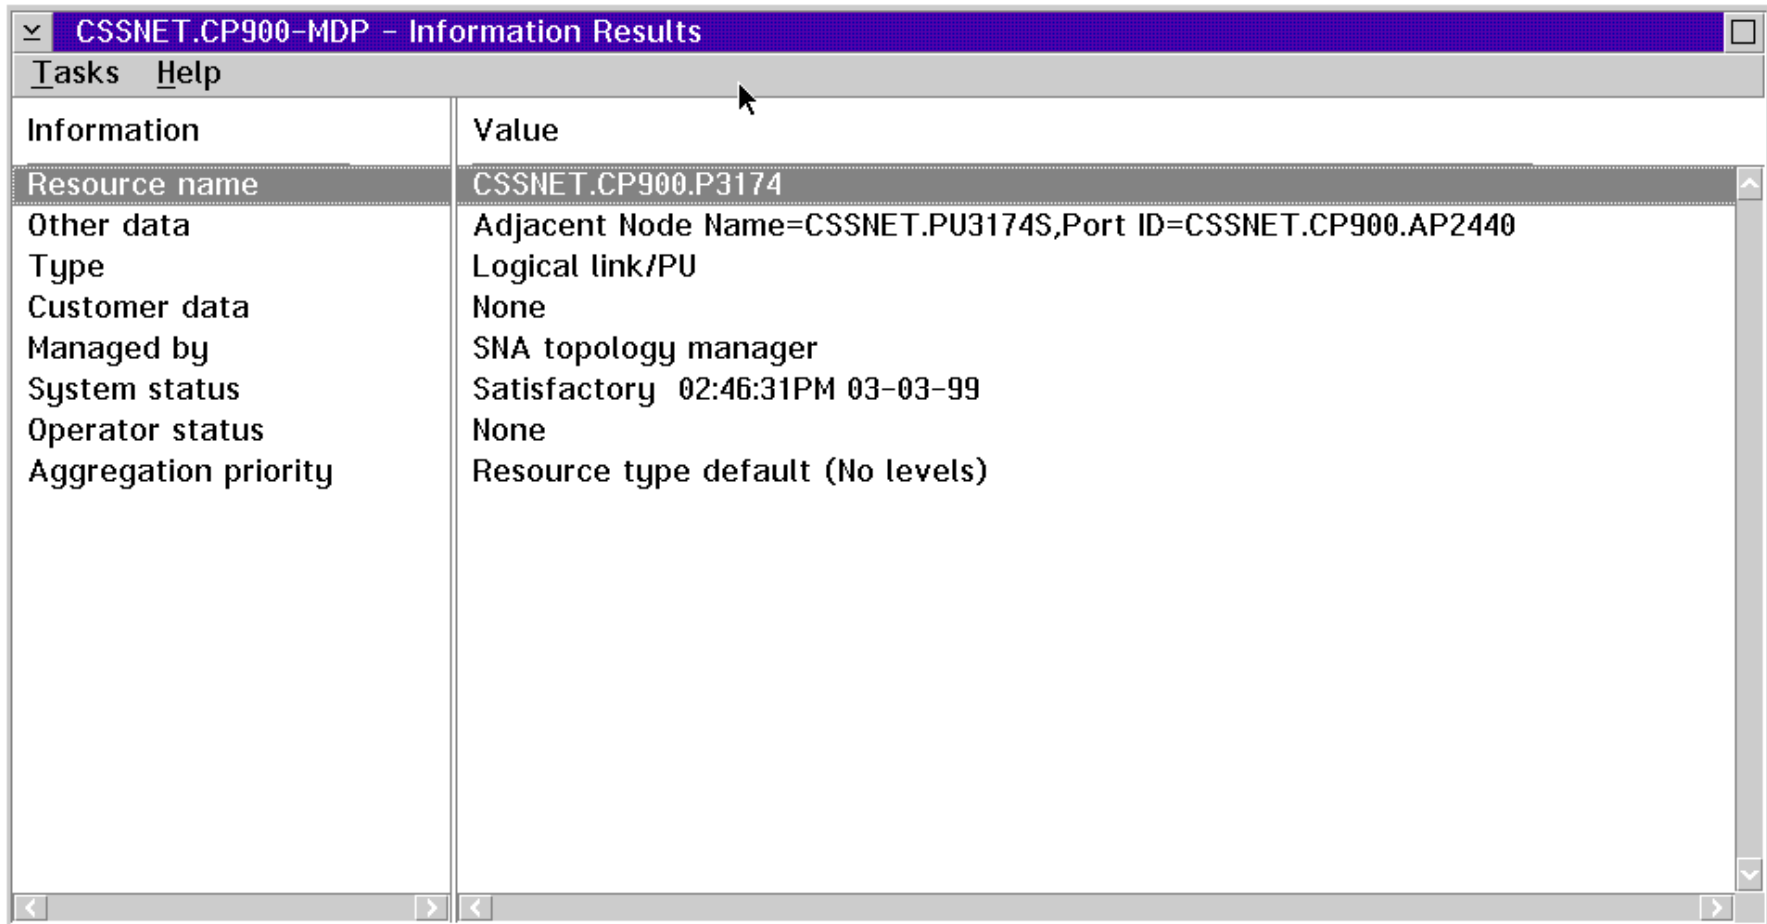

The screenshot shows a window titled "CSSNET.CP900-MDP - Information Results" with a menu bar containing "Tasks" and "Help". The main content is a table with two columns: "Information" and "Value".


Information	Value
Resource name	CSSNET.CP900.P3174
Other data	Adjacent Node Name=CSSNET.PU3174S,Port ID=CSSNET.CP900.AP2440
Type	Logical link/PU
Customer data	None
Managed by	SNA topology manager
System status	Satisfactory 02:46:31PM 03-03-99
Operator status	None
Aggregation priority	Resource type default (No levels)

Suppose we selected 'Inactivate' from the context menu for the 3174 logical link. The following popup appears:

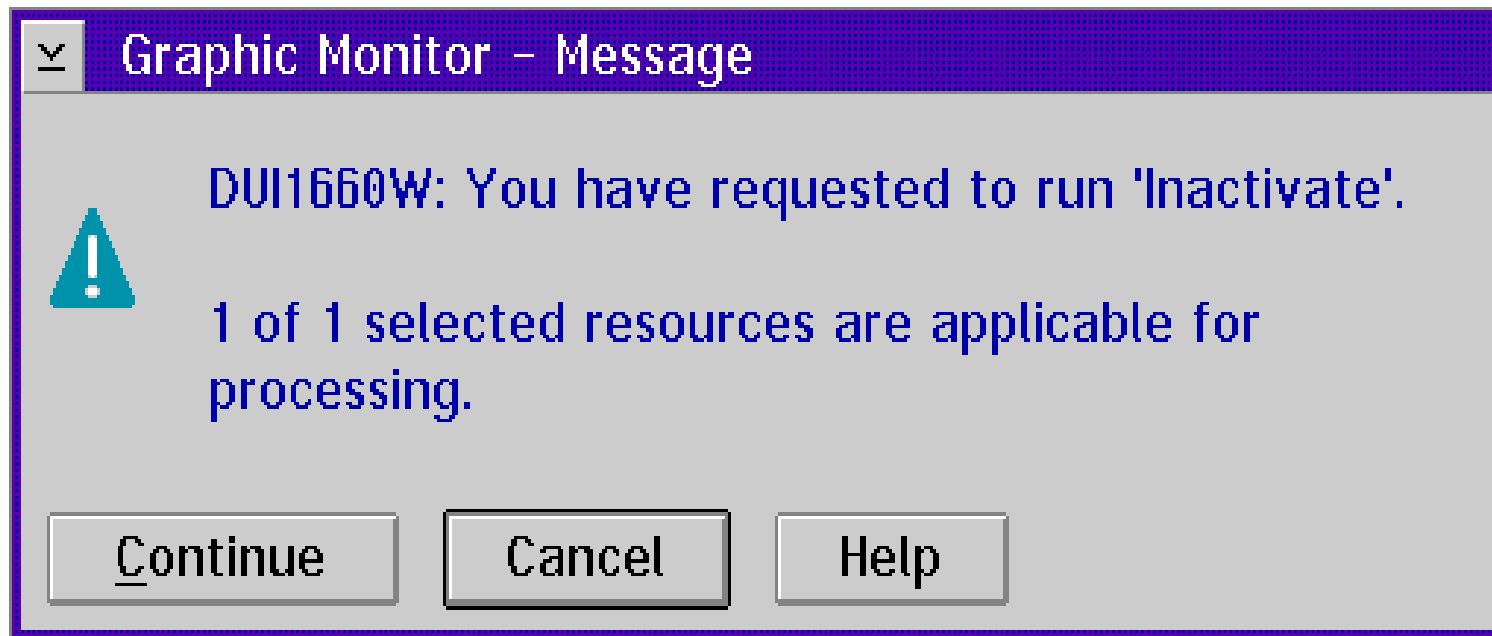



# Command Log window at the GMF / NMC Console after selecting 'Inactivate'

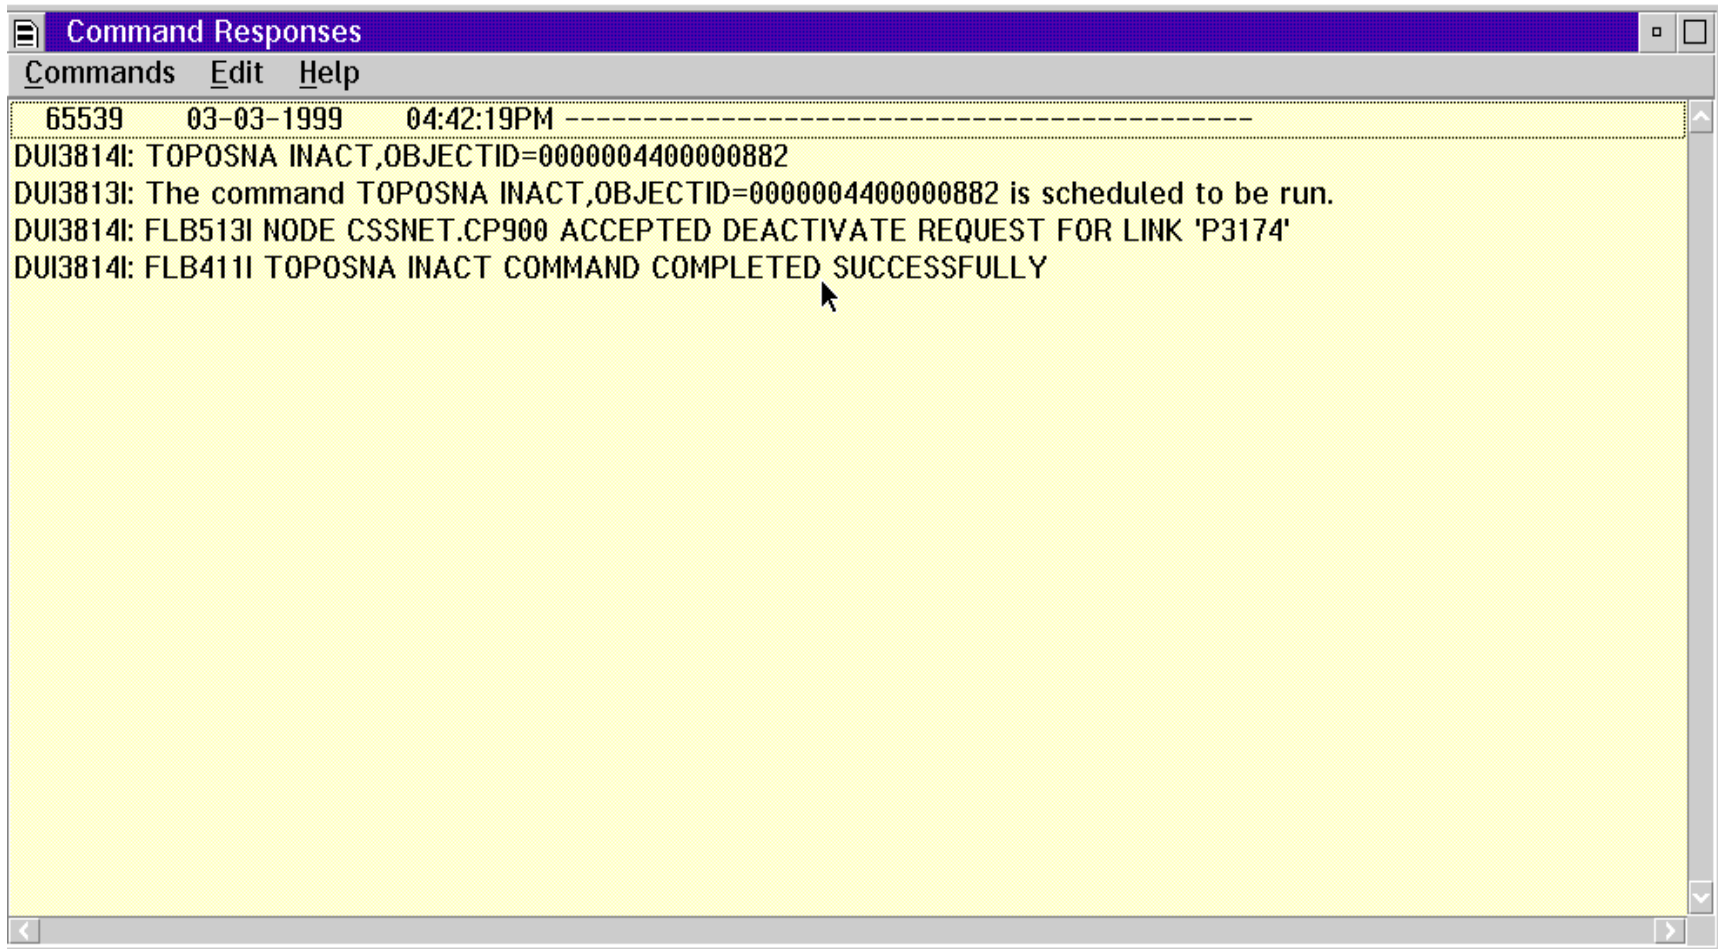

```
65539 03-03-1999 04:42:19PM -----
DUI3814I: TOPOSNA INACT,OBJECTID=0000004400000882
DUI3813I: The command TOPOSNA INACT,OBJECTID=0000004400000882 is scheduled to be run.
DUI3814I: FLB513I NODE CSSNET.CP900 ACCEPTED DEACTIVATE REQUEST FOR LINK 'P3174'
DUI3814I: FLB411I TOPOSNA INACT COMMAND COMPLETED SUCCESSFULLY
```


... while on the NetView network log we see

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
STATMON.BROWSE ACTP NETWORK LOG FOR 03/03/99 (99062) COLS 017 094 16:48 A
HOST: HOST16 *1* *2* *3* *4* SCROLL ==> CSR
---2---+---3---+---4---+---5---+---6---+---7---+---8---+---9---
N1P1 16:47:40 TOPOSNA INACT,OBJECTID=0000004400000882
N1P1 P% 16:47:42 IST619I ID = PU3174S FAILED - RECOVERY IN PROGRESS
N1P1 P% 16:47:43 IST621I RECOVERY SUCCESSFUL FOR NETWORK RESOURCE PU317
N1P1 16:47:44 FLB513I NODE CSSNET.CP900 ACCEPTED DEACTIVATE REQUEST FOR
N1P1 16:47:44 FLB411I TOPOSNA INACT COMMAND COMPLETED SUCCESSFULLY
**** END OF LOG ****

CMD==>
TO SEE YOUR KEY SETTINGS, ENTER 'DISPFK'
2B=C
```


# The current state of the resources from VTAM's perspective ...

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF NETVIEW N1P1 TF 03/03/99 16:48:44
C N1P1 DISPLAY NET, ID=ET3174, SCOPE=ALL
N1P1 IST097I DISPLAY ACCEPTED
N1P1
IST075I NAME = ET3174 , TYPE = SW SNA MAJ NODE
IST486I STATUS= ACTIV , DESIRED STATE= ACTIV
IST084I NETWORK RESOURCES:
IST089I PU3174S TYPE = PU_T2 , CONCT
IST089I DLU74S1 TYPE = LOGICAL UNIT , CONCT
IST314I END
-----
???
```

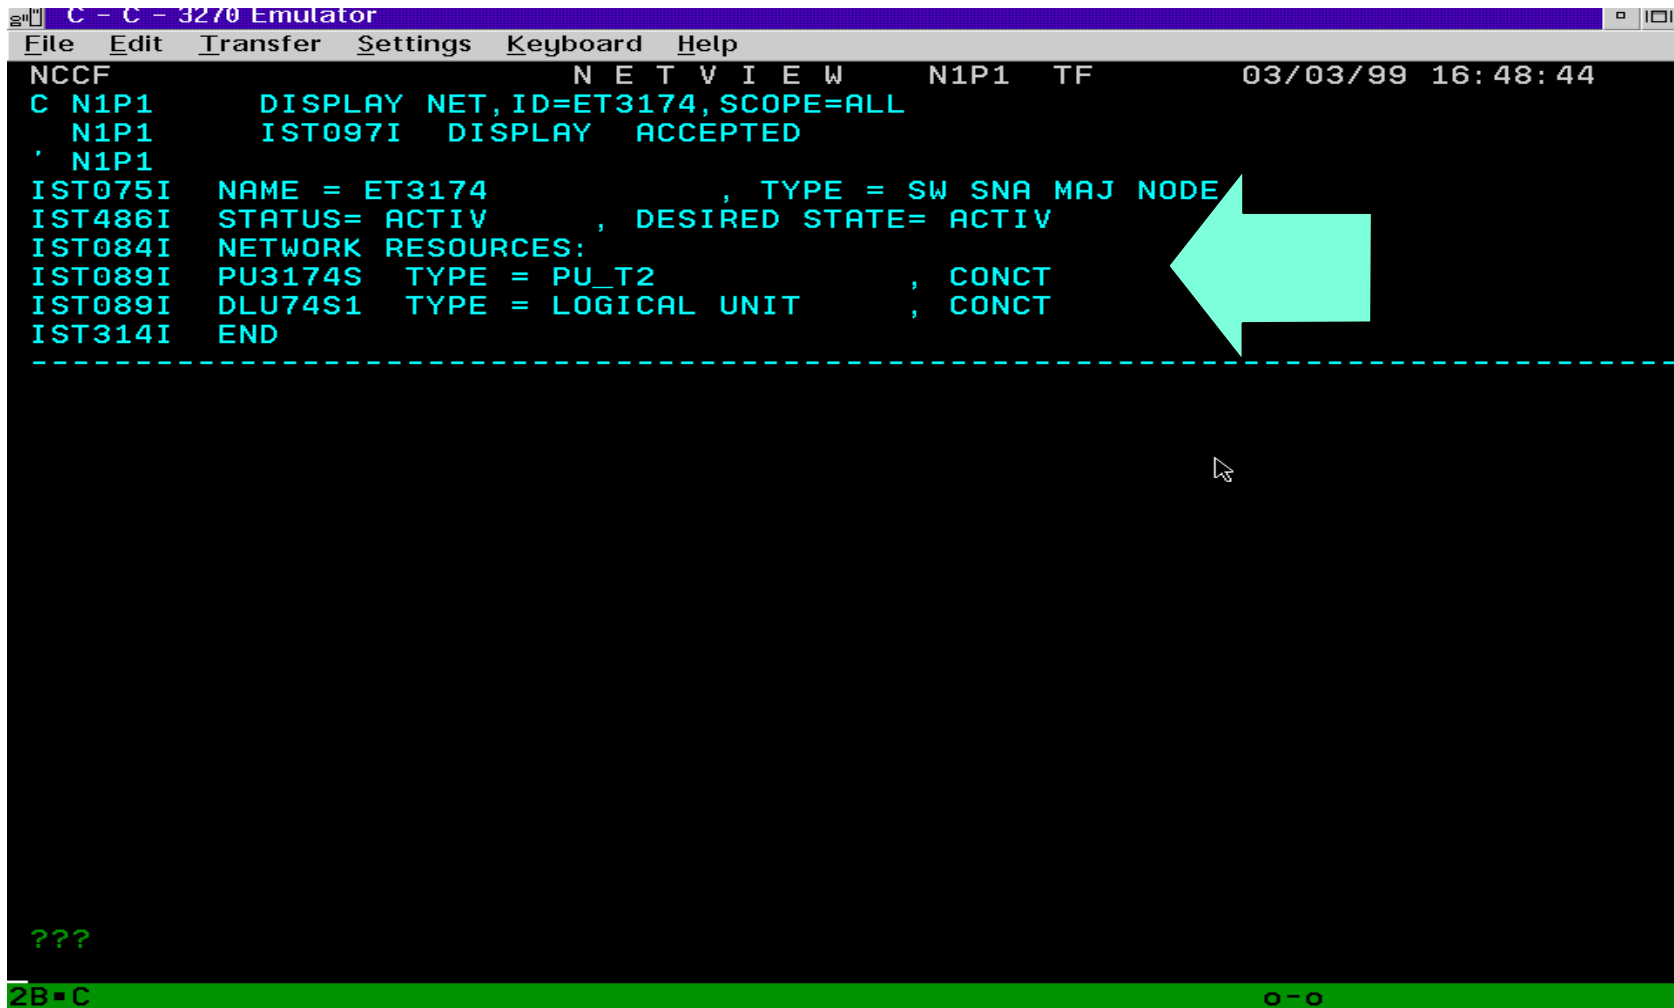


... and from the graphics console perspective:


(color change from green to blue for operator-initiated deactivate)

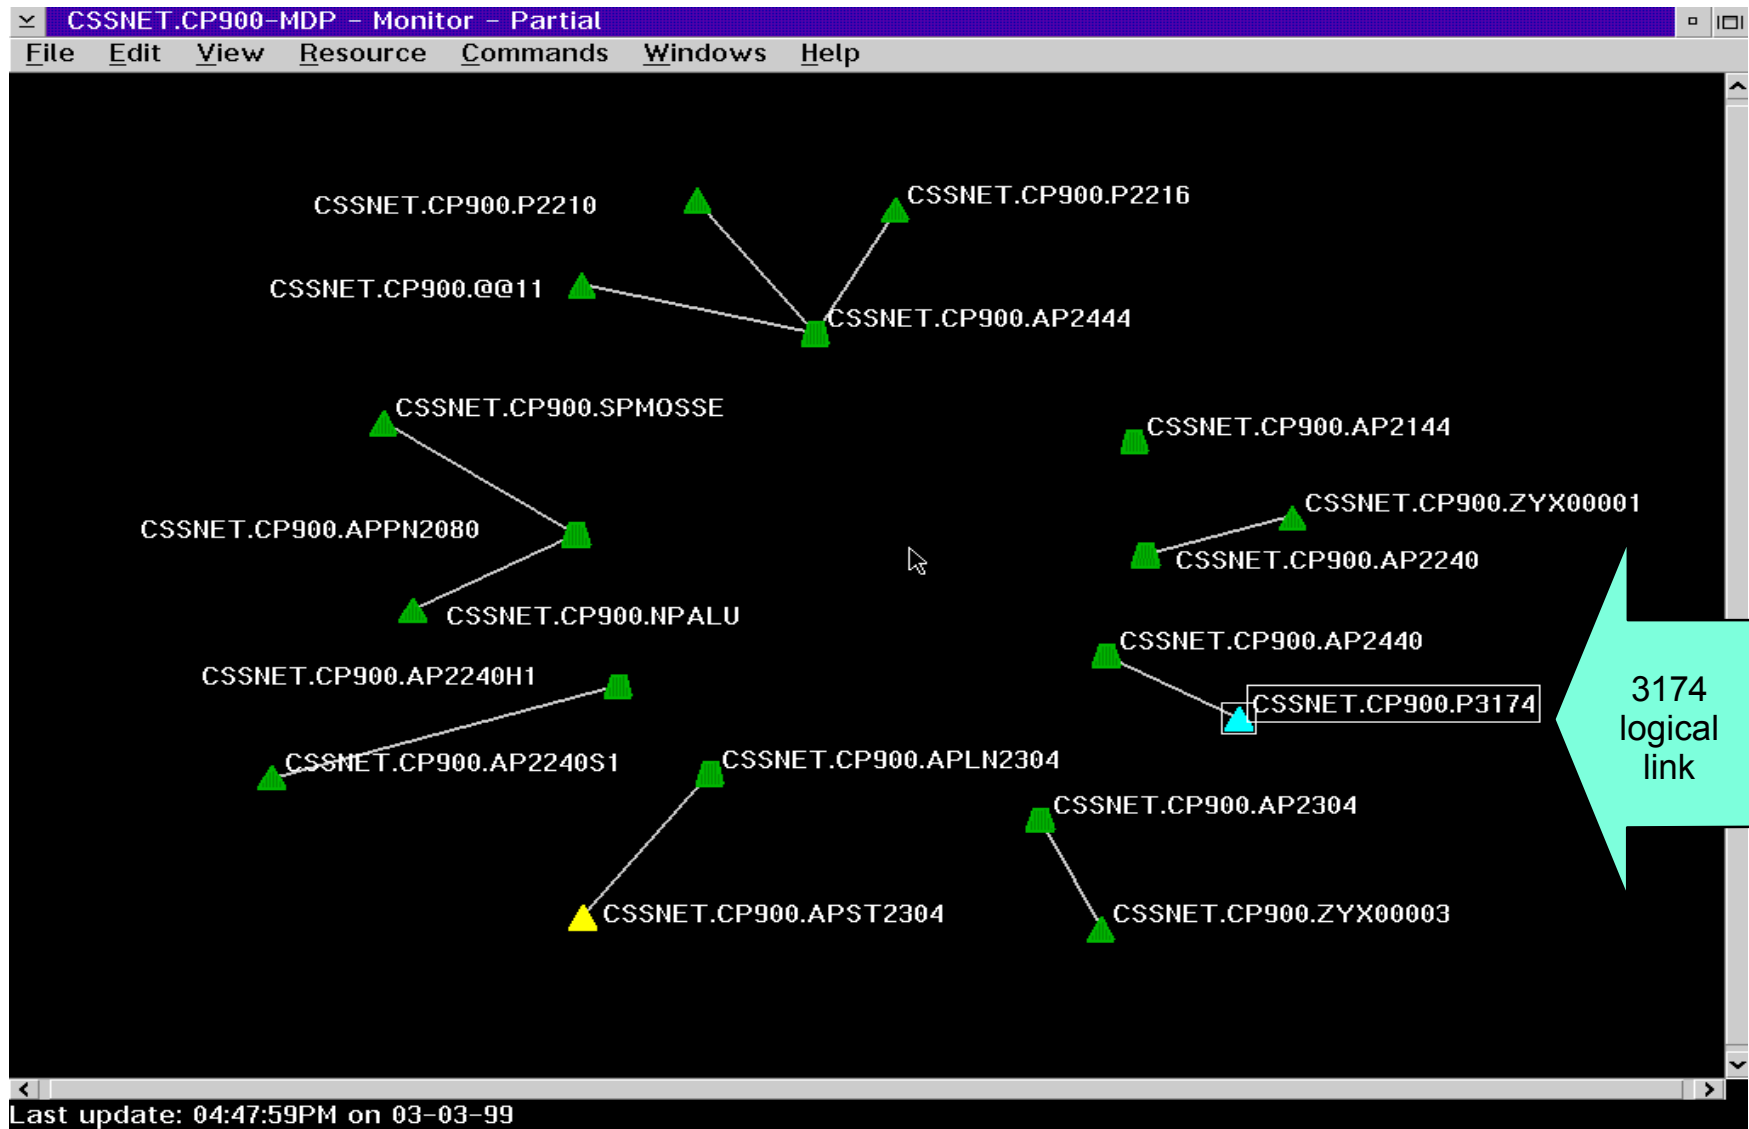

# Now we reactivate the node from GMF

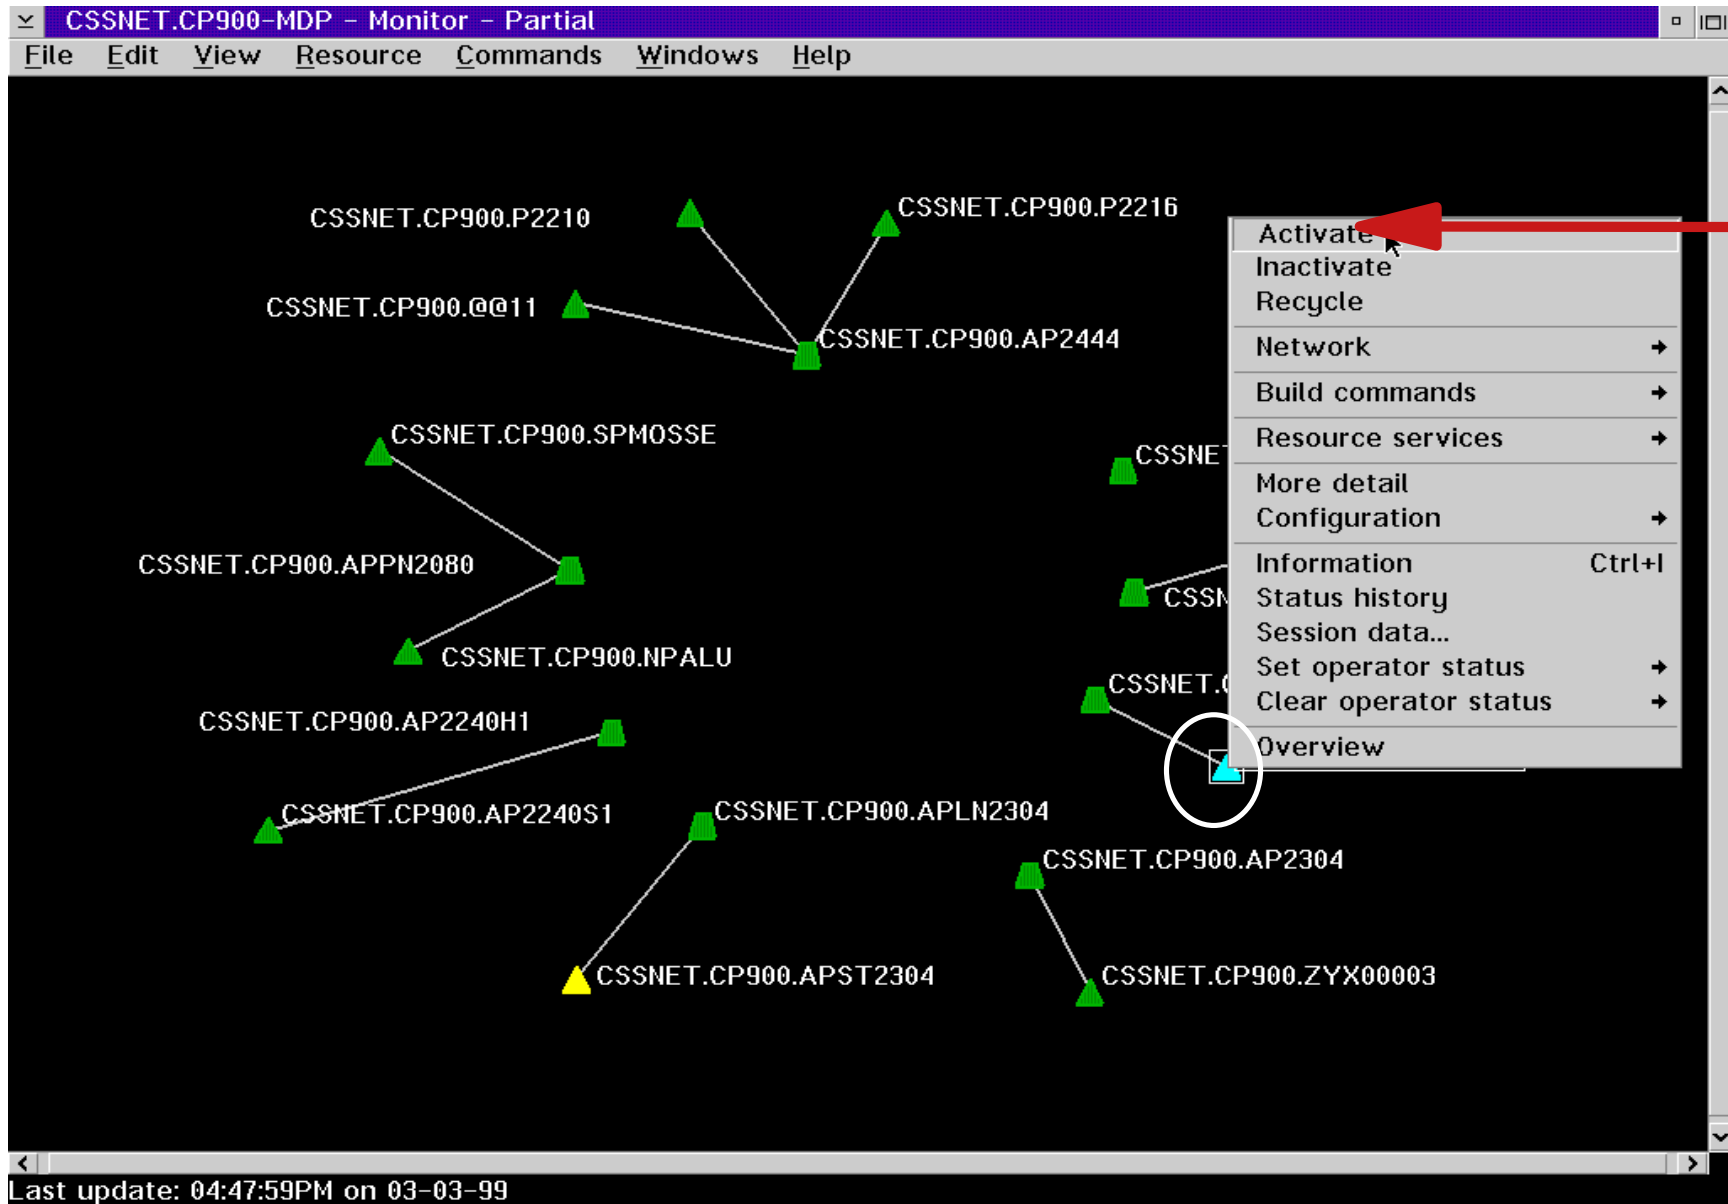


The Command Log window at the GMF console displays the results

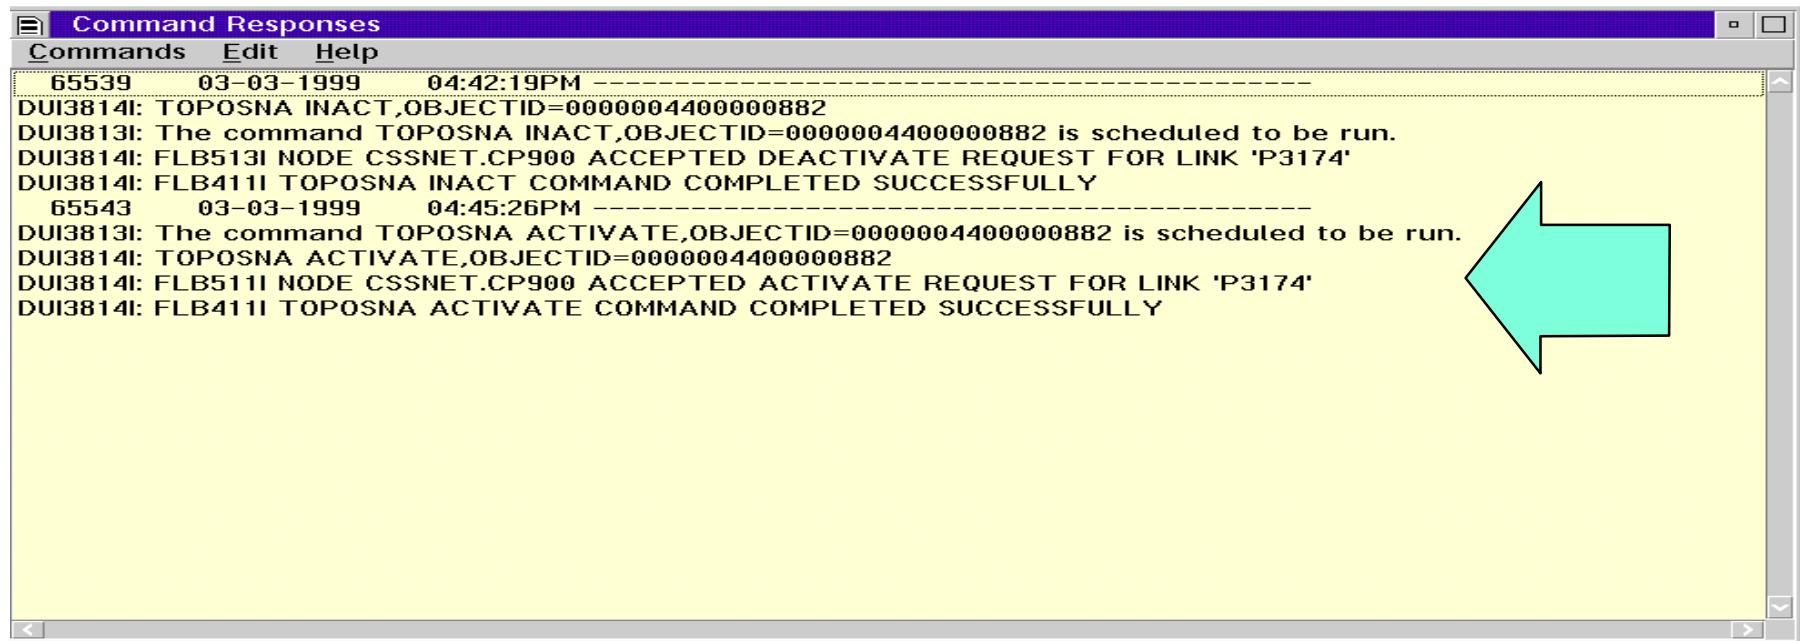

```
Command Responses
Commands Edit Help
-----
65539 03-03-1999 04:42:19PM -----
DUI3814: TOPOSNA INACT,OBJECTID=0000004400000882
DUI3813: The command TOPOSNA INACT,OBJECTID=0000004400000882 is scheduled to be run.
DUI3814: FLB513I NODE CSSNET.CP900 ACCEPTED DEACTIVATE REQUEST FOR LINK 'P3174'
DUI3814: FLB411I TOPOSNA INACT COMMAND COMPLETED SUCCESSFULLY
65543 03-03-1999 04:45:26PM -----
DUI3813: The command TOPOSNA ACTIVATE,OBJECTID=0000004400000882 is scheduled to be run.
DUI3814: TOPOSNA ACTIVATE,OBJECTID=0000004400000882
DUI3814: FLB511I NODE CSSNET.CP900 ACCEPTED ACTIVATE REQUEST FOR LINK 'P3174'
DUI3814: FLB411I TOPOSNA ACTIVATE COMMAND COMPLETED SUCCESSFULLY
```

# VTAM displays the PU as active again

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF          N E T V I E W      N1P1  TF      03/03/99 16:51:37
C N1P1      DISPLAY NET, ID=ET3174, SCOPE=ALL
  N1P1      IST097I  DISPLAY  ACCEPTED
' N1P1
IST075I     NAME = ET3174          , TYPE = SW SNA MAJ NODE
IST486I     STATUS= ACTIV          , DESIRED STATE= ACTIV
IST084I     NETWORK RESOURCES:
IST089I     PU3174S  TYPE = PU_T2          , CONCT
IST089I     DLU74S1  TYPE = LOGICAL UNIT   , CONCT
IST314I     END
C N1P1      DISPLAY NET, ID=ET3174, SCOPE=ALL
  N1P1      IST097I  DISPLAY  ACCEPTED
' N1P1
IST075I     NAME = ET3174          , TYPE = SW SNA MAJ NODE
IST486I     STATUS= ACTIV          , DESIRED STATE= ACTIV
IST084I     NETWORK RESOURCES:
IST089I     PU3174S  TYPE = PU_T2          , ACTIV
IST089I     DLU74S1  TYPE = LOGICAL UNIT   , ACTIV
IST314I     END
-----
???
```

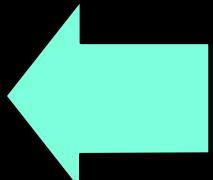


2B=C

o-o

# The resource changes back to Satisfactory status on GMF


(color change from blue back to green)

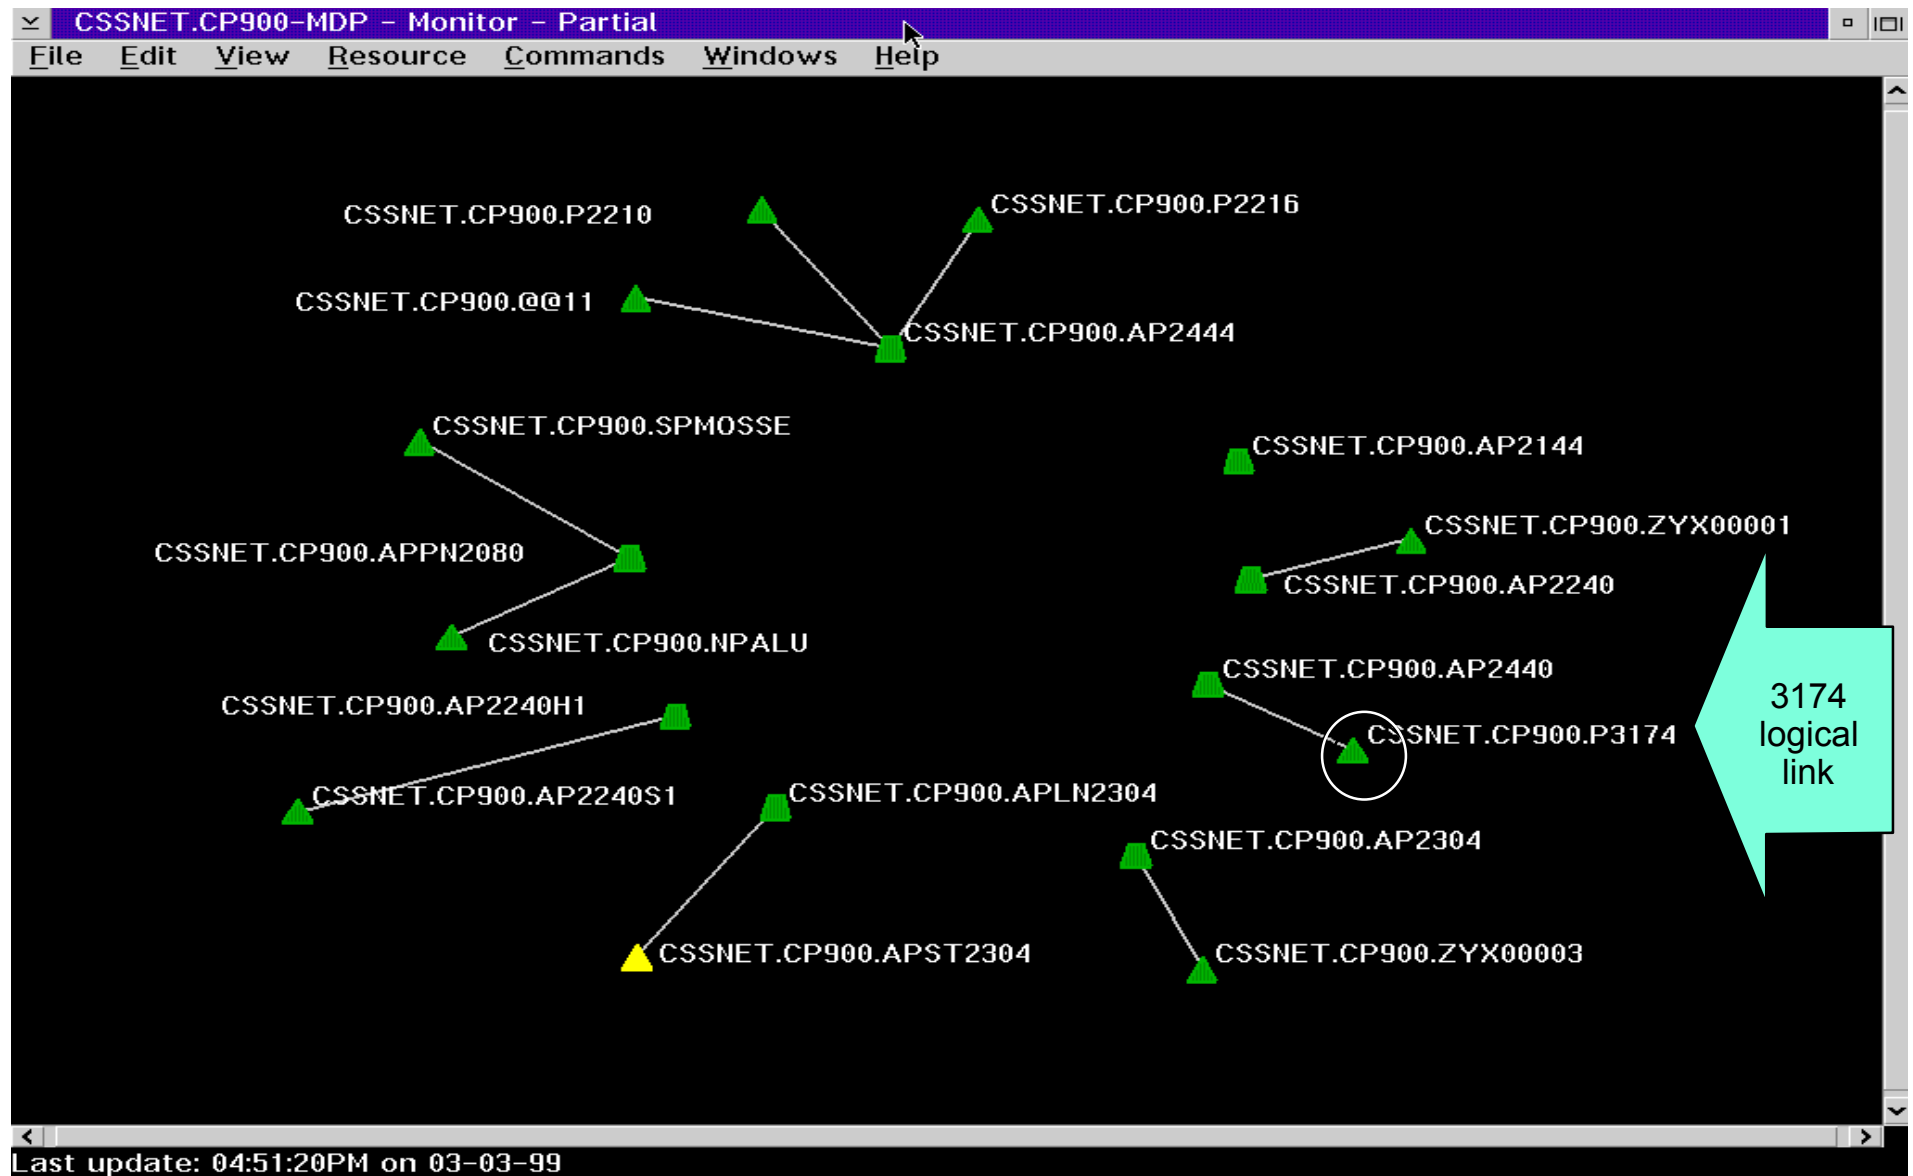



# GMF 'Exception View' Example


displays only resources in user-defined abnormal statuses  
(also available for 3746 ports / links and other resources)

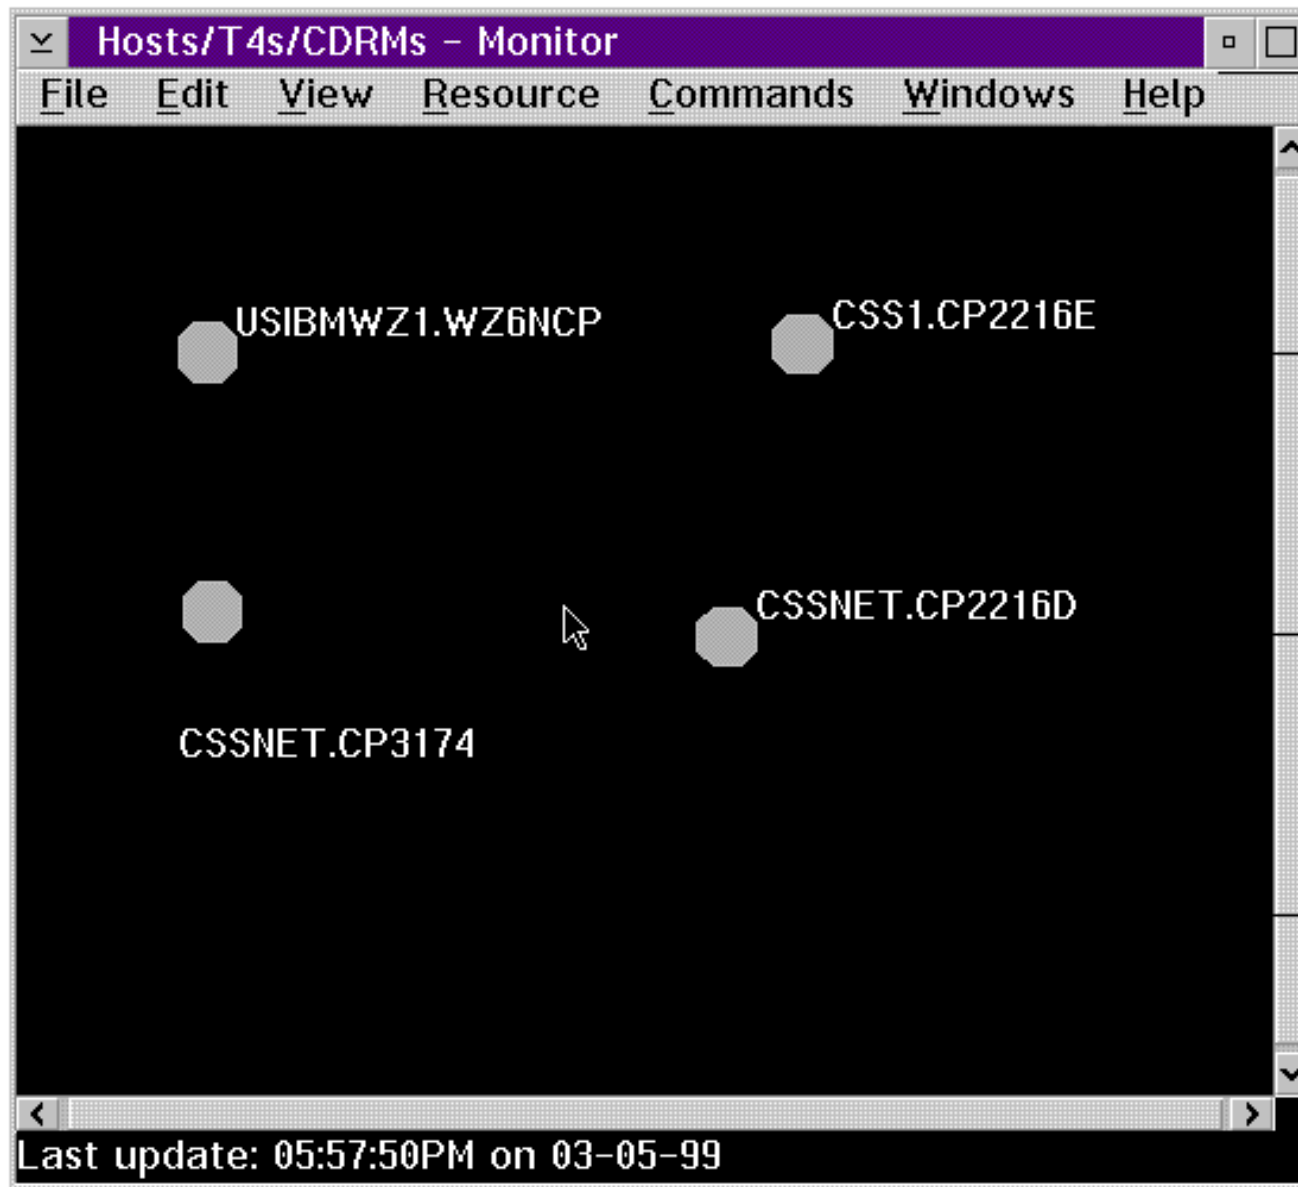

# Modifying 3746 port and link status from NetView (3270 non-graphics) command line

- Graphics (GMF / NMC workstation) not required
- GMFHS address space not required
- Two methods available:
  - ▶ 'Old' way: NetView 'TOPOSNA' command
    - Shown on next two charts
  - ▶ 'New' way: NetView 'RUNCMD' command
    - Part of new function described in next section

# Varying the logical link/PU from the NetView command line using TOPOSNA command (1)

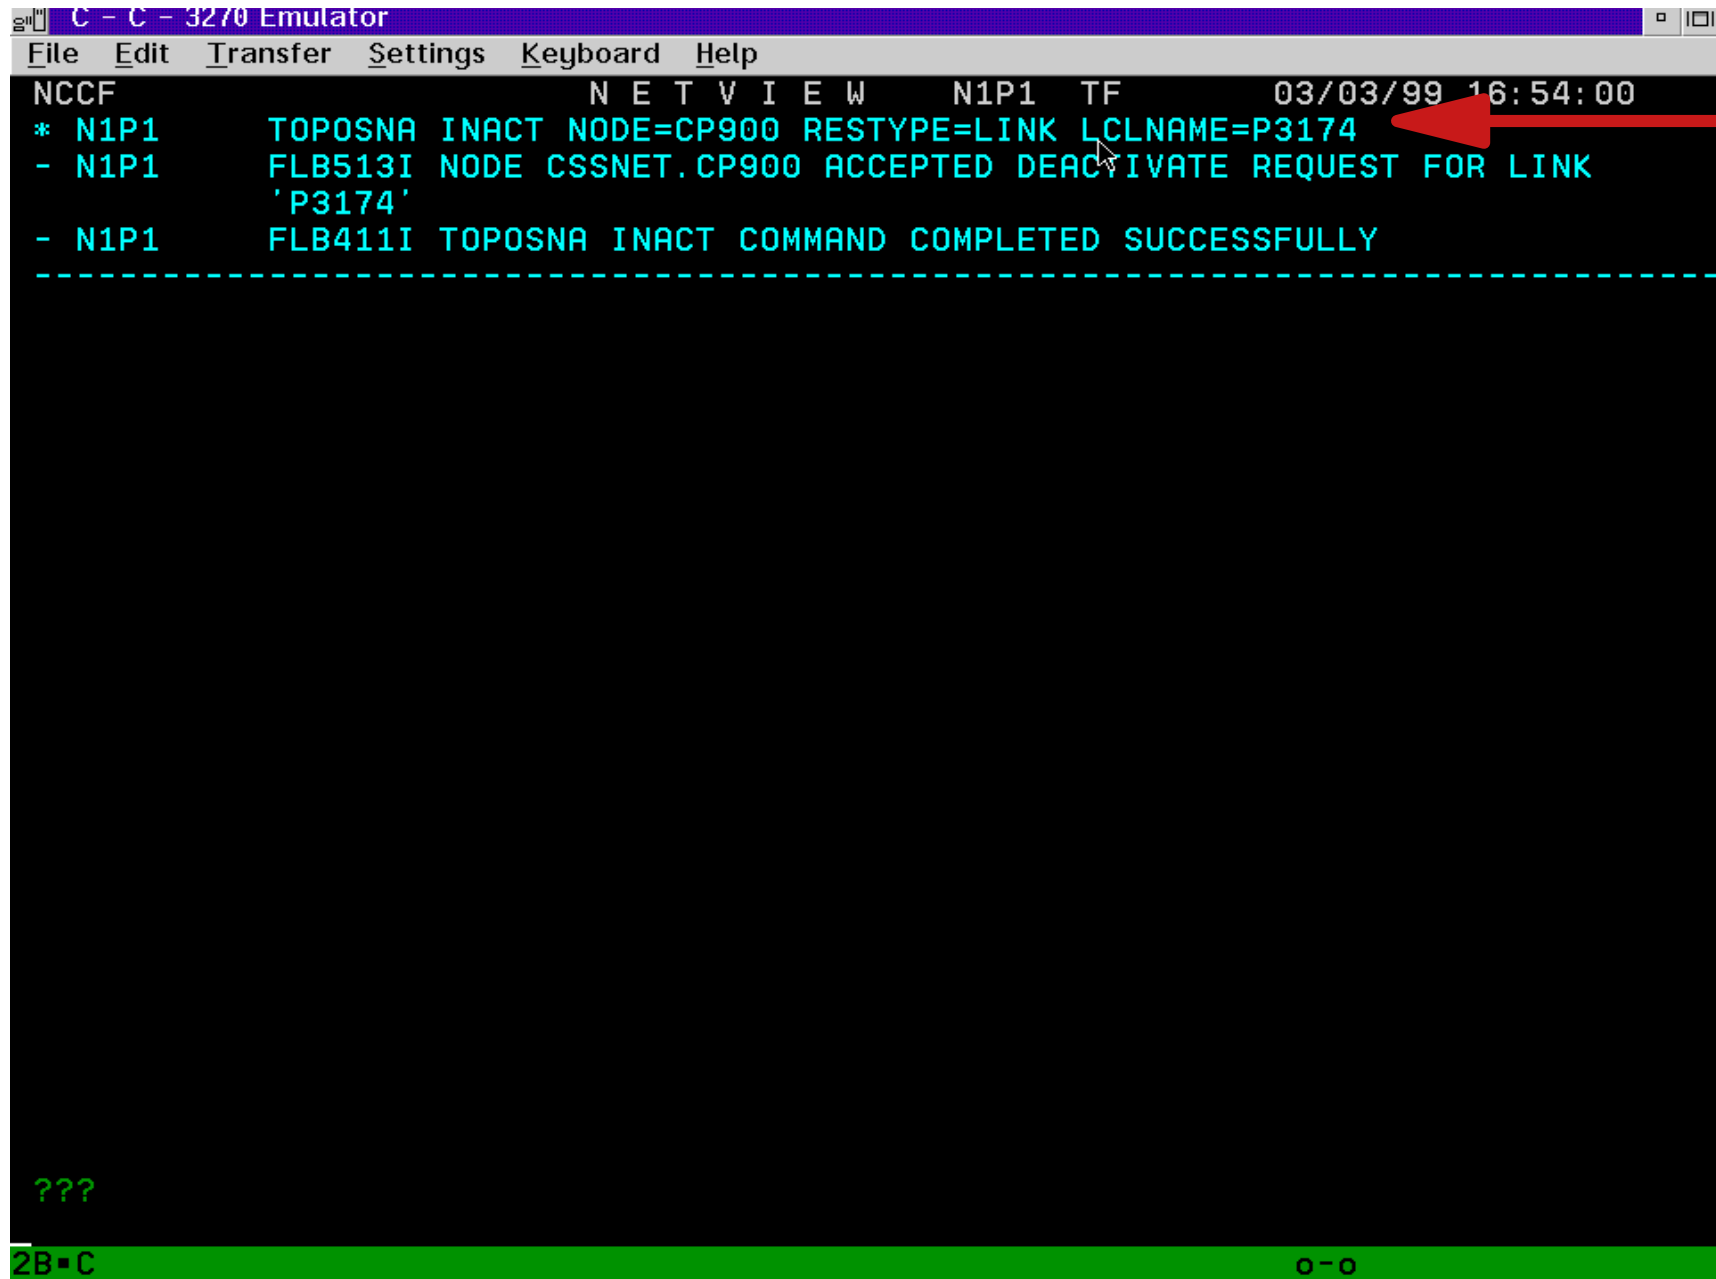


```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF          N E T V I E W   N1P1 TF      03/03/99 16:54:00
* N1P1      TOPOSNA INACT  NODE=CP900 RESTYPE=LINK LCLNAME=P3174
- N1P1      FLB513I  NODE CSSNET.CP900 ACCEPTED DEACTIVATE REQUEST FOR LINK
            'P3174'
- N1P1      FLB411I  TOPOSNA INACT  COMMAND COMPLETED SUCCESSFULLY
-----
???
```

2B=C

# Varying the logical link/PU from the NetView command line using TOPOSNA command (2)

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF                N E T V I E W      N1P1 TF      03/03/99 16:55:18
* N1P1      TOPOSNA INACT NODE=CP900 RESTYPE=LINK LCLNAME=P3174
- N1P1      FLB513I NODE CSSNET.CP900 ACCEPTED DEACTIVATE REQUEST FOR LINK
            'P3174'
- N1P1      FLB411I TOPOSNA INACT COMMAND COMPLETED SUCCESSFULLY
* N1P1      TOPOSNA ACTIVATE NODE=CP900 RESTYPE=LINK LCLNAME=P3174
- N1P1      FLB511I NODE CSSNET.CP900 ACCEPTED ACTIVATE REQUEST FOR LINK 'P3174'
- N1P1      FLB411I TOPOSNA ACTIVATE COMMAND COMPLETED SUCCESSFULLY
-----
???
```




## 3746 Support for APPN Management via NetView RUNCMD

- Available with 3746 Extended Functions 4
  - ▶ See announcement 199-119 dated 5/11/1999
  - ▶ Enhanced in 3746 Extended Functions 5
    - See announcement 100-180 dated 6/13/2000
    - Planned availability 9/2000
- Over 50 NetView RUNCMD command variations to manage 3746 APPN resources:
  - ▶ Activate / deactivate ports and links
    - Available previously using NetView TOPOSNA command
  - ▶ Display details of ports and links
  - ▶ List / display details of all sessions
  - ▶ Display APPN topology and directory information
- An alternative to using CCM for these functions
- REXX procedures available to simplify command entry
- For more information:
  - ▶ GA33-0479 '374x ... NetView Console APPN Command Reference Guide'


# VTAM Switched Major Node definition for our 3746-900 Service Processor

(The RUNCMDs will be addressed to the Service Processor PUname)

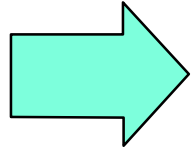

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NETVIEW.BRWS ----- BROWSE ETSP900 (DSIVTAM ) --- LINE 00000 TO 00014 OF 00014
                                           SCROLL ==> CSR
-----+-----1-----+-----2-----+-----3-----+-----4-----+-----5-----+-----6-----+-----7-----+-----
***** TOP OF DATA ***** DATASET:  2
ETSP900  VBUILD TYPE=SWNET                                         00010015
* -----* 00020015
*      SWNET MACRO FOR 3746-900 DLUR SUPPORTED SERVICE PROCESSOR * 00030015
* -----* 00040015
*                                         00050015
PUSP1    PU ADDR=01, CPNAME=MOSSNMVT, NETID=SYSTST, DWACT=YES,    C00060017
          DISCNT=NO, ANS=CONTINUE                                00070015
          PATH DLURNAME=CP900,                                   C00071017
          DLCADDR= (1, C, TR) ,                                  C00072017
          DLCADDR= (2, I, APPN2080) ,                            C00073017
          DLCADDR= (3, D, 4) ,                                   C00074017
          DLCADDR= (4, X, 400237453746)                          00075017
DLUSP1   LU  LOCADDR=03, USSTAB=USS3270A,                         C00080015
          MODETAB=AMODETAB, DLOGMOD=M2SDLCQ                       00090015
***** BOTTOM OF DATA *****
CMD==>
TO SEE YOUR KEY SETTINGS, ENTER 'DISPFK'
2B=C
```

# Varying the 3174 logical link/PU from the NetView command line using the new RUNCMD interface

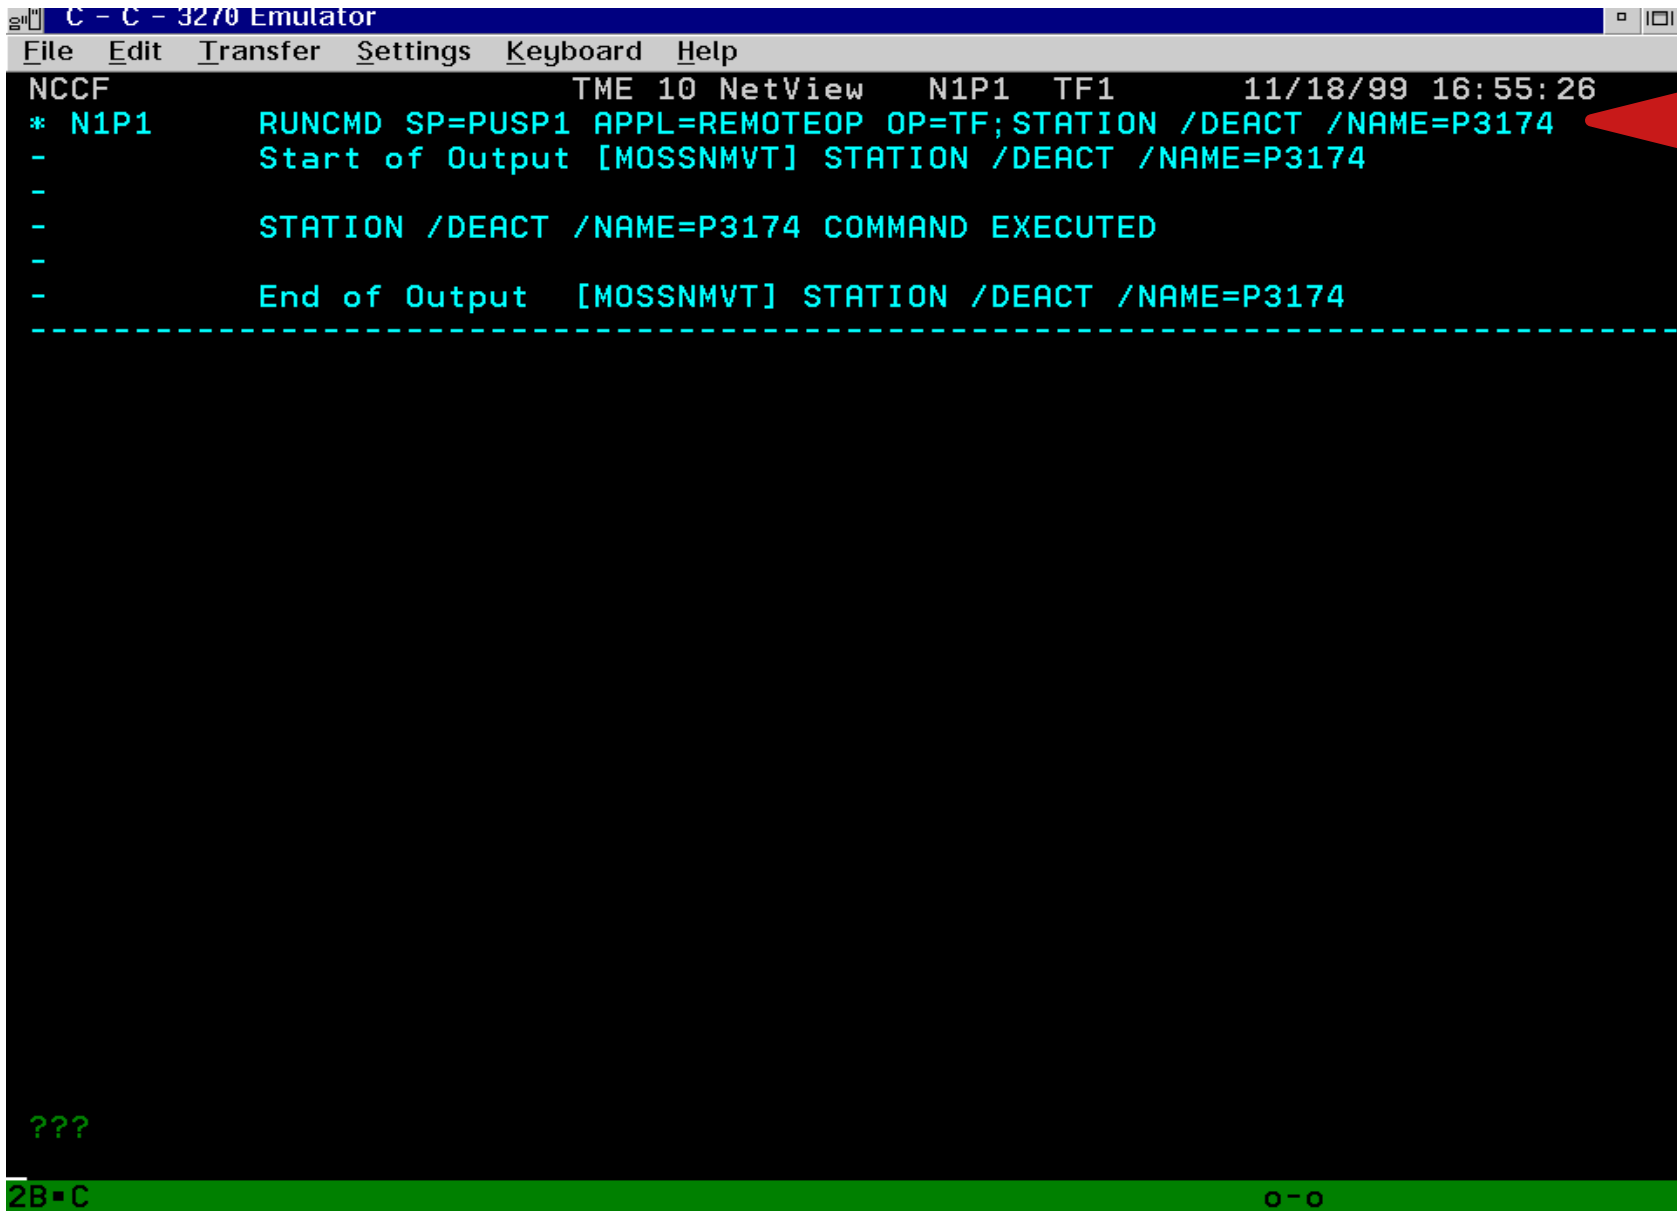

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF TME 10 NetView N1P1 TF1 11/18/99 16:55:26
* N1P1 RUNCMD SP=PUSP1 APPL=REMOTEOP OP=TF;STATION /DEACT /NAME=P3174
- Start of Output [MOSSNMVT] STATION /DEACT /NAME=P3174
-
- STATION /DEACT /NAME=P3174 COMMAND EXECUTED
-
- End of Output [MOSSNMVT] STATION /DEACT /NAME=P3174
-----
???
```

# NetView RUNCMD support: Display 3746 Station (i.e. logical link) List

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF TME 10 NetView N1P1 TF1 11/18/99 18:26:40
* N1P1 RUNCMD SP=PUSP1 APPL=REMOTEOP OP=TF;STATION /LIST
- Start of Output [MOSSNMVT] STATION /LIST
-
- LINK NAME #SE TG PARTNER NAME TYPE STATE ADDRESS
- ZYX00001 0 0 NET CONTACTED 01000807080701
- ZYX00003 0 0 NET CONTACTED 01000807080701
- ZYX00000 0 0 NET CONTACTED 01000807080701
- ZYX00002 0 0 NET CONTACTED 01000807080701
- IP2240S1 0 0 END CONTACTED 00010807080700
- DL802144 0 0 NET CONTACTED 01500000010006
- DL832144 0 0 NET CONTACTED 01530000010006
- P2210 0 0 NET CONALS_PND 00500000010464
- P2216 0 21 CSSNET.CP2216C NET CONTACTED 00530000010432
- IPST2304 0 0 END XID_PND 00020807080700
- FRDLCI20 0 0 NET CONTACTED 4114000001564f
- FHDLCI21 0 0 NET CONTACTED 4115000001564f
- DLCI20 0 0 NET CONTACTED 4214000001564f
- DLCI21 0 0 NET CONTACTED 4215000001564f
- @@0 0 0 NET CONTACTED 01320100010200
- @@1 0 0 NET CONTACTED 01330100010200
- @@2 0 21 CSSNET.CP2216B NET CONTACTED 00320100010420
- AP2240S1 6 21 CSSNET.CSS1 NET CONTACTED 000a0807080700
- NPALU 17 21 SYSTSTAP.TESTNODP END CONTACTED 0020353f823f04
- SPMOSSE 4 21 SYSTST.MOSSNMVT END CONTACTED 40023745374604
- APST2304 2 21 CSSNET.CSS2 NET CONTACTED 000c0807080700
- P3174 0 0 LRN NOT_ACTIVE c100
-
- End of Output [MOSSNMVT] STATION /LIST
-----
???
```






# NetView RUNCMD support: Display 3746 Port List

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF TME 10 NetView N1P1 TF1 11/18/99 18:27:23
* N1P1 RUNCMD SP=PUSP1 APPL=REMOTEOP OP=TF;PORT /LIST
- Start of Output [MOSSNMVT] PORT /LIST
-
- PORT /LIST COMMAND EXECUTED
- Port Name Port# LS# Status DLC Name Type
- AP2144 2144 0 ACTIVATED IBMTRNET SAF
- AP2240 2240 1 ACTIVATED ESCON SAF
- AP2240H1 2240 1 ACTIVATED ESCON SAF
- AP2304 2304 1 ACTIVATED ESCON SAF
- AP2440 2440 1 ACTIVATED SDLC LEASED
- AP2444 2444 3 ACTIVATED FR SAF
- APLN2304 2304 1 ACTIVATED ESCON SAF
- APPN2080 2080 2 ACTIVATED IBMTRNET SAF
- FRFH2464 2464 2 ACTIVATED FR SAF
- FRFH2624 2624 1 ACTIVATED FR SAF
- FRFH2656 2656 1 ACTIVATED FR SAF
- IP2080 2080 0 ACTIVATED TR_IP SAF
- IP2144 2144 0 ACTIVATED TR_IP SAF
- IP2240 2240 1 ACTIVATED ESCON_IP SAF
- IP2240H1 2240 1 ACTIVATED ESCON_IP SAF
- IP2304 2304 1 ACTIVATED ESCON_IP SAF
- IP2400 2400 0 ACTIVATED PPP LEASED
- IP2444 2444 4 ACTIVATED FR_IP SAF
- IP2496 2496 0 ACTIVATED TR_IP SAF
- IPLN2304 2304 1 ACTIVATED ESCON_IP SAF
- TOMAE 2560 0 ACTIVATED IBMTRNET SAF
-
- End of Output [MOSSNMVT] PORT /LIST
-
- ???
2B=C
```



# NetView RUNCMD support: Display 3746 HPR information

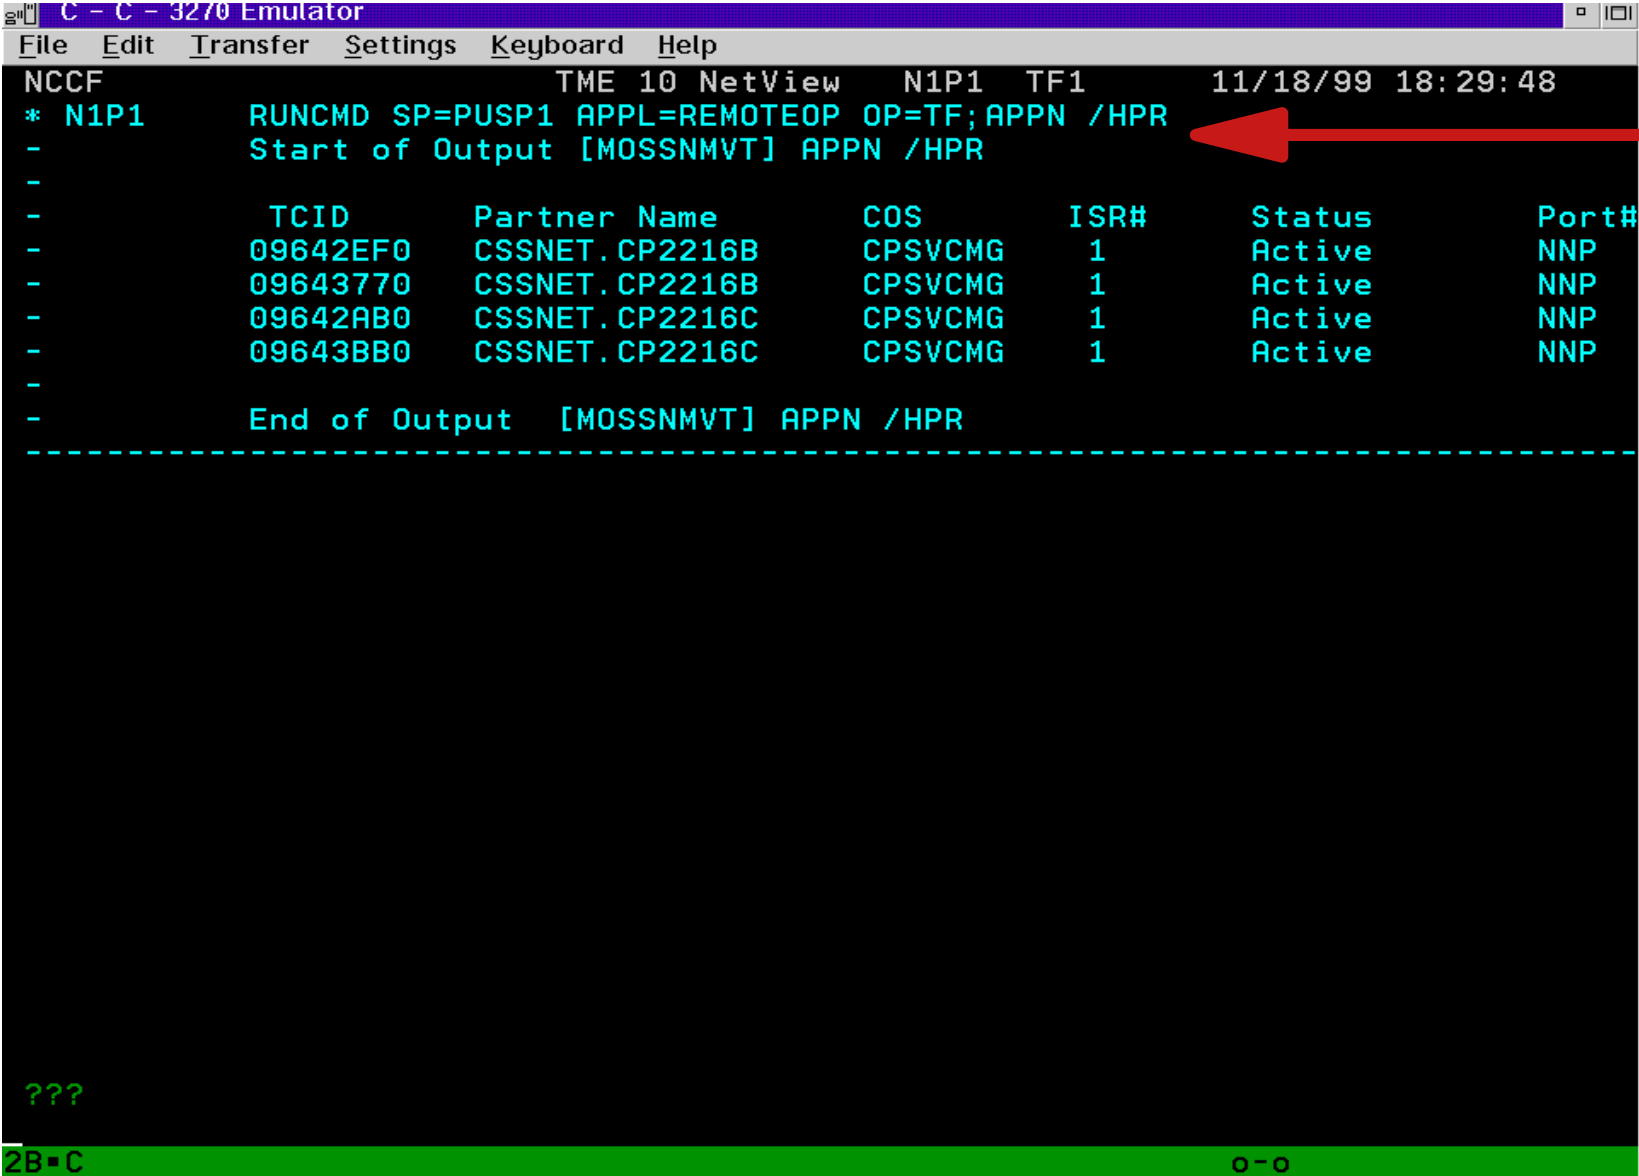


```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF TME 10 NetView N1P1 TF1 11/18/99 18:29:48
* N1P1 RUNCMD SP=PUSP1 APPL=REMOTEOP OP=TF;APPN /HPR
- Start of Output [MOSSNMVT] APPN /HPR
-
- TCID Partner Name COS ISR# Status Port#
- 09642EF0 CSSNET.CP2216B CPSVCMG 1 Active NNP
- 09643770 CSSNET.CP2216B CPSVCMG 1 Active NNP
- 09642AB0 CSSNET.CP2216C CPSVCMG 1 Active NNP
- 09643BB0 CSSNET.CP2216C CPSVCMG 1 Active NNP
-
- End of Output [MOSSNMVT] APPN /HPR
-----
???
```

2B=C

# NetView RUNCMD support: Display 3746 Sessions

Note: This is how it looks on the NetView operator terminal:  
the long output lines wrap the 80 byte screen.  
See next chart for an easier to read display.

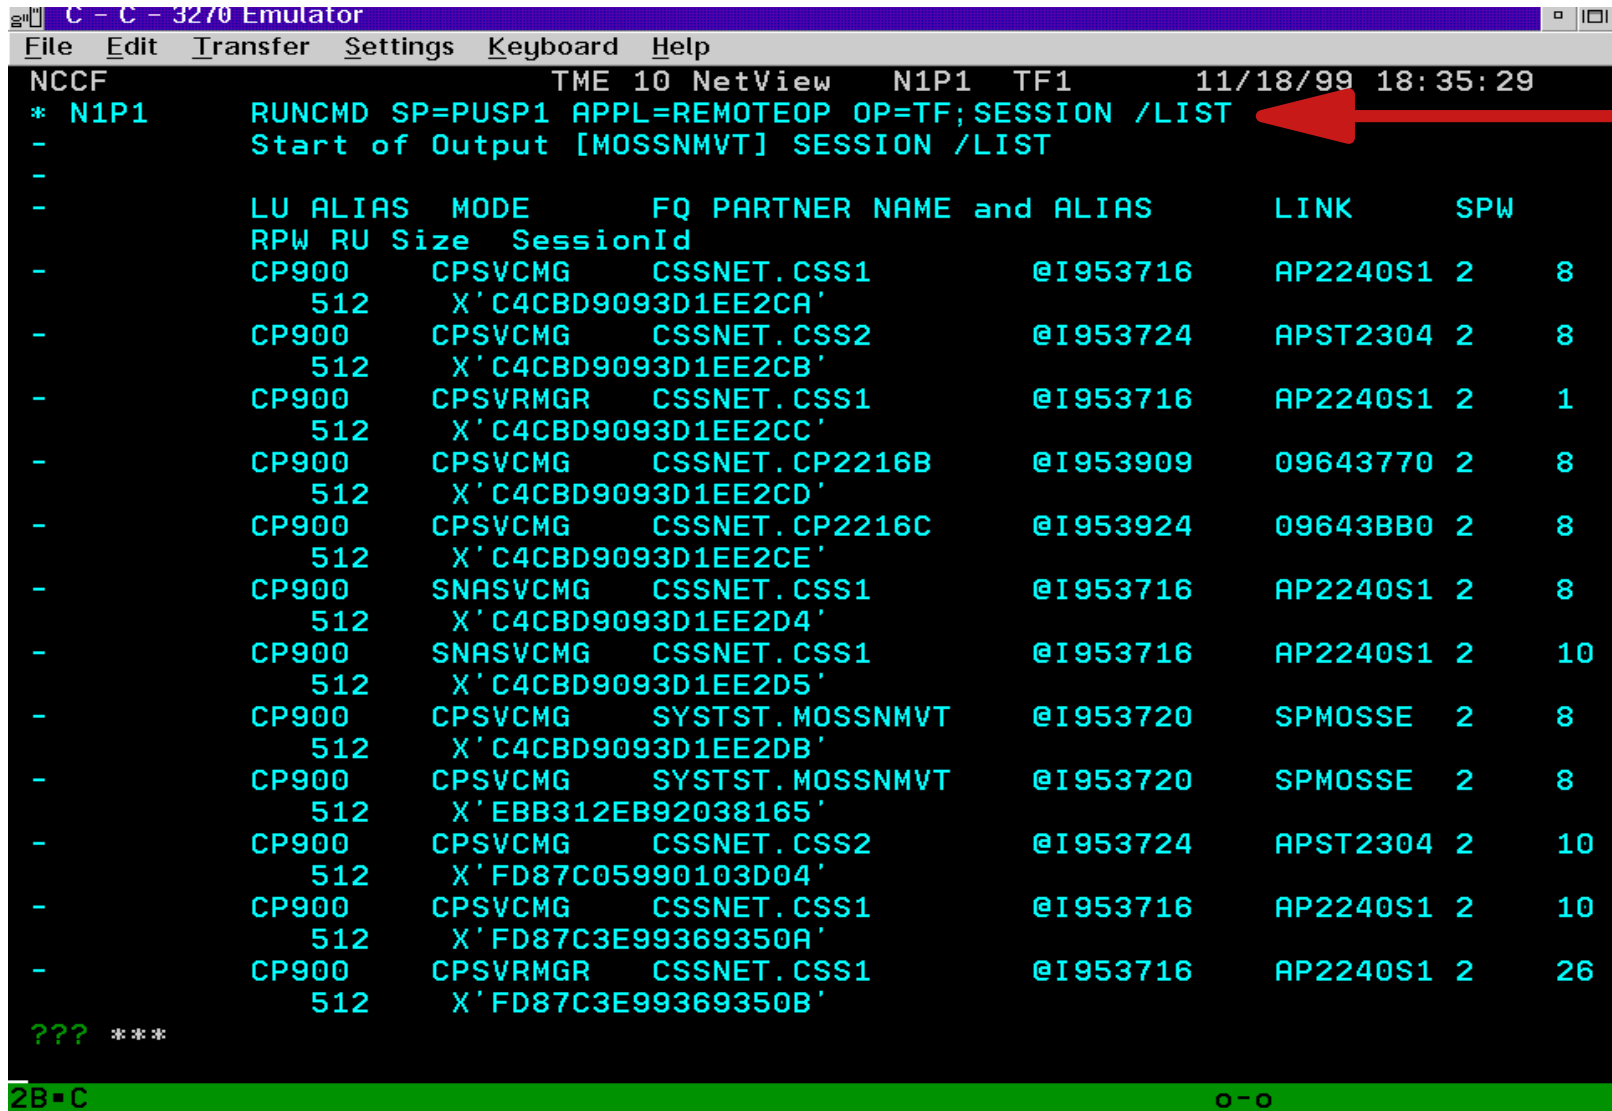

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NCCF TME 10 NetView N1P1 TF1 11/18/99 18:35:29
* N1P1 RUNCMD SP=PUSP1 APPL=REMOTEOP OP=TF;SESSION /LIST
- Start of Output [MOSSNMVT] SESSION /LIST
-
- LU ALIAS MODE FQ PARTNER NAME and ALIAS LINK SPW
  RPW RU Size SessionId
- CP900 CPSVCMG CSSNET.CSS1 @I953716 AP2240S1 2 8
  512 X'C4CBD9093D1EE2CA'
- CP900 CPSVCMG CSSNET.CSS2 @I953724 APST2304 2 8
  512 X'C4CBD9093D1EE2CB'
- CP900 CPSVRMGR CSSNET.CSS1 @I953716 AP2240S1 2 1
  512 X'C4CBD9093D1EE2CC'
- CP900 CPSVCMG CSSNET.CP2216B @I953909 09643770 2 8
  512 X'C4CBD9093D1EE2CD'
- CP900 CPSVCMG CSSNET.CP2216C @I953924 09643BB0 2 8
  512 X'C4CBD9093D1EE2CE'
- CP900 SNASVCMG CSSNET.CSS1 @I953716 AP2240S1 2 8
  512 X'C4CBD9093D1EE2D4'
- CP900 SNASVCMG CSSNET.CSS1 @I953716 AP2240S1 2 10
  512 X'C4CBD9093D1EE2D5'
- CP900 CPSVCMG SYSTST.MOSSNMVT @I953720 SPMOSSE 2 8
  512 X'C4CBD9093D1EE2DB'
- CP900 CPSVCMG SYSTST.MOSSNMVT @I953720 SPMOSSE 2 8
  512 X'EBB312EB92038165'
- CP900 CPSVCMG CSSNET.CSS2 @I953724 APST2304 2 10
  512 X'FD87C05990103D04'
- CP900 CPSVCMG CSSNET.CSS1 @I953716 AP2240S1 2 10
  512 X'FD87C3E99369350A'
- CP900 CPSVRMGR CSSNET.CSS1 @I953716 AP2240S1 2 26
  512 X'FD87C3E99369350B'
??? ***
2B=C
```

# NetView RUNCMD support: Display 3746 Sessions (browsing output in NetView network log)

Note: Session ID is also displayable by scrolling to the right

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
STATMON.BROWSE ACTP NETWORK LOG FOR 11/24/99 (99328) COLS 037 114 18:21 A
HOST: HOST16 *1* *2* *3* *4* SCROLL ==> CSR
---4---+---5---+---6---+---7---+---8---+---9---+---10---+---11---
RUNCMD SP=PUSP1 APPL=REMOTEOP OP=TF;SESSION /LIST ←
Start of Output [MOSSNMVT] SESSION /LIST
LU ALIAS MODE FQ PARTNER NAME and ALIAS LINK SPW RPW RU Size
CP900 CPSVCMG CSSNET.CSS1 @I953716 AP2240S1 2 8 512
CP900 CPSVCMG CSSNET.CSS2 @I953724 APST2304 2 8 512
CP900 CPSVRMGR CSSNET.CSS1 @I953716 AP2240S1 2 1 512
CP900 CPSVCMG CSSNET.CP2216B @I953909 09643770 2 8 512
CP900 CPSVCMG CSSNET.CP2216C @I953924 09643BB0 2 8 512
CP900 SNASVCMG CSSNET.CSS1 @I953716 AP2240S1 2 8 512
CP900 SNASVCMG CSSNET.CSS1 @I953716 AP2240S1 2 10 512
CP900 CPSVCMG SYSTST.MOSSNMVT @I953720 SPMOSSE 2 8 512
CP900 CPSVCMG SYSTST.MOSSNMVT @I953720 SPMOSSE 2 8 512
CP900 CPSVCMG CSSNET.CSS2 @I953724 APST2304 2 11 512
CP900 CPSVCMG CSSNET.CSS1 @I953716 AP2240S1 2 11 512
CP900 CPSVRMGR CSSNET.CSS1 @I953716 AP2240S1 2 27 512
CP900 CPSVCMG CSSNET.CP2216C @I953924 09642AB0 2 9 512
CP900 CPSVCMG CSSNET.CP2216B @I953909 09642EF0 2 9 512
End of Output [MOSSNMVT] SESSION /LIST
```

## 3746 alert generation

The following three screens depict the SNA alert that NetView receives from a 3746 APPN Network Node when its link-attached PU Type 2 is powered down


# NetView Alerts screen after powering off PU2 (3174)

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NETVIEW SESSION DOMAIN: N1P1 TF 03/05/99 12:03:23
NPDA-30B * ALERTS-STATIC *

SEL# DOMAIN RESNAME TYPE TIME ALERT DESCRIPTION:PROBABLE CAUSE
( 1) N1P1 @AP2440 PORT 11:30 LINK ERROR:SDLC COMMUNICATIONS
( 2) N1P1 @AP2440 PORT 11:27 LINK ERROR:SDLC COMMUNICATIONS
( 3) N1P1 @AP2440 PORT 11:25 LINK ERROR:SDLC COMMUNICATIONS
( 4) N1P1 HANSL COMC 11:14 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
( 5) N1P1 GRETL COMC 11:12 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
( 6) N1P1 HANSL COMC 10:50 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
( 7) N1P1 GRETL COMC 10:48 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
( 8) N1P1 HANSL COMC 10:26 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
( 9) N1P1 GRETL COMC 10:24 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(10) N1P1 HANSL COMC 10:02 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(11) N1P1 GRETL COMC 10:00 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(12) N1P1 HANSL COMC 09:38 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(13) N1P1 GRETL COMC 09:36 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(14) N1P1 HANSL COMC 09:14 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(15) N1P1 GRETL COMC 09:12 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(16) N1P1 HANSL COMC 08:50 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(17) N1P1 GRETL COMC 08:48 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(18) N1P1 HANSL COMC 08:26 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(19) N1P1 GRETL COMC 08:24 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(20) N1P1 HANSL COMC 08:02 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(21) N1P1 GRETL COMC 08:00 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(22) N1P1 HANSL COMC 07:38 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT
(23) N1P1 GRETL COMC 07:38 IP DYNAMIC ROUTING DATA NOT RECEIVED:TIME-OUT

DEPRESS ENTER KEY TO VIEW ALERTS-DYNAMIC OR ENTER A TO VIEW ALERTS-HISTORY
ENTER SEL# (ACTION),OR SEL# PLUS M (MOST RECENT), P (PROBLEM), DEL (DELETE)

???
```



```
CMD==>
2B=C
```

# NetView Recommended Action screen

```

C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
NETVIEW          SESSION DOMAIN: N1P1      TF          03/05/99 12:03:44
NPDA-45A         * RECOMMENDED ACTION FOR SELECTED EVENT *      PAGE 1 OF 1
N1P1            CP900          P3174          AP2440
+-----+      +-----+      +-----+
DOMAIN          | CP      | --- | LKST | --- | PORT |
+-----+      +-----+      +-----+


USER          CAUSED - REMOTE DEVICE POWER OFF
ACTIONS       - IO17 - CHECK POWER

INSTALL CAUSED - NONE

FAILURE CAUSED - SDLC COMMUNICATIONS ERROR
                POLL COUNT EXHAUSTED
ACTIONS       - I144 - IF PROBLEM REOCCURS THEN DO THE FOLLOWING
                I120 - REVIEW LINK DETAILED DATA
                I237 - RUN THE FOLLOWING AT THE REPORTING LOCATION IBM 3746 CO
                MMAND : WTT WITH WRAP PLUG
                I525 - CONTACT NETWORK ADMINISTRATOR
                I589 - REFER TO IBM 3746 PUBLICATION NUMBER SA33-0175 FOR ADDI
                TIONAL INFORMATION
                I168 - FOR IBM 3746 PRODUCT ALERT REFERENCE CODE 2217
                I620 - AND:
                IBM 3746 LINE ADDRESS 2440

ENTER ST (MOST RECENT STATISTICS), DM (DETAIL MENU), OR D (EVENT DETAIL)

???
CMD==> _
2B+C
    
```

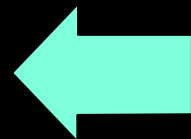

# NetView Event Detail screen

```
C - C - 3270 Emulator
File Edit Transfer Settings Keyboard Help
N E T V I E W          SESSION DOMAIN: N1P1      TF          03/05/99 12:04:17
NPDA-43S                * EVENT DETAIL *          PAGE 1 OF 1

N1P1          CP900          P3174          AP2440
+-----+    +-----+    +-----+
DOMAIN      | CP      |---| LKST |---| PORT |
+-----+    +-----+    +-----+

DATE/TIME: RECORDED - 03/05 11:30      CREATED - 03/05/99 11:32:21

EVENT TYPE: PERMANENT

DESCRIPTION: LINK ERROR

PROBABLE CAUSES:
  SDLC COMMUNICATIONS
  REMOTE NODE

UNIQUE ALERT IDENTIFIER: PRODUCT ID - 3746      ALERT ID - 4B2B8A0C

ENTER A (ACTION) OR DM (DETAIL MENU)

???
```

CMD==> \_

2B=C ^ o-o




# 3746 SNA Alert Categories

- Communication lines
- ESCON adapter
- Token Ring adapter
- Bus adapter
- Service processor
- IP
- SDLC
- LAN external
- Frame relay
- ISDN
- X.21
- X.25
- APPN

For details see

SA33-0175

'374x Alert Reference Guide'

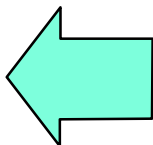

# 3746 APPN Alerts

Comp	Enum	Description
ASM	CPAM001	- Session setup failure
CS	CPCS001	- Invalid XID received
CS	CPCS002	- XID protocol error
CS	CPCS003	- Wrong mode setting command received
CS	CPCS004	- XID negotiation terminated
CS	CPCS005	- Unable to communicate with remote node
CS	CPCS006	- Unable to communicate with remote node
CS	CPCS007	- XID negotiation terminated
TRS	CPDB001	- CP-CP session failure
TRS	CPDB002	- Topology capacity exceeded
TRS	CPDB003	- Topology protocol error
DS	CPDN001	- DS protocol error
DS	CPDN002	- CP-CP session failure
DS	CPDN003	- Unauthorized network change attempted
SCM	CPIM001	- Out of resources
SCM	CPIM002	- SNA protocol error
SCM	CPIM003	- Software program error
MS	CPMS001	- Software program error
MS	CPMS002	- Management Services protocol error
SS	CPSS001	- CP-CP Session Failure
SS	CPSS002	- Unauthorized access attempted
SS	CPSS003	- Session Services Protocol Error
LU62	LU62001	- Received negative BIND response
LU62	LU62002	- Sent negative BIND response
LU62	LU62003	- Session activation rejected
LU62	LU62004	- UNBIND request sent
LU62	LU62005	- UNBIND request received
DLUR	CPDL001	- APPN-DLUR protocol error
DLUR	CPDL002	- APPN-DLUR configuration error

For details see  
SA33-0175  
'374x Alert Reference Guide'

# Summary

- NetView/390 has significant capabilities to manage the 3746 APPN Network Node
- Use of graphics can simplify operator tasks
  - ▶ e.g., activate / deactivate / display link status
- NetView RUNCMD support adds function previously available only via CCM
- 3746 APPN alerts can aid in problem determination

# Bibliography

## ■ 374x

- ▶ GA27-4239 374x ... Planning Series: Management Planning
- ▶ GA33-0479 374x ... NetView Console APPN Command Reference Guide
- ▶ SA33-0175 374x ... Alert Reference Guide
- ▶ 3746 Announcement Letter 199-119 dated 5/11/1999
- ▶ 3746 Announcement Letter 100-180 dated 6/13/2000

■

## ■ Tivoli NetView for OS/390 (Release 3 pub numbers)

- ▶ GC31-8665 NetView Management Console User's Guide
- ▶ GC31-8234 NetView GMF User's Guide
- ▶ SC31-8239 SNA Topology Manager ... Implementation Guide
- ▶ LK2T-9133 Tivoli NetView for OS/390 Online Library (cd)