

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/ CDMA MTX16



DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Copyright © International Business Machines Corporation 2008. All rights reserved.

This information was developed for products and services offered in the U.S.A. IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785, U.S.A.

For license inquiries regarding double-byte (DBCS) information, contact the IBM^(R) Intellectual Property Department in your country or send inquiries, in writing, to:

IBM World Trade Asia Corporation
Licensing
2-31 Roppongi 3-chome, Minato-ku
Tokyo 106, Japan

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement might not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

IBM Corporation
2Z4A/101
11400 Burnet Road
Austin, TX 78758 U.S.A.

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurement may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

Trademarks:

The following terms are trademarks of the IBM^(R) Corporation in the United States or other countries or both:

AIX
DB2
DB2 Universal Database
eServer
i5/OS
IBM
The IBM logo
iSeries
Lotus
Passport Advantage
pSeries
Rational
Redbooks
Tivoli
Virtualization Engine
z/VM
zSeries

Vallent, the Vallent logo, Vallent Control, Vallent Design, Vallent Pilot, Virtuo, Prospect, Metrica Performance Manager, ServiceAssure, NetworkAssure and BusinessAssure are either registered trademarks or trademarks of Vallent and/or its subsidiaries in the United States and/or other countries.

Intel^(R), Itanium, the Intel Inside^(R) logos, and Pentium^(R) are trademarks of Intel Corporation in the United States, other countries, or both.

Java^(TM) and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S., and other countries.



Linux^(R) is a trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft^(R) and Windows^(R) are registered trademarks of Microsoft Corporation in the U.S. and other countries.

UNIX^(R) is a registered trademark of The Open Group in the United States and other countries.

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Other company, product, and service names may be trademarks or service marks of others.

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table of Contents

1	About This Documentation	9
	Audience	9
	Required Skills and Knowledge	9
	Document Conventions	10
	User Publications	11
	Viewing the Desktop Client Help Publications	11
	Viewing the Publications in PDF	12
	Training and Technical Support	12
2	Installation and Setup	13
	Overview	14
	Before You Begin	14
	Collecting MG NTM (PVG) Data	14
	Installation and Setup	16
	Pre-Installation Tasks	16
	Installing Data Acquisition Tools	16
	Setting Up Data Acquisition Tools	18
	The FlexDA Configuration File	19
	The Host Configuration File	20
	Calculating the Space for SCRATCHAREA for mcom Datatypes	44
	Collecting OM Group Data in OMSHOW Format	44
	Adding Collection Sources After Installation	48
	Password Rotation	49
	Directory Structure	50
3	Troubleshooting	53
	Using E-mail for Error Notification	53
	Using Paging for Error Notification	54
	Recovering Data	54
	The Interval Checkpoint Facility (ICF)	54
	TERM Environment Setting	56
	Restrictions for the Message of the Day	58
	Appendix A: Error Messages	59
	Appendix B: Network Element Setup	71
	Setting Up the Network Elements	71
	Appendix C: Management Data Provider (MDP) Statistics Files Setup	73
	Configuring Passport Data Management	73
	Passport Statistics Data Flow	74
	Naming Convention for the Passport Statistics File	74
	Using File Mover	75
	Starting File Manager Processes	75
	Configuring Passport Switches	76
	Sample Configuration File	76

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Setting up the File Prober	77
Sample cron Job	77
Appendix D: Automatic File Transfer (AFT) Software Setup	79
Setting Up the AFT Software	79
Appendix E: Command Reference for Data Acquisition Processes	87
The AFT Reader	87
Command Description	87
The MTXOM Parser	89
Command Description	89
MTX Versions Supported	90
The OM Group Description File	91
The Passport Statistics Parser	95
Command Description	95
Record Description File (RDF)	96
The Source BDF File	98
The Passport Configuration File	99
Sample Parser Output File	101
Appendix F: The Monitoring Process Configuration File	105
Starting the Monitoring of a Particular Switch	105
Sample <hostname>.mon File	105
Stopping the Monitoring of a Particular Switch	110
Appendix G: Secure Connections Setup	111
Configuring SSH on Remote Network Elements	111
Configuring SSH on the Prospect Server	112
Index	115

1 About This Documentation

The *Data Acquisition Tools Guide* provides instructions for configuring and supporting this feature of Prospect® software. This guide is customized to support Prospect Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16 (Release Point 16.2).

This toolset acquires data for processing, helping you analyze the performance of the network and carry out other network or database management tasks. For the latest information pertaining to your network configuration, please see the Release Notes.

This guide was last updated September 24 2008.

Please see the current release notes on this product for a list of revision dates for all Prospect publications.

Audience

The intended audience for this guide are those with a working knowledge of UNIX, and include experienced system administrators, database administrators, installers, or supervisors who are responsible for setting up and configuring Data Acquisition tools. In general, the reader of this guide is referred to as "you." By contrast, "we" refers to the Prospect development and technical staff who support this product.

Required Skills and Knowledge

This guide assumes that you are familiar with the following:

- UNIX basics (such as file structures, text editing, and permissions).
- A UNIX-based text editor, such as *vi* or *emacs*.
- Shell and awk scripting.
- UNIX system administration.

This guide also assumes that you are familiar with your company's network and with procedures for configuring, monitoring, and solving problems on your network.

Document Conventions

This document uses the typographical conventions shown in the following table:

Table 1: General Document Conventions

Format	Examples	Description
ALL UPPERCASE	<ul style="list-style-type: none"> • GPS • NULL • MYWEBSERVER 	Acronyms, device names, logical operators, registry keys, and some data structures.
<u>Underscore</u>	See Document Conventions	For links within a document or to the Internet. Note that TOC and index links are not underscored. Color of text is determined by browser settings.
Bold	<ul style="list-style-type: none"> • Note: The busy hour determiner is... 	Heading text for Notes, Tips, and Warnings.
SMALL CAPS	<ul style="list-style-type: none"> • The STORED SQL dialog box... • ...click VIEW... • In the main GUI window, select the FILE menu, point to NEW, and then select TRAFFIC TEMPLATE. 	Any text that appears on the GUI.
<i>Italic</i>	<ul style="list-style-type: none"> • A <i>busy hour</i> is... • A web server <i>must</i> be installed... • See the <i>User Guide</i> 	New terms, emphasis, and book titles.
Monospace	<ul style="list-style-type: none"> • <code>./wminstall</code> • <code>\$ cd /cdrom/cdrom0</code> • <code>/xml/dict</code> • <code>http://java.sun.com/products/</code> • <code>addmsc.sh</code> • <code>core.spec</code> • Type OK to continue. 	Code text, command line text, paths, scripts, and file names. Text written in the body of a paragraph that the user is expected to enter.
Monospace Bold	<pre>[root] # pkginfo grep -i perl system Perl5 On-Line Manual Pages system Perl 5.6.1 (POD Documenta- tion) system Perl 5.6.1</pre>	For contrast in a code example to show lines the user is expected to enter.
<Mono-space italics>	<code># cd <oracle_setup></code>	Used in code examples: command-line variables that you replace with a real name or value. These are always marked with arrow brackets.
[square bracket]	<code>log-archiver.sh [-i] [-w] [-t]</code>	Used in code examples: indicates options.

User Publications

Prospect software provides the following user publications in HTML or Adobe Portable Document Format (PDF) formats.

Table 2: Prospect User Documentation

Document	Description
<i>Administration Guide</i>	Helps an administrator configure and support Prospect core server software to analyze network performance and perform other network or database management tasks.
<i>Administrator's Quick Reference Card</i>	Presents the principal tasks of a Prospect core server administrator in an easy-to-use format.
<i>Data Acquisition Tools Guide</i>	Helps an administrator install, configure, and operate the Data Acquisition tools.
<i>Expressions Technical Reference</i>	Provides detailed information about expressions used in special calculations for reports.
<i>Installation Guide</i>	Instructions for installing and configuring the Prospect software.
<i>Open Interface API Guide</i>	Describes how the Open Interface tool enhances your access to information about database peg counts and scenarios.
<i>Performance Data Reference</i>	Provides detailed information including entity hierarchies, peg counts, primitive calculations, and forecast expressions specific to your organization.
<i>Release Notes</i>	Provides technology-specific and late-breaking information about a given Prospect release and important details about installation and operation.
<i>Server Preparation Guide</i>	Provides instructions for installing and setting up Solaris and Oracle software before you install Prospect software.
<i>Server Sizing Tool Guide</i>	Helps an administrator use the sizing tool to calculate the system space needed for the Prospect software and database.
<i>User Guide</i>	Provides conceptual information and procedures for using Prospect software for performance and trending analysis.

Viewing the Desktop Client Help Publications

To view the desktop client Help publications, select a guide from the HELP menu of the Prospect graphical user interface or press F1 for context-sensitive Help. To update the Help files, click the HELP menu on the Prospect Explorer, and select UPDATE ALL HELP FILES.

When Help files are updated, they are downloaded automatically from the Prospect server to the Prospect client. A message box notifies you when this download occurs.

Viewing the Publications in PDF

All of the user publications are available in Adobe Portable Document Format (PDF). To open a PDF, you need the Adobe Acrobat Reader. You can download Adobe Acrobat Reader free of charge from the Adobe Web site. For more details about the Acrobat Reader, see the Adobe Web site <http://www.adobe.com/>.

Training and Technical Support

Both training and technical support are available for Prospect software. For technical support, contact us at prospect@us.ibm.com. For training, contact us at training@vallent.com.

For more information on product training courses, contact your delivery management team at:


- Americas: tivamedu@us.ibm.com
- Asia Pacific: tivtrainingap@au1.ibm.com
- EMEA: tived@uk.ibm.com

2 Installation and Setup

Data Acquisition tools are programs that collect performance data from network elements or data collection points, preprocess the data, and then send the data to the Prospect server. The following figure shows a block diagram of the data acquisition process.

Note: In this guide, the term *network element* represents the components of the switching network.

Figure 1: The Data Acquisition Process

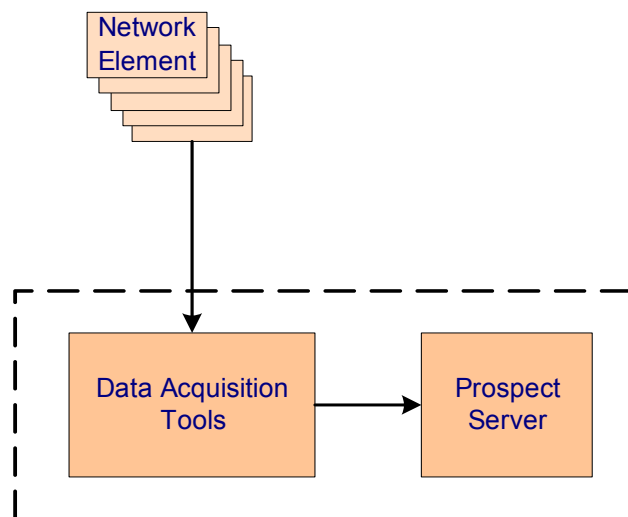

Refer to the *Administration Guide* for a description of the data loading process once the data is received by the Prospect server.

Topics

- [Overview](#)
- [Installation and Setup](#)
- [Password Rotation](#)
- [Directory Structure](#)

Overview

The data acquisition process collects data files from the network elements or data collection points at specific intervals, stores the files on the data acquisition server, and then sends the files to the Prospect server. This data can then be used by the Prospect server to create reports.

Data Acquisition tools enable you to do the following:

- Communicate with network elements or data collection points
- Collect data from network elements or data collection points
- Store acquired data on the data acquisition server and send the data to the Prospect server
- Record user-defined events and errors in a log file
- Monitor the condition of all required processes
- Collect data again from network elements or data collection points after failure

Data Acquisition tools can remotely log on to network elements or data collection points using provided IP address and security information, receive generated data through network commands or files stored on network elements or data collection points, and send data to desired locations. You can configure both source and target data locations (directories and file names) and include a time stamp as part of a file name.

Before You Begin

Before you can install the Data Acquisition tool, you need the following information:

- Data collection point or network element hostnames and IP addresses and the corresponding login usernames and passwords
- destination host name and IP address for the Prospect server
- destination (target) directory for the Prospect server
- login user name and password for the destination Prospect server
- number of days to keep the data files
- Data type (the following data types are supported in this release: bsm, mtX, mtXtab, ppc, rnc, pdsn, usp, pvG, sdm, uas, mxpt, pdsn16000, mg, ntmmDM).
- Time adjustment, if the data collection points are in a different time zone than the DA server.

Collecting MG NTM (PVG) Data

The PVG data type is the same as the newer MG NTM datatype, rebranded. There are two sources for this data: the SDM/CBM and the MDM.

For collection from the SDM or CBM, the source file convention is

`<name>.<date>.<time>.PP.<type>.CSV`, where the default `<name>` is `PP_30MIN_PM` and `<type>` is `THIRTY` and the source directory is `/omdata/closedNotSent` for the SDM, and `/cbmdata/00/billing/ama/closedNotSent` for the CBM.

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

For collection from the MDM, the source file convention is <name>.<date>.<time>.<HGDS group or shelf name>.<type>.CSV, for example:

PP_30MIN_PM.06_23_2002.1325.LENXXSICGT1.THIRTY.CSV

The directory path is /opt/MagellanNMS/data/pmsp/<groupX>/closedNotSent where <groupX> is unique for each PMSP.

The Prospect filename for both sources is <MTX_Name>.MDDYYYYHHMM.MGNTM.

Updated: 2008-09-24

Installation and Setup

You can install the data acquisition scripts either on the computer running the Prospect server or on another computer. To install Data Acquisition tools, you must have a working knowledge of UNIX as well as **root** permission for the server on which the installation takes place.

Pre-Installation Tasks

Setting Up the Network Elements

Set up the network elements by following the procedure in [Appendix B: Network Element Setup](#) on page 71.

Setting Up Secure Connections

Secure the connection among the Data Acquisition server, the Prospect server, and the network elements by following the procedure in [Appendix G: Secure Connections Setup](#) on page 111.

Setting Up the Management Data Provider (MDP) Statistics Files

Set up the MDP statistics files by following the procedure in [Appendix C: Management Data Provider \(MDP\) Statistics Files Setup](#) on page 73.

Setting Up the Automatic File Transfer (AFT) Software

Set up the AFT software by following the procedure in [Appendix D: Automatic File Transfer \(AFT\) Software Setup](#) on page 79.

Understanding the Data Acquisition Processes Commands

Review the commands for the AFT reader, the MTXOM parser, and the Passport Statistics parser in [Appendix E: Command Reference for Data Acquisition Processes](#) on page 87.

Installing Data Acquisition Tools

The following describes the steps required to install Data Acquisition tools. This includes setting up a user account and the server environment. Two procedures are listed: one to install the Data Acquisition tool for the first time, another to install the Data Acquisition tool on a multi-DAT environment.

If you are installing Data Acquisition tools for the first time, follow the guidelines and procedures below. If you are upgrading your Data Acquisition tools from a previous release, please see the release notes for complete information on prerequisites and upgrade procedures.

The following procedures refer to the `<hostname>` variable. To find the value of this variable, enter the command ``uname -n``.

To install Data Acquisition tools for the first time on a server

1. Create a `flexda` user account on the computer where Data Acquisition tools are to be installed. The Korn shell must be the default shell.
2. Log on as `root`, and then create the `flexda` account.
 - a. Add the `flexda` account to the `dba` group. For details on the `dba` group, refer to "Configuring UNIX User Accounts" in the *Server Preparation Guide*.
 - b. Log on as `flexda`.
3. On the *DA Tool Kit* CD, locate the `setup-da` file in the `root` directory.

```
[flexda] $ cd /cdrom/cdrom0
```

Install the Data Acquisition tools as follows.

Example

```
[flexda] $ setup-da -install DA_7.1_Nortel_CDMA_RP16_BASE.tar.gz
```

4. Change directory to user home directory:

```
[flexda] $ cd ~
```
5. Copy the `FlexDA.default.cfg` file to `FlexDA.<hostname>.cfg`. Replace `<hostname>` with the name of your local host, which can be derived through the command `uname -n`:

```
[flexda] $ cp INSTALL/ALL/cfg/FlexDA.default.cfg \  
INSTALL/localhost/cfg/FlexDA.<hostname>.cfg
```
6. Copy the `site_opts` file as follows:

```
[flexda] $ cp INSTALL/ALL/cfg/site_opts_ntcdma \  
INSTALL/localhost/cfg/site_opts
```
7. Run the Data Acquisition tools installation script. This creates all directories and links all network element programs.

```
[flexda] $ INSTALL/ALL/scripts/install_flexda.ksh
```
8. Log off and then log on again as `flexda` to reflect the changes.

To install Data Acquisition Tools on a multi-DAT environment

1. Log on as `flexda`.
2. On the *DA Tool Kit* CD, locate the `setup-da` file in the root directory.

```
[flexda] $ cd /cdrom/cdrom0
```
3. Install the Data Acquisition tools as follows.

Example

```
[flexda] $ setup-da -install DA_7.1_Nortel_CDMA_RP16_BASE.tar.gz
```

4. Change directory to user home directory:

```
[flexda] $ cd ~
```
5. Copy the `site_opts` file as follows:

```
[flexda] $ chmod +w INSTALL/localhost/cfg/site_opts
```

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
[flexda] $ cp INSTALL/ALL/cfg/site_opts_ntcdma \  
INSTALL/localhost/cfg/site_opts
```

6. Run the Data Acquisition tools installation script. This creates all directories and links all network element programs.

```
[flexda] $ INSTALL/ALL/scripts/install_flexda.ksh
```

7. Log off and log on again to reflect the changes.

Setting Up Data Acquisition Tools

The following describes the steps required to set up Data Acquisition tools. This includes preparing the configuration file and defining the **cron** job.

Note: The following steps apply to new installations, and to upgrades when the previous installation did not use a configuration file. If you are upgrading a previous installation that used a configuration file, and have already installed the patches as described in the Release Notes, you can skip the setup steps listed below.

The following procedure refers to *<hostname>*; you can find this value by using the command

```
uname -n
```

Substitute *<hostname>* with the value returned by the `uname -n` command.

To set up Data Acquisition tools

1. Prepare the configuration file, *<hostname>.ntcdma.cfg*, in the `$FLEXDAHOME/INSTALL/localhost/cfg` directory.

- a. Copy the sample configuration file and update the entries to correspond to your configuration. See [The Host Configuration File](#) on page 20. For example:

```
[flexda] $ cd ~flexda  
[flexda] $ cp INSTALL/ALL/doc/host.ntcdma.cfg.sample \  
INSTALL/localhost/cfg/<hostname>.ntcdma.cfg
```

where *<hostname>* is the name of your local host.

- b. Make sure that the host configuration file is writable:

```
[flexda] $ cd ~flexda  
[flexda] $ chmod +w \  
INSTALL/localhost/cfg/<hostname>.ntcdma.cfg
```

- c. Modify the file *<hostname>.ntcdma.cfg* for each network element from which the data is collected. See [The Host Configuration File](#) on page 20.

- d. For Nortel OM only:

The Nortel parser takes an OM groups configuration file as an argument. During setup, a default configuration file, `omgroups.<technology>` is symbolically linked in the `$FLEXDAHOME/cfg` directory.

Modify the OM groups configuration file as follows:

```
% cp cfg/omgroups.<technology> cfg/omgroups.<newname>
```

Once you modify the OM groups configuration file, in the `INSTALL/localhost/cfg/<hostname>.<vendor_abbrev><technology>.cfg` file, update the `OMGRPSCFG` field value to `cfg/omgroups.<newname>`

e. Run the install script:

```
[flexda] $ cd ~flexda
[flexda] $ INSTALL/ALL/scripts/setconfig.ksh \
          INSTALL/localhost/cfg/<hostname>.ntcdma.cfg
          | tee setconfig.install.log.$$
```

f. The output of the install script can be seen in file `setconfig.install.log.<pid>` where `<pid>` is the process id. Verify also that the data and log directories have been created as well as the Interval Checkpoint Facility (ICF) configuration files (`cfg/*.*icf`), checkpoint file (`log/*.*chk`), and the `cron` file. See [Directory Structure](#) on page 50 for the location of files and directories.

2. The crontab files `<hostname>.ntcdma.cron` and `<hostname>.cron` are created in the `$FLEXDAHOME/cfg` directory. Use `<hostname>.cron` to enable every installed DA collection and `<hostname>.ntcdma.cron` for specific DAT collection. To define job entries in the `cron` job, run the following:

```
[flexda] $ cd ~flexda
[flexda] $ crontab cfg/<hostname>.cron
```

The `<hostname>.cron` file contains cron job entries for all DA Tools installed in a multi-DAT environment.

To modify the behavior of Data Acquisition tools with regard to collecting data, change the `crontab` entry to start Data Acquisition tools at the appropriate time interval.

The FlexDA Configuration File

The `FlexDA.<hostname>.cfg` file contains the version number, site name, home directory name of the data acquisition system, and configuration file location. The variable `<hostname>` is the name of your local host, which can be derived through the command ``uname -n``.

The following is a sample `FlexDA.<hostname>.cfg` file:

```
#!/usr/bin/ksh
# $Header:$
# TITLE:FlexDA.default.CFG - Default FlexDA Configuration
#
# ABSTRACT:This script is meant to be dotted into K-shell scripts to
#          define default FlexDA configuration data.
#
# Market: Default
# Host:    ALL
```

```
#
#
cwd=`pwd`;cd ~`/usr/ucb/whoami`;dahome=`pwd`;cd $cwd
typeset -x FLEXDAVER=7.0
typeset -x FLEXDASITE=`uname -n`
typeset -x FLEXDAHOME=$dahome
typeset -x FLEXDACFG=$FLEXDAHOME/cfg
```

The Host Configuration File

The host configuration file, `<hostname>.ntcdma.cfg`, is used to install the data acquisition jobs. This file is created by using the template file `host.ntcdma.cfg.sample` located in `$FLEXDAHOME/INSTALL/ALL/doc`. See [Sample Host Configuration File](#) on page 21.

Note: You can find the value of the `<hostname>` variable by using the command `uname -n`.

The file `ntcdma_cfg.txt`, also located in `$FLEXDAHOME/INSTALL/ALL/doc`, provides descriptions of all the variables defined in `<hostname>.ntcdma.cfg`.

The host configuration file significantly reduces the effort and time required to set up the data acquisition system. The file also improves the accuracy and reliability of the system. You input the required attributes of the network elements or data collection points, and then run the `setconfig.ksh` script to generate the necessary components for the data acquisition system, including the directories and ICF files, checkpoint files, and **cron** scripts. For more information about the ICF and checkpoint files, see [Troubleshooting](#) on page 53.

The `setconfig.ksh` script creates a file (`<hostname>.ntcdma.cron`) in the `$FLEXDAHOME/cfg` directory that contains the `crontab` information. Using `setconfig.ksh` to set up the **cron** job enables the data acquisition server to collect network element data automatically.

Refer to [Field Descriptions](#) on page 32 for a complete list of fields, variables, and descriptions.

Data Loading Sequence

To load traffic data successfully, the configuration information must be current and/or reflect the corresponding traffic data being loaded. Pay close attention to the following points:

1. Data must be loaded in the correct sequence. This is particularly important for the initial data load from a particular switch. The required sequence in which to load data is as follows:
 - a. `*Tables*cfg*` (MTX configuration mapping information)
 - b. `*BSMmap*` (BSS configuration mapping information)
 - c. Either `*pm*` file type.
2. If historical traffic data is to be loaded (or reloaded), the corresponding historical configuration data must be loaded first. Once the historical configuration and traffic data is

loaded, no current traffic data should be loaded until the current configuration data has been loaded again.

Sample Host Configuration File

This section contains an example of a host configuration file. The example is configured as follows:

- The data acquisition host server collects two data types: Nortel MTXOM and Nortel Passport Statistics.
 - Nortel MTXOM data is collected from two network elements: MTX01 and MTX02. A reader process and a parser process are run for each network element.
 - The parser process configuration option for the two network elements specifies:
-C <gfile>:<ngroups>
 - MTX01 and MTX02 both use group description file `cfg/omgroups.cdma`.
 - MTX01 and MTX02 both run switch loads that support 337 Operational Measurements (OM) groups.
- Passport statistics data is collected from one network element: CBRS01. A parser process is run for this network element.
 - The parser process configuration option specifies:
-C <rfile>:<delch>:<cfile>
 - The input Passport RDF file is `cfg/ppc_sta.rdf`
 - The input Passport BDF file uses field delimiter character colon.
 - The input Passport CBRS configuration file is `cfg/cbrs.cfg`.

For detailed information about data acquisition process commands, see [Appendix E: Command Reference for Data Acquisition Processes](#) on page 87.

```
#####  
###  
#  
# Licensed Materials - Property of IBM  
# (c) Copyright IBM Corporation 2008. All rights reserved.  
#  
# US Government User Restricted Rights - Use, duplication or disclosure  
# restricted by GSA ADP Schedule Contract with IBM Corp.  
#  
#####  
###  
  
# $Header: /nfs/kl/gateways/da/CVSROOT/modules/NORTEL/doc/  
host.ntcdma.cfg.sample,v 1.4 2007/11/27 08:46:39 abkadir Exp $  
#  
# TITLE: THIS IS THE FLEXDA SERVER CONFIG FILE USED TO SET UP FLEXDA  
# AND PROCESS CFG FILES
```

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
#
# THREE LEVELS OF CONFIGURATION:
#
# SYSTEM LEVEL: This is the top level configuration.
#           The Following variables must be provided:
#           sysopts
#           lhost
#           thost
#
# TYPE LEVEL:   MTX, BSM and PPC
#
# DETAIL LEVEL: Detailed information for each option such as ane, motorola,
#           nortel..., the ane_detail, motorola_detail, nortel_detail...
#           information must be provided.
#
# NOTE: User defined variables can be created in order to shorten
#           the long lines
#
#
#####
##
method_dir=$FLEXDAHOME/INSTALL/ALL/scripts
optcfg_dir=$FLEXDAHOME/INSTALL/localhost/cfg

#   SYSOPTNAME           OPTMETHOD           OPTCFGFILE
#   -----           -----           -----
set -A sysopts \
    ntcdma           $method_dir/set_ntcdma.ksh  $optcfg_dir/hostname.ntcdma.cfg

#   LOCALHOSTNAME       NDAYS
#   -----           -----
set -A lhost \
    hostname           34

#   DESTHOSTNAME       DESTHOSTIP       DESTHOSTUSER       DESTHOSTPSWD
#   -----           -----           -----           -----
set -A thost \
    hostname           ????.???.??.??   flexpmuser         flexppass

#           NNTYPES
#           -----
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```

set -A ntcdma_type      \
      bsm               \
      mtX               \
      mtxtab           \
      ppc              \
      rnc              \
      pdsn             \
      usp              \
      pvg              \
      sdm              \
      uas              \
      mxpt             \
      pdsn16000       \
      mg               \
      ntmmdm

#
# MTX
#

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET      TGTDIR  SRCIP          SRCID          SRCUSER        SRCPSWD  NOOFOMGRPS
# -----
#           AFTPORT CHGPSWD DATATYPES
#           -----
#   OMGRPSCFG          TMADJ
#   -----
# CBMPASSTHROUGH      CBMIP          CBMSRCUSER      CBMSRCPSWD
# -----
#           SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#           -----
set -A ntcdma_mtx
SD      $tdir  ???.??.??.??  MTX48      mtXuser      mtXpass  337  \
      30001  Y          mtXom, trkmem, tables, omshow, actlog  \
      cfg/omgroups.cdma  60  \
N          ???.??.??.??  cbmuser      cbmpass  \
      1          1          N  \
SD      $tdir  ???.??.??.??  MTX49      mtXuser      mtXpass  337  \
      30001  Y          mtXom, trkmem, tables, omshow, actlog  \
      cfg/omgroups.cdma  60  \
N          ???.??.??.??  cbmuser      cbmpass  \
      1          1          N  \

```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
SD      $tdir  ??..??..??..??  MTX50      mtxuser    mtypass  337  \
      30001  Y      mtxom, trkmem, tables, omshow, actlog  \
      cfg/omgroups.cdma  60  \
N      ??..??..??..??  cbmuser    cbmpass  \
      1      1      N

#
# MTX Tables
#

srcdir=/data/prospect

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET      TGTDIR  SRCIP      SRCID      MTXNAME      SRCDIR
# -----      -
# SRCUSER      SRCPSWD    DATATYPES  TMADJ
# -----      -
# SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
# -----      -

set -A ntcdma_mtxtab
SD      $tdir  ??..??..??..??  sdm01      MTX48      $srcdir  \
      mtxuser    mtypass    mtxtab    60  \
      1      1      N

#
# BSM
#

# BSM Config Source directory
bsmcfkdir=/opt/bsm/tool/data

# BSM OM Source directory
bsmomdir=/opt/bsm/log
cpdsdir=/opt/cems/log

# BSM CSVS & CNFP directory
csvsdir=/opt/cems/log
cnfpdir=/opt/cems/log

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in
```


DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```

# MARKET  TGTDIR  SRCIP          SRCID          BSMID  MTXNAME  SRCUSER  SRCPSWD
#  -----  -----  -----  -----  -----  -----  -----
#          OMSRCDIR  CPDSSRCDIRCFGSRCDIR
#          -----  -----  -----
#  BSMOMFNAMES
#  -----
#          CHGPSWD ASHELF          BSHELF
#          -----  -----
#  DATATYPES          TMADJ
#  -----  -----
#          CSVSDIR  CNFPDIR
#          -----  -----
#  SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#  -----  -----  -----
set -A ntcdma_bsm \
SD      $tdir  ???.??.??.?? bsm1          0          MTX48  bsmuser  bsmpass \
        $bsmomdir  $cpdsdir  $bsmcfkdir \
MCBTSSubsystem,SBSCSubsystem,cdsuperf_new,BSC,CPDSSubsystem \
N          ???.??.??.??  ???.??.??.?? \
bsmom,bsmcfgr,bsmmap,bsmtrkr,bsmcsvs,bsmcnfp 60 \
        $csvsdir  $cnfpdir \
1          1          N

#
# PPC
#

# Passport Statistics source directory
stasdir=/opt/MagellanMDP/data/mdp/dump/statistics

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX11/in

# MARKET  TGTDIR  SRCIP          SRCID          BSMID  MTXNAME
#  -----  -----  -----  -----  -----  -----
#          CBRNAME          NODEID  SRCUSER          SRCPSWD  STASRCDIR
#          -----  -----  -----  -----  -----
#  PPCRDF          BDFDEL  PPCCFG          DATATYPES  TMADJ  PERIOD  CHGPSWD
#  -----  -----  -----  -----  -----  -----
#          SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#          -----  -----  -----
set -A ntcdma_ppc \
SD      $tdir  ???.??.??.??  mdphost  1          MTX01          \

```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
MTX01B2CBRS1      510      mdpuser      mdppass      $stasdir      \
cfg/ppc_sta.rdf  ":"      cfg/cbrs.cfg  ppcsta      0      60      Y      \
1                  1                  N

#
# RNC
#

# RNC OM Source Base Directory
rncomsdir=/webNMS/dcFiles
rnccfgsdir=/webNMS/dcFiles

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MS/ftpIN/MTX12/in

# * SCRATCHAREA option is only applicable to rncom datatypes.
# For rnccfg datatypes, just set SCRATCHAREA to 'none'
#
# MARKET  TGTDIR  SRCIP          SRCID  RNCID  SRCUSER  SRCPSWD
# -----  -----  -----
# SRCDIR          DATATYPES  TMADJ  DOM_BATCH_SIZE  DOM_COLLECTION
# -----  -----
# SECURERETRIEVE SECUREDELIVER PSWD_AUTH REMOTE_COMPRESSION
# -----  -----
# SCRATCHAREA
# -----

set -A ntcdma_rnc
SD      $tdir  ????.????.????.???  ems01  ems01  emsuser  emspass \
$rnccfgsdir  rnccfg      0      none      N      \
1                  1      N      N      \
none
SD      $tdir  ????.????.????.???  ems01  rnc01  emsuser  emspass \
$rncomsdir  rncom      0      50      N      \
1                  1      N      Y      \
<scratcharea>
SD      $tdir  ????.????.????.???  ems01  rnc02  emsuser  emspass \
$rncomsdir  rncom      0      50      N      \
1                  1      N      Y      \
<scratcharea>

#
# PDSN (om, faom, haom)
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
#

hasdir=/opt/shasta/HA
fasdir=/opt/shasta/FA

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET  TGTDIR  SRCIP          SRCID  SRCUSER  SRCPSWD
# -----  -
#          SRCDIR  VERSION DATATYPES  TMADJ
#          -
# SECURERETRIEVE SECUREDELIVER PSWD_AUTH
# -----

set -A ntcdma_pdsn \
SD      $tdir  ????.????.????.??? pdsn01  pdsnuser  pdsnpass \
        $fasdir  2.2    faom    0                \
1                1                N                \
SD      $tdir  ????.????.????.??? pdsn02  pdsnuser  pdsnpass \
        $hasdir  2.2    haom    0                \
1                1                N                \

#
# USP
#

uspsdir=/ossinterface/oms/om05min

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET  TGTDIR  PSRCIP          PSRCID  PSRCUSER  PSRCPSWD  PSRCDIR
# -----  -
#          BSRCIP          BSRCID  BSRCUSER  BSRCPSWD  BSRCDIR
#          -
# PGMSCID  USPID          DATATYPES  TMADJ
#          -
#          SECURERETRIEVE SECUREDELIVER PSWD_AUTH
#          -

set -A ntcdma_usp \
SD      $tdir  ????.????.????.??? usp01p  uspuser  usppass  $uspsdir \
        ????.????.????.???  usp01b  uspuser  usppass  $uspsdir \
PGMSC01  USP01          uspom    0                \
```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
1          1          N

#
# PVG
#

pvgmdir=/opt/MagellanMDP/data/mdp/dump/statistics

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET  TGTDIR  SRCIP          SRCID      PGMSCID      PVGID  NODEID
# -----  -----  -----          -----  -----  -----  -----
#          SRCUSER  SRCPSWD  SRCDIR      DATATYPES  TMADJ
#          -----  -----  -----          -----  -----
#  SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#  -----  -----  -----
set -A ntcdma_pvg \
    SD      $tdir  ????.????.????.??? MDM01      PGMSC01      PVG01  594 \
    mdmuser  mdmpass $pvgmdir  pvgsta      0
    1          1          N

#
# SDM
#

sdmsdir=/omdata/closedNotSent
cbmsdir=/cbmdata/00/billing/ama/closedNotSent
sdmddir=/omdata/closedSent
cbmddir=/cbmdata/00/billing/ama/closedSent

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET  TGTDIR  SRCIP          SRCID      MSCNAME      SRCUSER  SRCPSWD
# -----  -----  -----          -----  -----  -----  -----
#          SRCDIR  CBMSRCDIR      SRCOPT      DATATYPES  TMADJ      COLMULT
#          -----  -----  -----          -----  -----  -----
#  MVSRC      SDMDDIR      CBMDDIR
#  -----  -----  -----
#          SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH  MTXNAME
#          -----  -----  -----  -----
set -A ntcdma_sdm \
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
SD      $tdir      ????.????.??? sdm01      msc01      sdmuser01 sdmpass01 \  
      $sdmsdir $cbmsdir      both      sdmom      0      yes      \  
yes     $sdmddir      $cbmddir      \  
      1      1      N      mtxname
```

#

UAS

#

uassdir=/data/oms/1

Prospect Loader target directory

tmdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

```
# MARKET TGTDIR SRCIP SRCID SRCUSER SRCPSWD  
# -----  
# SRCDIR NODETYPE NODENAME REPORTNAME TIMEZONE DATATYPES TMADJ  
# -----  
# SECURERETRIEVE SECUREDELIVER PSWD_AUTH  
# -----
```

```
set -A ntcdma_uas \  
SD      $tdir      ????.????.??? uas1      uasuser      uaspswd      \  
      $uassdir      GWC      NODE1      GWC      EST      uas      0      \  
1      1      N      \  
SD      $tdir      ????.????.??? uas2      uasuser      uaspswd      \  
      $uassdir      UAS      NODE2      MIB-2      PST      uas      0      \  
1      1      N
```

#

MASSEXPORT

#

mxptsdir=/var/opt/MassExport

Prospect Loader target directory

tmdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

```
# MARKET TGTDIR SRCIP SRCID SRCUSER SRCPSWD  
# -----  
# SRCDIR DATATYPES TMADJ PERIOD  
# -----  
# SECURERETRIEVE SECUREDELIVER PSWD_AUTH
```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
# -----
set -A ntcdma_mxpt \
  SD      $tdir    localhost      MTX01  username password \
        $mxptsdir  mxptom 0      60
  1          1          N

#
# PDSN16000
#

pdsn16000sdir=/var/opt/PDSN16000

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET  TGTDIR  SRCIP          SRCID  SRCUSER  SRCPSWD
# -----
#      SRCDIR      DATATYPES  TMADJ  PERIOD
#      -----
#  SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#  -----
set -A ntcdma_pdsn16000 \
  SD      $tdir    ???..???..???..???  MTX01  username password \
        $psdn16000sdir pdsn16000om  0      30
  1          1          N

#
# Media Gateway (MG) NTM
#

# -SDM-
sdir=/omdata/closedNotSent
ddir=/omdata/closedSent

# -CBM-
#sdir=/cbmdata/00/billing/ama/closeNotSent
#ddir=/cbmdata/00/billing/ama/closedSent

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX13/in

# MARKET  TGTDIR  SRCIP          SRCID  MTXNAME  SRCUSER  SRCPSWD
```

```

# -----
#          SRCDIR      DATATYPES      TMADJ      MVSRC      DDIR
#          -----
#  SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#  -----
set -A ntcdma_mg      \
    SD      $tdir      ???.???.?.???  sdm01      mtxname      username      password \
          $sdir      ntmsta      0      no      $ddir      \
    1          1          N

#
# MGNM MDM
#

sdir=/opt/MagellanNMS/data/pmsp/group_id/closedNotSent
ddir=/opt/MagellanNMS/data/pmsp/group_id/closedSent

# Prospect Loader target directory
tdir=/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ftpIN/MTX12/in

# MARKET  TGTDIR      SRCIP      SRCID      SRCUSER      SRCPSWD
# -----
#          SRCDIR      DATATYPES      TMADJ      MVSRC      DDIR
#          -----
#  SECURERETRIEVE  SECUREDELIVER  PSWD_AUTH
#  -----
set -A ntcdma_ntmmdm  \
    SD      $tdir      ???.???.?.???  mtx01      username      password \
          $sdir      ntmmdm      0      no      $ddir      \
    1          1          N

b
    
```

File Structure

See `ntcdma_cfg.txt` for the description of each field. The host configuration file has a top-down structure. You provide the information for each configuration level—no empty fields are allowed in the file. You also must use a backslash (\) at the end of a line except for the last line of a section.

A *system-level configuration* contains system option, local host, and destination host sections.

- The system option section provides the vendor types of data acquisition system to be installed, the setup script to be used, and the location of the configuration file. The top-

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

level setup script (`setconfig.ksh`) uses the individual setup scripts, `set_ntcdma.ksh`, to generate the data and log directories, and the ICF, checkpoint, monitoring, and `cron` files. For more information about these files, see [Troubleshooting](#) on page 53.

- The local host section determines how many dates the collected files should be kept in the system (`NDAYS`).
- The destination host section provides the host name, the IP address, and the sign-on user ID and password.

The *option-level configuration* contains a single section that defines the data types for the data acquisition system to be installed.

The *detail-level configuration* section is needed for each data type collected by the system. The section contains data type definitions for the market, source user name, source password, source ID, source IP address, and target file directories.

Field Descriptions

The following table describes the fields of the host configuration file.

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
sysopts	SYSOPTNAME	System option Name
	OPTMETHOD	System option setup method (script name). Must have full path. For example: \$method_dir/set_ntcdma.ksh
	OPTCFGFILE	System option setup configuration file name. Must have full path. For example: \$method_dir/<hostname>.cfg
lhost	LOCALHOSTNAME	Machine host name
	NDAYS	Number of days the data and log files need to be kept
thost	DESTHOSTNAME	Destination host name on the Prospect server
	DESTHOSTIP	Destination IP address on the Prospect server
	DESTHOSTUSER	Destination login user name on the Prospect server
	DESTHOSTPSWD	Destination login password on the Prospect server
ntcdma_type	NTTYPES	Nortel Type. For example: bsm, mtx, ppc, pdsn, pvg, sdm, uas, mxpt
ntcdma_mtx	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	SRCUSER	Source login user on the network element

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	SRCPSWD	Source login password on the network element
	NOOFOMGRPS	No of OM Groups
	AFTPORT	AFT Reader port address
	CHGPSWD	Flag if switch's password needs to be rotated
	DATATYPES	MTX Data types that need to be collected, separated by comma (.). Example: mtxom,trkem,tables,omshow,actlog,caplog,mtxlogs,mtxraw,swerlog,traplog. Note: Use caplog for XA-Core Switch and actlog for Non-XA-Core Switch
	OMGRPSCFG	MTX OM Groups configuration file name
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	CBM-PASSTHROUGH	Flag to switch connection between 'through CBM' or 'direct to MTX' (available options : Y/N)
	CBMIP	Source CBM IP address on the network element
	CBMSRCUSER	Source CBM login user on the network element
	CBMSRCPSWD	Source CBM login password on the network element
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_mtxtab	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	MTXNAME	MTXName with which the data source is associated
	SRCDIR	MTX source directory
	SRCUSER	Source login user on the network element

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	SRCPSWD	Source login password on the network element
	DATATYPES	MTX Data types that need to be collected, in this case, mtxtab
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_bsm	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	BSMID	Source BSM ID on the network element
	MTXNAME	MTX Name with which the data source is associated
	SRCUSER	Source login user on the network element
	SRCPSWD	Source login password on the network element
	OMSRCDIR	BSM OM source directories
	CPDSSRCDIR	BSM OM CPDS source directory
	CFGSRCDIR	BSM CFG source directory
	BSMOMFNAMES	BSM OM filenames. For example: MCBTSSubsystem,SBSCSubsystem,cdsuperf_new,BSC,CPDSSubsystem
	CHGPSWD	Flag if switch's password needs to be rotated
	ASHELF	BSM A-Shelf IP address
	BSHELF	BSM B-Shelf IP address
	DATATYPES	BSM Data types that need to be collected, separated by comma (.). Example: bsmom,bsmcfg,bsmmap,bsmtrkr,bsmcsvs,bsmcnfp

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	CSVSDIR	BSM OM CSVS source directory
	CNFPDIR	BSM OM CNFP source directory
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1"
ntcdma_ppc	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	BSMID	Source BSM ID on the network element
	MTXNAME	MTX Name with which the data source is associated
	CBRSNAME	Source CBRS Name on the network element
	NODEID	Source Node ID on the network element
	SRCUSER	Source login user on the network element
	SRCPSWD	Source login password on the network element
	SRCDIR	Passport Statistics source directory
	PPCRDF	Passport record description file
	BDFDEL	BDF file field delimiter
	PPCCFG	Passport configuration file
	DATATYPES	PPC Data types that need to be collected, separated by comma (.). Example: ppcsta.
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	PERIOD	Data collection period in minutes. Valid entries are: 15, 30, 60.
	CHGPSWD	Flag if switch's password needs to be rotated
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_rnc	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	RNCID	Source RNC ID on the network element
	SRCUSER	Source login user on the network element
	SRCPSWD	Source login password on the network element
	SRCDIR	Passport Statistics source directory
	DATATYPES	RNC Data types that need to be collected, separated by comma (.). Example: rncom,rnccfg
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	DOM_BATCH_SIZE	Number of DOMs to collect per batch. This option only use when REMOTE_COMPRESSION set to 'Y'. Set to value bigger than the exact number of DOMs to disable the batching mechanism. This option is only applicable to rncom datatypes. For rnccfg datatypes, set it to 'none'. Default: 50.

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	DOM_COLLECTION	To enable DOM file collection and processing: Set to 'Y' will instruct DA to collect and process the DOM file. Set to 'N' will stop DA from collecting the DOM file. DA will only process RNC file. (Available options : Y/N) This option is only applicable to rncm datatypes. For rncfg datatypes, set it to 'N'.
	SCRATCHAREA	Temporary directory for OM file processing. For REMOTE_COMPRESSION set to 'N', the SCRATCHAREA is located at DA server. For REMOTE_COMPRESSION set to 'Y', the SCRATCHAREA is located at remote server. If there are no local temporary directories are used, set the configuration to '\$LOCALDIR/tmp'. This option is only applicable to rncm datatypes. For rncfg datatypes, set it to 'none'.
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
	REMOTE_COMPRESSION	To allow compression on source files at the remote server before transfer to DA server. The collection interval for this option is 2 hours. Note: Only use this option for huge source files transfer on low network speed. This option is only applicable to rncm datatypes. For rncfg datatypes, set it to 'N'. (Available options : Y/N).
ntcdma_pdsn	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	RNCID	Source RNC ID on the network element
	SRCUSER	Source login user on the network element
	SRCPSWD	Source login password on the network element
	SRCDIR	Source network element data directory

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	VERSION	NE version release number
	DATATYPES	Data types that need to be collected, separated by comma (.). Example: om,faom,haom
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_osp	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	PSRCIP	Primary source IP address on the network element
	PSRCID	Primary source ID on the network element
	PSRCUSER	Primary source login user on the network element
	PSRCPSWD	Primary source login password on the network element
	PSRCDIR	Primary source network element data directory
	BSRCIP	Secondary source IP address on the network element
	BSRCID	Secondary source ID on the network element
	BSRCUSER	Secondary source login user on the network element
	BSRCPSWD	Secondary source login password on the network element
	BSRCDIR	Secondary source network element data directory
	PGMSCID	Source PGMSC ID on the network element
	USPID	Source USP ID on the network element
	DATATYPES	Data types that need to be collected, uspom
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N) Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_pvg	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element
	PGMSCID	Source PGMSC ID on the network element
	PVGID	Source PVG ID on the network element
	NODEID	Source Node ID on the network element
	SRCUSER	Source login user on the network element
	SRCPSWD	Source login password on the network element
	SRCDIR	Source network element data directory
	DATATYPES	Data types that need to be collected, separated by comma (.). Example: pvgsta
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_sdm	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address on the network element
	SRCID	Source ID on the network element

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	MSCNAME	Source MSC ID on the network element
	SRCUSER	Source login user on the network element
	SRCPSWD	Source login password on the network element
	SRCDIR	Source network element data directory (SDM)
	CBMSRCDIR	Source network element data directory (SDM)
	SRCOPT	Collection option. Available options are 'sdm' - collect from SDM source directory only, 'cbm' - collect from CBM source directory only, 'both' - collect from both SDM and CBM source directory
	DATATYPES	Data types that need to be collected, separated by comma (.). Example: sdmom
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	COLMULT	Y/N - Collect multiple files (15 or 30 minutes data interval) from source directory, if available
	MVSRC	Option on whether to move the files from source directory to destination directory (yes, no)
	SDMDDIR	SDM data destination directory. Must be specified if MVSRC=yes and SRCOPT=sdm or SRCOPT=both
	CBMDDIR	CBM data destination directory. Must be specified if MVSRC=yes and SRCOPT=sdm or SRCOPT=both
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
	MTXNAME	MTX Name with which the data source is associated. This parameter is only for users who upgrade from AFT to SDM/CBM and are not using CLI code. For other users, please set the value to be the same as MSCNAME. Note the value for this parameter must be the same as the value in msc_list.
ntcdma_uas	MARKET	Market ID with which the data source is associated

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address of the UAS element manager
	SRCID	Unique ID to identify this UAS
	SRCUSER	Source login user on the UAS element manager
	SRCPSWD	Source login password on the UAS element manager
	SRCDIR	Source network element data directory
	NODETYPE	NodeType in the source file name
	NODENAME	NodeName in the source file name
	REPORTNAME	ReportName in the source file name
	TIMEZONE	TimeZone in the source file name
	DATATYPES	Data types that need to be collected: uas
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1". Example source file name: <NodeType>.<NodeName>.OMs.<Report-Name>.Year.Mon.Date_HR.MN_<TimeZone>.csv
ntcdma_mxpt	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address (Use "localhost" if the MassExport files are pushed to the DA server)
	SRCID	Source MTX Name
	SRCUSER	Source login user
	SRCPSWD	Source login password
	SRCDIR	Source network element data directory
	DATATYPES	Data types that need to be collected: mxptom

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	PERIOD	Data collection period in minutes. Valid entries are: 30, 60.
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_pdsn16000	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address (Use "localhost" if the MassExport files are pushed to the DA server)
	SRCID	Source PDSN ID
	SRCUSER	Source login user
	SRCPSWD	Source login password
	SRCDIR	Source network element data directory
	DATATYPES	Data types that need to be collected: pdsn16000om
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	PERIOD	Data collection period in minutes. Valid entries are: 30, 60.
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_mg	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address
	SRCID	MSC Name
	MTXNAME	MTX Name
	SRCUSER	Login account user for SDM, CBM
	SRCPSWD	Login account password for SDM, CBM
	SRCDIR	Source directory
	DATATYPES	Name of the Data Type (ntmsta)
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	MVSRC	Option on whether to move the original source files to other directory (yes, no)
	DDIR	'closedSent' directory
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".
ntcdma_ntmmdm	MARKET	Market ID with which the data source is associated
	TGTDIR	Target directory on the Prospect server to which the data is to be transferred
	SRCIP	Source IP address
	SRCID	MSC Name
	SRCUSER	Login account user for MDM
	SRCPSWD	Login account password for MDM

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

Table 3: Host Configuration File Field Descriptions

<i>Variable</i>	<i>Field</i>	<i>Description</i>
	SRCDIR	Source directory
	DATATYPES	Name of the Data Type (ntmsta)
	TMADJ	Time adjustment. If the source and DA server are in the same timezone, then set it to "0". Otherwise, DA time is 8am, source time is 7am, set TMADJ to "60". DA time is 8am, source time is 9am, set TMADJ to "-60".
	MVSRC	Option on whether to move the original source files to other directory (yes, no)
	DDIR	'closedSent' directory
	SECURERETRIEVE	Use normal ftp (0) or scp (1) when retrieving files from remote server
	SECUREDELIVER	Use normal ftp (0) or scp (1) when transferring files to Prospect server
	PSWD_AUTH	Allow password-based authentication for ssh connection (available options : Y/N). Will be used only if SECURERETRIEVE/SECUREDELIVER is set to 1".

Calculating the Space for SCRATCHAREA for rncom Datatypes

This section describes how you can calculate the space needed by the SCRATCHAREA temporary directory for the processing of rncom datatypes. To do so, you must provide the number of rnc and dom datatypes in the system.

To calculate the space, do as follows:

1. Run the command:

```
[flexda] $ rncom-spacecalc
```

2. Insert the total number of rnc datatypes when prompted:

```
Please insert no of RNC: 1
```

3. Insert the total number of dom datatypes when prompted:

```
Please insert no of DOM: 3
```

4. The command returns the estimated space needed by SCRATCHAREA (in MB):

```
Minimum size for SCRATCHAREA: 54 MB
```

Collecting OM Group Data in OMSHOW Format

Data Acquisition tools collect data from OM group files in OMSHOW format as defined in the OMSHOW configuration file, <hostname>.omshow.dist.icf.

The OMSHOW configuration file contains the information required for delivery of OMSHOW data to the Prospect server. After the data files are successfully transferred to the Prospect server, they are moved to the LOCALDIR for archiving.

OM Group File Name Format

The format for the OM group file name is as follows:

```
P_<timestamp><ne_id><om_group>
```

where:

<timestamp> is the file time stamp in YYYYMMDDHHMIMISS

<ne_id> is the value that represents the MTX ID

<om_group> is the OM group name

Example:

```
P_20021113160404M41caucpsct  
P_20021113160404M41causct3d  
P_20021113160404M41causct3v
```

Enabling OMSHOW Data Delivery

You can enable OMSHOW data delivery by doing the following:

To enable OMSHOW data delivery

1. Update the following variables in the OMSHOW configuration file:

- MTXID - Lists all the MTX IDs

Example:

```
set MTXID "MTX41 MTX42 MTX43 MTX44 MTX45 MTX47 MTX02 MTX48 MTX50"
```

- OMTYPE - Lists all the OM groups

Example:

```
set OMTYPE "CAUCPSCT CAUSCT3D CAUSCT3V"
```

- NEID - The value that appears in the OM group file name for a specific MTX ID. Set each MTX ID to a respective NEID value.

Examples:

```
set NEID(MTX41) "M41"  
set NEID(MTX42) "M42"
```

- FILEFMT - The format of the OM group file

Example:

```
set FILEFMT(MTX41) "P_%T%M%O"
```

The MTX ID value (for example, MTX41) specified by NEID is the value of %M.

- OMSHOWDIR - The OMSHOW source directory

Example

```
set OMSHOWDIR "/usr/apps/WatchMark/FlexDA/data/MTXOH"
```

- FLEXDIR - The Prospect server ftpIN target directory

Example

```
set FLEXDIR "/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/ \
ftpIN/MTX12/in"
```

2. Once you have updated the OMSHOW configuration file, verify that there is a sendomshow.exp job entry in the crontab file <hostname>.ntcdma.cron.

Example:

```
* * * * * ksh -c ". /u/flexda/.kshrc; sendomshow.exp -i \
<hostname>.omshow.dist.icf -L /u/flexda/ \
log/omshow,omshow.,.log,1440,40000,7"
```

Sample OMSHOW Configuration File

The following is an example of the OMSHOW configuration file:

```
#
# TITLE:    NT OMSHOW DATA TRANSFER
#
# SITE:     LA
#
# HOST:     cala-nor
#
#
# ICF Variables:
#
#   ICFBIN           Location of ICF binaries.

set ICFBIN           "$env(FLEXDAHOME)/bin"

#
# Application Variables:
#
#   REMOTEHOST       Variable needed by icf_chat.exp same as MTXIP
#   MTXID            MTX ID
#   OMTYPE           OM Types
#   OMSHOWDIR        Source OMSHOW data directory
#   FILETIME         File modification time before transferring the OMSHOW
files
#
#   LOCALDIR         Local destination data directory
#   NDAYS            Number of days to keep files in FlexDA server

set REMOTEHOST       "127.0.0.1"
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
set MTXID          "MTX41 MTX42 MTX43 MTX44 MTX45 MTX46 MTX47 MTX49 MTX02
MTX48 MTX50"
#set OMTYPE        "OMMTX CAUCPSCT ICPCP"
set OMTYPE         "CAUCPSCT CAUSCT3V CAUSCT3D"

#
# Following are the placeholders that are used for the filename format:
#
# %T - Timestamp in YYYYMMDDhhmmss format
# %M - MTX Id appearing on the file
# %O - OM Group Name
#
# NEID($MTXID)     Is the MTXID name in the file
# FILEFMT($MTXID) Is the file's format (default in P_%T%M%O)

set NEID(MTX41)    "M41"
set FILEFMT(MTX41) "P_%T%M%O"

set NEID(MTX42)    "M42"
set NEID(MTX43)    "M43"
set NEID(MTX44)    "M44"
set NEID(MTX45)    "M45"
set NEID(MTX46)    "M46"
set NEID(MTX47)    "M47"
set NEID(MTX48)    "M48"
set NEID(MTX49)    "M49"
set NEID(MTX50)    "M50"
set NEID(MTX02)    "M02"

set OMSHOWDIR      "/usr/apps/WatchMark/FlexDA/data/MTXOH"
set FILETIME       "2"

set LOCALDIR       "/usr/apps/WatchMark/FlexDA/data/omshow"
set NDAYS          "7"

#
# Target Prospect Server Variables
#
# FLEXPMSHOST      Address of Prospect server
# FLEXUSER         User account on Prospect Server
# FLEXPMSWD        User password on Prospect Server
# FLEXDIR          Prospect Server dist destination directory

set FLEXPMSHOST    "10.4.129.13"
```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

```
set FLEXUSER      "flextr"
set FLEXPSWD     "flextr"
set FLEXDIR      "/u01/apps/WatchMark/FlexPM/Nortel/x/vendor/Nortel/MSC/
ftpIN/MTX10/in"
```

Adding Collection Sources After Installation

This section provides an example of how to add a new collection source after installation.

To add a new collection source, locate the detail variables in the host configuration file. Add the variables for the new source at the end. Make sure to add a continuation mark (\) at the end of the previous line if necessary. The following sample shows the section of the host configuration file with the information added.

```
set -A ntcdma_rnc                                     \
    ATL      $tdir  nnn.nnn.nnn.nnn  ems01  rnc02  emsuser  emspass  \
             $rncomsdir  rncom  0
```

Password Rotation

The Data Acquisition Tool can automate password rotation on network elements such as MTX, BSM, or CSP. This is done to prevent failures when logging on network elements that enforce password expiration after a certain number of days.

The files and scripts needed to implement automatic password rotation are generated during the setup procedure if you set the `CHGPSWD?` field to `Y` for any configured network elements.

The installation script `setconfig.ksh` creates two configuration files for password rotation:

- `icf_pswdfile.cfg`—stores the latest updated password. The installation script automatically creates and stores in this file a variable, `SWIP_LIST`, which contains the IP addresses and login user names for the servers that require password rotation.
- `sd.chgpswd.icf`—stores the username and IP address information for the servers the Data Acquisition Tool connects to. This file is automatically generated when the installation is complete.

The file `$/FLEXDAHOME/cfg/icf_pswdfile.cfg` maintains a list of current passwords for each network element accessed by the data acquisition tools scripts. This file is initialized during the setup procedure. At the same time, one `crontab` entry is created for each market that rotates the network element passwords once a week and updates the `icf_pswdfile.cfg` file. Options for the `cron` job, which runs at 9:45 a.m. every Tuesday, are defined in `<hostname>.ntcdma.cron`.

Note that, if any of the setup procedures needs to be executed again, the passwords for existing network elements in the `icf_pswdfile.cfg` script is not overwritten. For example, when running the setup script command, if the login/password for the network element (SDM) as described below is `flexda/flexda`,

```
set -A ntcdma_sdm \
    market1 $tdir 127.0.0.1 POM sdm01 flexda flexda \
        $sdmsdir $cbmsdir sdm sdmom 0 yes \
    yes $sdmddir $cbmddir \
        0 0 N
```

but the current password for the network element in the `icf_pswdfile.cfg` file is `flexda/abcd1234`,

```
set env(market1.pom_sdmpasswd) {abcd1234}
```

the password in the `icf_pswdfile.cfg` file remains `abcd1234` and the following information message is displayed:

```
setconfig.ksh: Setup ntcdma...

set_ntcdma.ksh: "market1.pom" password differs from the current password
listed in file /home/flexda/cfg/icf_pswdfile.cfg

set_ntcdma.ksh: The password for "market1.pom" in /home/flexda/cfg/
icf_pswdfile.cfg will remain
```

Directory Structure

The following table describes the directory structure for Data Acquisition tools files.

Table 4: Directory Structure

Directory	Description
\$FLEXDAHOME	Home directory for the flexda account
\$FLEXDAHOME/COMMON/bin \$FLEXDAHOME/COMMON/scripts	Contains common installation programs
\$FLEXDAHOME/<vendor>/scripts \$FLEXDAHOME/<vendor>/cfg	Contains Data Acquisition tools collection programs
\$FLEXDAHOME/INSTALL/ALL/scripts	Contains installation scripts. For example: install_flexda.ksh and setconfig.ksh
\$FLEXDAHOME/INSTALL/ALL/cfg	Contains default configuration file. For example: FlexDA.default.cfg
\$FLEXDAHOME/INSTALL/ALL/doc	Contains sample documents. For example, <hostname>.<vendor_abbrev><technology>.cfg.sample
\$FLEXDAHOME/INSTALL/localhost/cfg	Contains the local host configuration files. For example: FlexDA.<hostname>.cfg and <hostname>.<vendor_abbrev><technology>.cfg
\$FLEXDAHOME/flexpkg	Contains scripting tools as required, such as TCL
\$FLEXDAHOME/cfg	Contains the ICF file, where applicable. The format is as follows (note that all variable values are lower case): <market_name> . <network_element_name> .<datatype> . <direction>.icf
\$FLEXDAHOME/data	Contains the data files
\$FLEXDAHOME/log	Contains the checkpointlog files. The format is as follows (note that all variable values are lower case): <market_name> . <network_element_name> .<datatype> . <direction> .chk
\$FLEXDAHOME/bin	Contains program binaries

Table 4: Directory Structure (Continued)

Directory	Description
\$FLEXDAHOME/scripts	Contains Expect scripts or link files to the scripts in the \$FLEXDAHOME/COMMON/scripts and/or \$FLEXDAHOME/<vendor>/scripts folders
\$FLEXDAHOME/local	Contains user-defined files

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Installation and Setup

3 Troubleshooting

Data Acquisition tools produce detailed log files that you can use to monitor the data-acquisition process. The log files must be checked for the cause of a problem, which then needs to be resolved. If an error occurs, you are notified within the **cron** job cycle time that is set as long as your e-mail address is listed in `$FLEXDAHOME/.email/email.list`.

[Error Messages](#) on page 59 lists error messages, describes them, and tells you which corrective actions to take.

Data is sent from the network elements continuously. This means that the MTXOM parser and the Passport Statistics parser processes should be running continuously and must be monitored to check whether they have stopped.

If the process monitor detects a stopped process, it restarts the process to get it running again. For more information on the monitoring process, see [Appendix F: The Monitoring Process Configuration File](#) on page 105.

Data Acquisition tools also require the operating system TERM environment to be set for the cron to be executed properly. See section [TERM Environment Setting](#) on page 56 for more information.

Topics

- [Using E-mail for Error Notification](#)
- [Using Paging for Error Notification](#)
- [Recovering Data](#)
- [TERM Environment Setting](#)
- [Restrictions for the Message of the Day](#)

Using E-mail for Error Notification

The script `check_error.pl` is run every 30 minutes and checks all log files for errors. If an error is found, the script sends notification e-mail to pertinent addresses in the mail list, `$FLEXDAHOME/.email/email.list`. You add e-mail addresses to `$FLEXDAHOME/.email/email.list`, one address on each line. The e-mail files are archived in the `$FLEXDAHOME/log/emaillog` directory.

Using Paging for Error Notification

The paging function is designed to quickly notify you of any errors that occur in the data acquisition server. The function uses a paging script, `page_error.pl`, which runs every 30 minutes and checks all log files for Fatal and/or Error messages. The paging function sends a short message to pager numbers listed in the `$FLEXDAHOME/.email/pager.list` file. This file contains entries similar to the following:

```
1234567@alphapage.acme.com
```

To be immediately notified of a fatal error, you can add `FATAL` to the end of the entry as follows:

```
1234567@alphapage.acme.com<Tab>FATAL
```

Recovering Data

You might need to retrieve data from previous intervals, troubleshoot failed data transmissions, or check on the status of retrieved data. Data Acquisition tools use checkpoint files to log the status of data transferred to the data acquisition server.

The Interval Checkpoint Facility (ICF)

Data Acquisition tools use the Interval Checkpoint Facility (ICF) process to manage data files that are created at predetermined time intervals. Checkpoint files are maintained to track files that have been processed. An ICF package provides commands to create, access, and update a checkpoint file. Using ICF commands, scripts can be written to perform, retry and log the status of an action that is repeated at regular intervals. This capability enables ICF to perform activities such as producing reports and retrieving data files at regular intervals.

Note: (For data that is delivered continuously, such as AFT Reader data, Data Acquisition tools use a monitoring tool and do not use this function.)

Checkpoint File Format

Checkpoint files contain the default retry and entries information for the network elements or data collection points. You can modify the checkpoint files as needed. The checkpoint files are located in `$FLEXDAHOME/log` and are in the following format:

```
PERIOD=3600
ENTRIES=96
RETRIES=9
010906120000 3b97c7b0 s 010906140024 0000
```

The first three lines determine the period length in seconds, the number of entries in the checkpoint file, and the number of times a failed transfer is retried. The fourth line and all subsequent lines contain information about a specific data transfer attempt. The format of the fourth line is shown in the following table.

Table 5: Format of the Data Transfer Attempt for the Fourth and Subsequent Lines

<i>Field</i>	<i>Description</i>
010906120000	Data time interval
3b97c7b0	Numerical representation of date and time.
s	Status of file transfer
010906140024	Time when script was run
0000	Number of transfer attempts

The file transfer status can be one of the following shown in the following table.

Table 6: File Transfer Status Descriptions

<i>Status</i>	<i>Description</i>
n	New file
s	Successful file transmission
r	Failed file transfer will be retried
x	Failed file transfer and retries have exceeded the maximum limit
a	Start over

You can retrieve a file for a previous interval by changing the status field to **a**. You can also change the number of entries each checkpoint file contains by changing the `ENTRIES` value in the second line. Once the checkpoint file contains the maximum number of entries, new entries replace the oldest ones.

Note: Make sure that source data exists for each data type collected by the data acquisition process. If source data consistently arrives late, you should adjust the value of the `TMADJ` field in the host configuration file accordingly. For example, if data regularly arrives 30 minutes late, and the value of `TMADJ` is 15, then add 30 to this value so that `TMADJ` becomes 45.

The Data Retrieval Process

The steps involved in the data retrieval process are as follows:

1. The time information is compared between the network element and the entries in the checkpoint file. If there is any new time interval data that can be retrieved, a new entry is created in the checkpoint file and is given a status of **n**. If the total entries in the checkpoint file exceed the number of entries defined in the `ENTRIES` parameter, the oldest entry in the file is deleted.
2. Starting at the top of the checkpoint file, each entry is read to see if it needs to be processed (that is, if it has **n** or **r** status). If such an entry is found, the data retrieval process begins.

3. If the data retrieval process completes successfully, the status is updated to **s**; Otherwise, the status is set to **r** and the retry count increments by 1. If the retry count reaches its maximum (defined by the `RETRIES` parameter), the status changes to **x**.
4. The process of looking for entries appropriate for data retrieval continues until all the entries in the checkpoint file are read.

TERM Environment Setting

In some cases the cron that are generated to run `icf_chat.exp` for data retrieval on the DAT server failed to be executed due to a missing TERM environment setting.

The following log shows a situation where the telnet session to the network element failed due to a missing TERM value on the DAT server:

```
icf_chat.exp: 080126151504: Debug: Setup: ICFBIN = /u01/apps/WatchMark/
flexda/bin
icf_chat.exp: 080126151504: Debug: Setup: ICFSCRIPT = /u01/apps/WatchMark/
flexda/scripts
icf_chat.exp: 080126151504: Debug: Setup: ICFTABLE = /u01/apps/WatchMark/
flexda/log/des-moines.pgmscpom.sdmom.dist.chk
icf_chat.exp: 080126151504: Debug: Setup: ICFAPP = /u01/apps/WatchMark/
flexda/scripts/pgmcsdmomdist.exp
icf_chat.exp: 080126151504: Debug: Setup: ICFBEHIND = 0
icf_chat.exp: 080126151504: Debug: Setup: ICFDELAY = 0
icf_chat.exp: 080126151504: Debug: Setup: ICFIGNBEF = 0
icf_chat.exp: 080126151504: Debug: Setup: ICFIGNAFT = 23
icf_chat.exp: 080126151504: Debug: Setup: ICFMINBEF = 0
icf_chat.exp: 080126151504: Debug: Setup: ICFMINAFT = 23
icf_chat.exp: 080126151504: Debug: Setup: PAST_DAYS = 0
icf_chat.exp: 080126151504: Info: Using date 080126151504
icf_chat.exp: 080126151504: Debug: Processing interval 080125153000, period
30 min
icf_chat.exp: 080126151504: Debug: Running icf_data_generate
icf_chat.exp: 080126151504: Debug: Running icf_data_retrieve:
POM*.01_25_2008.15[3-5][0-9].URDLIACBCM1.*.CSV
icf_chat.exp: 080126151505: Debug: Using transfer retrieval command :
batchftp.exp -f -t 900 <ne_ip> <ne_user> '<ne_pswd>' /omdata/closedNotSent
POM*.01_25_2008.15[3-5][0-9].URDLIACBCM1.*.CSV
icf_chat.exp: 080126151525: Debug: Concatenate file command : cat
POM1.01_25_2008.1553.URDLIACBCM1.OT.CSV >> /u01/apps/WatchMark/flexda/
data/des-moines.pgmscpom/sdmom/tmp/URDLIACBCM1.200801251500.SDMcsv
icf_chat.exp: 080126151525: Debug: Concatenate file command : cat
POM2.01_25_2008.1553.URDLIACBCM1.OT.CSV >> /u01/apps/WatchMark/flexda/
data/des-moines.pgmscpom/sdmom/tmp/URDLIACBCM1.200801251500.SDMcsv
icf_chat.exp: 080126151526: Debug: Transferring file to Prospect server :
batchftp.exp -t 900 -p -m /u01/apps/WatchMark/flexda/data/des-
moines.pgmscpom/sdmom/dist <prospect_ip> <prospect_user> '<prospect_pswd>'
```

```
/u01/apps/WatchMark/FlexPM/NortelMTX/vendor/Nortel/MSC/ftpIN/MTX14/in
URDLIACBCM1.200801251500.SDMcsv.gz
icf_chat.exp: 080126151527: Debug: Deleting file command : rm -Rf
*URDLIACBCM1*
icf_chat.exp: 080126151527: Debug: Making telnet/SSH connection to <ne_ip>
icf_chat.exp: 080126151612: Fatal: No response to password for ssflexpm
```

To troubleshoot this problem, log on to the DAT server and check the TERM value:

```
$ echo $TERM
```

Because the TERM environment setting is missing, there should be no value returned.

If so, perform the following steps:

1. Log on to the DAT server using the DAT user (usually flexda).
2. Go to the \$FLEXDAHOME directory:

```
$ cd $FLEXDAHOME
```
3. Change the permission of file .kshrc:

```
$ chmod 644 .kshrc
```
4. Make a copy of the existing .kshrc file:

```
$ cp .kshrc .kshrc.bak
```
5. Modify file .kshrc by adding the following values at the bottom of the file:

```
TERM=xterm
export TERM
```

The following is an example of a .kshrc file that has been modified:

```
.
.
typeset -x PS1='${USER}@${HOST}% '

function list_ {
    echo : ${1}= ; /usr/ucb/printenv "${1}" | tr ":" "\n" | cat -n ; echo :
}

set -o ignoreeof
set -o vi

TERM=term
export TERM
```

Note that xterm is a value normally acceptable in a Solaris environment. Refer to your system administrator for a value appropriate to your environment.

6. Save and close the .kshrc file and change its permissions:

```
$ chmod 444 .kshrc
```

7. Log off and log on again using the DAT user to ensure that the updated environment takes effect.

Restrictions for the Message of the Day

The following list shows the words and characters that cannot be used in Message of the Day (failure to comply might cause an error or an unpredictable behaviour of Data Acquisitions):

- "word: "
- "no such file or directory"
- "permission denied"
- "% "
- "# "
- "> "
- "\$ "
- "not found"

Appendix A: Error Messages

This section lists error messages, describes them, and tells you which actions to take to correct them.

Table 7: Error Messages

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
bsmomdist.exp	Connection to \$REMOTEHOST failed	Cannot establish connection to the \$REMOTEHOST	Check REMOTEHOST in .icf file
	No response to login for \$BSMUSER	No response after sending \$USERNAME to host	Check the BSMUSER variable in the .icf file
	No response to password for \$BSMUSER	No response after sending password to host	Check the BSMPSWD variable in the .icf file
	Time-out waiting for remote date	Expect script timed out waiting for remote date	Manually run date command on BSM to check the format
	Remote date not received	Expect script timed out waiting for remote date	Manually run date command on BSM to check the format
	Error occurred while retrieving files from \$BSMIP	batchftp.exp failed when retrieving files from BSM	Log on to BSM and verify all the files exist in \$BSMOMDIR directory in .icf file
	BSM OM files starting with \$fname are not supported	The current supported fnames are: "MCBTS-Subsystem, SBSCSubsystem, cdsuperf, cdsuperf_new, BSC". Any file name other than those will cause this error	Check FILENAME in .icf file
	Error occurred while distributing files	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-MHOST in .icf file

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
bsmcfgdist.exp	Connection to \$BSMIP failed	Cannot setup connection to the host	Check BSMIP in .icf file in cfg directory
	No response to login for \$BSMUSER	No response after sending \$USERNAME to host	Check the BSMUSER in .icf file
	No response to password for \$BSMUSER	No response after sending password to host	Check the BSMPSWD in .icf file
	Time-out waiting for remote date	Expect script timed out waiting for remote date	Manually run date command on BSM to check the format
	Error occurred while distributing files	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD icf .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
mtxomdist.exp	Connection to \$MTXIP failed	Cannot setup connection with the host	Check the MTXIP in mtxomdist.exp file in CFG directory
	No response to login for \$MTXUSER	No response after sending \$USERNAME to host	Check the MTXUSER in .icf file
	No response to password for \$MTXUSER	No response after sending password to host	Check the MTXPSWD in .icf file
	Timed out waiting for remote date	Expect script timed out waiting for remote date	Manually run date command on MTX to check the format
	No OM data file for this interval	No file exist in \$LOCAL_OMDEST for this interval	Check whether MTXOM preparer is generating OM files
	Remote MTX date not received	Expect script timed out waiting for remote date	Manually run date command on MTX to check the format
	Error occurred while retrieving tables_cfg data	Expect script could not get data from MTX tables	Check MTXTABLES in .icf file in cfg directory
	Error occurred while retrieving trkmem_cfg data	Expect script could not get trunk member data from MTX	Check the MTX version

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Error occurred while processing trkmem files	Trunk member pre-processing failed	Check the MTX version
	Error occurred while retrieving subscr_cfg data	Expect script could not get subscriber data from MTX	Check the MTX version
	Error occurred while combining om_trkmem files	Problem occurred while concatenating OM and Trunk Member data from MTX	Manually concatenate two files to check the system function properly
	Error occurred while combining trkmem_subscr files	Problem occurred while concatenating Subscriber and Trunk Member data	Manually concatenate two files to check the system function properly
	Error occurred while delivering files	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
ppcstaget.exp	Connection to \$REMOTEHOST failed	Cannot setup connection to the host	Check REMOTEHOST in .icf file in cfg directory
	No response to login for \$PPCUSER	No response after sending \$PPCUSER to host	Check the PPCUSER in .icf file
	No response to password for \$PPCUSER	No response after sending password to host	Check the PPCPSWD in .icf file
	Time-out waiting for remote date	Expect script timed out waiting for remote date	Manually run date command on NE to check the format
	Error occurred while retrieving files from \$PPCIP	batchftp.exp failed when retrieving files from PPC	Log on to NE and verify all the files exist in \$PPCDIR directory in .icf file
	Error occurred while distributing files	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
sendppcsta.exp	Error occurred while sending files to \$FLEXP-MHOST	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	Error occurred while moving files to \$LOCALDIR	Problem occurred while moving files to \$LOCALDIR	Check LOCALDIR in .icf file

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
sendomshow.exp	Error occurred while sending files to \$FLEXP-MHOST	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	Error occurred while moving files to \$LOCALDIR	Problem occurred while moving files to \$LOCALDIR	Check LOCALDIR in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
nt_mtxom_parse	Unable to open directory %s	Cannot open directory	Check if the directory exists, if not, create the directory
	F=%s B=%lu: Invalid input block size (%u)	The input block size is invalid	Check nt_mtxom_parse -b option, the correct size should be 2K
	F=%s B=%lu: Invalid block length (%u)	The block length is invalid	Check the aft_reader or MTX switch
	F=%s B=%lu R=%u P=%u: Record too small (%u)	The record is too small	Check the aft_reader or MTX switch
	Partial file %s terminated in %s section	The input file is not complete	Check the aft_reader or MTX switch
	Unexpected record (seqno=%u, type=%c)	Receiving unexpected record in input file	Check the MTX version
	Memory allocation failure	Cannot allocate memory for the process	Check with the system administrator or IBM Technical Support
	Incorrect timestamp in the filename: %s	The input file name has incorrect time stamp	Check the aft_reader
	Unable to open the file: %s	File cannot be opened	Check the owner or permission of the file and directory
	%s: Ignoring bad key number %u	Bad key number maximum = %u	Check the MTX switch version
	%s: Too many fields in group (count=%u, max=%d)	Too many fields in group	Check the MTX switch version
	%s: Too many infos in group (count=%u, max=%d)	Too much info in group	Check the MTX switch version

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	%s(%s): Unexpected data row %d(max=%u)	Unexpected data	Check the MTX switch version
	Missing required configuration option (-C <file>:<n>)	Missing required '-C' flag.	Add the '-C' flag to the command line.
	Missing required group description file (-C <file>:<n>)	Missing required group description file name.	Add the group description filename to the '-C' flag argument.
	Missing required number of groups (-C <file>:<n>)	Missing required number of supported groups.	Determine the number of groups supported by this MTX, and add this number to the '-C' flag argument.
	Invalid number of groups - <n>	Invalid number of supported groups specified using the '-C' flag.	Check the number of supported groups specified in the '-C' flag.
	Empty included group description list	Group description list file contained no group descriptions.	Check the group description file.
	Could not open group description file <filename> (errno=<x>)	The group description <filename> could not be opened, unix errno=<x>.	Check that the group description file exists and is readable.
	Invalid group description file entry: <entry>	The group description file <entry> is not valid.	Correct the format of <entry> in the group description file.
	Included group description list object operation failure	The parse process was unable to allocate the group description list.	Memory allocation error. Check with your system administrator.
nt_aft_reader	Cannot determine current directory (errno= %ld)	Directory failure	Check aft_reader argument <destdir>
	Going down due to inactive source AFT server	AFT server is inactive	Check the MTX switch
	Conflicting command-line option	Command-line option incorrect	Check the -h option of aft_reader
	Unknown option or missing option value -%c	Command-line option incorrect	Check the -h option of aft_reader
	Invalid option value %s or %-c	Command-line option incorrect	Check the -h option of aft_reader
	Invalid %s argument value=%s	Command-line option incorrect	Check the -h option of aft_reader

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Missing required %s argument	Command line option incorrect	Check the -h option of aft_reader
	%s initialization failure	Cannot initialize the aft_reader	Make sure no other aft_reader connected to MTX before initialization
	%s: Memory allocation failure	Memory allocation failure	Check the system
	%s: %s mechanism failure	Mechanism failure	Check MTX switch version
nt_ppcsta_parse	Configuration option required (-C <rdf>::cfg)	Missing required configuration option	Ensure that a valid parser configuration option was specified
	Invalid configuration option (-C <optarg>)	Invalid configuration option	Check the specified parser configuration option
	Invalid network element name (<arg1>)	Invalid network element argument	Check the specified network element argument
	Unable to open directory "<dest>", error = <unix_errno>	The destination directory could not be opened	Verify specified destination directory existence and permissions
	Unable to open file "<fname>", error = <unix_errno>	The specified input or output file could not be opened	Verify file and directory permissions
	Unable to move "<sfile>" to "<dfile>", error = <unix_errno>	The source file could not be moved to the destination file	Verify file and directory permissions
	Unable to remove file "<fname>", error = <unix_errno>	File could not be removed	Verify file and directory permissions
	Error loading RDF file "<fname>"	The RDF file could not be loaded	Check the input RDF file
	Invalid RDF input file line "<input_line>"	The specified RDF file input line is invalid	Check the syntax of the specified RDF file input line
	RDF table contains no valid entries	The input RDF file has no valid entries	Check the input RDF file
	Config list contains no valid entries	The input configuration file has no valid entries	Check the input configuration file

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	RDF table is full -- ignoring entries after <max>	The input RDF file contains more entries than the specified maximum	Check the input RDF file
	Invalid CFG input file line "<input_line>"	The input configuration file is in error	Check the syntax of the specified configuration file input line
	Memory allocation error	Unable to allocate memory	Check with your system administrator
	List insert error	Unable to insert an entry in the configuration list	Check with your system administrator
	Invalid field number <n> (File: <fname> Record: <recno>)", 3	A required BDF or RDF required input field is missing	Check the input BDF and RDF files
	No config file entry for <ifc> (File: <fname> Record: <recno>)	The indicated interface has no entry in the configuration file	Ensure there is a config file entry for the input interface
mcomdist.exp	Error occurred while retrieving files from \$REMOTEHOST	batchftp.exp failed when retrieving files from REMOTEHOST	Log on to switch and verify all the files exist in \$EMSBASEDIR directory in .icf file
	Error occurred while archiving files	Unable to archive files	Check if tar is installed
	Error occurred while compressing file	Unable to compress data file	Check if gzip is installed
	Error occurred while transferring files to \$FLEXP MHOST	batchftp.exp failed when sending files to \$FLEXP MHOST	Check FLEXP MHOST, FLEXUSER, FLEXPSWD in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
	Unable to get directory list for \$baseDir : \$errmsg	Failure to read directory \$baseDir on \$REMOTEHOST	Log on to switch and verify the directory exists and the DA user has read access to it
	Unable to get file list for \$filelist : \$errmsg	Failure to read file \$filelist from directory \$baseDir on \$REMOTEHOST	Log on to switch and verify the directory/files exists and the DA user has read access to it

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Unable to copy file(s) \$filelist : \$errormsg	Failure to copy file \$filelist from directory \$baseDir on \$REMOTE- HOST to local directory	Log on to switch and ver- ify the directory/files exists and the DA user has read access to it. Ver- ify that the local DAT server has enough space to copy the file from REMOTEHOST
	Error in creating file \$fileName in \$LOCALT- MPDIR : \$out	Failure to create file \$fileName on local direc- tory \$LOCALTMPDIR	Log on to DA server and verify that directory \$LOCALTMPDIR exists and the DA user has read and write access to it. Verify that the local DAT server has enough space
	Error occurred while ini- tializing tmp diretory \$LOCALTMPDIR : \$out"	Failure to initialize local directory \$LOCALTMP- DIR	Log on to DA server and verify that directory \$LOCALTMPDIR exists and the DA user has read and write access to it. Verify that the local DAT server has enough space
	Unable to retrieve config file \$cfgFileName : \$out- put"	Failure to retrieve con- figuration file candidat- erncquery<date>.txt from \$REMOTEHOST	Log on to switch and verify the file exists on the specified directory and the DA user has read access to it
	No candidate RNC con- figuration is available : \$cfgFileName	Failure to find the candi- date RNC configuration file from \$REMOTE- HOST or from \$LOCALDIR	Verify that the configura- tion file exists on the REMOTEHOST and the DA user has read access to it
	Error occurred while extracting \$fileName in \$LOCALTMPDIR: \$out	Failure to execute the timestamp retrieval pro- cess on the *.RNCpm file	Verify that the local DAT server has enough space to perform this operation
	Error occurred while cre- ating gzip file \$LOCALTMPDIR/\$file- Name.gz : \$out	Failure to create the gzip file \$LOCALTMPDIR/ \$fileName.gz	Verify that the local DAT server has enough space to perform this operation
	Error occurred moving file \$LOCALTMPDIR/ \$fileName.extract to \$LOCALDIR: \$out	Failure to move file from \$LOCALTMPDIR/\$file- Name.gz to \$LOCALDIR	Verify that the local DAT server has enough space to perform this operation

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
mcomdist_rmt.exp	Invalid remote directory: \$baseDir	Failed to go to remote directory.	Make sure the remote directory exist.
	Cannot access \$baseDir. Permission denied.	Failed to read remote directory.	Make sure the remote directory readable.
	No space in \$TEMPDIR	Not enough space at \$TEMPDIR to write data.	Make sure the \$TEMPDIR have enough space. Use rncom-spacecalc to calculate default required space.
	Connection to host \$REMOTEHOST failed	Cannot connect to \$REMOTEHOST	Make sure \$REMOTEHOST is accessible from DA server.
	No response to password for \$SEMSUSER	Remote host not response after DA server sent login password.	Make sure connection to \$REMOTEHOST is in good health.
	Error occurred while retrieving files from \$REMOTEHOST	batchftp.exp failed when retrieving files from REMOTEHOST	Log on to switch and verify all the files exist in \$EMSBASEDIR directory in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
	No candidate RNC configuration is available in DA server and EMS server: \$cfgFileName	Failure to find the candidate RNC configuration file from \$REMOTEHOST or from \$LOCALDIR	Verify that the configuration file exists on the REMOTEHOST and the DA user has read access to it
	Error occurred while extracting \$fileName in \$LOCALTMPDIR: \$out	Failure to execute the timestamp retrieval process on the *.RNCpm file	Verify that the local DAT server has enough space to perform this operation
	Error occurred while renaming \$fn.extract to \$fn : \$out	Failure to rename temporary extract file to Prospect file	Verify that the file is writable
	Error occurred while zipping \$fn in \$LOCALDIR: \$out	Failure to compress the Prospect file	Verify that the file is writable
	Error occurred while processing file \$fileName.\$dateStr.*.gz for interval \$rncTimeStamp.	Failure to process one of, or all batch file(s) for interval \$rncTimeStamp	Verify all the batch files exist, readable and contain good data.

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Error occurred in transferring files to \$FLEXP-MHOST: \$output	Failure to send DA result file to Prospect	Verify Prospect server is up and connected. Verify the target directory is writable.
	Partial data set detected. Will retry until max retry count or complete set is received.	Failure to process one of, or all batch file(s) for interval \$rncTimeStamp	Verify all the batch files exist, readable and contain good data.
mccfgdist.exp	Error occurred while retrieving files from \$REMOTEHOST	batchftp.exp failed when retrieving files from REMOTEHOST	Log on to switch and verify all the files exist in \$EMSBASEDIR directory in .icf file
	Error occurred while archiving files	Unable to archive files	Check if tar is installed
	Error occurred while compressing file	Unable to compress data file	Check if gzip is installed
	Error occurred while transferring files to \$FLEXP-MHOST	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
mtxactlogdist.exp	Connection to \$MTXIP failed	Cannot establish connection to the \$REMOTEHOST	Check MTXIP in .icf file
	No response to login for \$MTXUSER	No response after sending \$USERNAME to host	Check the MTXUSER variable in the .icf file
	No response to password for \$MTXUSER	No response after sending password to host	Check the MTXPSWD variable in the .icf file
	Time-out waiting for remote date	Expect script timed out waiting for remote date	Manually run date command on BSM to check the format
	No response to logutil	No response after running logutil on the switch	Manually run logutil on the switch to check the system function properly
	File (\$files) is zero-sized	Files generated is zero-sized	Verify that the specific logs are defined on the switch
	Error occurred while compressing file	File compression failed on local machine	Contact IBM Technical Support for help

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Error occurred while distributing files	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
mtxcaplogdist.exp	Connection to \$MTXIP failed	Cannot establish connection to the \$REMOTE-HOST	Check MTXIP in .icf file
	No response to login for \$MTXUSER	No response after sending \$USERNAME to host	Check the MTXUSER variable in the .icf file
	No response to password for \$MTXUSER	No response after sending password to host	Check the MTXPSWD variable in the .icf file
	Time-out waiting for remote date	Expect script timed out waiting for remote date	Manually run date command on BSM to check the format
	No response to logutil	No response after running logutil on the switch	Manually run logutil on the switch to check the system function properly
	File (\$files) is zero-sized	Files generated is zero-sized	Verify that the specific logs are defined on the switch
	Error occurred while compressing file	File compression failed on local machine	Contact IBM Technical Support for help
	Error occurred while distributing files	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	Error occurred while purging files	Purging files failed on local machine	Contact IBM Technical Support for help
ntuasdist.exp	Error occurred while retrieving files from \$REMOTEHOST	batchftp.exp failed when retrieving files from UAS element manager	Log on to UAS and verify the files exist in \$SRCDIR directory. File name: <Node-Type>.<Node-Name>.OMs.<ReportName>.Year.Mon.Date_HR.MN_<TimeZone>.csv
	Error occurred while transferring files to \$FLEXP-MHOST	batchftp.exp failed when sending files to \$FLEXP-MHOST	Check FLEXP-MHOST, FLEXUSER, FLEXP-SWD in .icf file
	\$LOCALDIR directory does not exist	\$LOCALDIR specified in .icf file does not exist	Make sure the setup script runs correctly

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

Table 7: Error Messages (Continued)

<i>Application</i>	<i>Error</i>	<i>Cause</i>	<i>Action</i>
	Error occurred while purging files in \$LOCALDIR	Purging files failed on local machine	Contact IBM Technical Support for help

Appendix B: Network Element Setup

Setting Up the Network Elements

You need to set up the command prompt pattern, and then assign user account permissions for each network element for telnet/SHH and FTP/scp access.

To set up the command prompt pattern

- Make sure you set the command prompt to one of the following patterns:

```
*$<space>  
*%<space>  
*#<space>  
*><space>
```

Where * is zero or more of any characters and *<space>* is one space.

To assign additional user account permissions for the MTX

1. To the user account for each MTX, assign execute permission to the following commands:

```
aft  
date  
table
```

Commands within `table`:

```
list  
quit
```

2. To the user account for each MTX, assign read permission to the following MTX Configuration Data tables:

```
C7RTESET  
C7LKSET  
CLLI  
CDMACONF      (CDMA only)  
CDMACELL      (CDMA only)  
CELLINV       (AMPS/TDMA only)  
ADJCELL       (AMPS/TDMA only)  
PARTDATA      (AMPS/TDMA only)
```

PARTDAT2 (AMPS/TDMA only)
PWRCTRL
HOPARMS
VCHINV
CELLULAR
TRKMEM

3. To the user account for each MTX, assign read permission to the following MTX Operational Measurements (OM) AFT Definition tables:

OMACC
OFCOPT
OFCVAR
OFCENG
OMTAPE
GASINFO
RASLAPPL
DIRPPPOOL
DIRPSSYS
IPTHRON
IPHOST
IPNETWRK
IPROUTER
LIUINV
PMLOADS

To assign additional user account permissions for the BSM

1. To the user account for each BSM, assign execute permission to the following commands:

cliapp

2. Within cliapp, assign execute permission to the following commands

list -rn
shell
script

Note: The CSP platform requires BSM user account access.

Appendix C: Management Data Provider (MDP) Statistics Files Setup

This appendix describes how to set up and configure the components of the Management Data Provider (MDP) to provide Passport statistics files.

Note: This description is intended to supplement but not to replace corresponding descriptions found in the following Nortel document:

- *Preside Multiservice Data Manager, Management Data Provider User Guide, 241-6001-309*
-

Configuring Passport Data Management

The following procedure describes how to configure the Passport data management capability.

To configure Passport data management

1. Log on as the MDP administrator
2. Run the MDP Administration Client

```
$ mdpconfig
```

A menu containing the following is displayed:

Configuration Main Menu

1. Set up billing and/or performance host(s)
2. Configure Passport Data Management
3. Passport Statistics Retrieval System (SRS)
4. Configure DPN Data Management
5. Configure Vector Data Management
6. Configure MDP Disk Manager
7. Configure File Mover
8. Configure Value Added Data Applications

- 9. Enable/Disable SNMP traps
 - 10. Get configuration files from another MDP host
 - 11. View Daily Logs
 - U. Undo changes and exit
 - S. Save changes and exit
- Select [1-11,U,S]:

- 3. Select option 2—Configure Passport Data Management.
 - a. Choose option "1. Set log level" and enter 4
 - b. Select option "3. Conversion of data files"
 - Select option "2. Statistics Data"
 - Enter Y when prompted.
 - Type the field delimiter (:), if you type a different delimiter, the data is not processed correctly
 - Enter N when asked if you want to compress the output
 - Type 4 as the log level for the BDF converter
 - Return to main menu by typing R
- 4. Select option 6—Configure MDP Disk Manager
 - a. Enter the retention time of each data file accordingly.
 - b. Enter Y if you want save the changes.
- 5. In the main menu, type S to save changes and exit.

Passport Statistics Data Flow

The MDP acts as a data server for one or more Passport nodes and does the following:

- Retrieves binary format statistics files (Passport statistics files) from the Passport nodes
- Converts the Passport statistics files to Nortel ASCII Bulk Data Format (BDF) files
- Optionally transfers the BDF files to a downstream customer host.

The data acquisition server retrieves the BDF files from either the MDP or the downstream customer host, depending on the customer configuration, converts the files to Nortel BDFVIEW format, and transfers the converted files to the Prospect Loader. The conversion process is handled by the Passport Statistics Parser program. For more information, see [The Passport Statistics Parser](#) on page 95.

Naming Convention for the Passport Statistics File

For the Passport 7000/15000 statistics files, the naming convention is as follows

```
ppc_<dataType>_<YYYYMMDD>T<hhmmss>_<nodeID>_<seqNo>.bdf
```

where

<dataType> is the Passport data type. `sta` for statistics, `acc` for accounting, `log` for command logs.

<YYYYMMDD> is the date the file was opened on the switch

<hhmmss> is the time the file was opened on the switch

<nodeID|nodeName> is the node ID or node name in the Passport switch

<seqNo> is the file sequence number.

For example:

```
ppc_sta_20020926T000003_610_162.bdf
ppc_sta_20020922T180641_481_140.bdf
```

Note: The <nodeID|nodeName> variable is required when you set up Data Acquisition tools.

Using File Mover

The Passport statistics file can be transferred from a remote host by using the File Mover (`mdpdump`). The File Mover process periodically checks for the arrival of successfully converted files in each dump directory.

If you use File Mover, all files are purged from the MDM host and transferred to the remote host specified. However, if you don't use File Mover, the files are retained in the MDM host dump directory for a period specified in Disk Manager.

Note: When setting up Data Acquisition tools, you need to know the location of the Passport statistics file and the IP address of the host where the files are generated.

Starting File Manager Processes

File Manager processes are controlled by the MDP administration command (`mdpadm`) and are initially started automatically by `mdpconfigd` after the MDP is installed and configured.

To start file manager processes

1. Start the MDP administration command

```
$ mdpadm start
```
2. Verify that all the MDP processes have been started.

```
$ mdpadm display
```

Configuring Passport Switches

The file `PassportMap.cfg`, which is usually in `/opt/MagellanMDP/cfg/mdp`, is in ASCII format and is divided into the following two sections:

- **Member Definition**—contains records that list the node name and corresponding IP address of every Passport node in the network.

Insert a blank line after each record. These records are in the following format:

```
FMember: <nodename>
IPAddress: <IP_address>
NodeID: <node_ID>
```

Where:

<nodename> is a string of 1 to 12 uppercase alpha and numeric characters. This is the official node name of the Passport switch.

<IP_address> is the Internet Protocol address of the Passport switch.

<node_ID> is the nodeID of the Passport node. This is an optional field

- **Group Definition**—consists of a series of records that map the Passport members to a Passport group. These records have the following format:

```
FGroup: <group_name>
Member: <nodename>
.
.
.
Member: <nodename>
```

Where:

<group_name> is a string of 1 to 12 uppercase alpha and numeric characters. A group name must be unique throughout the system.

<nodename> is the node name of the Passport switch that is defined as a member in the Member Definition section.

Sample Configuration File

The following is a sample of a `PassportMap.cfg` file.

```
FMember: SANDIEG01
IPAddress: 10.16.68.157

FMember: MTX48B2CBRS1
IPAddress: 10.16.68.50

FGroup: PP15K
Member: SANDIEG01
Member: MTX48B2CBRS1
```

Setting up the File Prober

The File Prober (`mdprober`) is used to set up proxy FTP sessions to a Passport switch that transfers spooled data files to an MDM host.

To set up the File Prober

1. Define a job in the `crontab` file.

```
/opt/MagellanMDP/bin/mdprober -host <hostname>
-hup <HostUserID Password>
-data <DataType>
-g <PassportGroupName>
-up <PassportUserID Password>
-files <all>
-noerase
-rollover
-loglevel <4>
```

Where:

- host is the name of the MDM host
- hup is the userID and password on the MDM host
- data is the type of data you want to collect (`statistics` for statistics information, `log` for command log information, `alarm` for alarm information)
- g is the group name of the Passport switches
- up is the userID and password of the Passport group or Passport switch
- files is the maximum number of files transferred from a Passport switch
- noerase ensures that the File Prober does not delete the files from the Passport switch after the files have been transferred
- rollover closes open spool files on the Passport and opens new spool files before transferring the closed files to the MDM
- loglevel specifies the level of logs reported.

Sample cron Job

The following is a sample of the **cron** job.

```
0 * * * * /opt/MagellanMDP/bin/mdprober -host mdmhost -hup mdmuser pswd \  
-data statistics -g pp15k -up ppuser pswd -files all \  
-rollover -loglevel 4
```

```
0,30 * * * * /opt/MagellanMDP/bin/mdprober -host mdmhost -hup mdmuser pswd \  
-data statistics -g pp15k -up ppuser pswd -files all \  
-rollover -loglevel 4
```

Important: How often the File Prober (`mdpprober`) **cron** job runs determines how available the Passport statistics file is. Make sure you set the **cron** job to run every hour or half-hour. Always specify the `-rollover` option so that files in the Passport switch are closed at the specified **cron** job period. The period you specify in the **cron** job is used when you set up the Data Acquisition tools.

Care must be taken when using the `-noerase` option. This option causes the transferred statistics file to be retained in the Passport switch. Because `mdpprober` retrieves all closed statistics files, make sure that the `-noerase` option is not specified.

However, if a secondary MDP is used, you can specify the `-noerase` and `-rollover` option in the primary MDP and then schedule `mdpprober` in the secondary MDP at a later time, making sure not to specify the `-noerase` and `-rollover` options.

Appendix D: Automatic File Transfer (AFT) Software Setup

This appendix describes how to set up the automatic file transfer (AFT) software, which enables the MTX to transfer files to the data acquisition server.

Note: Portions of this description are intended to supplement but not replace corresponding descriptions found in the following Nortel documents:

- *Automatic File Transfer Application Guide, 411-2131-205*
 - *Basic Administration Procedures, 297-1001-300*
 - *Ethernet Interface Unit User Guide, 297-8991-910.*
-

Setting Up the AFT Software

The MTX is configured to route OM records to the DIRP subsystem. The DIRP subsystem is configured to make the OM records available to the AFT software. The AFT software is configured to transfer the OM to the data acquisition server using the Ethernet EIU hardware. The configuration process is as follows:

1. Define the EIU hardware.
2. Specify the EIU link and protocol information.
3. Define the DIRP OM subsystem.
4. Define the OM reporting class.
5. Start the AFT session.
6. Enable the OM reporting class.

This section provides the step-by-step procedure for setting up the EIU card(s), the AFT software, the DIRP, and the OM on the MTX. For steps that involve editing a table on the MTX, a sample listing of that table's modified contents is provided.

To set up AFT and its associated components

1. Define the node type and instance of the MTX by data filling the `NODE` parameter in table `OFCENG` as shown in the following example:

Table: OFCENG

```
-----
NODE      FOREIGN      0
```

2. Identify the EIU card(s) hardware to the MTX CM by data filling table `LIUINV` as shown in the following example:

Table: LIUINV

```
-----
LIUNAME      LOCATION      LOAD      PROCINFO      CARDINFO
-----
EIU  1  LIM  0 2 22  ECS09CK      NTEX22BB
                        NT9X84AA NT9X85AA  NO 000075F03080
EIU  2  LIM  0 3 16  ECS09CK      NTEX22BB
                        NT9X84AA NT9X85AA  NO 000075F03081
EIU  3  LIM  0 1 18  EDS09CK      NTEX22CA
                        NT9X84AA NT9X85AA  NO 000075F03082
EIU  4  LIM  0 3 28  EDS09CK      NTEX22CA
                        NT9X84AA NT9X85AA  NO 000075F03083
```

3. Indicate link and protocol information for the EIU card(s) by data filling tables `IPNETWRK`, `IPROUTER`, `IPHOST`, and `IPTHRON` as shown in the following examples:

Table: IPNETWRK

```
-----
KEYREF      CMIPADDR  SUBNET      OPTION
                        PARMAREA
-----
0           153 114 25 18      8      (  EIU  1) (  EIU  2) $
                        (          SCRFLAG N) $
```

In the previous example, the contents of field `CMIPADDR` is the TCP/IP host address of the MTX to which the Prospect AFT client connects.

Table: IPROUTER

```
-----
RKEY      ROUTER      SNIPADR      ETHIPADR  ETHARP  ETHPARP
-----
1          EIU  1 153 114 25 16 153 114 104 215  YES  YES
2          EIU  2 153 114 25 17 153 114 104 216  YES  YES
```


DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

3	EIU	3	153	114	25	14	153	114	81	9	YES	YES
4	EIU	4	153	114	25	15	153	114	81	10	YES	YES

Table: IPHOST

```

-----
INDEX  NODENAME                                     NODEINFO
-----
0      CM  0                                     32  8  8
1      EIU  1 153 114 25 16
                153 114 104 215 32  8  8
2      EIU  2 153 114 25 17
                153 114 104 216 32  8  8
3      EIU  3 153 114 25 14
                153 114 81  9 32  8  8
4      EIU  4 153 114 25 15
                153 114 81 10 32  8  8

```

Table: IPTHRON

```

-----
LMSNODE TXCAPCT RXCAPCT      OPTION
-----
EIU  1  40      40      $
EIU  2  40      40      $
EIU  3  40      40      $
EIU  4  40      40      $

```

Nortel recommends a setting of 40 kB/sec for IPTHRON parameters TXCAPCT and RXCAPCT, which control the IP transmit and receive throttle rate. However, performance problems could prevent hourly DIRP files from being transferred within one hour, which, in turn, could cause DIRP file collection to fall increasingly behind. In this case, increasing TXCAPCT and RXCAPCT up to their maximum value of 32767 might reduce the transmission time for individual files to one hour or less.

4. Configure the DIRP system by data filling tables DIRPPool and DIRPSSYS as shown in the following examples:

Table: DIRPPool

```

-----
POOLNO POOLNAME POOLTYPE DEVTYPE  VOLUME0  VOLUME1  VOLUME2  VOLUME3
VOLUME4  VOLUME5  VOLUME6  VOLUME7  VOLUME8  VOLUME9  VOLUME10 VOLUME11
VOLUME12 VOLUME13 VOLUME14 VOLUME15 VOLUME16 VOLUME17 VOLUME18 VOLUME19
VOLUME20 VOLUME21 VOLUME22 VOLUME23
-----
2      OM  REGULAR  DISK  F17LOM12 F02LOM12 F17LOM11 F02LOM11

```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
F17LOM10 F02LOM10 F17LOM9 F02LOM9 F17LOM8 F02LOM8 F17LOM7 F02LOM7
F17LOM6 F02LOM6 F17LOM5 F02LOM5 F17LOM4 F02LOM4 F17LOM3 F02LOM3
F17LOM2 F02LOM2 F17LOM1 F02LOM1
```

In the previous example, the `POOLNAME` (`OM`) is used to index into table `DIRPSSYS` shown in the following example entry. The device type is `DISK`, indicating that `OM` records should be stored on disk in the specified disk volume names.

```
Table: DIRPSSYS
-----
SSYSNAME READRITE NUMFILES MINFILES POOLNAME          FILENAME ALARM0
ALARM1
ALARM2 ALARM3 RETPD CRETPD PARLPOOL PARCONC MANDPALM FILEDATE SHEDDAYS
SHEDBASE SHEDINCR ROTACLOS AUTOXFER SPACROTE MAXDFSIZ PRIORTIO
-----
-----
      OM      Y      2      1      OM      $      CR      MJ
      NA      NA      1      1      $      N      NA FIRSTACT  YYYYYYY
      0      X1     BOTH     FULL     N      64      Y
```

5. Indicate the PM load for the XPM by data filling table `PMLOADS` as shown in the following example:

```
Table: PMLOADS
-----
LIUINAME      LOCATION      LOAD      PROCINFO
                                     CARDINFO
-----
EIU  1  LIM  0 2 22  ECS09CK      NTEX22BB
                                     NT9X84AA NT9X85AA NO 000075F03080
EIU  2  LIM  0 3 16  ECS09CK      NTEX22BB
                                     NT9X84AA NT9X85AA NO 000075F03081
EIU  3  LIM  0 1 18  EDS09CK      NTEX22CA
                                     NT9X84AA NT9X85AA NO 000075F03082
EIU  4  LIM  0 3 28  EDS09CK      NTEX22CA
                                     NT9X84AA NT9X85AA NO 000075F03083
```

The `LOAD` parameter name specified in table `LIUINV` is used to index into the table `PMLOADS` after switch upgrades to automatically update the `EIU`.

6. Identify the network connection and map the file transfer session to an `EIU` by data filling table `RASLAPPL` as shown in the following example:

```
Table: RASLAPPL
```

```

-----
NETCON      APTYPE  BUFFSIZE  NUMBUFFS
                                           ACSINFO
-----
OMAFT      AFT      2048      1
                                           TLI S 7531 153 114 25 18
    
```

Table RASLAPPL maps the AFT session to a data link. The IP address specified in the ACSINFO field of table RASLAPPL should be the same IP address as was specified in the CMIPADDR parameter in table IPNETWRK. This IP address and port number are used by the Prospect AFT client to connect to the AFT server running on the MTX.

7. Indicate the data transfer type and configure the subsystems by data filling table GASINFO as shown in the following example:

```

Table: GASINFO
-----
GASKEY                                           SPECS
-----
OMAFT AFT  OM          $ 1 15 FOREIGN  0
    
```

Table GASINFO maps the link defined in table RASLAPPL to the DIRP OM subsystem. The GASKEY value specified in table GASINFO should be the name entered for the NETCON field in table RASLAPPL, and the subsystem name portion of the SPECS field must be OM.

8. Specify the OM transfer period as shown in the following examples:

```

Table: OFCENG
-----
OMXFR      X30
    
```

The OMXFR parameter of table OFCENG specifies the interval marker for transferring active registers to holding registers and IPC active registers to CM active registers. This parameter fixes the IPC OM records interval time skew, which must be subtracted from all IPC OM records interval values to obtain the correct interval value.

```

Table: OFCOPT
-----
OMHISTORYON N
    
```

The value of this parameter in table OFCOPT must be N or the OMXFR in table OFCENG is ignored.

9. Instruct the system to transfer only D records that are in use as shown in the following example:

```
Table: OFCENG
-----
OMTAPESUPPRESSION      Y
```

It is important to set this parameter to `Y`. If the value of this parameter is `N`, then the number of D records equals the number of tuples that the system allocates for this group (1 to 16384), and the volume of data transferred is greatly increased.

10. Instruct the system to transfer only D records that are in use as shown in the following example:

```
Table: OFCENG
-----
TAPEXLATE      ASCII
```

This parameter determines the character code used in the DIRP OM file records, and the parameter must be set to `ASCII` for the MTX OM parser.

11. Define an accumulating class but do not enable the class as shown in the following example:

```
Table: OMACC
-----
CLASS      ENABLED  PRCSN      WHEN
-----
OMREPORT   N          DPRECISION  AUTO
```

12. Add OM groups to the defined class as shown in the following example:

```
OMACCGRP command
```

13. Route the class report to DIRP as shown in the following example:

```
Table: OMTAPE
-----
NUMBER ACTIVE      CLASS      WHEN
-----
0          Y          OMREPORT   AUTO
```

14. Set the tape archives office parameter option value as shown in the following example:

Table: OFCVAR

AFT_REMOVE_COPY_TO_TAPE Y

Specifying the value Y for this parameter allows DIRP files that have not been archived to tape to be automatically purged.

15. Start an AFT session as shown in the following example:

```
CI: RASL
RASLSTART net_conn
QUIT ALL
```

The value specified for `net_conn` should match the value in the `net_conn` field in table RASLAPPL (OMAFT in the provided example).

```
CI: AFT
STARTAFT
QUIT ALL
```

16. Enable the accumulating class and start data accumulation as shown in the following example:

Table: OMACC

CLASS	ENABLED	PRCSN	WHEN
OMREPORT	Y	DPRECISION	AUTO

Appendix E: Command Reference for Data Acquisition Processes

This appendix describes the commands for the following data acquisition processes:

- The AFT Reader, which is the user interface for the AFT software running on the MTX. See [Appendix D: Automatic File Transfer \(AFT\) Software Setup](#) on page 79.
- The MTXOM Parser, which converts MTXOM data files to the format expected by the Prospect Loader.

The AFT Reader

The AFT Reader is the user interface to the AFT software. See [Appendix D: Automatic File Transfer \(AFT\) Software Setup](#) on page 79.

Command Description

The command syntax is as follows:

```
nt_aft_reader [options] <port>[:tcp]@<host> <destdir>
```

Options

<i>Option</i>	<i>Description</i>
[-h]	Displays a list of options and arguments.
[-d debug]	Debug message level (default is 0): 0 = none 1 = debug, but no data dumps 2 = debug with data dumps 3 = debug with data and protocol dumps
[-L lfc]	Enable LFC logging based on template: <dir>,<prefix>,<ext>,,<space>,<keep>

<i>Option</i>	<i>Description</i>
[-n name]	Process identifier (for file logging)
[-s stats]	Statistics reporting interval, in seconds (default is 1800) 0=never
[-w datawd]	Incoming data watchdog timer interval, in seconds (default is 5400). 0=never

Arguments

<i>Argument</i>	<i>Description</i>
<port>[:tcp]@host	AFT server port address
<destdir>	Destination directory in which transferred AFT files are recreated

The MTXOM Parser

The MTXOM Parser enables the MTX to transfer OM records stored by the MTX Device Independent Recording Package (DIRP) subsystem to the data acquisition server. The files are converted to the format expected by the Prospect Loader.

The file transfer takes place over an Ethernet/TCP/IP interface using Nortel Automatic File Transfer (AFT) software and Nortel Ethernet Interface Unit (EIU) hardware.

Command Description

The command syntax is as follows:

```
nt_mtxom_parse -[options] <element> <input_source> <output_dest> <output fail>
```

Options

Option	Description
[-b size]	Input buffer size (bytes, Def. 4096).
[-C config]	Configuration file location. For more information about this option, see Using the -C Flag on page 90.
[-d]	Enable debug messages.
[-h]	Displays a list of options and arguments.
[-L template]	Enable LFC logging based on template: <dir>,<prefix>,<ext>,,<space>,<keep>
[-m dir]	Move/archive processed input files to <dir>.
[-n id]	Process identifier. For more information about this option, see Using the -n Flag on page 90.
[-o n]	Skip n bytes of source input (bytes, Def. 0).
[-p poll]	Polling interval (seconds, Def. 5).
[-s stats]	Statistics interval (seconds, Def. 300).
[-z]	Print raw and parsed record sizes.

Arguments

Argument	Description
<element>	Network element ID.

Argument	Description
<input_source>	Input source directory.
<output_dest>	Output <i>ok</i> directory.
<output_fail>	Output <i>fail</i> directory.

Using the -C Flag

The `nt_mtxom_parse` program requires this option to provide:

- The location of the required description file for the parser included OM groups, for example:

```
nt_mtxom_parse -C cfg/omgroups.cdma
```

- The number of OM groups, for example:

```
nt_mtxom_parse -C :337
```

Specifying the number of OM groups in this manner enables parser support for additional MTX OM groups introduced by a switch upgrade without the need to upgrade the `nt_mtxom_parse` program.

- You must specify both the location of the alternative description file for the parser included OM groups and the number of OM groups, for example:

```
nt_mtxom_parse -C cfg/omgroups.cdma:337
```

Using the -n Flag

The `-n` flag specifies a process-identifier string to be used in messages displayed by the parser. The format is as follows:

```
-n <string>:<class_list>
```

You can optionally follow `<string>` by `:<class_list>`, which includes a class-list name that represents a comma-separated list of upper-case class names that the parser should format and output.

If you do not specify a `<class_list>`, the default is to output all classes that are present in the input data.

For example:

```
nt_mtxom_parse -n SF_MSC1:OMREPORT
```

This example uses process-identifier string `SF_MSC1` in all parser messages, and only formats and outputs data for OM class `OMREPORT`.

MTX Versions Supported

The following table provides OM group counts for various MTX versions and patches:

Table 8: MTX Versions Supported

Versions	OM Group Count
MTX CDMA Release 9 standard and patch levels 1, 2	323 325 328
MTX CDMA Release 10 standard and patch levels 1, 2	335 336 337
MTX CDMA Release 11 standard	TBD
MTX TDMA Release 9 standard	303
MTX CDMA Release 12 standard	TBD

The OM Group Description File

You must use the `-c` flag to specify the OM group description file, which contains one-line descriptions of each group for which the parser process provides formatted output. The lines contain the blank- or tab-delimited fields described in the following table.

Table 9: OM Group Description File Fields

Field	Description
Name	The name of the OM group
Key	Indicates if this group has a key. (1=yes or 0=no) When you run the command <code>omshow [tablename]</code> on the MTX and the header output contains a key entry, set the <code>Key</code> field to 1. Only MTX tables that are not populated under the system level have the value 1. If you have difficulties determining what the value of this field should be, contact your customer support representative.
ICP-Skew	Indicates if this group has ICP time skew (1=yes or 0=no) ICP-Skew is generally 0 unless the OM group name contains ICP as part of its name.

After you make changes to an OM group description file, you need to run `flexda stop`, then `flexda start`, in order for the parser to see the new information.

Sample OM Group Description File

The following is the provided OM group description file, `omgroups.cdma`:

Note: Description file lines beginning with # are treated as comments.

##

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
# Supported Nortel CDMA/TDMA/AMPS Switch OM Groups Description
#
# The parser uses descriptions in this file to format OM group
# data records. Formatted OM group records are output if and
# only if data is encountered for the group, and there is a valid
# entry for the group in this file.
#
# Name      Key  ICP-Skew
#
ANN         1    0
BRSTAT          0    0
C7LINK1        1    0
C7LINK2        1    0
C7LINK3        1    0
C7LKSET        1    0
C7ROUTE        1    0
C7RTESET 1    0
CALLMIX        0    0
CAUARSCT 1    0
CAUAUTH        1    0
CAUCPFRQ 1    0
CAUCPSCT 1    0
CAUCPSYS 1    0
CAUDAT3G 1    0
CAUDATSC 1    0
CAUDATSY 1    0
CAUFRQ3D 1    0
CAUFRQ3V 1    0
CAURM          1    0
CAUSCT3D 1    0
CAUSCT3V 1    0
CAUXTFRQ 1    0
CAUXTF3D 1    0
CAUXTF3V 1    0
CDMAIVSN 1    0
CDMAOAM        0    0
CDMAPDOM 0    0
CDMAPDSO 0    0
CDMAPGZN 0    0
CDMAVSO        1    0
CDSNMQRY 1    0
#
## 12/10/2002 -- Comment out these groups with known loader issue for CDMA
## systems until the issue can be resolved. TDMA/AMPS systems can safely
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
## uncomment these groups, because the issue only affects CDMA systems.
#
# CIBEROM          1    0
# CIBEROM2 1      0
# CIUPROST 1      0
# CP              1    0
# CPUSTAT         0    0
# DCCICPCP 1      1
# HODACNTR 1      0
# HODCCNTR 1      0
# ICPAUTH        1    1
# ICPBER         1    1
# ICPA           1    1
# ICPCELTR 1      1
# ICPCP          1    1
# ICPCP2         1    1
# ICPDCP         1    1
# ICPDFC         1    1
# ICPDHO         1    1
# ICPFC          1    1
# ICPHO          1    1
# ICPHO2         1    1
# ICPOVLD        0    1
# ICPOVLD2 0      1
# LPICHUSG 1      1
#
## 12/10/2002 -- Comment out groups with known loader issue for CDMA
## systems until the issue can be resolved. TDMA/AMPS systems can safely
## uncomment these groups, because the issue only affects CDMA systems.
#
# MAHOCAND 1      0
# MAHOCMPT 1      0
# MASUMCAN 1      0
# MASUMSRV 1      0
# MPICHUSG 1      1
# MTXDCELL 1      0
# MTXHLLR      0    0
# MTXNWKIC 1      0
# MTXNWKOG 1      0
# MTXOVLD     0    0
#
## 12/10/2002 -- Comment out groups with known loader issue for CDMA
## systems until the issue can be resolved. TDMA/AMPS systems can safely
## uncomment these groups, because the issue only affects CDMA systems.
```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
#
# MTXPC1      1    0
# MTXPC2      1    0
# MTXPC3      1    0
# MTXPC4      1    0
# MTXPC5      1    0
# MTXPC6      1    0
# MTXPC7      1    0
# MTXPC8      1    0
# MTXSMS      1    0
# MTXSYS1     0    0
# MTXSYSX     0    0
#
## 12/10/2002 -- Comment out groups with known loader issue for CDMA
## systems until the issue can be resolved. TDMA/AMPS systems can safely
## uncomment these groups, because the issue only affects CDMA systems.
#
# MTXZONPG    0    0
#   NWKIC2      1    0
#   NWKIC3      1    0
#   NWKICX      1    0
#   NWKOG2      1    0
#   NWKOG3      1    0
#   NWKOGX      1    0
#   OFZ         0    0
#   OFZ2        0    0
#   OMMTX       1    0
#   OMMTX2      1    0
#   OMMTX3      1    0
#   OMMTXHO     1    0
#   OMMTXHO2    1    0
#   OMMTXSY2    0    0
#   OMMTXSYS    0    0
#   PM          1    0
#   RMU3G       0    0
#   SMRSICAN    1    0
#   SMRSISRV    1    0
#   STORE       0    0
#   TLDNPOM     0    0
#   TRK         1    0
#   TRMTFR      0    0
#   TRMTFR2     0    0
#   TRMTRS      0    0
#   UTR         1    0
```

```
#
# 05/27/2003 -- Added the following for MTX12 Support.
#
    LCSSYS          0    0
    MTXOMTRK       1    0
    CAUCSDCP       0    0
    CDMAPAGE       1    0
    TDPIC1         1    0
    TDPOG1         1    0
    XASTAT         0    0
#
```

The Passport Statistics Parser

The Passport Statistics Parser converts Passport source BDF files to the format expected by the Prospect Loader.

Command Description

The program command is structured as follows:

```
nt_ppcsta_parse -[options] <id> <input_source> <output_destination>
```

Running the following help command displays a definitions list of options and arguments:

```
nt_ppcsta_parse -h
```

Options:

```
[-b size]      Input buffer size (bytes, default 4096).
[-n id]        Process identifier.
[-o n]         Skip n bytes of source input (bytes, default 0).
[-p poll]      Polling interval (seconds, default 5).
[-s stats]     Statistics interval (seconds, default 300).
[-m dir]       Move/archive processed input files to <dir>.
[-C config]    Configuration information.
[-d]           Enable debug messages.
[-z]           Print raw and parsed record sizes.
[-L template]  Enable LFC logging based on template:
                <dir>,<prefix>,<ext>,<span>,<space>,<keep>
```

Arguments:

```
<element>     Network element id.
```

`<input_source>` Input source directory.
`<output_dest>` Output ok directory.
`<output_fail>` Output fail directory.

The Network Element ID Argument

A separate parser process is run for each Passport switch from which statistics are to be collected. The node ID for the Passport switch from which statistics are to be collected is provided as the last component of the network element ID argument.

The network element ID argument must be specified as follows:

```
<mscid>.<bsmid>.<cbrsid>.<nodeid>
```

where:

`<mscid>` is the Nortel switch ID associated with this Passport switch

`<bsmid>` is the Nortel BSM ID associated with this Passport switch

`<cbrsid>` is the Nortel CBRS id of the Passport switch

`<nodeid>` is the Nortel node id of the Passport switch. This must be the node ID given in the statistics file names.

Using the -C flag

The -C flag is required to provide information needed by the parser process to format input statistics files. This flag is specified as follows:

```
-C <rfile>:<delch>:<cfile>
```

where:

`<rfile>` is the location of the Passport statistics RDF file

`<delch>` is the delimiter character used in the Passport source BDF file. This may be specified as the character's hexadecimal representation using the format `0xnn`.

`<cfile>` is the Passport configuration file specifying the functional processor card type and slot number associated with each provisioned interface.

The following sections describe these files.

Record Description File (RDF)

The attribute name associated with each BDF record field is provided by a Nortel Passport statistics record description (RDF) file. The location of this file is provided to the parser by using the -c flag.

The naming convention for the RDF file is as follows:

```
<ne_type>_<data_type>.rdf
```

where


```
<ne_type> = ppc  
<data_type> = sta
```

An example file name is as follows:

```
ppc_sta.rdf
```

Sample RDF File

The following is a section from a sample RDF file:

```
#####  
#= RDF file: ppc_sta.rdf  
#####  
  
_name: switchType  
_type: _S:  
  
_name: dataType  
_type: _S:  
  
_name: componentName  
_type: _c:  
  
_name: timeOfRecord  
_type: _t:  
  
_name: customerIdentifier  
_type: _I:  
  
_name: porsNormPktFromIf  
_type: _LI:  
  
_name: porsNormDiscUnforwardFromIf  
_type: _LI:  
  
_name: porsNormOctetFromIf
```

```
_type: _LI:

_name: porsIntPktFromIf
_type: _LI:

_name: measuredSpeedToIfMin
_type: _LI:

_name: measuredSpeedToIfCurrent
_type: _LI:

_name: measuredRoundTripDelayMax
_type: _I:
```

The Source BDF File

The source BDF files contain newline-separated statistics records for the Passport switch. Each record consists of a fixed number of fields that are delimited using a character that is configurable on the Nortel MDP. The value of this delimiter character is provided to the parser by using the `-c` flag. Each BDF record field contains a value associated with a statistics record attribute.

The naming convention for the source BDF file is as follows:

```
<ne_type>_<data_type>_<yyyymmddThhmmss>_<nodeid>_<seqno>.bdf
```

where

```
<ne_type> = ppc
```

```
<data_type> = sta
```

```
<yyyymmddThhmmss> = file creation date
```

```
<nodeid> = passport switch node ID
```

```
<seqno> = 3-digit sequence number
```

An example file name is as follows:

```
ppc_sta_20021021T100001_610_711.bdf
```

Sample Source BDF File

The following is a section from a sample source BDF file:

```
ppc:sta:(EM/MTX48B2CBRS1 LogicalProcessor/
2):20021017T101500.000811:0:.....:2:2:0:0:1:(0,0)(1,262144)
```


Table 10: Field Description - Passport Configuration File (Continued)

<i>Field</i>	<i>Description</i>
components	A provisioned interface component for this card/slot

Sample Passport Configuration File

The following is a sample Passport configuration file:

```
#
# slot    cardType    components

0        CP          LogicalProcessor/0
1        CP          LogicalProcessor/1

2        11pMSW     LogicalProcessor/2
3        11pMSW     LogicalProcessor/3
2        11pMSW     CiuBcnIf/0
2        11pMSW     CiuBcnIf/1
2        11pMSW     CiuBcnIf/2
2        11pMSW     CiuBcnIf/3
2        11pMSW     BtsBcn/29
2        11pMSW     BssmBcnIf/1
2        11pMSW     BssmBcnIf/2

4        11pMSW     LogicalProcessor/4
5        11pMSW     LogicalProcessor/5
4        11pMSW     CiuBcnIf/8
4        11pMSW     CiuBcnIf/9
4        11pMSW     BtsBcn/30
4        11pMSW     DiscoBcnIf/1
4        11pMSW     DiscoBcnIf/2

6        24pBCNW    LogicalProcessor/6
7        24pBCNW    LogicalProcessor/7
6        24pBCNW    SbsBcn/ (33,0)
6        24pBCNW    SbsBcn/ (33,1)
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

8	11pMSW	LogicalProcessor/8
9	11pMSW	LogicalProcessor/9
8	11pMSW	CiuBcnIf/4
8	11pMSW	CiuBcnIf/5
8	11pMSW	CiuBcnIf/6
8	11pMSW	CiuBcnIf/7
8	11pMSW	BtsBcn/31
8	11pMSW	DiscoBcnIf/3
8	11pMSW	DiscoBcnIf/4
10	11pMSW	LogicalProcessor/10
11	11pMSW	LogicalProcessor/11
10	11pMSW	BtsBcn/17
12	4pOC3	LogicalProcessor/12
13	4pOC3	LogicalProcessor/13
12	4pOC3	IsshoBcnIf/1
14	24pBCNW	LogicalProcessor/14
15	24pBCNW	LogicalProcessor/15
14	24pBCNW	SbsBcn/ (33,2)
14	24pBCNW	SbsBcn/ (33,3)

Sample Parser Output File

The following is a sample of the parser output file, which contains the source BDF files converted into the format expected by the Prospect Loader:

```
+++Record #: 1
switchType  ppc
dataType    sta
cardName:   (11pMSW/2)
componentName (EM/MTX48B2CBRS1 LogicalProcessor/2)
timeOfRecord 20021017T101500.000811
customerIdentifier 0
```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
cardNumber 2
cardStatus 2
cpuUtilAvg 0
cpuUtilAvgMin 0
cpuUtilAvgMax 1
memoryCapacity (0,0) (1,262144) (2,0)
memoryUsageAvg (0,0) (1,34815) (2,0)
memoryUsageAvgMin (0,0) (1,34815) (2,0)
memoryUsageAvgMax (0,0) (1,34815) (2,0)
sharedMsgBlockCapacity 5682
sharedMsgBlockUsageAvg 0
sharedMsgBlockUsageAvgMin 0
sharedMsgBlockUsageAvgMax 0
localMsgBlockCapacity 256
localMsgBlockUsageAvg 1
localMsgBlockUsageMin 1
localMsgBlockUsageMax 6

+++Record #: 2
switchType ppc
dataType sta
cardName: (11pMSW/4)
componentName (EM/MTX48B2CBRS1 LogicalProcessor/4)
timeOfRecord 20021017T101500.001019
customerIdentifier 0
cardNumber 4
cardStatus 2
cpuUtilAvg 0
cpuUtilAvgMin 0
cpuUtilAvgMax 1
memoryCapacity (0,0) (1,262144) (2,0)
memoryUsageAvg (0,0) (1,34814) (2,0)
memoryUsageAvgMin (0,0) (1,34814) (2,0)
memoryUsageAvgMax (0,0) (1,34814) (2,0)
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
sharedMsgBlockCapacity 5682
sharedMsgBlockUsageAvg 0
sharedMsgBlockUsageAvgMin 0
sharedMsgBlockUsageAvgMax 0
localMsgBlockCapacity 256
localMsgBlockUsageAvg 1
localMsgBlockUsageMin 1
localMsgBlockUsageMax 5

+++Record #: 3
switchType ppc
dataType sta
cardName: (CP/0)
componentName (EM/MTX48B2CBRS1 LogicalProcessor/0)
timeOfRecord 20021017T101500.006116
customerIdentifier 0
cardNumber 1
cardStatus 1
cpuUtilAvg 1
cpuUtilAvgMin 1
cpuUtilAvgMax 1
memoryCapacity (0,0) (1,262144) (2,0)
memoryUsageAvg (0,0) (1,39127) (2,0)
memoryUsageAvgMin (0,0) (1,39127) (2,0)
memoryUsageAvgMax (0,0) (1,39127) (2,0)
sharedMsgBlockCapacity 2048
sharedMsgBlockUsageAvg 0
sharedMsgBlockUsageAvgMin 0
sharedMsgBlockUsageAvgMax 0
localMsgBlockCapacity 768
localMsgBlockUsageAvg 2
localMsgBlockUsageMin 2
localMsgBlockUsageMax 7
```

Updated: 2008-09-24

Appendix F: The Monitoring Process Configuration File

The `<hostname>.mon` file is used to configure the monitoring process and is located in the `$FLEXDAHOME/cfg` directory. This configuration file is organized hierarchically.

The `<hostname>.mon` file is automatically generated at setup. If your setup configuration changes, you first need to change the host configuration files as described in [The Host Configuration File](#) on page 20, and then run the `setconfig.ksh` script

Starting the Monitoring of a Particular Switch

The process

```
$ monitor -d <hostname>.mon
```

invoked by the startup command

```
$ flexda start <group_name> <switch_name>
```

is used to monitor and control the parser processes.

If you have recently modified `omgroups.<technology>`, you need to stop and restart the parser in order for the new `omgroups` to be recognized.

Sample <hostname>.mon File

The following is a sample `<hostname>.mon` file listing:

```
!  
! NORTEL DA MONITOR SCRIPT  
!  
  
system.name: MYHOST
```

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
MYHOST.groups:           NTMTXOM NTPPCSTA
MYHOST.NTMTXOM.groups:   MTX01 MTX02
*NTMTXOM.MTX01.processes:  READER  PARSER
*NTMTXOM.MTX02.processes:  READER  PARSER
```

```
MYHOST.NTPPCSTA.groups:   MTX01B2CBRS1
*NTPPCSTA.MTX01B2CBRS1.processes:  PARSER
```

!

! Global Defaults

!

```
*wait:           10
*retry:           5
*timeout:        30
*delay:          10
*normal:         false
```

!

! Start the threads in reverse order so that later stages will be ready and
! waiting for earlier stages.

!

```
*READER.start:      2
*PARSER.start:      1
```

```
*READER.down:       2
*PARSER.down:       1
```

!

! Allow infinite retries for all readers.

!

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

```
*READER.retry:                -1

!
! NTMTXOM MTX01
!

*NTMTXOM.MTX01.READER.program: nt_aft_reader
*NTMTXOM.MTX01.READER.argv: \
    -n NY_MTX01 -w 1800 \
    -L log/ny_mtxmtx01/om/get,aft.,.log,1440,800000,40 \
    30001@???.???.???.??? \
    data/ny_mtxmtx01/om/src

*NTMTXOM.MTX01.PARSER.program: nt_mtxom_parse
*NTMTXOM.MTX01.PARSER.argv: \
    -n NY_MTX01 \
    -b 2048 \
    -L log/ny_mtxmtx01/om/fmt,parse.,.log,1440,800000,40 \
    -m data/ny_mtxmtx01/om/arch \
    -C cfg/omgroups.cdma:337 \
    MTX01 \
    data/ny_mtxmtx01/om/src \
    data/ny_mtxmtx01/om/dest \
    data/ny_mtxmtx01/om/fail

!
! NTMTXOM MTX02
!

*NTMTXOM.MTX02.READER.program: nt_aft_reader
*NTMTXOM.MTX02.READER.argv: \
    -n NY_MTX02 -w 1800 \
    -L log/ny_mtxmtx02/om/get,aft.,.log,1440,800000,40 \
    30001@???.???.???.??? \
```

Updated: 2008-09-24

DATA ACQUISITION TOOLS GUIDE
Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

data/ny_mttxmx02/om/src

*NTMTXOM.MTX02.PARSER.program: nt_mttxom_parse

*NTMTXOM.MTX02.PARSER.argv: \

-n NY_MTX02 \

-b 2048 \

-L log/ny_mttxmx02/om/fmt,parse.,.log,1440,800000,40 \

-m data/ny_mttxmx02/om/arch \

-C cfg/omgroups.cdma:337 \

MTX02 \

data/ny_mttxmx02/om/src \

data/ny_mttxmx02/om/dest \

data/ny_mttxmx02/om/fail

!

! NTPPCSTA MTX01B2CBRS1

!

*NTPPCSTA.MTX01B2CBRS1.PARSER.program: nt_ppcsta_parse

*NTPPCSTA.MTX01B2CBRS1.PARSER.argv: \

-n NY_MTX01B2CBRS1 \

-b 2048 \

-L log/ny_ppcmtx01b2cbars1/sta/fmt,parse.,.log,1440,800000,40 \

-m data/ny_ppcmtx01b2cbars1/sta/arch \

-C cfg/ppc_sta.rdf:::cfg/cbars.cfg \

MTX01.1.MTX01B2CBRS1.510 \

data/ny_ppcmtx01b2cbars1/sta/src \

data/ny_ppcmtx01b2cbars1/sta/dest \

data/ny_ppcmtx01b2cbars1/sta/fail

Note: A line beginning with an asterisk expands to all levels above the current level.

A line beginning with an exclamation point is part of a comment.

The following are reserved words and should not be used for element names:

- .name
- .groups
- .processes
- .wait
- .retry
- .timeout
- .delayed
- .normal
- .start
- .down
- .program
- .argv

Stopping the Monitoring of a Particular Switch

You can temporarily stop the monitoring of a particular switch.

To stop the monitoring of a switch

1. Stop the monitor.
`$ flexda stop <group_name> <switch_name>`
2. To start the monitor again, do the following:
`$ flexda start <group_name> <switch_name>`

Appendix G: Secure Connections Setup

This appendix describes how to setup secure connections among the Data Acquisition server, Prospect server, and network elements.

Configuring SSH on Remote Network Elements

Perform this task if the Data Acquisition server must have secure connections with remote network elements. This is required if the SECURERETRIEVE parameter in the `icf` file is set to '1' and the PSWD_AUTH parameter is set to 'N'. When this happens, the Data Acquisition server retrieves data from the remote network elements using the `scp` command with key-based authentication.

To set up secure connections with remote network elements do as follows:

1. Log on to the DA server as `flexda`.

2. Run the command `ls` on the directory `.ssh` to verify that the directory exists:

```
[flexda] $ ls .ssh
```

If the directory does not exist, an error message is shown and you must create the directory by entering the command:

```
[flexda] $ mkdir .ssh
```

3. Go to the `~/ .ssh` directory:

```
[flexda] $ cd ~/.ssh
```

4. Enter the following command:

```
[flexda] $ ssh-keygen -t rsa
```

Press Enter when prompted for default directory and filename. Leave `passphrase` blank when prompted and press Enter.

5. Log on to the remote network element as a user (`<ne_user>`) that the Data Acquisition tool can access.

6. Run the command `ls` on the directory `.ssh` to verify that the directory exists:

```
[ne_user] $ ls .ssh
```

If the directory does not exist, an error message is shown and you must create the directory by entering the command:

```
[ne_user] $ mkdir .ssh
```

7. Log off from the remote network element.
8. On the DA server, use FTP to copy the file `id_rsa.pub` in the directory `<home_directory>/.ssh` on the network element from which the Data Acquisition tool is supposed to collect data.
9. Enter the following command for the remote network element using an authorized user:

```
$ ssh -l <ne_user> <ne_server>
```
10. If you receive a message similar to the following type Yes and press Enter:
The authenticity of host '`<hostname> (<ip>)`' can't be established.
RSA key fingerprint is `54:1d:4b:44:e1:2e:ae:48:b1:34:7f:ee:c5:13:95:85`.
Are you sure you want to continue connecting (yes/no)?
11. Go to the directory `<home_directory>/.ssh` and use the `cat` command to concatenate the content of file `id_rsa.pub` into file `authorized_keys`:

```
$ cd ~/.ssh  
$ cat id_rsa.pub >> authorized_keys
```
12. Change the permission of `authorized_keys` to 600 and delete `id_rsa.pub`:

```
$ chmod 600 authorized_keys  
$ rm -f id_rsa.pub
```
13. Log off from the remote network element.
14. Repeat Steps 3 through 13 on all other remote network elements from which the Data Acquisition tool is supposed to collect data.

Configuring SSH on the Prospect Server

Perform this task if the Data Acquisition server must have secure connections with the Prospect server. This is required if the SECURERETRIEVE parameter in the `icf` file is set to '1' and the PSWD_AUTH parameter is set to 'N'. When this happens, the Data Acquisition server exchanges data with the Prospect server using the `scp` command with key-based authentication.

To set up secure connections with the Prospect server do as follows:

1. Log on to the DA server as `flexda`.
2. Go to the `~/.ssh` directory:

```
[flexda] $ cd ~/.ssh
```
3. The directory should contain a file called `id_rsa.pub`. If not, follow the steps documented in [Configuring SSH on Remote Network Elements](#) on page 111.
4. Log on to the Prospect server as user `<prospect_user>`.
5. Run the command `ls` on the directory `.ssh` to verify that the directory exists:

```
[prospect_user] $ ls .ssh
```

If the directory does not exist, an error message is shown and you must create the directory by entering the command:


```
[prospect_user] $ mkdir .ssh
```

6. Log off from the Prospect server.
7. On the DA server, use FTP to copy the file `id_rsa.pub` in the directory `<home_directory>/.ssh` on the Prospect server on which the OM files are located.
8. Enter the following command for the Prospect server using an authorized user:

```
$ ssh -l <prospect_user> <prospect_server>
```
9. If you receive a message similar to the following type Yes and press Enter:
The authenticity of host '`<hostname> (<ip>)`' can't be established.
RSA key fingerprint is `54:1d:4b:44:e1:2e:ae:48:b1:34:7f:ee:c5:13:95:85`.
Are you sure you want to continue connecting (yes/no)?
10. Go to the directory `<home_directory>/.ssh` and use the `cat` command to concatenate the content of file `id_rsa.pub` into file `authorized_keys`:

```
$ cd ~/.ssh  
$ cat id_rsa.pub >> authorized_keys
```
11. Change the permission of `authorized_keys` to 600 and delete `id_rsa.pub`:

```
$ chmod 600 authorized_keys  
$ rm -f id_rsa.pub
```
12. Log off from the Prospect server.

Index

Symbols

.mon files 105

A

AFT Reader 79, 87
 commands 87
AFT software setup 79
automatic file transfer 79

B

BDF file 74, 95, 96, 98, 101
bulk data format file ... 74, 95, 96, 98, 101

C

checkpoint files 54
chgpswd 49
configuration file
 FLEXDA 19
 host 20

D

data
 recovering 54
data acquisition processes 87
Data Acquisition tools setup 18
Data Acquisition tools upgrade 16, 18
data loading sequence 20
data monitoring 54
data retrieval 55
data transfers, monitoring and recovering . 54
data types 21
directory structure 50
documentation
 font usage 10
 typographical conventions 10
 user 11
 viewing HTML Help 11
 viewing PDF 12

E

error messages 59
error notification 53
 using e-mail 53
 using paging 54

F

field descriptions 32
flexda 105
font usage
 documentation 10

H

host configuration file 20
 field descriptions 32
 sample 21
 structure 31
hostname 20
 finding 18
HTML Help format 11

I

ICF file 19
ICF files 54
icf_pswdfile.cfg 49
installation and setup 13, 16
installation procedure 16
Interval Checkpoint Facility 54
interval checkpoint facility files 19

L

loading data, sequence for 20

M

MDP statistics files setup 73
monitoring data 53, 54
monitoring process configuration file .. 105
monitoring the parsing process 105
mtcdma_mtx 49
MTXOM Parser 87, 89

N

notification
 errors 53

O

OM group data 44
omgroups 105
omgroups file
 making changes 91
OMSHOW format 44
overview 14

DATA ACQUISITION TOOLS GUIDE

Data Acquisition Tools 7.1 for Nortel AMPS/TDMA/CDMA MTX16

P	upgrading	16, 18
parser OM group description file	user publications	11
Passport configuration file	V	
Passport Statistics output file	variables	
Passport Statistics Parser	hostname	20
password rotation		
PDF format		
pre-installation tasks		
process monitoring		
starting		105
stopping		110
process monitoring configuration file . . .		105
product support		12
product training		12
publications		
user		11
R		
RDF file		96
record description file (RDF)		96
S		
sample file		
cron job		77
OM group description		91
Passport configuration		100
Passport Statistics Parser output . . .		101
Passport switch configuration		76
RDF		97
source BDF		98
sample files		
monitoring		105
sd.chgpswd.icf		49
setconfig.ksh		20, 31, 49
setup		
Data Acquisition tools		18
MDP statistics files		73
network element		71, 111
source BDF file		98
support		12
T		
training		12
troubleshooting		53
typographical conventions		10
U		
uname command		18
