

IBM Workload Deployer

Quick Start Guide



This document summarizes the installation steps and reviews the most common signs-of-health for IBM® Workload Deployer. Refer to the *IBM Workload Deployer: Installation and User's Guide* for complete installation instructions.

Procedure

1. Physically install the appliance in the rack.

Important: Do not attempt to physically open the case of the appliance. Opening the case triggers a security fault and the appliance no longer operates. It must then be returned to IBM for remanufacturing.

- a. Carefully unpack the appliance. Locate all supplied power cords and cables. Do not discard the serial cable after installation; you might need it later for problem determination or maintenance.
 - b. Identify the rack location for installation, and ensure that there is sufficient space around the appliance for ventilation and appliance maintenance.
 - c. Secure the mounting rails in the rack frame.
 - d. Use two people to lift and slide the appliance into the rack frame and secure the appliance to the rails.
 - e. From the rear of appliance, use the supplied power cords to connect both power supplies to power outlets.
 - f. From the front of the appliance, connect the appliance on your network with a network cable.
 - g. From a serial console, connect to the CONSOLE connector on the front of the device. This connection must be configured with 9600 baud 8N1 (8 bits per character, no parity, 1 stop bit), and no flow control. Use the serial cable for this connection or a USB-to-serial adapter if your serial console does not have a serial port. Use VT100 for the terminal emulation on the serial console.
 - h. Press the power button. The green power LED light is illuminated and the serial console displays.
 - i. At the login prompt for the initial appliance configuration, log in with the user ID and password: `cbadmin/cbadmin`.
2. Configure the appliance for access with the serial console. Follow the wizard prompts to accept the license agreements.
 3. Change the default password when prompted by the wizard.
 4. Configure the following information:
 - IP address
 - Subnet mask in Classless Inter-Domain Routing (CIDR) format
 - Default gateway
 5. Update your appliance firmware to the latest version. See the topic about updating the firmware in the information center (<http://publib.boulder.ibm.com/infocenter/worlodep/v3r1m0/index.jsp>) for more information.
 6. Use one of the following browsers on a network-connected PC to access the user interface:
 - Mozilla Firefox, versions: 3.5, 3.6, 4.0, 5.0, or 6.0
 - Microsoft Internet Explorer, version 7, 8, or 9
 7. From the browser, perform the following steps:
 - a. In the address bar, enter the URL and port information defined during the device initialization, for example `https://myDeployer.ibm.com`. Use the secure HTTP protocol, which is `https`, not `http`.
 - b. Enter `cbadmin` in the **User name** field.
 - c. Enter the corresponding password, that was defined during the device initialization with the serial port, in the **Password** field.

d. Click **Login**. (To log out, click **Logout** in the upper right-hand corner.)

If the Welcome page displays, authentication of the local cbadmin account was successful.

8. Confirm the operational states of the appliance:

- The green Power LED light at front of the appliance is illuminated.
- The yellow Error alarm LED light at front of the appliance is not illuminated.

If these states do not match your appliance, see the *IBM Workload Deployer: Installation and User's Guide* for troubleshooting information.

For more detailed configuration information, see the information center at the following web address:
<http://publib.boulder.ibm.com/infocenter/worlodep/v3r1m0/index.jsp>.

If you have concerns, contact IBM Support. For details, refer to the web site at https://www-947.ibm.com/support/entry/myportal/Overview/Software/WebSphere/IBM_Workload_Deployer.

Third edition (June 2011)

© Copyright IBM Corporation 2009, 2011.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 46N5709

