

iSeries
On/Off CoD Planning Guide

Temporary Capacity for
Model 825, 870, and 890

February 14, 2003

| | |
|--|----|
| Purpose of Planning Guide | 5 |
| Where to Get Help | 6 |
| iSeries Capacity Planning | 7 |
| On/Off Capacity on Demand (On/Off CoD) | 7 |
| On/Off CoD (aka. temporary capacity on demand) | 10 |
| Bonus Processor Days | 11 |
| Pricing | 12 |
| Temporary Capacity Enablement | 13 |
| Enable: Step-by-Step | 14 |
| Guidelines for Ordering a TCOE Enablement Feature | 15 |
| How to retrieve a TCOE Enablement Code from the Web | 16 |
| How to enter a TCOE Enablement Code on the Server | 16 |
| Temporary Capacity Request | 17 |
| Request: Step-by Step | 17 |
| What is a Processor Day ? | 18 |
| How is a Processor Day counted? | 18 |
| Start a Request for Processor Days | 19 |
| How to Stop a Request before it Expires | 20 |
| What Happens When a Request Expires? | 20 |
| How to Display Temporary Capacity Information? | 21 |
| Temporary Capacity Billing | 22 |
| Bill: Step-by Step | 23 |
| How to Report via Electronic Service Agent | 24 |
| How to Report via Fax | 24 |
| How to Report via e-Mail | 24 |
| How to Review the History Log | 25 |
| How to Resolve a Customer Issue with their Bill | 25 |
| Termination | 26 |
| Customer Contracts/Responsibilities | 27 |
| Customer Contracts | 27 |
| Customer Responsibilities | 28 |
| Sales Channel Contracts/Responsibilities | 30 |
| Sales Channel Contracts | 30 |
| Distributor Responsibilities | 31 |
| Solution Provider (buy from distributor) Responsibilities | 33 |
| Solution Provider or Service Provider (buys from IBM) Responsibilities | 35 |
| IBM Direct Sales Responsibilities | 37 |
| Converting Hardware Features | 39 |
| Processor Failures | 40 |
| Moving Hardware | 41 |
| Logical Partitions | 42 |
| Software Licenses | 42 |

| | |
|---|----|
| Performance Considerations | 44 |
| License, Warranty, Maintenance | 46 |
| CE: Maintenance Instructions | 47 |
| CE: Conversion Instructions | 48 |
| CE: Upgrade Instructions | 49 |

Preface

You knew you might need extra processing power to meet the demands of your e-business and you didn't want to impact your current operational commitments to get it ...

IBM offers a fast, non-disruptive method of activating "extra" processor capacity that is built directly into IBM eServer iSeries.

CUoD or On/Off CoD enable you to activate (no IPL and/or database reconfiguration) one or more central processors of a Model 825, 870 and 890 up to the maximum number of available standby processors.

CUoD for permanent capacity

- 1) Order an activation code to permanently turn on extra capacity

On/Off CoD for temporary capacity

- 1) Enable your server for the use of temporary capacity
- 2) Turn on and off capacity as you need it ... it's immediate!
- 3) Pay for the requested capacity at the end of each quarter

Purpose of Planning Guide

This guide will explain in detail all the aspects of planning for, purchasing, and managing an **IBM eserver iSeries with On/Off Capacity on Demand**. On/Off CoD as defined in this document , is for the Model 825, 870 and 890 announced January 20, 2003 and made generally available February 28, 2003. **The latest set of V5R2 PTFs (CUM package dated 3/23/2003) is required.**

This guide is not a capacity planning document ... it will however point out key considerations when using capacity planning tools for a Model 825, 870, and 890.

Where to Get Help

The following information will help you quickly find the assistance you need.

Problem with a Capacity Card (part failure)

- => Call your service provider
- => IBM service personnel can contact Level II support, in Rochester, to reset the appropriate capacity after the card has been replaced (refreshed Activation/Enablement Codes)

Problem with understanding technical details of On/Off Capacity Upgrade on Demand

- => Contact TCO Administrator at tcodadmin@us.ibm.com
- => Review appropriate sections in this Planning Guide
- => Work with Level II and/or Techline support in your geography

Problem with selling/marketing On/Off Capacity Upgrade on Demand

- => Review appropriate sections in this Planning Guide and other available materials at the following website: <http://www.ibm.com/eserver/series/hardware/ondemand>
- => Work with account teams and/or marketing specialists in your Geography

Planning Guide Feedback

You may directly contact the author of this Planning Guide if you have information that may be of assistance in updating the guide or making it a more useful Planning Guide.

Randy Grimm
Tel: 8-553-5137 or outside (507) 253-5137
Internet address: grimmr@us.ibm.com

iSeries Capacity Planning

Capacity planning is a 'business as usual' value-add function of IBM's sales team. Any special considerations specific to iSeries On/Off Capacity on Demand will be pointed out in this section. There is a comprehensive set of tools, resources and offerings available to aid IBMers, customers, and partners with capacity planning assistance.

When doing capacity planning for models offering On/Off CoD, one must plan ahead for any potential disruptive actions that would inhibit the full utilization of temporarily activated processor capacity. Some actions you may want to take prior to ever activating any processors are:

- Perform any I/O conditioning (e.g., new cages, or other I/O infrastructure)
- Perform memory upgrades
- Prepare LPAR partitions

Planning Ahead

By planning ahead, customers can accommodate the growth of existing workloads as well as handle new workloads without requiring a server outage.

Simply activating standby processors may not provide you with the full potential of capacity improvements you require. Other components of a server affect performance and overall throughput of workloads. By planning ahead and taking into account the complete server configuration, a customer can ensure they get the full benefit of processor activations.

iSeries Benchmark Center

IBM facilitates bench marking of customer and solution provider application environments. For more information, see their website at <http://www.as400.ibm.com/developer/cbc>.

iSeries Solutions Center -- Capacity Planning Services

Information regarding an IBM consulting service which can assist customers with their capacity planning needs can be found at the following website: <http://www-1.ibm.com/services/its/us/as400solutionctr.html>

On/Off Capacity on Demand (On/Off CoD)

CUoD was first introduced for the iSeries in the fall of 2002. At that time, CUoD was synonymous with permanent processor capacity. CUoD provided iSeries customers who purchased an iSeries model with standby capacity (un-activated at the time of purchase). This standby capacity, could be permanently activated for Planned Growth by purchasing a processor activation feature and entering the generated key at the server whenever the capacity was needed.

Now, we have introduced something entirely new ... On/Off CoD. This offering provides temporary capacity for a customer's business peaks!

 
What's new in 2003

- CUoD and On/Off CoD is available on iSeries Model 825, 870, 890 (new processor features)
- On/Off CoD ... ability to temporarily activate processor capacity
- Low cost processor activations for Linux
- Simpler fulfillment process for permanent activations (no field VPD required)

With the introduction of the 2003 product line, iSeries once again will be among the leaders in this space by complementing the exiting offering called CUoD with a brand new capability called On/Off CoD. On/Off CoD, means a customer, can turn processor capacity on/off to satisfy business peaks. You simply request a number of processors be temporarily made available for a specific number of days ... you will be billed for whatever you requested at the end of each calendar quarter. Like renting, this flexibility is more expensive in the long run than buying, the approximate break-even point is 45 Processor Days (if you request/pay for 45 Processor Days you will have paid approximately the same price you would have paid for permanently activating a processor).

An added benefit of the new function called On/Off CoD, are Bonus Processor Days. There is nothing else like it in the market today. With the initial order and fulfillment of a TCOE Enablement Feature (no charge feature) comes fourteen bonus days of temporary capacity ... you will not be billed for the first 14 days of temporary capacity you request from the server.

CUoD and On/Off CoD

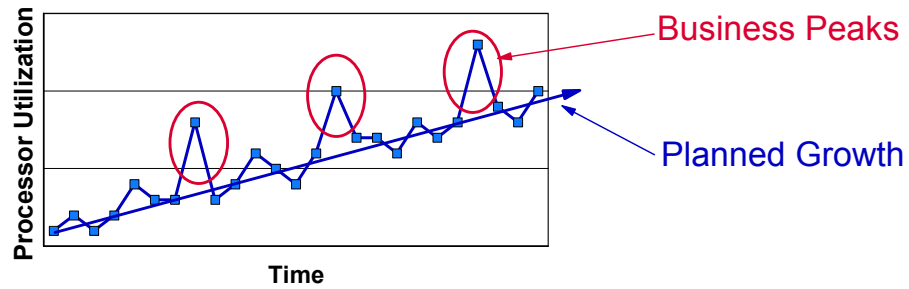



- CUoD (Capacity Upgrade on Demand) for permanent capacity
 - Planned Growth ... pay when purchased, no premium

- On/Off CoD (Capacity on Demand) for temporary capacity
 - Business Peaks ... pay after use, break even is ~45 days
 - Special Purpose ... bonus and complementary days available

On/Off CoD (aka. temporary capacity on demand)

Temporary capacity is available on the new iSeries Model 825, 870, and 890:

- 1) It can be turned on/off to match a customer's peak periods
- 2) It allows you to request a variable number of days as well as a variable number of processors
- 3) It is "immediate" ... no IPL, no re-configuring, no ordering, no waiting



Enable, use, and bill temporary capacity

Enable -- server is enabled for temporary capacity

- Customer signs a contract with IBM
- Sales Channel (IBM or Business Partner) places a customer order for a TCOD Enablement Feature
- Customer enters the resulting TCOD Enablement Code on the server

Request -- temporary capacity is requested and then used


- Electronically report temporary capacity activity (minimum of once per month)
- Request temporary capacity via server screen (specify units)

Bill -- temporary capacity is monitored, billed, and paid for

- IBM consolidates reported information
- IBM notifies the Sales Channel about customer activity related to temporary capacity
- Sales Channel places an "after-the-fact" configurator order for TCOD Billing Features
- Sales Channel bills their customer

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Bonus Processor Days

IBM eServer iSeries 

Special purpose

Bonus processor days credited to a customer's machine records will reduce the number of "billable" processor days

Bonus Days
Fourteen processor days will be automatically "credited" to a customer's machine records the first time a TCOD Enablement Code is applied to the server. If and when the machine is upgraded (processor feature is changed), and a new TCOD Enablement Code is applied to the server, an additional 14 processor days will be credited.

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Pricing

IBM eServer iSeriesIBM

Temporary capacity pricing

Breakeven is approximately 45 processor days ... IBM adds together the price of a permanent processor activation with the price of an OS/400 processor license and then divides the total by 45 ... this determines the price for a single processor day of temporary capacity.

| Model | Processor Feature | Startup Processors | Standby Processors | TCOD Enablement Feature | TCOD Billing Feature | US Prices |
|-------|-------------------|--------------------|--------------------|-------------------------|----------------------|-----------|
| 825 | 2473 | 3 | 3 | 1773 | 1782 or 1783 | \$1,100 |
| 870 | 2486 | 8 | 8 | 1776 | 1785 or 1786 | \$1,200 |
| 890 | 2497 | 16 | 8 | 1777 | 1788 or 1789 | \$1,300 |
| 890 | 2498 | 24 | 8 | 1778 | 1791 or 1792 | \$1,300 |

* TCOD Enablement Features are no charge MES features
* US Prices represent IBM's list price for a TCOD Billing Feature (one Processor Day of temporary capacity)
* Additional operating system licensing may be required if using an OS that is licensed by processor (NOT required for OS/400)
* Additional software licensing may be required if using SW that is licensed by processor

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Temporary Capacity Enablement

Prior to requesting temporary capacity on your server, you must "enable" your server. To do this, order a TCOD Enablement Feature (MES only feature) and sign the required customer contract.

| Model | Processor Feature | Enablement Feature |
|-------|----------------------|-----------------------|
| 890 | 2498 | 1778 |
| 890 | 2497 | 1777 |
| 870 | 2486 | 1776 |
| 825 | 2473 | 1773 |

Placing an order for a TCOD Enablement Feature will result in a TCOD Enablement Code being generated and mailed to you, as well as being posted on the Web for you to retrieve and enter on your server.

A TCOD Enablement Code "enables" the server to a limit of Processor Days (up to 192) that can be requested as temporary capacity. This means, you can make requests for temporary capacity over the life of the machine as long as you don't exceed this value. When the limit is reached, a new TCOD Enablement Feature must be ordered and a new TCOD Enablement Code entered. Every time a new TCOD Enablement Code is entered it will reset the limit of Processor Days that can be requested as temporary capacity to 192 (TCOD Enablement Codes are not additive)

Enable: Step-by-Step

IBM eServer iSeries

IBM

Enable: Step-by-Step

PRE-REQ #1: Sales Channel (IBM Business Partner) must sign the following contract:
IBM Business Partner Agreement, Attachment for Temporary Capacity On Demand

PRE-REQ #2: Sales Channel (IBM Business Partner or IBM Direct) must register at the following website: <http://www.ibm.com/eserver/series/hardware/ondemand>

Step1: Customer asks Sales Channel to enable their machine for temporary capacity

Step2: Customer must complete and sign the following contracts. It is the Sales Channel responsibility to return the signed contract to the GEO CSO organization and fax a copy to IBM at 1-507-253-7979

Required: IBM Customer Agreement, Attachment for Temporary Capacity On Demand

Required: IBM Supplement for Temporary Capacity On Demand

Optional: IBM Addendum for Temporary Capacity on Demand Alternative Reporting

Step3: Sales Channel places an order for the TCOE Enablement Feature

Step4: Sales Channel updates their website registration data (see pre-req #2 above) with information about the customer machine being enabled for temporary capacity.

NOTE: The order for a TCOE Enablement Feature will not be fulfilled until this step is completed

Step5: IBM generates a TCOE Enablement Code and mails/posts it

Step6: Customer retrieves the TCOE Enablement Code and applies it to the server using the appropriate DST/SST Screen (Enable Temporary System Capacity)

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Guidelines for Ordering a TCOD Enablement Feature

ibm.com/eserver/series

Guidelines for Temporary Capacity Enablement

New Box Orders

the order for the new server **cannot** include a TCOD Enablement Feature because a TCOD Enablement Feature is MES only

Package-to-Package Conversion, Processor-to-Processor Conversion, or Model-to-Model Upgrades

- => All records of TCOD Enablement Features ordered prior to the conversion/upgrade are removed from the machine records
(will need to order a new TCOD Enablement Feature for new hardware)
- => You can include a TCOD Enablement Feature on these types of orders (see warning) and have your TCOD Enablement Code mailed to you as well as posted on the web, so it is ready to enter on your server as part of the conversion/upgrade.



Warning: Delays can occur in the scheduling/fulfillment of this type of order because a TCOD Contract must first be signed

Enablement Feature Orders

- => For orders that have TCOD Enablement Features but don't contain a Processor or Package Feature .. if the Machine Serial# and/or the Capacity Card Serial# have not been altered outside of the IBM manufacturing or field maintenance process, **then a TCOD Enablement Code will be generated and mailed/posted without requiring CUoD Data (VPD) to be collected from the server and sent to IBM**



© 2002 IBM Corporation
IBM & IBM Business Partner Internal Use Until Announced

How to retrieve a TCOB Enablement Code from the Web

Customer retrieves the TCOB Enablement Code from the web or waits for the TCOB Enablement Code to be sent by mail. The TCOB Enablement Code will be posted on the web usually within one business day of receiving the order on the manufacturing floor. To retrieve the TCOB Enablement Code follow these steps:

- 1) Go to the following Web-site: <http://www.ibm.com/eserver/series/hardware/ondemand>
- 2) Enter the Machine Type and Serial number of the target server on the web page
- 3) Print and/or record the TCOB Enablement Code displayed on the web page

How to enter a TCOB Enablement Code on the Server

Customer enters the TCOB Enablement Code at the System Console for the target server:

- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with Function 21 on the control panel (key in manual position)
- 2) Sign on using service tools user profile of System capacity - administration
- 3) Select the option to WORK WITH SYSTEM CAPACITY
- 3) Select the option to **ENABLE TEMPORARY SYSTEM CAPACITY**
- 4) Enter TCOB Enablement Code and press Enter
- 5) Press Enter to confirm change and exit the System Capacity service function

NOTE: If the server is in bypass mode for the System Password, DST option 12 may not be available (no access to the DST screens associated with the CUoD functionality). If this is the case, you should obtain a valid System Password by contacting you IBM business partner or IBM Sales rep.

After entering a TCOB Enablement Code, the server must be run for 15 minutes to insure that the TCOB Enablement Activation Code is persistently stored (remembered) within the server. If you enter a TCOB Enablement Code and shut down the server before it has run for 15 minutes, on your next IPL, the TCOB Enablement Code **may be forgotten by the sever and have to be re-entered**

Temporary Capacity Request

When you decide you actually need to use temporary capacity ... you simply go to the temporary capacity screen on the server and specify how many of the standby (currently not activated) processors you would like activated and for how many days you would like them activated.

You will be billed for the processor days you request, so it is important to assign the processors to a partition as soon as they are activated to get the full benefit of the temporary capacity.

At the end of the temporary period (days you requested), you must make the temporarily activated processors "available" (LPAR state) to be re-claimed by the server, or you will be billed (per TCOD contract you signed) for any Un-Returned processor days.

Request: Step-by Step

IBM eServer iSeries

Request: Step-by-Step

Step1: Customer establishes monthly reporting to IBM (whether or not temporary capacity is used).
Details on how to setup electronic reporting (automated) can be found in the planning guide located at <http://www.ibm.com/eserver/series/hardware/ondemand>

Step2: Customer goes to the appropriate DST/SST Screen (Work With Temporary Capacity) on the server and specifies the amount and duration of temporary capacity he/she wants (e.g. quantity of processors for a duration of days)

Step3: Customer presses enter, to confirm the request, and the capacity is activated

Step4: Customer assigns the activated processors to a partition (whether or not the machine is configured for LPAR) to begin use of the temporary capacity

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

What is a Processor Day ?

Temporary capacity is activated, measured, and billed in units called "Processor Days" ...

Requested Processor Days: number of processors multiplied by the number of days specified on a request for temporary capacity

Un-Returned Processor Days: number of processors multiplied by the number of days that remain available for use beyond the expiration of the request for temporary capacity

How is a Processor Day counted?

Scenario-1: When a request for temporary capacity is made (once the confirmation screen is pressed), a request is considered "started". Once the request is started, at the beginning of each day (24 hour period) a processor is available for use, the server will record one Requested Processor Day.

Scenario-2: A request for temporary capacity can be stopped at any time, when the request is stopped, the server recorded information will be adjusted to reflect the appropriate number of Requested Processor Days (number of processors multiplied times the number of days that the temporary capacity was actually available for use). If a request for temporary capacity is stopped anytime before a full (24 hour period) day has expired ... the server will have recorded a Requested Processor Day for each processor that was specified on the request and made available for use per the previous paragraph. (Note: Each time a request is started for a processor, a Requested Processor Day is recorded .. if the request is stopped and a new request is then started within the same 24 hour period, the result will be the recording of an additional Processor Day).

Scenario-3: If processors remain available for use beyond the number of days specified on a request for temporary capacity, the server will record Un-Returned Processor Days. One Un-Returned Processor Day will be recorded for each processor that is still available for use (customer has not removed the processors from the assigned partitions and made them available to be re-claimed by the server) at the expiration of the request . **An additional Un-Returned Processor Day will be recorded for each processor that is still available for use at the beginning of each subsequent 24 hour period.** (Note: Multiple warning messages will be provided on the server alerting the customer to the pending expiration of a request for temporary capacity)

Start a Request for Processor Days

To request an amount of temporary capacity, simply follow these steps:

- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with F21 on the control panel
- 2) Sign on using service tools user profile of System capacity - administration or System capacity - operator
- 3) Select the option to WORK WITH SYSTEM CAPACITY
- 4) Select the option to WORK WITH TEMPORARY CAPACITY
- 5) Enter a number of processors and a number of days ... then press ENTER
- 6) Press enter on the confirm screen (text is shown to re-affirm the customer's understanding of the contract he/she signed prior to the enablement of this specific server for temporary capacity)

- 7) Assign the Activated Processors to a partition ... **you must do these steps even if your machine is not configured for LPAR!**
 - A) Start the Work with system partitions option in DST or SST
 - B) Enter Option 3 (Work with partition configuration)
 - C) Enter Option 2 (Change partition processing resources) next to the PRIMARY
 - D) Enter a value for "New number of processors" (The value should represent TOTAL active processors) ... press Enter

Note: *If a configuration error is signaled at the bottom of the screen, refer to LPAR trouble shooting article at <http://publib.boulder.ibm.com/series/v5r2/ic2924/info/rzaj8/rzaj8overview.htm>*
 - E) Press Enter to confirm the change
 - F) Exit SST or DST

How to Stop a Request before it Expires

To stop a request before it expires you must perform two steps. **If both of these steps are not completed in the proper order, the machine will continue to count a quantity of Un-Returned Processor Days and you will be billed for these days at the end of the quarter.**

- First: Use LPAR screens to remove the temporarily activated processors from the partitions they were assigned to and make them available to be re-claimed by the server
- Second: Use the following steps to actually “stop” your request for temporary capacity (number of processors for a number of days)
- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with F21 on the control panel
 - 2) Sign on using service tools user profile of System capacity - administration or System capacity - operator
 - 3) Select the option to WORK WITH SYSTEM CAPACITY
 - 4) Select the option to WORK WITH TEMPORARY SYSTEM CAPACITY (TCOD)
 - 5) Select the option to stop the request and confirm the change

What Happens When a Request Expires?

One of two scenarios can happen ...

Scenario#1: If you make the temporary capacity available to be re-claimed before the request expires ...then the request will expire and be removed from the WORK WITH TEMPORARY SYSTEM CAPACITY Screen.

Scenario#2: If you do not make the temporary capacity available to be re-claimed before the request expires .. then the request will expire and be removed from the WORK WITH TEMPORARY SYSTEM CAPACITY Screen.

WARNING: The server will treat the temporary capacity that is still assigned to partitions as Un-Returned Processor Days (you will be charged for Un-Returned Processor Days at the same rate you would have been charged for Requested Processor Days).

How to Display Temporary Capacity Information?

Information about how many standby processors are activated can be reviewed by using the following steps:

- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with F21 on the control panel
- 2) Sign on using service tools user profile of System capacity - administration or System capacity - operator
- 3) Select the option to WORK WITH SYSTEM CAPACITY
- 4) Select the option to DISPLAY SYSTEM CAPACITY INFORMATION
- 5) Select the PF Key to DISPLAY TEMPORARY SYSTEM CAPACITY

Temporary Capacity Billing

The contract signed by the customer prior to receiving the enablement code, requires the customer to report billing data, at least once per month (whether there is activity or not). This data is used to determine the proper amount to bill the customer for at the end of each billing period (calendar quarter).

Processor days of credit will be applied against any Requested and/or Un-Returned processor days of temporary capacity. This will happen automatically, until they are used up.

Failure to report billing data during a Billing Quarter for which the machine has been enabled (TCOD Enablement Feature has been ordered and the resulting TCOD Enablement Code has been shipped), will result in estimated bill for 90 Processor Days of temporary capacity .

The Sales Channel will be notified of customer requests for temporary capacity. As a result, the Sales Channel is required to place an order for a quantity of TCOD Billing Features (One Feature = One Processor Day).

| Model | Processor Feature | Package Feature | Billing Feature |
|-------|----------------------|--------------------|--------------------|
| 890 | 2498 | 7427 | 1792 |
| | | 7426 | 1791 |
| | | 7425 | na |
| 890 | 2497 | 7424 | 1789 |
| | | 7423 | 1788 |
| | | 7422 | na |
| 870 | 2486 | 7421 | 1786 |
| | | 7420 | 1785 |
| | | 7419 | na |
| 825 | 2473 | 7418 | 1783 |
| | | 7417 | 1782 |
| | | 7416 | na |

Bill: Step-by Step

IBM eServer iSeries 

Bill: Step-by-Step

Step1: Customer must report billing data (Requested and Un-Returned Processor Days) at a minimum of once per month (per signed contract)

Step2: At the end of each billing period (calendar quarter), IBM will process the reported data that has been collected in the IBM database (MRPD), and notify the Sales Channel of any activity, so the proper billing can take place

Step3: Sales Channel places an order for a quantity of TCOD Billing Features (One billing feature = One processor day)

Step4: IBM will ship a notice to the "Ship-to-Address" outlining the activity IBM has recognized for the billing period. The notice contains the same info that has been forwarded to the e-mail addresses of the Sales Channel ... no pricing information!. The actual shipping of this notice to the "Ship-to-Address" on the order represents the fulfillment of the TCOD Billing Features from a manufacturing perspective.

Step5: Customer pays the Sales Channel and the Sales Channel pays IBM for the fulfillment of the TCOD Billing Features (Note: The customer can review a history log on the server, that contains a record for each request of temporary capacity that can be used to verify billing values)

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

How to Report via Electronic Service Agent

Information about your requests for temporary capacity must be reported to IBM (minimum of once per month per the TCOD Contract). Electronic Service Agent can be used to “electronically” transfer information to IBM on a regularly scheduled basis.

Exercise the steps found in Chapter 2 of the IBM Electronic Service Agent for iSeries Simplified Activation User Guide -- Release V5R2, found at URL:

http://publib.boulder.ibm.com/as400_sd/sdsadoc.html

How to Report via Fax

Information about your requests for temporary capacity must be reported to IBM (minimum of once per month per the TCOD Contract). The data that must be reported can be collected by following the steps outlined below:

- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with F21 on the control panel
- 2) Sign on using service tools user profile of System capacity - administration or System capacity - operator
- 3) Select the option to WORK WITH SYSTEM CAPACITY
- 4) Select the option to DISPLAY SYSTEM CAPACITY INFORMATION
- 5) Select the option to DISPLAY TEMPORARY SYSTEM CAPACITY
- 6) Print the screen and fax a copy of the printed screen to the TCOD Administrator at 1-507-253-7979

How to Report via e-Mail

Information about your requests for temporary capacity must be reported to IBM (minimum of once per month per the TCOD Contract). The data that must be reported can be collected by following the steps outlined below:

- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with F21 on the control panel
- 2) Sign on using service tools user profile of System capacity - administration or System capacity - operator
- 3) Select the option to WORK WITH SYSTEM CAPACITY
- 4) Select the option to DISPLAY SYSTEM CAPACITY INFORMATION
- 5) Select the option to DISPLAY TEMPORARY SYSTEM CAPACITY
- 6) Copy an electronic image of the screen and e-mail to the TCOD Administrator at tcodadmin@us.ibm.com

How to Review the History Log

If there are concerns with a bill or the customer simply wants to review the history of temporary capacity requests on the server, follow these steps:

- 1) Start System Service Tools (SST) with the STRSST command or start Dedicated Service Tools (DST) with F21 on the control panel
- 2) Sign on using service tools user profile of System capacity - administration or System capacity - operator
- 3) Select the option to WORK WITH SYSTEM CAPACITY
- 4) Select the [PF key to DISPLAY HISTORY LOG](#)

How to Resolve a Customer Issue with their Bill

Here are the levels of customer bill resolution that should be followed:

Level-1: Partner answers customer's questions

Level-2: Partner and customer jointly review the History Log and validate that the appropriate bill has been generated

Level-3: Partner contacts TOD administrator (e-mail) with explanation of customer issue and a copy of the History Log. TCO
Administrator resolves situation with one of the following:

- A) Partner/Customer are resolved of the Processor Days in question
- B) Partner/Customer are resolved of all Processor Days for this quarter
- C) Partner/Customer are resolved of all Processor Days for this quarter and a TCO Termination Code is generated and applied to the server (server is no longer enabled for temporary capacity)

Termination

To stop future use of temporary capacity, a TCOD Termination Code must be applied to the server.

Scenario #1: Customer requests a TCOD Termination Code because he/she does not want the server enabled for temporary capacity any longer

Required Steps:

- Step1: Customer makes a request to the TCOD Administrator (tcodadmin@us.ibm.com)
- Step2: TCOD Administrator uses the TCOD Application to generate a TCOD Termination Code for the customer's server, using "9999" as the Feature/CCIN value
- Step3: TCOD Administrator provides the Termination Code to the customer
- Step4: The customer enters the TCOD Termination Code on the same screen used to enter a TCOD Enablement Code

Scenario #2: Customer/Partner requests a TCOD Termination Code because they are selling their machine (Note: customer is required to have a TCOD Termination Code applied to the server before being sold to avoid billing for temporary capacity due to a failure to report machine activity during future TCOD Billing Periods)

Required Steps:

- Step1: Customer/Partner makes a request to the TCOD Administrator (tcodadmin@us.ibm.com)
- Step2: TCOD Administrator uses the TCOD Application to generate a TCOD Termination Code for the customer's server, using "9999" as the Feature/CCIN value
- Step3: TCOD Administrator provides the Termination Code to a CE, IBM specialist, or Channel Partner (not the customer) that can make a site visit
- Step4: The TCOD Termination Code is entered on the same screen used to enter a TCOD Enablement Code

Scenario #3: Partner requests a TCOD Termination Code because customer is not paying for temporary capacity

Required Steps:

- Step1: Partner makes a request to the TCOD Administrator (tcodadmin@us.ibm.com)
- Step2: TCOD Administrator uses the TCOD Application to generate a TCOD Termination Code for the customer's server, using "9999" as the Feature/CCIN value
- Step3: TCOD Administrator provides the Termination Code to the Partner
- Step4: The partner enters the TCOD Termination Code on the same screen used to enter a TCOD Enablement Code


Scenario #4: IBM or Partner requests a TCOD Termination Code because customer is in noncompliance with The TCOD contract that was signed prior to enabling temporary capacity on the server

Required Steps:

- Step1: IBM or Partner makes a request to the TCOD Administrator (tcodadmin@us.ibm.com)
- Step2: TCOD Administrator uses the TCOD Application to generate a TCOD Termination Code for the customer's server, using "9999" as the Feature/CCIN value
- Step3: TCOD Administrator provides the Termination Code to a CE, IBM specialist, or Channel Partner (not the customer) that can make a site visit
- Step4: The TCOD Termination Code is entered on the same screen used to enter a TCOD Enablement Code

Customer Contracts/R esponsibilities

Customer Contracts



IBM eServer iSeries

Customer Contracts

Enabling an iSeries server for the downstream customer use of temporary capacity (TCOD Enablement Feature) requires the following contracts be completed and signed by the end user:

- For end users who have an IBM Customer Agreement (ICA), or equivalent, in place:
IBM Customer Agreement, Attachment for Temporary Capacity On Demand
and IBM Supplement for Temporary Capacity On Demand
- For end users who do not have an ICA or equivalent in place:
IBM Agreement for Temporary Capacity On Demand
and IBM Supplement for Temporary Capacity On Demand
- Optionally, the following contract document can be signed (in addition to one of the above contract sets) if it is impossible to use electronic reporting:
IBM Addendum for Temporary Capacity On Demand Alternative Reporting

The above contract documents are available through your IBM representative. After being signed by IBM and the end customer, the original must be sent to the IBM GEO CSO organization. In addition, a copy must be faxed to IBM at 1-507-253-7979 (WW support structure) before the order for the TCOD Enablement Feature will be fulfilled.

**For more information about the Sales Channel requirements (registration and contracts) relative to temporary capacity on the iSeries, please go to the following website after 03/10/2003:
<http://www.ibm.com/eserver/iseries/hardware/ondemand>**

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Customer Responsibilities

IBM eServer iSeries

IBM

Customer Responsibilities

Enable:

A) Order a TCOD Enablement Feature from your Sales Channel

- 1) The TCOD Enablement Feature is good for 192 Processor Days (temporary capacity that can be requested before a new TCOD Enablement Feature would have to be ordered)
- 2) TCOD Enablement Features are not additive .. if you order a new one and apply the TCOD Enablement Code, the new limit will be set to 192 Processor Days, no matter how many Processor Days were left on the old limit

B) Sign the proper contract

- For end users who have an IBM Customer Agreement (ICA), or equivalent, in place:
IBM Customer Agreement, Attachment for Temporary Capacity On Demand **and** IBM Supplement for Temporary Capacity On Demand
- For end users who do not have an ICA or equivalent in place:
IBM Agreement for Temporary Capacity On Demand **and** IBM Supplement for Temporary Capacity On Demand
- Optionally, the following contract document can be signed (in addition to one of the above contract sets) if it is impossible to use electronic reporting:
IBM Addendum for Temporary Capacity On Demand Alternative Reporting

C) Retrieve and enter the TCOD Enablement Code on the server

Request:

- A) Report to IBM a minimum of once per month using Electronic Service Agent (Exception: FAX or eMail) the billing data that reflects the quantity of Requested and Un-Returned Processor Days for your server
- B) Specify a quantity of processors and a quantity of days to be activated as temporary capacity
- C) Return requested processors at the end of the temporary period so they can be re-claimed by the server

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Customer Responsibilities (continued ..)

Bill:

Accept and pay your bill for the number of Requested and Un-Returned Processor Days that occurs during each billing period

- 1) If you fail to report activity during a billing period (calendar quarter), accept the terms of the contract that explain that you will be charged a flat rate of 90 Processor Days of temporary capacity
- 2) Understand that you will receive (first time the hardware is enabled) at no charge, 14 Bonus Days that will be applied by IBM to your machine records and subsequently will result in a reduction in the number of actual Processor Days you will be billed for by your Sales Channel
- 3) Return requested processors at the end of the temporary period, so they can be re-claimed by the server, or accept the terms of the contract that explain you will be charged for Un-Returned Processor Days at the same rate as Requested Processor Days

Terminate:


Request a TCOB Termination Code from tcodadmin@us.ibm.com and allow IBM/partner to enter the code prior to the machine being sold or returned from lease

- 1) Understand that it is the customer's responsibility to request a TCOB Termination Code and allow machine access so that it may be applied prior to the machine being sold (Failure to do so will result in on going Processor Day billing equal to 90 Processor Days due to the fact that the original customer is no longer reporting machine activity)

Allow a TCOB Termination Code be entered by IBM/partner if you, the customer, is not paying the bills and/or is found to be in noncompliance with the contracts you have signed

Sales Channel Contracts/R esponsibilities

Sales Channel Contracts

IBM eServer iSeries 

Sales Channel Contracts

Business Partners who participate in the enablement of an iSeries server for the downstream customer use of temporary capacity (order for a TCOE Enablement Feature is placed) must sign one of the following contracts:

- Distributors (1st Tier) must sign:
IBM Business Partner Agreement-- Distributor Attachment for Temporary Capacity On Demand
- Solution Providers (2nd Tier) who acquire products from Distributors must sign:
IBM Business Partner Agreement for Solution Providers -- Attachment for Temporary Capacity On Demand
- Solution Providers (1st Tier) and System Integrators (1st Tier) who acquire their products directly from IBM must sign:
IBM Business Partner Agreement -- Attachment for Temporary Capacity On Demand

These attachments are available through your IBM BPSO representative. After being signed by IBM and the Business Partner, the original must be returned to the appropriate IBM BPSO organization

For more information about the Sales Channel requirements (registration and contracts) relative to temporary capacity for the iSeries, please go to the following website after 03/10/2003:
<http://www.ibm.com/eserver/series/hardware/ondemand>

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Distributor Responsibilities

IBM eServer iSeriesIBM

Distributor Responsibilities

Pre-Requsite:

- A) Request the **IBM Business Partner Agreement-- Distributor Attachment for Temporary Capacity On Demand** from your GEO BPSO organization, sign it, and return it to BPSO organization
Note1: This is a one time activity and it is IBM's objective to accomplish this for 100% of the Distributors on a WW basis in the February 2003 timeframe
Note2: Each GEO's BPSO organization will handle this two-party signed attachment in a business as usual fashion, standard processes for "requesting" the attachment and standard processes for ensuring it is signed and returned
- B) Request the **IBM Business Partner Agreement for Solution Providers -- Attachment for Temporary Capacity On Demand** from your GEO BPSO organization on behalf of the Solution Provider, facilitate the signing of it by the Solution Provider, and ensure it gets returned to BPSO organization
Note1: This is a one time activity that is only necessary when/if a Solution Provider has actually identified an opportunity to enable On/Off CUoD for a specific customer's machine. IBM is not necessarily expecting, nor requiring large numbers of Solution Providers to take this step in 2003.
Note2: Each GEO's BPSO organization will handle this two-party signed attachment in a business as usual fashion, standard processes for "requesting" the attachment and standard processes for ensuring it is signed and returned
- C) Ensure the Solution Provider who signs the contract in PRE-REQ "B", is aware of their requirement to register themselves as a Sales Channel at this website (www.ibm.com/eserver/series/hardware/ondemand) by providing a unique/IBM recognizable identifier for the Solutoin Provider and the Solution Provider's Distributor, along with three e-mail addresses who will receive customer activity information at the end of each quarter and follow through with the appropriate customer billing and IBM order/payment

Enable:

- A) Ensure the Solution Provider who signs the contract in PRE-REQ "B" and registers at the website per PRE-REQ "C" also records the machine serial number information at the same website (www.ibm.com/eserver/series/hardware/ondmeand) for the machine they are ordering a TCOD Enablement Feature ... if this does not occur, the order for the TCOD Enablement Feature will not be fulfilled!

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Distributor Responsibilities

Bill:

- A) Work with the Solution Provider to place an order for a quantity of TCOD Billing Features in IBM's configurator (treat them like any other order for a qty of hardware features against a specific serial number).
- B) Work with the Solution Provider to bill the customer for a quantity of TCOD Billing Features (one billing feature per Processor Day)

Note1: The contract signed between the customer and IBM (two-party contract) prior to the enablement of On/Off CUoD for the customer's machine obligates him/her to pay for the request/use of temporary capacity.

Customer Contract Wording:

You agree that you are liable to IBM for payment for each TCOD Unit (both Requested and Unreturned Units) on your TCOD Machine. This liability is discharged when you order and pay IBM or your designated participating IBM Business Partner for the TCOD Units. The amount due will be at IBM's or your IBM Business Partner's, as applicable, then current prices and payment terms for the TCOD Billing Feature for the applicable TCOD Billing Quarter.

Note2: If it is deemed necessary to have a PO in place to facilitate action "A" and "B", then one could consider an open PO approach initiated at the time the customer signs the contract for temporary capacity or a PO that is put in place following the e-mail notification to the Solution Provider that activity has actually happened within a quarter that requires billing to take place

Solution Provider (buy from distributor) Responsibilities

IBM eServer iSeries

Solution Provider (buys from distributor) Responsibilities

Pre-Requisite:

A) Work with your Distributor to request the **IBM Business Partner Agreement for Solution Providers -- Attachment for Temporary Capacity On Demand** from your GEO BPSO organization, sign it, and ensure it gets returned to BPSO organization

Note1: This is a one time activity that is only necessary when/if a Solution Provider has actually identified an opportunity to enable On/Off CUoD for a specific customer's machine. IBM is not necessarily expecting, nor requiring large numbers of Solution Providers to take this step in 2003.

Note2: Each GEO's BPSO organization will handle this two-party signed attachment in a business as usual fashion, standard processes for "requesting" the attachment and standard processes for ensuring it is signed and returned

B) Register your company as a Sales Channel at this website (www.ibm.com/eserver/iseries/hardware/ondemand) by providing a unique/IBM recognizable identifier for your company, a unique/IBM recognizable identifier for your Distributor, and three e-mail addresses

Note1: The three e-mail addresses will be the recipients of customer activity information collected and sent by IBM at the end of each calendar quarter to be used for customer billing and IBM order/payment of temporary capacity

Note2: As part of the registration process, you will see the **IBM Business Partner Agreement for Solution Providers -- Attachment for Temporary Capacity On Demand** on a screen and will be asked to confirm you agree with the T&Cs and that they have signed a hardcopy of the attachment that has been returned to the IBM BPSO organization

Enable:

A) Facilitate the signing (IBM and Customer signatures are required) of the proper customer contract

- For end users who have an IBM Customer Agreement (ICA), or equivalent, in place:
IBM Customer Agreement, Attachment for Temporary Capacity On Demand and IBM Supplement for Temporary Capacity On Demand
- For end users who do not have an ICA or equivalent in place:
IBM Agreement for Temporary Capacity On Demand and IBM Supplement for Temporary Capacity On Demand
- Optionally, the following contract document can be signed (in addition to one of the above contract sets) if it is impossible to use electronic reporting:
IBM Addendum for Temporary Capacity On Demand Alternative Reporting

B) Fax a copy of the signed customer contract (customer keeps original) to IBM TCOD Administrator at 1-507-253-7979

C) Update your registration information at the CUoD website (www.ibm.com/eserver/iseries/hardware/ondemand) each time a TCOD Enablement Feature is being ordered for a new machine (serial#)

Note1: The order for a TCOD Enablement Feature will not be fulfilled (it will not even be scheduled) until a signed customer contract has been received by IBM and you have recorded the machine serial# at the CUoD website under your Sales Channel registration information

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Solution Provider (buys from distributor) Responsibilities

Bill:

- A) Receive customer activity data from IBM at the end of each calendar quarter (e-mail based on addresses provided at time of your registration at the CUoD website)
- B) Work with your Distributor to place an order for a quantity of TCOD Billing Features in IBM's configurator (treat them like an other order for a qty of hardware features against a specific serial number).
- C) Bill the customer for a quantity of TCOD Billing Features (one billing feature per Processor Day)

Note1: The contract signed between the customer and IBM (two-party contract) prior to the enablement of On/Off CUoD for the customer's machine obligates him/her to pay for the request/use of temporary capacity.

Customer Contract Wording:

You agree that you are liable to IBM for payment for each TCOD Unit (both Requested and Unreturned Units) on your TCOD Machine. This liability is discharged when you order and pay IBM or your designated participating IBM Business Partner for the TCOD Units. The amount due will be at IBM's or your IBM Business Partner's, as applicable, then current prices and payment terms for the TCOD Billing Feature for the applicable TCOD Billing Quarter.

Note2: If it is deemed necessary to have a PO in place to facilitate action "B" and "C", then one could consider an open PO approach initiated at the time the customer signs contract or a PO that is put in place following the e-mail notification to the Solution Provider that activity has actually happened within a quarter that requires billing to take place

Terminate:

- A) Request a TCOD Termination Code (make the request to TCODADMIN@US.IBM.COM) when/if one of the following situations occur:
 - 1) Customer wants it because they don't want the ability to activate temporary capacity anymore
 - 2) Customer wants it because they are obligated by TCOD Contract to terminate temporary capacity before selling the machine or ending a lease
 - 3) Distributor/Solution Provider wants it because they aren't getting paid by customer
 - 4) Distributor/Solution Provider wants it because they have detected customer non-compliance with the TCOD contract

Solution Provider or Service Provider (buys from IBM) Responsibilities

IBM eServer iSeriesIBM

Soluton Provider or Service Provider (buys from IBM) Responsibilities

Pre-Requisite:

A) Request the **IBM Business Partner Agreement-- Attachment for Temporary Capacity On Demand** from your GEO BPSO organization, sign it, and return it to BPSO organization

Note1: This is a one time activity that is only necessary when/if a Partner has actually identified an opportunity to enable On/Off CUoD for a specific customer's machine. IBM is not necessarily expecting, nor requiring large numbers of Solution Providers to take this step in 2003.

Note2: Each GEO's BPSO organization will handle this two-party signed attachment in a business as usual fashion, standard processes for "requesting" the attachment and standard processes for ensuring it is signed and returned

B) Register your company as a Sales Channel at this website (www.ibm.com/eserver/series/hardware/ondemand) by providing your unique IBM partner identifier and three e-mail addresses

Note1: The three e-mail addresses will be the recipients of customer activity information collected and sent by IBM at the end of each calendar quarter to be used for customer billing and IBM order/payment of temporary capacity

Note2: As part of the registration process, you will see the **IBM Business Partner Agreement -- Attachment for Temporary Capacity On Demand** on a screen and will be asked to confirm you agree with the T&Cs and that they have signed a hardcopy of the attachment that has been returned to the IBM BPSO organization

Enable:

A) Facilitate the signing (IBM and Customer signatures are required) of the proper customer contract

- For end users who have an IBM Customer Agreement (ICA), or equivalent, in place:
IBM Customer Agreement, Attachment for Temporary Capacity On Demand and IBM Supplement for Temporary Capacity On Demand
- For end users who do not have an ICA or equivalent in place:
IBM Agreement for Temporary Capacity On Demand and IBM Supplement for Temporary Capacity On Demand
- Optionally, the following contract document can be signed (in addition to one of the above contract sets) if it is impossible to use electronic reporting:
IBM Addendum for Temporary Capacity On Demand Alternative Reporting

B) Fax a copy of the signed customer contract (customer keeps original) to IBM TCOD Administrator at 1-507-253-7979

C) Update your registration information at the CUoD website (www.ibm.com/eserver/series/hardware/ondemand) each time a TCOD Enablement Feature is being ordered for a new machine (serial#)

Note1: The order for a TCOD Enablement Feature will not be fulfilled (it will not even be scheduled) until a signed customer contract has been received by IBM and you have recorded the machine serial# at the CUoD website under your Sales Channel registration information

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation

Soluton Provider or Service Provider (buys from IBM) Responsibilities

Bill:

- A) Receive a customer activity data from IBM at the end of each calendar quarter (e-mail based on addresses provided at time of your registration at the CUoD website)
- B) Place an order for a quantity of TCOD Billing Features in IBM's configurator (treat them like an other order for a qty of hardware features against a specific serial number).
- C) Bill the customer for a quantity of TCOD Billing Features (one billing feature per Processor Day)

Note1: The contract signed between the customer and IBM (two-party contract) prior to the enablement of On/Off CUoD for the customer's machine obligates him/her to pay for the request/use of temporary capacity.

Customer Contract Wording:

You agree that you are liable to IBM for payment for each TCOD Unit (both Requested and Unreturned Units) on your TCOD Machine. This liability is discharged when you order and pay IBM or your designated participating IBM Business Partner for the TCOD Units. The amount due will be at IBM's or your IBM Business Partner's, as applicable, then current prices and payment terms for the TCOD Billing Feature for the applicable TCOD Billing Quarter.


Note2: If it is deemed necessary to have a PO in place to facilitate action "B" and "C", then one could consider an open PO approach initiated at the time the customer signs contract or a PO that is put in place following the e-mail notification to the IBMpartner that activity has actually happened within a quarter that requires billing to take place

Terminate:

- A) Request a TCOD Termination Code (make the request to TCODADMIN@US.IBM.COM) when/if one of the following situations occur:
 - 1) Customer wants it because they don't want the ability to activate temporary capacity anymore
 - 2) Customer wants it because they are obligated by TCOD Contract to terminate temporary capacity before selling the machine or ending a lease
 - 3) Partner wants it because they aren't getting paid by customer
 - 4) Partner wants it because they have detected customer noncompliance with the TCOD contract

IBM Direct Sales Responsibilities

IBM eServer iSeries



IBM Direct Sales Responsibilities

Pre-Requisite:

A) Register yourself as the Sales Channel at this website (www.ibm.com/eserver/series/hardware/ondemand) by providing your unique IBM serial# and three e-mail addresses

Note1: The three e-mail addresses will be the recipients of customer activity information collected and sent by IBM at the end of each calendar quarter to be used for customer billing and IBM order/payment of temporary capacity

Enable:

A) Facilitate the signing (IBM and Customer signatures are required) of the proper customer contract

- For end users who have an IBM Customer Agreement (ICA), or equivalent, in place:
IBM Customer Agreement, Attachment for Temporary Capacity On Demand **and** IBM Supplement for Temporary Capacity On Demand
- For end users who do not have an ICA or equivalent in place:
IBM Agreement for Temporary Capacity On Demand **and** IBM Supplement for Temporary Capacity On Demand
- Optionally, the following contract document can be signed (in addition to one of the above contract sets) if it is impossible to use electronic reporting:
IBM Addendum for Temporary Capacity On Demand Alternative Reporting

B) Fax a copy of the signed customer contract (customer keeps original) to IBM TCOD Administrator at 1-507-253-7979

C) Update your registration information at the CUoD website (www.ibm.com/eserver/series/hardware/ondemand) each time a TCOD Enablement Feature is being ordered for a new machine (serial#)

Note1: The order for a TCOD Enablement Feature will not be fulfilled (it will not even be scheduled) until a signed customer contract has been received by IBM **and** you have recorded the machine serial# at the CUoD website under your Sales Channel registration information

IBM & IBM Business Partner Use Only Until Announced
© 2000-2003 IBM Corporation



IBM Direct Sales Responsibilities

Bill:

- A) Receive a customer activity data from IBM at the end of each calendar quarter (e-mail to each address provided at time of your Sales Channel registration at the CUoD website)
- B) Place an order for a quantity of TCOD Billing Features in IBM's configurator (treat them like any other order for a qty of hardware features against a specific serial number).
- C) Bill the customer for a quantity of TCOD Billing Features (one billing feature per Processor Day)

Note1: The contract signed between the customer and IBM (two-party contract) prior to the enablement of On/Off CUoD for the customer's machine obligates him/her to pay for the request/use of temporary capacity.

Customer Contract Wording:

You agree that you are liable to IBM for payment for each TCOD Unit (both Requested and Unreturned Units) on your TCOD Machine. This liability is discharged when you order and pay IBM or your designated participating IBM Business Partner for the TCOD Units. The amount due will be at IBM's or your IBM Business Partner's, as applicable, then current prices and payment terms for the TCOD Billing Feature for the applicable TCOD Billing Quarter.

Note2: IBM Direct will work with their CSO organizations business-as-usual (just like an order for any hardware feature against a specific machine serial#) to ensure an order is placed and the customer is billed. This may require the creation of an open-ended PO as part of the contract arrangement or a unique PO each quarter their is customer activity relative to temporary capacity

Terminate:

- A) Request a TCOD Termination Code (make the request to TCODADMIN@US.IBM.COM) when/if one of the following situations occur:
 - 1) Customer wants it because they don't want the ability to activate temporary capacity anymore
 - 2) Customer wants it because they are obligated by TCOD Contract to terminate temporary capacity before selling the machine or ending a lease
 - 3) IBM wants it because they aren't getting paid by customer
 - 4) IBM wants it because they have detected customer non-compliance with the customer signed contract

Converting Hardware Features

ibm.com/eserver/series

Converting Hardware Features

- A two step process is used to convert Model 825, 870, and 890 Processor Features
 - Step1: All standby processors must be activated
 - ▶ the possible paths for feature conversions will not be shown in the configurator until enough POD Activation Features have been ordered to activate 100% of the standby processors
 - ▶ The Processor Feature conversion price in Step2 will take into account the price paid for all standby processors to be activated in Step1
 - Step2: Processor Feature to Processor Feature Conversion
 - ▶ What happens to machine records
 - Old POD Activation Features will not be carried forward
 - Old TCOD Enablement Features will not be carried forward
 - Old TCOD Billing Features will be carried forward but no TCOD Data will remain on the server (**customer is required, per contract, to report any temporary capacity activity prior to the conversion**)

- A one step process is used to convert Model 825, 870, and 890 Package Features
 - Step1: Package Feature to Package Feature Conversion
 - ▶ What happens to machine records
 - Old POD Activation Features will be carried forward and a new Activation Code will be generated
 - Old TCOD Enablement Features will not be carried forward
 - Old TCOD Billing Features will be carried forward but no TCOD data will remain on the server (**customer is required, per contract, to report any temporary capacity activity prior to the conversion**)



© 2002 IBM Corporation
IBM & IBM Business Partner Internal Use Until Announced

Processor Failures

Standby processors **CAN** be used as REPLACEMENTS for failed processors (**Note: If the customer has activated all the standby processors, then obviously there aren't any to be used as spares**). Starting with V5R1, this capability is offered on iSeries servers with CUoD to help minimize the impact to server performance caused by a failed processor . **By re-IPLing the server after a processor fails**, the customer can re-establish required performance levels without waiting for parts to arrive on-site. If a stand-by processor is not currently activated, it will automatically be assigned as a REPLACEMENT processor and the customer can continue processing .

Moving Hardware

iSeries server to iSeries server interchange of processor and/or package features is iSeries system password protected. iSeries server to iSeries server interchange of processor and/or package features outside IBM standard practices and procedures, may void the server warranty or service contracts.

Any unauthorized (Non IBM conversion/upgrade) movement of processor features (processor parts) and/or package features (capacity card) will disable any previously activated/enabled standby processor capacity.

Any physical addition/removal of processor features (processor parts) and/or package features (capacity card) that results in an invalid configuration will make the server itself unusable (server will not IPL without a valid configuration).

Parts resulting from the fulfillment of an order for a processor conversion are directly tied to a target server (serial number), the parts are not transferable to a server with a different serial number. Installing the parts on a server with a different serial number is not supported by IBM.

Results of Moving iSeries Hardware

- Adding/Removing just the Processor Feature (**Processor Parts**)

A) Non-CUoD Models: Removing hardware from machine "A" and putting them into machine "B":

NOT POSSIBLE TO GET A VALID CONFIGURATION on MACHINE "A" WHEN ADDING ONLY PROCESSOR PARTS (machine will not IPL)

B) CUoD Models: Removing Hardware from machine "A" and putting them into machine "B":

NOT POSSIBLE TO GET A VALID CONFIGURATION on MACHINE "A" WHEN ADDING ONLY PROCESSOR PARTS (machine will notIPL)

- Adding/Removing just the Package Feature (**Capacity Card**) or

- Adding/Removing a Processor Feature (**Processor Parts**) with associated Package Feature (**Capacity Card**)

A) Non-CUoD Models: Removing hardware from machine "A" and putting it into machine "B":

1) If machine "B" ends up with a **valid** configuration and it's **original** serial number ...

then machine "B" will IPL with 100% of the installed processor capacity as well as 100% of the function associated with the Package Feature (Capacity Card)

NOTE: the machine will IPL in 70 day bypass mode and a new system password will be required (because the hardware changed)

2) If machine "B" ends up with an **invalid** configuration (not something that could be ordered in the iSeries configurator) ... **then machine "B" will not IPL**

B) CUoD Models: Removing hardware from machine "A" and putting it into machine "B":

1) If machine "B" ends up with a **valid** configuration and it's **original** serial number ...

then machine "B" will IPL with 100% of the start-up processor capacity, 0% of any previously activated standby processor capacity, and 100% of the function associated with the Package Feature (Capacity Card)

NOTE1: the machine will IPL in 70 day bypass mode and a new system password will be required (because the hardware changed)

NOTE2: To refresh previously purchased activations, a maintenance action would be required to replace the Capacity Card and receive a refreshed set of Activation Codes from IBM Level II (Activation Codes will not be provided if the Serial# of the Capacity Card being returned as part of maintenance action does not match the Capacity Card Serial# stored in the IBM machine records reviewed by Level II)

NOTE3: To purchase new activation/enabement features, a maintenance action would be required (if not done for NOTE 2) to replace the Capacity Card and then an order would have to be placed in the iSeries configurator for the proper features

2) If machine "B" ends up with an **invalid** configuraiton (not something that could be ordered in the iSeries configurator) ... **then machine "B" will not IPL**

- Exchanging an Entire Server

A) Non-CUoD Models: **Machine will IPL with 100% of installed processor capacity as well as 100% of the function associated with the Package Feature (Capacity Card)**

B) CUoD Models: **Machine will IPL with 100% of startup processor capacity, 100% of any previously activated standby processor capacity, and 100% of the function associated with the Processor Feature (Capacity Card)**

NOTE: To purchase new activation/enabement features, an order would be placed in the iSeries configurator

Logical Partitions

Starting with V5R1, every server has a primary partition (whether or not a customer is actively using logical partitions). As a result, it is necessary to assign any activated processors to the primary (or a secondary) partition to utilize the processors.

STEP1: Standby processors must be activated to become available to the server

STEP2: Activated processors must be assigned to a partition.

If your server is logically partitioned, refer to your logical partition plan and assign the newly activated processors accordingly.

If your server is not logically partitioned, perform the following steps (Service tools authority is required with operator authority to system partitions).

- A) Start the Work with system partitions option in DST or SST
- B) Enter Option 3 (Work with partition configuration)
- C) Enter Option 2 (Change partition processing resources) next to PRIMARY
- D) Enter a value for "New number of processors" (The value should represent TOTAL active processors) ... press Enter

Note: *If a configuration error is signaled at the bottom of the screen, refer to LPAR trouble shooting article at <http://publib.boulder.ibm.com/iserics/v5r2/ic2924/info/rzaj8/rzaj8overview.htm>*

- E) Press Enter to confirm the change

Software Licenses

Activating a processor does not change the software tier for Model 825, 870, or 890.

Many partners use the Processor Feature Code value available on the server to set SW licensing fees for software developers software. This value continues to be available for all iSeries servers. It is important to understand that this value does not change, no matter how many standby processors get permanently or temporarily activated. The Processor Feature Code value (QPRCFEAT) can be displayed using the command WRKSYSVAL or retrieved using the RTVSYVAL command.

Software providers that charge SW licensing fees (ie. Operating Systems, middleware, applications, etc.) on a per processor basis, have historically utilized a "soft" compliance approach. With each permanent or temporary processor activation, it remains the customer's responsibility to inform and pay the required SW licensing fees associated with software that will be used on the activated processor(s).

- Point1: When a permanent processor activation (POD Activation Feature) is ordered, any required charges for IBM software (licensed by processor), is automatically initiated via IBM configurator
- Point2: When a temporary processor activation is requested on the server, any required charges for IBM software (licensed by processor), is the sole responsibility of the customer ... with the exception of OS/400 ... there are no additional OS/400 licensing charges associated with a temporary processor activation

The MATMATR Option OXO1F4 can be used to determine what capacity is active at any moment in time.

- Permanent: Check the field at offset 0x38, to determine how many processors have been permanently activated (this field represents the quantity of permanently activated processors at any point in time)
- Temporary: Check the field at offset 0x47, to determine how many processors have been temporarily activated (this field represents the quantity of temporarily activated processors at any point in time)

Performance Considerations

Standby processors are **NOT** considered within the various system functions that report CPU utilization percentages until they are **activated** and **assigned** to a partition.

CPU UTILIZATION

CPU percent is a calculated metric based on the amount of time the processor was active within an elapsed time. This is normally reported as a percentage where 100% indicates the processor was busy for the entire sample interval. When multiple processors are present, CPU time must be adjusted to be the average usage of all processors so that utilization is always reported as the percentage of total available capacity.

Interactive capability is determined by the package feature purchased. This capability is not impacted by the number of standby processors and does not change when standby processors become active. Interactive utilization reported as a percentage of interactive capability is not affected by the Capacity Upgrade on Demand technology. Within Management Central, this metric is called “CPU Utilization (Interactive Feature)”.

Interactive CPU utilization is also reported as a percentage of total system CPU. Within Management Central this metric is called “CPU Utilization (Interactive Jobs)”.

TOOLS

There are several tools that can be used to help project which model/processor is appropriate for an initial installation and for projecting when standby processors should be activated. The Workload Estimator is typically used for sizing an initial installation. PATROL is a capacity planner that can often be used for both initial planning and upgrade planning. PM/400 is a trending tool that helps predict growth across workloads. Management Central is a monitoring tool that can be used to identify workload growth. In addition, IBM offers a variety of service options to assist with capacity planning tasks.

Workload Estimator

The Workload Estimator supports models with CUoD. However, only the performance capacity for startup processors will be represented. Capacity for standby processors **is not represented in the tool**. This tool is designed for initial sizing estimates and is not intended to achieve single-processor granularity with its estimates. When the Workload Estimator “recommends” a server as having sufficient capacity to contain a set of workloads, it includes a pull-down list of other supported servers that have at least the same capacity as the recommended server.

The Workload Estimator and associated on-line documentation can be found at:
<http://www.ibm.com/eserver/series/support/estimator>

PM/400

For more detailed information about PM/400e, visit their website at <http://www.ibm.com/eserver/series/pm400>

Management Central

Use of Management Central to aid in Capacity Planning and point out where an activation of standby processors should be considered can be illustrated in the following example:

Consider the model 840-2416 with eight startup processors and four standby processors. The maximum CPU utilization attainable would be 8/12 or approximately 67%. Typical thresholds for system CPU monitoring would be 70% and 90% of total capacity. Sustained usage above 70% is an indicator that additional capacity should be considered. Usage above 90% indicates the system is reaching its capacity maximum.

Applying the above thresholds to the Model 840 with one of these Processor Features (FC 2416, 2417, or 2419) would yield thresholds of 47% and 60% respectively. These values can be seen in the following Management Central Monitor example.

When the initial threshold is reached, assuming the tool has been set up correctly, the line graph goes red indicating that additional processors may be needed. In addition, a message can be triggered and logged when the thresholds are reached, so that an accounting can be done over time of how often the thresholds are crossed. If it reaches the final threshold value often, an upgrade should definitely be considered.

License, Warranty, Maintenance

LICENSE

BUILT-IN-CAPACITY

A machine may include computing resources or capabilities that are to remain inactive, or whose use is restricted, until the right to access and use the resources or capabilities is purchased (Built-in-Capacity). Examples of such computing resources and capabilities include but are not limited to processors, memory, storage, processing capacity identified as interactive processing capacity, and/or workload specific resources or capabilities (such as limitations on the use for a specific operating system, programming language or application). You are licensed to use the Program only to the extent of authorizations you have acquired for access to and use of Built-in-Capacity. You agree that if your use of Built-in-Capacity exceeds the authorizations you have acquired, you will be liable to IBM for the full price of permanent, unrestricted use of the Built-in-Capacity at IBM's current list price.

BUILT-IN-CAPACITY RESTRICTIONS

Built-in-Capacity is protected by certain technological measures. As a condition for your license to the Program under the Agreement, you may not circumvent such technological measures, or use a third party or third party product to do so, or otherwise access or use unauthorized Built-in-Capacity. In the event IBM determines that changes are necessary to the technological measures designed to limit access or use of Built-in-Capacity to that which has been purchased or otherwise authorized, IBM may provide you with changes to such technological measures. As a condition for your license to the Program hereunder, you agree, at IBM's option, to apply or allow IBM to apply such changes.

IBM SUPPLIED PROGRAM TEMPORARY FIXES (PTFs)

Application of PTFs may disable or render ineffective programs that use system memory addresses not generated by the IBM translator, including programs that circumvent control technology designed to limit interactive capacity to purchased levels. By applying PTFs you authorize and agree to the foregoing.

WARRANTY

Warranty for all processors (start-up and stand-by) begin when the server is installed. By having the Warranty/Service start immediately upon installation, the customer is better positioned to receive prompt service for the repair/replacement of any failing parts, ensuring the full complement of stand-by processors are available for immediate activation.

 
MAINTENANCE

Maintenance agreement charges are based on the number of processors actually activated, maintenance prices will be adjusted for each processor activation, just like any other hardware feature add. **(Note: temporary activations do not affect maintenance pricing)**

CE: Maintenance Instructions


Model 825, 870, 890 (with V5R2) Maintenance Instructions

- 1) CE determines if a message (ATTENTION: CUOD CAPACITY CARD ERROR, XX STANDBY PROCESSORS IN LPAR PARTITIONS) is displayed on the IPL or Install the System screen and SRC A6004716 is shown on the panel
- 2) Level II checks to see if any activation or enablement features have been previously purchased for a machine with this serial# (Level II can make this determination by using the CUoD Application)
- 3) Level II checks to determine if the Serial# for the Processor Capacity Card that is being returned matches the Serial# of the Processor Capacity Card recorded in the CUoD application
- 4) CE determines if Op Panel or PAL display a 4730 SRC? If this path is performed within a powered on window of 48 hours ... SRC 4730 will not be shown, and an IPL will not be required to eliminate the SRC and re-establish the proper machine status

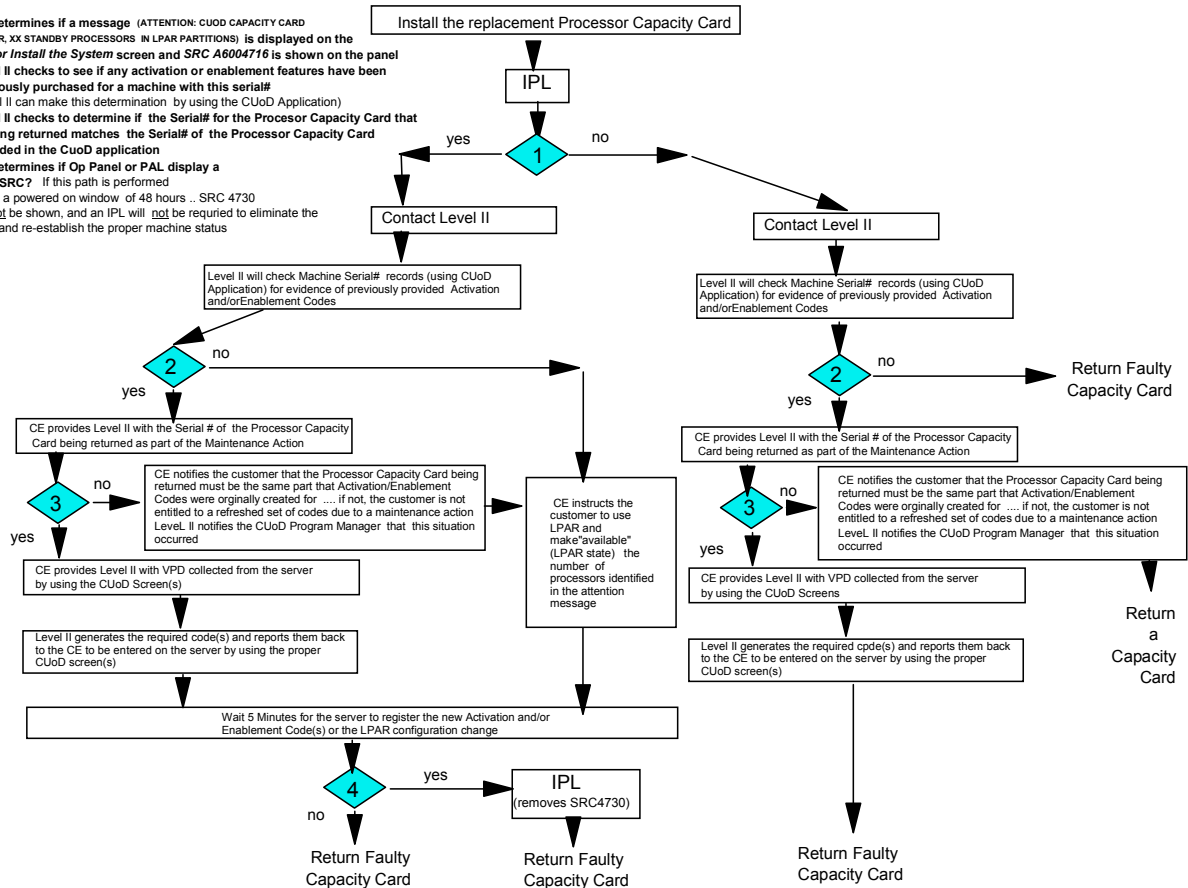

CE: Conversion Instructions

 Model 825, 870, and 890 (with V5R2) Processor or Package Feature Conversion Instructions

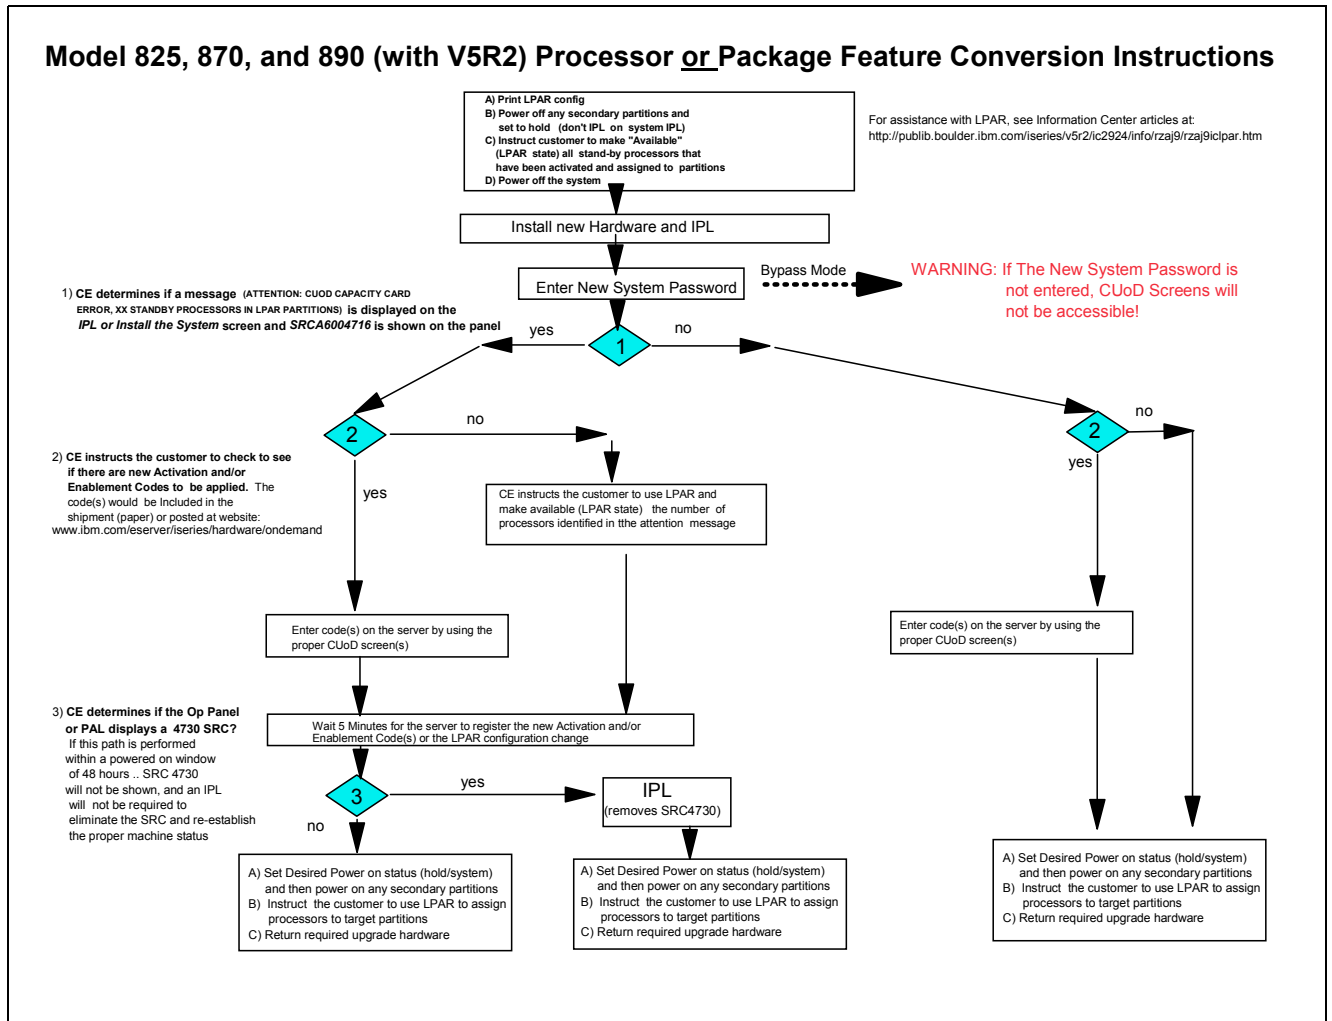

CE: Upgrade Instructions

Model 825, 870, 8909 (with V5R2) Model to Model Upgrade Instructions

1) CE determines if the Op Panel or PAL displays a 4730 SRC? If this path is performed within a powered on window of 48 hours, SRC 4730 will not be shown, and an IPL will not be required to eliminate the SRC and re-establish the proper machine status

