

## Supporting Information for Hardware Management Console (HMC) Machine Type (MT) 7063

---

For supporting information about the IBM Power Hardware Management Console (HMC) Machine Type (MT) 7063, see the following websites.

For Power 10 processor-based servers, see:

- Installing and configuring the Hardware Management Console:  
[www.ibm.com/support/knowledgecenter/POWER10/p10hai/p10hai\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hai/p10hai_kickoff.htm)
- Hardware Management Console service (Machine Type 7063):  
[www.ibm.com/support/knowledgecenter/POWER10/p10eav/p10eav\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10eav/p10eav_kickoff.htm)

For POWER9 processor-based servers, see:

- Installing and configuring the Hardware Management Console:  
[www.ibm.com/support/knowledgecenter/POWER9/p9hai/p9hai\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hai/p9hai_kickoff.htm)
- Hardware Management Console service (Machine Type 7063):  
[www.ibm.com/support/knowledgecenter/POWER9/p9eav/p9eav\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9eav/p9eav_kickoff.htm)

For POWER8 processor-based servers, see:

- Installing and configuring the Hardware Management Console:  
[www.ibm.com/support/knowledgecenter/POWER8/p8hai/p8hai\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hai/p8hai_kickoff.htm)
- Hardware Management Console service (Machine Type 7063):  
[www.ibm.com/support/knowledgecenter/POWER8/p8eav/p8eav\\_7063\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eav/p8eav_7063_kickoff.htm)

---

This edition applies to IBM® Power systems servers that contain the POWER8®, POWER9™, and Power 10 processor and to all associated models.

Printed in USA

© **Copyright International Business Machines Corporation 2017, 2021.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

GI11-9927-03



(1P) P/N: 03KG304

