

# Customer Installable Features



## IBM Power Systems hardware

---

To obtain the instructions for your Power11, Power10, POWER9, POWER8, POWER7, POWER6, or POWER5 processor-based server, go to the appropriate website in the following list, and select the feature you want to install or replace. Alternatively, you can use the instructions on the IBM® Power Systems Hardware Information media that was included with your system hardware order.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Maquinari de l'IBM Power Systems

---

Si voleu obtenir les instruccions pel vostre servidor basat en el processador Power11, Power10, POWER9, POWER8, POWER7, POWER6 o POWER5, aneu al lloc web corresponent segons la llista següent i seleccioneu el dispositiu que vulgueu instal·lar o substituir. Si ho preferiu, podeu fer servir les instruccions que trobareu als d'emmagatzematge d'informació de maquinari del l'IBM Power Systems que s'inclouen amb l'ordre de maquinari del sistema.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## IBM Power Systems 硬件

---

要获取有关 Power11、Power10、POWER9、POWER8、POWER7、POWER6 或 POWER5 处理器的服务器的指示信息，请转至以下列表中的相应 web 站点，然后选择您想要安装或者替换的功能部件。另外，可以使用有关您系统硬件订单中包括的 IBM Power Systems 硬件信息介质的指示信息。

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## IBM Power Systems 硬體

---

如果要取得 Power11、Power10、POWER9、POWER8、POWER7、POWER6 或 POWER5 處理器型伺服器的指示，請跳至下列清單中適當的網站，然後選取您要安裝或取代的特性。您也可以改為使用「IBM Power Systems 硬體資訊」列印材質上的指示，此列印材質隨附於系統硬體順序中。

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## IBM Power Systems-Hardware

---

Um Anweisungen zu Ihrem Power11-, Power10-, POWER9-, POWER8-, POWER7-, POWER6- oder POWER5-prozessorbasierten Server zu erhalten, rufen Sie die entsprechende Website aus der Liste unten auf und wählen Sie das Feature aus, das Sie installieren oder austauschen möchten. Alternativ können Sie die Anweisungen auf dem IBM Power Systems Hardware Information-Datenträger verwenden, der im Lieferumfang der Systemhardware enthalten war.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## Hardware IBM Power Systems

---

Para obtener instrucciones para su servidor basado en procesador Power11, Power10, POWER9, POWER8, POWER7, POWER6 o POWER5, vaya al sitio web correspondiente de la lista siguiente y seleccione la característica que desee instalar o sustituir. También puede utilizar las instrucciones del soporte Información de hardware de IBM Power Systems que se proporciona con su pedido de hardware del sistema.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## Matériel IBM Power Systems

---

Pour obtenir les instructions relatives à votre serveur doté d'un processeur Power11, Power10, POWER9<sup>TM</sup>, POWER8<sup>®</sup>, POWER7<sup>®</sup>, POWER6<sup>®</sup> ou POWER, accédez au site Web approprié répertorié dans la liste suivante et sélectionnez le dispositif que vous souhaitez installer ou remplacer. Autrement, vous pouvez utiliser les instructions du support IBM<sup>®</sup> Power Systems<sup>TM</sup> Hardware Information incluses dans votre offre matériel.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## IBM Power Systems hardver

---

Da dobijete instrukcije za vaš Power11, Power10, POWER9, POWER8, POWER7, POWER6 ili POWER5 procesorski baziran poslužitelj, idite na odgovarajuću web stranicu iz sljedećeg popisa i izaberite funkciju koju želite instalirati ili zamijeniti. Alternativno možete upotrijebiti upute iz IBM Power Systems hardver informacija koje ste dobili uz narudžbu za vaš sistemski hardver.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## IBM Power Systems hardver

---

A Power11, Power10, POWER9, POWER8, POWER7, POWER6 vagy POWER5 processzoros szerverekre vonatkozó útmutatásokért látogasson el az alább felsorolt weboldalakból a megfelelőre, és ott keresse ki a beszerezni vagy kicserélni kívánt tartozékot. Alternatív megoldásként a hardverrel szállított IBM Power Systems hardver információs adathordozón található útmutatások alapján is eljárhat.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## IBM Power Systems-Hardware

---

Per ottenere le istruzioni per il server basato su processori Power11, Power10, POWER9, POWER8, POWER7, POWER6 o POWER5, visitare il sito web appropriato nell'elenco seguente e selezionare la funzionalità che si desidera installare o sostituire. In alternativa, è possibile utilizzare le istruzioni contenute nel supporto IBM Power Systems Hardware Information incluso nell'ordine dell'hardware del sistema.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## IBM Power Systems ハードウェア

---

ご使用の Power11、Power10、POWER9、POWER8、POWER7、POWER6、または POWER5 のプロセッサ・ベース・サーバーの説明書を入手するには、以下のリストにある該当の Web サイトにアクセスして、設置または取り替えを希望するフィーチャーを選択してください。あるいは、ご使用のシステム・ハードウェアのオーダー品に同梱されていた IBM Power Systems ハードウェア情報メディアに収容されている説明書を使用できます。

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## IBM Power Systems 하드웨어

---

Power11, Power10, POWER9, POWER8, POWER7, POWER6 또는 POWER5 프로세서 기반 서버에 대한 지시사항은 다음 목록에서 적절한 웹 사이트로 이동하여 설치 또는 교체하려는 피처를 선택하여 볼 수 있습니다. 아니면, 사용자가 주문한 시스템 하드웨어에 포함되어 있는 IBM Power Systems 하드웨어 정보 매체에서 지시사항을 볼 수 있습니다.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcificio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcificio.htm)

## IBM Power Systems-hardware

---

Voor instructies voor uw server op basis van Power11, Power10, POWER9, POWER8, POWER7, POWER6 of POWER5 gaat u naar de toepasselijke website in de volgende lijst en selecteert u de feature die u wilt installeren of vervangen. U kunt ook de instructies op de schijf genaamd IBM Power Systems Hardware-informatie volgen die bij uw bestelling voor systeemhardware is bijgevoegd.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Sprzęt IBM Power Systems

---

Aby uzyskać instrukcje dotyczące serwerów opartych na procesorach Power11, Power10, POWER9, POWER8, POWER7, POWER6 lub POWER5, przejdź do odpowiedniego serwisu WWW z poniższej listy i wybierz model, który chcesz zainstalować lub wymienić. Możesz również skorzystać z instrukcji znajdujących się na dołączonym do zamówienia nośniku z dokumentacją sprzętu IBM Power Systems.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Hardware do IBM Power Systems

---

Para receber instruções sobre o servidor com base em provedor Power11, Power10, POWER9, POWER8, POWER7, POWER6 ou POWER5, acesse o website adequado na lista a seguir e selecione o recurso que você deseja instalar ou substituir. Como alternativa, você pode usar as instruções sobre a mídia de informações de hardware do IBM Power Systems que foram incluídas na sua ordem de hardware do sistema.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Hardware do IBM Power Systems

---

Para obter instruções sobre o seu servidor baseado em processadores Power11, Power10, POWER9, POWER8, POWER7, POWER6 ou POWER5, acesse o site da Web adequado na lista seguinte e selecione a funcionalidade que pretende instalar ou substituir. Como alternativa, pode utilizar as instruções no suporte de Informações de Hardware do IBM Power Systems incluído na sua encomenda de hardware do sistema.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)  
**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)  
**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)  
**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)  
**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)  
**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)  
**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## IBM Power Systems Hardware

---

Pentru a obține instrucțiunile pentru serverul dumneavoastră bazat pe procesorul Power11, Power10, POWER9, POWER8, POWER7, POWER6 sau POWER5, mergeți la site-ul web corespunzător din lista următoare și selectați caracteristica pe care vreți să o instalați sau să o înlocuiți. Sau puteți utiliza instrucțiunile de pe mediul Informații IBM Power Systems Hardware, pe care-l primiți la livrarea comenzii hardware-ului de sistem.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)

**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)

**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)

**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)

**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)

**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)

**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Аппаратное обеспечение IBM Power Systems

---

Для того чтобы получить инструкции для сервера с процессором Power11, Power10, POWER9, POWER8, POWER7, POWER6 или POWER5, откройте одну из следующих веб-страниц и выберите компонент для установки или замены. Кроме того, можно обратиться к инструкциям на носителе IBM Power Systems Hardware Information Center, который поставляется вместе с заказом на аппаратное обеспечение.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)

**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)

**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)

**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)

**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)

**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)

**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Hardvér IBM Power Systems

---

Ak chcete získať návody pre svoj server s procesorom Power11, Power10, POWER9, POWER8, POWER7, POWER6 alebo POWER5, prejdite na príslušnú webovú lokalitu v nasledujúcom zozname a vyberte komponent, ktorý chcete namontovať alebo vymeniť. Alternatívne môžete použiť návody na médiu IBM Power Systems Hardware Information, ktoré bolo zahrnuté s objednávkou systémového hardvéru.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)

**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)

**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)

**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)

**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)

**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)

**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

## Strojna oprema IBM Power Systems

---

Če želite dobiti navodila za strežnik, ki temelji na procesorju Power11, Power10, POWER9, POWER8, POWER7, POWER6 ali POWER5, pojdite na ustrezno spletno mesto z naslednjega seznama in izberite funkcijo, ki jo želite namestiti ali zamenjati. Lahko pa si pomagata tudi z navodili na mediju IBM Power Systems Hardware Information, ki je bil vključen v vaše naročilo sistemske strojne opreme.

**Power11:** [http://www.ibm.com/docs/en/POWER11/p11hdx/power11\\_cif\\_landing.html](http://www.ibm.com/docs/en/POWER11/p11hdx/power11_cif_landing.html)

**Power10:** [http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER10/p10hdx/power10_cif_landing.htm)

**POWER9:** [http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER9/p9hdx/power9_cif_landing.htm)

**POWER8:** [http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hdx/power8_cif_landing.htm)

**POWER7:** [http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7\\_cif\\_landing.htm](http://www.ibm.com/support/knowledgecenter/POWER7/p7hdx/power7_cif_landing.htm)

**POWER6:** [http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6\\_cif.htm](http://www.ibm.com/support/knowledgecenter/POWER6/iphdx/power6_cif.htm)

**POWER5:** [http://www.ibm.com/support/knowledgecenter/POWER5/iphaj\\_p5/selectcfcio.htm](http://www.ibm.com/support/knowledgecenter/POWER5/iphaj_p5/selectcfcio.htm)

---

**July 2025**

IBM, the IBM logo, ibm.com, POWER5, POWER6, POWER7, POWER8, POWER9, Power10, and Power11 are trademarks or registered trademarks of International Business Machines Corporation, registered in many jurisdictions worldwide.

Other product and service names may be trademarks of IBM or other companies.

Printed in Mexico

References in this publication to IBM products or services do not imply that IBM intends to make them available in every country or region.

© **Copyright International Business Machines Corporation 2025.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 03KG579

