

Power Systems

*HMC Cable*

**IBM**



Power Systems

*HMC Cable*

**IBM**




---

## Remove HMC Cable

To remove an HMC cable, complete the following steps:

1. Perform the following procedure on **ONLY THE FRU(s) BEING SERVICED**. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, **INCLUDING SYSTEM OUTAGE AND LOSS OF DATA**.
  1. Label the location on the HMC where the cable plugs into.
  2. Label the location on the system where the cable plugs into.
  3. Unplug the HMC cable **being serviced** from the system and from the HMC.

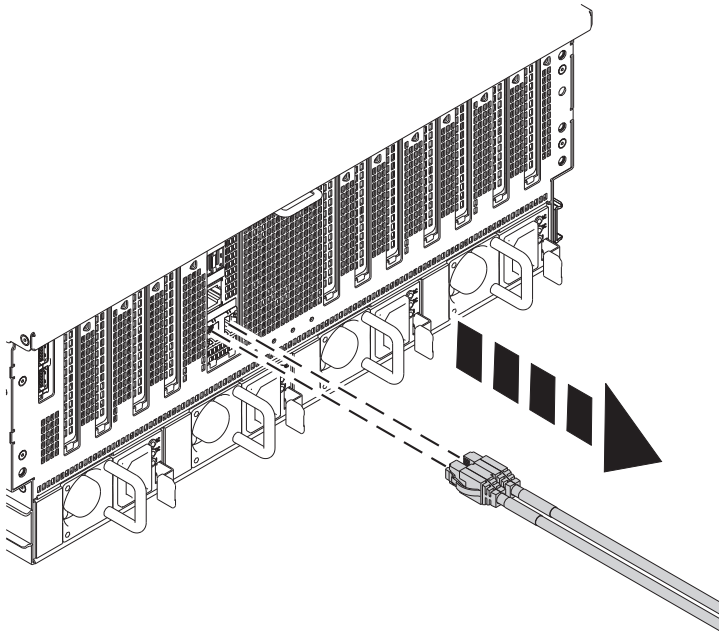

If performing this procedure from a management console, close this web page to continue with the procedure.




---

## Install HMC Cable

To install an HMC cable, complete the following steps:

1. Perform the following procedure on **ONLY THE FRU(s) BEING SERVICED**. The following images are generic and do not represent the literal location being serviced.
2. Modifying FRU locations which are not called out for service can have adverse effects on the system, **INCLUDING SYSTEM OUTAGE AND LOSS OF DATA**.
  1. Plug the new HMC cable into the location marked earlier on the system.
  2. Attach the other end of the HMC cable to the location marked earlier on the HMC.

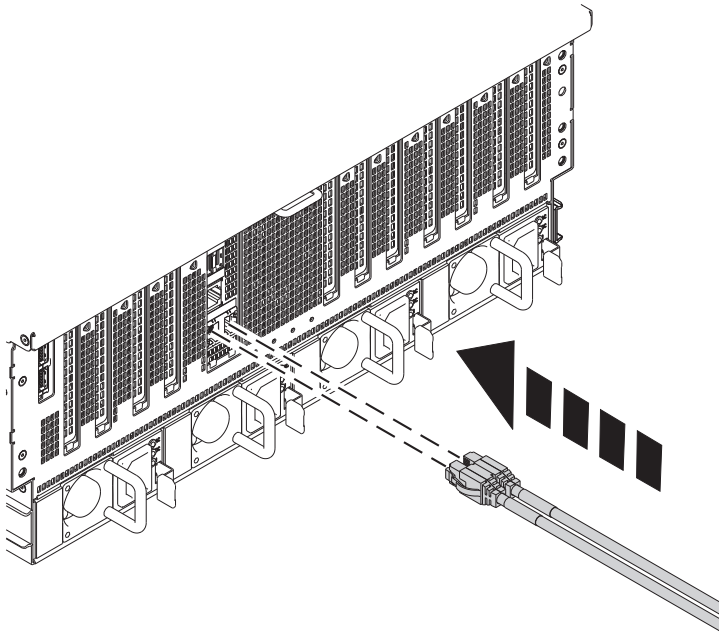

If performing this procedure from a management console, close this web page to continue with the procedure.









Printed in USA