

Power Systems

*Installing the IBM Power System  
S822LC for Big Data (8001-22C)*

**IBM**



Power Systems

*Installing the IBM Power System  
S822LC for Big Data (8001-22C)*

**IBM**

**Note**

Before using this information and the product it supports, read the information in “Safety notices” on page v, “Notices” on page 109, the *IBM Systems Safety Notices* manual, G229-9054, and the *IBM Environmental Notices and User Guide*, Z125-5823.

This edition applies to IBM Power Systems™ servers that contain the POWER8 processor and to all associated models.

© Copyright IBM Corporation 2016, 2017.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

# Contents

<b>Safety notices</b> . . . . .	<b>v</b>
---------------------------------	----------

## **Installing and configuring POWER8 processor-based systems and system features** . . . . . **1**

Installing the system. . . . .	1
Prerequisites for installing the rack-mounted 8001-22C system . . . . .	1
Completing inventory for your system. . . . .	1
Determining and marking the location in the rack for the 8001-22C system . . . . .	2
Attaching the rails to the system chassis and to the rack . . . . .	3
Installing the system into the rack and connecting and routing power cables . . . . .	5
Completing server setup . . . . .	6
Installing drives in the 8001-22C system . . . . .	7
Drive installation information for the 8001-22C system . . . . .	7
Installing a disk drive in the 8001-22C system . . . . .	9
Installing a drive on module in the 8001-22C system . . . . .	15
Installing a graphics processing unit in the 8001-22C system . . . . .	17
Installing memory in the 8001-22C system . . . . .	22
Placement rules for memory in the 8001-12C or 8001-22C system. . . . .	22
Installing memory in the 8001-22C system . . . . .	23
Installing a PCIe adapter in the 8001-22C system . . . . .	26
PCIe adapter placement rules and slot priorities for the 8001-22C or 8005-22N system . . . . .	27
PCIe adapter information by feature type for the 8001-22C or 8005-22N . . . . .	33
12 Gb/s Eight-Port SAS Internal HBA Adapter (Adapter FRU number: AOC-S3008L-L8e-P) . . . . .	35
PCIe3 x4 Intel x550 10GBase-T Converged Network Adapter with Dual RJ45 Ports (FC EKA0) . . . . .	37
Cavium (Qlogic) BCM57840 4-port SFP+ 10 Gb Ethernet Adapter PCIe3.0 x8 LP (FC EKA1) . . . . .	38
Intel 82599ES Ethernet Converged Network Adapter x520-DA2 Dual-port 10G/1G SFP+ PCIe2.0 x8 LP (FC EKA2). . . . .	40
Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP (FC EKA3) . . . . .	42
Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables (FC EKAA and EKEA) . . . . .	44
SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables (FC EKAB and EKEB) . . . . .	46
Broadcom (LSI) 9300-8E SAS3 HBA PCIe3.0 x8 LP Adapter (FC EKAD and EKED) . . . . .	48

PCIe3 x8 Dual-port Internal NVMe Host Bus Adapter (FC EKAE and EKEE) . . . . .	50
Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP (FC EKAF) . . . . .	52
SMC quad-port NVMe Host Bus Adapter (PEX9733) PCIe3.0 x8 LP with cables (FC EKAG and EKEG) . . . . .	54
Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 internal ports (2 GB Cache) PCIe3.0 x8 with cables (FC EKAH and EKEH) . . . . .	56
NVIDIA Tesla K80 24 GB GPU Accelerator (FC EKAJ) . . . . .	58
Mellanox MCX456A-ECAT ConnectX-4 VPI EDR IB 100 Gb/s and 100 GbE Dual-port QSFP28 PCIe3.0 x16 LP (FC EKAL) . . . . .	60
Mellanox MCX415A-CCAT ConnectX-4 EN 100 GbE Single-port QSFP28 PCIe3.0 x16 LP (FC EKAM) . . . . .	62
Qlogic QLE2562 Dual-port 8 Gb Fibre Channel Adapter PCIe x8 LP (FC EKAP) . . . . .	64
Qlogic QLE2692OP Dual-port 16 Gb Fibre Channel Adapter PCIe3 x8 LP (FC EKAQ) . . . . .	66
Alpha-data CAPI Adapter: ADM-PCIe KU3 (FC EKAT). . . . .	68
Mellanox MCX4121A-ACAT ConnectX-4 Lx EN 25GbE dual-port SFP28 PCIe3.0 x8 LP (FC EKAU) . . . . .	70
NVIDIA Tesla P100 16GB PCIe3.0 x16 Dual-slot FHFL with cables (FC EKAZ) . . . . .	72
Intel XL710 Ethernet Converged Network Adapter Quad-port 10G/1G SFP+ PCIe3.0 x8 LP (FC EKFH) . . . . .	74
PCIe3 1.6 TB NVMe Flash Adapter (FC EKN2) . . . . .	76
Installing a PCIe adapter in the 8001-22C system	78
Common procedures for servicing or installing features in the 8001-22C or 8005-22N . . . . .	87
Before you begin . . . . .	87
Identifying the system that contains the part to replace . . . . .	90
LEDs on the 8001-22C or 8005-22N system . . . . .	90
Identifying the 8001-12C, 8001-22C, 8005-12N, or 8005-22N that needs servicing . . . . .	92
Preparing the 8001-22C or 8005-22N system to remove and replace internal parts . . . . .	92
Preparing the 8001-22C system for operation after you remove and replace internal parts . . . . .	94
Starting and stopping the 8001-12C, 8001-22C, 8005-12N, or 8005-22N. . . . .	95
Starting the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system . . . . .	95
Stopping the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system . . . . .	97
Drive commands for 8001-12C, 8001-22C, 8005-12N, or 8005-22N. . . . .	97
mvCLI commands . . . . .	97
StorCLI commands . . . . .	98

sas3ircu commands . . . . .	99
NVMe commands . . . . .	99
Sensor readings GUI display . . . . .	100
Removing and replacing a power supply in the 8001-12C, 8001-22C, 8005-12N, or 8005-22N . . . . .	100
Removing a power supply from the 8001-12C, 8001-22C, 8005-12N, or 8005-22N . . . . .	100
Replacing a power supply in the 8001-12C, 8001-22C, 8005-12N, or 8005-22N . . . . .	102
Removing and replacing covers on an 8001-22C or 8005-22N system . . . . .	102
Removing the service access cover from an 8001-22C or 8005-22N system . . . . .	102
Installing the service access cover on an 8001-22C or 8005-22N system . . . . .	103
Service and operating positions for 8001-22C or 8005-22N . . . . .	104
Placing an 8001-22C or 8005-22N system into the service position . . . . .	104

Placing an 8001-22C or 8005-22N system into the operating position . . . . .	106
Power cords . . . . .	107
Disconnecting the power cords from an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system . . . . .	107
Connecting the power cords to an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system . . . . .	108

**Notices . . . . . 109**

Accessibility features for IBM Power Systems servers . . . . .	110
Privacy policy considerations . . . . .	111
Trademarks . . . . .	112
Electronic emission notices . . . . .	112
Class A Notices . . . . .	112
Class B Notices . . . . .	116
Terms and conditions . . . . .	119

---

## Safety notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

### World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, safety information documentation is included in the publications package (such as in printed documentation, on DVD, or as part of the product) shipped with the product. The documentation contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information documentation. You should also refer to the safety information documentation any time you do not clearly understand any safety information in the U.S. English publications.

Replacement or additional copies of safety information documentation can be obtained by calling the IBM Hotline at 1-800-300-8751.

### German safety information

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

### Laser safety information

IBM® servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

#### Laser compliance

IBM servers may be installed inside or outside of an IT equipment rack.

**DANGER:** When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- If IBM supplied the power cord(s), connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
  - For AC power, disconnect all power cords from their AC power source.
  - For racks with a DC power distribution panel (PDP), disconnect the customer's DC power source to the PDP.
- When connecting power to the product ensure all power cables are properly connected.

- For racks with AC power, connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- For racks with a DC power distribution panel (PDP), connect the customer's DC power source to the PDP. Ensure that the proper polarity is used when attaching the DC power and DC power return wiring.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Do not attempt to switch on power to the machine until all possible unsafe conditions are corrected.
- Assume that an electrical safety hazard is present. Perform all continuity, grounding, and power checks specified during the subsystem installation procedures to ensure that the machine meets safety requirements.
- Do not continue with the inspection if any unsafe conditions are present.
- Before you open the device covers, unless instructed otherwise in the installation and configuration procedures: Disconnect the attached AC power cords, turn off the applicable circuit breakers located in the rack power distribution panel (PDP), and disconnect any telecommunications systems, networks, and modems.

**DANGER:**

- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. For AC power, remove the power cords from the outlets.
3. For racks with a DC power distribution panel (PDP), turn off the circuit breakers located in the PDP and remove the power from the Customer's DC power source.
4. Remove the signal cables from the connectors.
5. Remove all cables from the devices.

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. For AC power, attach the power cords to the outlets.
5. For racks with a DC power distribution panel (PDP), restore the power from the Customer's DC power source and turn on the circuit breakers located in the PDP.
6. Turn on the devices.

Sharp edges, corners and joints may be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching. (D005)

**(R001 part 1 of 2):**

**DANGER:** Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices. In addition, do not lean on rack mounted devices and do not use them to stabilize your body position (for example, when working from a ladder).





- Each rack cabinet might have more than one power cord.
  - For AC powered racks, be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
  - For racks with a DC power distribution panel (PDP), turn off the circuit breaker that controls the power to the system unit(s), or disconnect the customer's DC power source, when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

**(R001 part 2 of 2):**

**CAUTION:**

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.



- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

**CAUTION:**

Removing components from the upper positions in the rack cabinet improves rack stability during relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions:
  - Remove all devices in the 32U position (compliance ID RACK-001 or 22U (compliance ID RR001) and above.
  - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
  - Ensure that there are little-to-no empty U-levels between devices installed in the rack cabinet below the 32U (compliance ID RACK-001 or 22U (compliance ID RR001) level, unless the received configuration specifically allowed it.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
  - Lower the four leveling pads.
  - Install stabilizer brackets on the rack cabinet.
  - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off of the pallet and bolt the rack cabinet to the pallet.

(R002)

(L001)



**DANGER:** Hazardous voltage, current, or energy levels are present inside any component that has this label attached. Do not open any cover or barrier that contains this label. (L001)

(L002)



**DANGER:** Rack-mounted devices are not to be used as shelves or work spaces. (L002)

(L003)



or



or



or



or



**DANGER:** Multiple power cords. The product might be equipped with multiple AC power cords or multiple DC power cables. To remove all hazardous voltages, disconnect all power cords and power cables. (L003)

(L007)



**CAUTION:** A hot surface nearby. (L007)

(L008)



**CAUTION:** Hazardous moving parts nearby. (L008)

All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.

**CAUTION:**

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)

**CAUTION:**

Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. Although shining light into one end and looking into the other end of a disconnected optical fiber to verify the continuity of optic fibers may not injure the eye, this procedure is potentially dangerous. Therefore, verifying the continuity of optical fibers by shining light into one end and looking at the other end is not recommended. To verify continuity of a fiber optic cable, use an optical light source and power meter. (C027)

**CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)

**CAUTION:**

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information: laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

**CAUTION:**

The battery contains lithium. To avoid possible explosion, do not burn or charge the battery.

*Do Not:*

- \_\_\_ Throw or immerse into water
- \_\_\_ Heat to more than 100°C (212°F)
- \_\_\_ Repair or disassemble

Exchange only with the IBM-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, IBM has a process for the collection of this battery. For information, call 1-800-426-4333. Have the IBM part number for the battery unit available when you call. (C003)

## CAUTION:

Regarding IBM provided VENDOR LIFT TOOL:

- Operation of LIFT TOOL by authorized personnel only.
- LIFT TOOL intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers).
- Read and completely understand the contents of LIFT TOOL operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's web site.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the LIFT TOOL with stabilizer brake engaged.
- Do not move LIFT TOOL while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See LOAD CAPACITY CHART regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platform tilt riser accessory option. Secure platform riser tilt option to main shelf in all four (4x) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt option flat at all times except for final minor adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads.
- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against LIFT TOOL.
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning LIFT TOOL machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare LIFT TOOL MACHINE with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave LIFT TOOL machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.
- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury. (C048)

## **Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE**

The following comments apply to the IBM servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intrabuilding ports of this equipment are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of this equipment *must not* be metalically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

**Note:** All Ethernet cables must be shielded and grounded at both ends.

The ac-powered system does not require the use of an external surge protection device (SPD).

The dc-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

The dc-powered system is intended to be installed in a common bonding network (CBN) as described in GR-1089-CORE.





---

# Installing and configuring POWER8 processor-based systems and system features

Use this information to install and configure POWER8® processor-based systems and to install customer-installable hardware features. This information also provides removal and replacement procedures for customer-replaceable hardware features, such as memory modules or fans.

**Note:** See the International Information Bulletin for Customers - Installation of IBM Machines (Publication number: SC27-6601-00) that is available from the **IBM Publications Center** (<http://www-05.ibm.com/e-business/linkweb/publications/servlet/pbi.wss>). This bulletin provides a list of the key IBM system installation activities and a list of activities that might be billable.

---

## Installing the system

Learn how to install, cable, and set up your 8001-22C system.

### Prerequisites for installing the rack-mounted 8001-22C system

Use the information to understand the prerequisites that are required for installing the system.

#### About this task

You might need to read the following documents before you install the server:

- The latest version of this document is maintained online, see Installing the IBM Power System 8001-22C ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eip/p8eip22c\\_install\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eip/p8eip22c_install_kickoff.htm)).
- To plan your server installation, see Planning for the system ([http://www.ibm.com/support/knowledgecenter/POWER8/p8had/p8had\\_8xx\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8had/p8had_8xx_kickoff.htm)).

#### Procedure

1. Ensure that you have the following items before starting your installation:
  - Phillips screwdriver
  - Flat-head screwdriver
  - Box cutter
  - Electrostatic discharge (ESD) wrist strap
  - Rack with two Electronic Industries Association (EIA) units (2U) of space

**Note:** If you do not have a rack that is installed, install the rack. For instructions, see Racks and rack features ([http://www.ibm.com/support/knowledgecenter/POWER8/p8hbf/p8hbf\\_8xx\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8hbf/p8hbf_8xx_kickoff.htm)).

2. If you have already installed a shelf into your rack and plan on installing the system onto the shelf, an additional 1U of space above the system is required.

### Completing inventory for your system

Use this information to complete inventory for your system.

#### Procedure

1. Verify that you received all the boxes you ordered.
2. Unpack the server components as needed.
3. Complete a parts inventory before you install each server component by following these steps:

- a. Locate the inventory list for your server.
- b. Ensure that you received all the parts that you ordered.

**Note:** Your order information is included with your product. You can also obtain order information from your marketing representative or the IBM Business Partner.

If you have incorrect, missing, or damaged parts, consult any of the following resources:

- Your IBM reseller.
- IBM Rochester manufacturing automated information line at 1-800-300-8751 (United States only).
- The Directory of worldwide contacts website <http://www.ibm.com/planetwide>. Select your location to view the service and support contact information.


## Determining and marking the location in the rack for the 8001-22C system

You might need to determine where to install the system unit into the rack.


### Procedure

1. Read the Rack safety notices (<http://www.ibm.com/support/knowledgecenter/POWER8/p8hbf/racksafety.htm>).
2. Determine where to place the system unit in the rack. As you plan for installing the system unit in a rack, consider the following information:
  - Organize larger and heavier units into the lower part of the rack.
  - Plan to install units into the lower part of the rack first.
  - Record the Electronic Industries Alliance (EIA) locations in your plan.

**Note:** The server is two EIA units high. An EIA unit is 44.55 mm (1.75 in.) in height. The rack contains three mounting holes for each EIA unit of height. This system unit, therefore, is 89 mm (3.5 in.) high and covers six mounting holes in the rack.

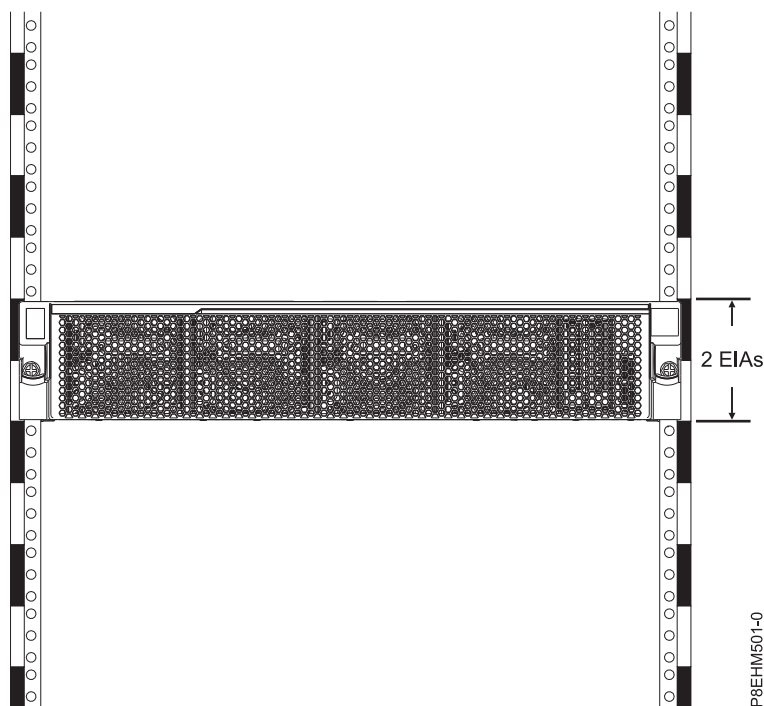

3. If necessary, remove the filler panels to allow access to the inside of the rack enclosure where you plan to place the unit, as shown in Figure 1.

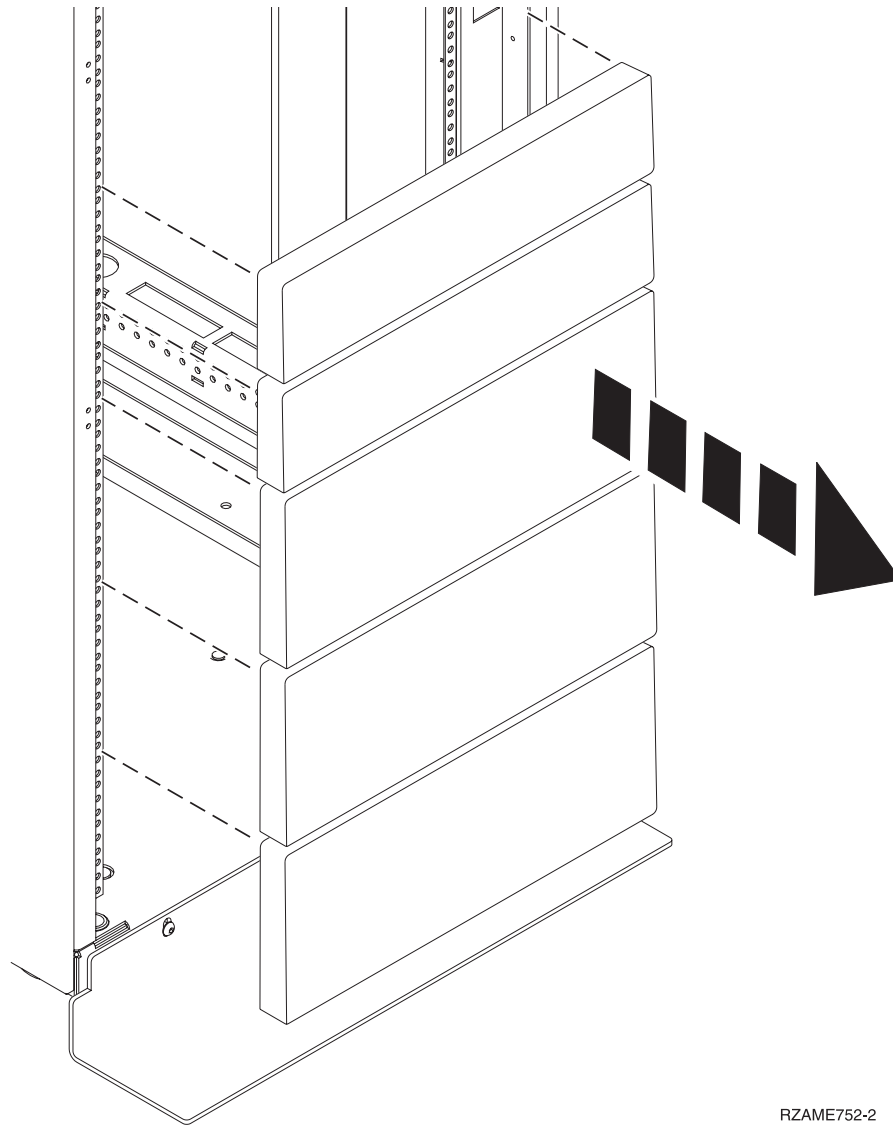

RZAME752-2

*Figure 1. Removing the filler panels*

4. Determine to place the system in the rack. Record the EIA location.
5. Facing the front of the rack and working from the right side, use tape, a marker, or pencil to mark the lower hole of each EIA unit.
6. Repeat step 5 for the corresponding holes located on the left side of the rack.
7. Go to the rear of the rack.
8. On the right side, find the EIA unit that corresponds to the bottom EIA unit marked on the front of the rack.
9. Mark the bottom EIA unit.
10. Mark the corresponding holes on the left side of the rack.

## **Attaching the rails to the system chassis and to the rack**

You must install the rails onto the chassis and into the rack. Use this procedure to perform this task.


## About this task

**Attention:** To avoid rail failure and potential danger to yourself and to the unit, ensure that you have the correct rails and fittings for your rack. If your rack has square support flange holes or screw-thread support flange holes, ensure that the rails and fittings match the support flange holes that are used on your rack. Do not install mismatched hardware by using washers or spacers. If you do not have the correct rails and fittings for your rack, contact your IBM reseller.

**Note:** The system requires 2 EIA rack units (2U) of space.

## Procedure


1. Select the appropriate EIA location unit number for the rails. Each EIA location contains three (3) holes for mounting hardware.
2. Each rail has two parts. Before you install the rails into the rack, you must separate them. To separate the rails, extend the inner rail (A) and press the locking tab on the inner rail (B). Separate the inner rail from the outer rail (C). Do this for each rail.

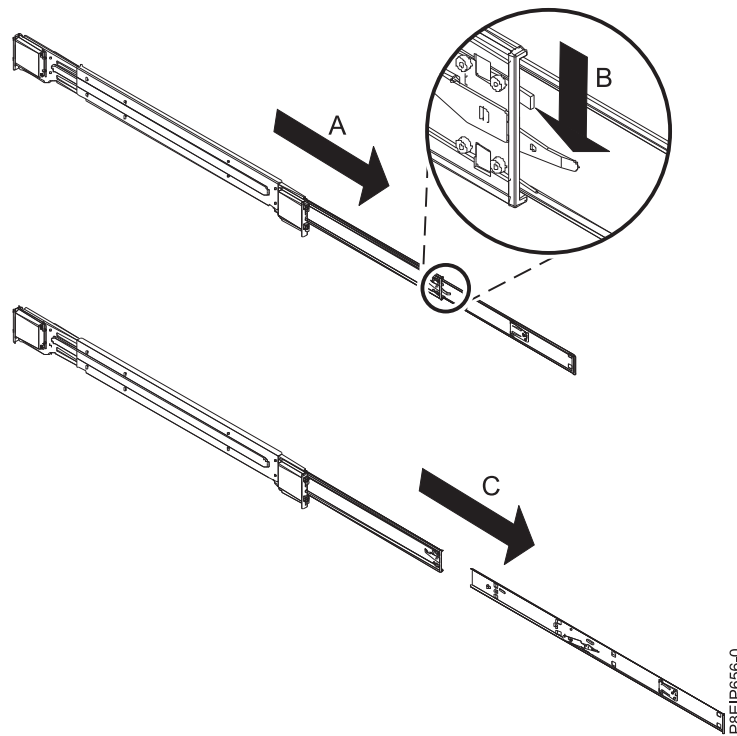

3. Attach the inner rails to the system chassis. To attach the inner rails to the system chassis, perform the following tasks:

**Note:** Each inner rail is marked with either an **L** or an **R**, which designates the left inner rail and the right inner rail. The front of the system is also marked **L** or an **R** behind each handle.

- a. On the right side of the system, align the metal tabs on the system chassis with the holes on the inner chassis slide rail (A). Slide the chassis slide rail toward the front of the rack (B) until the chassis slide rail clicks into place. Secure the inner chassis slide rail to the system chassis by using two screws (C).
- b. Repeat this step for the left chassis slide rail.

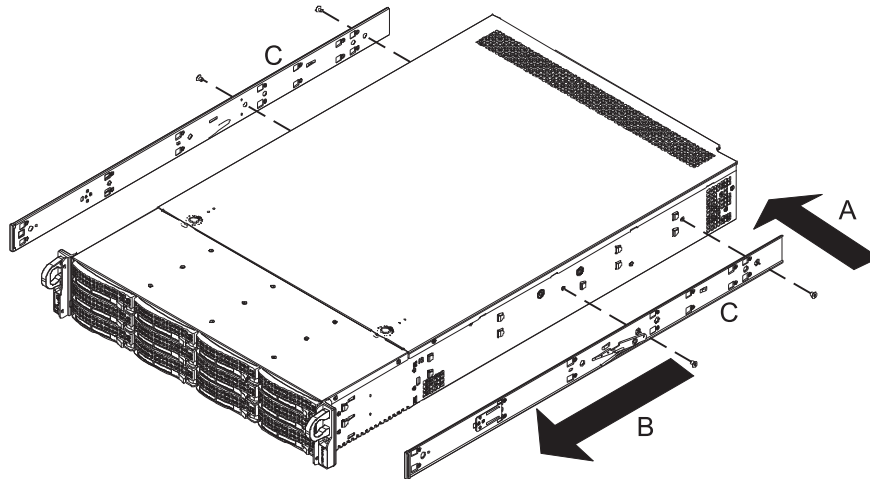

P8EIP657-0

4. Move to the front of the rack. Align the left rack rail inside the rack cabinet by resting the rail bracket hooks on the rack flange holes that you previously marked. The rail hooks should be located in the flange hole in the middle of each EIA rack unit.
5. With the rail bracket hooks resting on the rack flange holes, press down on the rack rails until the rail pins click into place.
6. Repeat these steps for the right rack rail.
7. Move to the rear of the rack. Extend the left rack rail inside the rack cabinet until it hooks the rack flange holes that you previously marked.
8. Press down on the rack rails until the rail pins click into place.
9. Repeat these steps for the right rack rail.
10. Secure each rail to the rack by fastening one screw through each hole in each rail and through the EIA support flange.
11. Move to the front of the rack. Secure the rails to the rack by fastening one screw through each hole in each rail and through the EIA support flange.

## Installing the system into the rack and connecting and routing power cables

After you install the system onto the rails in the rack, connect and route power cables.

### About this task

**Note:** This system requires three people to install the system into the rack.

### Procedure

1. Remove the protective plastic film from the top of the system chassis.
2. Move to the front of the rack.
3. Extend each rail until it clicks into the extended position.
4. Using three people, lift the system and align the system chassis rails on each side of the chassis with the rack slide rails.
5. While one person is supporting the weight of the system, have the second person gently push the system into the rack, until you hear each slide rail click into place.
6. Simultaneously depress the slide rail latches on each side of the slide rail and push the system toward the rear of the rack until the system clicks into place.
7. Secure the system to the rack by screwing a screw through the handles on each side of the front of the system chassis.

8. Plug the power cords into the power supplies.
9. Attach all cables to the rear of the server.

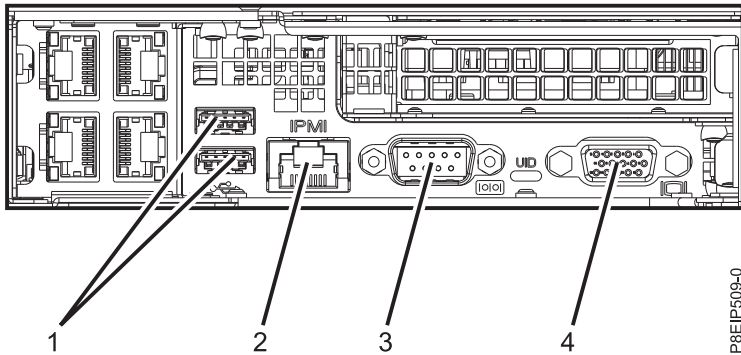


Figure 2. Rear ports

Table 1. Input and output ports

Identifier	Description
1	USB 2.0 used for keyboard and mouse.  Certain USB drives might be too wide to fit properly into the USB ports on the rear of the system. Test the fit your USB drive before proceeding.
2	Ethernet Intelligent Platform Management Interface (IPMI)
3	Serial IPMI
4	Video Graphics Array (VGA) used for monitor. Only the 1024 x 768 at 60 Hz VGA setting is supported. Only up to a 3-meter cable is supported. Text based capability is only supported at this time.

10. Plug the system power cords and the power cords for any other attached devices into the alternating current (AC) power source.
11. Continue with “Completing server setup.”

## Completing server setup

Learn how to complete server setup.

### Procedure

1. Connect your server to a VGA terminal and keyboard or a console. Only the 1024x768 at 60 Hz VGA setting is supported. Only up to a 3 meter cable is supported.
2. Go to Getting fixes([http://www.ibm.com/support/knowledgecenter/POWER8/p8ei8/p8ei8\\_fixes\\_kickoff.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8ei8/p8ei8_fixes_kickoff.htm)) and update the system firmware with the most recent level of firmware.
3. You can receive important technical information and updates for specific IBM Support tools and resources by subscribing to receive updates. To subscribe to receive updates, complete the following steps:
  - a. Go to the IBM Support Portal.
  - b. Log in by using your IBM ID and password and click **Sign in**.
  - c. Click **Support notifications**.
  - d. Click **Browse for a product**.
  - e. Select **Power > Firmware**, find your machine type and model and click **Subscribe**.

- f. Exit the **Browse for a product** screen.
  - g. Click **Delivery preferences** to set email preferences and click **Submit**.
  - h. Click **Edit** to select the types of documentation updates that you want to receive and click **Submit**.
4. You can install the Linux operating system on bare metal systems, or on non-virtualized systems. For these systems, the operating system runs directly on the Open Power Abstraction Layer (OPAL) firmware. For more information about installing the Linux operating system on bare metal systems, see [Installing Linux on bare metal systems](http://www.ibm.com/support/knowledgecenter/linuxonibm/liabw/liabwkickoff.htm)(<http://www.ibm.com/support/knowledgecenter/linuxonibm/liabw/liabwkickoff.htm>).

---

## Installing drives in the 8001-22C system

Learn how to install storage drives in the IBM Power® System S822LC for Big Data (8001-22C) system.

### About this task

You can install the following types of drives in the system:

- SATA drives connected to the SATA controller ports on the system backplane
- SAS drives connected to a SAS RAID adapter
- NVMe drives connected to an NVMe adapter
- 3.5-inch drives
- 2.5-inch drives by using an adapter

### Drive installation information for the 8001-22C system

Find information about the drive installation options for the IBM Power System S822LC for Big Data (8001-22C) system.

#### Notes for thermal limitations:

- If the 8001-22C system has no GPUs, the system can support up to twelve 3.5-inch drives. The ambient temperature must not be more than 35°C (95°F). If all twelve 3.5-inch drives are installed, the system limits the 10-core POWER8 processor to 234 W and the 8-core POWER8 processor to 204 W.
- Limitation on the number of supported drives if the 8001-22C system has one or two GPU accelerators (feature code EKAJ or EKAZ):
  - If your 8001-22C system with feature code EKB1 or EKB5 has feature code EKAJ or EKAZ, and if the system has storage adapters (feature codes EKEA or EKEB), the system can support up to eight 3.5-inch drives. The drives must be installed into the bottom two drive bay rows. The drives cannot be installed into the top drive bay row.
  - If your 8001-22C system with feature code EKB1 or EKB5 has feature code EKAJ or EKAZ, but has no storage adapters, the system can support up to six 3.5-inch drives. The drives must be installed into the bottom two drive bay rows in the leftmost positions. The drives cannot be installed into the top drive bay row nor into the rightmost positions.
  - The ambient temperature must not be more than 25°C (77°F). Reduce the maximum allowable dry-bulb temperature 1°C per 175 m above 950 m. IBM recommends a temperature range of 18°C - 27°C (64°F - 80.6°F). The system limits the 8-core POWER8 processor to 240 W.
  - The default Linux governor is “on-demand”, which results in the CPU going to turbo frequency when the workload demands and the power and cooling parameters allow. The CPU can require up to 250W at turbo frequency and high utilization. For the cases described here which show less than 250W cooling capability, you might see the indicator “Performance Lags” in the system event log, when running a demanding workload in “on-demand” mode. That means that the maximum turbo frequency cannot be held all the time.

## SATA Drives

The 8001-22C system with feature codes EKB1 or EKB5 can support up to eight SATA drives. The drives supported drops to six if the system has a GPU. The drives are directly connected to the SATA ports and controller on the system backplane. The SATA drives can be installed into the front drive bay locations. SATA drive cables connect the disk drive backplane to the SATA sockets on the system backplane.

Use SATA cables to connect the SATA ports on the system backplane to the SATA ports on the disk drive backplane.

You can plug SATA drive on module (DOM) drives directly into the system backplane. Use the two orange SATA connectors. If you use SATA DOM, they limit the number of front-mounted SATA drives. You can use up to two SATA DOM drives.

- If you have one SATA DOM plugged into the system backplane, you can use up to seven front-mounted SATA drives.
- If you have two SATA DOMs plugged into the system backplane, you can use up to six front-mounted SATA drives.

By adding a storage adapter, feature code EKEA or EKEB, you can have up to twelve front-mounted SATA drives. Drive cables connect to the storage adapter to eight of the front drives, and to the SATA connectors on the system backplane for the remaining four drives. Figure 3 shows the port to drive bay mapping for the disk drive backplane.

### A: dotted area

Maps to mini-SAS drive connector 1 and supports the indicated drive bays 0 through 3.

### B: dots and dashes area

Maps to mini-SAS drive connector 2 and supports the indicated drive bays 0 through 3.

### C: dashes area

Maps to mini-SAS drive connector 3 and supports the indicated drive bays 0 through 3.

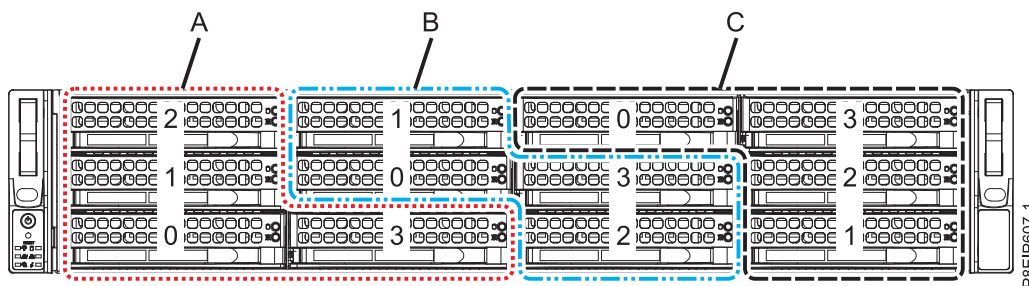


Figure 3. Port to drive bay mapping

## SAS Drives

With system feature codes EKB1 or EKB5, and by using a SATA/SAS RAID adapter, the 8001-22C system can support up to eight SATA/SAS drives and four SATA drives. The drives supported drops to eight if the system has a GPU, and if two of the drives are SATA only. Adapter feature codes EKEA and EKEB each support up to eight SATA/SAS drives.

Use SAS cables to connect the SAS ports on the PCIe adapter cards to the SAS ports on the disk drive backplane.

If you are installing a RAID adapter, see the adapter documentation for information on configuring the drives.



As an example, consider the following configuration:

- No GPU
- Feature code EKEA supporting eight front-mounted SATA/SAS drives.
- Two SATA DOMs plugged into the system backplane.

## NVMe Enabled System and Drives

When the system is enabled for NVMe support (feature codes EKB8 or EKB9), the system supports both SATA/SAS and NVMe drives. You can install up to twelve SATA/SAS drives using the SATA/SAS adapter. To support up to two NVMe drives, you need a feature code EKAE PCIe adapter. To support up to four NVMe drives, you need two EKAE PCIe adapters. The first two NVMe drives need to be plugged into drive locations 9 and 10 as shown in Figure 4. The second two NVMe drives need to be plugged into locations 11 and 12.

NVMe drives are only supported on host operating systems; NVMe drives are not supported by guest operating systems. On systems with RHEL 7.3 or later, or Ubuntu 16.04 or later, NVMe drives can be used as bootable drives. Port 1 of the internal NVMe host bus adapter must be plugged into NVMe port 1 on the disk drive backplane.

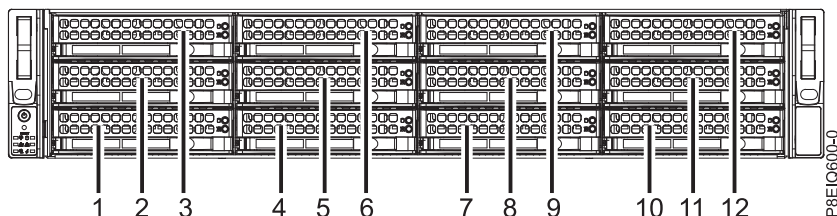


Figure 4. NVMe drives go in locations 9 through 12

As an example, consider the following configuration:

- No GPU
- Four NVMe front-mounted drives with two EKAE PCIe adapters.
- Eight front-mounted SATA/SAS drives. If no NVMe drives are needed, then 12 SATA/SAS drives can be plugged.
- Two SATA DOMs plugged into the system backplane.

## Installing a disk drive in the 8001-22C system

Learn how to install a disk drive in the IBM Power System S822LC for Big Data (8001-22C) system.

### Before you begin

You can install SATA and SAS front drives with the system powered on and running.

When installing NVMe drives, the system needs to be powered down; for instructions, see “Stopping the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 97.

### About this task

#### Notes for thermal limitations:

- If the 8001-22C system has no GPUs, the system can support up to twelve 3.5-inch drives. The ambient temperature must not be more than 35°C (95°F). If all twelve 3.5-inch drives are installed, the system limits the 10-core POWER8 processor to 234 W and the 8-core POWER8 processor to 204 W.

- Limitation on the number of supported drives if the 8001-22C system has one or two GPU accelerators (feature code EKAJ or EKAZ):
  - If your 8001-22C system with feature code EKB1 or EKB5 has feature code EKAJ or EKAZ, and if the system has storage adapters (feature codes EKEA or EKEB), the system can support up to eight 3.5-inch drives. The drives must be installed into the bottom two drive bay rows. The drives cannot be installed into the top drive bay row.
  - If your 8001-22C system with feature code EKB1 or EKB5 has feature code EKAJ or EKAZ, but has no storage adapters, the system can support up to six 3.5-inch drives. The drives must be installed into the bottom two drive bay rows in the leftmost positions. The drives cannot be installed into the top drive bay row nor into the rightmost positions.
  - The ambient temperature must not be more than 25°C (77°F). Reduce the maximum allowable dry-bulb temperature 1°C per 175 m above 950 m. IBM recommends a temperature range of 18°C - 27°C (64°F - 80.6°F). The system limits the 8-core POWER8 processor to 240 W.
  - The default Linux governor is “on-demand”, which results in the CPU going to turbo frequency when the workload demands and the power and cooling parameters allow. The CPU can require up to 250W at turbo frequency and high utilization. For the cases described here which show less than 250W cooling capability, you might see the indicator “Performance Lags” in the system event log, when running a demanding workload in “on-demand” mode. That means that the maximum turbo frequency cannot be held all the time.

## Procedure

1. Attach the electrostatic discharge (ESD) wrist strap.

### Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
2. Unlock the drive bay handle (**B**) by pushing in the handle release (**A**) as shown in Figure 5 on page 11. The handle (**B**) snaps out towards you. If the handle does not snap out all the way, the drive does not slide out of the system. If the drive does not match the serial number you wrote down in the previous step, reinstall the drive in the bay you removed it from, and check the other drive bays.

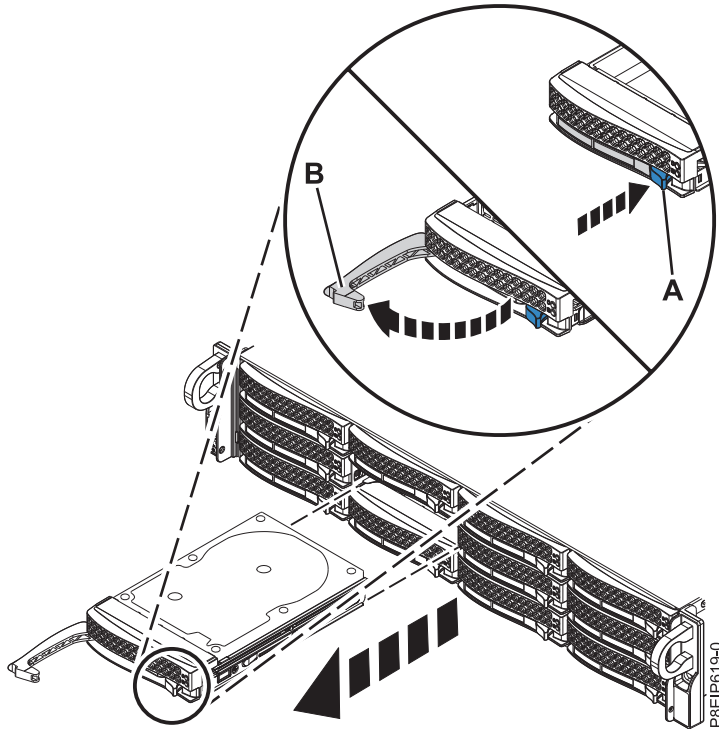


Figure 5. Removing a drive

3. If you are installing more than one drive, remove those drive trays.
4. For 3.5-inch drives, remove the plastic filler from the carrier. For 2.5-inch drives in a 3.5-inch opening, a 2.5-inch tool-less drive carrier exists.
5. Install a drive into the tray. Orient the drive such that the connectors are pointing to the rear of the drive.
  - A 3.5-inch drive fills the tray, as shown in Figure 6 on page 12. Fasten the drive to the sides of the tray with four screws (two screws on each side).

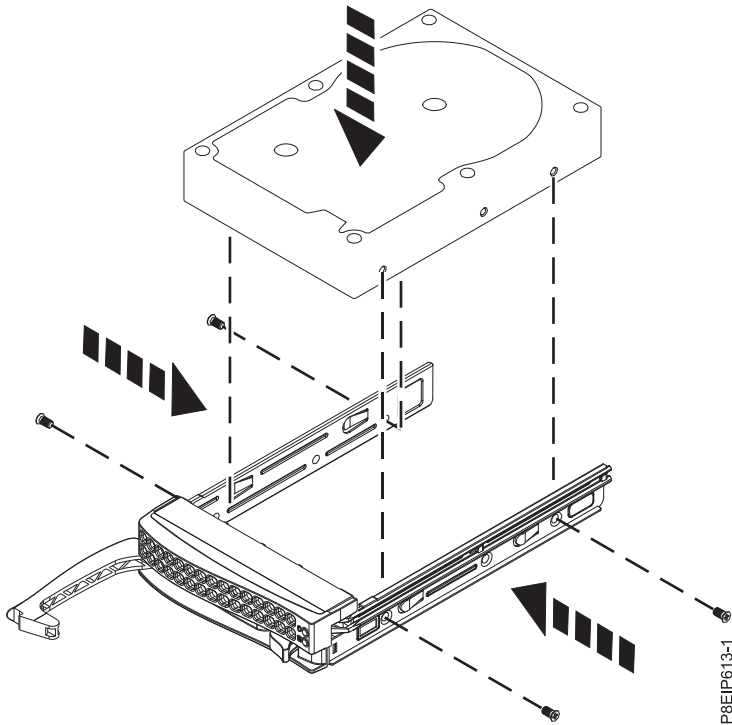


Figure 6. Mounting the 3.5-inch drive in the tray

- A 2.5-inch drive slides into the rear of the tool-less drive carrier.
  - a. Turn the tray upside down as shown in Figure 7.
  - b. Open the retention spring (B) as shown in Figure 8 on page 13.
  - c. Place the 2.5-inch drive (A) into the tray, aligning the pins with the screw holes in the drive.
  - d. When the pins are aligned, close the retention spring, allowing the pins to secure the drive in the tray.
  - e. Turn the tray right side up.


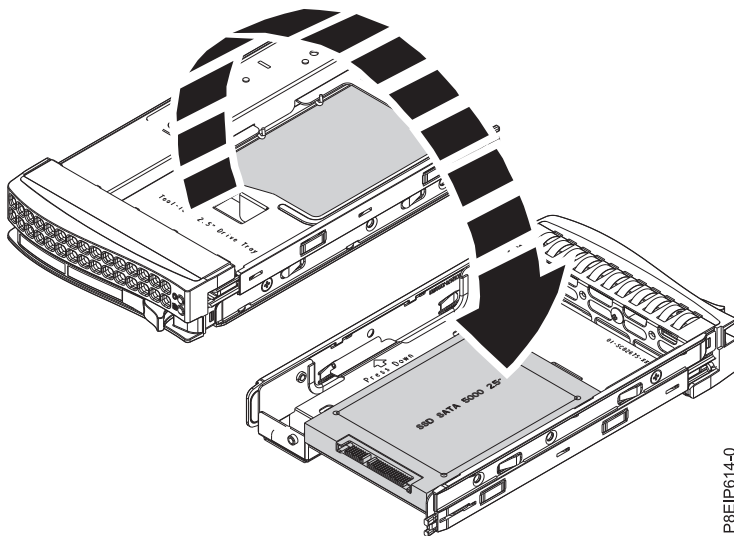


Figure 7. Turning the 2.5-inch tray upside-down

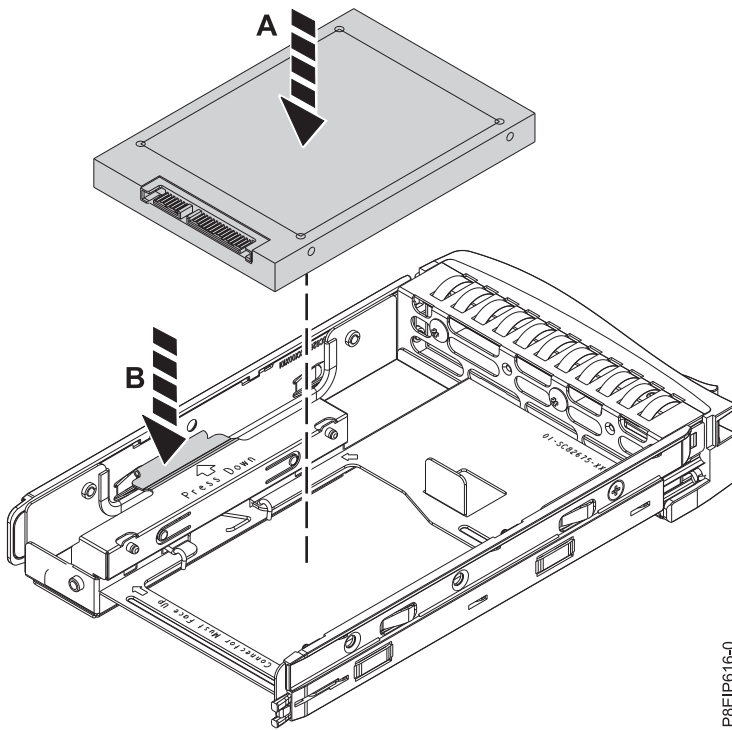

P8EIF616-0

Figure 8. Mounting the 2.5-inch drive in the tray

6. Support the drive by the bottom as you position the drive, and insert it into the drive slot.

**Important:** Ensure that the drive is fully seated and is all the way into the system.

7. Lock the drive bay handle (A) by pushing in the handle release until it locks at (B) as shown in Figure 9 on page 14.

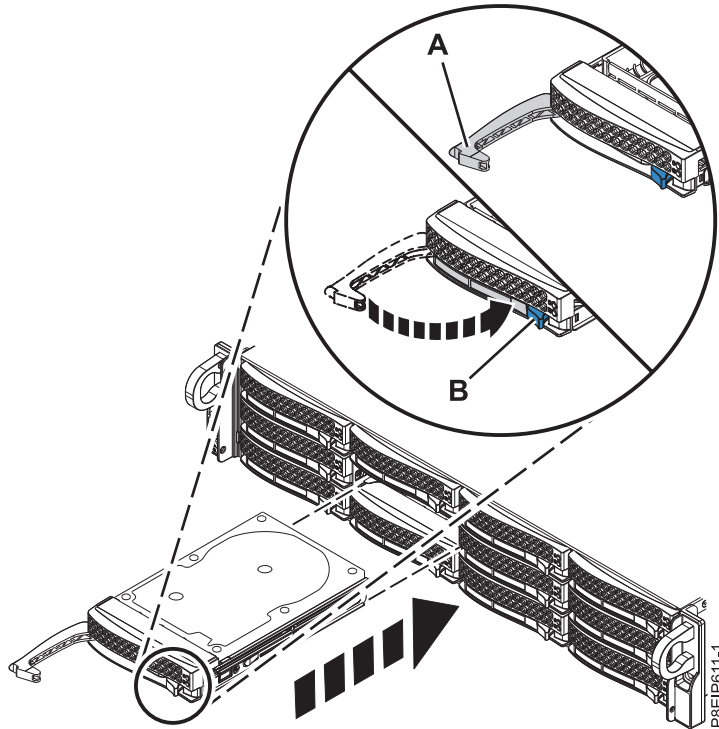


Figure 9. Disk drive lock detail

8. If you installed an NVMe drive, power the system back on. For instructions, see “Starting the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 95.
9. Configure the installed drive for your environment.  
After you insert the new drive, you need to rescan for the device.

#### Ubuntu Linux operating system

To run the **rescan-scsi-bus** command in the Ubuntu Linux operating system, log in to the system as the root user, and run the following command:

```
rescan-scsi-bus
```

The **rescan-scsi-bus** tool is available in the `scsitools` package; install the package by using the following command:

```
sudo apt-get install scsitools
```

#### Red Hat Enterprise Linux (RHEL) version 7.2

To run the `rescan` command in the REHL version 7.2 operating system, log in to the system as the root user, and run the command:

```
rescan-scsi-bus.sh -a
```

The **rescan-scsi-bus** tool is available in the `sg3_utils` package; install the package by using the following command:

```
yum install sg3_utils
```

You can also want to refer to: Adding a Storage Device or Path ([https://access.redhat.com/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux/7/html/Storage\\_Administration\\_Guide/logical-unit-add-remove.html](https://access.redhat.com/documentation/en-US/Red_Hat_Enterprise_Linux/7/html/Storage_Administration_Guide/logical-unit-add-remove.html)).

10. Load or restore data from your backup media.

## Installing a drive on module in the 8001-22C system

Learn how to install a drive on module (DOM) in the IBM Power System S822LC for Big Data (8001-22C) system.

### Before you begin

Power off the system and place it in the service position. For instructions, see “Preparing the 8001-22C or 8005-22N system to remove and replace internal parts” on page 92.

### About this task

You can plug SATA drive on module (DOM) drives directly into the system backplane. Use the two orange SATA connectors. If you use SATA DOM, they limit the number of front-mounted SATA drives. You can use up to two SATA DOM drives.


- If you have one SATA DOM plugged into the system backplane, you can use up to seven front-mounted SATA drives.
- If you have two SATA DOMs plugged into the system backplane, you can use up to six front-mounted SATA drives.

### Procedure

1. Attach the electrostatic discharge (ESD) wrist strap.

#### Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
2. Install the DOM into the system backplane, in positions **(A)**, as shown in Figure 10 on page 16. Depending on the DOM model, you may also have to plug in a small power cord for the DOM. Ensure you plug the connectors in properly.

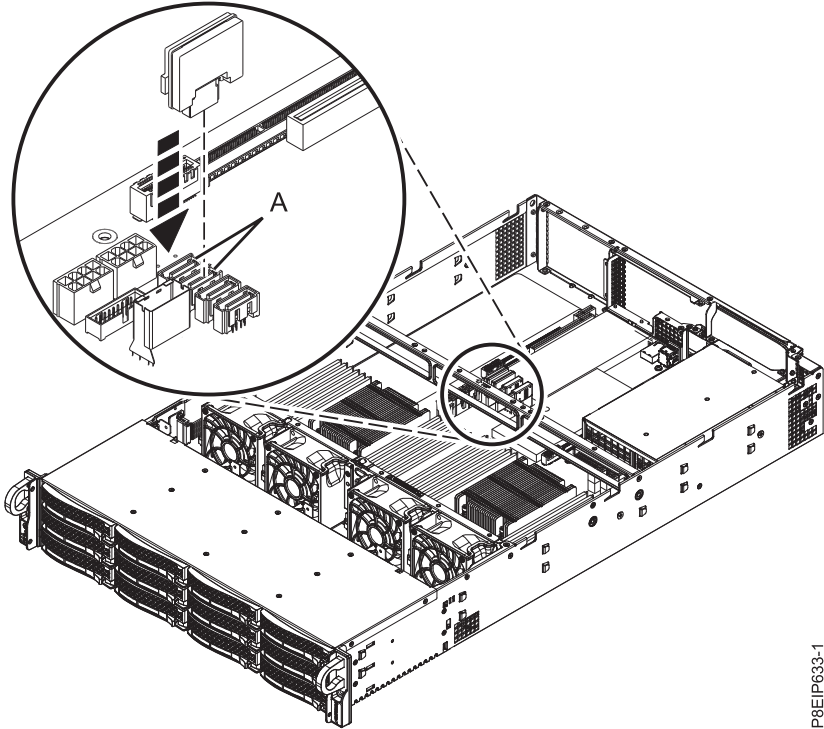

P8EIP633-1

Figure 10. Installing a DOM

3. Prepare the system for operation. For instructions, see “Preparing the 8001-22C system for operation after you remove and replace internal parts” on page 94.
4. Configure the installed drive for your environment.  
After you insert the new drive, you need to rescan for the device.

#### Ubuntu Linux operating system

To run the **rescan-scsi-bus** command in the Ubuntu Linux operating system, log in to the system as the root user, and run the following command:

```
rescan-scsi-bus
```

The **rescan-scsi-bus** tool is available in the `scsiutils` package; install the package by using the following command:

```
sudo apt-get install scsiutils
```

#### Red Hat Enterprise Linux (RHEL) version 7.2

To run the `rescan` command in the RHEL version 7.2 operating system, log in to the system as the root user, and run the command:

```
rescan-scsi-bus.sh -a
```

The **rescan-scsi-bus** tool is available in the `sg3_utils` package; install the package by using the following command:

```
yum install sg3_utils
```

You can also want to refer to: Adding a Storage Device or Path ([https://access.redhat.com/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux/7/html/Storage\\_Administration\\_Guide/logical-unit-add-remove.html](https://access.redhat.com/documentation/en-US/Red_Hat_Enterprise_Linux/7/html/Storage_Administration_Guide/logical-unit-add-remove.html)).

5. Load or restore data from your backup media.



---

## Installing a graphics processing unit in the 8001-22C system

Learn how to install a graphics processing unit in the IBM Power System S822LC for Big Data (8001-22C) system.

### Before you begin

Power off the system and place it in the service position. For instructions, see “Preparing the 8001-22C or 8005-22N system to remove and replace internal parts” on page 92.

### About this task

#### Notes for thermal limitations:

- If the 8001-22C system has no GPUs, the system can support up to twelve 3.5-inch drives. The ambient temperature must not be more than 35°C (95°F). If all twelve 3.5-inch drives are installed, the system limits the 10-core POWER8 processor to 234 W and the 8-core POWER8 processor to 204 W.
- Limitation on the number of supported drives if the 8001-22C system has one or two GPU accelerators (feature code EKAJ or EKAZ):
  - If your 8001-22C system with feature code EKB1 or EKB5 has feature code EKAJ or EKAZ, and if the system has storage adapters (feature codes EKEA or EKEB), the system can support up to eight 3.5-inch drives. The drives must be installed into the bottom two drive bay rows. The drives cannot be installed into the top drive bay row.
  - If your 8001-22C system with feature code EKB1 or EKB5 has feature code EKAJ or EKAZ, but has no storage adapters, the system can support up to six 3.5-inch drives. The drives must be installed into the bottom two drive bay rows in the leftmost positions. The drives cannot be installed into the top drive bay row nor into the rightmost positions.
  - The ambient temperature must not be more than 25°C (77°F). Reduce the maximum allowable dry-bulb temperature 1°C per 175 m above 950 m. IBM recommends a temperature range of 18°C - 27°C (64°F - 80.6°F). The system limits the 8-core POWER8 processor to 240 W.
  - The default Linux governor is “on-demand”, which results in the CPU going to turbo frequency when the workload demands and the power and cooling parameters allow. The CPU can require up to 250W at turbo frequency and high utilization. For the cases described here which show less than 250W cooling capability, you might see the indicator “Performance Lags” in the system event log, when running a demanding workload in “on-demand” mode. That means that the maximum turbo frequency cannot be held all the time.

### Procedure

1. Attach the electrostatic discharge (ESD) wrist strap.

#### Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
2. A GPU adapter can share a PCIe riser card with other adapters. Systems with one processor can have a GPU in position 3. Systems with two processors can have GPUs in positions 3 and 5. Position 3 is preferred for optimal cooling. Label and remove any cables and plugs that extend out of the adapters. See Figure 11 on page 18.

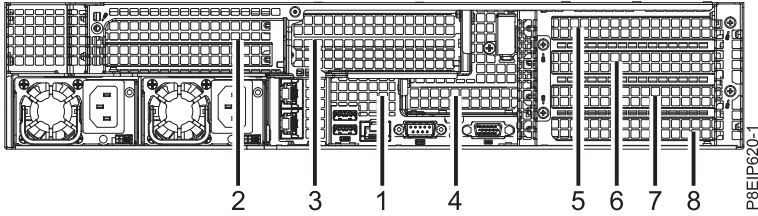


Figure 11. 8001-22C PCIe adapter positions

3. To install a GPU in position 3, complete the following steps:
  - a. Retract the retaining pin (**A**) so the arrow is pointing to the system.
  - b. Lift the PCIe riser from the system.
  - c. Place the PCIe adapter riser on an ESD surface, with the PCIe adapter riser facing up.
  - d. Remove the screws and the tail-stocks in position 3.
  - e. Insert the GPU (**A**) into the PCIe adapter riser (**B**) as shown in Figure 12.

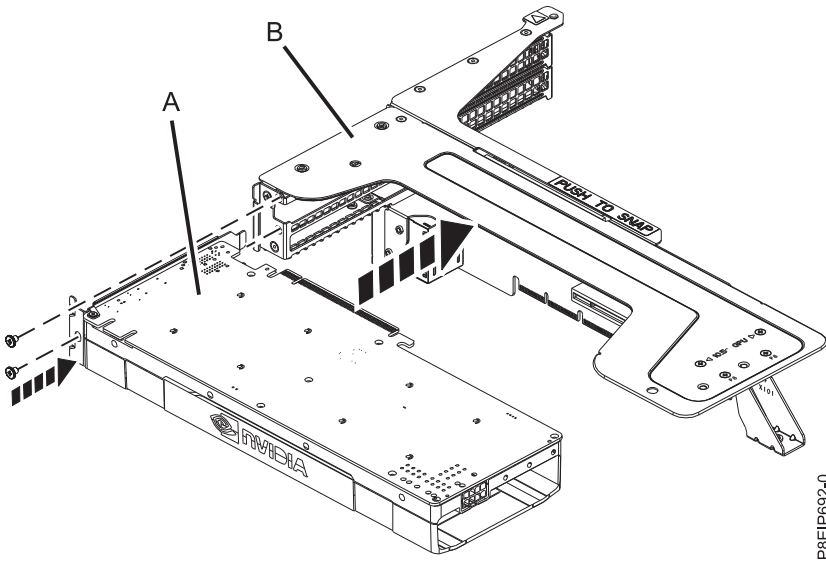


Figure 12. Inserting the GPU into the riser

- f. Replace the screw to secure the tail-stock.
  - g. Plug the GPU power cable (**A**) into the system backplane as shown in Figure 13 on page 19. Using your thumb, press the release latch on the connector to remove the cable.


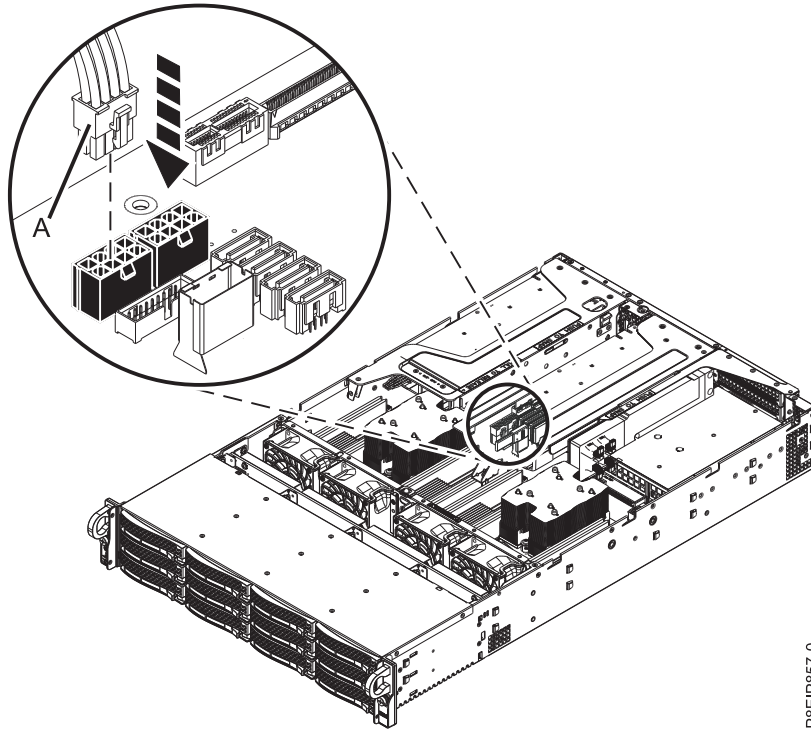


Figure 13. Plugging in the GPU power cable

- h. Insert the GPU and PCIe riser card into the chassis as shown in Figure 14 on page 20.
  - 1) Retract the retaining pin **(B)** so the arrow points to the system.
  - 2) Insert the riser, using the slots and alignment pins **(A)** to properly insert the riser. Push the riser firmly into the system backplane.
  - 3) Set the retaining pin **(B)** to secure the riser.

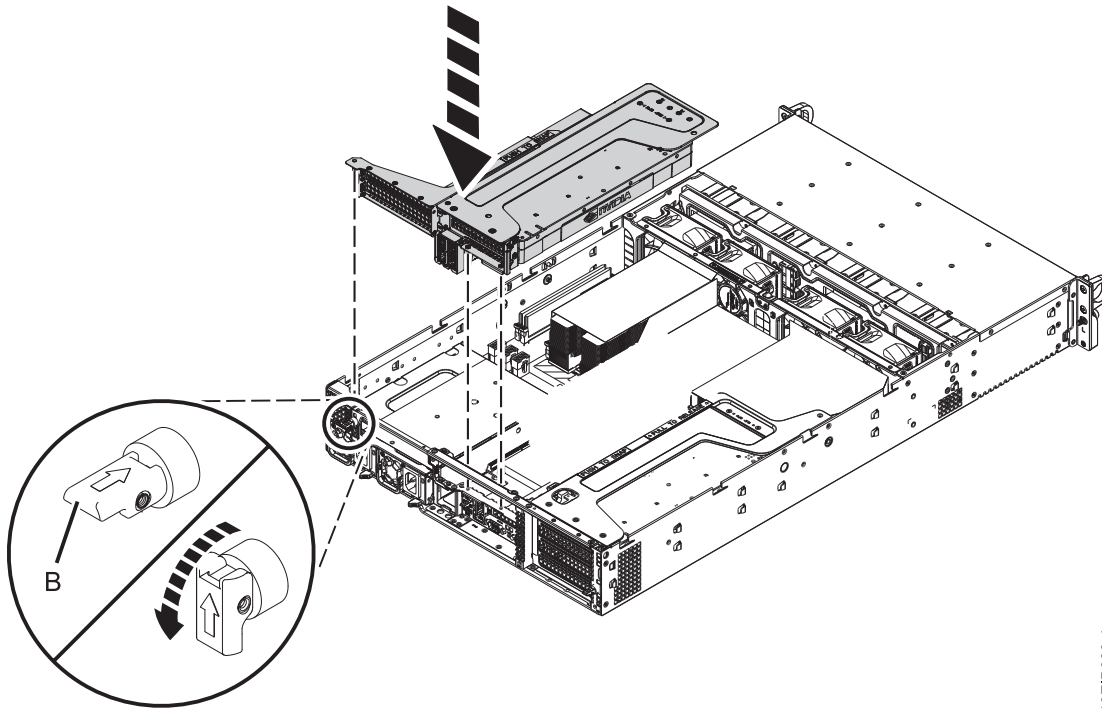


P8EIP622-1

Figure 14. Inserting the GPU and PCIe riser

Go to step 5 on page 22.

4. To install a GPU in position 5, remove the riser as shown in Figure 15.

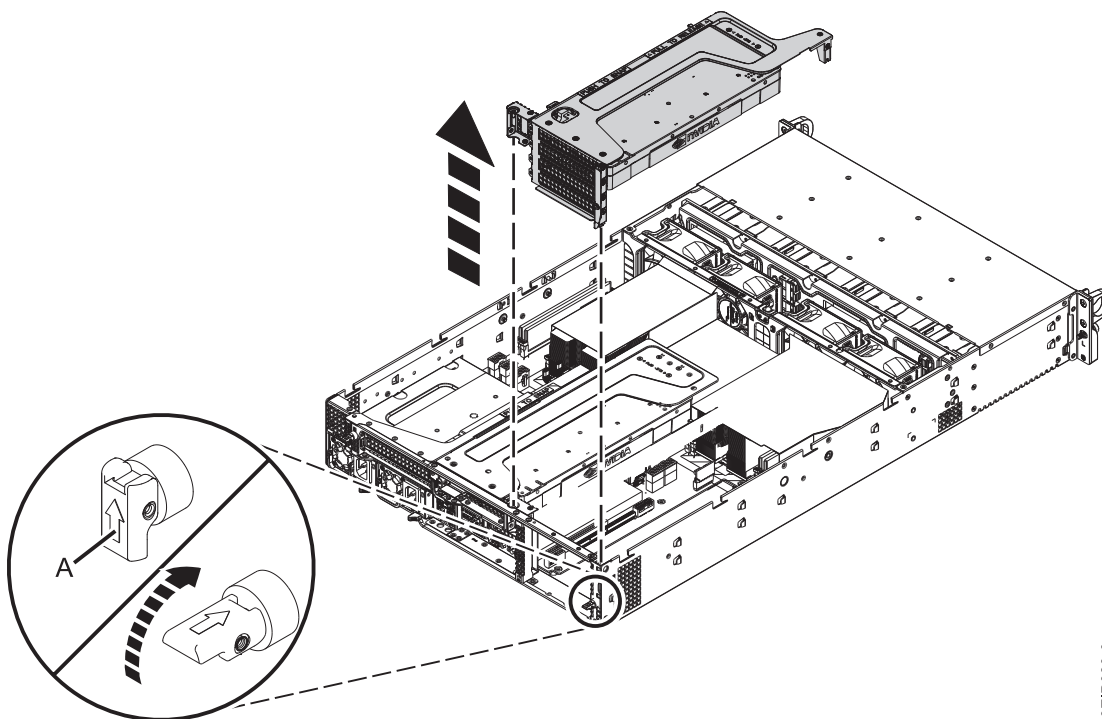

P8EIP623-0

Figure 15. Removing the PCIe riser

- a. Retract the retaining pin (A) so the arrow is pointing to the system.

- b. Lift the PCIe riser from the system.
- c. Place the PCIe adapter riser on an ESD surface, with the PCIe adapter riser facing up.
- d. Remove the screws and the tail-stocks in positions 5 and 6.
- e. Plug the GPU (A) into the PCIe adapter riser (B) as shown in Figure 16.

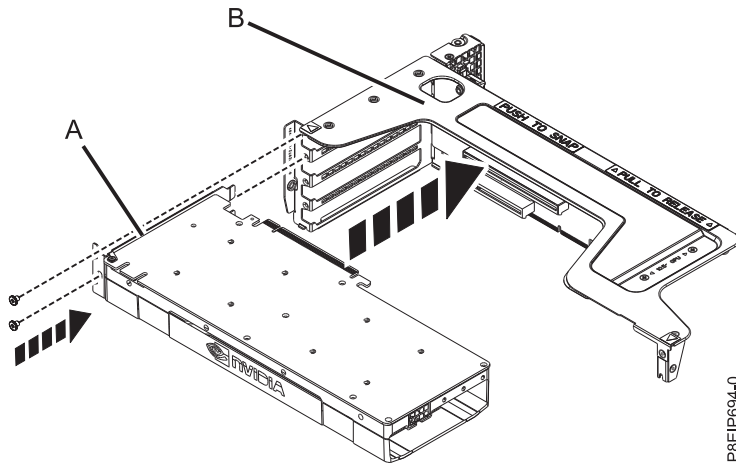


Figure 16. Inserting the GPU into the PCIe adapter riser

- f. Replace the screw to secure the tail-stock.
- g. Plug the GPU power cable (A) into the system backplane as shown in Figure 17. Using your thumb, press the release latch on the connector to remove the cable.

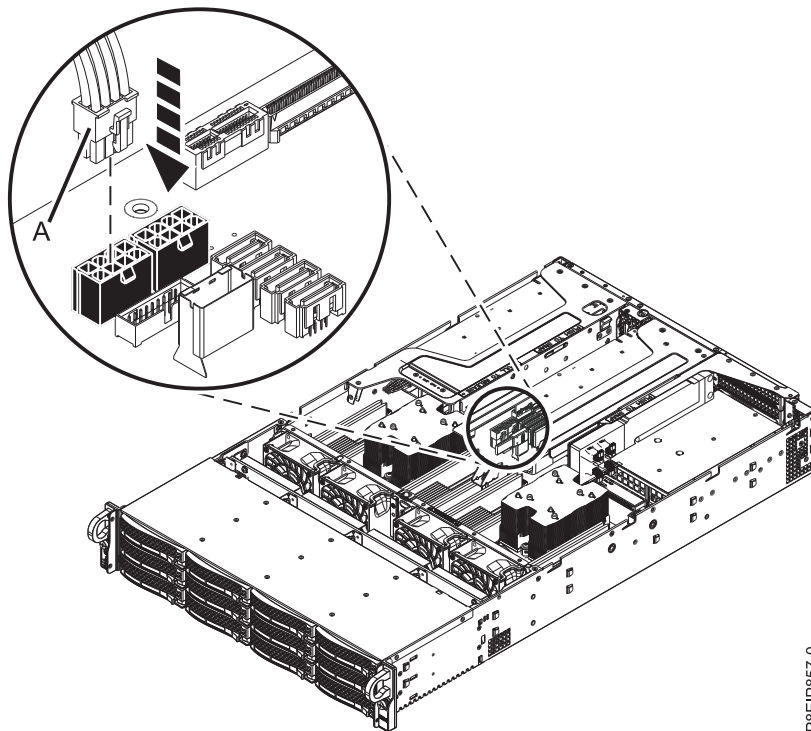


Figure 17. Plugging in the GPU power cable

- h. Insert the GPU and PCIe riser as shown in Figure 18 on page 22.
  - 1) Retract the retaining pin (B) so the arrow points to the system.

- 2) Insert the riser, using the slots and alignment pins (A) to properly insert the riser. Push the riser firmly into the system backplane.
- 3) Set the retaining pin (B) to secure the riser.

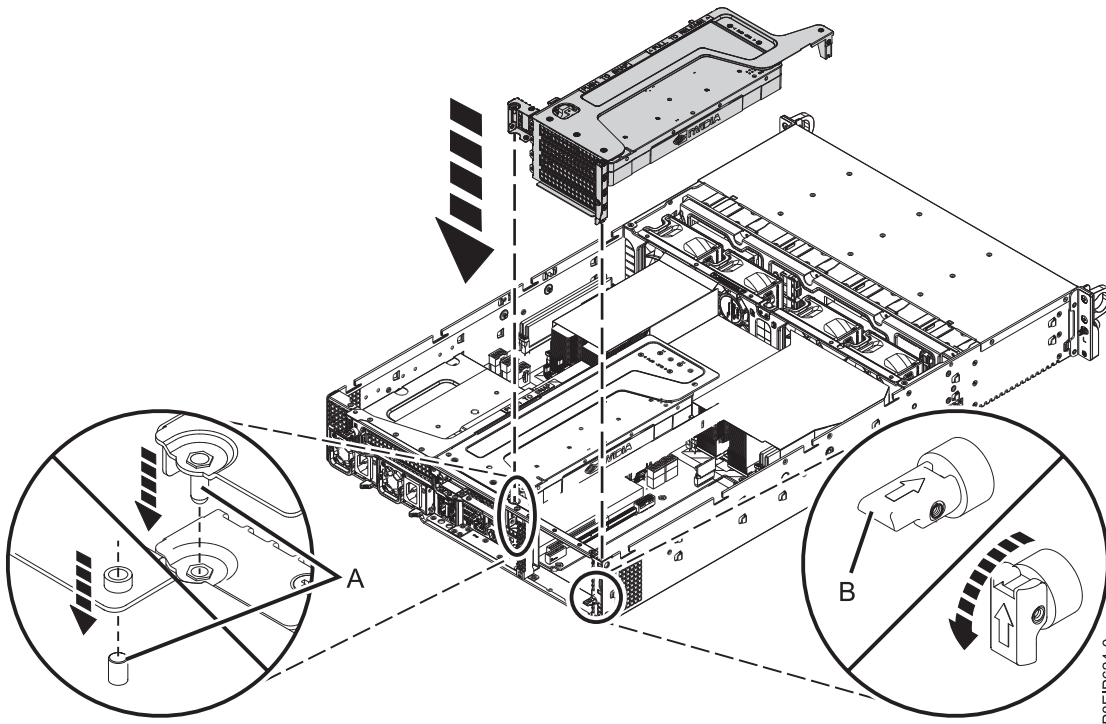


Figure 18. Inserting the GPU and riser

5. The GPU is installed.

## What to do next

Prepare the system for operation. For instructions, see “Preparing the 8001-22C system for operation after you remove and replace internal parts” on page 94.

---

## Installing memory in the 8001-22C system

Learn how to install memory in the IBM Power System S822LC for Big Data (8001-22C) system.

### Placement rules for memory in the 8001-12C or 8001-22C system

Learn about the configurations and rules that apply to adding memory to the IBM Power System S821LC (8001-12C) or the IBM Power System S822LC for Big Data (8001-22C) system.

Table 2 on page 23 lists the supported memory DIMM feature codes and Table 3 on page 23 shows the allowable memory capacity points for the 8001-12C or 8001-22C system.

- Mixing of memory feature codes is not allowed.
- Mixing of memory from different manufacturers is not allowed.
- You must add four memory DIMMs at a time.
- The memory DIMMs need to be added in a sequence. Use Table 4 on page 23 and Figure 19 on page 23 to determine the memory placement.

Table 2. Memory DIMM feature codes

Supported feature codes (FC)	Size
EMM0	4 GB Memory DDR4 ISRDIMM
EMM1	8 GB Memory DDR4 ISRDIMM
EMM2	16 GB Memory DDR4 ISRDIMM
EMM3	32 GB Memory DDR4 ISRDIMM

Table 3. Memory configuration as a function of the number of DIMMs. You read this table by selecting the individual DIMM size row in the leftmost column, then move to the right and select the columns for the memory capacity. The value that is listed is the quantity of the memory feature code that can be ordered, which corresponds to the DIMM size in the leftmost column.

DIMM Size	DIMMs	DIMMs	DIMMs	DIMMs	DIMMs	DIMMs	DIMMs	DIMMs	DIMMs	DIMMs
<b>Total Memory</b>	<b>16 GB</b>	<b>32 GB</b>	<b>48 GB</b>	<b>64 GB</b>	<b>96 GB</b>	<b>128 GB</b>	<b>192 GB</b>	<b>256 GB</b>	<b>384 GB</b>	<b>512 GB</b>
4 GB	4 (default)	8	12	16						
8 GB		4		8	12	16				
16 GB				4		8	12	16		
32 GB						4		8	12	16

Table 4. Memory plugging sequence

Slot Location	DIMM Quantity	Plugging Sequence
P1M1 A and B, P1M2 A and B	4	1
P2M1 A and B, P2M2 A and B	4	2
P1M1 C and D, P1M2 C and D	4	3
P2M1 C and D, P2M2 C and D	4	4

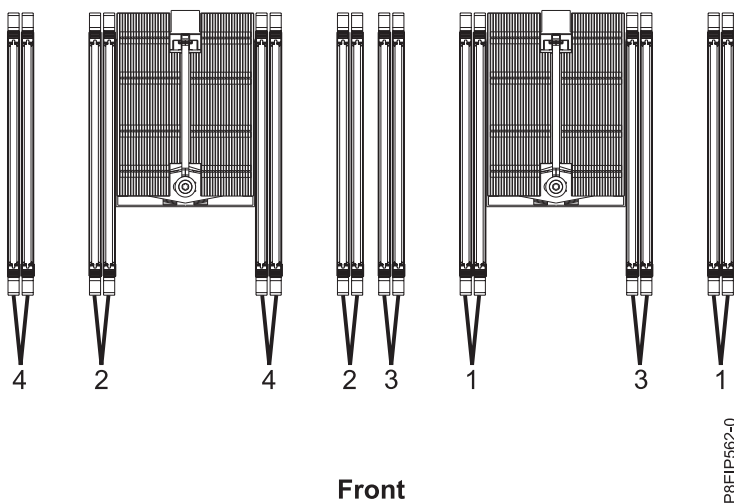


Figure 19. Memory slot locations and plugging sequence

## Installing memory in the 8001-22C system

Learn how to install memory in the IBM Power System S822LC for Big Data (8001-22C) system.

## Before you begin

Power off the system and place it in the service position. For instructions, see “Preparing the 8001-22C or 8005-22N system to remove and replace internal parts” on page 92.

## Procedure

1. Attach the electrostatic discharge (ESD) wrist strap.

### Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
2. Determine the slot in which you want to install the memory. See “Placement rules for memory in the 8001-12C or 8001-22C system” on page 22 to understand the plugging rules and to ensure that you plug the memory into the system in the correct sequence.
  3. Depending on the memory locations, you might need to remove the system processor air baffle. Carefully unsnap and lift the processor air baffle from the system.

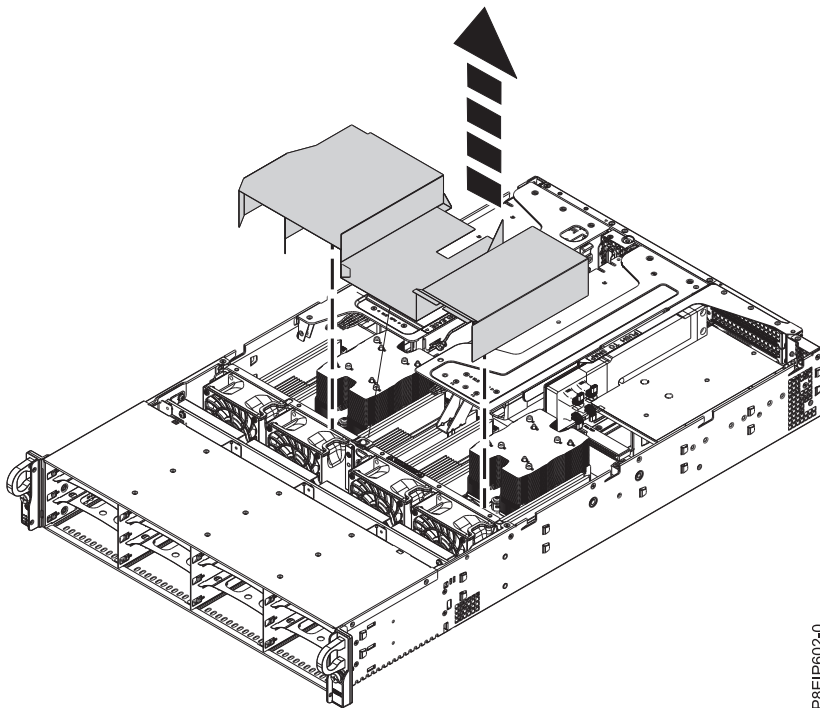


Figure 20. Removing the processor air baffle

4. Push the DIMM locking tabs away from the socket.
5. Insert the memory DIMM.
  - a. Grasp the memory DIMM along its edges and align it with the slot on the system backplane.  
**Attention:** Memory is keyed to prevent it from being installed incorrectly. Note the location of the key tab within the memory connector before you attempt to install it.



- b. Press firmly on each side of the memory DIMM until the locking tab locks in place with an audible click.


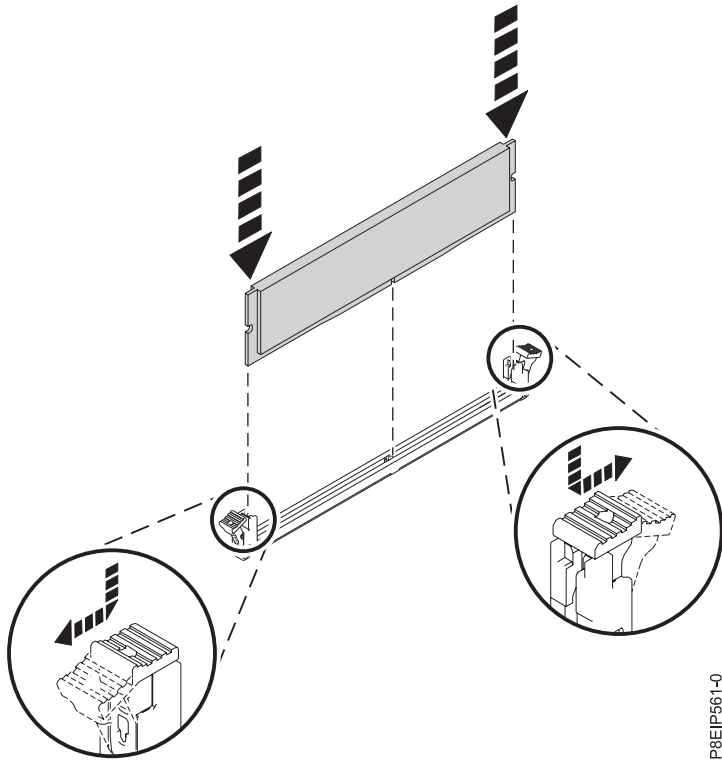


Figure 21. Inserting the memory DIMM

6. If you removed the system processor air baffle, replace it. Insert the edge of the baffle into the fan support as shown in Figure 22 on page 26. Then, carefully press the baffle down into place.

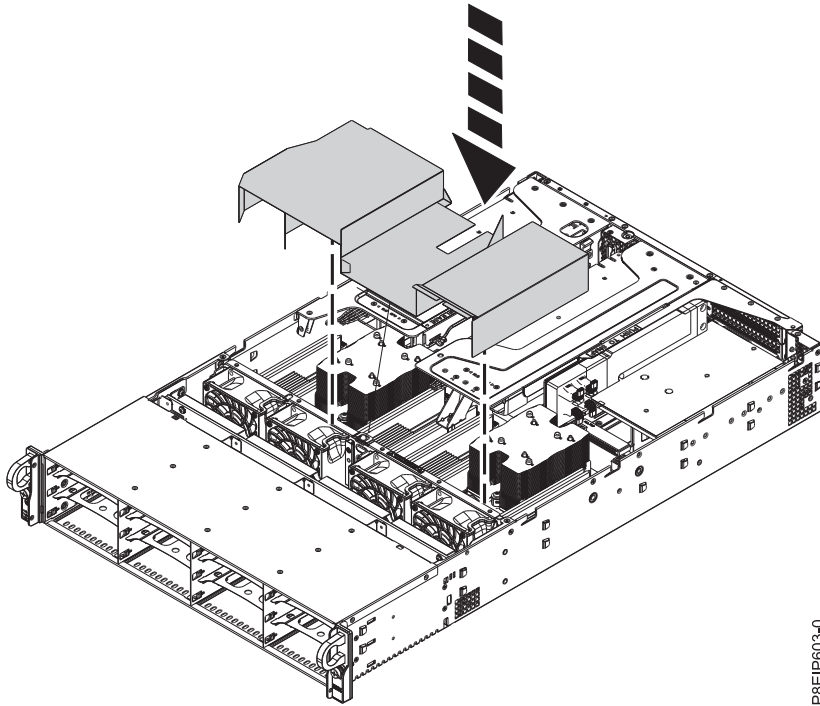

P8EIP603-0

Figure 22. Installing the processor air baffle

## What to do next

Prepare the system for operation. For instructions, see “Preparing the 8001-22C system for operation after you remove and replace internal parts” on page 94.

## Installing a PCIe adapter in the 8001-22C system

Learn how to install Peripheral Component Interconnect Express (PCIe) adapters in the IBM Power System S822LC for Big Data (8001-22C).

### About this task

You can install full-length, half-length or short (low-profile) PCIe adapters in the system. If you need to change the tail-stock of the PCIe adapter from one size to another, so that the adapter fits properly in the socket, see Removing and replacing the tailstock on a PCIe adapter.

The features listed in Table 5 are electromagnetic compatibility (EMC) Class B features. See the Class B Notices in the Hardware Notices section.

Table 5. Electromagnetic compatibility (EMC) Class B features

Feature	Description
EKAA	Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-9361-8IS-IB001 and AOC-K-9361-8IB-IB001)
EKAJ	NVIDIA Tesla K80 24 GB GPU Accelerator (Adapter FRU number: AOC-KIT-NVK80-IB001)
EKA3	Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP (Adapter FRU number: AOC-SG-I2)
EKAT	Alpha-data CAPI Adapter: ADM-PCIe KU3 (Adapter FRU Number: ADM-PCIE-KU3)

## PCIe adapter placement rules and slot priorities for the 8001-22C or 8005-22N system

Find information about the placement rules and slot priorities for the Peripheral Component Interconnect Express (PCIe) adapters that are supported for the IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N).

### PCIe slot descriptions

The 8001-22C or 8005-22N system provides PCIe generation 3 slots. Full-length, half-length or short (low-profile) adapters can be installed. Figure 23 shows the rear view of the system with the PCIe adapter slots. Table 6 lists the PCIe adapter slot locations and details for the 8001-22C or 8005-22N system.

**Important:** The only two adapters that are currently supported on the 8005-22N are FC EKFH and AOC-S3008L-L8e-P.

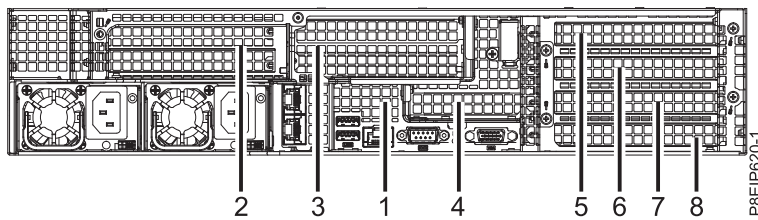


Figure 23. Rear view of an 8001-22C or 8005-22N system with PCIe slots indicated

Table 6. PCIe slot locations and descriptions for the 8001-22C or 8005-22N system

Slot	Description	PCI host bridge (PHB)	Adapter size	Coherent Accelerator Processor Interface (CAPI)
1 (UIO Network)	4 ports 10 networking card x8	Processor Module 1, PHB0	Riser	No
2 (UIO Slot2)	Reserved for a SAS super capacitor carrier. This position is not a functional PCIe adapter location.	Unused	NA	Unused
3 (UIO Slot1)	PCIe3 x16	Processor Module 1, PHB0	Full-height, full-length, double-width	Yes
4 (PLX Slot1)	PCIe3 x8	Processor Module 1, PHB0	Half-height, half-length	No
5 (WIO Slot1)	PCIe3 x16	Processor Module 2, PHB1	Full-height, full-length, double-width	Yes
7 (WIO Slot2)	PCIe3 x8	Processor Module 2, PHB1	Full-height, full-length	Yes
8 (WIO Slot3)	PCIe3 x8	Processor Module 2, PHB1	Full-height, full-length	Yes

## PCIe adapter placement rules

Use this information to select slots for installing PCIe adapters in the 8001-22C or 8005-22N system. Table 7 provides information about the adapters, the slot priorities in the system they are supported on, and the maximum number of adapters that can be installed in the supported system. You can click the link that appears in the feature code column for more technical information specific to the PCIe adapter.

Table 7. PCIe adapters supported in the 8001-22C or 8005-22N system

Feature code	Description	8001-22C (Slot priority)	8005-22N (Slot priority)	Maximum number of adapters supported
EKA0	PCIe3 x4 Intel x550 10GBase-T Converged Network Adapter with Dual RJ45 Ports (Adapter FRU number: AOC-STGS-I2T) <ul style="list-style-type: none"> <li>• PCIe2.1 x8</li> <li>• Short, low-profile</li> <li>• Direct Cache Access (DCA) to avoid cache misses</li> <li>• TCP/UDP Segmentation Offload</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKA1	Cavium (Qlogic) BCM57840 4-port SFP+ 10 Gb Ethernet Adapter PCIe3.0 x8 LP (Adapter FRU number: AOC-STG-B4S) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• TCP Offload Engine (TOE)</li> <li>• VMDq and PC-SIG SR-IOV for Virtualized Environments</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKA2	Intel 82599ES Ethernet Converged Network Adapter x520-DA2 Dual-port 10G/1G SFP+ PCIe2.0 x8 LP (Adapter FRU number: AOC-STGN-I2S) <ul style="list-style-type: none"> <li>• PCIe2 x8</li> <li>• Short, low-profile</li> <li>• Dual and single SFP+ Connectors</li> <li>• Load Balancing on Multiple CPUs</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5

Table 7. PCIe adapters supported in the 8001-22C or 8005-22N system (continued)

Feature code	Description	8001-22C (Slot priority)	8005-22N (Slot priority)	Maximum number of adapters supported
EKA3	Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP (Adapter FRU number: AOC-SG-I2) <ul style="list-style-type: none"> <li>• PCIe2 x4</li> <li>• Short, low-profile</li> <li>• Intel I/O Acceleration Technology</li> <li>• Low-latency interrupts</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKAF	Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP (Adapter FRU number: AOC-LPE16002B-M6-Of) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Auto-negotiation</li> <li>• LDAP support</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKAJ	NVIDIA Tesla K80 24 GB GPU Accelerator (Adapter FRU number: AOC-KIT-NVK80-IB001) <ul style="list-style-type: none"> <li>• PCIe3 x16</li> <li>• Double-wide, with full-height tailstock</li> <li>• Dynamic parallelism</li> <li>• Hyper-Q and system monitoring</li> <li>• OS support: Linux operating systems</li> </ul>	3, 5	NA	2
EKAL	Mellanox MCX456A-ECAT ConnectX-4 VPI EDR IB 100 Gb/s and 100 GbE Dual-port QSFP28 PCIe3.0 x16 LP (Adapter FRU number: AOC-MCX456A-ECAT-IB001) <ul style="list-style-type: none"> <li>• PCIe3 x16</li> <li>• Short, with full-height tailstock</li> <li>• Virtual Protocol Interconnect (VPI)</li> <li>• OS support: Linux operating systems</li> </ul>	3, 5	NA	2

Table 7. PCIe adapters supported in the 8001-22C or 8005-22N system (continued)

Feature code	Description	8001-22C (Slot priority)	8005-22N (Slot priority)	Maximum number of adapters supported
EKAM	Mellanox MCX415A-CCAT ConnectX-4 EN 100 GbE Single-port QSFP28 PCIe3.0 x16 LP (Adapter FRU number: AOC-MCX415A-CCAT-IB001) <ul style="list-style-type: none"> <li>• PCIe3 x16</li> <li>• Short, with full-height tailstock</li> <li>• POWER8® CAPI support</li> <li>• OS support: Linux operating systems</li> </ul>	3, 5	NA	2
EKAP	Qlogic QLE2562 Dual-port 8 Gb Fibre Channel Adapter PCIe x8 LP (Adapter FRU number: AOC-QLE2562) <ul style="list-style-type: none"> <li>• PCIe2 x8</li> <li>• Short, low-profile</li> <li>• Auto-negotiation</li> <li>• StarPower technology</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKAQ	Qlogic QLE2692OP Dual-port 16 Gb Fibre Channel Adapter PCIe3 x8 LP (Adapter FRU number: AOC-QLE2692OP-IB001) <ul style="list-style-type: none"> <li>• PCIe2 x8</li> <li>• Short, low-profile</li> <li>• Auto-negotiation</li> <li>• StarPower technology</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKAT	Alpha-data CAPI Adapter: ADM-PCIe KU3 (Adapter FRU Number: ADM-PCIE-KU3) <ul style="list-style-type: none"> <li>• PCIe3 x16</li> <li>• Short, low-profile</li> <li>• 1 GB of BPI x16 configuration flash</li> <li>• Dual QSFP cages for high-speed optical communication including 10 and 40-Gigabit Ethernet</li> <li>• OS support: Linux operating systems</li> </ul>	3, 5	NA	2

Table 7. PCIe adapters supported in the 8001-22C or 8005-22N system (continued)

Feature code	Description	8001-22C (Slot priority)	8005-22N (Slot priority)	Maximum number of adapters supported
EKAU	<p>Mellanox MCX4121A-ACAT ConnectX-4 Lx EN 25GbE dual-port SFP28 PCIe3.0 x8 LP (Adapter FRU number: AOC-MCX4121A-ACAT-IB001)</p> <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, with full-height tailstock</li> <li>• POWER8® CAPI support</li> <li>• End-to-end QoS and congestion control</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKAZ	<p>NVIDIA Tesla P100 16GB PCIe3.0 x16 Dual-slot FHFL with cables (Adapter FRU number: AOC-KIT-NVTP100-IB001)</p> <ul style="list-style-type: none"> <li>• PCIe3 x16</li> <li>• Double-wide, with full-height tailstock</li> <li>• Pascal Architecture</li> <li>• NVLink</li> <li>• Kepler GPU Architecture</li> <li>• OS support: Linux operating systems</li> </ul>	3, 5	NA	2
EKEA	<p>Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-9361-8IS-IB001 and AOC-K-9361-8IB-IB001)</p> <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Supports 1.5, 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates</li> <li>• Supports RAID 0, 1, 5, 6, 10, 50, 60</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	1

Table 7. PCIe adapters supported in the 8001-22C or 8005-22N system (continued)

Feature code	Description	8001-22C (Slot priority)	8005-22N (Slot priority)	Maximum number of adapters supported
EKEB	SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-S3008L-L8iS-IB001 and AOC-K-S3008L-L8iB-IB001) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Supports 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates</li> <li>• Supports MegaRAID Storage Manager Software</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	1
EKED	Broadcom (LSI) 9300-8E SAS3 HBA PCIe3.0 x8 LP Adapter (Adapter FRU number: AOC-SAS3-9300-8E) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Supports 122 devices (HBA only)</li> <li>• Port independent auto-negotiation</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
EKEE	Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP (Adapter FRU number: AOC-LPE16002B-M6-Of) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Auto-negotiation</li> <li>• LDAP support</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	2
EKEG	PCIe3 x8 Quad-port Internal Host Bus Adapter (Adapter FRU number: AOC-K-SLG3-4E2PB-IB001) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Supports four physical NVMe Devices</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	1



Table 7. PCIe adapters supported in the 8001-22C or 8005-22N system (continued)

Feature code	Description	8001-22C (Slot priority)	8005-22N (Slot priority)	Maximum number of adapters supported
EKEH	LSI Mega RAID 9361-8i 2 GB SAS3 Controller with 8 Internal Ports (Adapter FRU number: AOC-K-9361-8I2B-IB001) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• Supports 1.5, 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates</li> <li>• Supports RAID 0, 1, 5, 6, 10, 50, 60</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	1
EKFH <sup>1</sup>	Intel XL710 Ethernet Converged Network Adapter Quad-port 10G/1G SFP+ PCIe3.0 x8 LP (Adapter FRU number: AOC-STG-I4S) <ul style="list-style-type: none"> <li>• Quad SFP+ Connectors</li> <li>• Small Packet Performance</li> <li>• Network Virtualization Offloads including VXLAN and NVGRE</li> </ul>	4, 5, 7, 8	5	1
EKN2	PCIe3 1.6 TB NVMe Flash Adapter (Adapter FRU number: HDS-AVM-HUSPR3216AHP301) <ul style="list-style-type: none"> <li>• PCIe3 x4</li> <li>• Short, low-profile</li> <li>• 1.6 TB of low latency flash memory</li> <li>• OS support: Linux operating systems</li> </ul>	3, 4, 5, 7, 8	NA	5
AOC-S3008L-L8e-P	12 Gb/s Eight-Port SAS Internal HBA Adapter (Adapter FRU number: AOC-S3008L-L8e-P) <ul style="list-style-type: none"> <li>• PCIe3 x8</li> <li>• Short, low-profile</li> <li>• OS support: Linux operating systems</li> </ul>	NA	3	1

## PCIe adapter information by feature type for the 8001-22C or 8005-22N

Find information about the Peripheral Component Interconnect Express (PCIe) adapters that are supported for the IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N).

The table shows the available adapters by feature code (FC), description, adapter FRU number, and provides a link to more details for each adapter.

**Important:**

- This document does not replace the latest sales and marketing publications and tools that document supported features.
- If you are installing a new feature, ensure that you have the software and utilities that are required to support the new feature and determine whether you must install any adapter firmware updates. The latest version of adapter firmware and utilities can be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).
- For more information regarding PCIe adapter identification and I/O firmware levels for each adapter, see the IBM Power 8001-12C and 8001-22C I/O Firmware ([https://www.ibm.com/developerworks/community/wikis/home?lang=en\\_us#!/wiki/W51a7ffcf4dfd\\_4b40\\_9d82\\_446ebc23c550/page/IBM%20Power%208001-12C%20and%208001-22C%20IO%20Firmware](https://www.ibm.com/developerworks/community/wikis/home?lang=en_us#!/wiki/W51a7ffcf4dfd_4b40_9d82_446ebc23c550/page/IBM%20Power%208001-12C%20and%208001-22C%20IO%20Firmware)) topic on the Linux on POWER® community wiki.
- The only two adapters that are currently supported on the 8005-22N are FC EKFH and AOC-S3008L-L8e-P.

*Table 8. PCIe adapters supported in the 8001-22C or 8005-22N system*

Feature code	Description
EKA0	PCIe3 x4 Intel x550 10GBase-T Converged Network Adapter with Dual RJ45 Ports (Adapter FRU number: AOC-STGS-I2T)
EKA1	Cavium (Qlogic) BCM57840 4-port SFP+ 10 Gb Ethernet Adapter PCIe3.0 x8 LP (Adapter FRU number: AOC-STG-B4S)
EKA2	Intel 82599ES Ethernet Converged Network Adapter x520-DA2 Dual-port 10G/1G SFP+ PCIe2.0 x8 LP (Adapter FRU number: AOC-STGN-I2S)
EKA3	Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP (Adapter FRU number: AOC-SG-I2)
EKEE	PCIe3 x8 Dual-port Internal NVMe Host Bus Adapter (Adapter FRU number: AOC-K-SLG3-2E4B-IB001)
EKAF	Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP (Adapter FRU number: AOC-LPE16002B-M6-Of)
EKAJ	NVIDIA Tesla K80 24 GB GPU Accelerator (Adapter FRU number: AOC-KIT-NVK80-IB001)
EKAL	Mellanox MCX456A-ECAT ConnectX-4 VPI EDR IB 100 Gb/s and 100 GbE Dual-port QSFP28 PCIe3.0 x16 LP (Adapter FRU number: AOC-MCX456A-ECAT-IB001)
EKAM	Mellanox MCX415A-CCAT ConnectX-4 EN 100 GbE Single-port QSFP28 PCIe3.0 x16 LP (Adapter FRU number: AOC-MCX415A-CCAT-IB001)
EKAP	Qlogic QLE2562 Dual-port 8 Gb Fibre Channel Adapter PCIe x8 LP (Adapter FRU number: AOC-QLE2562)
EKAQ	Qlogic QLE2692OP Dual-port 16 Gb Fibre Channel Adapter PCIe3 x8 LP (Adapter FRU number: AOC-QLE2692OP-IB001)
EKAT	Alpha-data CAPI Adapter: ADM-PCIe KU3 (Adapter FRU Number: ADM-PCIE-KU3)
EKAU	Mellanox MCX4121A-ACAT ConnectX-4 Lx EN 25GbE dual-port SFP28 PCIe3.0 x8 LP (Adapter FRU number: AOC-MCX4121A-ACAT-IB001)
EKAZ	NVIDIA Tesla P100 16GB PCIe3.0 x16 Dual-slot FHFL with cables (Adapter FRU number: AOC-KIT-NVTP100-IB001)
EKAA	Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-9361-8IB-IB001)
EKAB	SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-S3008L-L8iB-IB001)

Table 8. PCIe adapters supported in the 8001-22C or 8005-22N system (continued)

Feature code	Description
EKED	Broadcom (LSI) 9300-8E SAS3 HBA PCIe3.0 x8 LP Adapter (Adapter FRU number: AOC-SAS3-9300-8E)
EKEG	SMC quad-port NVMe Host Bus Adapter (PEX9733) PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-SLG3-4E2PB-IB001)
EKEH	SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables (Adapter FRU number: AOC-K-9361-8I2B-IB001)
EKFH <sup>1</sup>	Intel XL710 Ethernet Converged Network Adapter Quad-port 10G/1G SFP+ PCIe3.0 x8 LP (Adapter FRU number: AOC-STG-I4S) <b>Note:</b> This adapter must go in WIO Slot1 in the 8005-12N system.
EKN2	PCIe3 1.6 TB NVMe Flash Adapter (Adapter FRU number: HDS-AVM-HUSPR3216AHP301)
AOC-S3008L-L8e-P <sup>2</sup>	12 Gb/s Eight-Port SAS Internal HBA Adapter (Adapter FRU number: AOC-S3008L-L8e-P) <b>Note:</b> This adapter must go in UIO Slot1 in the 8005-12N system.
<sup>1</sup> This adapter is supported on the 8001-22C and 8005-22N.	
<sup>2</sup> This adapter is only supported on the 8005-22N.	

## 12 Gb/s Eight-Port SAS Internal HBA Adapter (Adapter FRU number: AOC-S3008L-L8e-P)

Learn about the specifications and operating system requirements for the 12 Gb/s Eight-Port SAS Internal HBA Adapter .

### Overview

The 12 Gb/s Eight-Port SAS Internal HBA Adapter is a PCI Express Gen-3 (PCIe3) x8 adapter. The adapter can be used in either an x8 or x16 PCIe slot in the system. The adapter expands virtualization beyond the server level to the network level and combines with hardware optimizations and offloads. It features 8 internal SAS connectors for high-performance storage connectivity. The adapter uses a Broadcom 3008 I/O processor with Fusion-MPT (Message Passing Technology) for optimum performance and a PCI Express host interface for increased bandwidth. The 12 Gb/s Eight-Port SAS Internal HBA Adapter supports 122 devices as a HBA in IT mode.

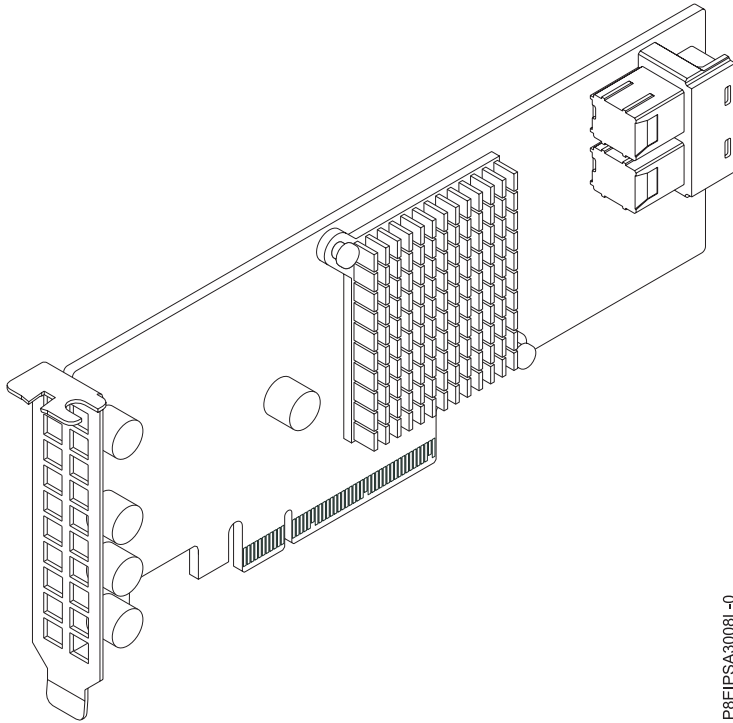


Figure 24. 12 Gb/s Eight-Port SAS Internal HBA Adapter

## Specifications

### Item Description

#### Adapter FRU number

AOC-S3008L-L8e-P (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8 processor-based systems

#### Voltage

3.3 V, 12 V

#### Form factor

Short, low-profile

#### Attributes provided

Supports 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates

Port-independent auto-negotiation

Supports SSP, SMP, STP and SATA protocols

Automatically negotiates PCIe (1.x, 2.x and 3.x) link widths

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for operating system and partition requirements, see one of the following links:

- The latest version of enabling libraries and utilities may be downloaded from Fix Central. (<http://www.ibm.com/support/fixcentral/>)
- IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf))
- IBM SSIC (System Storage Interoperation Center) (<http://www-03.ibm.com/systems/support/storage/ssic/interoperability.wss>)
- The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website. (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>)
- For support details, see the Linux Alert website. ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html))

## PCIe3 x4 Intel x550 10GBase-T Converged Network Adapter with Dual RJ45 Ports (FC EKA0)

Learn about the specifications and operating system requirements for feature code (FC) EKA0 adapters.

### Overview

The PCIe3 x4 Intel x550 10GBase-T Converged Network Adapter with Dual RJ45 Ports is a PCI Express (PCIe) generation 2.1 (Gen2) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter has an auto-negotiation feature between 1 GbE and 10 GbE that offers compatibility with earlier versions for a smooth transition to 10 GbE.

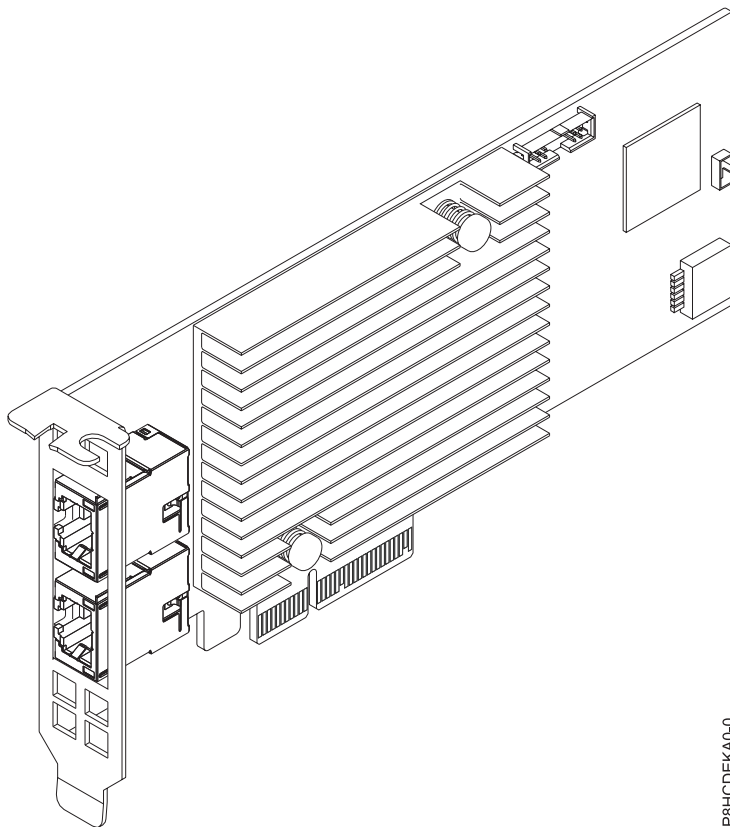


Figure 25. PCIe3 x4 Intel x550 10GBase-T Converged Network Adapter with Dual RJ45 Ports

### Specifications

Item	Description
------	-------------

**Adapter FRU number**

AOC-STGS-I2T (Designed to comply with RoHS requirement)

**I/O bus architecture**

PCIe2.1 x8

**Slot requirement**

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

**Supported Systems**

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

**Voltage**

12 V

**Form factor**

Short, low-profile

**Maximum number**

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

**Attributes provided**

Direct Cache Access (DCA) to avoid cache misses

TCP/UDP Segmentation Offload

Support for Virtual Machine Device Queues (VMDq and Next-generation VMDq)

Preboot eXecution Environment (PXE) support

**Cables**

RJ-45 Category-6 up to 55 M

**Operating system or partition requirements**

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

**Cavium (Qlogic) BCM57840 4-port SFP+ 10 Gb Ethernet Adapter PCIe3.0 x8 LP (FC EKA1)**

Learn about the specifications and operating system requirements for feature code (FC) EKA1 adapters.

## Overview

The Cavium (Qlogic) BCM57840 4-port SFP+ 10 Gb Ethernet Adapter PCIe3.0 x8 LP is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter offers a broad selection of networking features including TCP offload, support for PXE boot and virtualized environments (VMDq and PC-SIG SRIOV), and Energy Efficient Ethernet (IEEE 802.3az).

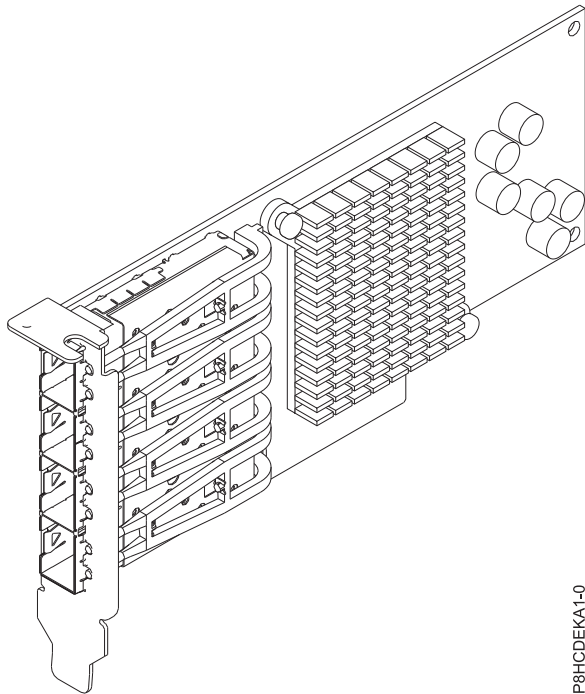


Figure 26. Cavium (Qlogic) BCM57840 4-port SFP+ 10 Gb Ethernet Adapter PCIe3.0 x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-STG-B4S (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

**Attributes provided**

External PHY support

TCP Offload Engine (TOE)

IPv6 acceleration

SR-IOV with up to 64 Virtual Functions (VFs) for Guest Operating Systems (GOS) per port

**Cables**

LC-LC fiber-optic cables (with required optional transceivers)

**Operating system or partition requirements**

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website(<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).

**Intel 82599ES Ethernet Converged Network Adapter x520-DA2 Dual-port 10G/1G SFP+ PCIe2.0 x8 LP (FC EKA2)**

Learn about the specifications and operating system requirements for feature code (FC) EKA2 adapters.

**Overview**

The Intel 82599ES Ethernet Converged Network Adapter x520-DA2 Dual-port 10G/1G SFP+ PCIe2.0 x8 LP is a PCI Express (PCIe) generation 2 (Gen2) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter offers a broad selection of features including iSCSI remote boot support, load balancing on multiple CPUs, and Fibre Channel over Ethernet (FCoE) support.



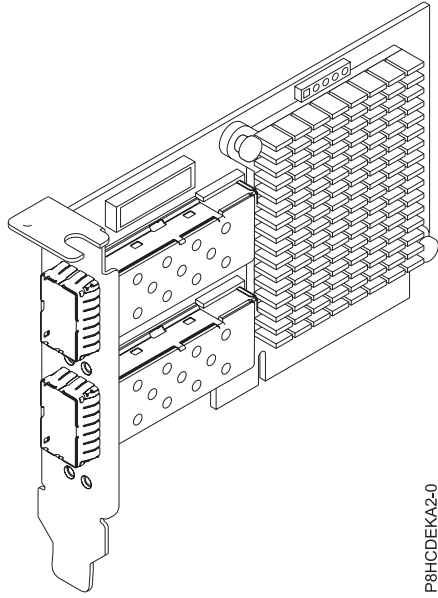


Figure 27. Intel 82599ES Ethernet Converged Network Adapter x520-DA2 Dual-port 10G/1G SFP+ PCIe2.0 x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-STGN-I2S (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe2 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

**Note:** For more transceiver and cable options, visit the Supermicro Store. (<https://store.supermicro.com>)

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

3.3V, 12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Preboot eXecution Environment (PXE) support

Direct Cache Access (DCA) to avoid cache misses

IPv6 offloading

VMDq, Next-generation VMDq (64 queues per port) and PC-SIG SR-IOV implementation

#### Transceivers and cables

FC EKC0: 3 M 10 Gb SFP+ SR Cable Fiber Active Optical Cable (AOC)

FC EKC1: 3 M 10 Gb SFP+ Copper Passive

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).

## Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP (FC EKA3)

Learn about the specifications and operating system requirements for feature code (FC) EKA3 adapters.

### Overview

The Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP is a PCI Express (PCIe) generation 2 (Gen2) x4 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter offers a high-performing PCIe 10/100/1000 Ethernet connection. It also improves flexibility and performance in a virtualized environment in multi-core systems by lowering interrupt overhead and providing sorted multiple data queue paths.

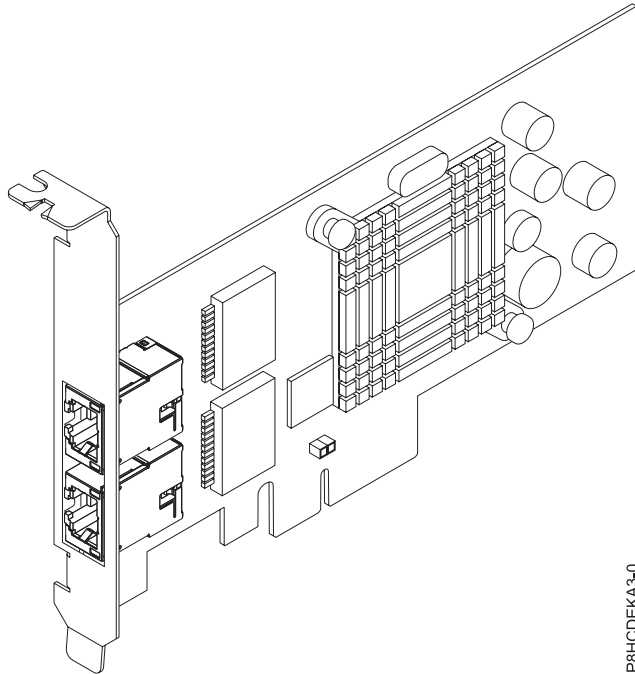


Figure 28. Intel 82575EB dual-port Gigabit Ethernet Controller PCIe x4.0 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-SG-I2 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe2 x4

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Preboot eXecution Environment (PXE) support

Intel I/O Acceleration Technology (I/O AT)

Direct Cache Access (DCA)

Low-latency interrupts

#### Cables

Supported cable length is more than 100 meters

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

### **Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables (FC EKAA and EKEA)**

Learn about the specifications and operating system requirements for feature code (FC) EKAA and EKEA adapters.

#### **Overview**

FC EKAA and EKEA are both the same adapter with different feature codes. FC EKAE is only supported on 8001-12C and does not include cables. FC EKEA, alternatively, is only supported on 8001-22C and includes cables.

The Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter features 8 internal SAS connectors for high-performance storage connectivity. This Redundant Array of Independent Disks (RAID) adapter is built on the LSI Logic SAS IC and MegaRAID technology. It also supports high capacity storage applications using high-performance RAID architecture, including hardware RAID 5 and 6.

**Important:** The Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables must be configured with a RAID partition or JBOD (Just a Bunch of Disks) mode.

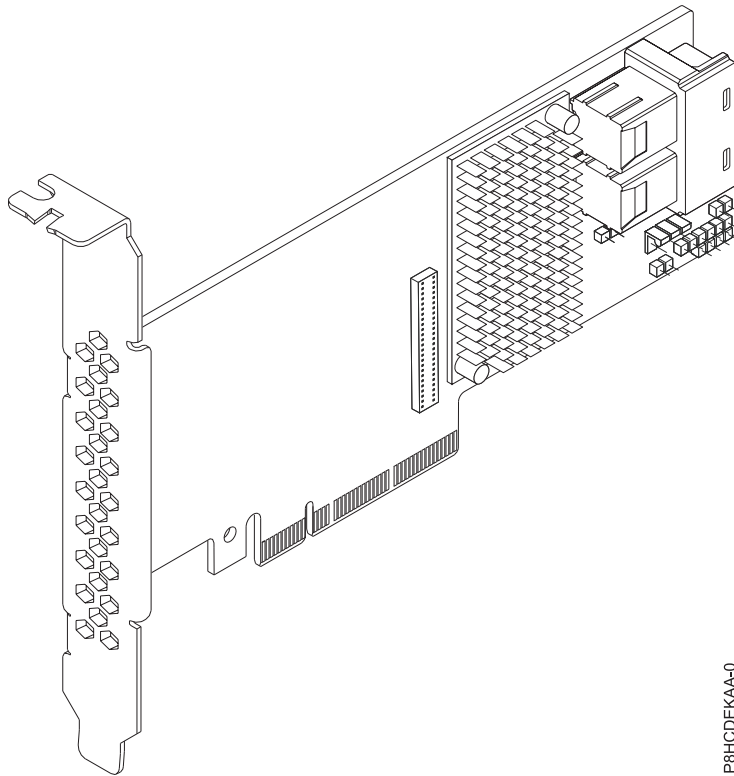


Figure 29. Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 Internal Ports (1 GB Cache) PCIe3.0 x8 LP with cables

## Specifications

### Item Description

#### Adapter FRU number

FC ECAA: AOC-K-9361-8IS-IB001 (Designed to comply with RoHS requirement)

FC EKEA: AOC-K-9361-8IB-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Port independent auto-negotiation

Automatically negotiates PCIe link widths

Supports 1.5, 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates

Advanced array configuration and management utilities

## Cables

Attach any necessary cables to the add-on card.

## Set JBOD mode on the adapter

Before you set up the adapter in JBOD mode, download the LSI Storage Command Line Tool (storcli64) RAID utility from Fix Central.

To set up the adapter in JBOD mode, complete the following steps:

1. Boot the system to the Petitboot main menu.
2. Copy the storcli64 RAID utility to Petitboot by using mount from the shell:

```
-t nfs -n -o noexec <LCB IP>:<path to storcli64> /mnt
```

3. Set the adapter up in JBOD mode.
4. Show the controller summary:

```
storcli64 /c0 show
```

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website(<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).

## SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables (FC EKAB and EKEB)

Learn about the specifications and operating system requirements for feature code (FC) EKAB and EKEB adapters.

### Overview

FC EKAB and EKEB are both the same adapter with different feature codes. FC EKAB is only supported on 8001-12C and does not include cables. FC EKEB, alternatively, is only supported on 8001-22C and includes cables.

The SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be placed in either a x8 or x16 PCIe slot in the system. The 12 Gb/s 8-Port SAS Internal RAID Adapter features 8 internal SAS connectors for high-performance storage connectivity.

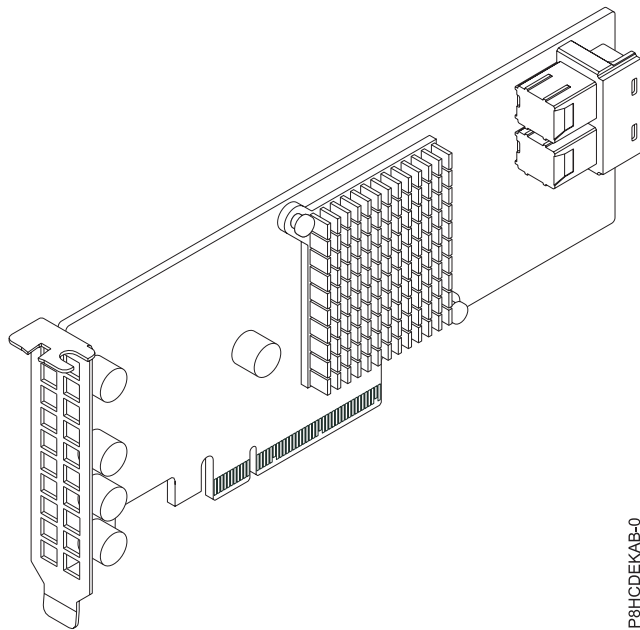


Figure 30. SMC AOC-K-S3008L-L8i 12 Gbps SAS3/RAID 0,1 and 10 PCIe3.0 x8 LP with cables

## Specifications

### Item Description

#### Adapter FRU number

FC EKAB: AOC-K-S3008L-L8iS-IB001 (Designed to comply with RoHS requirement)

FC EKEB: AOC-K-S3008L-L8iB-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Port independent auto-negotiation

Supports MegaRAID Storage Manager software

Supports 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates

Supports SSP, SMP, STP and SATA protocols

#### Cables

Attach any necessary cables to the add-on card

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Broadcom (LSI) 9300-8E SAS3 HBA PCIe3.0 x8 LP Adapter (FC EKAD and EKED)

Learn about the specifications and operating system requirements for feature code (FC) EKAD and EKED adapters.

### Overview

The Broadcom (LSI) 9300-8E SAS3 HBA PCIe3.0 x8 LP Adapter is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter has two external mini-SAS high-density (HD) x4 connectors for high-performance storage connectivity.



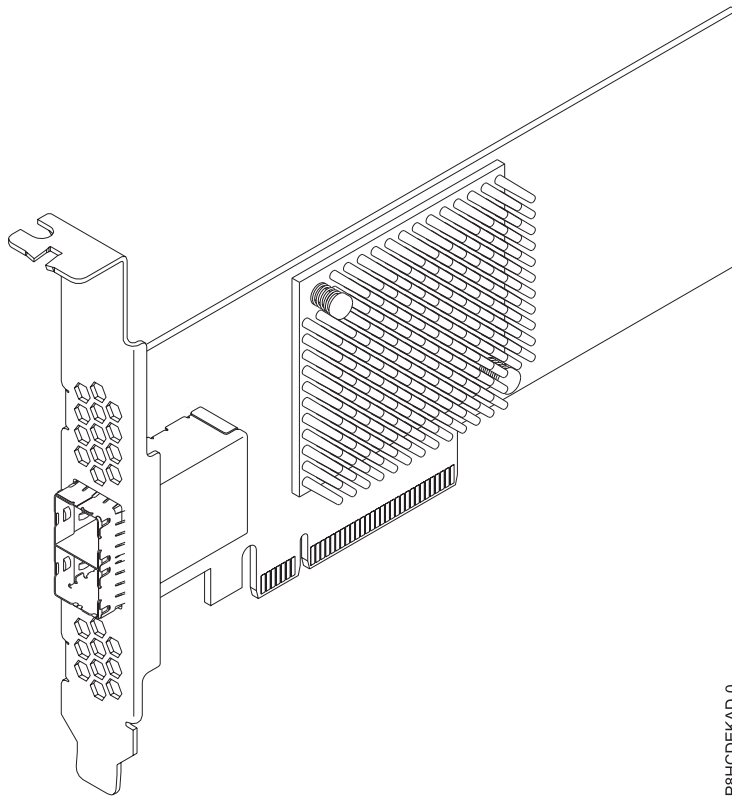


Figure 31. Broadcom (LSI) 9300-8E SAS3 HBA PCIe3.0 x8 LP Adapter

## Specifications

### Item Description

#### Adapter FRU number

AOC-SAS3-9300-8E (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

3.3V, 12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Port independent auto-negotiation

Supports 122 devices (HBA only)

Power management support

Supports 3.0 Gb/s, 6.0 Gb/s and 12 Gb/s SAS and SATA data transfer rates

## Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website(<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).


## PCIe3 x8 Dual-port Internal NVMe Host Bus Adapter (FC EKAE and EKEE)

Learn about the specifications and operating system requirements for feature code (FC) EKAE and EKEE adapters.

### Overview

FC EKAE and EKEE are both the same adapter with different feature codes. FC EKAE is only supported on 8001-12C and does not include cables. FC EKEE, alternatively, is only supported on 8001-22C and includes cables.

The PCIe3 x8 Dual-port Internal NVMe Host Bus Adapter is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter features two internal NVMe connectors (SFF 8643) for high-performance storage connectivity. This HBA card is built on the PLX PE8718 PCIe switch IC technology and proven NVMe technology.

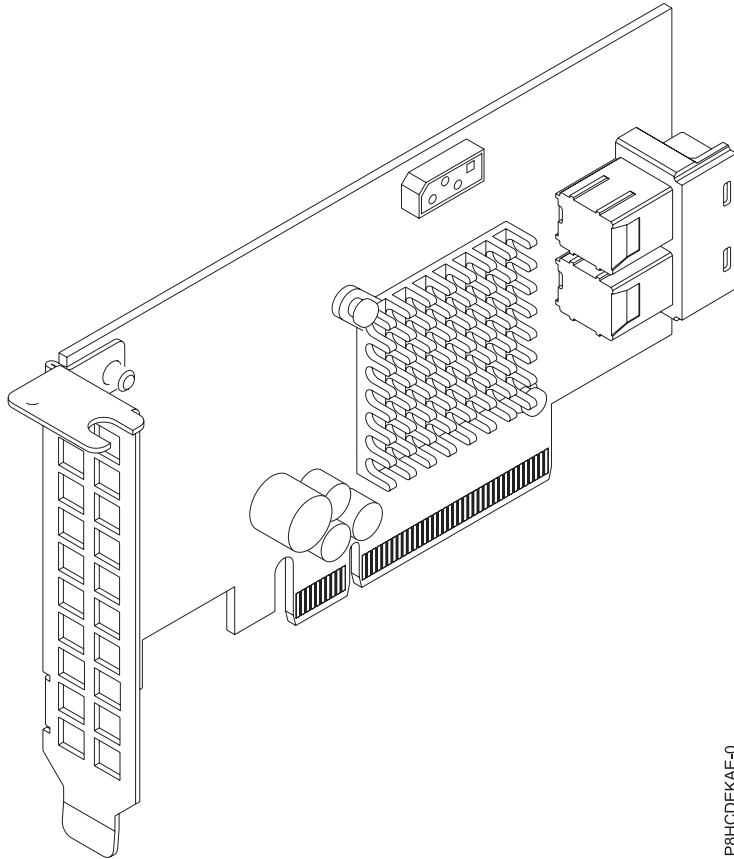

P8HCDEKAE-0

Figure 32. PCIe3 x8 Dual-port Internal NVMe Host Bus Adapter

## Specifications

### Item Description

#### Adapter FRU number

FC EKA: AOC-K-SLG3-2E4S-IB001 (Designed to comply with RoHS requirement)

FC EKE: AOC-K-SLG3-2E4B-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

#### Voltage

3.3 V, 12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Four internal lanes per port and 32 Gb/s per port (PCIe3 speed)

Supports two physical NVMe devices

Pure host bus adapter (HBA)

## Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website(<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).

## Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP (FC EKAF)

Learn about the specifications and operating system requirements for feature code (FC) EKAF adapters.

### Overview

The Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter features auto-negotiation, LDAP support and has a data transfer rate of 14.025 Gb/s.

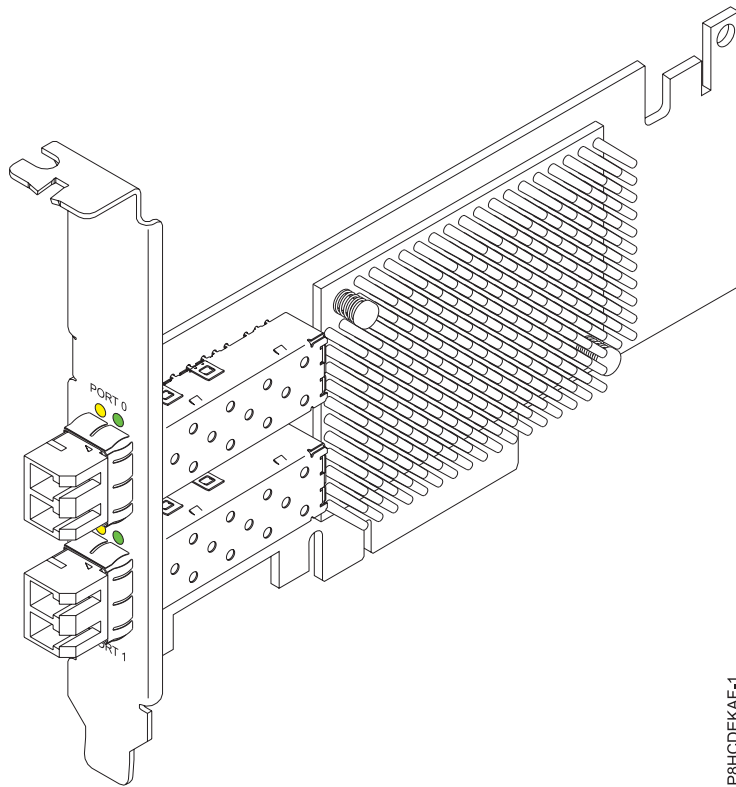


Figure 33. Emulex LPE16002B-M6-O Dual-port 16 Gb Fibre Channel Card PCIe3.0 x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-LPE16002B-M6-Of (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

3.3 V, 12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Auto-negotiation

LDAP support

Data transfer rate of 14.025 Gb/s

#### Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.3, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## SMC quad-port NVMe Host Bus Adapter (PEX9733) PCIe3.0 x8 LP with cables (FC EKAG and EKEG)

Learn about the specifications and operating system requirements for feature code (FC) EKAG and EKEG adapters.

### Overview

FC EKAG and EKEG are both the same adapter with different feature codes. FC EKAG is supported only on the 8001-12C and does not include cables. FC EKEG, alternatively, is supported only on the 8001-22C and includes cables.

The SMC quad-port NVMe Host Bus Adapter (PEX9733) PCIe3.0 x8 LP with cables is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter features four internal NVMe connectors for high-performance storage connectivity. This host bus adapter (HBA) card is built on the PLX PE8718 PCIe switch IC technology and proven NVMe technology.

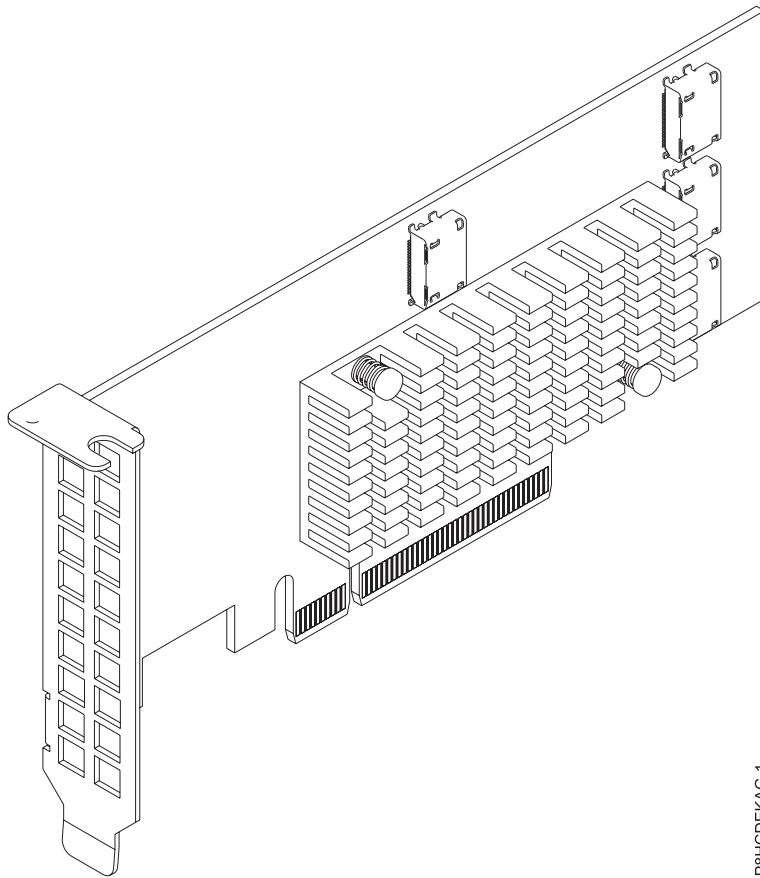


Figure 34. SMC quad-port NVMe Host Bus Adapter (PEX9733) PCIe3.0 x8 LP with cables

## Specifications

### Item Description

#### Adapter FRU number

FC EKAG: AOC-K-SLG3-4E2PS (Designed to comply with RoHS requirement)

FC EKEG: AOC-K-SLG3-4E2PB-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

3.3 V, 12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Supports four physical NVMe devices

Pure host bus adapter (HBA)

Supports 3.0 Gb/s, 6.0 Gb/s, and 12 Gb/s SAS and SATA data transfer rates

## Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.3, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 internal ports (2 GB Cache) PCIe3.0 x8 with cables (FC EKAH and EKEH)

Learn about the specifications and operating system requirements for feature code (FC) EKAH and EKEH adapters.

### Overview

FC EKAH and EKEH are both the same adapter with different feature codes. FC EKAH is only supported on 8001-12C and does not include cables. FC EKEH, alternatively, is only supported on 8001-22C and includes cables.

The Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 internal ports (2 GB Cache) PCIe3.0 x8 with cables is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter features 8 internal SAS connectors for high-performance storage connectivity. This Redundant Array of Independent Disks (RAID) adapter is built on the LSI Logic SAS IC and MegaRAID technology. It also supports high capacity storage applications using high-performance RAID architecture, including hardware RAID 5 and 6.

**Important:** RAID mode is the adapter default and needs to be configured by the customer before drives are shown to the OS for install. The adapter can be set up in JBOD (Just a Bunch of Disks) mode.



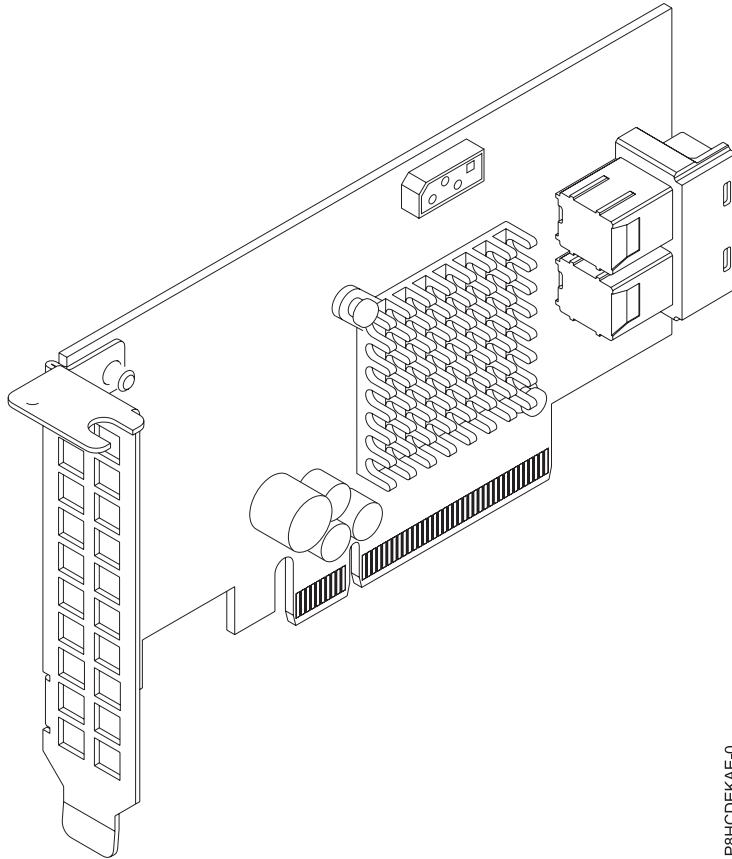


Figure 35. Broadcom (LSI) MegaRAID 9361-8i SAS3 Controller with 8 internal ports (2 GB Cache) PCIe3.0 x8 with cables

## Specifications

### Item Description

#### Adapter FRU number

FC EKAH: AOC-K-9361-8I2S-IB001 (Designed to comply with RoHS requirement)

FC EKEH: AOC-K-9361-8I2B-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8 processor-based systems

- 8001-12C and 8001-22C

#### Voltage

3.3 V, 12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Port independent auto-negotiation

Automatically negotiates PCIe link widths

Supports 1.5, 3.0, 6.0 and 12 Gb/s SAS and SATA data transfer rates

Advanced array configuration and management utilities

## Cables

Attach any necessary cables to the add-on card.

## SAS-3 Integrated RAID Configuration Utility (SAS3IRCU) User Guide

Before you set up the adapter in JBOD mode, you must have the SAS-3 Integrated RAID Configuration Utility (SAS3IRCU) installed. For more information about SAS3IRCU, see the SAS-3 Integrated RAID Configuration Utility (SAS3IRCU) User Guide.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).


- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## NVIDIA Tesla K80 24 GB GPU Accelerator (FC EKAJ)

Learn about the specifications and operating system requirements for the feature code (FC) EKAJ adapter.

### Overview

The NVIDIA Tesla K80 24 GB GPU Accelerator is a PCI Express (PCIe) generation 3 (Gen3) x16 adapter. The adapter has a double-wide, full-height form-factor and takes up two x16 PCIe slots in the system. The NVIDIA Tesla K80 24GB GPU Accelerator is designed for demanding computational tasks, combining 24 GB of memory with fast memory bandwidth and compute performance for single and double precision workloads. It is equipped with the latest NVIDIA GPU Boost technology and monitors GPU usage to maximize throughput and outperform CPUs by up to 10x.

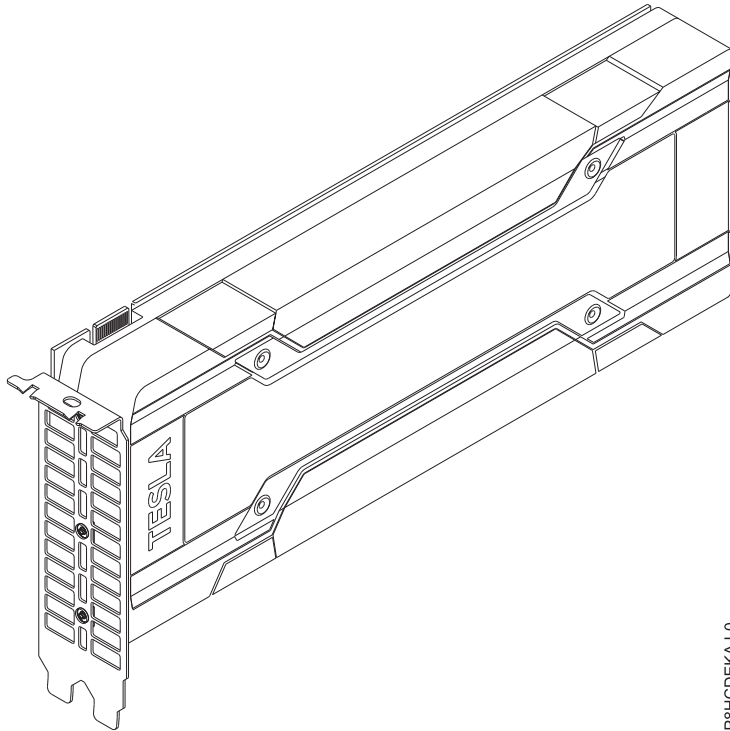

P8HCDEKAJ-0

Figure 36. NVIDIA Tesla K80 24 GB GPU Accelerator

## Specifications

### Item Description

#### Adapter FRU number

AOC-KIT-NVK80-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x16

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8 processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Double-wide, full-height

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes

Dynamic Parallelism

Error Correcting Codes (ECC) Memory

Kepler GPU Architecture

Hyper-Q

#### Cables

Attach any necessary cables to the add-on card

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).


- Linux
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Mellanox MCX456A-ECAT ConnectX-4 VPI EDR IB 100 Gb/s and 100 GbE Dual-port QSFP28 PCIe3.0 x16 LP (FC EKAL)

Learn about the specifications and operating system requirements for feature code (FC) EKAL adapters.

### Overview

The Mellanox MCX456A-ECAT ConnectX-4 VPI EDR IB 100 Gb/s and 100 GbE Dual-port QSFP28 PCIe3.0 x16 LP is a PCI Express (PCIe) generation 3 (Gen3) x16 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter supports EDR 100 Gb/s InfiniBand and 100 Gb/s Ethernet connectivity. It also provides flexible solutions for high-performance, Web 2.0, cloud, data analytics, database, and storage platforms.

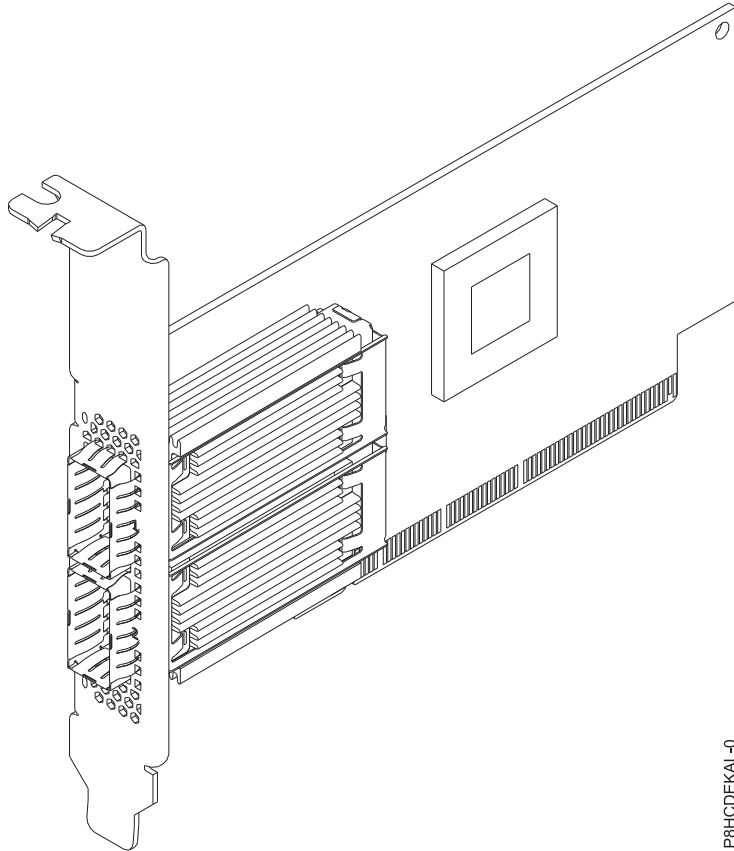

P8HCDEKAL-0

Figure 37. Mellanox MCX456A-ECAT ConnectX-4 VPI EDR IB 100 Gb/s and 100 GbE Dual-port QSFP28 PCIe3.0 x16 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-MCX456A-ECAT-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x16

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, with full-height tailstock

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

EDR 100 Gb/s InfiniBand or 100 Gb/s Ethernet per port

Supports 2 physical NVMe Devices

Single and dual-port options available

Hardware-based I/O virtualization

## Cables

Mellanox LinkX 10, 25, 40, 50 and 100Gb/s Direct Attach Copper cables (DACs), Copper Splitter cables, Active Optical Cables (AOCs) and Transceivers. For information regarding Mellanox LinkX cables and Transceivers, see LinkX™ InfiniBand Direct Attach Copper Cables(<http://www.mellanox.com/products/interconnect/infiniband-copper-cables.php>)

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website(<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).

## Mellanox MCX415A-CCAT ConnectX-4 EN 100 GbE Single-port QSFP28 PCIe3.0 x16 LP (FC EKAM)

Learn about the specifications and operating system requirements for feature code (FC) EKAM adapters.

## Overview

The Mellanox MCX415A-CCAT ConnectX-4 EN 100 GbE Single-port QSFP28 PCIe3.0 x16 LP is a PCI Express (PCIe) generation 3 (Gen3) x16 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter supports 100 Gb/s Ethernet per port and provides flexible solutions for high-performance, Web 2.0, cloud, data analytics, database, and storage platforms.

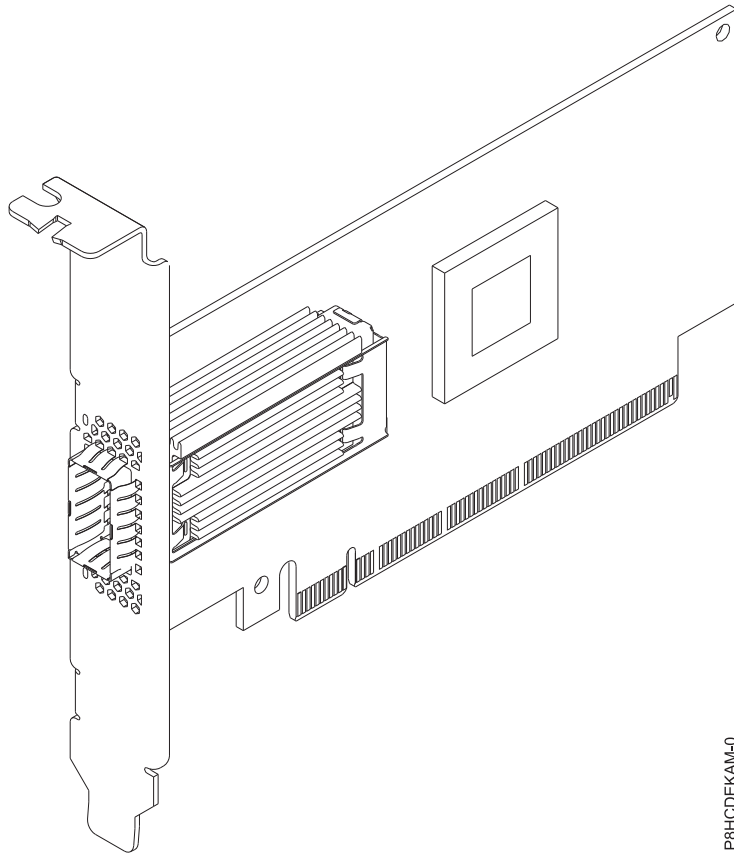


Figure 38. Mellanox MCX415A-CCAT ConnectX-4 EN 100 GbE Single-port QSFP28 PCIe3.0 x16 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-MCX415A-CCAT-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x16

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, with full-height tailstock

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

100 Gb/s Ethernet per port

Supports two physical NVMe devices

Single and dual-port options available

Hardware-based I/O virtualization

## Cables

Mellanox LinkX 10, 25, 40, 50 and 100 Gb/s Direct Attach Copper cables (DACs), Copper Splitter cables, Active Optical Cables (AOCs), and Transceivers. For information regarding Mellanox LinkX cables and Transceivers, see LinkX™ InfiniBand Direct Attach Copper Cables(<http://www.mellanox.com/products/interconnect/infiniband-copper-cables.php>)

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website(<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central(<http://www.ibm.com/support/fixcentral/>).

## Qlogic QLE2562 Dual-port 8 Gb Fibre Channel Adapter PCIe x8 LP (FC EKAP)

Learn about the specifications and operating system requirements for feature code (FC) EKAP adapters.

## Overview

The Qlogic QLE2562 Dual-port 8 Gb Fibre Channel Adapter PCIe x8 LP is a PCI Express (PCIe) generation 2 (Gen2) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter offers dual-channel performance, auto-negotiation and StarPower technology.



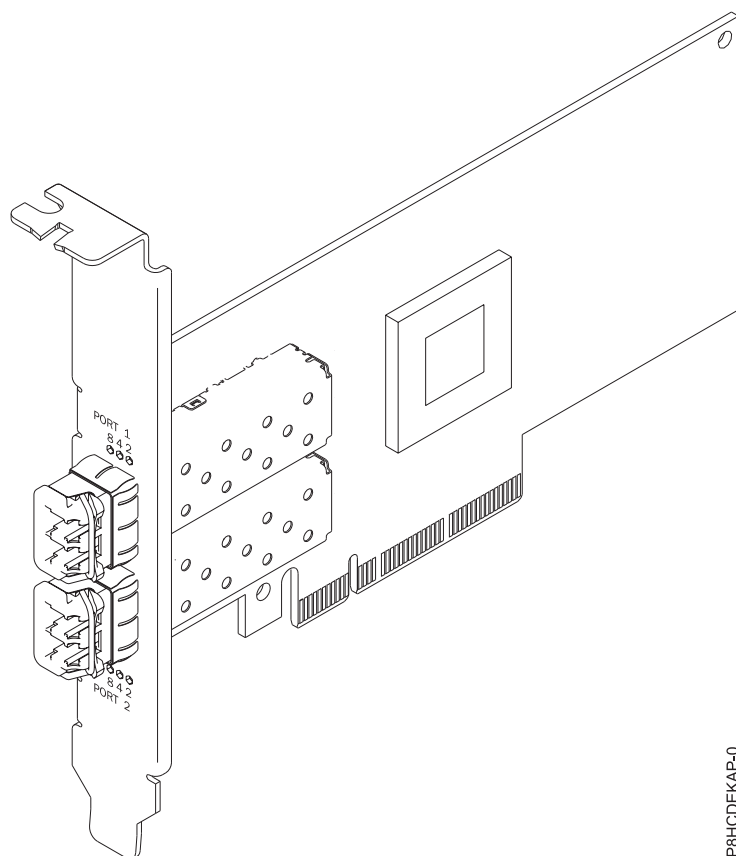


Figure 39. Qlogic QLE2562 Dual-port 8 Gb Fibre Channel Adapter PCIe x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-QLE2562 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe2 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

StarPower technology

Auto-negotiation

Quality of Service (QoS)

## Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Qlogic QLE2692OP Dual-port 16 Gb Fibre Channel Adapter PCIe3 x8 LP (FC EKAQ)

Learn about the specifications and operating system requirements for feature code (FC) EKAQ adapters.

### Overview

The Qlogic QLE2692OP Dual-port 16 Gb Fibre Channel Adapter PCIe3 x8 LP is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter provides advanced storage networking features capable of supporting demanding virtualized and private cloud environments. The Standard Low-profile QLogic 16 Gb Fibre Channel Card can also deliver up to 1.3 million IOPS (Input/Output Operations per Second) fuel high performance in all-flash arrays (AFAs) and high-density virtualized environments.

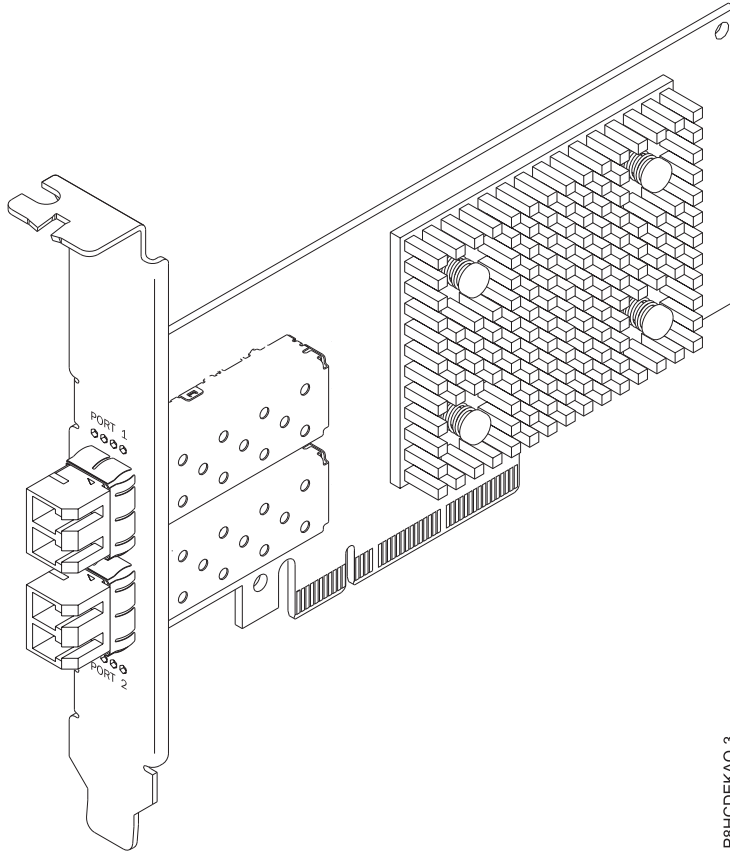


Figure 40. Qlogic QLE2692OP Dual-port 16 Gb Fibre Channel Adapter PCIe3 x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-QLE2692OP-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Up to 1.3 million IOPS fuel high performance in AFAs and high density virtualized environments

Enhanced reliability, diagnostics, and accelerated deployment powered by QLogic StarFusion technology

Port isolation design offers deterministic and scalable performance on each port

## Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).


- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Alpha-data CAPI Adapter: ADM-PCIe KU3 (FC EKAT)

Learn about the specifications and operating system requirements for feature code (FC) EKAT adapters.

### Overview

The Alpha-data CAPI Adapter: ADM-PCIe KU3 is a PCI Express (PCIe) generation 3 (Gen3) x16 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter features two independent channels of DDR3 memory capable of 1600 mega transfers per second (MT/s), SATA connections, and high-speed I/O through dual quad small form-factor pluggable (QSFP) ports. It supports up to 40G Ethernet or 4x10G Ethernet links and offers voltage, temperature, current control and monitoring.

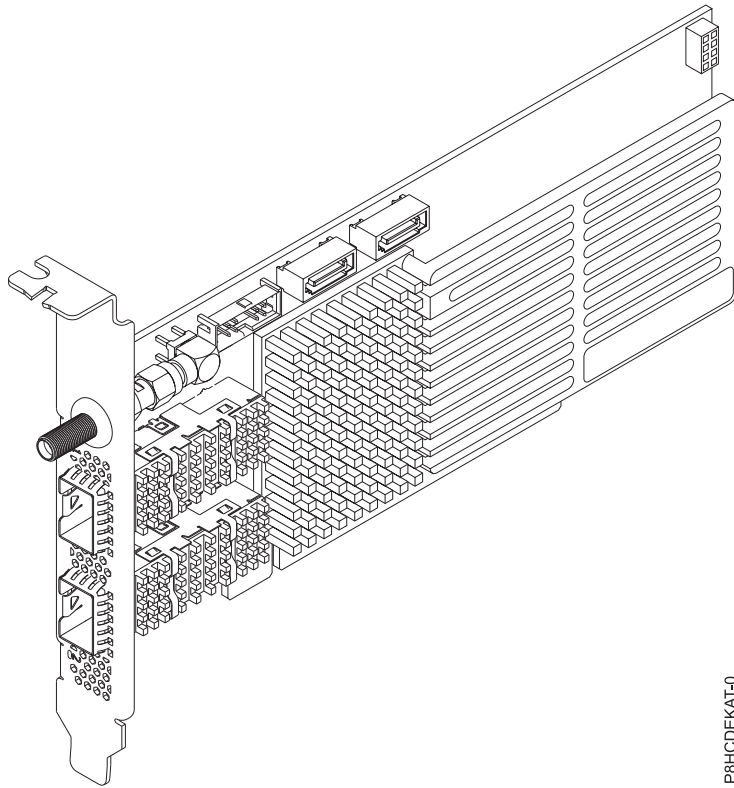

P8HCDEKAT-0

Figure 41. Alpha-data CAPI Adapter: ADM-PCIe KU3

## Specifications

### Item Description

#### Adapter FRU number

ADM-PCIE-KU3 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x16

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Dual QSFP cages for high-speed optical communication including 10 and 40 Gigabit Ethernet

Dual SATA Interfaces

1 GB of BPI x16 configuration flash

## Cables

Attach any necessary cables to the add-on card.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## References

Please note that the Alpha-data CAPI Adapter: ADM-PCIe KU3 (FC EKAT) is hardware only. The adapter development toolkit and services are available on the Alpha-Data<sup>®</sup> website. For more information, consult the following references:

- IBM<sup>®</sup> CAPI information:
  - POWER8<sup>®</sup> Coherent Accelerator Processor Interface (CAPI) (<http://www.ibm.biz/powercapi>)
- Alpha-Data<sup>®</sup> CAPI PCIe adapter information:
  - Coherent Accelerator Processor Interface (CAPI) for POWER8<sup>®</sup> (<http://www.alpha-data.com/dcp/capi.php>)
  - ADM-PCIE-KU3 Summary and Features (<http://www.alpha-data.com/dcp/products.php?product=adm-pcie-ku3>)

## Mellanox MCX4121A-ACAT ConnectX-4 Lx EN 25GbE dual-port SFP28 PCIe3.0 x8 LP (FC EKAU)

Learn about the specifications and operating system requirements for feature code (FC) EKAU adapters.

## Overview

The Mellanox MCX4121A-ACAT ConnectX-4 Lx EN 25GbE dual-port SFP28 PCIe3.0 x8 LP is a PCI Express (PCIe) generation 3 (Gen3) x8 adapter. The adapter can be used in either a x8 or x16 PCIe slot in the system. The adapter provides a combination of 1, 10, 25, 40, and 50 GbE bandwidth, sub-microsecond latency and a 75 million packets per second message rate. It includes native hardware support for remote direct memory access (RDMA) over converged Ethernet (RoCE), Ethernet stateless offload engines, overlay networks, and GPU Direct<sup>®</sup> Technology.

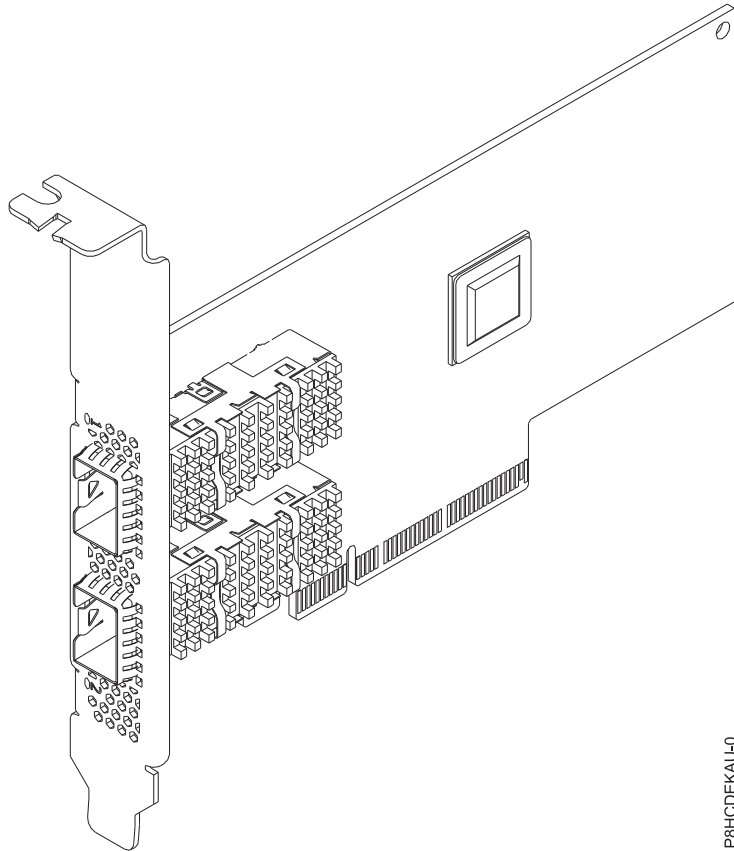


Figure 42. Mellanox MCX4121A-ACAT ConnectX-4 Lx EN 25GbE dual-port SFP28 PCIe3.0 x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-MCX4121A-ACAT-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, with full-height tailstock

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

Low latency RDMA over Converged Ethernet

Connectivity to up-to 4 independent hosts

Hardware-based I/O virtualization

## Cables

Mellanox LinkX 10 Gb/s, 25 Gb/s, 40 Gb/s, 50 Gb/s and 100 Gb/s Direct Attach Copper cables (DACs), Copper Splitter cables, Active Optical Cables (AOCs) and Transceivers. For information regarding Mellanox LinkX cables and Transceivers, see LinkX™ InfiniBand Direct Attach Copper Cables. (<http://www.mellanox.com/products/interconnect/infiniband-copper-cables.php>)

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme. (<https://ibm.biz/BdrgTZ>)

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of Mellanox OFED can be downloaded from Mellanox. (<http://www.mellanox.com>)

## NVIDIA Tesla P100 16GB PCIe3.0 x16 Dual-slot FHFL with cables (FC EKAZ)

Learn about the specifications and operating system requirements for the feature code (FC) EKAZ adapter.

### Overview

The NVIDIA Tesla P100 16GB PCIe3.0 x16 Dual-slot FHFL with cables is a PCI Express (PCIe) generation 3 (Gen3) x16 adapter. The adapter has a double-wide, full-height form-factor and takes up two x16 PCIe slots in the system. The NVIDIA Tesla P100 16 GB GPU Accelerator can deliver up to 18.7 teraflops (TFLOPS) of half-precision and is capable of 720 GB/s of memory bandwidth. The accelerator is ideal for high-performance-computing (HPC) and hyperscale workloads.



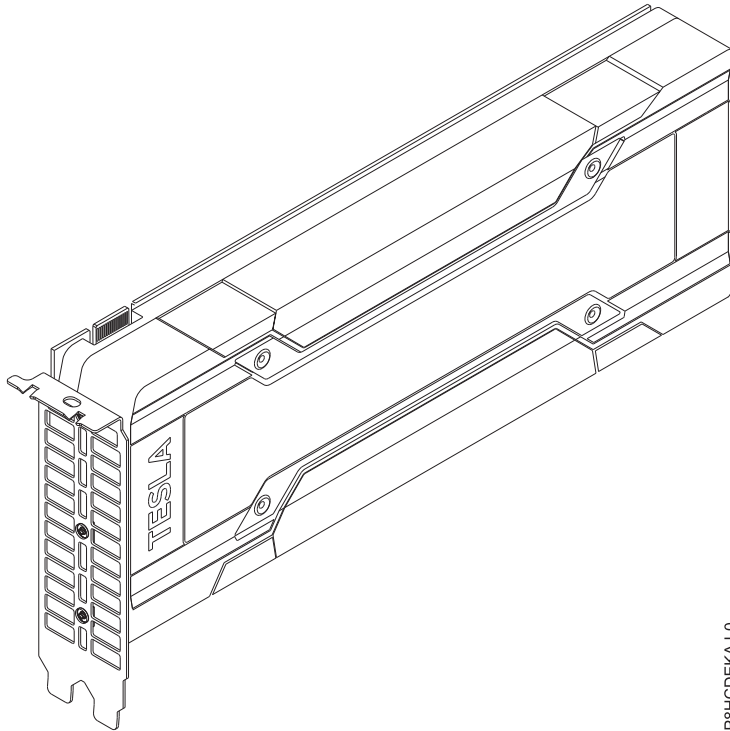


Figure 43. NVIDIA Tesla P100 16GB PCIe3.0 x16 Dual-slot FHFL with cables

## Specifications

### Item Description

#### Adapter FRU number

AOC-KIT-NVTP100-IB001 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x16

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

3.3 V, 12 V

#### Form factor

Double-wide, full-height

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes

Pascal Architecture

NVLink

Kepler GPU Architecture

Page Migration Engine

#### Cables

Attach any necessary cables to the add-on card

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.3, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Intel XL710 Ethernet Converged Network Adapter Quad-port 10G/1G SFP+ PCIe3.0 x8 LP (FC EKFH)

Learn about the specifications and operating system requirements for the feature code (FC) EKFH adapter.

### Overview

The Intel XL710 Ethernet Converged Network Adapter Quad-port 10G/1G SFP+ PCIe3.0 x8 LP is a PCI Express (PCIe) x8 adapter. The adapter can be used in either an x4, x8 or x16 PCIe slot in the system. The adapter expands virtualization beyond the server level to the network level and combines with hardware optimizations and offloads. It provides unmatched features for virtualization, flexibility for LAN and SAN networks, and reliable performance.

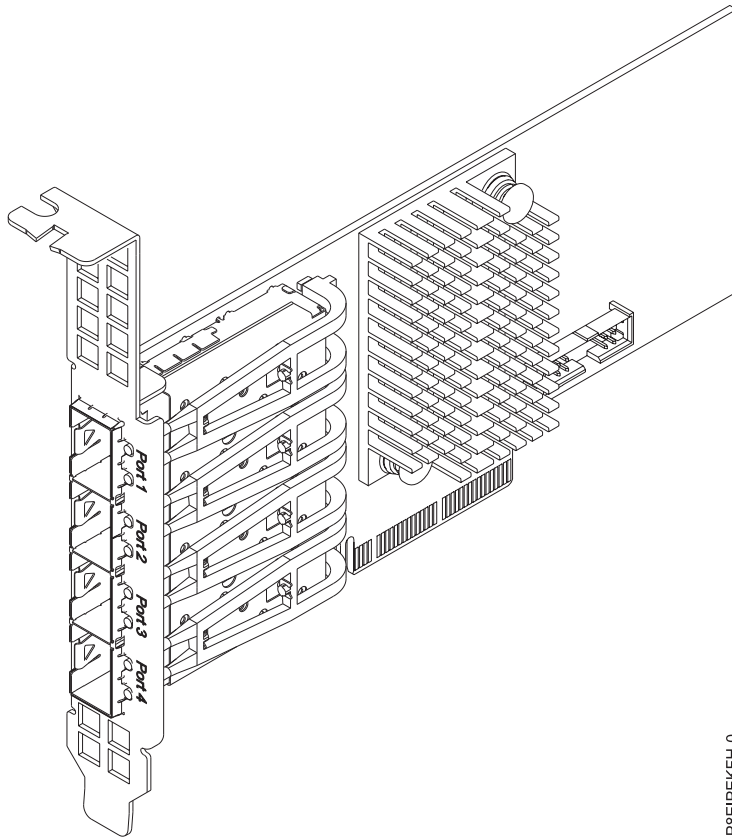


Figure 44. Intel XL710 Ethernet Converged Network Adapter Quad-port 10G/1G SFP+ PCIe3.0 x8 LP

## Specifications

### Item Description

#### Adapter FRU number

AOC-STG-I4S (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe x8

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8 processor-based systems

#### Voltage

3.3 V, 12 V

#### Form factor

Short, low-profile

#### Attributes provided

Quad SFP+ Connectors

Small Packet Performance

Network Virtualization Offloads including VXLAN and NVGRE

Unified networking providing a single with support

#### Transceivers and cables

Supported cable length is more than 100 M

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for operating system and partition requirements, see one of the following links:

- The latest version of enabling libraries and utilities may be downloaded from Fix Central. (<http://www.ibm.com/support/fixcentral/>)
- IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf))
- IBM SSIC (System Storage Interoperation Center) (<http://www-03.ibm.com/systems/support/storage/ssic/interoperability.wss>)
- The latest version of the device driver or `iprutils` can be downloaded from the IBM Service and Productivity Tools website. (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>)
- For support details, see the Linux Alert website. ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html))

## PCIe3 1.6 TB NVMe Flash Adapter (FC EKN2)

Learn about the specifications and operating system requirements for feature code (FC) EKN2 adapters.

### Overview

See FC EKN3 for an adapter with more capacity.

The PCIe3 1.6 TB NVMe Flash Adapter is a PCI Express (PCIe) generation 3 (Gen3) x4 adapter. The adapter can be used in either a x8 or x16 PCIe (Gen3) slot in the system and uses Non-Volatile Memory Express (NVMe). NVMe is a high performance software interface that can read/write flash memory. Compared to a SAS or SATA SSD, the NVMe Flash adapter provides more read/write input/output operations per second (IOPS) and larger throughput (GB/sec). The NVMe Flash Adapter is read intensive and is not designed for high write intensive workloads. At about 8,760 to 17,000 TB of writes to the adapter, it will be at its maximum projected write capability. The nature of the workload has a great impact on the maximum write capacity. If a high percentage of more sequentially oriented writes is used instead of random writes, the maximum write capacity will be closer to the larger value in the range. In the case of a high percentage of random writes, the maximum will be closer to the smaller value in the range. Writes past the adapter's maximum write capacity will continue to work for some period of time, but much more slowly. A Predictive Failure Analysis message will indicate that it is time to replace the adapter if enabled by the system administrator. After the warranty period, if the maximum write capability is achieved, the adapter's replacement is not covered under IBM maintenance. This adapter has protection against single Flash channel failures. To prevent the entire adapter from failing, software RAID should be used. For high value applications where the content in the adapter must be protected, additional NVMe Flash adapters with OS mirroring or software Redundant Array of Independent Disks (RAID) are recommended. This adapter is not supported in the PCIe Gen3 I/O drawer.

**Important:** Before removing a NVMe Flash adapter, ensure that all data on the adapter or the array that contains the adapter is backed up. Restore the data after the adapter is replaced.

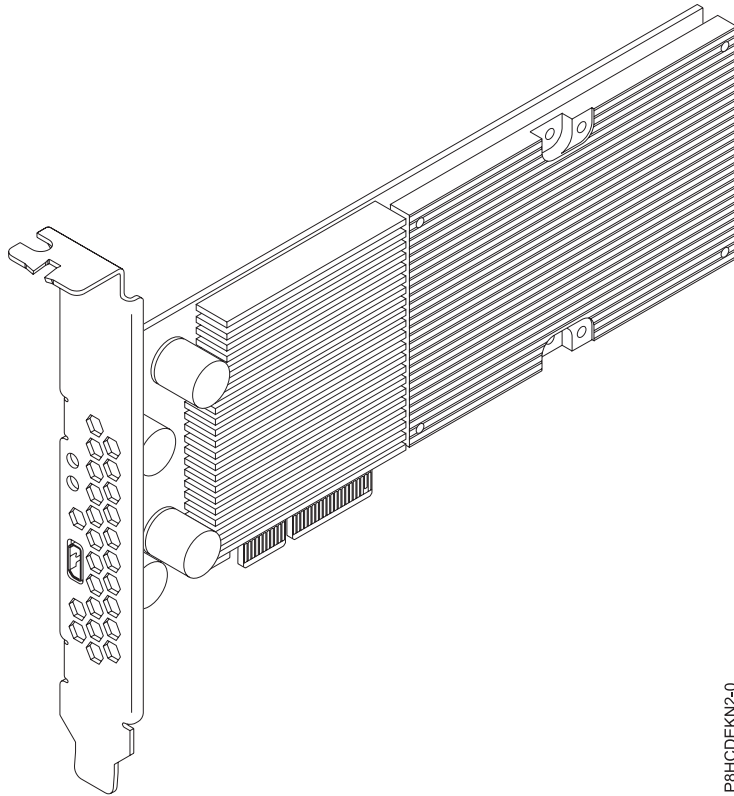


Figure 45. PCIe3 1.6 TB NVMe Flash Adapter

**Important:** The micro USB connector visible through the adapter tailstock has no function and cannot be used. Do not insert a cable of any kind into this port.

## Specifications

### Item Description

#### Adapter FRU number

HDS-AVM-HUSPR3216AHP301 (Designed to comply with RoHS requirement)

#### I/O bus architecture

PCIe3 x4

#### Slot requirement

For details about slot priorities and placement rules, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Supported Systems

POWER8<sup>®</sup> processor-based systems

- 8001-12C and 8001-22C

#### Voltage

12 V

#### Form factor

Short, low-profile

#### Maximum number

For details about the maximum number of adapters that are supported, see PCIe adapter placement rules and slot priorities ([http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab\\_mtm\\_pciplacement.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8eab/p8eab_mtm_pciplacement.htm)) and select the system you are working on.

#### Attributes provided

1.6 TB of low latency flash memory

Non-Volatile write buffer

Hot plug capable

## NVMe Flash adapter maximum write capability

Determine whether the NVMe Flash adapter maximum write capability is depleted by completing the following steps:

1. Type the following command at the Linux command line and press Enter: **nvme smart-log /dev/nvmeX**, where nvmeX is the resource name of the NVMe Flash adapter.
2. If the critical\_warning field is 1 (bit 0 is set) and the percentage\_used field is 90% or greater, replace the NVMe Flash adapter.

**Note:** The replacement of depleted NVMe Flash adapters is covered during the system warranty period. After the warranty period has expired, the cost that is incurred for the replacement of depleted NVMe Flash adapters is not covered under maintenance contracts, and is the responsibility of the customer.

## Service tools for Linux on Power servers

To obtain the utility to update firmware, format storage, and complete other service tasks, complete the following steps:

1. Go to Service and productivity tools and follow the instructions to download service tools.
2. Install the NVMe management command line interface (CLI).
  - For Red Hat Enterprise Linux (RHEL), type **yum install nvme-cli**.
  - For SUSE Linux Enterprise Server (SLES), type **zypper install nvme-cli**.
3. For more information about using the NVMe CLI, see the README file.

## Operating system or partition requirements

If you are installing a new feature, ensure that you have the software that is required to support the new feature and that you determine whether any prerequisites must be met for this feature and attaching devices. To check for the prerequisites, see IBM Prerequisite website ([www-912.ibm.com/e\\_dir/eServerPrereq.nsf](http://www-912.ibm.com/e_dir/eServerPrereq.nsf)).

The adapter is supported on the following versions of the operating systems:

**Important:** For a list of known Linux OS issues that may affect this adapter, see the IBM Power LC readme (<https://ibm.biz/BdrgTZ>).

- Linux
  - Red Hat Enterprise Linux 7.2, little-endian, for Power, or later
  - Ubuntu 16.04.1, or later
  - Ubuntu 14.04.5, or later
  - For support details, see the Linux Alert website ([www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html](http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/info/LinuxAlerts.html)).
  - The latest version of the device driver or iprutils can be downloaded from the IBM Service and Productivity Tools website (<http://www14.software.ibm.com/webapp/set2/sas/f/lopdiags/home.html>).
  - The latest version of enabling libraries and utilities may be downloaded from Fix Central (<http://www.ibm.com/support/fixcentral/>).

## Installing a PCIe adapter in the 8001-22C system

Complete the steps in this procedure to install a PCIe adapter in the IBM Power System S822LC for Big Data (8001-22C) system.

## Before you begin

Power off the system and place it in the service position. For instructions, see “Preparing the 8001-22C or 8005-22N system to remove and replace internal parts” on page 92.

## Procedure

1. Attach the electrostatic discharge (ESD) wrist strap.

### Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
2. An adapter can share a PCIe riser card with other adapters. Label and remove any cables and plugs that extend out of the adapters. See Figure 46.


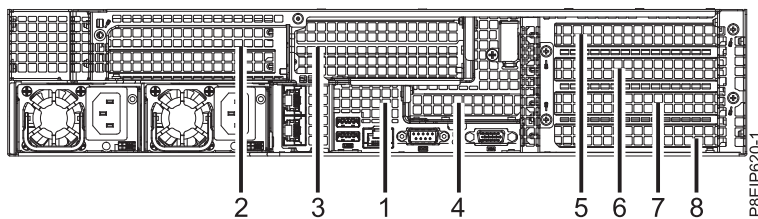


Figure 46. 8001-22C PCIe adapter positions

Position	Step
3 (UIO Slot2) 2 (UIO Slot1) is reserved for a SAS super capacitor carrier. Position 2 is not a functional PCIe adapter location.	3
4 (PLX Slot1)	4 on page 82
5, 6, 7, 8 (WIO Slot1, WIO Slot2, WIO Slot3)	5 on page 84

3. To install a PCIe adapter in position 3 (or a SAS super capacitor carrier in position 2), remove the PCIe riser as shown in Figure 47 on page 80.

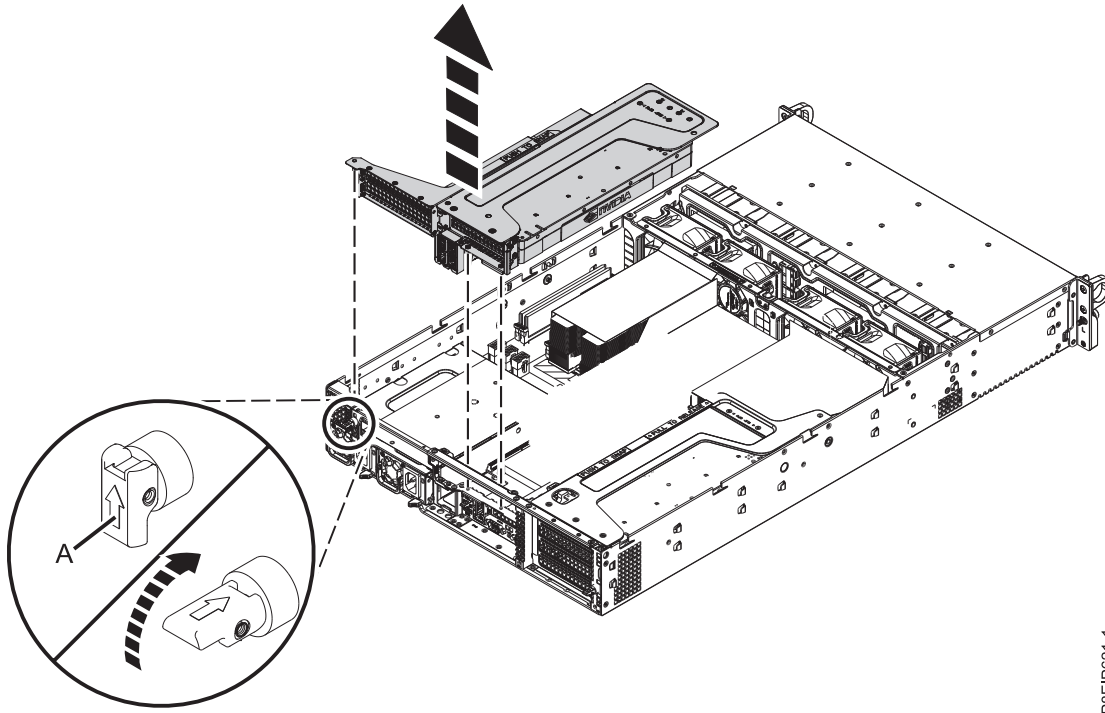

PS8EIP621-1

Figure 47. Removing the PCIe riser

- a. Retract the retaining pin **(A)** as shown in Figure 47.
- b. Lift the PCIe riser from the system.
- c. Place the PCIe riser upside down on an ESD surface.
- d. Remove the screw and the tail-stock filler for that position.
- e. If you are inserting a storage drive adapter, connect the signal cables to the adapter before inserting the adapter. See “Drive installation information for the 8001-22C system” on page 7 for cabling information.

NVMe drives are only supported on host operating systems; NVMe drives are not supported by guest operating systems. On systems with RHEL 7.3 or later, or Ubuntu 16.04 or later, NVMe drives can be used as bootable drives. Port 1 of the internal NVMe host bus adapter must be plugged into NVMe port 1 on the disk drive backplane.

- f. Insert the PCIe adapter **(A)** that is located in position 3 into the PCIe adapter riser **(B)** as shown in Figure 48 on page 81.



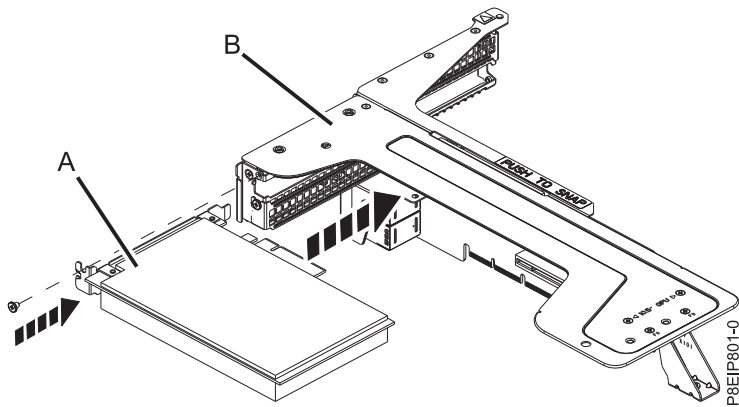


Figure 48. Inserting an adapter into position 3 of the PCIe riser

- g. Replace the screw to secure the tail-stock.
- h. If you have a SAS super capacitor carrier, insert that carrier (A) in position 2 of the PCIe adapter riser (B) as shown in Figure 49.


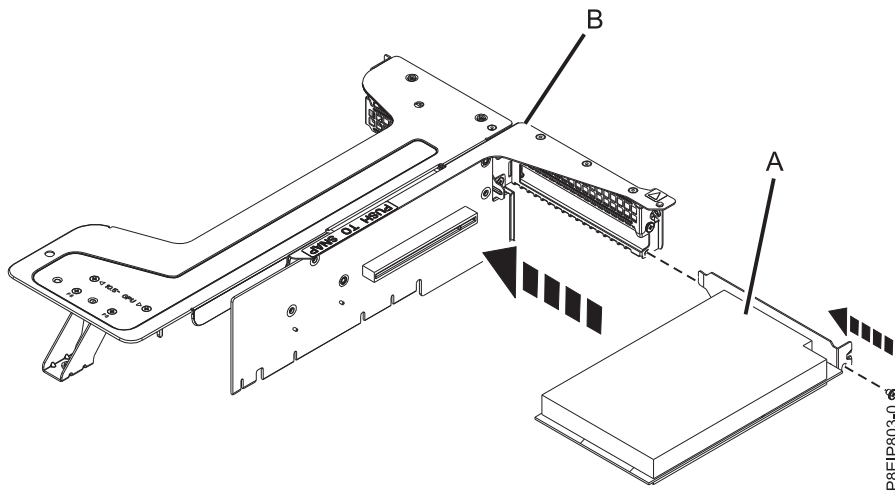


Figure 49. Inserting a SAS super capacitor carrier into position 2 of the riser

- i. Insert the PCIe riser into the chassis as shown in Figure 50 on page 82.
  - 1) Retract the retaining pin (B) so the arrow points to the system.
  - 2) Insert the riser, using the slots and alignment pins (A) to properly insert the riser. Push the riser firmly into the system backplane.
  - 3) Set the retaining pin (B) to secure the riser.

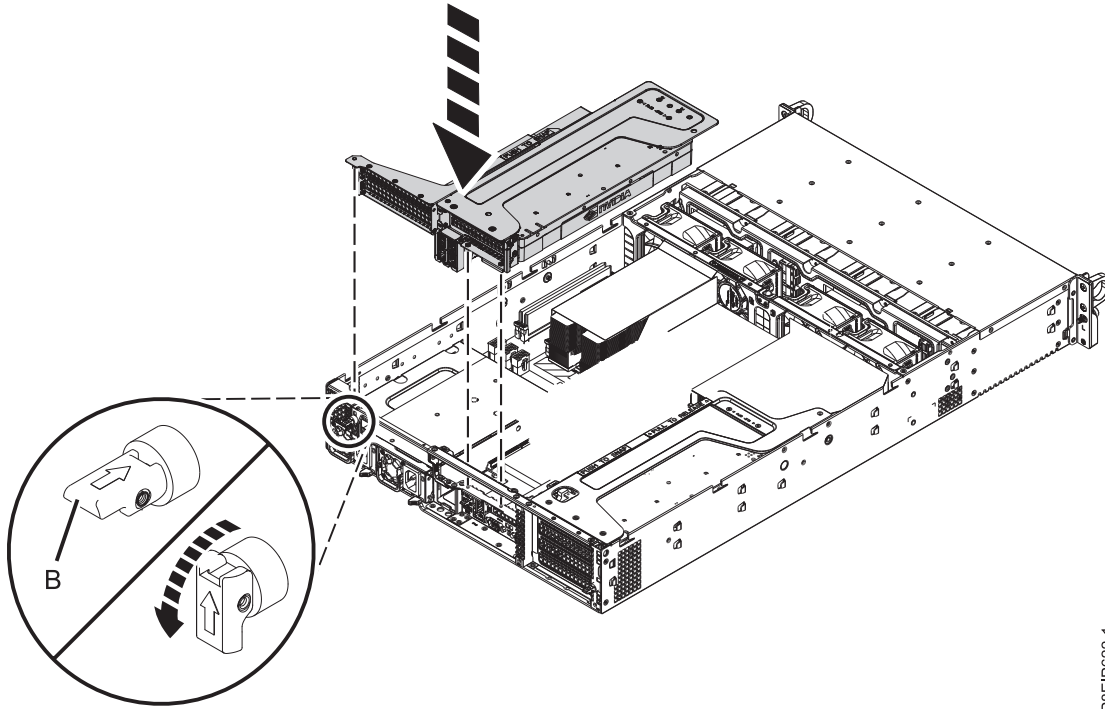

PS8EIP622-1

Figure 50. Inserting the position 1 and 3 riser

Go to step 6 on page 87.

4. To install an adapter in position 4, complete the following steps:
  - a. Retract the retaining pin and slide the retaining door open to release the tail-stock as shown in Figure 51 on page 83.


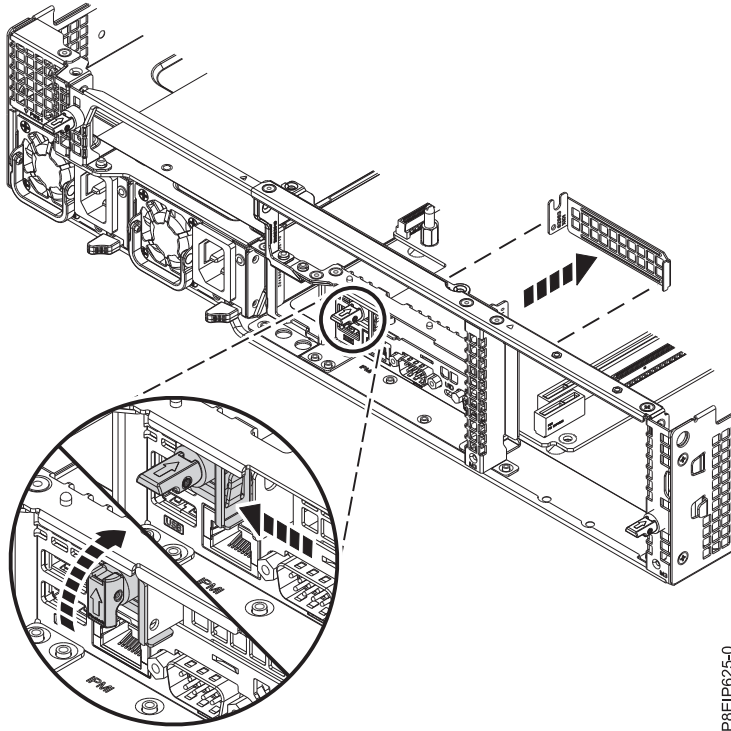


Figure 51. Releasing the tail-stock

- b. Remove the tail-stock filler.
- c. If you are inserting a storage drive adapter, connect the signal cables to the adapter before inserting the adapter. See “Drive installation information for the 8001-22C system” on page 7 for cabling information.

NVMe drives are only supported on host operating systems; NVMe drives are not supported by guest operating systems. On systems with RHEL 7.3 or later, or Ubuntu 16.04 or later, NVMe drives can be used as bootable drives. Port 1 of the internal NVMe host bus adapter must be plugged into NVMe port 1 on the disk drive backplane.

- d. Insert the adapter into the riser.
- e. Close the retaining door by sliding it against the tail stock as shown in Figure 52 on page 84, then reset the retaining pin.

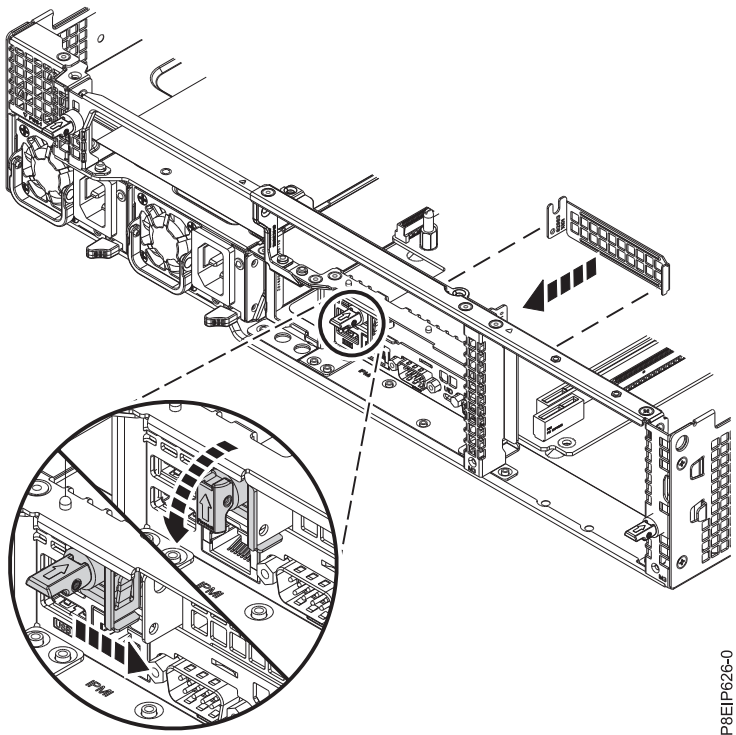


P8EIP626-0

Figure 52. Sliding the tail-stock retainer to the closed position

Go to step 6 on page 87.

5. To install an adapter in position 5, 6, 7, and 8, remove the riser as shown in Figure 53.

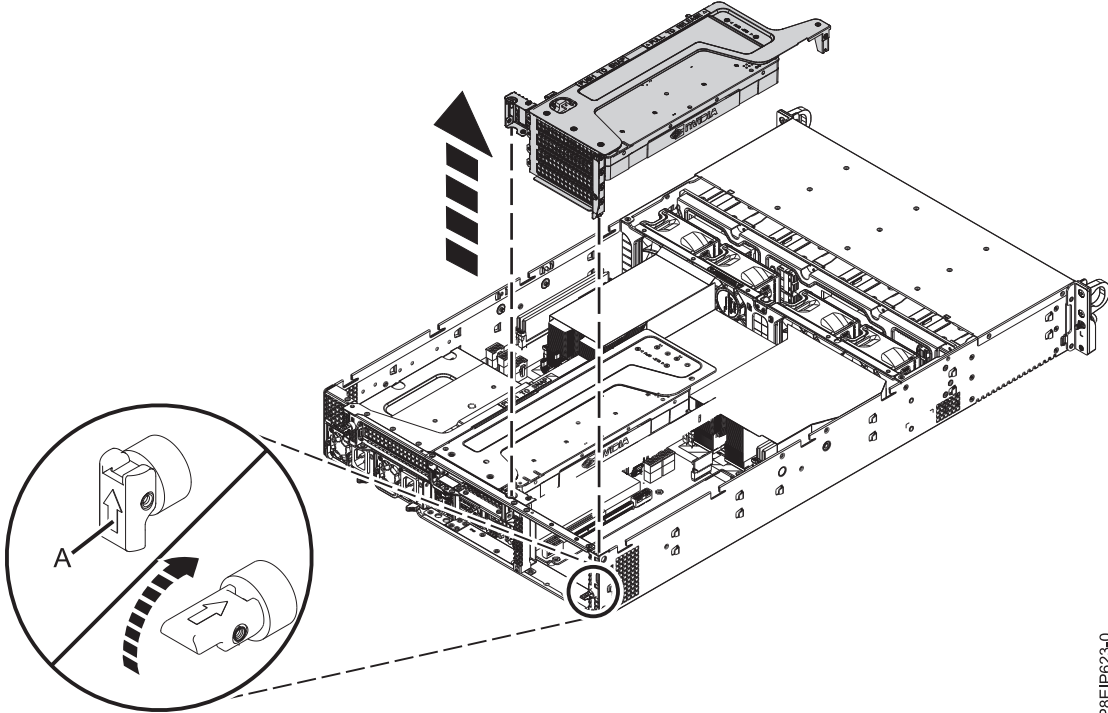


P8EIP623-0

Figure 53. Removing the PCIe riser

a. Retract the retaining pin (A) so the arrow is pointing to the system.

- b. Lift the PCIe riser from the system.
- c. If the riser contains a GPU, unplug the GPU power cable (A) from the system backplane as shown in Figure 54. Using your thumb, press the release latch on the connector to remove the cable.

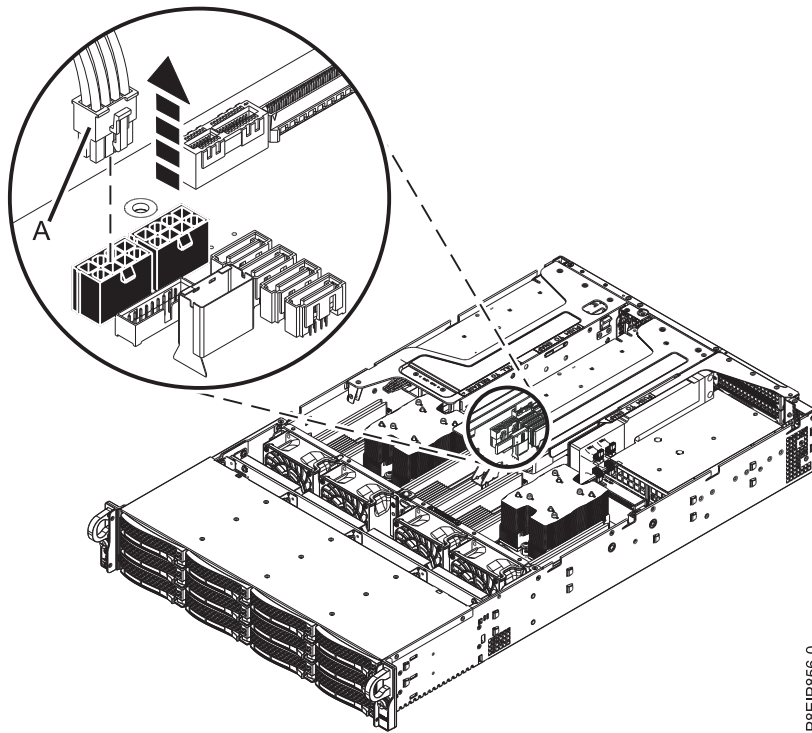

P8EIP856-0

Figure 54. Unplugging the GPU power cable

- d. Place the PCIe adapter riser on an ESD surface, with the PCIe adapter riser facing up.
- e. Remove the screw and the tail-stock filler for that position.
- f. If you are inserting a storage drive adapter, connect the signal cables to the adapter before inserting the adapter. See “Drive installation information for the 8001-22C system” on page 7 for cabling information.

NVMe drives are only supported on host operating systems; NVMe drives are not supported by guest operating systems. On systems with RHEL 7.3 or later, or Ubuntu 16.04 or later, NVMe drives can be used as bootable drives. Port 1 of the internal NVMe host bus adapter must be plugged into NVMe port 1 on the disk drive backplane.

- g. Plug the adapter (A) into the proper slot in the PCIe adapter riser (B) as shown in Figure 55 on page 86.

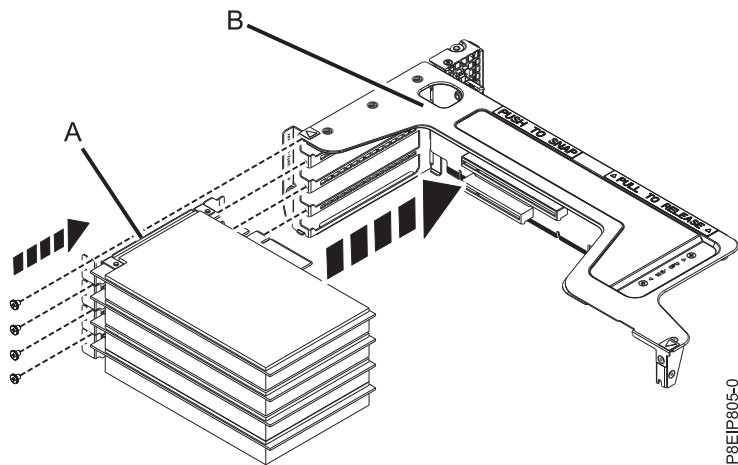


Figure 55. Inserting a PCIe adapter into the riser

- h. Replace the screw to secure the tail-stock.
- i. If position 5 contains a GPU, plug the GPU power cable (A) into the system backplane as shown in Figure 56.

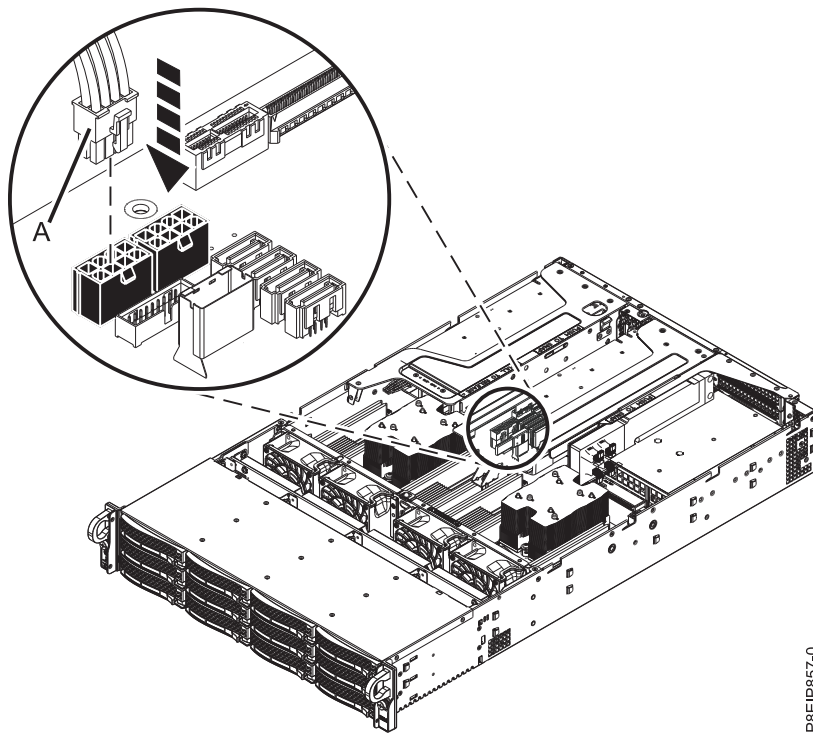


Figure 56. Plugging in the GPU power cable

- j. Insert the PCIe riser as shown in Figure 57 on page 87.
  - 1) Retract the retaining pin (B) so the arrow points to the system.
  - 2) Insert the riser, using the slots and alignment pins (A) to properly insert the riser. Push the riser firmly into the system backplane.
  - 3) Set the retaining pin (B) to secure the riser.

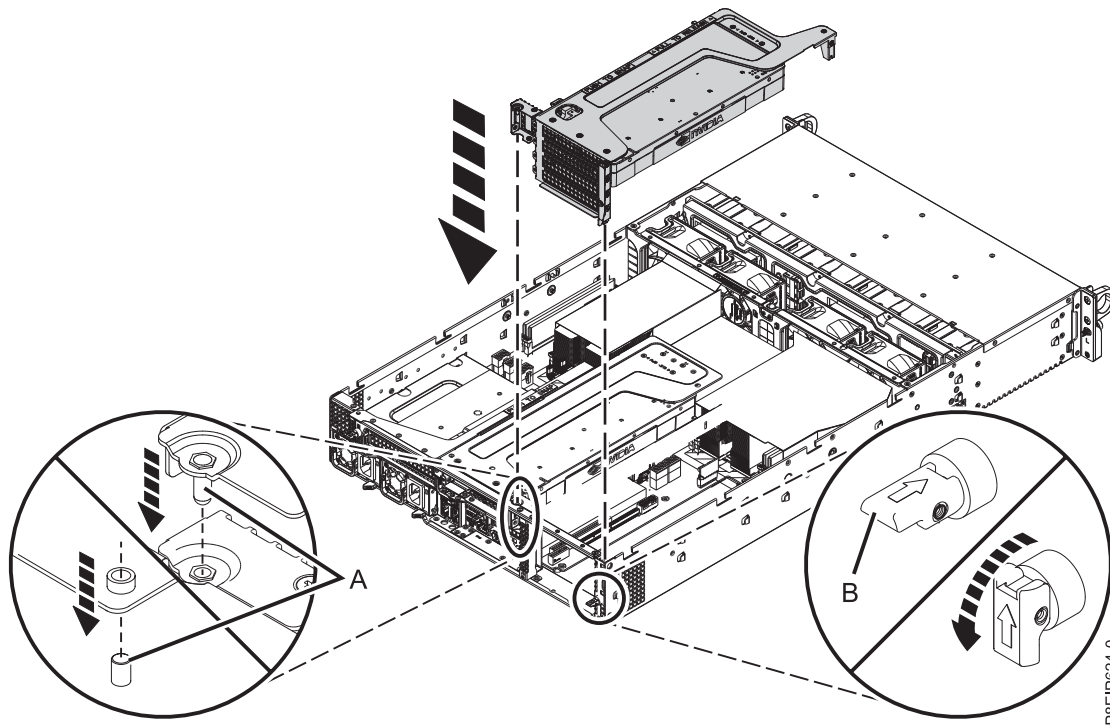


Figure 57. Inserting the PCIe adapter riser

6. The adapter is installed.

## Common procedures for servicing or installing features in the 8001-22C or 8005-22N

Learn about the common procedures related to installing, removing, and replacing features in the IBM Power System S822LC for Big Data (8001-22C) system.

### Before you begin

Observe these precautions when you are installing, removing, or replacing features and parts.

### About this task

These precautions are intended to create a safe environment to service your system and do not provide steps for servicing your system. The installation, removal, and replacement procedures provide the step-by-step processes that are required to service your system.

**DANGER:** When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- If IBM supplied the power cord(s), connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
  - For AC power, disconnect all power cords from their AC power source.

- For racks with a DC power distribution panel (PDP), disconnect the customer’s DC power source to the PDP.
- When connecting power to the product ensure all power cables are properly connected.
  - For racks with AC power, connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
  - For racks with a DC power distribution panel (PDP), connect the customer’s DC power source to the PDP. Ensure that the proper polarity is used when attaching the DC power and DC power return wiring.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Do not attempt to switch on power to the machine until all possible unsafe conditions are corrected.
- Assume that an electrical safety hazard is present. Perform all continuity, grounding, and power checks specified during the subsystem installation procedures to ensure that the machine meets safety requirements.
- Do not continue with the inspection if any unsafe conditions are present.
- Before you open the device covers, unless instructed otherwise in the installation and configuration procedures: Disconnect the attached AC power cords, turn off the applicable circuit breakers located in the rack power distribution panel (PDP), and disconnect any telecommunications systems, networks, and modems.

**DANGER:**

- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. For AC power, remove the power cords from the outlets.
3. For racks with a DC power distribution panel (PDP), turn off the circuit breakers located in the PDP and remove the power from the Customer's DC power source.
4. Remove the signal cables from the connectors.
5. Remove all cables from the devices.

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. For AC power, attach the power cords to the outlets.
5. For racks with a DC power distribution panel (PDP), restore the power from the Customer's DC power source and turn on the circuit breakers located in the PDP.
6. Turn on the devices.

Sharp edges, corners and joints may be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching. (D005)

**(R001 part 1 of 2):**

**DANGER:** Observe the following precautions when working on or around your IT rack system:

- Heavy equipment–personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.



- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices. In addition, do not lean on rack mounted devices and do not use them to stabilize your body position (for example, when working from a ladder).



- Each rack cabinet might have more than one power cord.
  - For AC powered racks, be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
  - For racks with a DC power distribution panel (PDP), turn off the circuit breaker that controls the power to the system unit(s), or disconnect the customer's DC power source, when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

**(R001 part 2 of 2):**

**CAUTION:**

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.



- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

**Procedure**

1. If you are installing a new feature, ensure that you have the software that is required to support the new feature. See IBM Prerequisite.

2. If you are installing or replacing something that might put your data at risk, ensure, wherever possible, that you have a current backup of your system or logical partition (including operating systems, licensed programs, and data).
3. Review the installation or replacement procedure for the feature or part.
4. Note the significance of color on your system.  
Blue or terra-cotta on a part of the hardware indicates a touch point where you can grip the hardware to remove it from or install it in the system, or open or close a latch. Terra-cotta might also indicate that the part can be removed and replaced with the system or logical partition powered on.
5. Ensure that you have access to a medium flat-blade screwdriver, a Phillips screwdriver, and a pair of scissors.
6. If parts are incorrect, missing, or visibly damaged, do the following steps:
  - If you are replacing a part, contact the provider of your parts or next level of support.
  - If you are installing a feature, contact one of the following service organizations:
    - The provider of your parts or next level of support.
    - In the United States, the IBM Rochester Manufacturing Automated Information Line (R-MAIL) at 1-800-300-8751.

In countries and regions outside of the United States, use the following website to locate your service and support telephone numbers:

<http://www.ibm.com/planetwide>

7. If you encounter difficulties during the installation, contact your service provider, your IBM reseller, or your next level of support.
8. For thermal performance, ensure that the top cover is on when the system is running.
9. If you are installing new hardware in a logical partition, you need to understand and plan for the implications of partitioning your system. For information, see Logical Partitioning.

## Identifying the system that contains the part to replace

Learn how to determine which system has the part you want to replace.

### LEDs on the 8001-22C or 8005-22N system

Use this information as a guide to the LEDs on the IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system.

The LEDs indicate various system status. If the part does not have a problem indicator LED, you can use a troubleshooting program such as **impitool** to identify the issue.

The front LEDs are shown in Figure 58 on page 91.

- The green LED (6) indicates the power status.
- The identify LED (2) can indicate the following states:
  - Flashing blue indicates that a remote UID command was run.
  - Solid red indicates that the system is overheated.
  - Flashing red at 1 Hz indicates that a fan failed.
  - Flashing red at 0.25 Hz indicates that a power supply failed.
- The amber LED (5) flashes when there is SATA drive activity, for SATA drives directly attached to the system backplane.
- The network activity LEDs (3) and (4) flash when there is network activity on the feature EKA8 four port network card.
- The red LED (8) indicates a power supply failed.

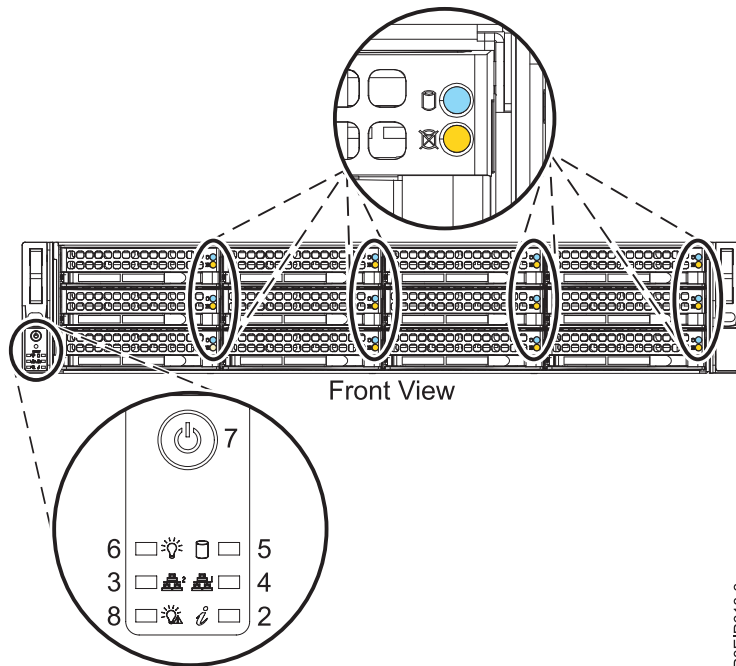


Figure 58. LEDs on the front of the system

LEDs are also on the rear of the system; see Figure 59.

The identify LED is at (2). Turn it on by using a system identify command.

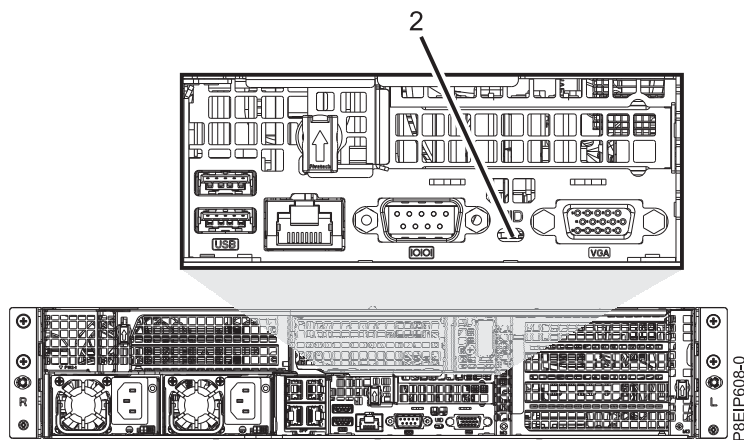


Figure 59. LEDs on the rear of the system

Drive LEDs can indicate the following states:

- Blue activity LED can indicate the following states:
  - When there is no activity, the LED is off for SATA drives; on for SAS drives.
  - Flashing blue indicates activity
- Red status LED can indicate the following states. The status LED does not work when SATA drives are directly attached to the system backplane.
  - Steady red indicates that the drive failed
  - Flashing red at 4 Hz identifies the drive
  - Flashing red at 1 Hz indicates that the drive is rebuilding

Power supply LEDs can indicate the following states:

- Steady green indicates that power is on
- Steady amber indicates that power is off, or a power fault occurred
- Flashing amber indicates that the power supply is overheating

## Identifying the 8001-12C, 8001-22C, 8005-12N, or 8005-22N that needs servicing

Use the Intelligent Platform Management Interface (IPMI) program to turn on the blue identify LED to help you find the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) system that needs servicing.

### Procedure

Use the `ipmitool` command to activate the blue system identify LED.

For in-band networks, enter the following chassis identify command:

```
ipmitool -I <interface> chassis identify <interval>
```

#### interface

The interface that you are using to connect to the system. For example, `usb`.

#### interval

The time to turn on the identify LED in seconds. The default value is 15. This means that the LED is on for 15 seconds and then turns off for 15 seconds. A value of zero (0) turns off the LED. A value of force turns on the LED and leaves it on until turned off.

To run the command remotely over the LAN, enter the following chassis identify command:

```
ipmitool -I lanplus -H <hostname> -U <username> -P <password> chassis identify <interval>
```

## Preparing the 8001-22C or 8005-22N system to remove and replace internal parts

Learn how to prepare the IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system to remove and replace internal parts.

### Procedure


1. Complete the prerequisite tasks. For instructions, see “Before you begin” on page 87.
2. Identify the part and the system that you will be working on. For instructions, see “Identifying the system that contains the part to replace” on page 90.
3. Attach the electrostatic discharge (ESD) wrist strap.

#### Attention:


- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
4. Stop the system. For instructions, see “Stopping the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 97.
  5. Disconnect the power source from the system by unplugging the system. For instructions, see “Disconnecting the power cords from an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 107.

**Note:** The system might be equipped with redundant power supply. Before you continue with this procedure, ensure that all power to your system is disconnected.

(L003)

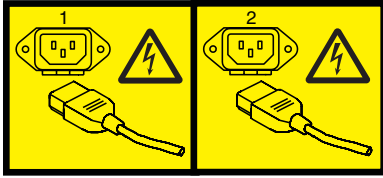


or

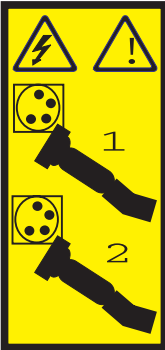


or



 or



or

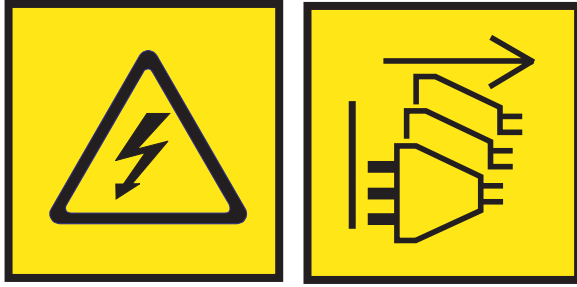

**DANGER:** Multiple power cords. The product might be equipped with multiple AC power cords or multiple DC power cables. To remove all hazardous voltages, disconnect all power cords and power cables. (L003)

(L005)



**CAUTION:** Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in splattered metal, burns, or both. (L005)

6. Place the system into the service position. For instructions, see “Placing an 8001-22C or 8005-22N system into the service position” on page 104.

**CAUTION:**

**Do not place any object on top of a rack-mounted device unless that rack-mounted device is intended for use as a shelf. (R008)**

(L012)



or



**CAUTION:** Pinch hazard. (L012)

7. Remove the service access cover. For instructions, see “Removing the service access cover from an 8001-22C or 8005-22N system” on page 102.

## Preparing the 8001-22C system for operation after you remove and replace internal parts

Learn how to prepare the IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system for operation after you remove and replace internal parts.

### Procedure

1. Ensure that you have the electrostatic discharge (ESD) wrist strap attached. If not, attach it now.

2. Replace the service access cover. For instructions, see “Installing the service access cover on an 8001-22C or 8005-22N system” on page 103.
3. Place the system into the operating position. For instructions, see “Placing an 8001-22C or 8005-22N system into the operating position” on page 106.

(L012)



or



**CAUTION:** Pinch hazard. (L012)

4. Reconnect the power cords to the system. For instructions, see “Connecting the power cords to an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 108.
5. Start the system. For instructions, see “Connecting the power cords to an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 108.
6. If you installed or replaced a PCIe adapter, update the adapter firmware. See [http://www.ibm.com/support/knowledgecenter/HW4P4/p8ei8/p8ei8\\_update\\_other\\_adapter.htm](http://www.ibm.com/support/knowledgecenter/HW4P4/p8ei8/p8ei8_update_other_adapter.htm) ([www.ibm.com/support/knowledgecenter/HW4P4/p8ei8/p8ei8\\_update\\_other\\_adapter.htm](http://www.ibm.com/support/knowledgecenter/HW4P4/p8ei8/p8ei8_update_other_adapter.htm)).
7. Verify the installed part. For instructions, see Verifying a repair ([www.ibm.com/support/knowledgecenter/POWER8/p8ei3/p8ei3\\_verifyrepair.htm](http://www.ibm.com/support/knowledgecenter/POWER8/p8ei3/p8ei3_verifyrepair.htm)).

## Starting and stopping the 8001-12C, 8001-22C, 8005-12N, or 8005-22N

Learn how to start and stop the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) system to perform a service action or system upgrade.

### Starting the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system

You can use the power button to start the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems.


#### About this task

**Attention:** For safety, airflow purposes and thermal performance, the service access cover must be installed and fully seated before you power on the system.

You can use this procedure to power on the system; or you can use a console and the IPMI tool to power on the system.


#### Procedure

1. Before you press the power button, ensure that the power supplies are connected to the system unit and that the power cables are connected to a power source.
2. Press the power button (7) shown in Figure 60 on page 96 or Figure 61 on page 96. You may have to press the switch for 0.5 to 3 seconds.

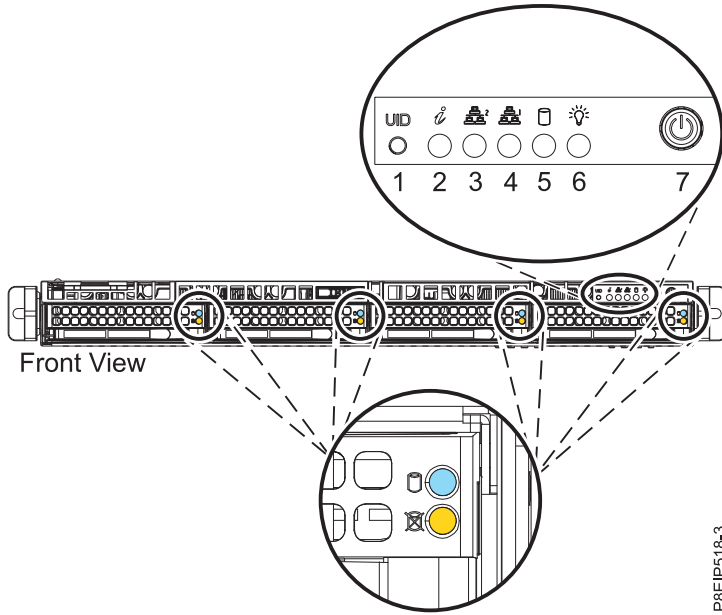

P8EIP518-3

Figure 60. Power switch for 8001-12C

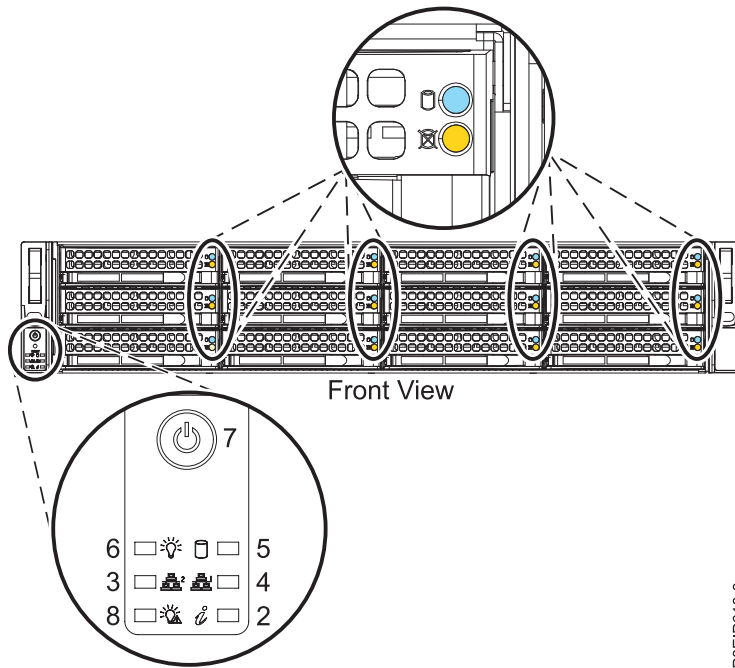

P8EIP618-3

Figure 61. Power switch for 8001-22C

## What to do next

If you press the power button and the system does not start, contact your next level of support or your service provider.



## Stopping the 8001-12C, 8001-22C, 8005-12N, or 8005-22N system

Learn how to stop the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems to complete another task.

### Procedure

You can use the Linux **shutdown** command to stop and power down the system.

For example, the following command will shut down the system in 10 minutes and send the message "Repairs coming" to the users.

```
shutdown -P +10 "Repairs coming"
```

The `-P` setting instructs the system to shut down and then power down. The `+` indicates the time in minutes before the shutdown occurs.

## Drive commands for 8001-12C, 8001-22C, 8005-12N, or 8005-22N

Learn about the storage drive commands for the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems.

### mvCLI commands

Learn about the mvCLI commands. They are for SATA drives and drive on modules (DOMs) that are directly connected to the system backplane without using a PCIe adapter.

To enter the mvCLI commands, enter this command to enable the commands:

```
modprobe sg
```

Run this mvCLI command to start its shell mode:

```
./mvcli
```

To select the drive adapter, enter the following command. Valid values are 0 and 1. For example:

```
adapter -i 1
```

To show all physical disks and IDs:

```
info -o pd
```

To list the serial number of a drive:

```
info -o pd -i <id of drive>
```

To show all host bus adapters (HBAs):

```
info -o hba
```

To check for errors on a disk:

```
smart -p <disk_ID#>
```

You can also get the drive serial number by using the `hdparm` command from a shell. The setting `sdx` indicates the drive.

```
hdparm -i /dev/sdx
```

To create a virtual disk, where "MyVirtualDisk" is the name for the new array, and 0 and 1 are the physical IDs of the SATA DOMs from a previous `info -o pd` command:

```
create -o vd -r1 -n "MyVirtualDisk" -d 0,1
```

If the virtual disk was successfully created, show a new RAID virtual disk:

```
info -o vd
```

To take the device offline so that it can be removed:

1. Identify the disk to remove; for example, sda or sdb.
2. Log in as the root user. For example, to remove the sda drive, run the following command:

```
echo 0 > /sys/block/sda/device/delete
```

## StorCLI commands

Learn about the StorCLI commands. They are for feature code EKAA using a PCIe adapter.

If the command is not installed, download the utility from <http://avagotech.com>. You can find the download by searching that site for storcli. Get their latest "MegaRAID Storcli" download; the file is at <https://docs.broadcom.com/docs/STORCLI-v1-21-12-Linux.zip>. To install, follow their documentation. Unzip the file; then for:

### RHEL

1. Navigate to the Linux folder.
2. Install the package by running this command, where x.xx-x equals the version of the utility. :  

```
rpm -ivh <StorCLI-x.xx-x.noarch.rpm>
```

### Ubuntu:

1. Navigate to the Ubuntu folder.
2. Install the debian file by using this command:  

```
dpkg -i storcli_x.xx-x._all.deb
```

If you need to make the storcli run, use the following command:

```
chmod +x /path/to/file/filename
```

You can check the permissions of the file to see if it is executable by using the following command:

```
ls -l /path/to/file/filename
```

To upgrade the StorCLI RPM, run:

```
rpm -Uvh <StorCLI-x.xx-x.noarch.rpm>
```

To show a summary of the drive and controller status:

```
storcli show
```

To show a list of all controllers and drives that need attention:

```
storcli show all
```

To show information about the drives:

```
storcli /cx[/eall]/sall show
```

To locate a physical disk by turning on the identify LED:

```
storcli /cx[/ex]/sx start locate
```

To turn off the identify LED:

```
storcli /cx[/ex]/sx stop locate
```

To prepare a drive for removal:

```
storcli /cx[/ex]/sx spindown
```

To prepare a drive for use:

```
storcli /cx[/ex]/sx spinup
```

## **sas3ircu commands**

Learn about the `sas3ircu` command. This command is for feature code EKAB using a PCIe adapter.

If the `sas3ircu` command is not installed, download the utility from <ftp://ftp.supermicro.com/driver/P8DTU/>. You can find the download by searching that site for `sas3ircu`; currently: **LSI MegaRAID and HBA (AOC-Utility) > SMC-Broadcom (Supermicro 12Gbs SAS HBA - AOC-S3008L-L8i) > AOC-S3008L-L8i > Tools.**

To install:

1. Download the `sas3ircu` command.
2. Copy the `sas3ircu` command file to the `/usr/local/bin` directory.
3. To enable the command to be executed, as root, run the command:

```
chmod +x sas3ircu
```

General SAS3IRCU command syntax:

```
sas3ircu <controller_#> <command> <parameters>
```

To list the controllers:

```
sas3ircu list
```

To show the controller status:

```
sas3ircu <controller_#> status
```

To turn the drive light on:

```
sas3ircu <controller_#> locate <Enclosure:Bay> ON
```

And off:

```
sas3ircu <controller_#> locate <Enclosure:Bay> OFF
```

To view additional help for the command:

```
sas3ircu help
```

## **NVMe commands**

Learn about the NVMe commands. These commands are for NVMe drives together with feature code EKAE using an NVMe PCIe adapter.

If the `nvme` command is not installed, download the utility from <https://github.com/linux-nvme/nvme-cli>. Follow the installation instructions found on that site.

To determine which drive you want to replace, use the command:

```
nvme list
```

If you are searching for a failed drive, you can check each drive using the command:

```
nvme smart-log <device>
```

To turn on the identify LED, use the command:

```
dd if=/dev/nvmeX of=/dev/null
```

You can also use the `ledctl` command from the optional `ledmon` package:

```
ledctl locate=/dev/rsnvmeX
```

To get the device serial number for verification, use the command:

```
nvme id-ctrl /dev/nvmeX | grep -i sn
```

To take the device offline so that it can be removed:

```
sh -c"echo 0 >/sys/block/nvmeX/device/delete"
```

## Sensor readings GUI display

The sensor readings GUI display is a way to quickly determine the general health status of the server without having to look at the detailed system event log (SEL) information.

To view the sensor readings GUI display, log in to the BMC web interface. Click **Server Health > Sensor Readings**.

Some occurrences of errors in the system might not appear in the sensor readings GUI. After you view the sensor readings GUI display, use the SEL logs to view any active SEL events that indicate a service action event.

## Sensor readings display operation

Most sensors are initially gray, then change status and color during the boot process when the FRU is initialized and either determined to be good (green) or faulty (red). No sensor display is available until you can get to the sensor display selection on the BMC, which means that the system attains a certain power level or that the BMC finishes initializing. The indicator color of the sensor is determined based on the sensor status at time of invocation of the display. The sensor display maintains the sensor status indicator color until the display is refreshed, which updates the sensor value with the latest status. Changes to SEL events changes color of sensor indicator when you refresh or restart the display. Sensor status display also starts over with a reboot or a power cycle.

## Sensor status indicator descriptions

Gray indicator:

- FRU not plugged
- Sensor not initialized
- Sensor function is not initialized

Red (faulty) indicator:

- Critical threshold exceeded (an event requires a service action)
- Service action required for hard fail
- Partial function failure that reached a "service action required" state
- A deconfigured resource requires a service action

Green (good) indicator:

- FRU or sensor is plugged in and fully operational
- Recoverable event is below the critical "service action required" threshold
- FRU or sensor returned to "normal" operating range (for threshold sensors)

## Removing and replacing a power supply in the 8001-12C, 8001-22C, 8005-12N, or 8005-22N

Learn how to remove and replace power supplies in the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems.

### Removing a power supply from the 8001-12C, 8001-22C, 8005-12N, or 8005-22N

Learn how to remove power supplies in the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems.

## About this task

If a single power supply failed, it can be replaced while the system is running.

## Procedure

1. Attach the electrostatic discharge (ESD) wrist strap.

### Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
  - When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
  - If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
2. Label and remove the power cord from the power supply to remove. For instructions, see “Disconnecting the power cords from an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 107.
  3. Remove the power supply from the system.
    - a. To unseat the power supply from its position in the system, push the locking-tab to the left as shown in Figure 62.
    - b. Grasp the power supply handle with one hand, and pull the power supply partially out of the system.
    - c. Place your other hand underneath the power supply and pull the power supply out of the system and place it on an ESD mat.

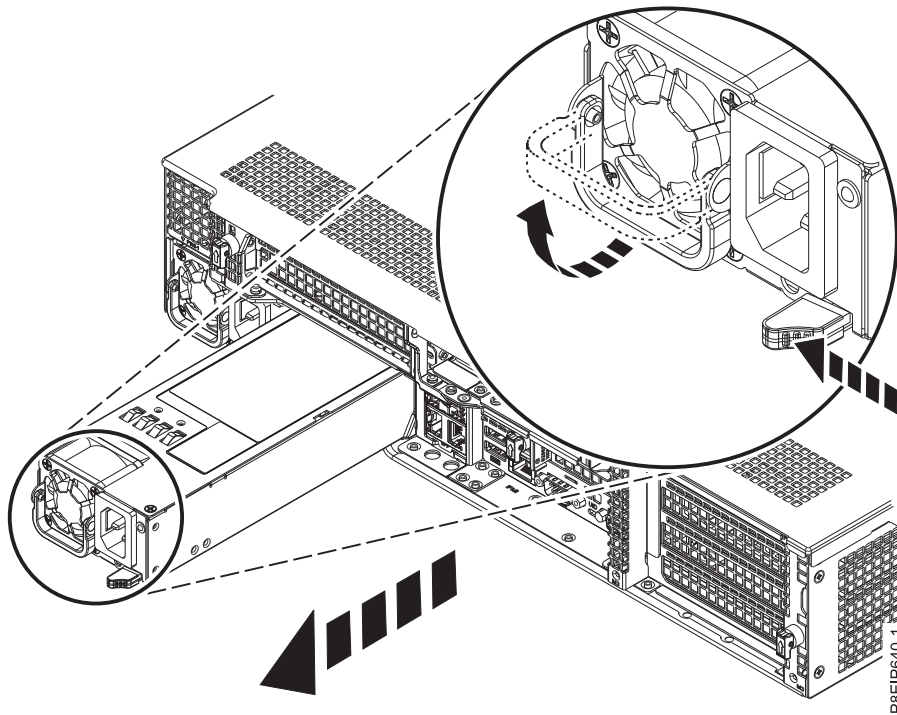


Figure 62. Removing a power supply from the system

## Replacing a power supply in the 8001-12C, 8001-22C, 8005-12N, or 8005-22N

Learn how to replace power supplies in the IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems.

### Procedure

1. Ensure that you have the electrostatic discharge (ESD) wrist strap attached. If not, attach it now.
2. Align the power supply with the bay as shown in Figure 63. The fan is on the left; the plug is on the right. Slide the power supply into the system until the latch locks in place.

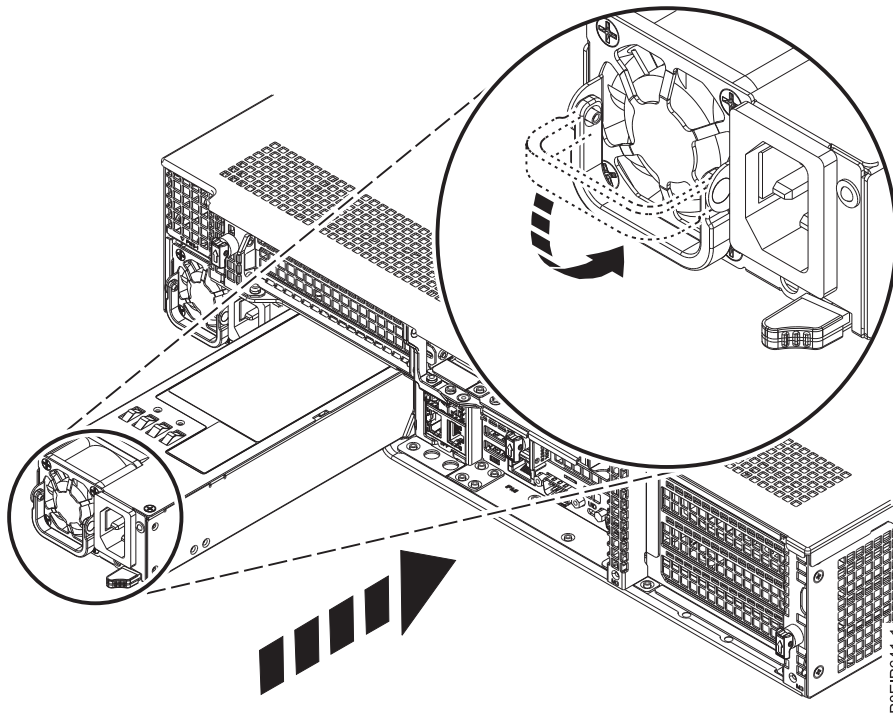


Figure 63. Replacing a power supply in the system

3. Reconnect the power cord. For instructions, see “Connecting the power cords to an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 108.

## Removing and replacing covers on an 8001-22C or 8005-22N system

Learn how to remove and replace the covers for an IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system so that you can access the hardware parts or service the system.

### Removing the service access cover from an 8001-22C or 8005-22N system

Learn how to remove the service access cover from an IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system.

#### About this task

**Attention:** For safety, airflow purposes and thermal performance, the service access cover must be installed and fully seated before you power on the system.

### Procedure

1. Ensure that you removed both power cords from the system. For instructions, see “Disconnecting the power cords from an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system” on page 107.

(L005)



**CAUTION:** Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in splattered metal, burns, or both. (L005)

2. Remove the two cover screws, one from each side of the cover.
3. Press both buttons on the top cover to release the latches as shown in Figure 64, and push the cover back about 0.5 in (1 cm) until it stops. If the buttons do not easily press down, partially remove the drives directly under the buttons.

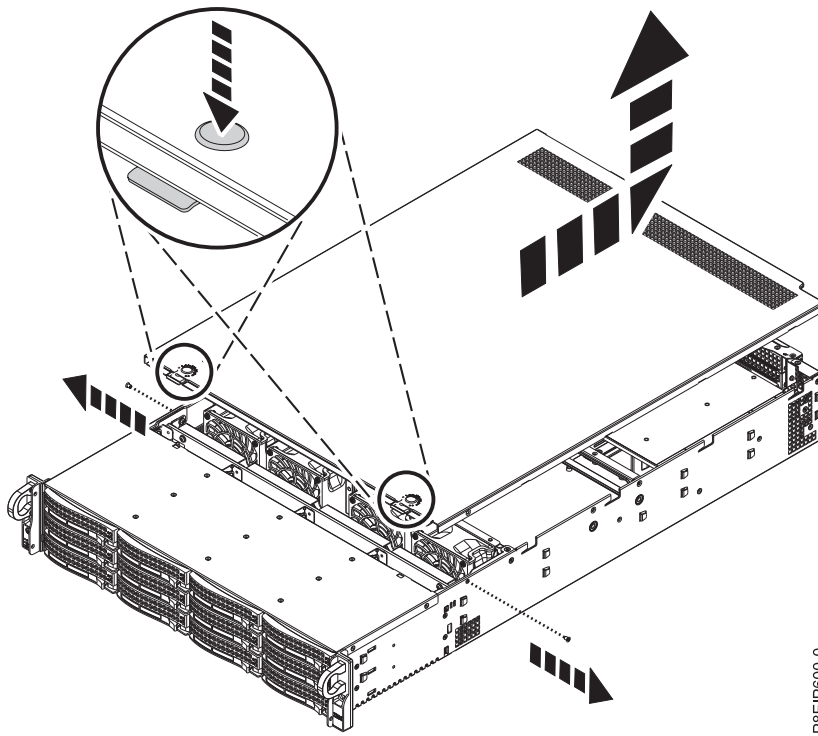


Figure 64. Releasing and opening the cover

4. Lift up the front of the cover up and remove it from the system.

### Installing the service access cover on an 8001-22C or 8005-22N system

Learn how to install the service access cover on a rack-mounted IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system.

#### About this task

**Attention:** For safety, airflow purposes and thermal performance, the service access cover must be installed and fully seated before you power on the system.

#### Procedure

1. Place the rear of the cover on the system. Pivot to front of the cover down until it rests on the system.

- Slide the cover forwards until it latches into place as shown in Figure 65.

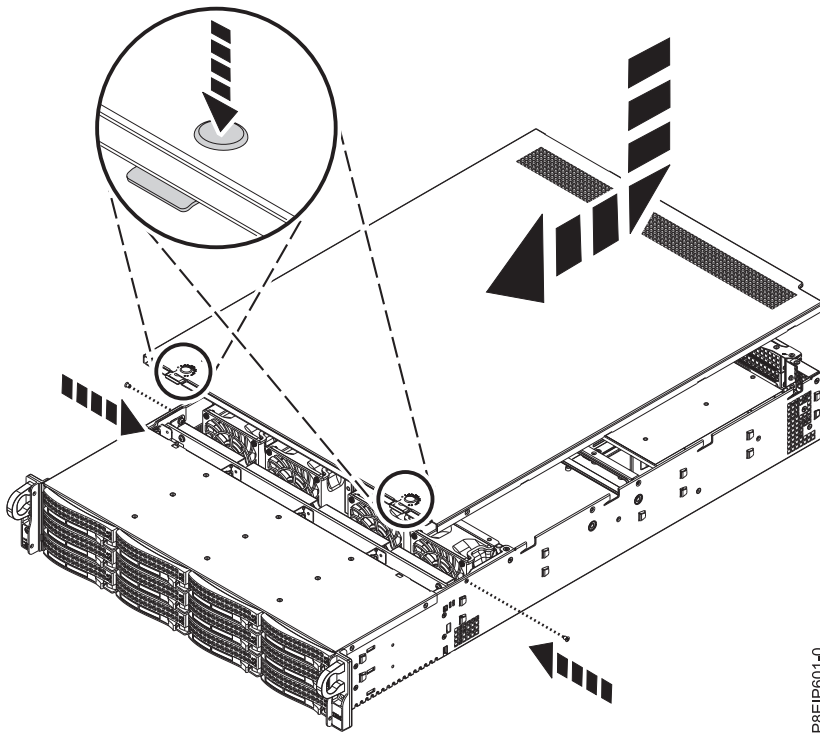


Figure 65. Replacing and securing the cover

- Replace the two cover screws, one on each side of the cover.

## Service and operating positions for 8001-22C or 8005-22N

Learn how to place an IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system into the service or operating position.

### Placing an 8001-22C or 8005-22N system into the service position

Learn how to place an IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system into the service position.

#### Before you begin

The systems must be removed from the rails for servicing.

#### Notes:

- When you slide a system out of a rack, ensure that all stability plates are firmly installed to prevent the rack from toppling. Slide only one system out at a time.
- When the rails are fully extended, the rail safety latches lock into place. This action prevents the system from being pulled out too far.

#### Procedure

- Lighten the system by removing all the power supplies and all the drives.
  - Label and remove the drives, keeping track of their locations.
  - Remove the power supplies.
- Unlock the drive bay handle (**B**) by pushing in the handle release (**A**) as shown in Figure 66 on page 105. The handle (**B**) snaps out towards you. If the handle does not snap out all the way, the drive



does not slide out of the system. If the drive does not match the serial number you wrote down in the previous step, reinstall the drive in the bay you removed it from, and check the other drive bays.

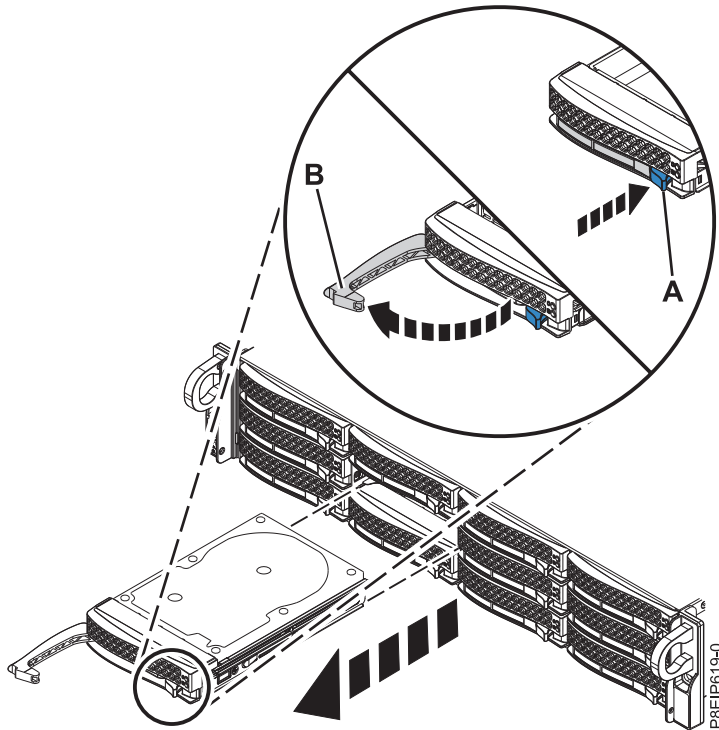


Figure 66. Removing a drive

3. Label and remove all cables from the rear of the system.
4. Remove the front screws (A) that secure the system to the rack from both sides of the system as shown in Figure 67 on page 106.

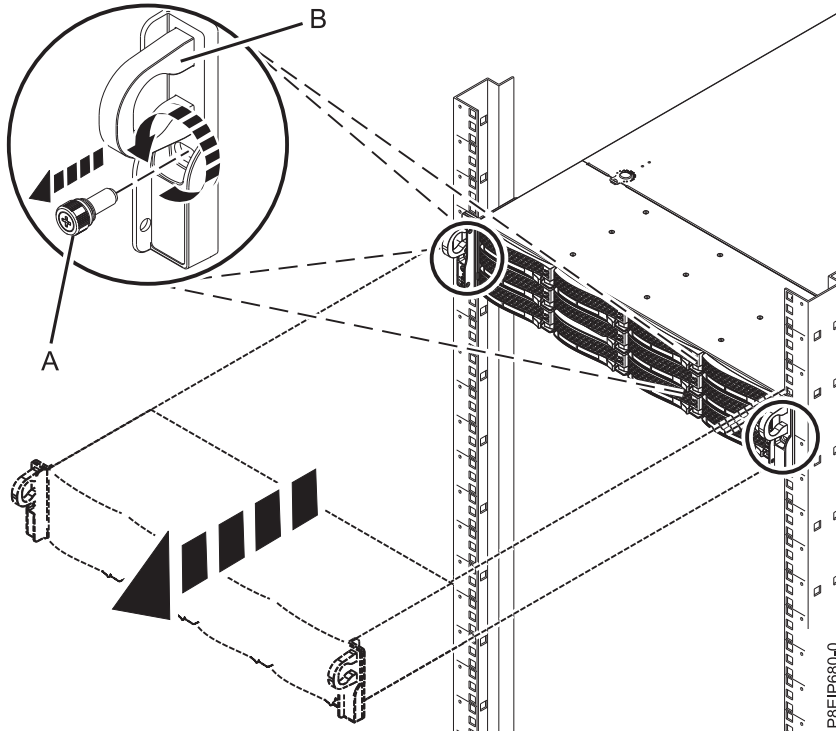


Figure 67. Removing the front screws and removing the system from the rack

5. Pull the system unit out of the rack.
6. Release the rail safety latches and remove the system from the rails.
7. Carefully set the system on a table with an appropriate ESD surface.

### Placing an 8001-22C or 8005-22N system into the operating position

Learn how to place an IBM Power System S822LC for Big Data (8001-22C) or the IBM CS822 (8005-22N) system into the operating position.

#### Procedure

1. Lift the system from the table.
2. Tilt the system into position over the rails.
3. Carefully lower the system onto the rails.
4. Release the rail safety latches (A) by lifting them upward, as shown in Figure 68 on page 107, then push the system fully into the rack.

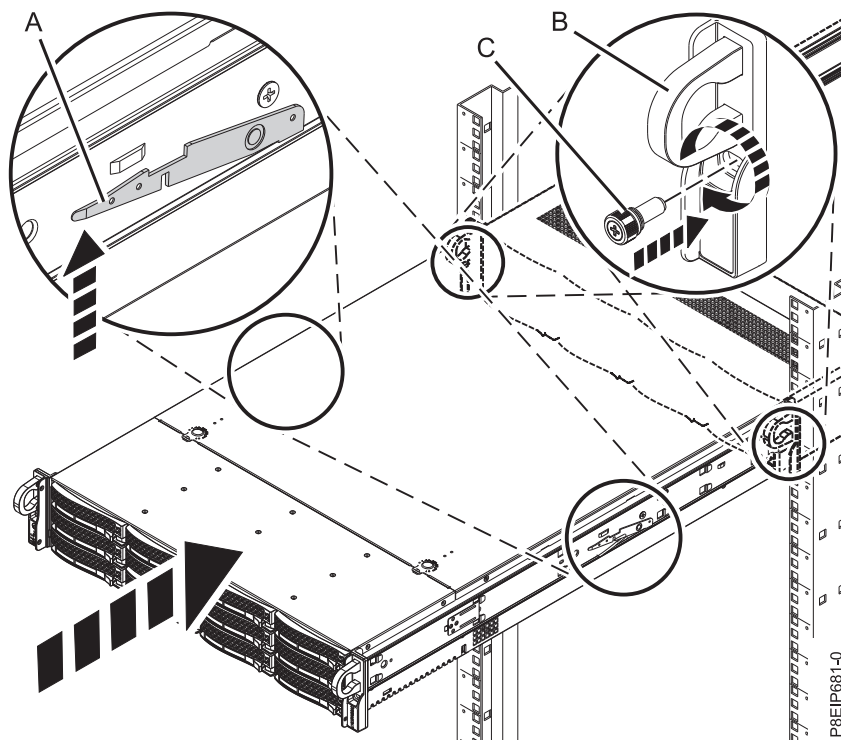


Figure 68. Placing the system into the operating position

5. Fasten the two front screws (C) to secure the system to the rack.
6. Using your labels, reconnect the cables at the rear of the system unit.
7. Using your labels, replace the drives in the proper locations.
8. Replace the power supplies.

## Power cords

Learn how to disconnect and connect the power cords on IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) systems.

### Disconnecting the power cords from an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system

Learn how to disconnect the power cords from an IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) system.

#### Before you begin

**Note:** This system might be equipped with two or more power supplies. If the removing and replacing procedures require the power to be off, then ensure that all power sources to the system are disconnected.

#### Procedure

1. Identify the system unit that you are servicing in the rack.
2. Label and disconnect the power cords from the system unit as shown in Figure 69 on page 108.

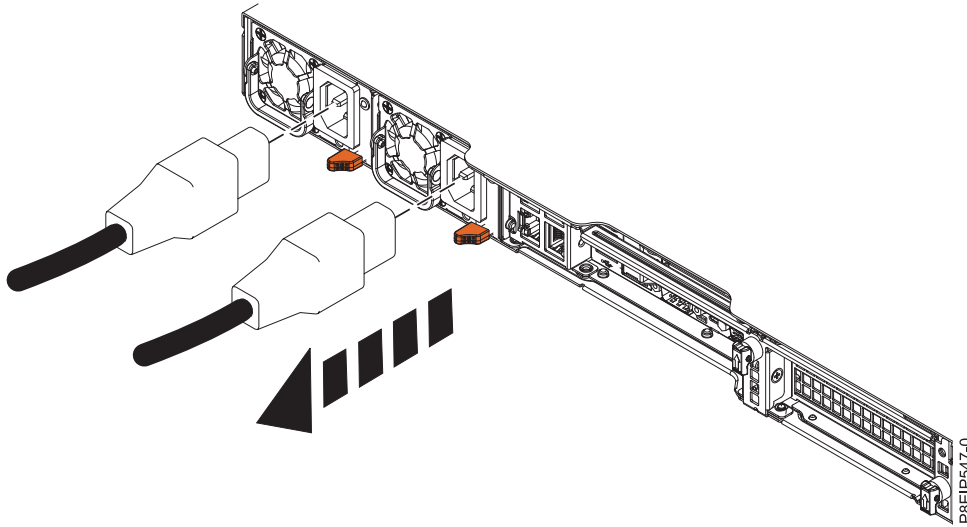


Figure 69. Removing the power cords from the system

## Connecting the power cords to an 8001-12C, 8001-22C, 8005-12N, or 8005-22N system

Learn how to connect the power cords to an IBM Power System S821LC (8001-12C), the IBM Power System S822LC for Big Data (8001-22C), the IBM CS821 (8005-12N), or the IBM CS822 (8005-22N) system.

### Procedure

Using your labels, reconnect the power cords to the system unit as shown in Figure 70.

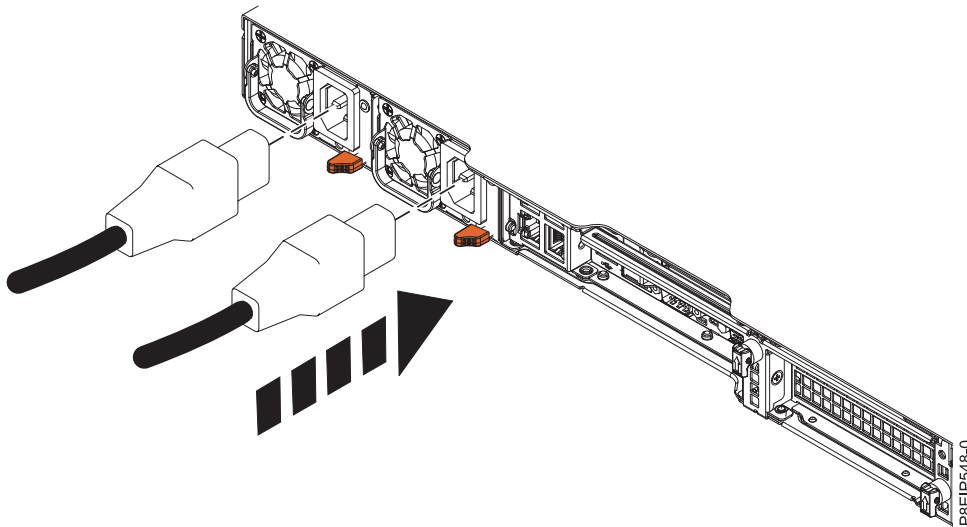


Figure 70. Connecting the power cords to the system

---

## Notices

This information was developed for products and services offered in the US.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive, MD-NC119  
Armonk, NY 10504-1785  
US*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product and use of those websites is at your own risk.

IBM may use or distribute any of the information you provide in any way it believes appropriate without incurring any obligation to you.

The performance data and client examples cited are presented for illustrative purposes only. Actual performance results may vary depending on specific configurations and operating conditions.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

Statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

All IBM prices shown are IBM's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to actual people or business enterprises is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of IBM.

IBM has prepared this information for use with the specific machines indicated. IBM makes no representations that it is suitable for any other purpose.

IBM's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check IBM's support websites for updated information and fixes applicable to the system and related software.

## Homologation statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

---

## Accessibility features for IBM Power Systems servers

Accessibility features assist users who have a disability, such as restricted mobility or limited vision, to use information technology content successfully.

### Overview

The IBM Power Systems servers include the following major accessibility features:

- Keyboard-only operation
- Operations that use a screen reader

The IBM Power Systems servers use the latest W3C Standard, WAI-ARIA 1.0 ([www.w3.org/TR/wai-aria/](http://www.w3.org/TR/wai-aria/)), to ensure compliance with US Section 508 ([www.access-board.gov/guidelines-and-standards/communications-and-it/about-the-section-508-standards/section-508-standards](http://www.access-board.gov/guidelines-and-standards/communications-and-it/about-the-section-508-standards/section-508-standards)) and Web Content Accessibility Guidelines (WCAG) 2.0 ([www.w3.org/TR/WCAG20/](http://www.w3.org/TR/WCAG20/)). To take advantage of accessibility features, use the latest release of your screen reader and the latest web browser that is supported by the IBM Power Systems servers.

The IBM Power Systems servers online product documentation in IBM Knowledge Center is enabled for accessibility. The accessibility features of IBM Knowledge Center are described in the Accessibility section of the IBM Knowledge Center help ([www.ibm.com/support/knowledgcenter/doc/kc\\_help.html#accessibility](http://www.ibm.com/support/knowledgcenter/doc/kc_help.html#accessibility)).

## Keyboard navigation

This product uses standard navigation keys.

## Interface information

The IBM Power Systems servers user interfaces do not have content that flashes 2 - 55 times per second.

The IBM Power Systems servers web user interface relies on cascading style sheets to render content properly and to provide a usable experience. The application provides an equivalent way for low-vision users to use system display settings, including high-contrast mode. You can control font size by using the device or web browser settings.

The IBM Power Systems servers web user interface includes WAI-ARIA navigational landmarks that you can use to quickly navigate to functional areas in the application.

## Vendor software

The IBM Power Systems servers include certain vendor software that is not covered under the IBM license agreement. IBM makes no representation about the accessibility features of these products. Contact the vendor for accessibility information about its products.

## Related accessibility information

In addition to standard IBM help desk and support websites, IBM has a TTY telephone service for use by deaf or hard of hearing customers to access sales and support services:

TTY service  
800-IBM-3383 (800-426-3383)  
(within North America)

For more information about the commitment that IBM has to accessibility, see IBM Accessibility ([www.ibm.com/able](http://www.ibm.com/able)).

---

## Privacy policy considerations

IBM Software products, including software as a service solutions, (“Software Offerings”) may use cookies or other technologies to collect product usage information, to help improve the end user experience, to tailor interactions with the end user, or for other purposes. In many cases no personally identifiable information is collected by the Software Offerings. Some of our Software Offerings can help enable you to collect personally identifiable information. If this Software Offering uses cookies to collect personally identifiable information, specific information about this offering’s use of cookies is set forth below.

This Software Offering does not use cookies or other technologies to collect personally identifiable information.

If the configurations deployed for this Software Offering provide you as the customer the ability to collect personally identifiable information from end users via cookies and other technologies, you should seek your own legal advice about any laws applicable to such data collection, including any requirements for notice and consent.

For more information about the use of various technologies, including cookies, for these purposes, see IBM’s Privacy Policy at <http://www.ibm.com/privacy> and IBM’s Online Privacy Statement at <http://www.ibm.com/privacy/details> the section entitled “Cookies, Web Beacons and Other Technologies” and the “IBM Software Products and Software-as-a-Service Privacy Statement” at <http://www.ibm.com/software/info/product-privacy>.

---

## Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at Copyright and trademark information at [www.ibm.com/legal/copytrade.shtml](http://www.ibm.com/legal/copytrade.shtml).

Intel, Intel logo, Intel Inside, Intel Inside logo, Intel Centrino, Intel Centrino logo, Celeron, Intel Xeon, Intel SpeedStep, Itanium, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Red Hat, the Red Hat "Shadow Man" logo, and all Red Hat-based trademarks and logos are trademarks or registered trademarks of Red Hat, Inc., in the United States and other countries.

---

## Electronic emission notices

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

## Class A Notices

The following Class A statements apply to the IBM servers that contain the POWER8 processor and its features unless designated as electromagnetic compatibility (EMC) Class B in the feature information.

## Federal Communications Commission (FCC) Statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Industry Canada Compliance Statement

CAN ICES-3 (A)/NMB-3(A)

## European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2014/30/EU on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.



European Community contact:  
IBM Deutschland GmbH  
Technical Regulations, Abteilung M456  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 800 225 5426  
email: halloibm@de.ibm.com

**Warning:** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

### VCCI Statement - Japan

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

The following is a summary of the VCCI Japanese statement in the box above:

This is a Class A product based on the standard of the VCCI Council. If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

### Japan Electronics and Information Technology Industries Association Statement

This statement explains the Japan JIS C 61000-3-2 product wattage compliance.

(一社) 電子情報技術産業協会 高調波電流抑制対策実施  
要領に基づく定格入力電力値： Knowledge Centerの各製品の  
仕様ページ参照

This statement explains the Japan Electronics and Information Technology Industries Association (JEITA) statement for products less than or equal to 20 A per phase.

高調波電流規格 JIS C 61000-3-2 適合品

This statement explains the JEITA statement for products greater than 20 A, single phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6 (単相、PFC回路付)
- 換算係数 : 0

This statement explains the JEITA statement for products greater than 20 A per phase, three-phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5 (3相、PFC回路付)
- 換算係数 : 0

### Electromagnetic Interference (EMI) Statement - People's Republic of China

声 明

此为 A 级产品,在生活环境中,该产品可能会造成无线电干扰。在这种情况下,可能需要用户对其干扰采取切实可行的措施。

Declaration: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical action.

### Electromagnetic Interference (EMI) Statement - Taiwan

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate measures.

**IBM Taiwan Contact Information:**

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

**Electromagnetic Interference (EMI) Statement - Korea**

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

**Germany Compliance Statement**

**Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 / EN 55032 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

EN 55022 / EN 55032 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden: "Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

**Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU in der Bundesrepublik Deutschland.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC Richtlinie 2014/30/EU) für Geräte der Klasse A**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:  
International Business Machines Corp.  
New Orchard Road

Armonk, New York 10504  
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:  
IBM Deutschland GmbH  
Technical Relations Europe, Abteilung M456  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 (0) 800 225 5426  
email: HalloIBM@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 / EN 55032 Klasse A.

### **Electromagnetic Interference (EMI) Statement - Russia**

**ВНИМАНИЕ!** Настоящее изделие относится к классу А.  
В жилых помещениях оно может создавать  
радиопомехи, для снижения которых необходимы  
дополнительные меры

### **Class B Notices**

The following Class B statements apply to features designated as electromagnetic compatibility (EMC) Class B in the feature installation information.

### **Federal Communications Commission (FCC) Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM-authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM-authorized dealers. IBM is not responsible for any radio or television interference caused by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Industry Canada Compliance Statement

CAN ICES-3 (B)/NMB-3(B)

### European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2014/30/EU on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

European Community contact:  
IBM Deutschland GmbH  
Technical Regulations, Abteilung M456  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 800 225 5426  
email: halloibm@de.ibm.com

### VCCI Statement - Japan

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。 VCCI-B

### Japan Electronics and Information Technology Industries Association Statement

This statement explains the Japan JIS C 61000-3-2 product wattage compliance.

(一社) 電子情報技術産業協会 高調波電流抑制対策実施  
要領に基づく定格入力電力値 : Knowledge Centerの各製品の  
仕様ページ参照

This statement explains the Japan Electronics and Information Technology Industries Association (JEITA) statement for products less than or equal to 20 A per phase.

高調波電流規格 JIS C 61000-3-2 適合品

This statement explains the JEITA statement for products greater than 20 A, single phase.

### 高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6 (単相、PFC回路付)
- 換算係数 : 0

This statement explains the JEITA statement for products greater than 20 A per phase, three-phase.

### 高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5 (3相、PFC回路付)
- 換算係数 : 0

### IBM Taiwan Contact Information

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

### Germany Compliance Statement

**Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse B EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022/ EN 55032 Klasse B ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

**Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU in der Bundesrepublik Deutschland.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC Richtlinie 2014/30/EU) für Geräte der Klasse B**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:  
International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:  
IBM Deutschland GmbH  
Technical Relations Europe, Abteilung M456  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 (0) 800 225 5426  
email: HalloIBM@de.ibm.com

Generelle Informationen:

**Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022/ EN 55032 Klasse B.**

---

## Terms and conditions

Permissions for the use of these publications are granted subject to the following terms and conditions.

**Applicability:** These terms and conditions are in addition to any terms of use for the IBM website.

**Personal Use:** You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of IBM.

**Commercial Use:** You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

**Rights:** Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.









Printed in USA