




 eServer

iSeries

## 高速鏈結 (HSL) 安裝指示

版本 5

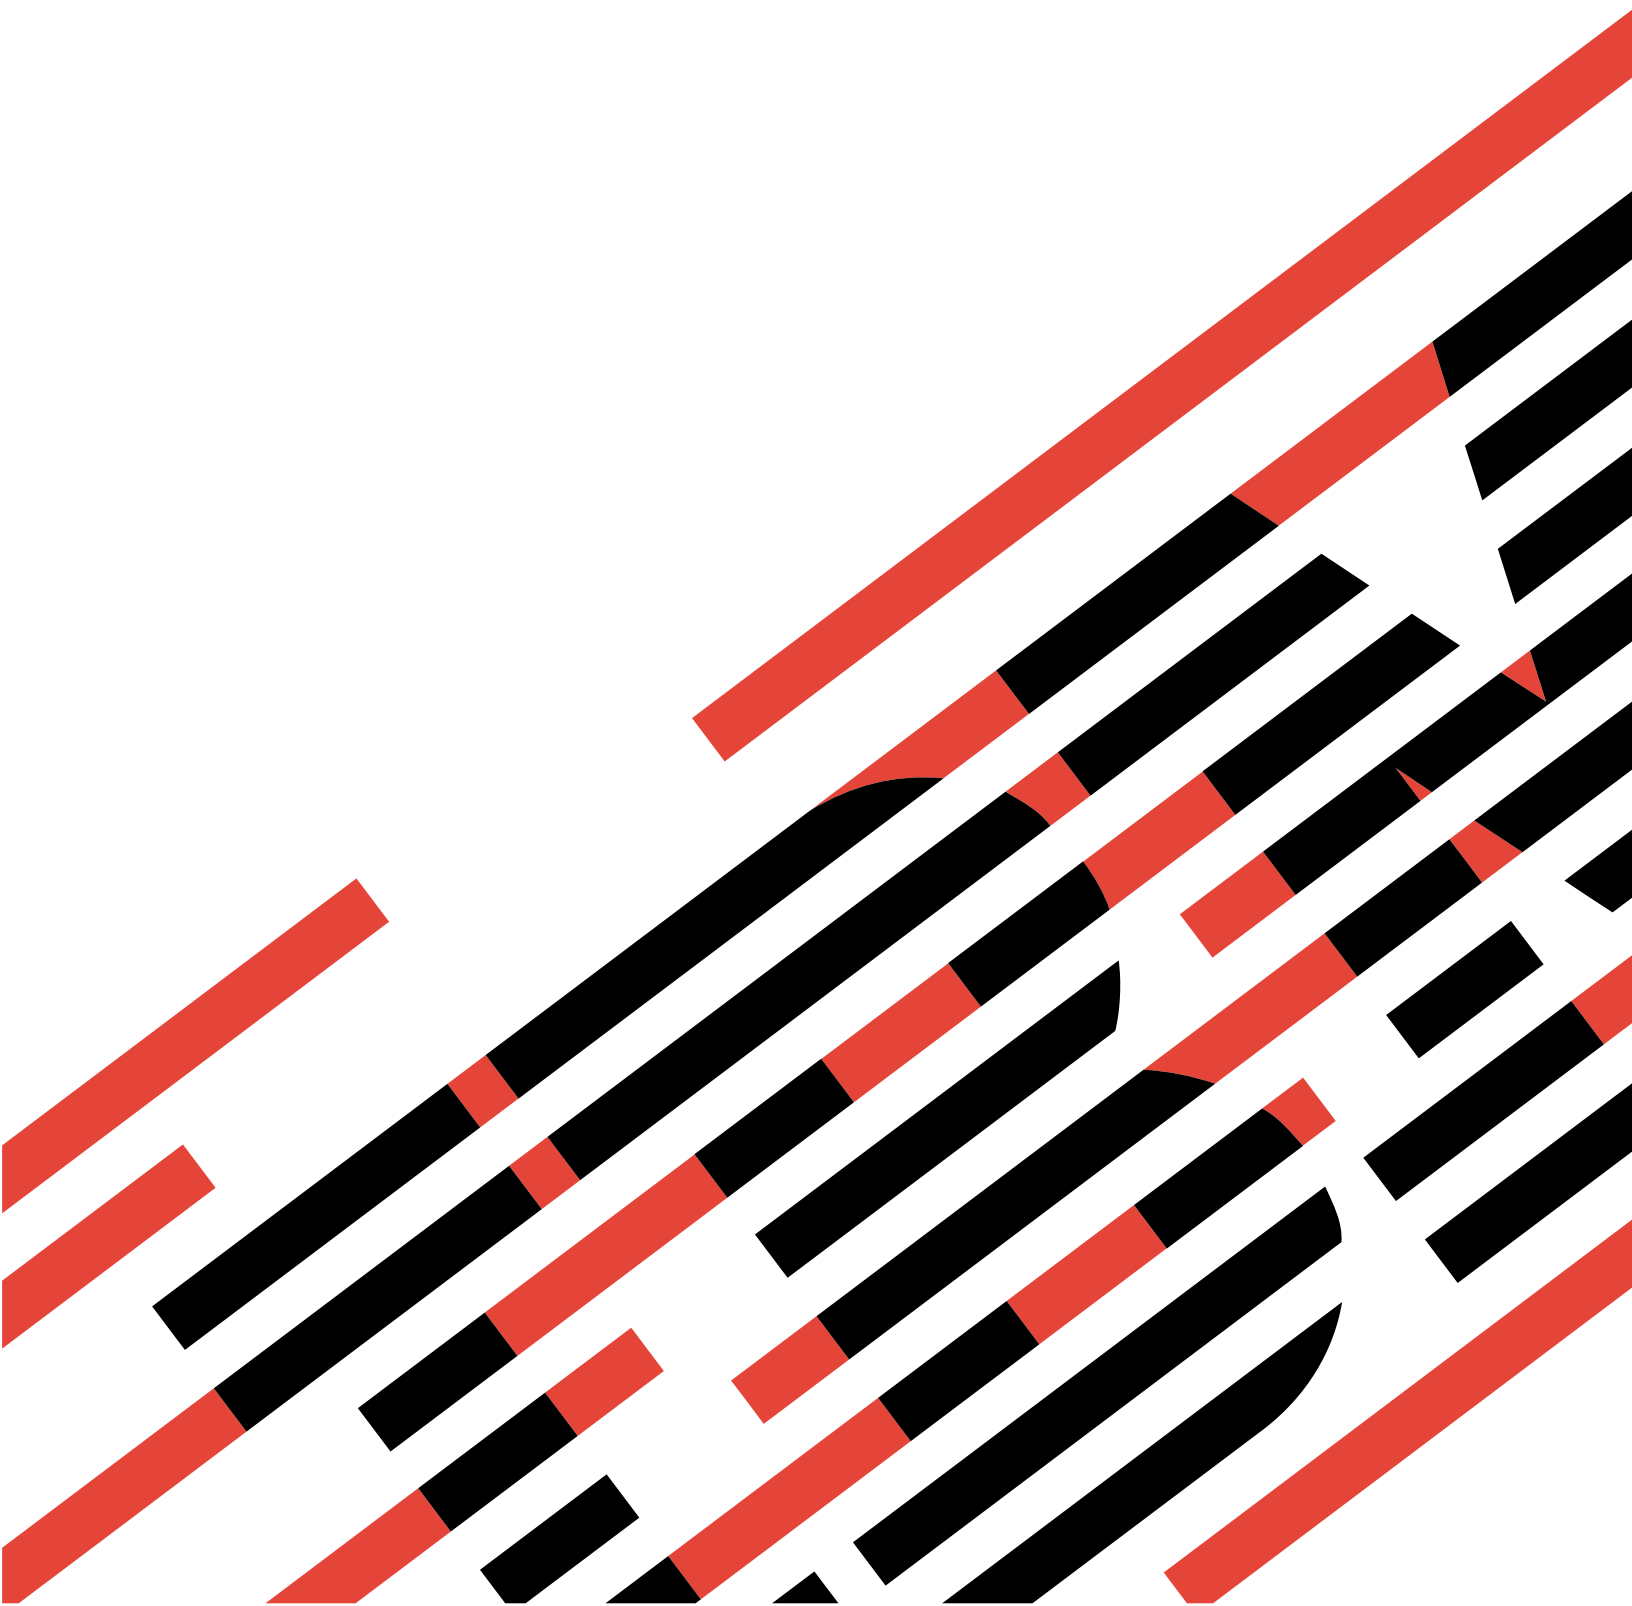





@server

iSeries

## 高速鏈結 (HSL) 安裝指示





版本 5



---

## 安裝高速鏈結 (HSL)

您可以在 *iSeries* 資訊中心找到**高速鏈結 (HSL)** 的資訊。請參照下列資訊：

- 高速鏈結 (HSL) 資訊
- 設定 5065 或 5066 擴充裝置，SA41-5146 
- 設定 0578、5074、5078 或 5079 擴充裝置，SA41-5149 
- 設定 5075 擴充裝置，SA41-5148 
- 設定 0588、0595、5088、5094、5095 或 5294 擴充裝置，SA40-0371 
- OptiConect for OS/400，SC41-5414 







Printed in Taiwan