

1U 18.5-inch Enhanced Media Console



Installation and Maintenance Guide

1U 18.5-inch Enhanced Media Console



Installation and Maintenance Guide

Note: Before using this information and the product it supports, read the general information in Appendix C, "Notices," on page 95, the *Safety Information* and *Environmental Notices and User Guide* documents on the IBM *Documentation* CD, and the *Warranty Information* document that comes with the console unit.

First Edition (December 2013)

© Copyright IBM Corporation 2013.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Safety	v
Chapter 1. Introduction	1
Console features	1
Inventory checklist	2
The IBM Documentation CD	4
Hardware and software requirements	4
Using the Documentation Browser	4
Notices and statements in this document	5
Console unit specifications	5
Rail-to-rail depth measurements	5
Dimensions and weight	6
Dual USB 2.0 pass through	7
Chapter 2. Installing the console unit in the rack	9
Installing the keyboard in the console unit	11
Installing the console unit in the rack	15
Installing an optional console switch	25
Installing an optional IBM Common Access Card Reader	27
Chapter 3. TFT-LCD display	31
Using the on-screen display (OSD) menu	31
Using the control buttons	31
Using the display menu	32
Maintaining the TFT-LCD display	34
Technical specifications	35
Chapter 4. Hardware maintenance information	37
Replaceable components	37
Power cords	38
Replacing the keyboard	41
Replacing the cable-management arm	45
Replacing the slide-rail assemblies	48
Replacing the console unit	55
Removing the console unit from the rack	55
Moving the keyboard	58
Removing and replacing the outer slide-rails	61
Installing the console unit in the rack	64
Replacing the multi-burner drive	68
Replacing the Common Access Card reader	78
Appendix A. Supported resolution timing charts	81
Appendix B. Getting help and technical assistance	91
Before you call	91
Using the documentation	92
Getting help and information from the World Wide Web	92
How to send Dynamic System Analysis data to IBM	92
Creating a personalized support web page	92
Software service and support	92
Hardware service and support	93
IBM Taiwan product service	93

Appendix C. Notices	95
Trademarks	95
Important notes	96
Particulate contamination	97
Monitor	97
Documentation format	98
Telecommunication regulatory statement	98
Electronic emission notices	98
Federal Communications Commission (FCC) statement	98
Industry Canada Class A emission compliance statement	99
Avis de conformité à la réglementation d'Industrie Canada	99
Australia and New Zealand Class A statement	99
European Union EMC Directive conformance statement	99
Germany Class A statement	99
VCCI Class A statement	100
Japan Electronics and Information Technology Industries Association (JEITA) statement	100
Korea Communications Commission (KCC) statement	101
Russia Electromagnetic Interference (EMI) Class A statement	101
People's Republic of China Class A electronic emission statement	101
Taiwan Class A compliance statement	101
Index	103

Safety

Before installing this product, read the Safety Information.

قبل تركيب هذا المنتج، يجب قراءة الملاحظات الأمنية

Antes de instalar este produto, leia as Informações de Segurança.

在安装本产品之前，请仔细阅读 **Safety Information**
(安全信息)。

安裝本產品之前，請先閱讀「安全資訊」。

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Před instalací tohoto produktu si přečtěte příručku bezpečnostních instrukcí.

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

Ennen kuin asennat tämän tuotteen, lue turvaohjeet kohdasta Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφαλείας
(safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.

A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się
z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Antes de instalar este produto, leia as Informações sobre Segurança.

Перед установкой продукта прочтите инструкции по
технике безопасности.

 
Pred inštaláciou tohto zariadenia si pečítajte Bezpečnostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Antes de instalar este producto, lea la información de seguridad.

Läs säkerhetsinformationen innan du installerar den här produkten.

ཐོན་རྒྱུ་འདི་བདེ་སྤྱད་མ་བྱས་གོང་། རྒྱུ་ཁྱིལ་ཡིན་གནས་
བྱ་འདྲ་མིན་ཡིན་པའི་འོད་སྤེར་བལྟ་དགོས།



Youq mwngz yungh canjbinj neix gaxgonq, itdingh aeu doeg aen
canjbinj soengq cungj vahgangj ancien siusik.

مەزكۇر مەھسۇلاتنى ئورنىتىشتىن بۇرۇن بىخەتەرلىك ئۇچۇرلىرىنى ئوقۇپ چىقىڭ.

Bu ürünü kurmadan önce güvenlik bilgilerini okuyun.

Important:

Each caution and danger statement in this document is labeled with a number. This number is used to cross reference an English-language caution or danger statement with translated versions of the caution or danger statement in the *IBM Systems Safety Notices* document.

For example, if a caution statement is labeled “D005,” translations for that caution statement are in the *IBM Systems Safety Notices* document under “D005.”

Be sure to read all caution and danger statements in this document before you perform the procedures. Read any additional safety information that comes with the switch or optional device before you install the device.

L002



DANGER

**Rack-mounted devices are not to be used as shelves or work spaces.
(L002)**

L004



DANGER

Hazardous voltage present. Voltages present constitute a shock hazard, which can cause severe injury or death. (L004)

L012



CAUTION:
Pinch hazard. (L012)

DANGER

An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (D004)

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- **Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.**
- **Do not open or service any power supply assembly.**
- **Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.**
- **The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.**
- **Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.**
- **Connect any equipment that will be attached to this product to properly wired outlets.**
- **When possible, use one hand only to connect or disconnect signal cables.**
- **Never turn on any equipment when there is evidence of fire, water, or structural damage.**
- **Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.**
- **Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.**

To disconnect:

- 1. Turn off everything (unless instructed otherwise).**
- 2. Remove the power cords from the outlets.**
- 3. Remove the signal cables from the connectors.**
- 4. Remove all cables from the devices.**

To connect:

- 1. Turn off everything (unless instructed otherwise).**
 - 2. Attach all cables to the devices.**
 - 3. Attach the signal cables to the connectors.**
 - 4. Attach the power cords to the outlets.**
 - 5. Turn on the devices.**
- **Sharp edges, corners and joints may be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching.**

(D005)



CAUTION:

This product is equipped with a 3-wire (two conductors and ground) power cable and plug. Use this power cable with a properly grounded electrical outlet to avoid electrical shock. (C018)



CAUTION:

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)



DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

(R001 part 1 of 2)



CAUTION:

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- (For sliding drawers): Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- (For fixed drawers): This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001 part 2 of 2)

Chapter 1. Introduction

The IBM® 1U 18.5-inch Enhanced Media Console, Type 1723-8EX, is a flat-panel display and keyboard tray in one unit. The console unit comes with a multi-burner drive behind the keyboard tray. The console unit occupies 1U¹ of space in a rack. You can install an optional console switch behind the standard console in the rack to attach more than one server to the flat-panel display and keyboard. You can install an optional IBM Common Access Card Reader, which is purchased separately, in the console unit.

If firmware and documentation updates are available, you can download them from the IBM website. The console unit might have features that are not described in the documentation that comes with the console unit, and the documentation might be updated occasionally to include information about those features, or technical updates might be available to provide additional information that is not included in the console unit documentation. To check for updates, go to <http://www.ibm.com/supportportal/>.

For service or assistance, see Appendix B, “Getting help and technical assistance,” on page 91.

Console features

The enhanced console unit has the following features:

- Mounts on slide-rails in the rack to enable easy movement and storage of the monitor
- UltraSlim Enhanced SATA multi-burner drive
- Dual USB 2.0 pass through
- Toolless rack installation in the 1U space of IBM rack configurations
- 18.5-inch, 16:9 ratio LCD panel with a VGA connection to the server or KVM switch
- Support for widescreen and previous (through scaling) resolutions
- Compatible with worldwide power and regulatory requirements
- Cable-management arm comes preinstalled on the rear of the console unit
- Can install an optional console switch behind the console unit on the same slide-rails
- Can install an optional IBM Common Access Card (CAC) Reader in the console unit
- Can be shipped installed in an IBM rack (two shipping screws are required to secure the console unit to the rack)


1. Racks are measured in vertical increments of 44 mm (1.75 inches) each. Each increment is called a “U.” A 1U-high device is 44 mm (1.75 inches) tall.

Inventory checklist

Note: The illustrations in this documentation might differ slightly from your hardware.


The console kit contains the following items:

- One console unit with built-in flat-panel display and cable-management arm (A 1 m power cord is routed along the cable-management arm and is secured with cable straps.)

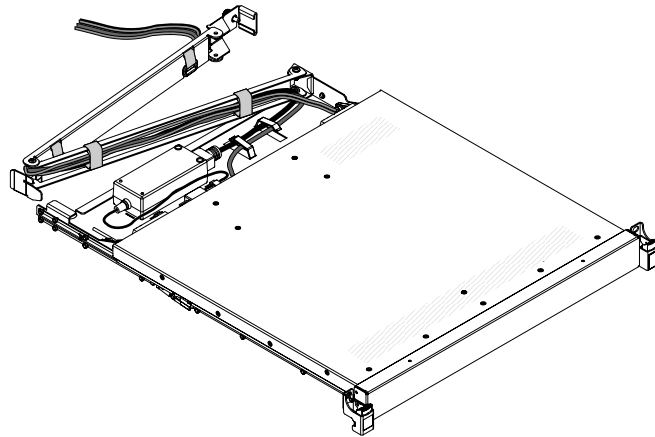


Important: The ac adapter that is connected to the flat-panel display is not intended for use with other products. Do not disassemble the flat-panel display or remove the ac adapter.

- Two slide-rails

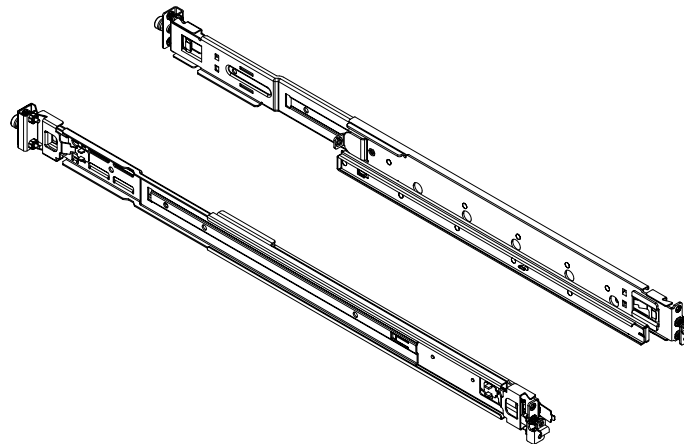

- Two console-switch mounting brackets, one with a channel (for routing the power, video, and keyboard-and-mouse cables) and six screws

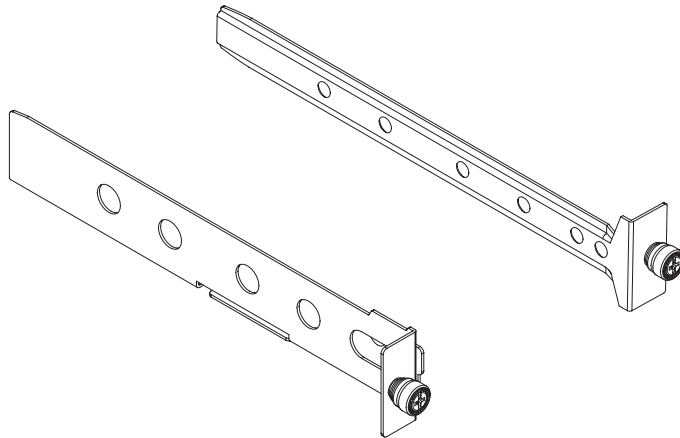

- One 2.8 m (9 ft) IEC connector power cord



- Bag with M5 clip nuts, M5 stability screws, and M5 shipping screws
- IBM *Documentation* CD

You need the following tools to replace customer replaceable units:

- One #1 Phillips screwdriver (to install or remove the inner slide-rails)
- One #2 Phillips screwdriver (to unscrew the shipping screws from the rack if you move the rack to another location; to replace the cable-management arm)

See the documentation that comes with your rack or console switch for more information about those products.

The IBM Documentation CD

The IBM *Documentation* CD contains documentation for the console unit in Portable Document Format (PDF) and includes the IBM Documentation Browser to help you find information quickly.

Hardware and software requirements

The IBM *Documentation* CD requires the following minimum hardware and software:

- Microsoft Windows XP, Windows 2000, or Red Hat Linux
- 100 MHz microprocessor
- 32 MB of RAM
- Adobe Acrobat Reader 3.0 (or later) or xpdf, which comes with Linux operating systems

Using the Documentation Browser

Use the Documentation Browser to browse the contents of the CD, read brief descriptions of the documents, and view documents, using Adobe Acrobat Reader or xpdf. The Documentation Browser automatically detects the regional settings in use in your server and displays the documents in the language for that region (if available). If a document is not available in the language for that region, the English-language version is displayed.

Use one of the following procedures to start the Documentation Browser:

- If Autostart is enabled, insert the CD into the CD or DVD drive. The Documentation Browser starts automatically.
- If Autostart is disabled or is not enabled for all users, use one of the following procedures:
 - If you are using a Windows operating system, insert the CD into the CD or DVD drive and click **Start --> Run**. In the **Open** field, type
`e:\win32.bat`

where *e* is the drive letter of the CD or DVD drive, and click **OK**.
 - If you are using Red Hat Linux, insert the CD into the CD or DVD drive; then, run the following command from the `/mnt/cdrom` directory:
`sh runlinux.sh`

Select the console unit from the **Product** menu. The **Available Topics** list displays all the documents for the console unit. Some documents might be in folders. A plus sign (+) indicates each folder or document that has additional documents under it. Click the plus sign to display the additional documents.

When you select a document, a description of the document is displayed under **Topic Description**. To select more than one document, press and hold the Ctrl key while you select the documents. Click **View Book** to view the selected document or documents in Acrobat Reader or xpdf. If you selected more than one document, all the selected documents are opened in Acrobat Reader or xpdf.

To search all the documents, type a word or word string in the **Search** field and click **Search**. The documents in which the word or word string appears are listed in order of the most occurrences. Click a document to view it, and press Ctrl+F to use the Acrobat search function, or press Alt+F to use the xpdf search function within the document.

Notices and statements in this document

The caution and danger statements in this document are also in the multilingual *Safety Information* document. Each statement is numbered for reference to the corresponding statement in the *Safety Information* document.

The following notices and statements are used in this document:

- **Note:** These notices provide important tips, guidance, or advice.
- **Important:** These notices provide information or advice that might help you avoid inconvenient or problem situations.
- **Attention:** These notices indicate potential damage to programs, devices, or data. An attention notice is placed just before the instruction or situation in which damage might occur.
- **Caution:** These statements indicate situations that can be potentially hazardous to you. A caution statement is placed just before the description of a potentially hazardous procedure step or situation.
- **Danger:** These statements indicate situations that can be potentially lethal or extremely hazardous to you. A danger statement is placed just before the description of a potentially lethal or extremely hazardous procedure step or situation.

Console unit specifications

The following sections provide the console unit specifications.

Rail-to-rail depth measurements

The console unit fits in a rack with the front to rear rail dimensions as shown in the following table. The console unit dimensions are measured outside-to-outside and are for IBM and non-IBM racks with unthreaded and threaded holes.

Table 1. Console unit rack post distances

Rack configuration	Rack post distances
No console switch	688 - 985 mm (27.1 - 38.8 in.)
Provision for a console switch	785 - 985 mm (30.9 - 38.8 in.)

Dimensions and weight


The following table describes the console unit dimensions and weight.

Table 2. Console unit dimensions and weight

Height	44 mm (1.75 in.) (display in stored position)
Width	434 mm (17 in.) (main chassis only, slide-rails not included, faceplate not included)
Depth	510 mm (20 in.) (chassis behind EIA mounting flange, bezel in front of EIA flange not included, cable-management arm not included)
Bezel depth	35 mm (1.4 in.) (including latches and IBM Logo)
Bezel width	482 mm (19 in.) (including latches)
Maximum forward extension	650 mm (25.6 in.)
Weight	12.9 kg (28.5 lb)

Dual USB 2.0 pass through

The dual USB 2.0 pass through is on the right front of the console unit.

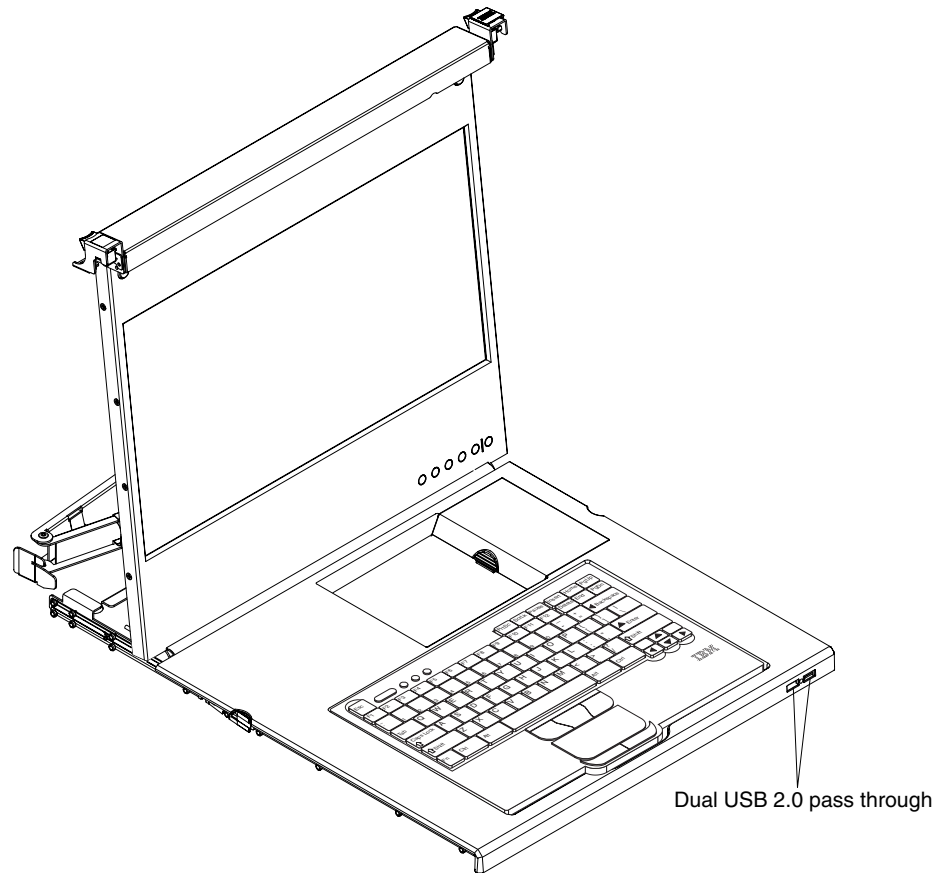

The following table shows the USB 2.0 compatibility and speed.

Table 3. USB 2.0 compatibility and speed

Device target	USB 1.1 target	USB 2.0 target
USB 1.1 device	12 megabits per second	12 megabits per second
USB 2.0 device	12 megabits per second	480 megabits per second

Note: USB 3.0 devices and targets will work in the pass through; however, speed is limited.

Chapter 2. Installing the console unit in the rack

The console unit occupies 1U of mounting space in a rack. To install the console unit in the rack, complete the steps in the following sections. Removing the rack doors and side panels, and removing the rack devices that are above and below where you want to install the console unit, might make installation easier.

See the documentation that comes with your rack for additional information.

Guidelines for rack mounting the console unit:

- Elevated operating ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment might be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
- Reduced air flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- Mechanical loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- Circuit overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- Reliable earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (for example, use of power strips).



DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

(R001 part 1 of 2)



CAUTION:


- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- (For sliding drawers): Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- (For fixed drawers): This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001 part 2 of 2)

Installing the keyboard in the console unit


To install the keyboard in the console unit, complete the following steps:

1. Place the console unit on a table or other flat surface and make sure that the right side of the unit extends approximately 76 mm (3 in.) over the edge of the surface. This will help you route the keyboard-and-mouse cable more easily later in the procedure.
2. Carefully lift the front of the flat-panel display to the full upright position.

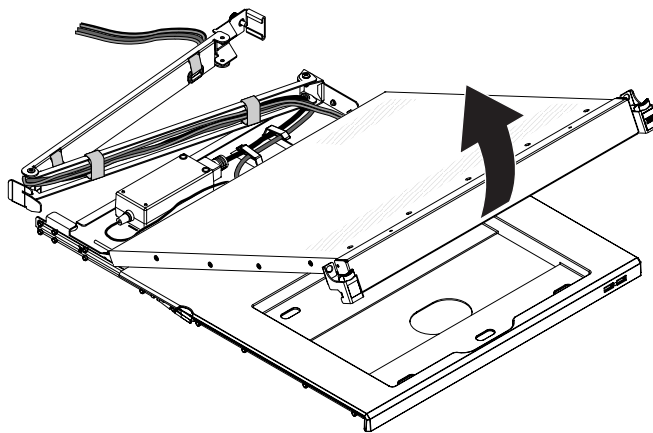


Attention: Do not extend the keyboard feet. The flat-panel display screen might be damaged if the feet are extended when the display is closed.

3. To remove the CAC reader blank, press the side of the blank **1** and then pull it up **2**. Set the blank aside.

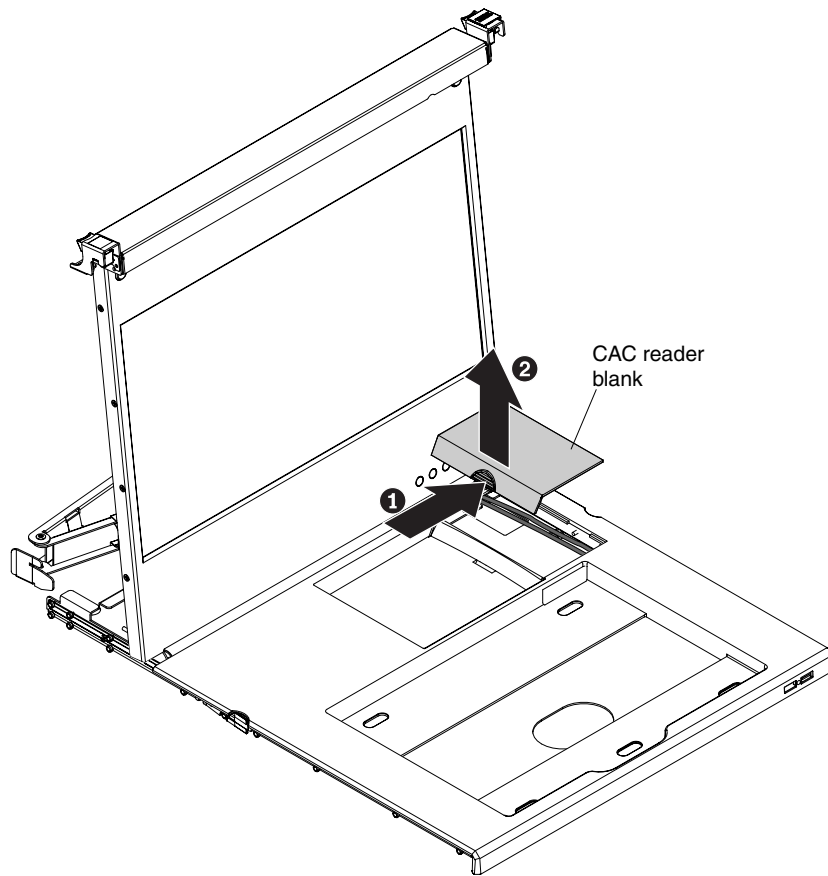


4. Hold the keyboard near the keyboard tray and carefully route the keyboard-and-mouse cable through the keyboard tray cutout and through the cutout that is near the flat-panel display. (See the illustration.) Carefully pull the cable through the cutouts. If you are installing a Common Access Card (CAC) reader later in the procedure, make sure that the keyboard-and-mouse cable is routed along the right side of the opening.

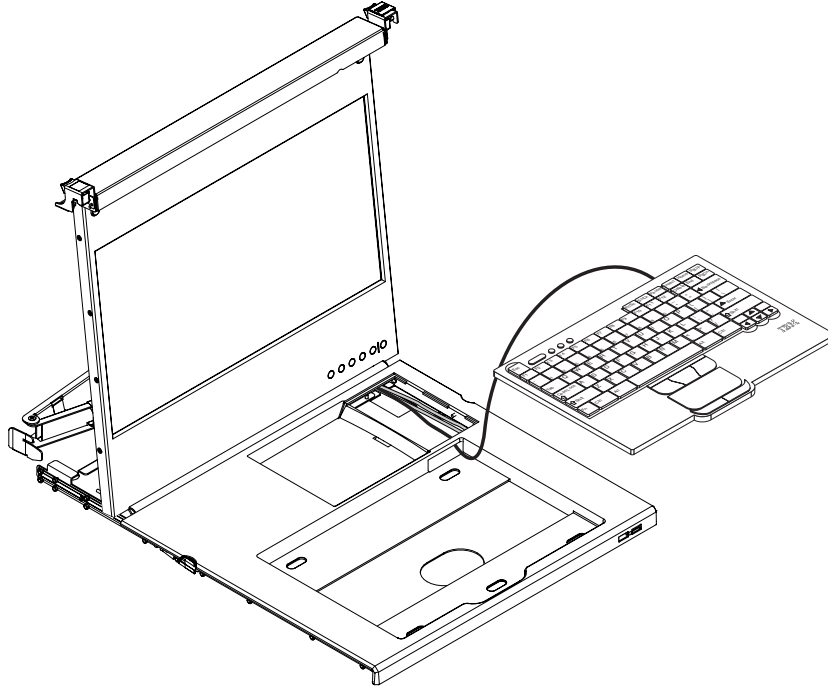

5. Peel the backing of the double-sided foam tape that is preinstalled on the front of the console tray.
6. Place the keyboard in the tray and exert a small amount of pressure on the keyboard to secure it to the double-sided tape.

7. If you are installing a CAC reader, go to step 2 on page 28 in “Installing an optional IBM Common Access Card Reader” on page 27. Otherwise, position the CAC reader blank over the opening and press it into place.

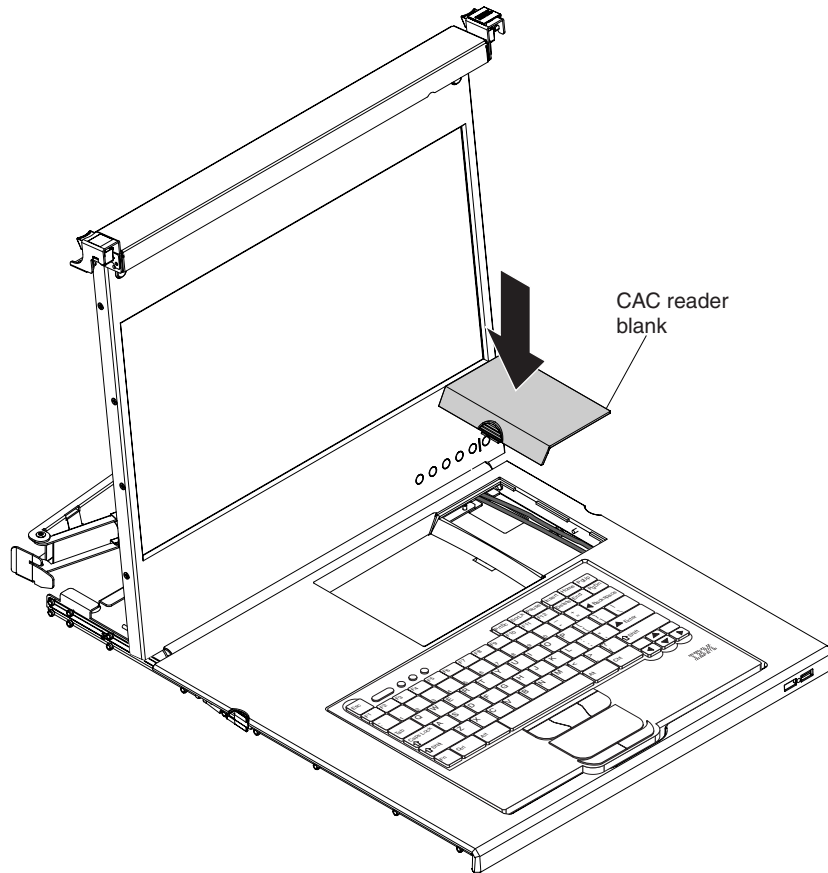

8. Close the flat-panel display.

Attention:

- When you route the keyboard-and-mouse cable, make sure that the cable does not hang below the underside of the keyboard where it might be damaged if it interferes with the devices in the rack space below the console unit.
 - Make sure that you route all cables through the cable-routing features on the console frame behind the display and along the cable-management arm.
9. Route the cable along the cable-management arm, securing the cables with the hook-and-loop fastener strips.

Installing the console unit in the rack

Review the documentation that comes with your rack for safety and cabling information. When you install your system in a rack, observe the following guidelines:


- Make sure that the room air temperature is below 35°C (95°F).
- Do not block any air vents; usually 15 cm (6 in.) of air space provides proper airflow.
- Plan the device installation starting from the bottom of the rack.
- Install the heaviest device in the bottom of the rack.
- Do not extend more than one device out of the rack at the same time.
- Connect all power cords to properly wired and grounded electrical outlets.
- Do not overload the power outlet when you install multiple devices in the rack.
- You can install the outer slide-rails in a square-hole rack, round-hole rack, or threaded-hole rack and no tools are required.

To install the console unit in the rack, complete the following steps:


1. Place the console unit on a stable, flat surface.

Attention: The video cable is connected to the flat-panel display. As you install the console unit in the rack, be careful that you do not pinch or cut the video cable.

2. Select a 1U location in the rack for the console unit.
3. Remove the shipping screw from each outer slide-rail.

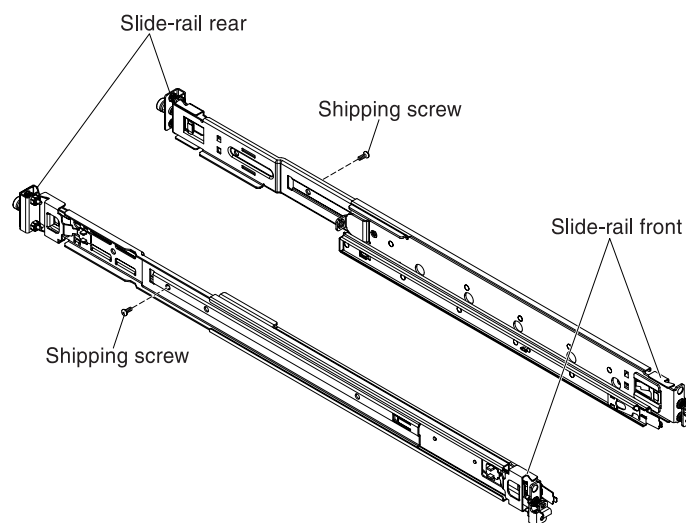


4. **(For non-threaded hole racks)** Install an M5 clip nut in the front of the rack in the top hole of the U-space position that you select. The clip nuts are in the bag of screws that come with the console unit.

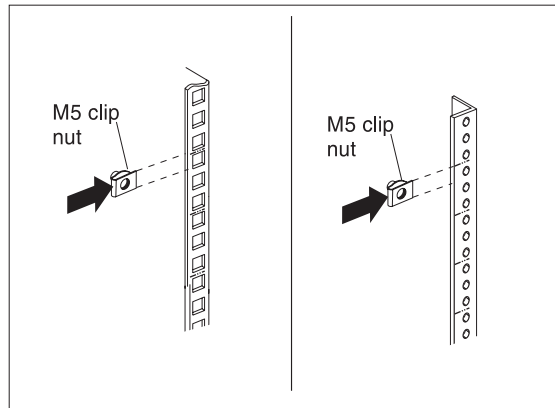


5. To attach the outer slide-rail to the rack, complete the following steps.

Note: Install the rear slide-rail bracket on the rear of the rack first; then, install the front slide-rail bracket on the front of the rack.

- Holding the slide-rail horizontally, align the rear slide-rail bracket so that the bracket is on the outside of the rack mounting flanges.
- Press the rear slide-rail bracket toward the rack flange and then pull it towards the front of the rack until the locking bracket clicks into place behind the rack flange.

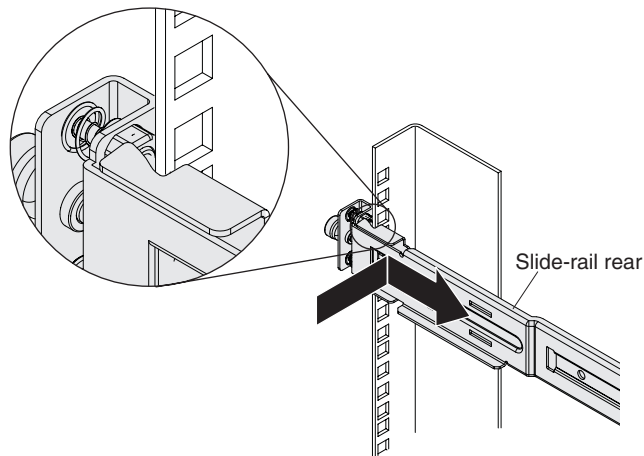


- c. Extend the slide-rail and press the front slide-rail bracket toward the rack flange and then push it toward the rear of the rack until the locking bracket clicks into place behind the rack flange.

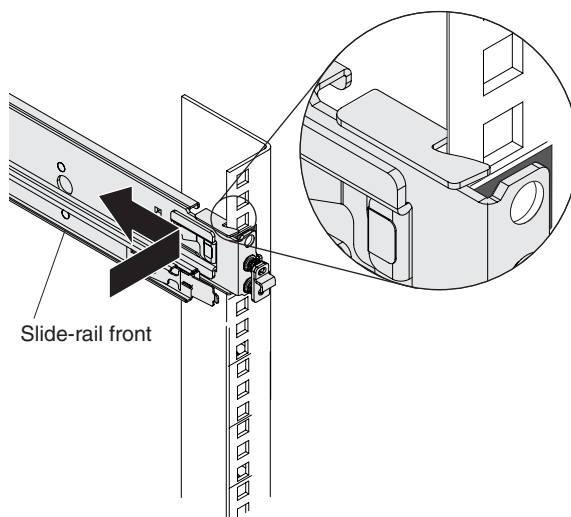


- d. Repeat steps 5a on page 16 to 5c to attach the other outer slide-rail.


Note: Make sure that the two pins in the slide-rail brackets are pressed completely into the rack holes and that the bracket is flush with the rack flange. You might have to move the slide-rail up and down several times, and press the end of the bracket to release the pins so that they are correctly in the holes in the rack flange.

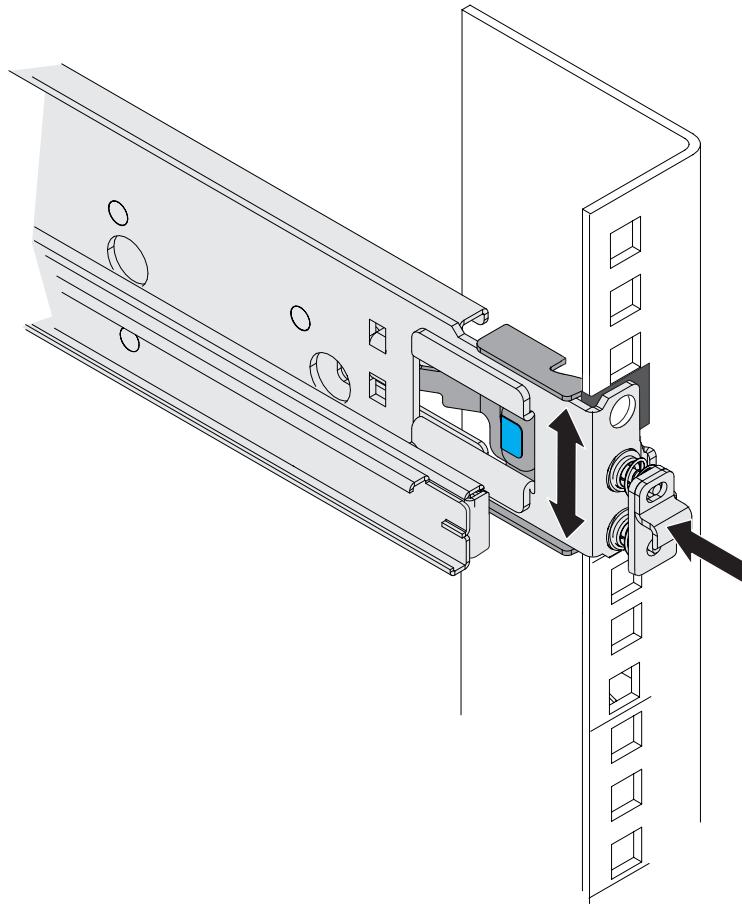

6. **(Optional for all racks)** To secure the slide-rails to the rack, install an M5 flat-head stabilizer screw in the top hole on the front of each slide-rail.

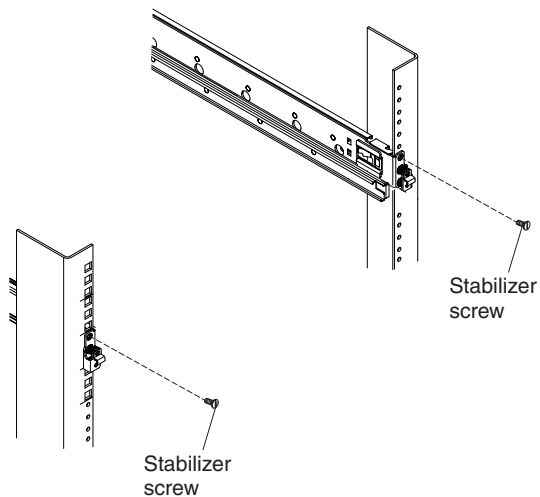

7. Extend the inner part of the outer slide-rails and slide them forward to the front of the outer rails. Carefully slide the rollers on the console unit into the notch in the slide-rails as shown in the illustration. Continue sliding the unit into the rack until the side latches on the slide-rails engage and you hear a click.

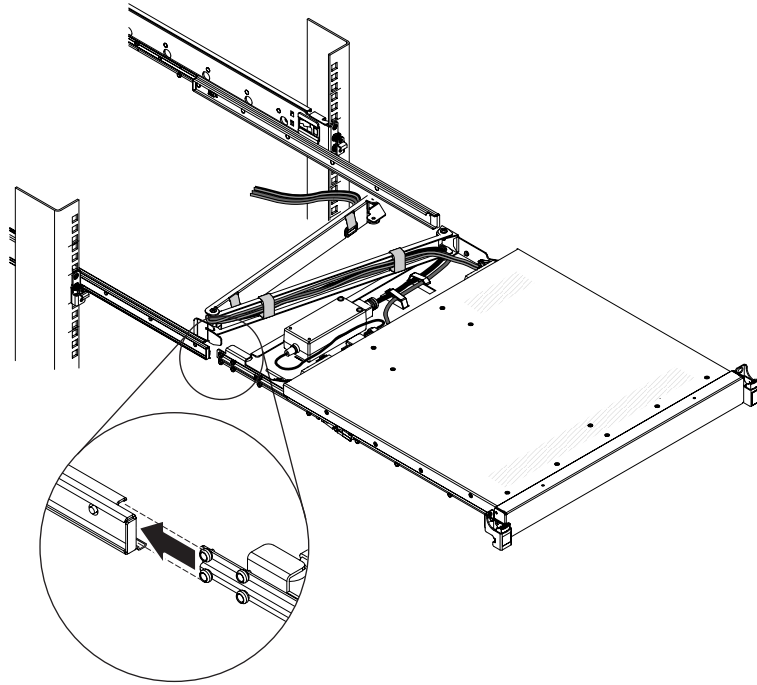


L012




CAUTION:
Pinch hazard. (L012)

8. Press in both release latches **1** ; then, grasp both sides of the console unit and push it completely into the rack **2** . Be careful that you do not pinch your fingers when you release the latches.

There will be resistance initially as the inner and outer rails are aligned. Pull the console unit out halfway, and then push it back in to seat the console unit in the rails. Do this a few times until the console unit moves smoothly in the rails.

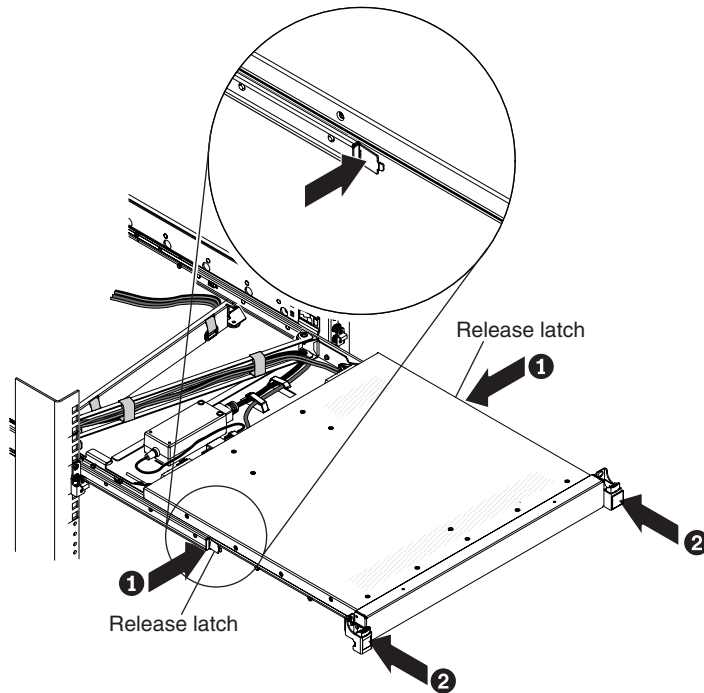

9. On the right rail, align the C-channel on the end of the cable-management arm with the bracket on the outer slide-rail. Slide the C-channel onto the bracket until the cable-management arm thumbscrew aligns with the hole in the bracket. Tighten the thumbscrew.

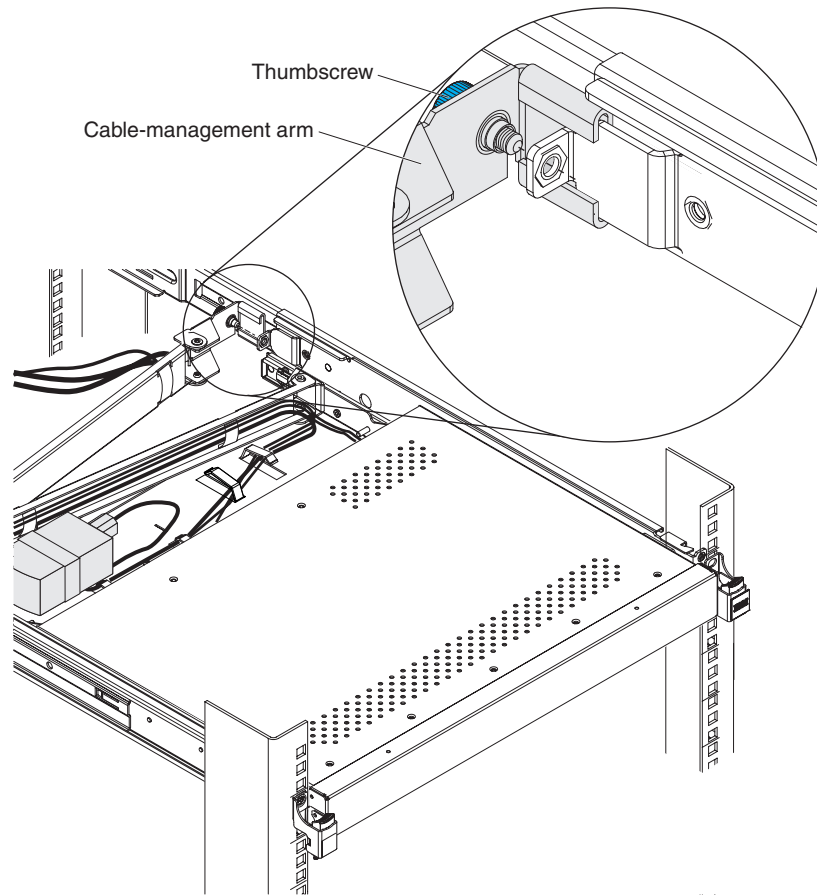


10. Connect all cables to either a server or a console switch in the rack. Connect the power cord to the short jumper cord on the cable-management arm, and then connect the power cord to a properly grounded electrical outlet or power distribution unit (PDU).


For information about installing a console switch behind the console unit in the rack, see “Installing an optional console switch” on page 25.

11. Fully extend the console unit from the front of the rack, and then neatly route the cables within the rack and secure them with cable straps along the way.


Important: If you have excess video cable, do not coil it as shown in the following illustration.

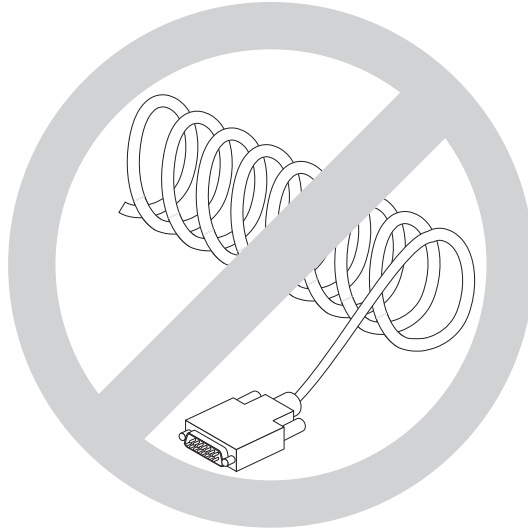

To minimize the electrical interference if you have excess video cable, arrange the cable in figure-eight loops, as shown in the following illustration. Secure the cable in the middle with a cable tie or strap.

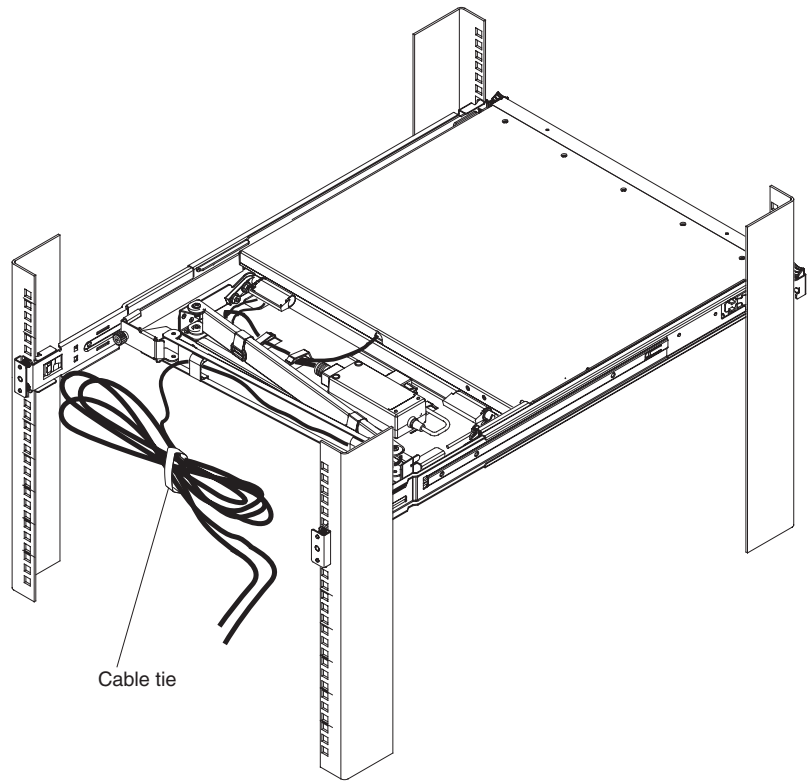

Before you move a rack with a console unit to another location, secure the front of the console unit to the rack with two M5 shipping screws that come in the bag of screws (see the illustration).

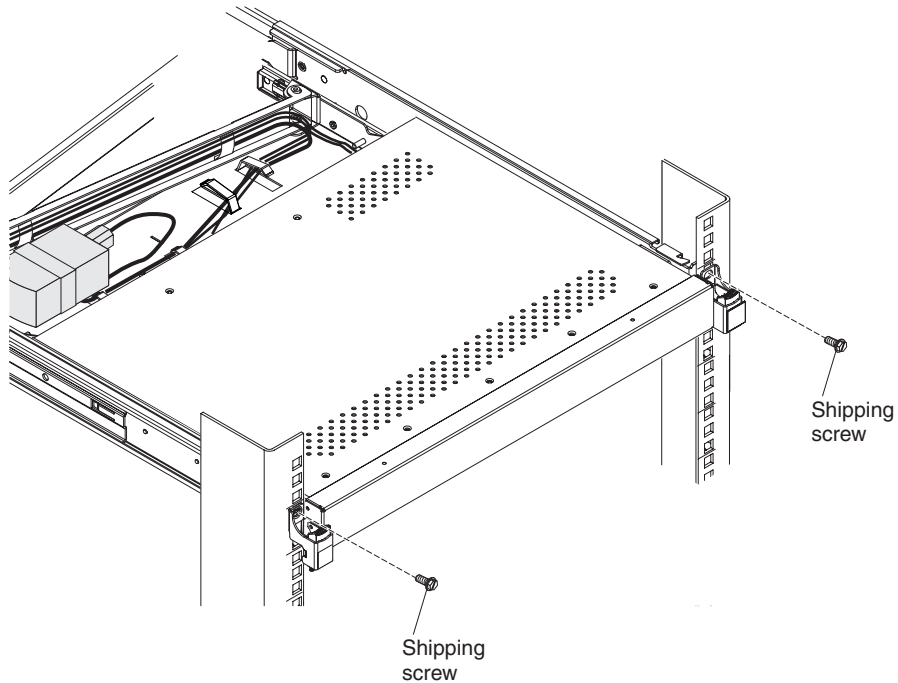

See Chapter 3, "TFT-LCD display" for information about operating the display. See the keyboard documentation for information about operating the keyboard.

Installing an optional console switch

You can use a console switch to attach more than one server to a single display and keyboard. The optional console switch is available separately.

Depending on the depth of the console switch and the depth of the rack, you might be able to mount a console switch behind the console unit in the same 1U space. To mount the console switch behind the console unit, use the custom mounting brackets that come with the console unit.

Use the brackets and instructions that come with the console switch for other installation options.

Important: The console switch extends beyond the rear rack-cabinet mounting flanges when you install the switch behind the console unit.


Notes:

1. In this procedure, *left* and *right* refer to orientations as you are facing the rear of the rack.
2. The console switch mounting brackets come in the miscellaneous hardware kit.
3. The mounting brackets have several pre-drilled holes and can support most console switch designs.


To install a console switch behind the console unit, complete the following steps.

1. Attach the mounting bracket with channel to the left side of the console switch, using two 8-32 screws, and then attach the other mounting bracket to the right side of the console switch. Make sure that you correctly align the holes in the bracket with the console switch bracket holes.

Note: The mounting bracket that you attach to the left side of the console switch has a channel through which you can route the power, video, and keyboard-and-mouse cables. Make sure that you attach the bracket to the console switch so that the channel on the mounting bracket faces upward.

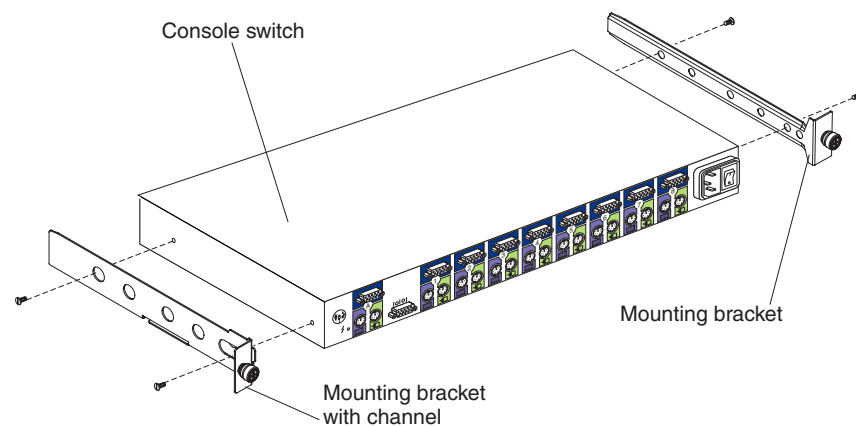

2. Install the console switch behind the console unit, making sure that the front switch brackets are in front of the rack flanges. Tighten the two thumbscrews to secure the switch to the rack.

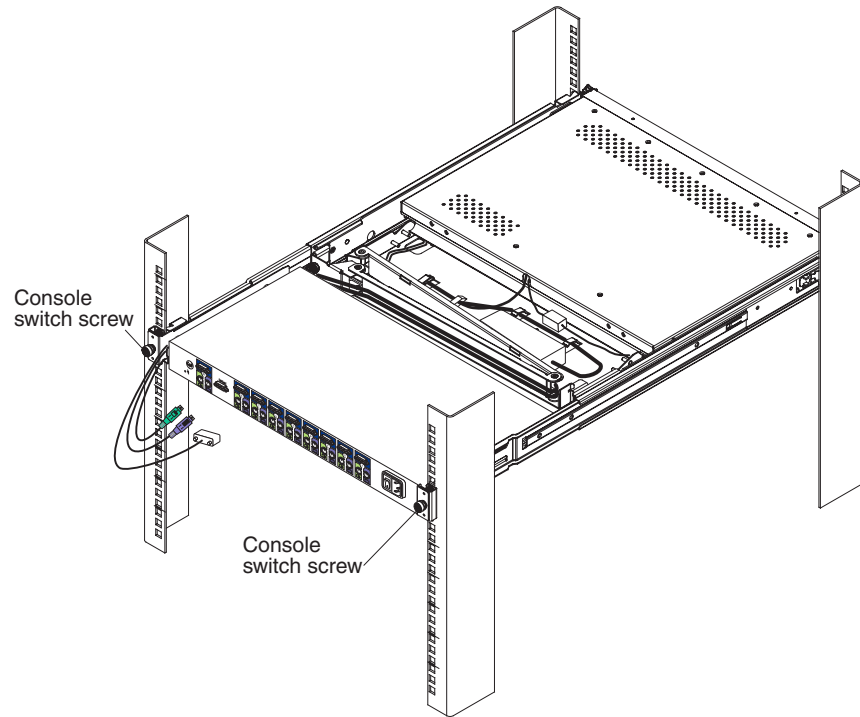


3. Route the power, video, and keyboard-and-mouse cables through the channel in the mounting bracket on the left side of the console switch, and then connect the video, keyboard, and mouse connectors to the console switch.
4. See the documentation that comes with the console switch for information about connecting the flat-panel display, thin keyboard, and servers to the console switch.

Installing an optional IBM Common Access Card Reader


The IBM Common Access Card Reader is installed in the rear right side of the console unit. The Common Access Card (CAC) reader is purchased separately.

To install the CAC reader in the console unit, complete the following steps.


1. To remove the CAC reader blank, press the side of the blank **1** and then pull it up **2**. Set the blank aside. Make sure that the keyboard-and-mouse cable is pushed to the right side of the opening where the CAC reader is installed so that the cable does not interfere with the CAC reader.

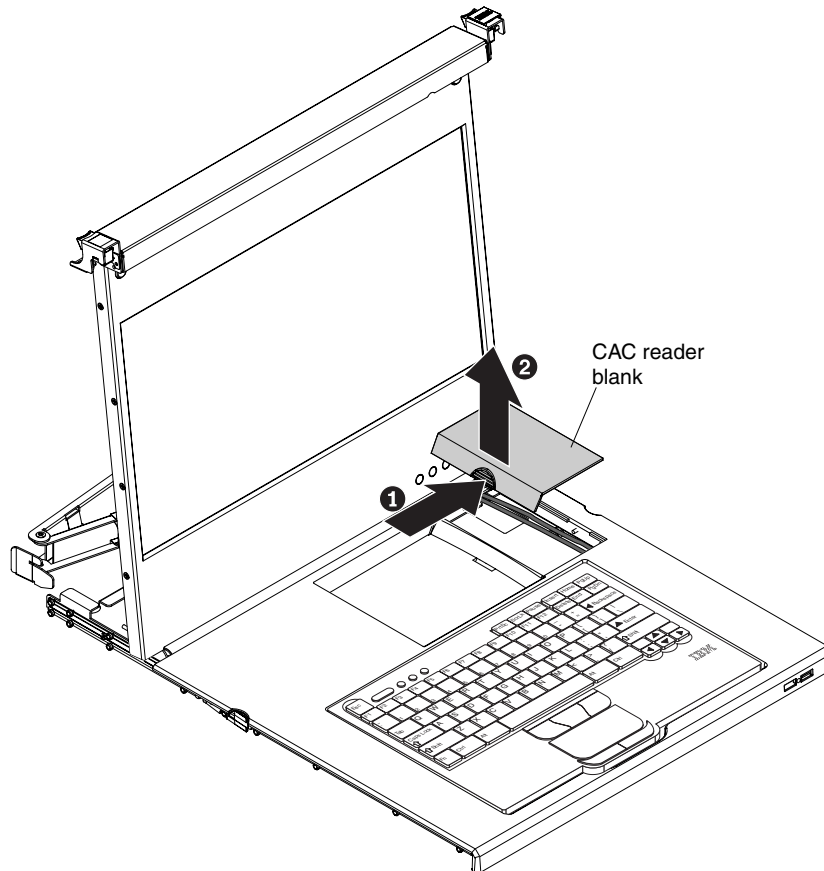

2. Hold the CAC reader near the right rear of the console unit and carefully route the CAC reader cable through the cutout that is near the flat-panel display.

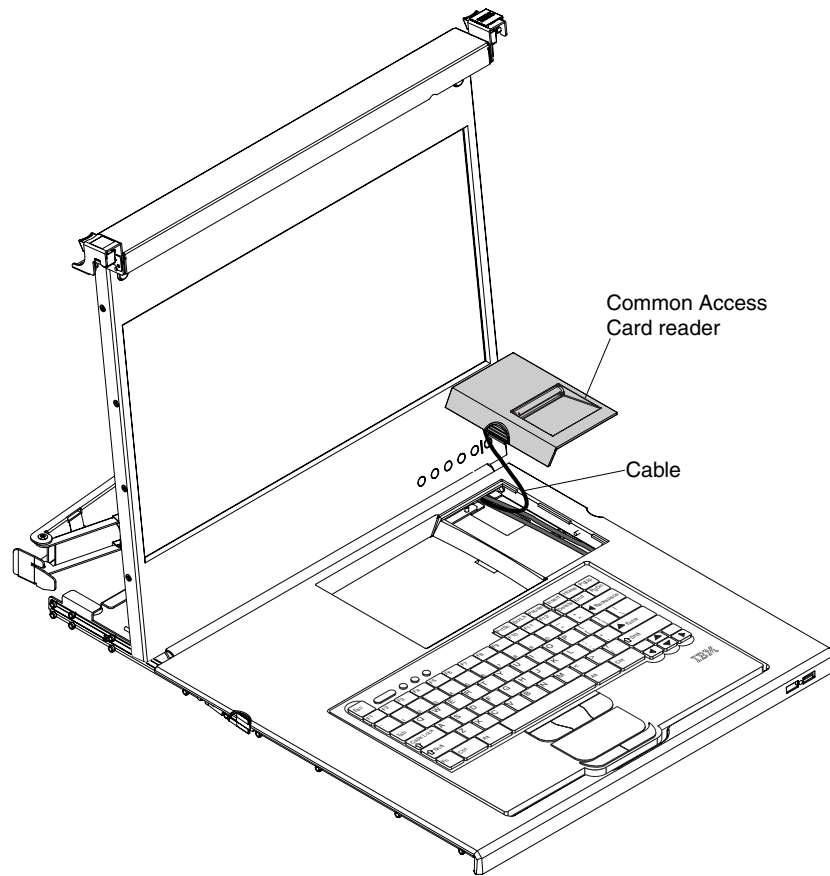

3. Carefully pull the cable through the cutouts as you slide the two tabs on the right side of the CAC reader into the slots on the console unit frame **1**. Then, rotate the left side down and into place until it clicks and latches into the console unit **2**.

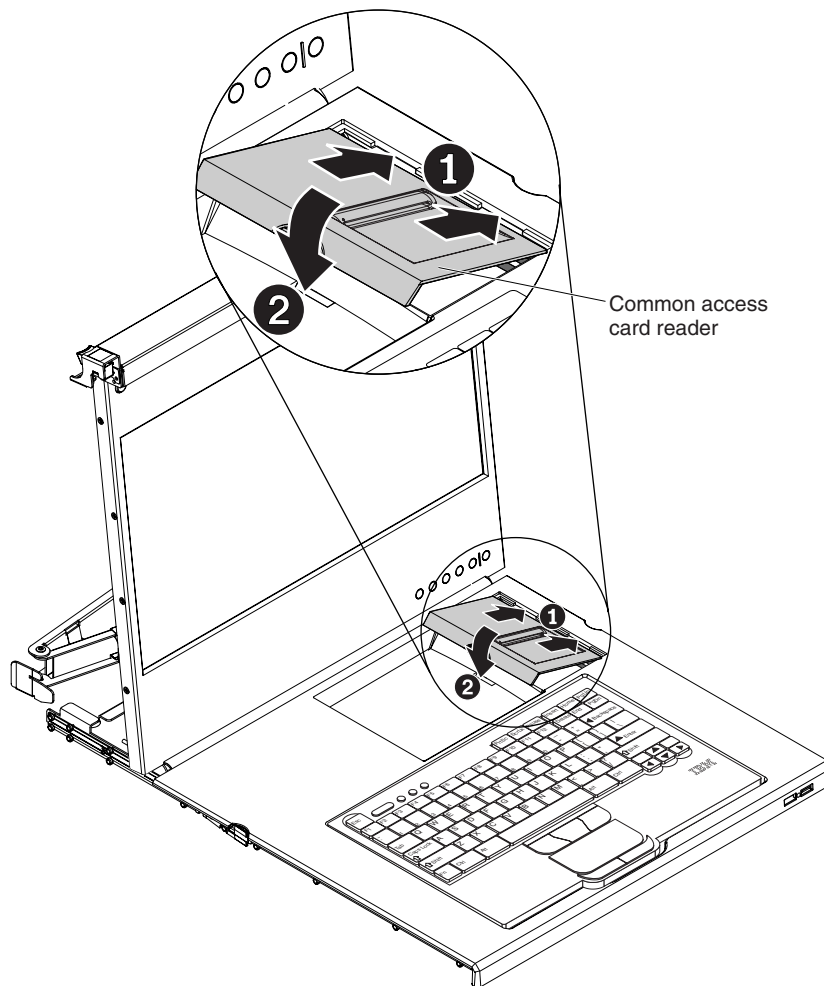

4. Route the CAC reader cable through the cable-management arm; then, connect the cable to the target device.

Chapter 3. TFT-LCD display


This chapter contains basic information about using the TFT-LCD display. For most applications, the factory default settings on the display do not require adjustment.

Using the on-screen display (OSD) menu

Use the OSD menu to adjust the characteristics of the image that is being displayed.

Using the control buttons

The control buttons on the lower right of the LCD display are shown in the following illustration.

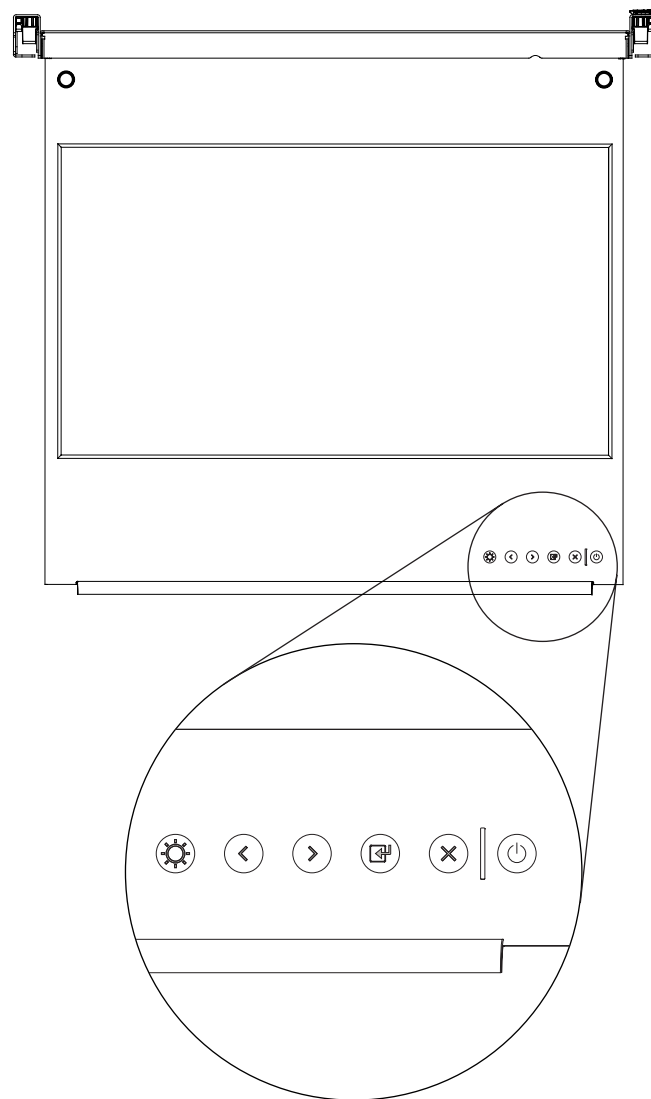


- **Brightness/Contrast (⚙):** Press this button to access the controls.
- **Left arrow and right arrow buttons (◀ ▶):**
 - Press the right arrow button to select the function that is to be adjusted.
 - Press the left arrow or right arrow button to decrease or increase the value of the selected adjustment or to select the correct setting.

- **Exit button:** Press this button to exit the menu or return 1 level in the menu.
- **Select/Menu button:** Press this button to access, select, or confirm a menu option.
- **Power button:** Press this button to turn on and turn off the display power. This indicator shows the status of the display operation:
 - Green: Normal operation
 - Flashing green: Standby power
 - Black: Power is off

Using the display menu

To activate the display menu, press the **Select/Menu** button. The Main menu is displayed.

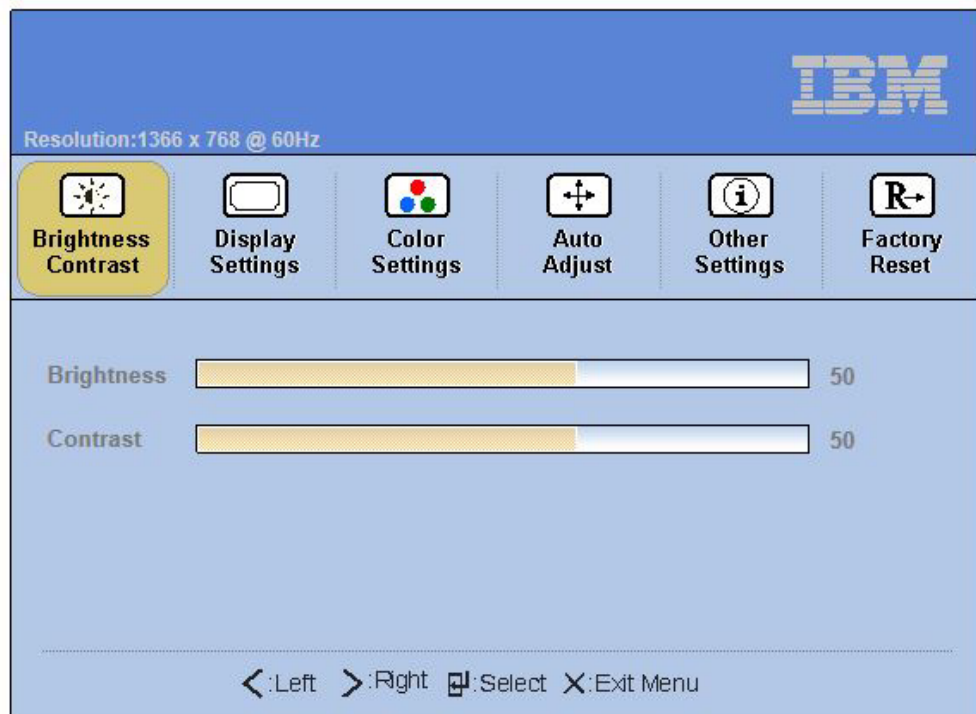

The menu choices are described in the following list:

- **Brightness/Contrast**
 - **Brightness** - Brightness Slider Default 50, incremental adjustment by 0 from 1 - 100
 - **Contrast** - Contrast Slider Default 50, incremental adjustment by 0 from 1 - 100
- **Display Settings**
 - **Wide Mode**
 - **1:1** - Uses exact pixel count from video controller
 - **Aspect** - Uses pixel ratio but scales to largest available picture
 - **Fill** - Default. Scales incoming image to utilize full screen
 - **Horizontal Position** - Screen picture adjustment - Default at 50 Center of the Screen, incremental adjustment by 1 pixel from 0 - 100
 - **Vertical Position** - Screen picture adjustment - Default at 50 Center of the Screen, incremental adjustment by 1 pixel from 0 - 100

- **Sharpness** - Visual reference to light and dark - Default 50, incremental adjustment by 10 from 0 - 100
- **Pixel Clock** - Analog input control - Default Panel Dependent
- **Phase** - Analog input control - Default Panel Dependent
- **Display Info** - Display Resolution and Refresh Rate
- **Reset Display settings** - Reset Display Settings to Factory Default - confirmation required
- **Color Settings**
 - **Standard**
 - **Warm**
 - **Cool**
 - **Custom Color** - If selected, the following RGB default values are displayed:
 - **Red** - Default 50, incremental adjustment by 1, from 0 - 100
 - **Blue** - Default 50, incremental adjustment by 1, from 0 - 100
 - **Green** - Default 50, incremental adjustment by 1, from 0 - 100
 - **Reset Color Settings** - Resets color to factory default - confirmation required
- **Auto Adjust** - Auto adjustment - confirmation required
- **Other Settings**
 - **Language**
 - **English** - Converts OSD UI into local language chosen by user (default language)
 - **Spanish** - Converts OSD UI into local language chosen by user
 - **French** - Converts OSD UI into local language chosen by user
 - **German** - Converts OSD UI into local language chosen by user
 - **Japanese** - Converts OSD UI into local language chosen by user
 - **Korean** - Converts OSD UI into local language chosen by user
 - **Simpl Chinese** - Converts OSD UI into local language chosen by user
 - **Menu Timer** Sliding scale by 5 second increments, from 5 to 100 - default is 20
 - **DDC/CI** On/Off - default is On
 - **LCD Conditioning** On/Off - default is Off
 - **Reset** Reset Other settings to Factory Default - confirmation required
- **Factory Reset** - Reset all settings to default

Maintaining the TFT-LCD display

Statement 8:



CAUTION:

Never remove the cover on a power supply or any part that has the following label attached.



Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

Before you perform any maintenance on the display, turn off the power. Observe the following guidelines when you clean the display:

- Gently wipe the device covers and the screen with a soft cloth.
- Remove finger marks and grease with a damp cloth and mild detergent; do not use solvents or abrasives.
- Never use flammable cleaning material to clean an IBM display or any other electronic device.

Technical specifications

The technical specifications for the console unit are described in the following list.

LCD panel

Size	18.5-inch diagonal
Display area (horizontal x vertical)	409.8 x 230.4 mm
Type	TFT active matrix
Pixel pitch (horizontal x vertical)	300 x 300 per triad

Characteristics

Brightness	250 cd /m2 (Typ.)
Contrast ratio	1000:1 (Typ.)
Display color	16.7 M colors
Viewing Angle	Horizontal - 170° Vertical - 160°

Aspect Ratio	16:9 (Native)
Scaling	1:1, Aspect and Fill

Display resolution

Optimum mode	1366 x 768 at 60 Hz
Maximum mode	1600 x 1200 at 60 Hz

Note: For the supported display resolutions, see Appendix A, “Supported resolution timing charts,” on page 81.

Connector	VGA
-----------	-----

Power supply	ac 100 - 240 V, 47 - 63 Hz dc 12 V/ 3.3 A max
---------------------	--

Power consumption

Standard usage	17 watts
Maximum	22 watts
Power supply maximum	40 watts
Power saving	Less than 1 watt

Environmental conditions

Operating temperature	0°C to 50°C
Operating humidity	10% to 80%
Operating altitude	Maximum 3000 meters

Storage temperature	-20°C to +60°C
Storage humidity	5% to 95%
Storage altitude	Maximum 3000 meters

Chapter 4. Hardware maintenance information

This chapter contains information about IBM customer-replaceable units (CRUs) for the console unit and instructions for replacement parts.

Replaceable components

Field replaceable units (FRUs) must be replaced only by a trained service technician, unless they are classified as customer replaceable units (CRUs).

Tier 1 CRU: Replacement of Tier 1 CRUs is your responsibility. If IBM installs a Tier 1 CRU at your request without a service contract, you will be charged for the installation.

Tier 2 CRU: You may install a Tier 2 CRU yourself or request IBM to install it, at no additional charge, under the type of warranty service that is designated for your product.

For more information about the terms of the warranty and getting service and assistance, see the *Warranty Information* document that comes with the optional device.

IBM CRU part numbers are subject to change without notice. This section contains a listing of the CRU part numbers that are available as of the date of this document was written.

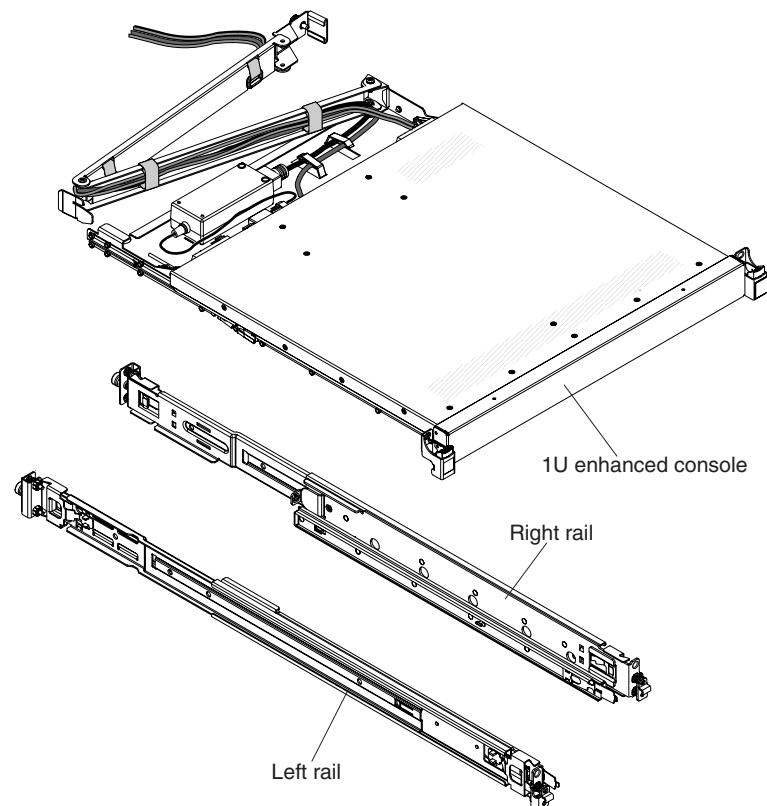


Table 4. Field replaceable units for the IBM 1U 18.5-inch Enhanced Media Console

Description	CRU part number (Tier 1)
IBM 1U 18.5-inch Enhanced Media Console, without keyboard	47C2522
Enhanced slide-rail kit (inner and outer rails)	47C2520
Cable-management arm	44X3114
IBM Common Access Card Reader	95Y2354
UltraSlim Enhanced SATA multi-burner drive	44W3256
Miscellaneous parts kit (includes CAC reader blank door, shipping screws, console switch mounting brackets and mounting screws)	44X3120
Power cord that connects the power supply to a power distribution unit (PDU)	39M5377

You need the following tools to replace customer replaceable units:

- One #1 Phillips screwdriver (to install or remove the inner slide-rails)
- One #2 Phillips screwdriver (to replace the cable-management arm)

Power cords

付属の電源コードセットはこの装置専用です。他の機器には使用しないでください。

For your safety, IBM provides a power cord with a grounded attachment plug to use with this IBM product. To avoid electrical shock, always use the power cord and plug with a properly grounded outlet.

IBM power cords used in the United States and Canada are listed by Underwriter's Laboratories (UL) and certified by the Canadian Standards Association (CSA).

For units intended to be operated at 115 volts: Use a UL-listed and CSA-certified cord set consisting of a minimum 18 AWG, Type SVT or SJT, three-conductor cord, a maximum of 15 feet in length and a parallel blade, grounding-type attachment plug rated 15 amperes, 125 volts.

For units intended to be operated at 230 volts (U.S. use): Use a UL-listed and CSA-certified cord set consisting of a minimum 18 AWG, Type SVT or SJT, three-conductor cord, a maximum of 15 feet in length and a tandem blade, grounding-type attachment plug rated 15 amperes, 250 volts.

For units intended to be operated at 230 volts (outside the U.S.): Use a cord set with a grounding-type attachment plug. The cord set should have the appropriate safety approvals for the country in which the equipment will be installed.

IBM power cords for a specific country or region are usually available only in that country or region.

IBM power cord part number	Used in these countries and regions
39M5206	China
39M5102	Australia, Fiji, Kiribati, Nauru, New Zealand, Papua New Guinea

IBM power cord part number	Used in these countries and regions
39M5123	Afghanistan, Albania, Algeria, Andorra, Angola, Armenia, Austria, Azerbaijan, Belarus, Belgium, Benin, Bosnia and Herzegovina, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, Central African Republic, Chad, Comoros, Congo (Democratic Republic of), Congo (Republic of), Cote D'Ivoire (Ivory Coast), Croatia (Republic of), Czech Republic, Dahomey, Djibouti, Egypt, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Finland, France, French Guyana, French Polynesia, Germany, Greece, Guadeloupe, Guinea, Guinea Bissau, Hungary, Iceland, Indonesia, Iran, Kazakhstan, Kyrgyzstan, Laos (People's Democratic Republic of), Latvia, Lebanon, Lithuania, Luxembourg, Macedonia (former Yugoslav Republic of), Madagascar, Mali, Martinique, Mauritania, Mauritius, Mayotte, Moldova (Republic of), Monaco, Mongolia, Morocco, Mozambique, Netherlands, New Caledonia, Niger, Norway, Poland, Portugal, Reunion, Romania, Russian Federation, Rwanda, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, Slovakia, Slovenia (Republic of), Somalia, Spain, Suriname, Sweden, Syrian Arab Republic, Tajikistan, Tahiti, Togo, Tunisia, Turkey, Turkmenistan, Ukraine, Upper Volta, Uzbekistan, Vanuatu, Vietnam, Wallis and Futuna, Yugoslavia (Federal Republic of), Zaire
39M5130	Denmark
39M5144	Bangladesh, Lesotho, Macao, Maldives, Namibia, Nepal, Pakistan, Samoa, South Africa, Sri Lanka, Swaziland, Uganda
39M5151	Abu Dhabi, Bahrain, Botswana, Brunei Darussalam, Channel Islands, China (Hong Kong S.A.R.), Cyprus, Dominica, Gambia, Ghana, Grenada, Iraq, Ireland, Jordan, Kenya, Kuwait, Liberia, Malawi, Malaysia, Malta, Myanmar (Burma), Nigeria, Oman, Polynesia, Qatar, Saint Kitts and Nevis, Saint Lucia, Saint Vincent and the Grenadines, Seychelles, Sierra Leone, Singapore, Sudan, Tanzania (United Republic of), Trinidad and Tobago, United Arab Emirates (Dubai), United Kingdom, Yemen, Zambia, Zimbabwe
39M5158	Liechtenstein, Switzerland
39M5165	Chile, Italy, Libyan Arab Jamahiriya
39M5172	Israel
39M5095	220 - 240 V Antigua and Barbuda, Aruba, Bahamas, Barbados, Belize, Bermuda, Bolivia, Brazil, Caicos Islands, Canada, Cayman Islands, Colombia, Costa Rica, Cuba, Dominican Republic, Ecuador, El Salvador, Guam, Guatemala, Haiti, Honduras, Jamaica, Japan, Mexico, Micronesia (Federal States of), Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Taiwan, United States of America, Venezuela
39M5081	110 - 120 V Antigua and Barbuda, Aruba, Bahamas, Barbados, Belize, Bermuda, Bolivia, Caicos Islands, Canada, Cayman Islands, Colombia, Costa Rica, Cuba, Dominican Republic, Ecuador, El Salvador, Guam, Guatemala, Haiti, Honduras, Jamaica, Mexico, Micronesia (Federal States of), Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Saudi Arabia, Thailand, Taiwan, United States of America, Venezuela
39M5219	Korea (Democratic People's Republic of), Korea (Republic of)
39M5199	Japan

IBM power cord part number	Used in these countries and regions
39M5068	Argentina, Paraguay, Uruguay
39M5226	India
39M5233	Brazil

Replacing the keyboard

Before you replace the keyboard, remove any devices that are directly above the console unit so that you have access to disconnect the cables. See the documentation that comes with the device for removal instructions.

You can also remove the console unit from the rack for easier cable access. See the instructions in “Removing the console unit from the rack” on page 55; then, return to step 5 in this procedure.

To replace a keyboard in the console unit, complete the following steps:

1. Close the flat-panel display.
2. Disconnect the keyboard-and-mouse cable from the server or console switch.
3. Carefully unfasten the hook-and-loop fastener strips from the cable-management arm and remove the keyboard-and-mouse cable.


L012



CAUTION: **Pinch hazard. (L012)**

4. Fully extend the console unit out of the rack.
5. Lift the front of the flat-panel display and raise the display to the full upright position.


6. To remove the CAC reader blank, press the side of the blank **1** and then pull it up **2**.

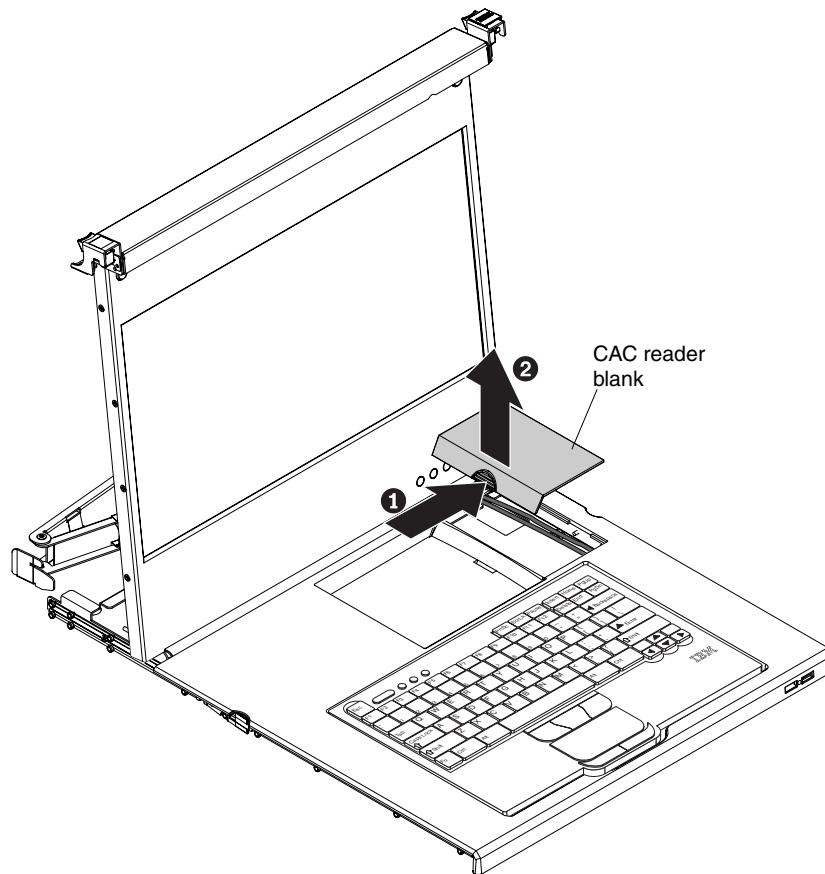

7. Remove the old keyboard from the console unit.
8. Unpack the replacement keyboard.


Attention: Do not extend the keyboard feet. The flat-panel display screen might be damaged if the feet are extended when the display is closed.

9. Hold the keyboard near the keyboard tray and carefully route the keyboard-and-mouse cable through the keyboard tray cutout and through the cutout that is near the flat-panel display. (See the illustration.) Carefully pull the cable through the cutouts.

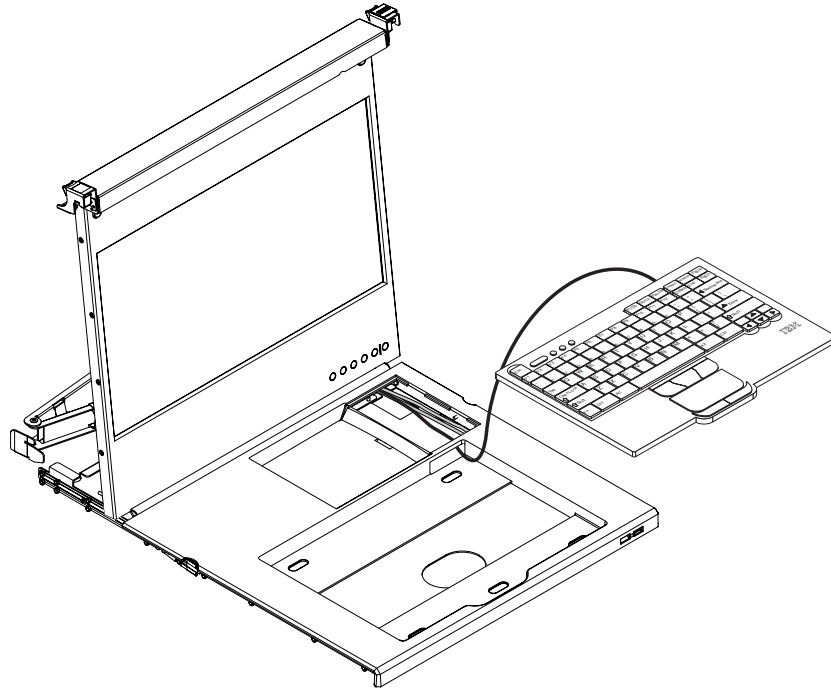

10. Place the keyboard in the tray and exert a small amount of pressure on the keyboard to secure it to the double-sided tape on the front of the console tray.

11. Position the CAC reader blank over the opening and press it into place.

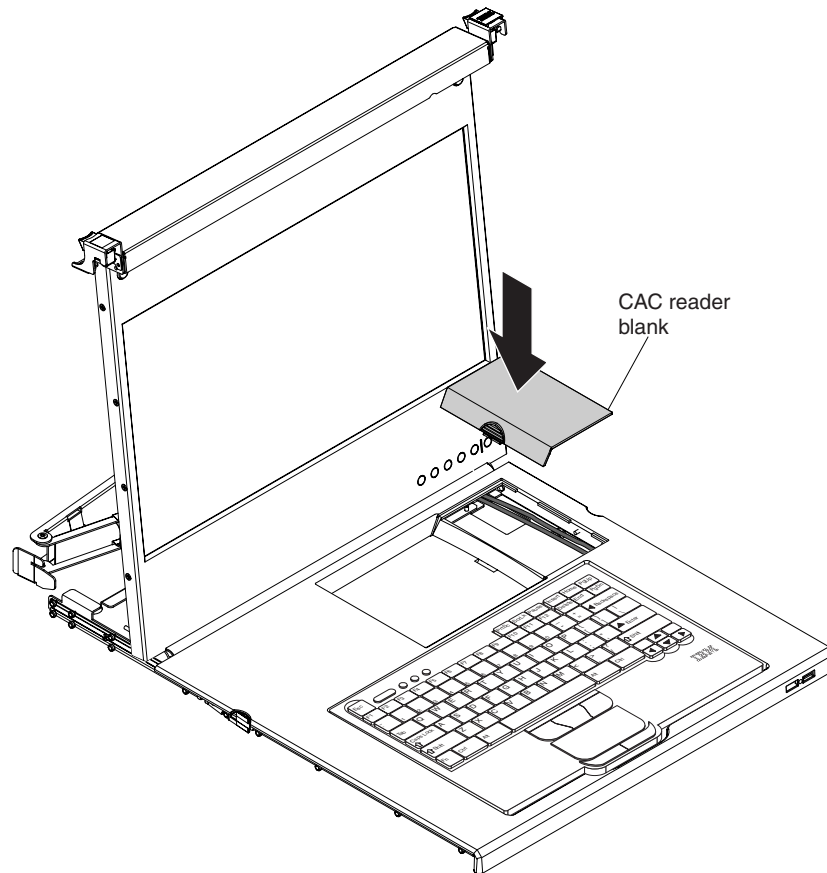

12. Close the flat-panel display.
13. If you removed the console unit from the rack, go to “Installing the console unit in the rack” on page 64 to complete the procedure.
Attention: When you route the keyboard-and-mouse cable, make sure that the cable does not hang below the underside of the keyboard where it might be damaged if it interferes with the devices in the rack space below the console unit.
14. Route the keyboard-and-mouse cable along the cable-management arm, securing the cable with the hook-and-loop fastener strips.
15. Reconnect the keyboard-and-mouse cable.


Replacing the cable-management arm

Before you replace the cable-management arm, remove any devices that are directly above and below the console unit so that you can disconnect the cables and detach the cable-management arm. See the documentation that comes with the device for removal instructions.

You can also remove the console unit from the rack for easier access. See the instructions in “Removing the console unit from the rack” on page 55; then, return to step 6 on page 46 in this procedure.


To replace the cable-management arm, complete the following steps:

1. If a console switch is installed behind the console unit, remove the console switch from the rack.
2. Turn off the display and disconnect the power cord from the short jumper cord on the cable-management arm from the electrical outlet or power distribution unit (PDU). Disconnect from the server or console switch any cables that are connected to the console unit (keyboard-and-mouse, video, and power cables).
3. Close the flat-panel display.
4. Remove the thumbscrew that attaches the cable-management arm to the outer slide-rail bracket. Slide the C-channel on the cable-management arm completely away from the outer slide-rail bracket.

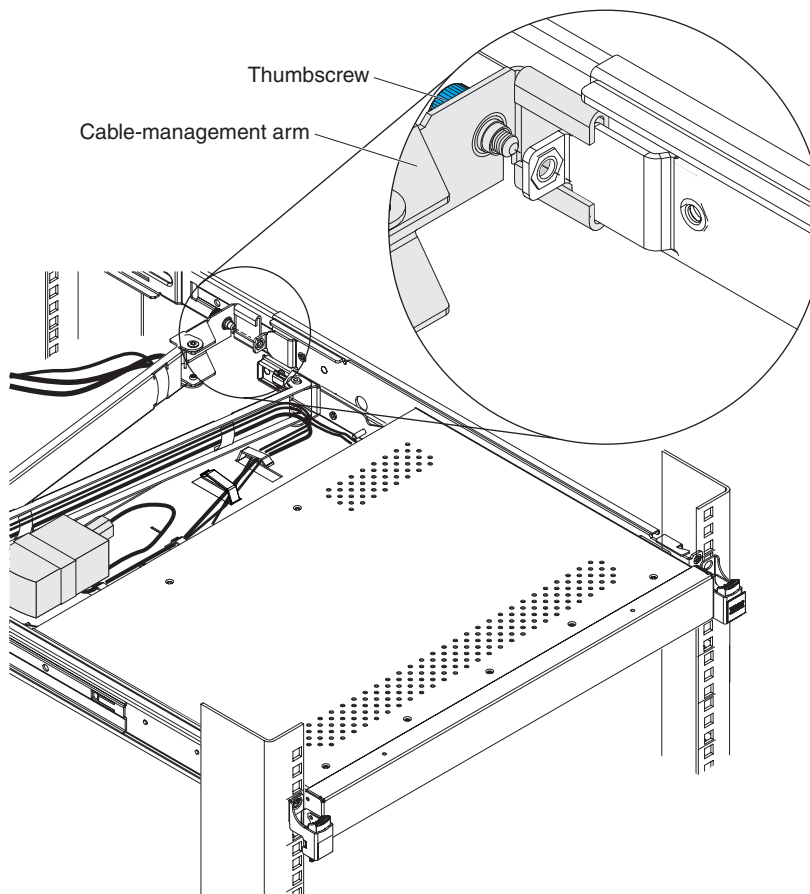


5. Temporarily remove all cables from the cable-management arm.

6. Remove the screw that attaches the front cable-management arm bracket to the console unit and then, remove the cable-management arm.

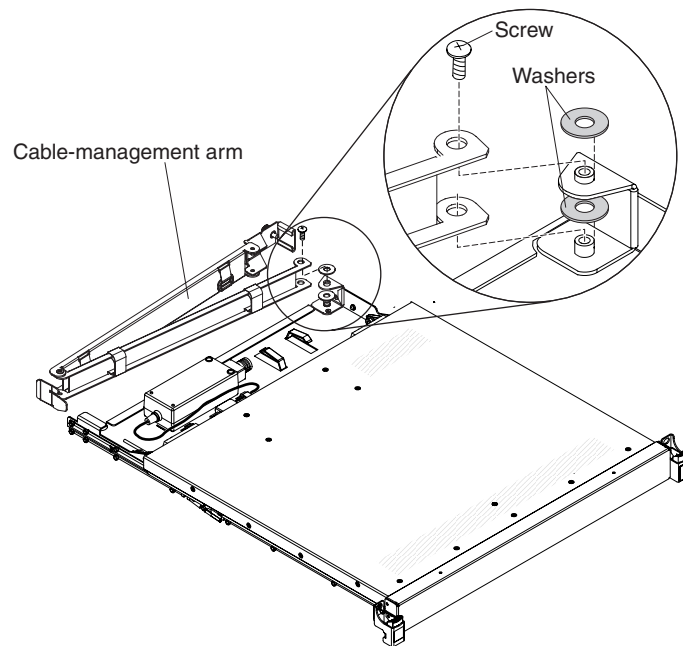

7. Unpack the replacement cable-management arm.
8. Remove the two washers on the cable-management arm bracket and replace them with the new washers that come with the replacement cable-management arm.
9. Align the screw holes in the new cable-management arm with the bracket and secure it with the screw that you removed in step 6.
10. If you removed the console unit from the rack, go to "Installing the console unit in the rack" on page 64 to complete the procedure.
11. Route the cables that you removed in step 2 on page 45 along the new cable-management arm and secure them along the way with the hook-and-loop fastener strips.

12. Align the C-channel on the end of the cable-management arm with the bracket on the outer slide-rail. Slide the C-channel onto the bracket until the cable-management arm thumbscrew aligns with the hole in the bracket. Tighten the thumbscrew.

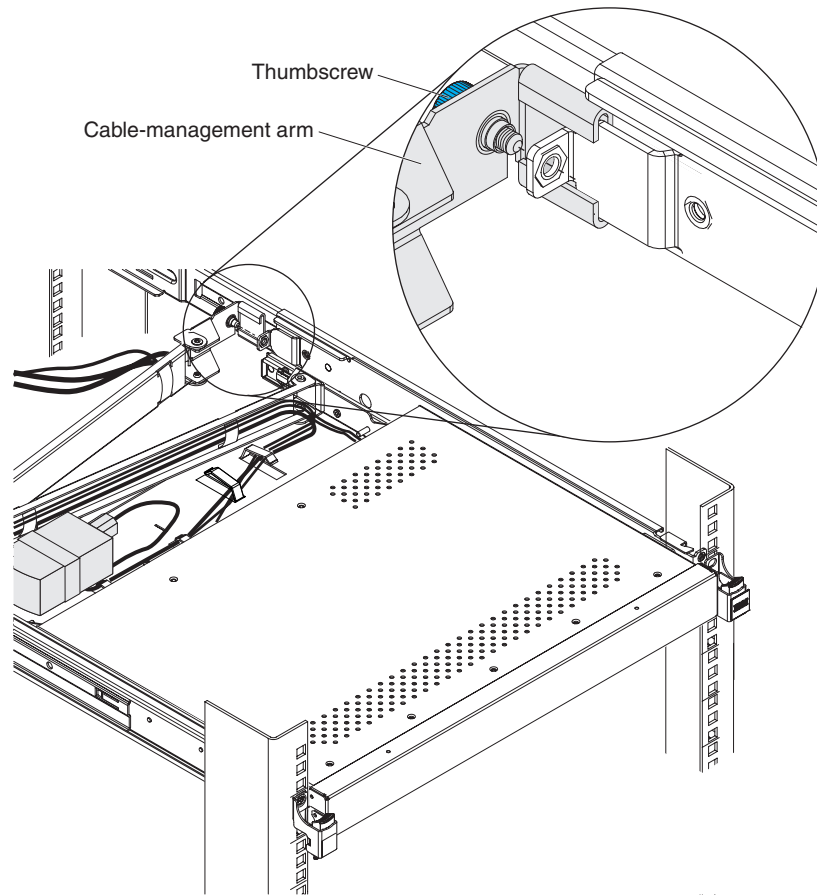


13. If you removed a console switch from behind the console unit, reinstall it now.
14. Reconnect to the server or console switch all cables that you removed in step 2 on page 45.
15. Connect power to the display.

Replacing the slide-rail assemblies

Note: To make sure that the slide-rail assemblies fit correctly, replace both the outer and inner slide-rails at the same time.

To replace the outer and inner slide-rails for the console unit, complete the following steps:

1. If a console switch is installed behind the console unit, remove the console switch from the rack.
2. Turn off the display and disconnect the power cord from the short jumper cord on the cable-management arm from the electrical outlet or power distribution unit (PDU). Disconnect from the server or console switch any cables that are connected to the console unit (keyboard-and-mouse, video, and power cables).
3. Close the flat-panel display.
4. Remove the console unit from the rack:
 - a. Remove the thumbscrew that attaches the cable-management arm to the outer slide-rail bracket. Slide the C-channel on the cable-management arm completely away from the outer slide-rail bracket.

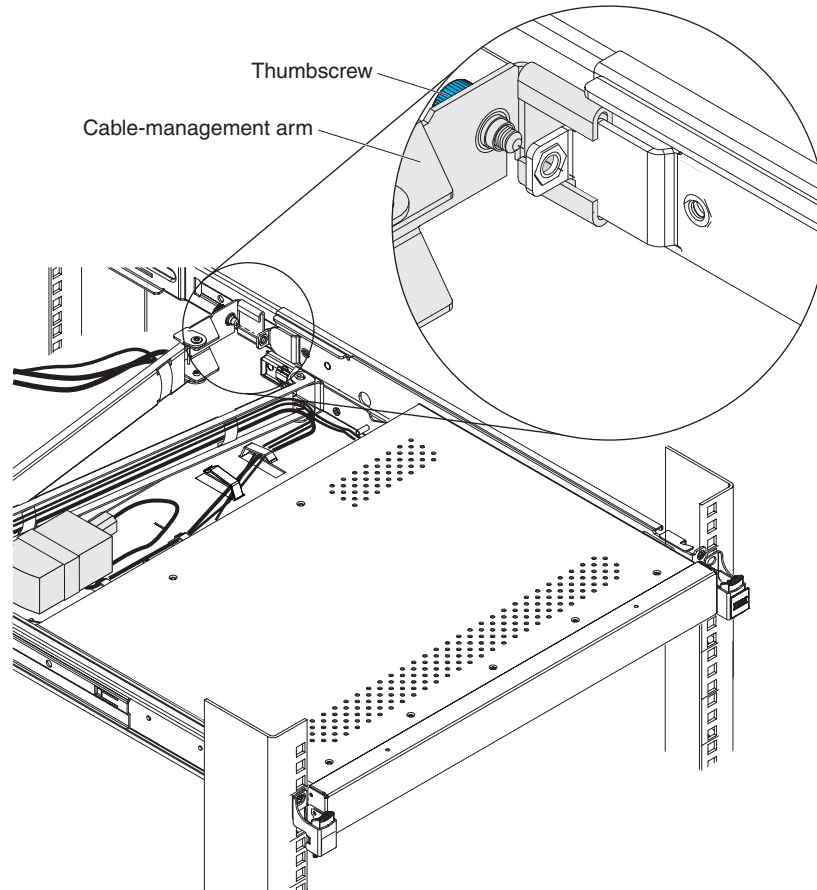


L012




CAUTION:
Pinch hazard. (L012)

- b. Fully extend the console unit out of the rack.
- c. Press in both release latches **1**.

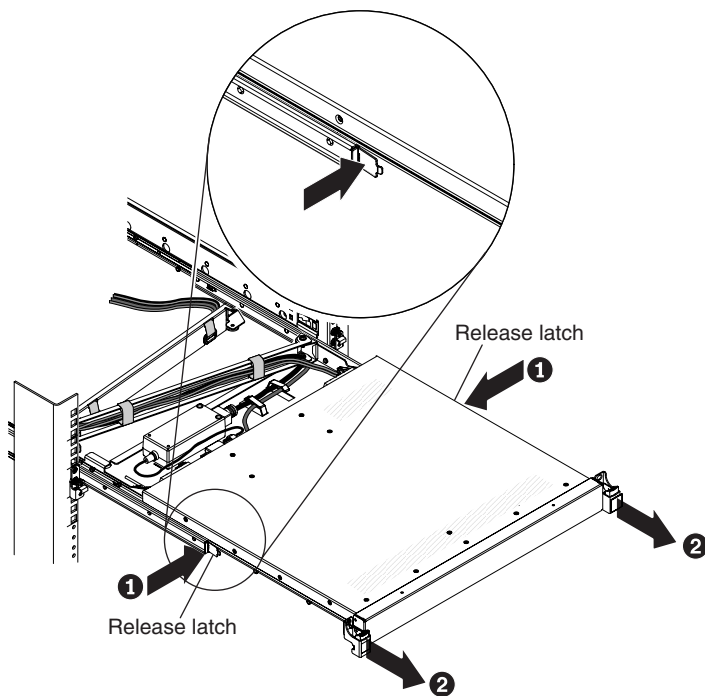


- d. Grasp both sides of the console unit and pull it completely out of the rack **2**.
- e. Place the console unit on a table or other flat surface.


5. To close the extended rails, press up on the release latch **1** and push the extended rail toward the rack so that it is fully closed **2**.

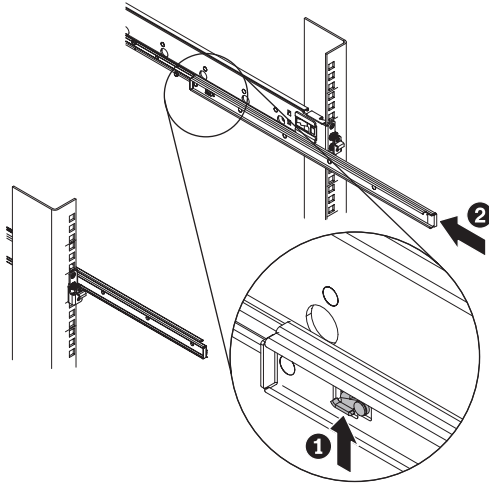


6. If you installed the optional flat-head stabilizer screws in the top hole on the front of each slide-rail, remove them and set them aside.

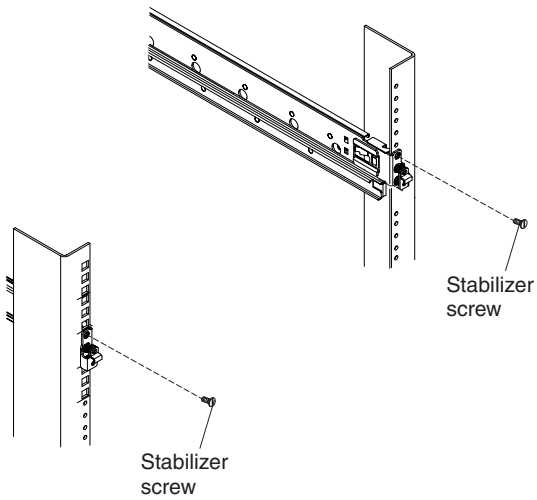

7. Remove the rear bracket of the outer slide-rail from the rack by pulling the blue tab out **1** while you move the end of the slide-rail away from the rack flange and toward the center of the rack **2**.

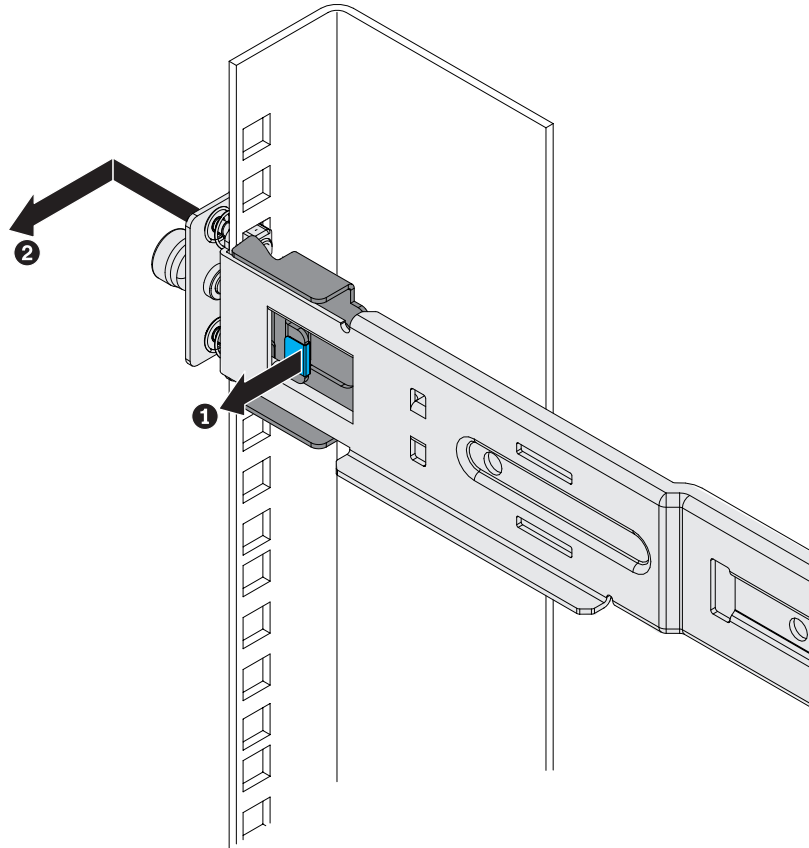


8. Remove the front bracket of the outer slide-rail from the rack by pulling the blue tab out **1** while you pull the end of the slide-rail away from the rack flange and toward the center of the rack **2**.

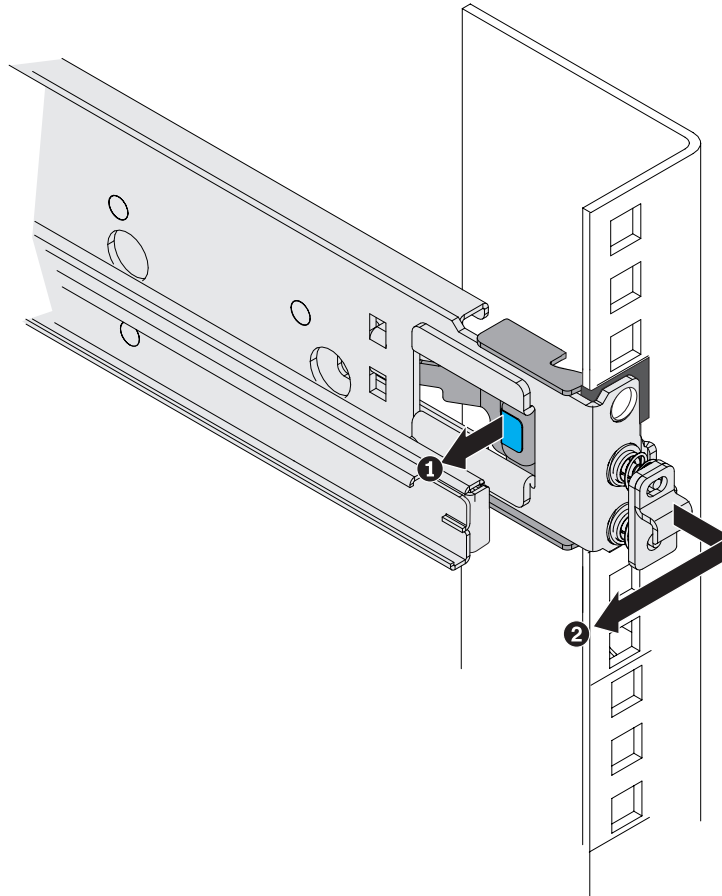

Repeat step 7 on page 51 and step 8 for the other outer slide-rail.


9. Remove the shipping screw from each new outer slide-rail.

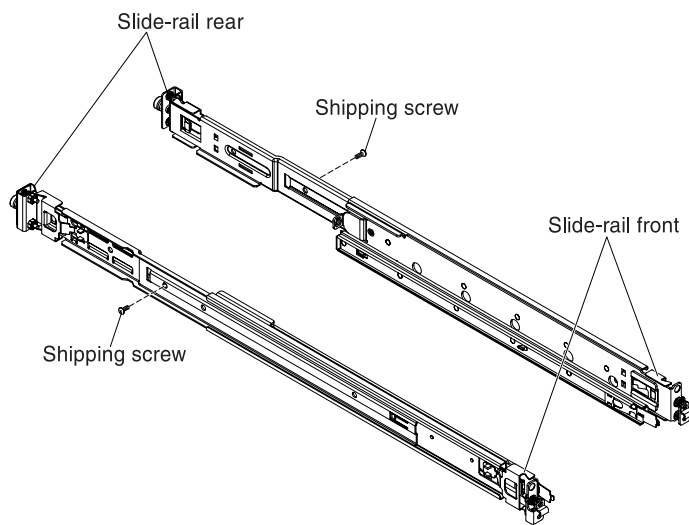


10. To attach the outer slide-rail to the rack, complete the following steps.

Note: Install the rear slide-rail bracket to the rear of the rack first; then, install the front slide-rail bracket to the front of the rack.

- a. Holding the slide-rail horizontally, align the rear slide-rail bracket so that the bracket is on the outside of the rack mounting flanges.
- b. Press the rear slide-rail bracket toward the rack flange and then pull it towards the front of the rack until the locking bracket clicks into place behind the rack flange.

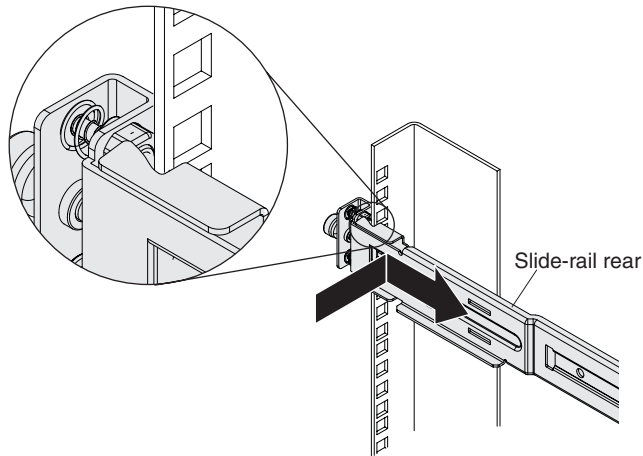


- c. Extend the slide-rail and press the front slide-rail bracket toward the rack flange and then push it towards the rear of the rack until the locking bracket clicks into place behind the rack flange.

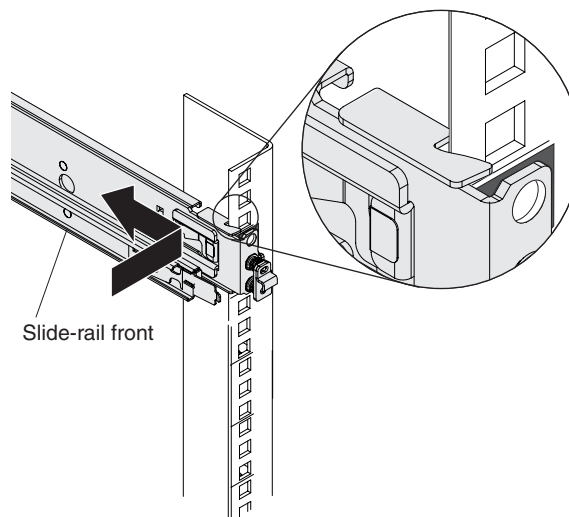

- d. Repeat steps 10a to 10c to attach the other outer slide-rail.
11. If you removed the stabilizer screws, install them.

12. Use a #1 Phillips screwdriver to remove the five screws that attach each inner slide-rail to the console unit. Then, attach the corresponding new inner slide-rails to the unit, using the same hardware. Make sure that you orient the inner slide rails correctly (see the illustration).

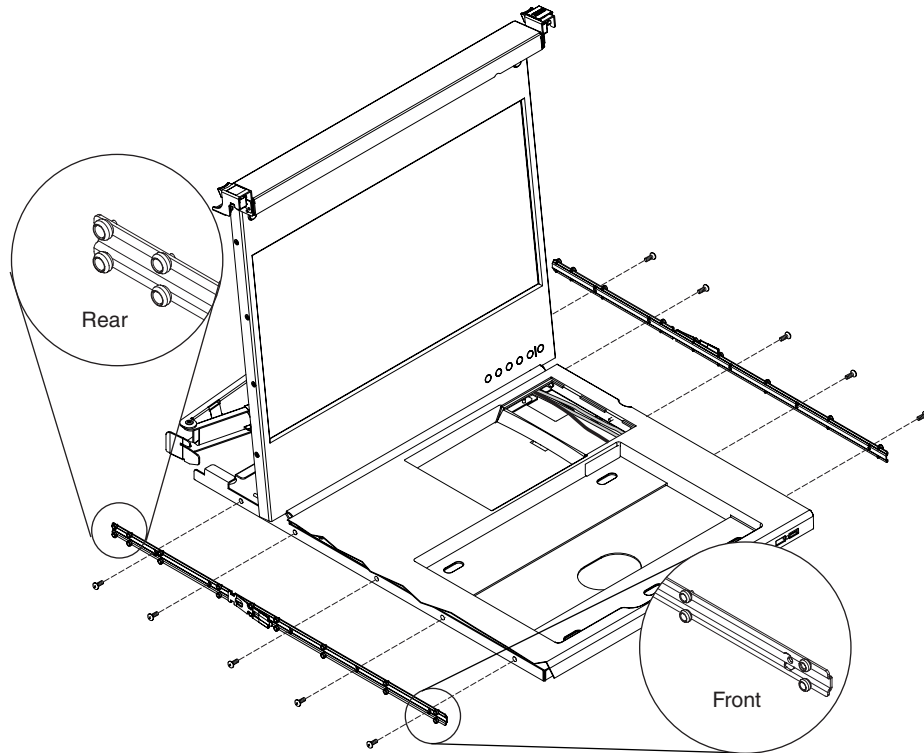

13. Go to “Installing the console unit in the rack” on page 64 for instructions for reinstalling the console unit in the rack, and then install any other devices that you removed from the rack.

Replacing the console unit

The procedures that are provided in this section to replace the console unit in the rack consist of the following tasks:

1. Removing the existing console unit from the rack
2. Moving the keyboard from the existing console unit to the replacement console unit
3. Removing and replacing the outer slide-rails

Note: The replacement console unit comes with inner slide-rails attached. To make sure that the slide-rail assemblies fit correctly, replace the existing outer slide-rails with the new rails that come with the replacement console unit.

4. Installing the replacement console unit in the rack


Removing the rack doors and side panels might make removal of the existing console unit and installation of the replacement easier. See the documentation that comes with the rack for additional information.

Removing the console unit from the rack

To remove the console unit from the rack, complete the following steps:

1. If a console switch is installed behind the console unit, remove the console switch from the rack.
2. Turn off the display and disconnect the power cord from the short jumper cord on the cable-management arm from the electrical outlet or power distribution unit (PDU). Disconnect from the server or console switch any cables that are connected to the console unit (keyboard-and-mouse, video, and power cables).
3. Close the flat-panel display.

4. Remove the console unit from the rack:
 - a. Remove the thumbscrew that attaches the cable-management arm to the outer slide-rail bracket. Slide the C-channel on the cable-management arm completely away from the outer slide-rail bracket.

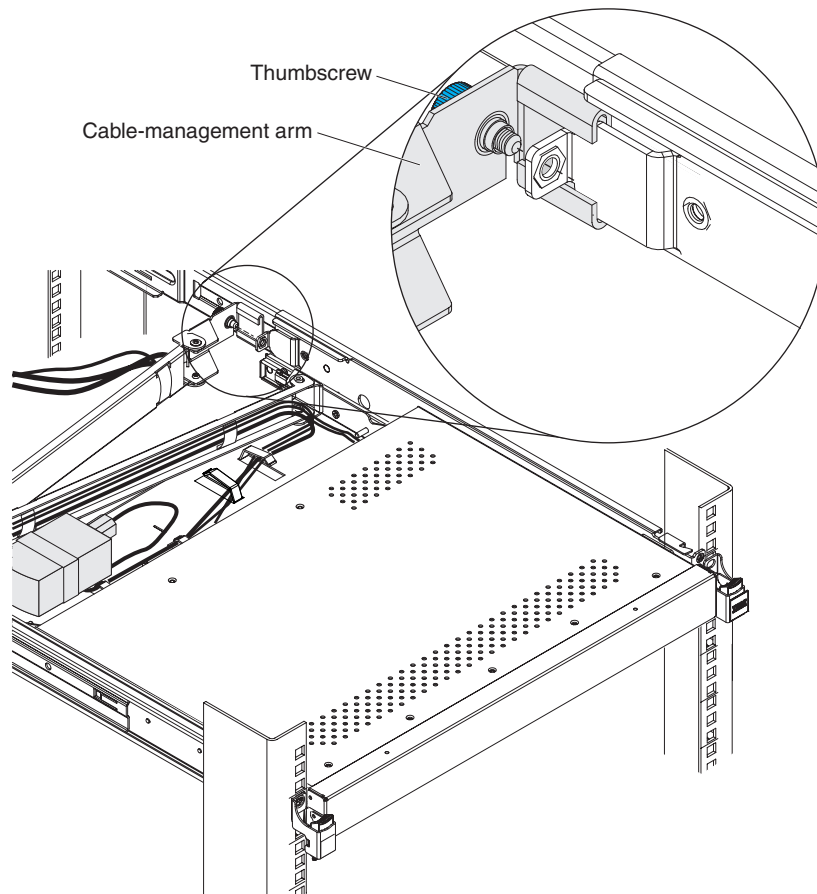


L012



CAUTION:
Pinch hazard. (L012)

- b. Fully extend the console unit out of the rack.

- c. Press in both release latches **1**.

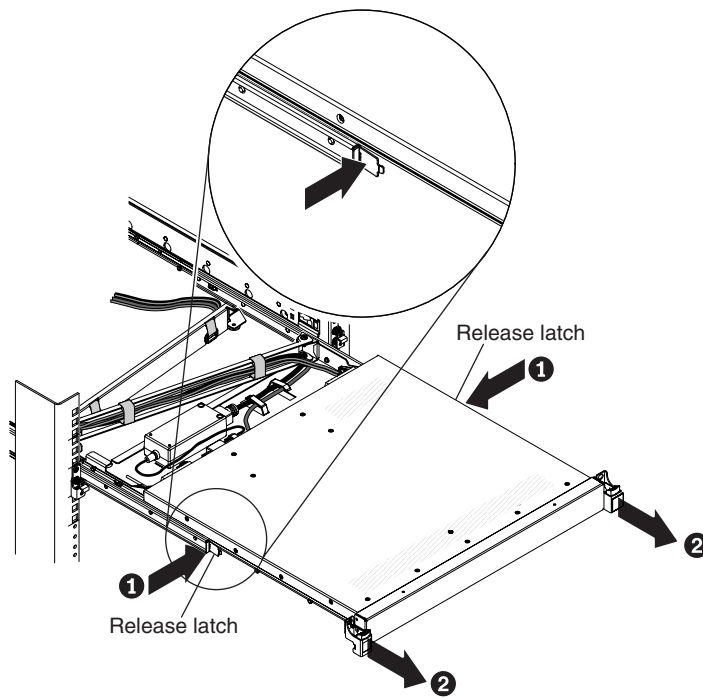


- d. Grasp both sides of the console unit and pull it completely out of the rack **2**.
- e. Place the console unit on a table or other flat surface.

Moving the keyboard


To move the keyboard from the existing console unit to the replacement console unit, complete the following steps:

1. Carefully lift the flat-panel display to the full upright position.
2. To remove the CAC reader blank, press the side of the blank **1** and then pull it up **2**. Set the blank aside.

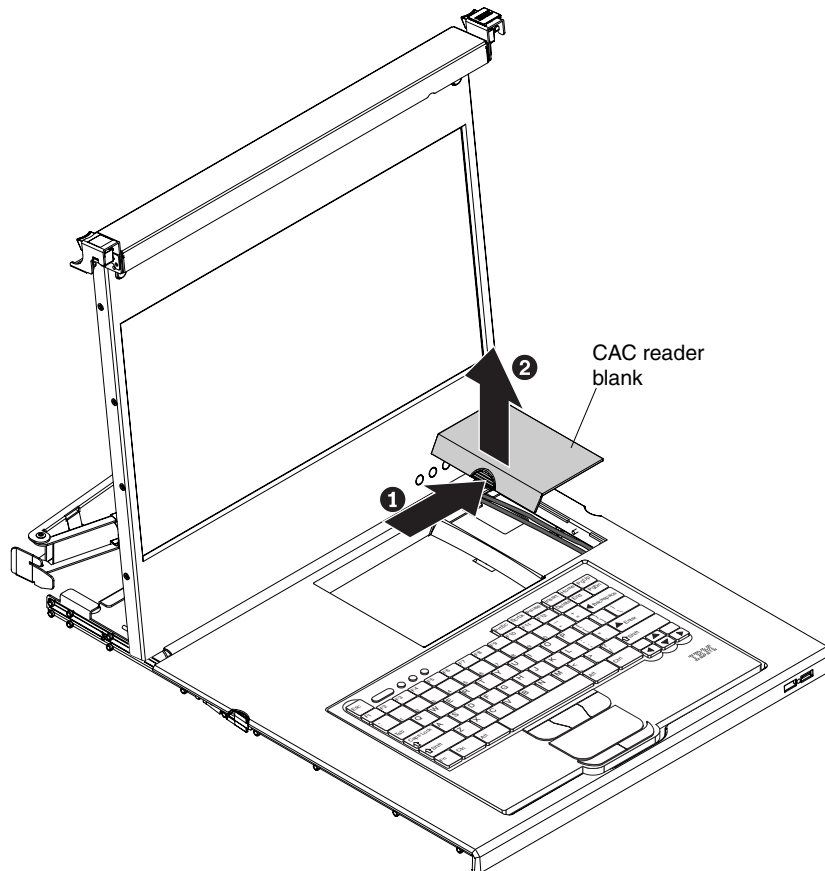


3. Remove the keyboard-and-mouse cable from the keyboard tray, and then remove the keyboard from the console unit and set it aside.
4. Place the replacement console unit on a table or other flat surface and make sure that the right side of the unit extends approximately 76 mm (3 in.) over the edge of the surface. This will help you route the keyboard-and-mouse cable more easily.

5. Hold the keyboard near the keyboard tray and carefully route the keyboard-and-mouse cable through the keyboard tray cutout and through the cutout that is near the flat-panel display. (See the illustration.) Carefully pull the cable through the cutouts.

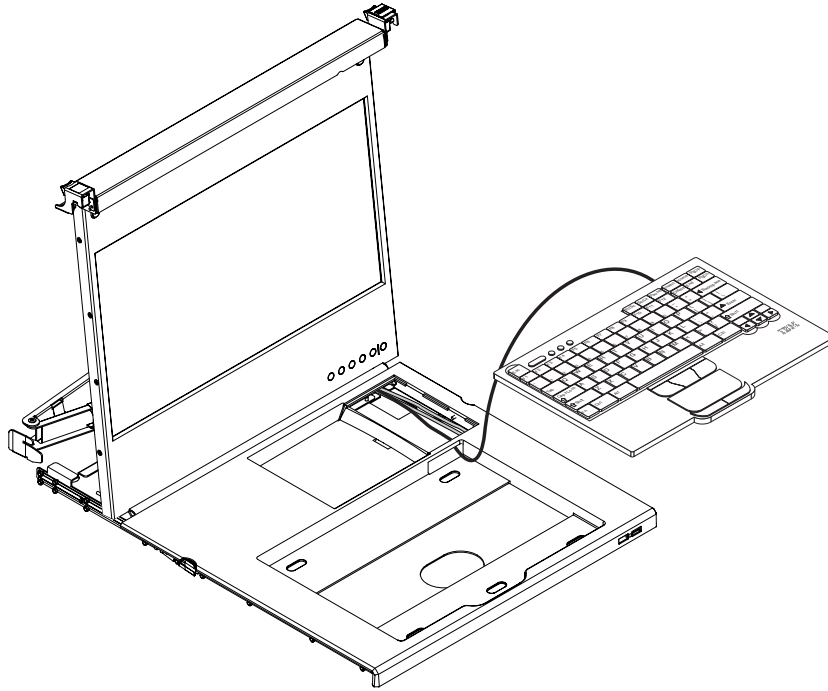

6. Place the keyboard in the tray and exert a small amount of pressure on the keyboard to secure it to the double-sided tape on the front of the console tray.

7. Position the CAC reader blank over the opening and press it into place.

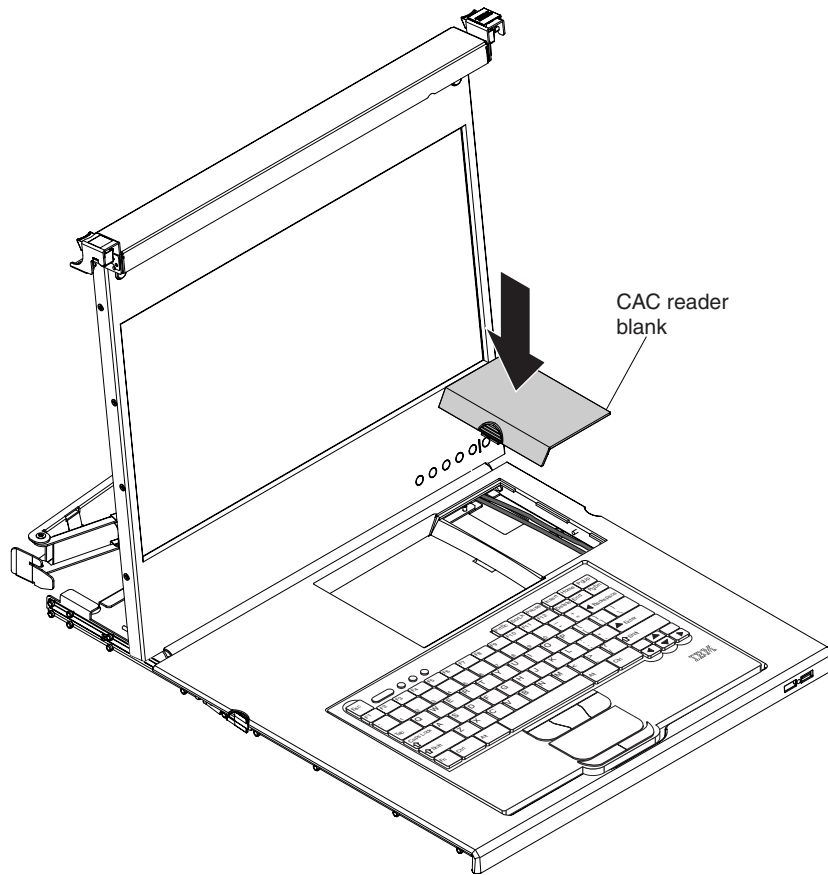

8. Close the flat-panel display.


Attention:

- When you route the keyboard-and-mouse cable, make sure that the cable does not hang below the underside of the keyboard where it might be damaged if it interferes with the devices in the rack space below the console unit.
- Make sure that you route all cables through the cable-routing features on the console frame behind the display and along the cable-management arm.


Removing and replacing the outer slide-rails

To remove and replace the outer slide-rails, complete the following steps:


1. Remove the flat-head stabilizer screws, if installed, and set them aside.

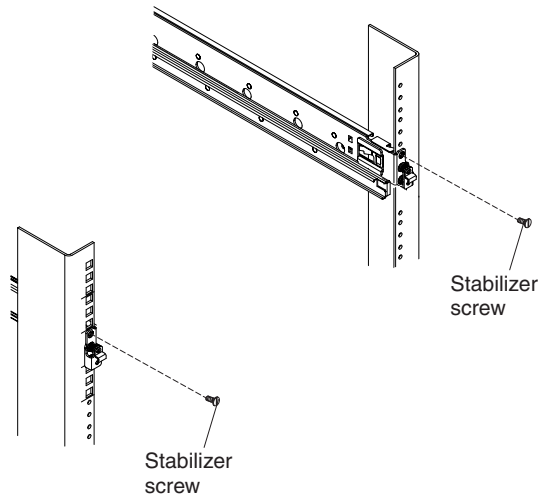

2. Remove the rear bracket of the outer slide-rail from the rack by pulling the blue tab out **1** while you move the end of the slide-rail away from the rack flange and toward the center of the rack **2**.

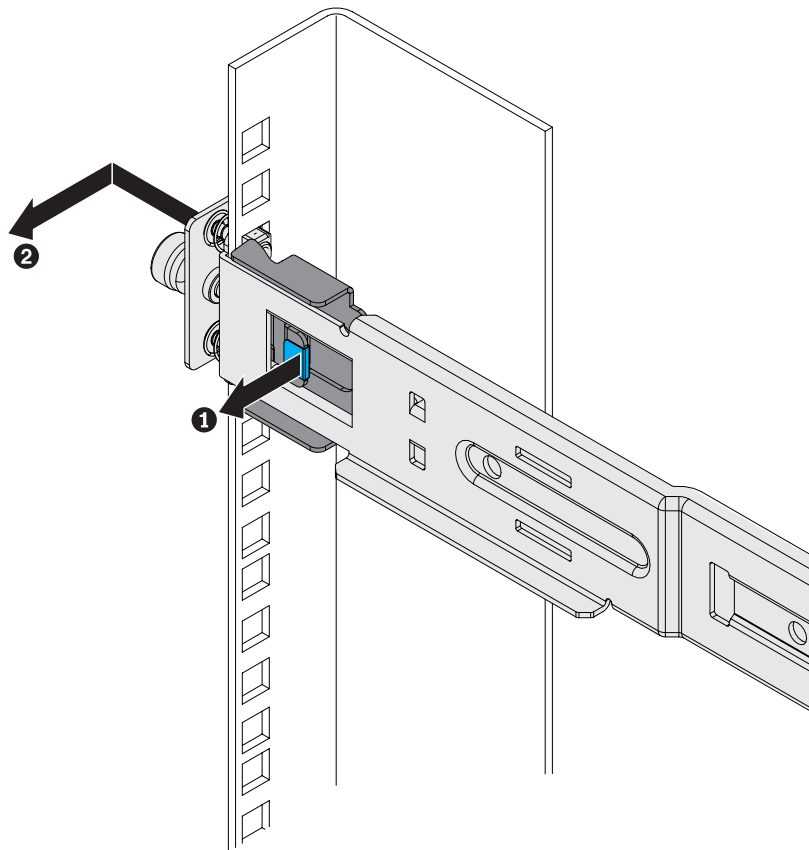


3. Remove the front bracket of the outer slide-rail from the rack by pulling the blue tab out **1** while you pull the end of the slide-rail away from the rack flange and toward the center of the rack **2**.

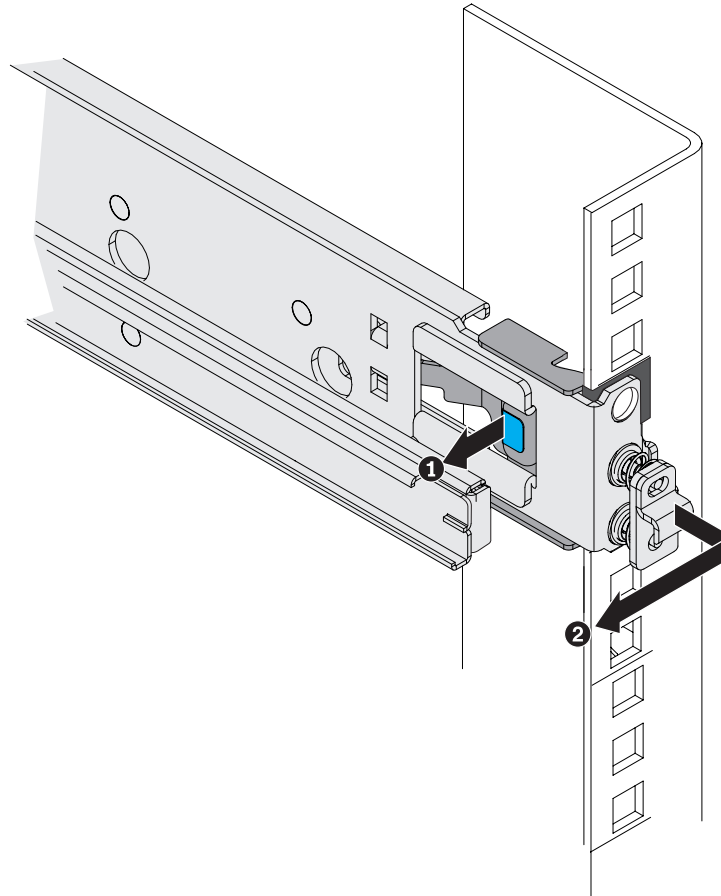

Repeat step 2 on page 61 and step 3 for the other outer slide-rail.


4. Remove the shipping screw from each new outer slide-rail.

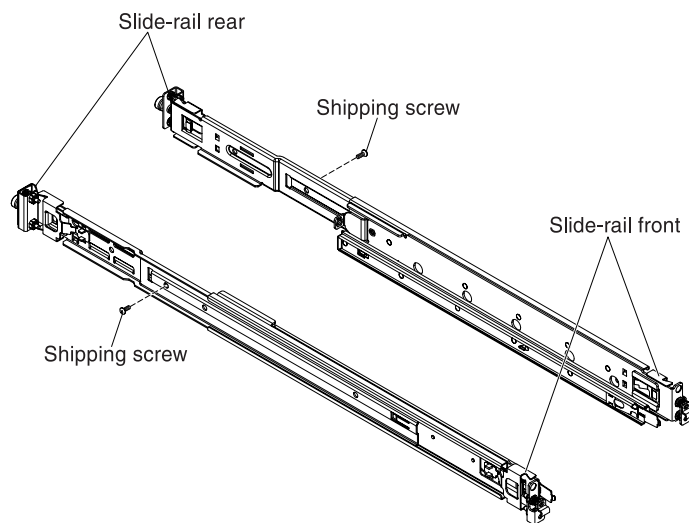


5. To attach the outer slide-rail to the rack, complete the following steps.

Note: Install the rear slide-rail bracket to the rear of the rack first; then, install the front slide-rail bracket to the front of the rack.

- a. Holding the slide-rail horizontally, align the rear slide-rail bracket so that the bracket is on the outside of the rack mounting flanges.
- b. Press the rear slide-rail bracket toward the rack flange and then pull it towards the front of the rack until the locking bracket clicks into place behind the rack flange.

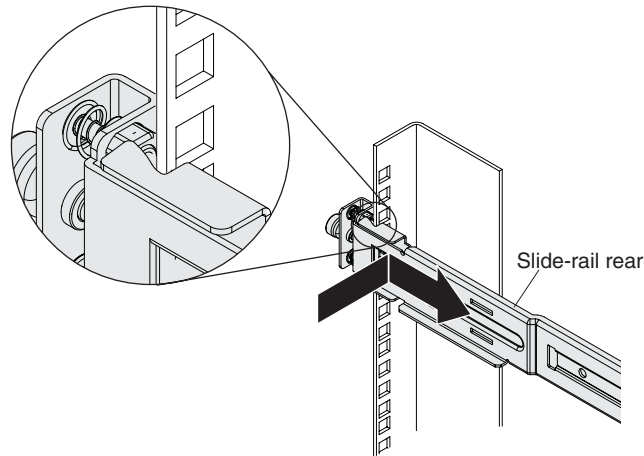

- c. Extend the slide-rail and press the front slide-rail bracket toward the rack flange and then push it towards the rear of the rack until the locking bracket clicks into place behind the rack flange.

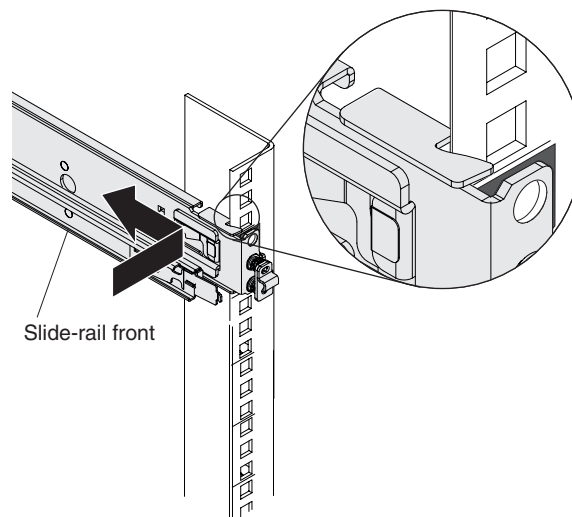


- d. Repeat steps 5a to 5c to attach the other outer slide-rail.
6. Reinstall the flat-head stabilizer screws, if you removed them.

Installing the console unit in the rack

To install the console unit in the rack, complete the following steps:

1. Extend the inner part of the outer slide-rails and slide them forward to the front of the outer rails. Carefully slide the rollers on the console unit into the notch in the slide-rails as shown in the illustration. Continue sliding the unit into the rack until the side latches on the slide-rails engage and you hear a click.

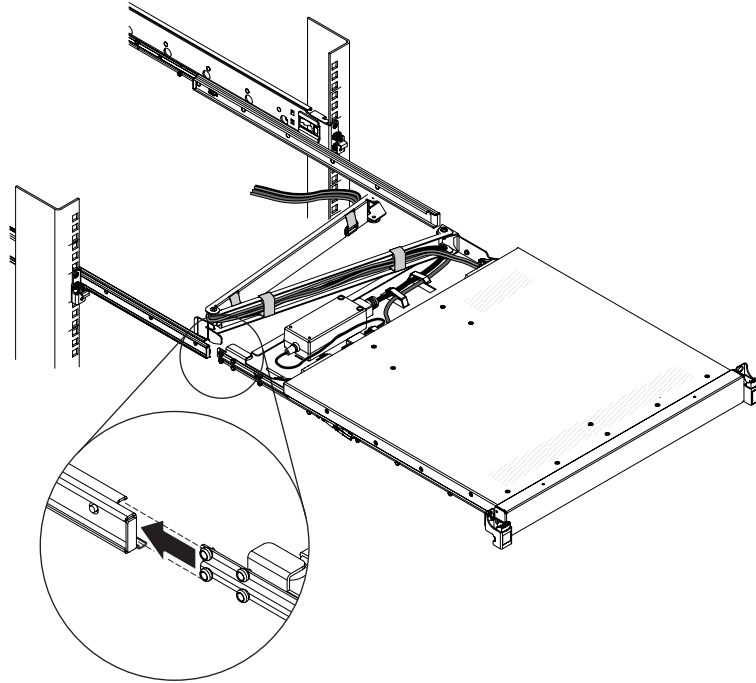


L012




CAUTION:
Pinch hazard. (L012)

2. Press in both release latches **1** ; then, grasp both sides of the console unit and push it completely into the rack **2** . Be careful that you do not pinch your fingers when you release the latches.

There will be resistance initially as the inner and outer rails are aligned. Pull the console unit out halfway, and then push it back in to seat the console unit in the rails. Do this a few times until the console unit moves smoothly in the rails.

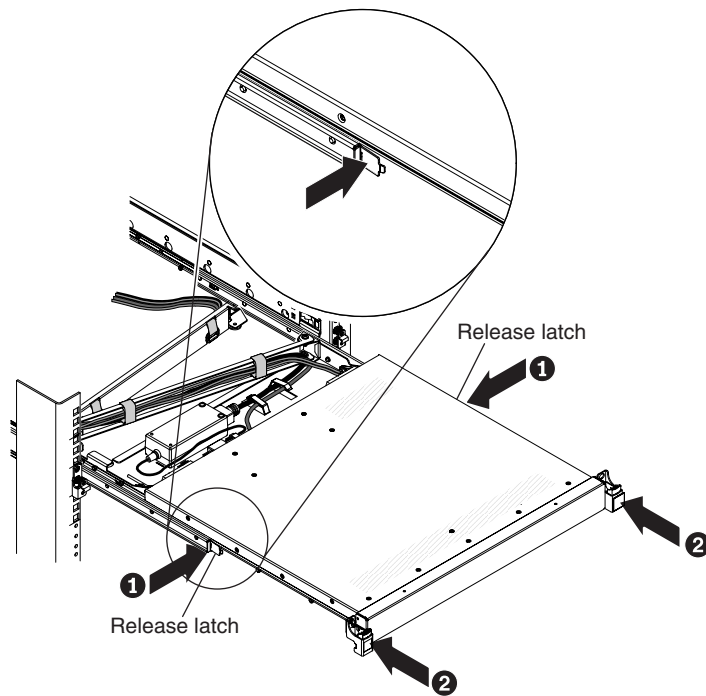


3. Align the C-channel on the end of the cable-management arm with the bracket on the outer slide-rail. Slide the C-channel onto the bracket until the cable-management arm thumbscrew aligns with the hole in the bracket. Tighten the thumbscrew.

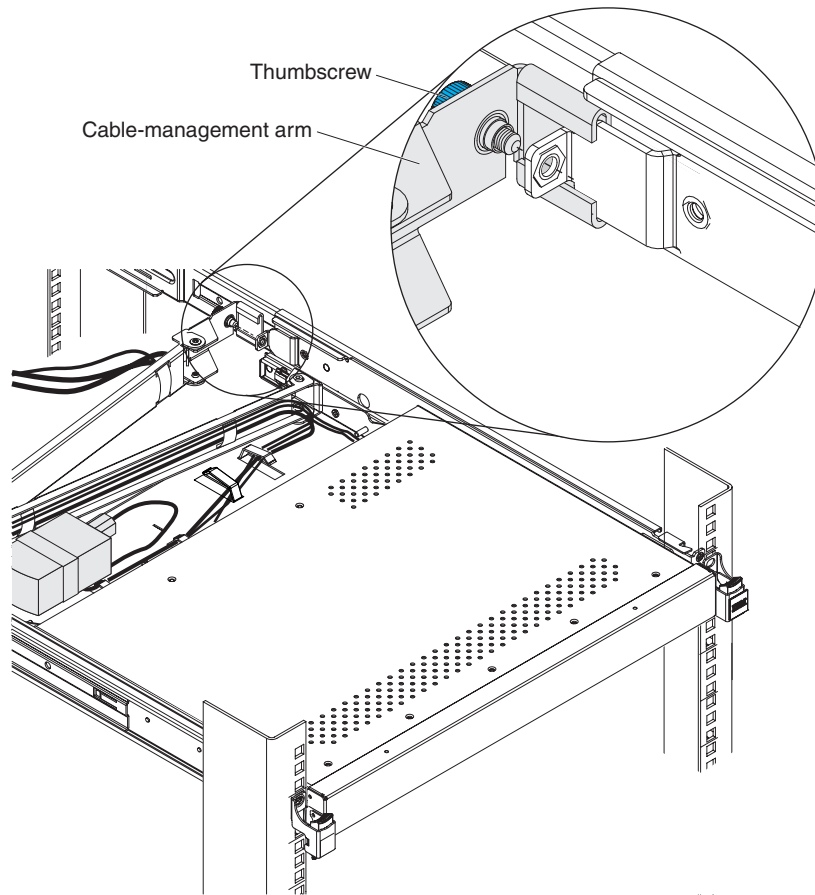


4. If you removed a console switch from behind the console unit, reinstall it now.
5. Reconnect to the server or console switch all cables that you removed.
6. Connect power to the display.

7. Fully extend the console unit from the front of the rack, and then neatly route the cables within the rack and secure them with cable straps along the way.

Important: If you have excess video cable, do not coil it as shown in the following illustration.

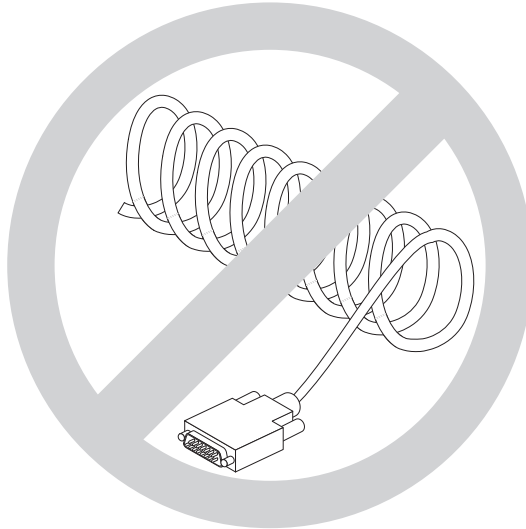

To minimize the electrical interference if you have excess video cable, arrange the cable in figure-eight loops, as shown in the following illustration. Secure the cable in the middle with a cable tie or strap.

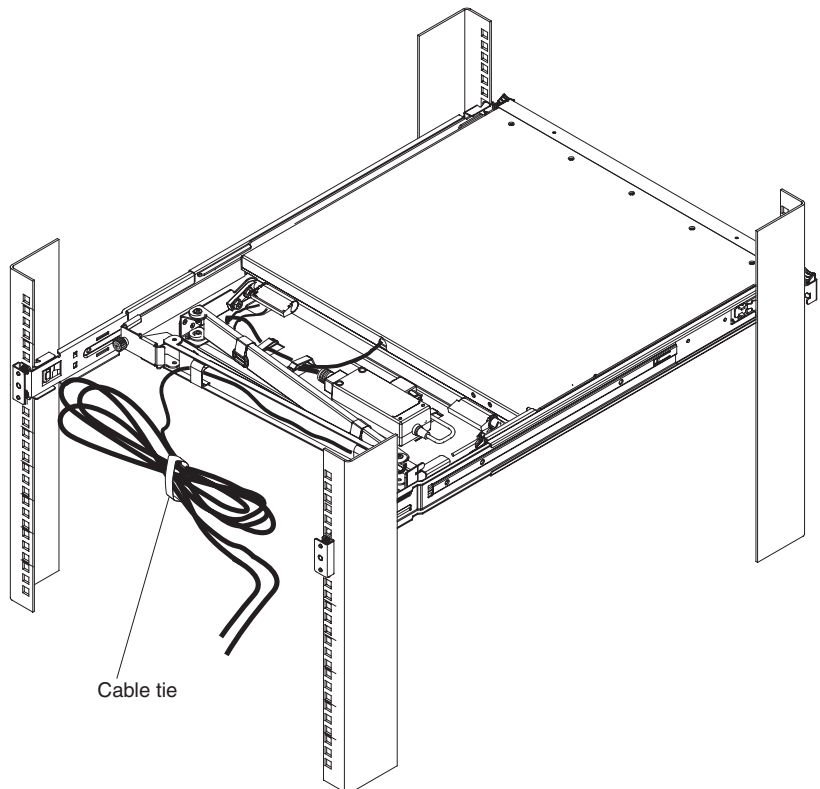

Replacing the multi-burner drive

Statement 3:



CAUTION:

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.




DANGER

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following.

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.


To replace the multi-burner drive in the console unit, complete the following steps:

1. Fully extend the console unit from the front of the rack cabinet until the slides lock into place.
2. Disconnect the ac power cord from the power adapter behind the display, as shown in the following illustration.

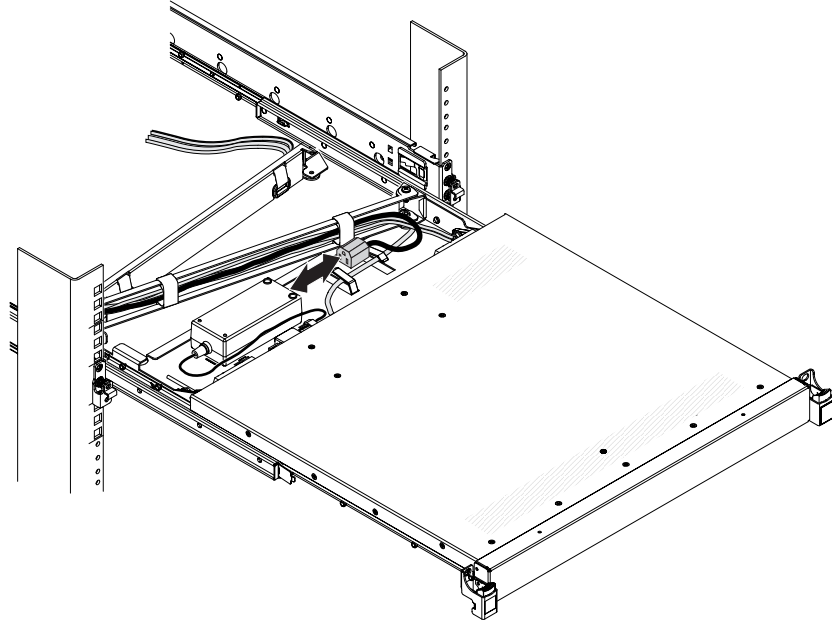


3. Disconnect the keyboard-and-mouse cable and remove the cable from the cable-management arm.
4. Carefully lift the flat-panel display to the full upright position.

5. To remove the CAC reader blank, press the side of the blank **1** and then pull it up **2**.

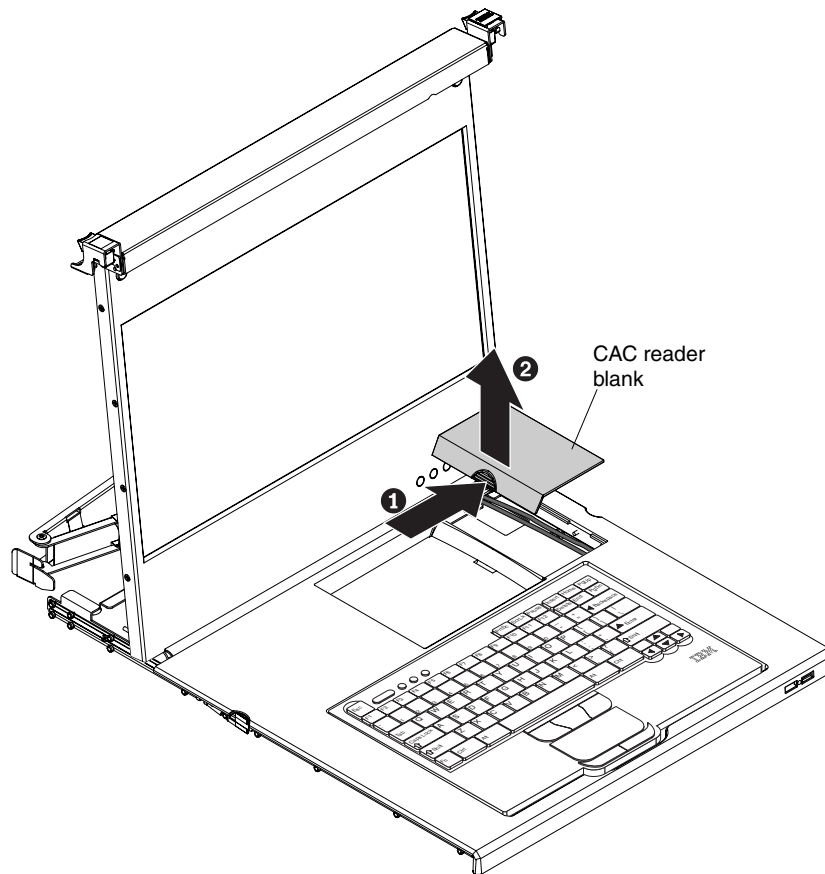


6. Remove the keyboard from the console unit.


7. Remove the five screws from the underside of the console unit and then remove the console cover. Set the cover and the screws aside.

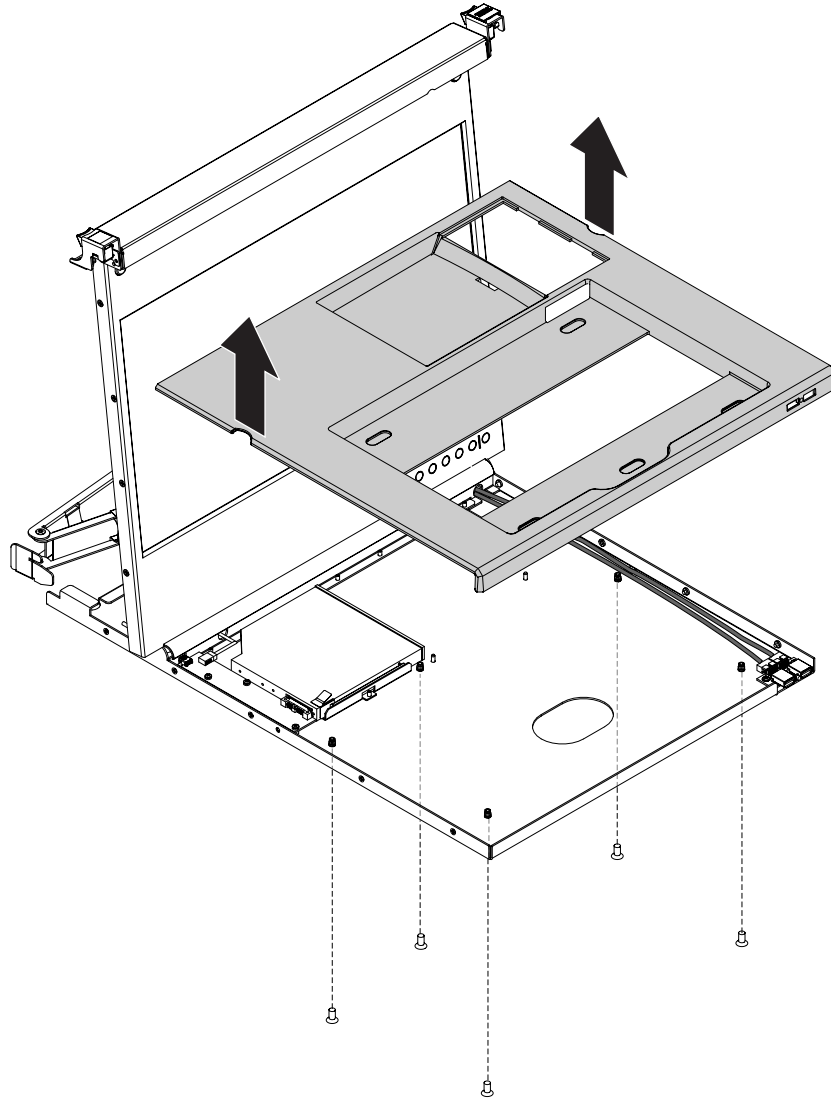


8. Slide the multi-burner drive to the right to disconnect it from the controller board. Remove the multi-burner drive.

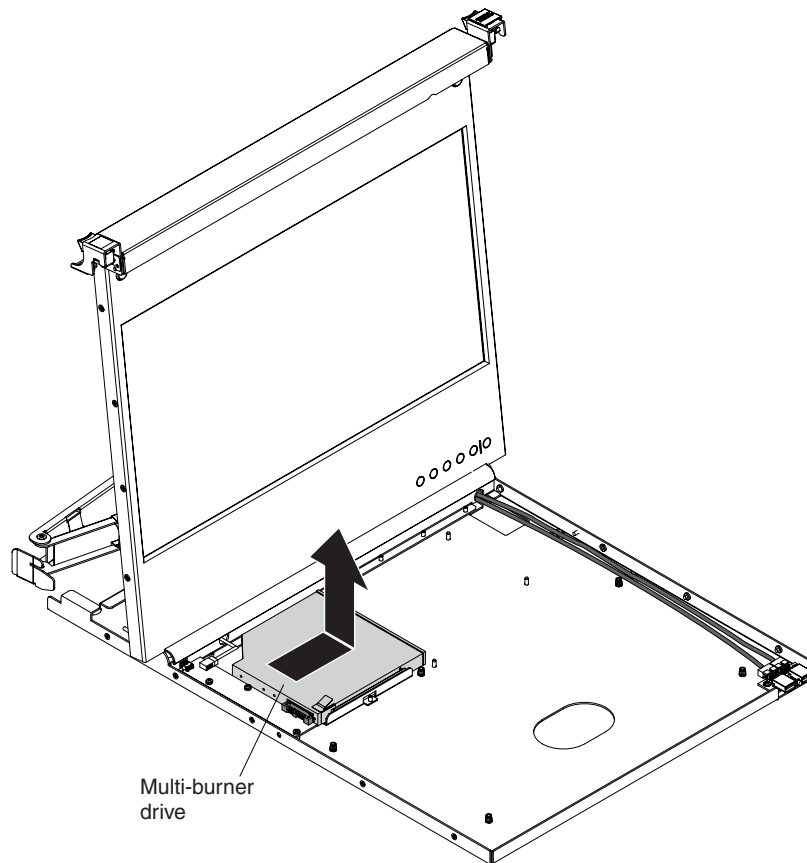

9. Unpack the replacement multi-burner drive.
10. Remove the retention bracket from the old multi-burner drive and replace the retention bracket on the new multi-burner drive. The two small tabs on the bracket fit into the two small holes on the left side of the drive. Make sure that the angled portion of the bracket is over the top surface of the multi-burner drive, near the drive connector, which is at the back and to the left.

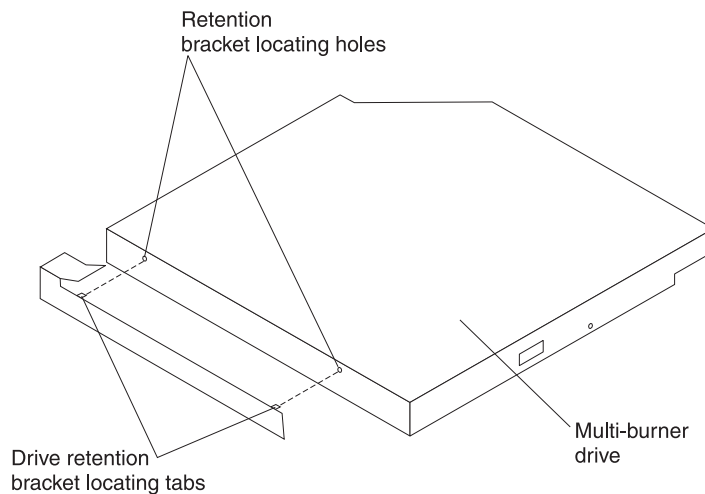


11. Place the new multi-burner drive and retention bracket into the low-flanged bracket that is welded to the back of the console unit, just to the right of the multi-burner drive controller board. (Make sure that the bottom edge of the retention bracket is firmly between the drive and the low-flanged bracket.) Leave sliding room between the back of the drive and the controller board connector.

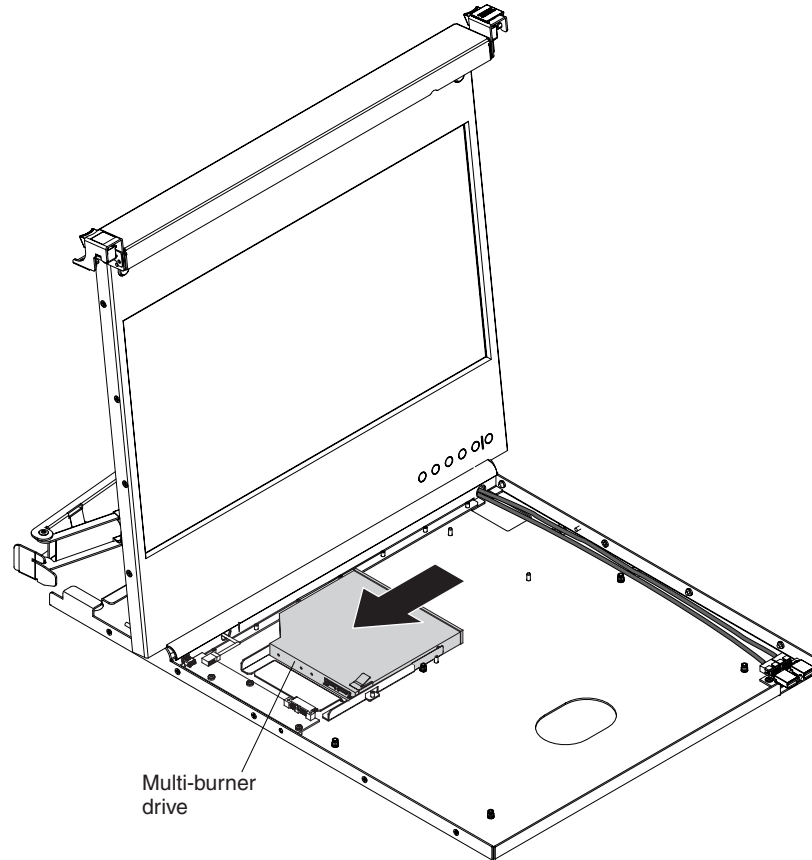


12. While you press down lightly on the multi-burner drive, slide the drive to the left until the drive connector is completely connected to the multi-burner drive connector on the controller board.


13. Replace the large cover on top of the console unit frame and secure it with the screws that you removed in step 7 on page 71.

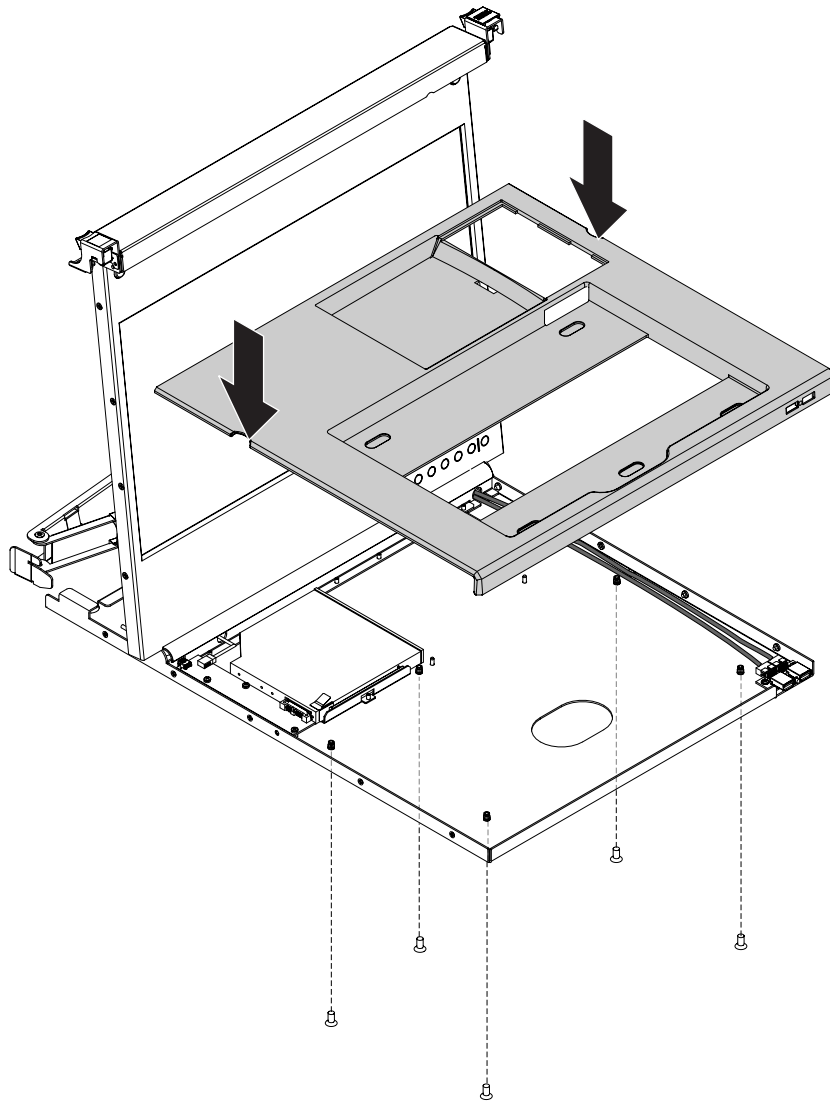

14. Hold the keyboard near the keyboard tray and carefully route the keyboard-and-mouse cable through the keyboard tray cutout and through the cutout that is near the flat-panel display. (See the illustration.) Carefully pull the cable through the cutouts.

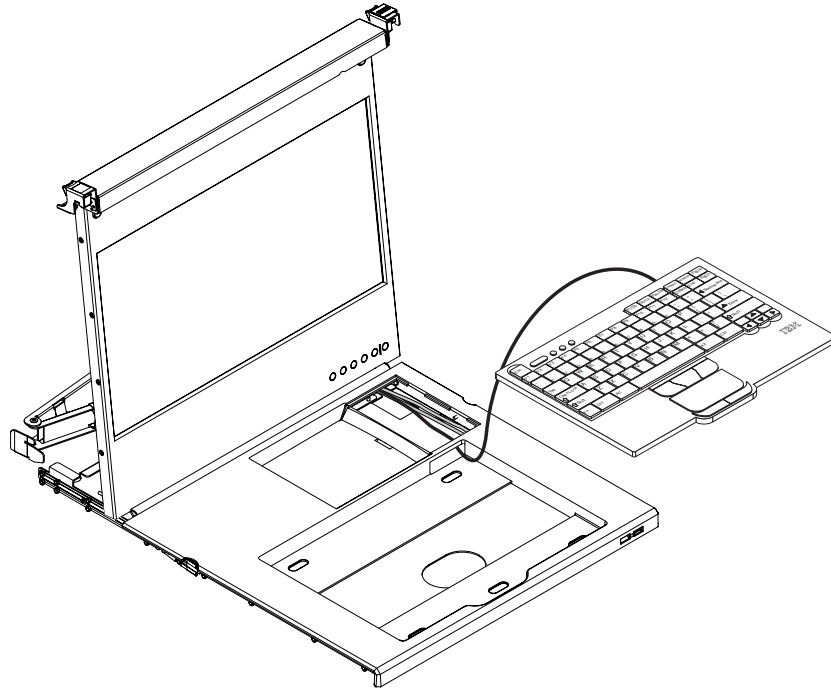

15. Position the CAC reader blank over the opening and press it into place.

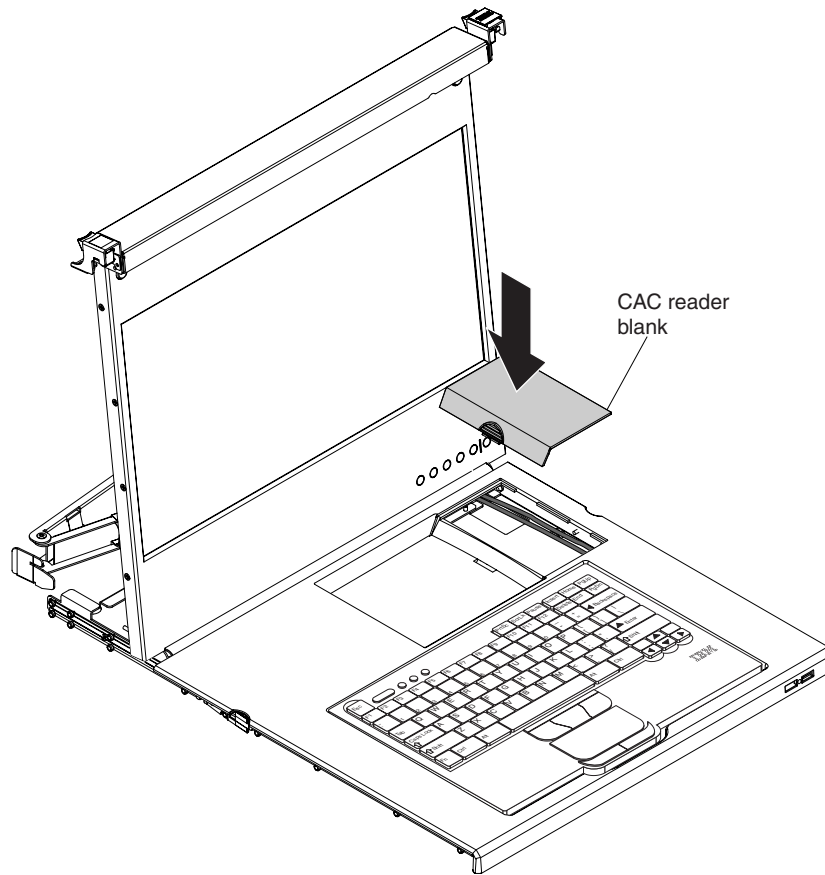


16. Close the flat-panel display.

Attention:

- When you route the keyboard-and-mouse cable, make sure that the cable does not hang below the underside of the keyboard where it might be damaged if it interferes with the devices in the rack space below the console unit.
 - Make sure that you route all cables through the cable-routing features on the console frame behind the display and along the cable-management arm.
17. Route the cable along the cable-management arm, securing the cables with the hook-and-loop fastener strips.


18. Reconnect the ac power cable to the ac power adapter.

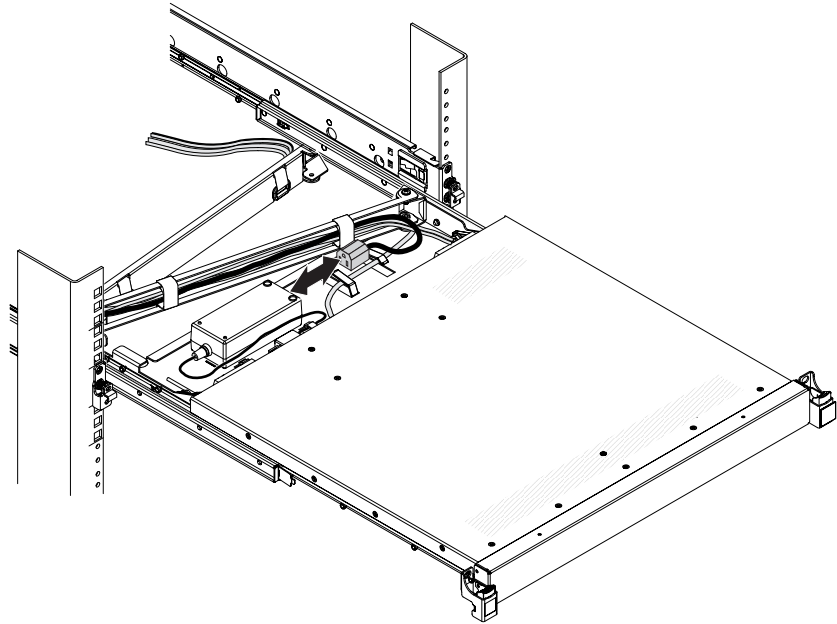

Replacing the Common Access Card reader


To replace the CAC reader in the console unit, complete the following steps:

1. Disconnect the CAC reader cable from the USB port on the console switch and remove the cable from the cable-management arm.
2. To remove the CAC reader, press the left side **1**, rotate the left side up **2**, and then pull up **3**. Carefully pull the cable through the cutouts.

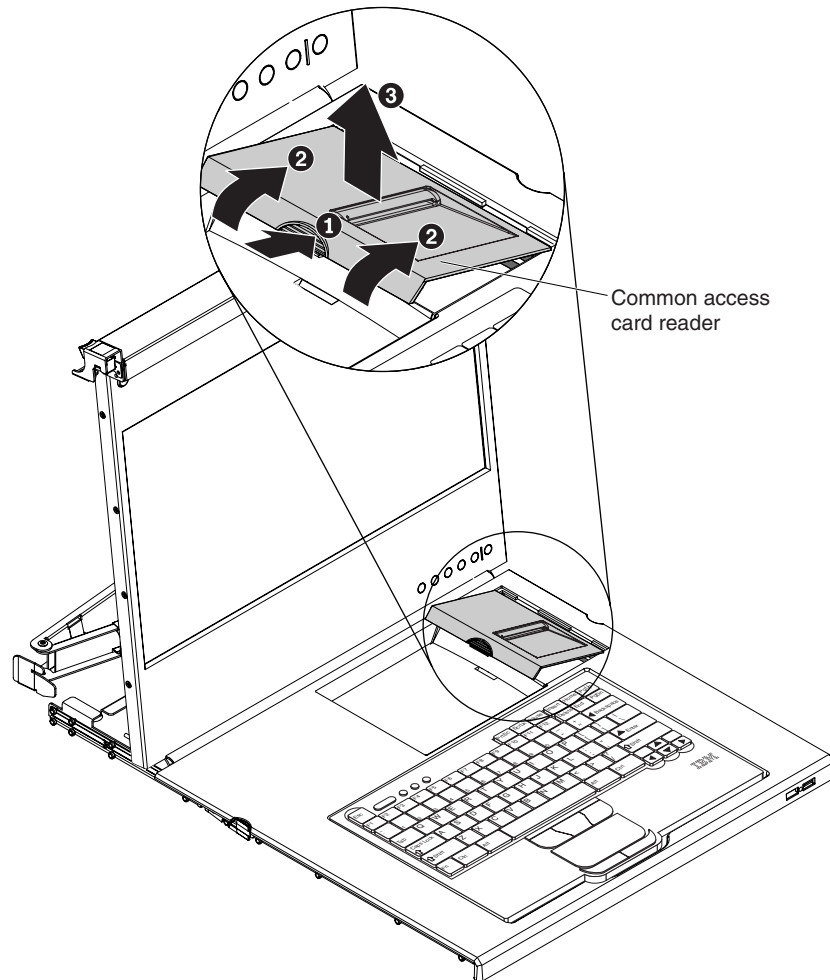


3. Unpack the replacement CAC reader. Then, hold it near the right rear of the console unit and carefully route the CAC reader cable through the cutout that is near the flat-panel display.

Note: Make sure that the keyboard-and-mouse cable and CAC reader cable are pushed to the right side of the opening where the CAC reader is installed so that the cable does not interfere with the CAC reader.

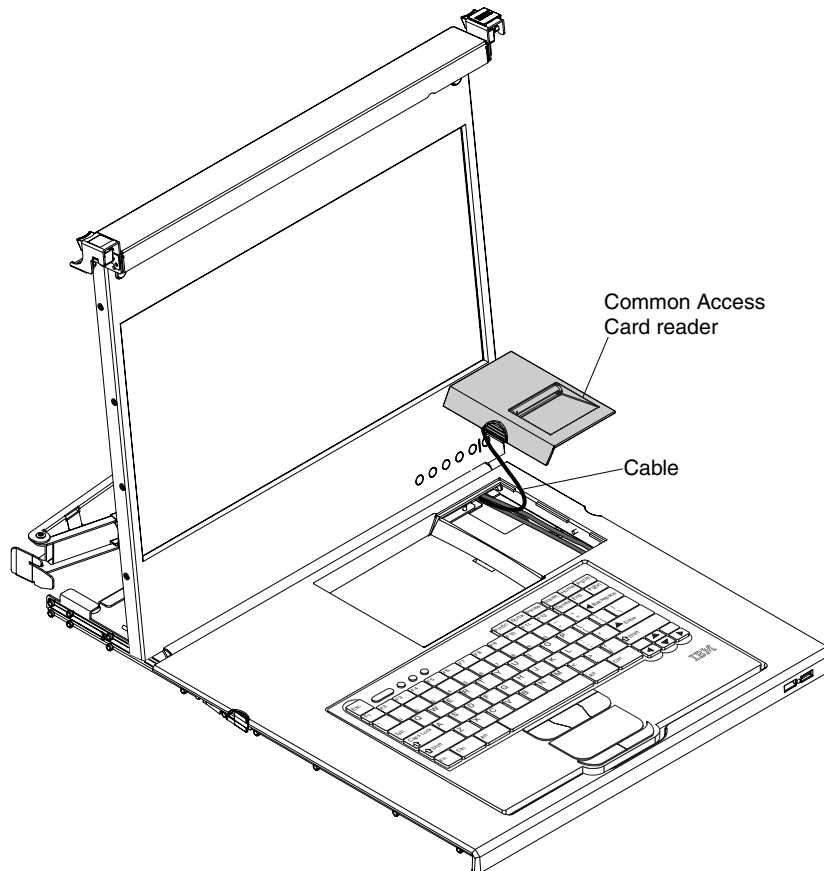

4. Carefully pull the CAC reader cable through the cutouts as you slide the two tabs on the right side of the CAC reader into the slots on the console unit frame **1**. Then, rotate the left side down and into place until it clicks and latches into the console unit **2**.

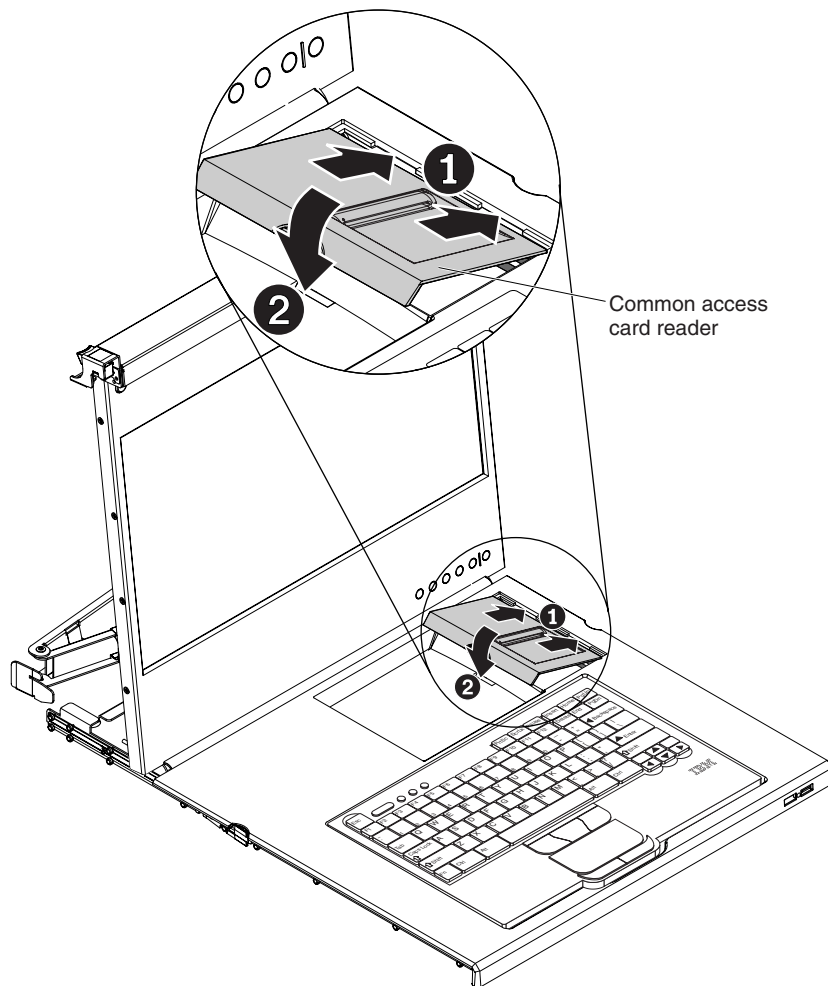

5. Route the CAC reader cable through the cable-management arm; then, connect the cable to the target device.

Appendix A. Supported resolution timing charts

The following tables are the supported resolution timing charts. Although additional resolutions might work, these are the supported signals.

Table 5. 640 x 480 timing chart

Type	Standard			
Timing name	640 x 480 @ 60 Hz		640 x 480 @ 75 Hz	
Horizontal frequency and polarity	31.469 kHz	Negative	37.5 kHz	Negative
Vertical frequency and polarity	59.94 Hz	Negative	75 Hz	Negative
Pixel clock	25.175 MHz		31.5 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	31.778 μs	800 pixels	26.667 μs	840 pixels
Display	25.422 μs	640 pixels	20.317 μs	640 pixels
Blanking	6.356 μs	160 pixels	6.349 μs	200 pixels
Sync	3.813 μs	96 pixels	2.032 μs	64 pixels
Back porch	1.907 μs	48 pixels	3.810 μs	120 pixels
Front porch	0.636 μs	16 pixels	0.508 μs	16 pixels
Vertical				
Total	16.683 ms	525 lines	13.333 ms	500 lines
Display	15.253 ms	480 lines	12.800 ms	480 lines
Blanking	1.430 ms	45 lines	0.533 ms	20 lines
Sync	0.064 ms	2 lines	0.080 ms	3 lines
Back porch	1.049 ms	33 lines	0.427 ms	16 lines
Front porch	0.318 ms	10 lines	0.027 ms	1 line

Table 6. 800 x 600 timing chart

Type	Standard			
Timing name	800 x 600 @ 60 Hz		800 x 600 @ 75 Hz	
Horizontal frequency and polarity	37.879 kHz	Positive	46.875 kHz	Positive
Vertical frequency and polarity	60.317 Hz	Positive	75 Hz	Positive
Pixel clock	40 MHz		49.5 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	26.400 μs	1056 pixels	21.333 μs	1056 pixels
Display	20.000 μs	800 pixels	16.162 μs	800 pixels
Blanking	6.400 μs	256 pixels	5.172 μs	256 pixels
Sync	3.200 μs	128 pixels	1.616 μs	80 pixels
Back porch	2.200 μs	88 pixels	3.232 μs	160 pixels
Front porch	1.000 μs	40 pixels	0.323 μs	16 pixels
Vertical				
Total	16.579 ms	628 lines	13.333 ms	625 lines
Display	15.840 ms	600 lines	12.800 ms	600 lines
Blanking	0.739 ms	28 lines	0.533 ms	25 lines
Sync	0.106 ms	4 lines	0.064 ms	3 lines
Back porch	0.607 ms	23 lines	0.448 ms	21 lines
Front porch	0.026 ms	1 line	0.021 ms	1 line

Table 7. 1024 x 768 timing chart

Type	Standard			
Timing name	1024 x 768 @ 60 Hz		1024 x 768 @ 75 Hz	
Horizontal frequency and polarity	48.363 kHz	Negative	60.023 kHz	Positive
Vertical frequency and polarity	60.004 Hz	Negative	75.029 Hz	Positive
Pixel clock	65 MHz		78.75 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	20.677 μs	1344 pixels	16.660 μs	1312 pixels
Display	15.754 μs	1024 pixels	13.003 μs	1024 pixels
Blanking	4.923 μs	320 pixels	3.657 μs	288 pixels
Sync	2.092 μs	136 pixels	1.219 μs	96 pixels
Back porch	2.462 μs	160 pixels	2.235 μs	176 pixels
Front porch	0.369 μs	24 pixels	0.203 μs	16 pixels
Vertical				
Total	16.666 ms	806 lines	13.328 ms	800 lines
Display	15.880 ms	768 lines	12.795 ms	768 lines
Blanking	0.786 ms	38 lines	0.533 ms	32 lines
Sync	0.124 ms	6 lines	0.050 ms	3 lines
Back porch	0.600 ms	29 lines	0.466 ms	28 lines
Front porch	0.062 ms	3 lines	0.017 ms	1 line

Table 8. 1152 x 864 timing chart

Type	Nonstandard		Standard	
Timing name	1152 x 864 @ 60 Hz		1152 x 864 @ 75 Hz	
Horizontal frequency and polarity	54.348 kHz	Positive	67.5 kHz	Positive
Vertical frequency and polarity	60.053 Hz	Positive	75 Hz	Positive
Pixel clock	80 MHz		108 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	18.400 μs	1472 pixels	14.815 μs	1600 pixels
Display	14.400 μs	1152 pixels	10.667 μs	1152 pixels
Blanking	4.000 μs	320 pixels	4.148 μs	448 pixels
Sync	1.200 μs	96 pixels	1.185 μs	128 pixels
Back porch	2.400 μs	192 pixels	2.370 μs	256 pixels
Front porch	0.400 μs	32 pixels	0.593 μs	64 pixels
Vertical				
Total	16.652 ms	905 lines	13.333 ms	900 lines
Display	15.898 ms	864 lines	12.800 ms	864 lines
Blanking	0.754 ms	41 lines	0.533 ms	36 lines
Sync	0.055 ms	3 lines	0.044 ms	3 lines
Back porch	0.681 ms	37 lines	0.474 ms	32 lines
Front porch	0.018 ms	1 line	0.015 ms	1 line

Table 9. 1366 x 768 timing chart

Type	Nonstandard			
Timing name	1366 x 768 @ 60 Hz		1366 x 768 @ 75 Hz	
Horizontal frequency and polarity	47.712 kHz	Positive	60.15 kHz	Positive
Vertical frequency and polarity	60.015 Hz	Positive	75 Hz	Positive
Pixel clock	85.5 MHz		110.195 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	20.959 μs	1792 pixels	16.625 μs	1832 pixels
Display	15.976 μs	1366 pixels	12.396 μs	1366 pixels
Blanking	4.983 μs	426 pixels	4.231 μs	466 pixels
Sync	1.310 μs	112 pixels	1.307 μs	144 pixels
Back porch	2.929 μs	250 pixels	2.120 μs	234 pixels
Front porch	0.749 μs	64 pixels	0.799 μs	88 pixels
Vertical				
Total	16.662 ms	795 lines	13.333 ms	802 lines
Display	16.097 ms	768 lines	12.768 ms	768 lines
Blanking	0.566 ms	27 lines	0.565 ms	34 lines
Sync	0.126 ms	6 lines	0.049 ms	3 lines
Back porch	0.377 ms	18 lines	0.498 ms	30 lines
Front porch	0.063 ms	3 lines	0.015 ms	1 line

Table 10. 1280 x 800 timing chart

Type	Standard			
Timing name	1280 x 800 @ 60 Hz		1280 x 800 @ 75 Hz	
Horizontal frequency and polarity	49.702 kHz	Negative	62.795 kHz	Negative
Vertical frequency and polarity	59.81 Hz	Positive	74.934 Hz	Positive
Pixel clock	83.5 MHz		106.5 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	20.120 μs	1680 pixels	15.925 μs	1696 pixels
Display	15.329 μs	1280 pixels	12.019 μs	1280 pixels
Blanking	4.790 μs	400 pixels	3.906 μs	416 pixels
Sync	1.533 μs	128 pixels	1.202 μs	128 pixels
Back porch	2.395 μs	200 pixels	1.935 μs	206 pixels
Front porch	0.862 μs	72 pixels	0.751 μs	80 pixels
Vertical				
Total	16.720 ms	831 lines	13.345 ms	838 lines
Display	16.096 ms	800 lines	12.740 ms	800 lines
Blanking	0.624 ms	31 lines	0.605 ms	38 lines
Sync	0.121 ms	6 lines	0.096 ms	6 lines
Back porch	0.443 ms	22 lines	0.462 ms	29 lines
Front porch	0.060 ms	3 lines	0.048 ms	3 lines

Table 11. 1280 x 1024 timing chart

Type	Standard			
Timing name	1280 x 1024 @ 60 Hz		1280 x 1024 @ 75 Hz	
Horizontal frequency and polarity	63.981 kHz	Positive	79.976 kHz	Positive
Vertical frequency and polarity	60.02 Hz	Positive	75.025 Hz	Positive
Pixel clock	108 MHz		135 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	15.630 μs	1688 pixels	12.504 μs	1688 pixels
Display	11.852 μs	1280 pixels	9.481 μs	1280 pixels
Blanking	3.778 μs	408 pixels	3.022 μs	408 pixels
Sync	1.037 μs	112 pixels	1.067 μs	144 pixels
Back porch	2.296 μs	248 pixels	1.837 μs	248 pixels
Front porch	0.444 μs	48 pixels	0.119 μs	16 pixels
Vertical				
Total	16.661 ms	1066 lines	13.329 ms	1066 lines
Display	16.005 ms	1024 lines	12.804 ms	1024 lines
Blanking	0.656 ms	42 lines	0.525 ms	42 lines
Sync	0.047 ms	3 lines	0.038 ms	3 lines
Back porch	0.594 ms	38 lines	0.475 ms	38 lines
Front porch	0.016 ms	1 line	0.013 ms	1 line

Table 12. 1440 x 900 timing chart

Type	Standard			
Timing name	1440 x 900 @ 60 Hz		1440 x 900 @ 75 Hz	
Horizontal frequency and polarity	55.935 kHz	Negative	70.635 kHz	Negative
Vertical frequency and polarity	59.887 Hz	Positive	74.984 Hz	Positive
Pixel clock	106.5 MHz		136.75 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	17.878 μs	1904 pixels	14.157 μs	1936 pixels
Display	13.521 μs	1440 pixels	10.530 μs	1440 pixels
Blanking	4.357 μs	464 pixels	3.627 μs	496 pixels
Sync	1.427 μs	152 pixels	1.112 μs	152 pixels
Back porch	2.178 μs	232 pixels	1.814 μs	248 pixels
Front porch	0.751 μs	80 pixels	0.702 μs	96 pixels
Vertical				
Total	16.698 ms	934 lines	13.336 ms	942 lines
Display	16.090 ms	900 lines	12.741 ms	900 lines
Blanking	0.608 ms	34 lines	0.595 ms	42 lines
Sync	0.107 ms	6 lines	0.085 ms	6 lines
Back porch	0.447 ms	25 lines	0.467 ms	33 lines
Front porch	0.054 ms	3 lines	0.042 ms	3 lines

Table 13. 1600 x 1200 timing chart

Type	Standard			
Timing name	1600 x 1200 @ 60 Hz		1680 x 1050 @ 60 Hz	
Horizontal frequency and polarity	75 kHz	Positive	65.29 kHz	Negative
Vertical frequency and polarity	60 Hz	Positive	59.954 Hz	Positive
Pixel clock	162 MHz		146.25 MHz	
Scan type	Noninterlaced		Noninterlaced	
Horizontal				
Period	13.333 μs	2160 pixels	15.316 μs	2240 pixels
Display	9.877 μs	1600 pixels	11.487 μs	1680 pixels
Blanking	3.457 μs	560 pixels	3.829 μs	560 pixels
Sync	1.185 μs	192 pixels	1.203 μs	176 pixels
Back porch	1.877 μs	304 pixels	1.915 μs	280 pixels
Front porch	0.395 μs	64 pixels	0.711 μs	104 pixels
Vertical				
Total	16.667 ms	1250 lines	16.679 ms	1089 lines
Display	16.000 ms	1200 lines	16.082 ms	1050 lines
Blanking	0.667 ms	50 lines	0.597 ms	39 lines
Sync	0.040 ms	3 lines	0.092 ms	6 lines
Back porch	0.613 ms	46 lines	0.459 ms	30 lines
Front porch	0.013 ms	1 line	0.046 ms	3 lines

Appendix B. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you. Use this information to obtain additional information about IBM and IBM products, determine what to do if you experience a problem with your IBM system or optional device, and determine whom to call for service, if it is necessary.

Before you call

Before you call, make sure that you have taken these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated firmware and operating-system device drivers for your IBM product. The IBM Warranty terms and conditions state that you, the owner of the IBM product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your IBM service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
- If you have installed new hardware or software in your environment, check <http://www.ibm.com/systems/info/x86servers/serverproven/compat/us/> to make sure that the hardware and software is supported by your IBM product.
- Go to <http://www.ibm.com/supportportal/> to check for information to help you solve the problem.
- Gather the following information to provide to IBM Support. This data will help IBM Support quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.
 - Hardware and Software Maintenance agreement contract numbers, if applicable
 - Machine type number (IBM 4-digit machine identifier)
 - Model number
 - Serial number
 - Current system UEFI and firmware levels
 - Other pertinent information such as error messages and logs
- Go to http://www.ibm.com/support/entry/portal/Open_service_request/ to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to IBM Support quickly and efficiently. IBM service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

You can solve many problems without outside assistance by following the troubleshooting procedures that IBM provides in the online help or in the documentation that is provided with your IBM product. The documentation that comes with IBM systems also describes the diagnostic tests that you can perform. Most systems, operating systems, and programs come with documentation that

contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

Using the documentation

Information about your IBM system and preinstalled software, if any, or optional device is available in the documentation that comes with the product. That documentation can include printed documents, online documents, readme files, and help files. See the troubleshooting information in your system documentation for instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might tell you that you need additional or updated device drivers or other software. IBM maintains pages on the World Wide Web where you can get the latest technical information and download device drivers and updates. To access these pages, go to <http://www.ibm.com/supportportal/>. Also, some documents are available through the IBM Publications Center at <http://www.ibm.com/shop/publications/order/>.

Getting help and information from the World Wide Web

On the World Wide Web, up-to-date information about IBM systems, optional devices, services, and support is available at <http://www.ibm.com/supportportal/>. The address for IBM System x[®] information is <http://www.ibm.com/systems/x/>. The address for IBM BladeCenter[®] information is <http://www.ibm.com/systems/bladecenter/>. The address for IBM IntelliStation[®] information is <http://www.ibm.com/systems/intellistation/>.

How to send Dynamic System Analysis data to IBM

Use the IBM Enhanced Customer Data Repository to send diagnostic data to IBM. Before you send diagnostic data to IBM, read the terms of use at <http://www.ibm.com/de/support/ecurep/terms.html>.

You can use any of the following methods to send diagnostic data to IBM:

- **Standard upload:** http://www.ibm.com/de/support/ecurep/send_http.html
- **Standard upload with the system serial number:** http://www.ecurep.ibm.com/app/upload_hw
- **Secure upload:** http://www.ibm.com/de/support/ecurep/send_http.html#secure
- **Secure upload with the system serial number:** https://www.ecurep.ibm.com/app/upload_hw

Creating a personalized support web page

At <http://www.ibm.com/support/mynotifications/>, you can create a personalized support web page by identifying IBM products that are of interest to you. From this personalized page, you can subscribe to weekly email notifications about new technical documents, search for information and downloads, and access various administrative services.

Software service and support

Through IBM Support Line, you can get telephone assistance, for a fee, with usage, configuration, and software problems with your IBM products. For information about which products are supported by Support Line in your country or region, see <http://www.ibm.com/services/supline/products/>.

For more information about Support Line and other IBM services, see <http://www.ibm.com/services/>, or see <http://www.ibm.com/planetwide/> for support telephone numbers. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

Hardware service and support

You can receive hardware service through your IBM reseller or IBM Services. To locate a reseller authorized by IBM to provide warranty service, go to <http://www.ibm.com/partnerworld/> and click **Find Business Partners** on the right side of the page. For IBM support telephone numbers, see <http://www.ibm.com/planetwide/>. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

IBM Taiwan product service

台灣 IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

IBM Taiwan product service contact information:

IBM Taiwan Corporation
3F, No 7, Song Ren Rd.
Taipei, Taiwan
Telephone: 0800-016-888

Appendix C. Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product, and use of those websites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Trademarks

IBM, the IBM logo, and [ibm.com](http://www.ibm.com) are trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at "Copyright and trademark information" at <http://www.ibm.com/legal/copytrade.shtml>.

Adobe and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Cell Broadband Engine is a trademark of Sony Computer Entertainment, Inc., in the United States, other countries, or both and is used under license therefrom.

Intel, Intel Xeon, Itanium, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Important notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard disk drive bays with the largest currently supported drives that are available from IBM.

Maximum memory might require replacement of the standard memory with an optional memory module.

IBM makes no representation or warranties regarding non-IBM products and services that are ServerProven®, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. These products are offered and warranted solely by third parties.

IBM makes no representations or warranties with respect to non-IBM products. Support (if any) for the non-IBM products is provided by the third party, not IBM.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

Particulate contamination

Attention: Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document. Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If IBM determines that the levels of particulates or gases in your environment have caused damage to the device, IBM may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 14. Limits for particulates and gases

Contaminant	Limits
Particulate	<ul style="list-style-type: none">• The room air must be continuously filtered with 40% atmospheric dust spot efficiency (MERV 9) according to ASHRAE Standard 52.2¹.• Air that enters a data center must be filtered to 99.97% efficiency or greater, using high-efficiency particulate air (HEPA) filters that meet MIL-STD-282.• The deliquescent relative humidity of the particulate contamination must be more than 60%².• The room must be free of conductive contamination such as zinc whiskers.
Gaseous	<ul style="list-style-type: none">• Copper: Class G1 as per ANSI/ISA 71.04-1985³• Silver: Corrosion rate of less than 300 Å in 30 days

¹ ASHRAE 52.2-2008 - *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

² The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

³ ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

Monitor

Oregon: For information about recycling covered electronic devices in the state of Oregon, go to the Oregon Department of Environmental Quality website at <http://www.deq.state.or.us/lq/electronics.htm>.

Washington: For information about recycling covered electronic devices in the state of Washington, go to the Department of Ecology website at <https://fortress.wa.gov/ecy/recycle/> or telephone the Washington Department of Ecology at 1-800-RECYCLE (1-800-732-9253).

Documentation format

The publications for this product are in Adobe Portable Document Format (PDF) and should be compliant with accessibility standards. If you experience difficulties when you use the PDF files and want to request a web-based format or accessible PDF document for a publication, direct your mail to the following address:

*Information Development
IBM Corporation
205/A015
3039 E. Cornwallis Road
P.O. Box 12195
Research Triangle Park, North Carolina 27709-2195
U.S.A.*

In the request, be sure to include the publication part number and title.

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

Telecommunication regulatory statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

Electronic emission notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

Federal Communications Commission (FCC) statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Class A emission compliance statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Australia and New Zealand Class A statement

Attention: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

European Union EMC Directive conformance statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a nonrecommended modification of the product, including the fitting of non-IBM option cards.

Attention: This is an EN 55022 Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Responsible manufacturer:

International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
914-499-1900

European Community contact:

IBM Deutschland GmbH
Technical Regulations, Department M372
IBM-Allee 1, 71139 Ehningen, Germany
Telephone: +49 7032 15 2941
Email: lugi@de.ibm.com

Germany Class A statement

Deutschsprachiger EU Hinweis:

Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:
"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:

International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:

IBM Deutschland GmbH
Technical Regulations, Abteilung M372
IBM-Allee 1, 71139 Ehningen, Germany
Telephone: +49 7032 15 2941
Email: lugi@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

VCCI Class A statement

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用する
と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策
を講ずるよう要求されることがあります。 VCCI-A

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI). If this equipment is used in a domestic environment, radio interference may occur, in which case the user may be required to take corrective actions.

Japan Electronics and Information Technology Industries Association (JEITA) statement

高調波ガイドライン準用品

Japanese Electronics and Information Technology Industries Association (JEITA)
Confirmed Harmonics Guideline with Modifications (products greater than 20 A per phase)

Korea Communications Commission (KCC) statement

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

This is electromagnetic wave compatibility equipment for business (Type A). Sellers and users need to pay attention to it. This is for any areas other than home.

Russia Electromagnetic Interference (EMI) Class A statement

ВНИМАНИЕ! Настоящее изделие относится к классу А. В жилых помещениях оно может создавать радиопомехи, для снижения которых необходимы дополнительные меры

People's Republic of China Class A electronic emission statement

中华人民共和国“A类”警告声明

声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

Taiwan Class A compliance statement

警告使用者：
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Index

A

accessible documentation 98
assistance, getting 91

C

cable-management arm
 attaching to slide-rail 21, 47, 66
 replacing 45
Class A electronic emission notice 98
Common Access Card reader
 installing 27
 replacing 78
console switch, installing 25
contamination, particulate and gaseous 97
CRU part numbers 37

D

diagnostic data 92
display
 maintenance 34
 technical specifications 35
 using menu 31
disposal of monitor 97
documentation CD 4
documentation format 98
dual USB 2.0 pass through 7
Dynamic System Analysis 92

E

electronic emission Class A notice 98

F

FCC Class A notice 98
flat-panel display and keyboard tray, installing 9
FRU part numbers 37

G

gaseous contamination 97
getting help 91

H

hardware service and support 93
help, getting 91

I

IBM Support Line 92
inner slide-rails, replacing 48
installing
 Common Access Card reader 27

installing (*continued*)
 console switch 25
 keyboard 11

K

keyboard
 installing 11
 replacing 41

M

maintenance of TFT-LCD display 34
monitor, disposal of 97
multi-burner drive, replacing 69

N

notes, important 96
notices 95
 attention 5
 book 5
 caution 5
 danger 5
 electronic emission 98
 FCC, Class A 98
 important 5
 safety v

O

OSD menu, using 31
outer slide-rails
 installing 15
 replacing 48

P

particulate contamination 97
parts
 customer-replaceable unit (CRU) part numbers 37
 inventory checklist 2
pass through, USB 2.0 7
power cords 38
public services network, use in 98
public telecommunications network, connection to 98

R

replacing
 cable-management arm 45
 Common Access Card reader 78
 console unit
 installing replacement console unit in rack 64
 moving keyboard 58
 removing and replacing outer slide-rails 61
 removing existing console unit 55

replacing (*continued*)
customer-replaceable unit (CRU) part numbers 37
keyboard 41
multi-burner drive 69
slide-rail assemblies 48

S

safety notices v
screw
shipping 24
shipping (slide-rail) 15, 52
stabilizer 18
shipping screw 24
shipping screw (slide-rail) 15, 52
slide-rails
installing 15
replacing 48
software service and support 92
specifications, display 35
stabilizer screw 18

T

technical specifications, display 35
telephone numbers 93
TFT-LCD display
maintenance 34
menu 31
technical specifications 35
tools, required 3, 38
trademarks 95

U

United States electronic emission Class A notice 98
United States FCC Class A notice 98
USB 2.0 pass through 7

V

video cable, minimizing electrical interference 22, 67

W

website
personalized support 92
publication ordering 92
support line, telephone numbers 93



Part Number: 00D2441

Printed in USA

(1P) P/N: 00D2441

