


## Connecting the internal battery on an IBM UPS3000 LV or IBM UPS3000 HV uninterruptible power supply

### Important:

- Check the battery recharge date on the shipping carton label. If the date has expired and the batteries were never recharged, do not use the uninterruptible power supply. Contact your service representative.
- Connect the internal battery *after* you install the uninterruptible power supply in a rack cabinet or in a tower configuration. For rack installation instructions, see the *Rack Installation Instructions* document that comes with the rail kit. For tower configuration instructions, see the *Installation and Maintenance Guide* that comes with the uninterruptible power supply.


To connect the internal battery on an IBM® UPS3000 LV or IBM UPS3000 HV uninterruptible power supply, complete the following steps:

1. Make sure that the uninterruptible power supply is turned off and the power cords are disconnected.
2. Remove the packing material from the front of the uninterruptible power supply.

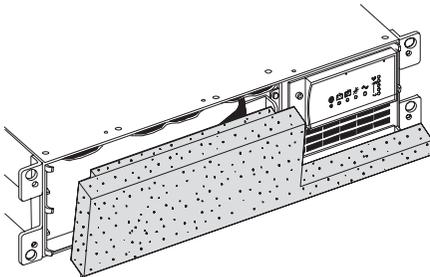


3. Connect the internal battery connector.

**Note:** A small amount of arcing might occur when connecting the batteries. This is normal and does not damage the unit or cause any safety concern.

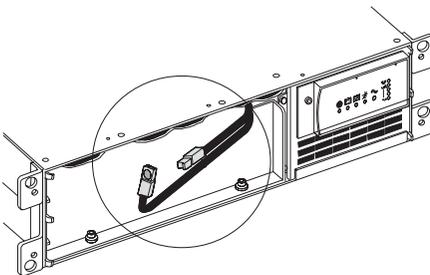

4. Install the uninterruptible power supply front bezel.

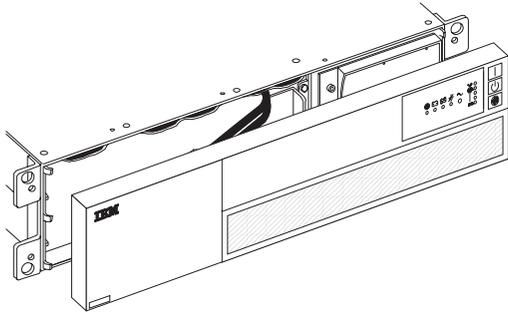

**Important:** Before you move the uninterruptible power supply to another location, make sure that you disconnect the uninterruptible power supply internal battery.

---

**First Edition (April 2006)**

IBM is a trademark of International Business Machines Corporation in the United States, other countries, or both.

© Copyright International Business Machines Corporation 2006. All rights reserved.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 40K9687

