




## Installing the power-supply unit latch

Install the power-supply unit latch over the power-supply latch bracket when you convert the server to a rack configuration. The power-supply unit latch provides support for the power-supply cage while you add or remove DIMMs in the server when it is installed in a rack.

Complete the following steps to install the power-supply unit latch.

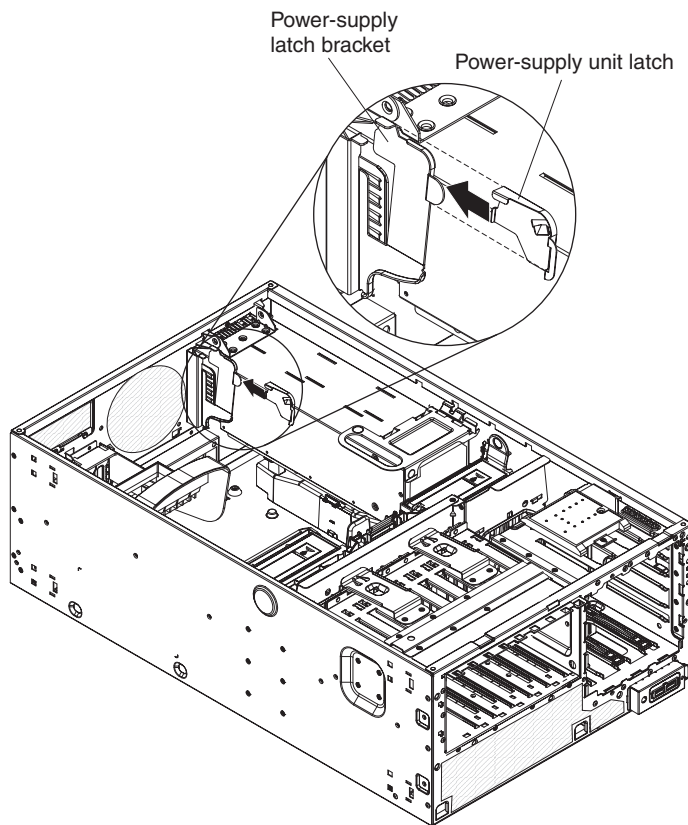

1. If necessary, remove the top cover and power supply or power supplies from the server.
2. Rotate the power supply cage out of the way. For instructions for removing a power supply and rotating the power supply cage out of the way, see the *User's Guide* on the IBM *System x* Documentation CD.
3. Position the power-supply unit latch in front of the power-supply latch bracket and press it into place.
4. Rotate the power supply cage to its closed and locked position inside the server.
5. Reinstall the power supply or power supplies; then, reinstall the top cover.

---

**First edition (October 2007)**

IBM and System x are trademarks of the IBM Corporation in the United States, other countries, or both.

© **Copyright International Business Machines Corporation 2007. All rights reserved.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 40M2479

