

Linux on Z and LinuxONE

*Device Drivers, Features, and Commands  
on Red Hat Enterprise Linux 8.1*



**Note**

Before using this document, be sure to read the information in [“Notices” on page 707](#).

This edition applies to Red Hat Enterprise Linux 8.1 and to all subsequent releases and modifications until otherwise indicated in new editions.

© **Copyright International Business Machines Corporation 2000, 2019.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

# Contents

<b>Summary of changes.....</b>	<b>vii</b>
<b>About this publication.....</b>	<b>ix</b>
<b>Part 1. General concepts.....</b>	<b>1</b>
Chapter 1. How devices are accessed by Linux.....	3
Chapter 2. Devices in sysfs.....	7
Chapter 3. Device auto-configuration for Linux in LPAR mode.....	19
Chapter 4. Kernel and module parameters.....	23
<b>Part 2. Booting and shutdown.....</b>	<b>31</b>
Chapter 5. Console device drivers.....	33
Chapter 6. Initial program loader for IBM Z - zipl.....	55
Chapter 7. Booting Linux.....	77
Chapter 8. Suspending and resuming Linux.....	97
Chapter 9. Shutdown actions.....	103
Chapter 10. The diag288 watchdog device driver.....	109
<b>Part 3. Storage.....</b>	<b>113</b>
Chapter 11. DASD device driver.....	115
Chapter 12. SCSI-over-Fibre Channel device driver.....	151
Chapter 13. Storage-class memory device driver .....	191
Chapter 14. Channel-attached tape device driver.....	195
<b>Part 4. Networking.....</b>	<b>205</b>
Chapter 15. qeth device driver for OSA-Express (QDIO) and HiperSockets.....	207
Chapter 16. OSA-Express SNMP subagent support.....	271
Chapter 17. LAN channel station device driver.....	279
Chapter 18. CTCM device driver.....	285
Chapter 19. AF_IUCV address family support.....	297

Chapter 20. SMC protocol support.....	301
Chapter 21. RDMA over Converged Ethernet.....	305
Chapter 22. Internal shared memory device driver.....	307

## **Part 5. System resources..... 309**

Chapter 23. Managing CPUs.....	311
Chapter 24. NUMA emulation.....	317
Chapter 25. Managing hotplug memory.....	319
Chapter 26. Huge-page support.....	325
Chapter 27. S/390 hypervisor file system.....	329
Chapter 28. TOD clock synchronization.....	335
Chapter 29. Identifying the IBM Z hardware.....	337
Chapter 30. HMC media device driver.....	339
Chapter 31. Data compression with GenWQE and zEDC Express.....	343
Chapter 32. PCI Express support.....	351

## **Part 6. z/VM virtual server integration.....355**

Chapter 33. z/VM concepts.....	357
Chapter 34. Writing kernel APPLDATA records.....	361
Chapter 35. Writing z/VM monitor records.....	367
Chapter 36. Reading z/VM monitor records.....	371
Chapter 37. z/VM recording device driver.....	377
Chapter 38. z/VM unit record device driver.....	383
Chapter 39. z/VM DCSS device driver.....	385
Chapter 40. z/VM CP interface device driver.....	395
Chapter 41. z/VM special messages uevent support.....	397
Chapter 42. Cooperative memory management.....	401

## **Part 7. KVM virtual server integration.....403**

Chapter 43. KVM virtualization on IBM Z.....	405
Chapter 44. The virtual channel subsystem.....	409

	Chapter 45. The virtio CCW transport device driver.....	413
	Chapter 46. Setting up Red Hat Enterprise Linux 8.1 as a KVM host.....	421
	Chapter 47. Setting up a KVM host for VFIO pass-through.....	423
	<b>Part 8. Security.....</b>	<b>431</b>
	Chapter 48. Generic cryptographic device driver.....	433
	Chapter 49. Pseudorandom number generator device driver.....	453
	Chapter 50. True random-number generator device driver.....	457
	Chapter 51. Protected key device driver.....	459
	Chapter 52. Hardware-accelerated in-kernel cryptography.....	463
	Chapter 53. Instruction execution protection.....	467
	<b>Part 9. Performance measurement using hardware facilities.....</b>	<b>469</b>
	Chapter 54. Channel measurement facility.....	471
	Chapter 55. Using the CPU-measurement facilities.....	475
	<b>Part 10. Diagnostics and troubleshooting.....</b>	<b>481</b>
	Chapter 56. Logging I/O subchannel status information.....	483
	Chapter 57. Control program identification.....	485
	Chapter 58. Avoiding common pitfalls.....	489
	Chapter 59. Displaying system information.....	493
	Chapter 60. Creating a kernel dump.....	497
	<b>Part 11. Reference.....</b>	<b>499</b>
	Chapter 61. Commands for Linux on Z.....	501
	Chapter 62. Selected kernel parameters.....	681
	Chapter 63. Linux diagnose code use.....	701
	<b>Appendix A. Accessibility.....</b>	<b>703</b>
	<b>Appendix B. Understanding syntax diagrams.....</b>	<b>705</b>
	<b>Notices.....</b>	<b>707</b>
	<b>Glossary.....</b>	<b>709</b>
	<b>Bibliography.....</b>	<b>719</b>

<b>Index.....</b>	<b>723</b>
-------------------	------------

# Summary of changes

---

This revision includes maintenance and editorial changes. Technical changes or additions to the text and illustrations are indicated by a vertical line to the left of the change.

## What's New for Red Hat Enterprise Linux 8.1

---

This update contains the following changes as compared to Red Hat Enterprise Linux 8.0.

### ***New information***

- You can control the format of the boot data that **zipl** writes to the IPL device, see [“Parameter overview” on page 67](#) and [“zipl modes and syntax overview” on page 56](#)
- Secure boot introduces a new signature verification feature which allows the system firmware to check the authenticity of cryptographic keys to prevent the execution of kernel-space code that is not signed by a trusted key. See [“Secure boot” on page 84](#).
- The CPU Measurement Counter facility is updated to the latest version, see [“Reading CPU-measurement counters for an application” on page 476](#).
- You can now create reports of cryptographic performance measurement data for cryptographic devices at specified intervals, see [“zcryptstats - Display crypto statistics” on page 676](#).

### ***Changed Information***

- The SCSI standalone dump tool and dump no longer require a file system, see [“zipl base functions” on page 55](#).

### ***Deleted Information***

- In the zipl chapter, the section called "Preparing a dump device on a SCSI disk" has been deleted and the information merged with the DASD information, see [“Preparing a DASD device, SCSI disk, or channel-attached tape dump device” on page 64](#).





## About this publication

---

This publication describes the device drivers, features, and commands available to Red Hat Enterprise Linux 8.1 for the control of IBM Z<sup>®</sup> devices and attachments. Unless stated otherwise, in this book the terms *device drivers* and *features* are understood to refer to device drivers and features for Red Hat Enterprise Linux 8.1 for Z.

For details about IBM<sup>®</sup> tested Linux environments, see [www.ibm.com/systems/z/os/linux/resources/testedplatforms.html](http://www.ibm.com/systems/z/os/linux/resources/testedplatforms.html).

Unless stated otherwise, all IBM z/VM<sup>®</sup> related information in this document assumes a current z/VM version, see [www.vm.ibm.com/techinfo/lpmigr/vmleos.html](http://www.vm.ibm.com/techinfo/lpmigr/vmleos.html).

For a support matrix, see the Capabilities and Limits section in the Red Hat Enterprise Linux 8.1 release notes at

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux). The same Web page contains Technical Notes with details on various features and known issues.

You can find the newest version of this publication at

[http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_rh.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_rh.html)

## How this publication is organized

---

The first part of this publication contains general and overview information for the z/Architecture<sup>®</sup> specific device drivers for Red Hat Enterprise Linux 8.1 for Z.

Part two contains chapters about device drivers and features that are used in the context of booting and shutting down Linux.

Part three contains chapters specific to individual storage device drivers.

Part four contains chapters specific to individual network device drivers.

Part five contains chapters about device drivers and features that help to manage the resources of the real or virtual hardware.

Part six contains chapters that describe device drivers and features in support of z/VM virtual server integration.

Part seven contains chapters that describe device drivers and features in support of KVM virtual server integration. Topics cover both Linux as a KVM host and Linux as a KVM guest.

Part eight contains chapters about device drivers and features that support security aspects of Red Hat Enterprise Linux 8.1 for Z.

Part nine contains chapters about assessing the performance of Red Hat Enterprise Linux 8.1 for Z.

Part ten contains chapters about device drivers and features that are used in the context of diagnostics and problem solving.

Part eleven contains chapters with reference information about commands, kernel parameters, and Linux use of z/VM DIAG calls.

## Who should read this publication

---

Most of the information in this publication is intended for system administrators who want to configure Red Hat Enterprise Linux 8.1 for Z.

The following general assumptions are made about your background knowledge:

- You have an understanding of basic computer architecture, operating systems, and programs.
- You have an understanding of Linux and IBM Z terminology.
- You are familiar with Linux device driver software.
- You are familiar with the Z devices attached to your system.

**Programmers:** Some sections are of interest primarily to specialists who want to program extensions to the device drivers and features.

## Hypervisor-specific information

This publication provides information for Linux in LPAR mode and for Linux as a guest of z/VM or KVM.

Information in this publication applies to all hypervisor environments, unless indicated otherwise. Parts and chapters that do not apply to all environments state this exception at the beginning. Lesser differences between environments are detailed within the description.

### Linux in LPAR mode

Processor Resource/Systems Manager (PR/SM) technology always divides IBM Z hardware resources into one or more logical partitions (LPARs). Linux in LPAR mode runs directly in an LPAR.

### Linux on z/VM

The z/VM hypervisor is an IBM Z operating system that can run in an LPAR and provide IBM Z virtual machines. Linux on z/VM runs as a guest in a z/VM guest virtual machine.

z/VM emulates z/Architecture and Z devices to its guests, so most of what applies to Linux in LPAR mode also applies to Linux as a z/VM guest.

Depending on your z/VM virtual machine definition and on your z/VM version and service level, a particular z/VM guest might not provide all of the described features. See [ibm.com/vm/newfunction/index.html](http://ibm.com/vm/newfunction/index.html) about upcoming and available new function for z/VM 7.1.

For information that exclusively applies to Linux on z/VM, see [Part 6, “z/VM virtual server integration,” on page 355](#).

### Linux on KVM

Linux in LPAR mode can be set up as a KVM host that provides KVM virtual servers. Linux on KVM runs as a guest in a KVM virtual server. For information about managing KVM virtual servers, see the documentation of your KVM host distribution and *KVM Virtual Server Management*, SC34-2752.

KVM virtual servers on Z present many mainframe devices as generalized virtio devices to their guests. To Linux, these virtio devices resemble virtio devices on other hardware architectures more than the underlying mainframe devices. Therefore, entire parts and chapters of this publication do not apply to Linux on KVM.

Depending on your KVM host and on your virtual server configuration, a particular KVM guest might not provide all of the described features.

For information that exclusively applies to Linux on KVM, see [Part 7, “KVM virtual server integration,” on page 403](#).

## Conventions and assumptions used in this publication

This section summarizes the styles, highlighting, and assumptions used throughout the publication.

### Authority

Most of the tasks described in this document require a user with root authority. In particular, writing to `procfs`, and writing to most of the described `sysfs` attributes requires root authority.

Throughout this document, it is assumed that you have root authority.

## Making changes persistent

This document describes how to change settings and options for mainframe computers in `sysfs`. In most cases, changes in `sysfs` are not persistent. If you need to make your changes persistent, see *Configuring basic system settings on Red Hat Enterprise Linux 8.1* for details about the configuration files to use.

This document describes how to load modules with **modprobe**. Loading a module this way is not persistent across reboots. If you want to load your kernel modules automatically at boot time, see the section on persistent module loading in *Configuring basic system settings on Red Hat Enterprise Linux 8.1*.

## Terminology

In this document, the term *booting* is used for running boot loader code that loads the Linux operating system. *IPL* is used for issuing an IPL command to load boot loader code or a stand-alone dump utility. See also [“IPL and booting” on page 77](#).

## sysfs and procfs

In this document, the mount point for the virtual Linux file system `sysfs` is assumed to be `/sys`. Correspondingly, the mount point for `procfs` is assumed to be `/proc`.

## debugfs

This document assumes that `debugfs` has been mounted at `/sys/kernel/debug`.

To mount `debugfs`, you can use this command:

```
# mount -t debugfs none /sys/kernel/debug
```

## Documentation directory

This document sometimes refers to files in the Documentation directory in the Linux source tree.

On Red Hat Enterprise Linux 8.1 the full path to this directory is:

```
/usr/share/doc/kernel-doc-<version>/Documentation
```

If this directory is not present, install the `kernel-doc-<version.el7>.noarch` RPM.

## Number prefixes

In this publication, KB means 1024 bytes, MB means 1,048,576 bytes, and GB means 1,073,741,824 bytes.

## Hexadecimal numbers

Mainframe documents and Linux documents tend to use different styles for writing hexadecimal numbers. Thirty-one, for example, would typically read X'1F' in a mainframe book and 0x1f in a Linux book.

Because the Linux style is required in many commands and is also used in some code samples, the Linux style is used throughout this publication.

## Highlighting

This document uses the following highlighting styles:

- Paths and URLs are highlighted in monospace.
- Variables are highlighted in *<italics within angled brackets>*.
- Commands in text are highlighted in **monospace bold**.
- Input and output as normally seen on a computer screen is shown

within a screen frame.  
Prompts are shown as hash signs:  
#

---

# Part 1. General concepts

This information at an overview level describes concepts that apply across different device drivers and kernel features.

## **Newest version**

You can find the newest version of this book at  
[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)



# Chapter 1. How devices are accessed by Linux

Applications on Linux access character and block devices through device nodes, and network devices through network interfaces.

## Device names, device nodes, and major/minor numbers

The Linux kernel represents character and block devices as pairs of numbers `<major>:<minor>`.

Some major numbers are reserved for particular device drivers. Other major numbers are dynamically assigned to a device driver when Linux boots. For example, major number 94 is always the major number for DASD devices while the device driver for channel-attached tape devices has no fixed major number. A major number can also be shared by multiple device drivers. See `/proc/devices` to find out how major numbers are assigned on a running Linux instance.

The device driver uses the minor number `<minor>` to distinguish individual physical or logical devices. For example, the DASD device driver assigns four minor numbers to each DASD: one to the DASD as a whole and the other three for up to three partitions.

Device drivers assign device names to their devices, according to a device driver-specific naming scheme (see, for example, “DASD naming scheme” on page 120). Each device name is associated with a minor number (see Figure 1 on page 3).

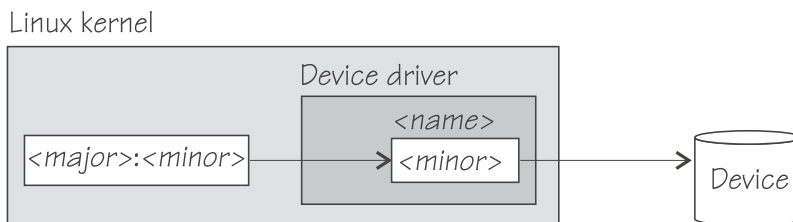


Figure 1. Minor numbers and device names

User space programs access character and block devices through *device nodes* also referred to as *device special files*. When a device node is created, it is associated with a major and minor number (see Figure 2 on page 3).

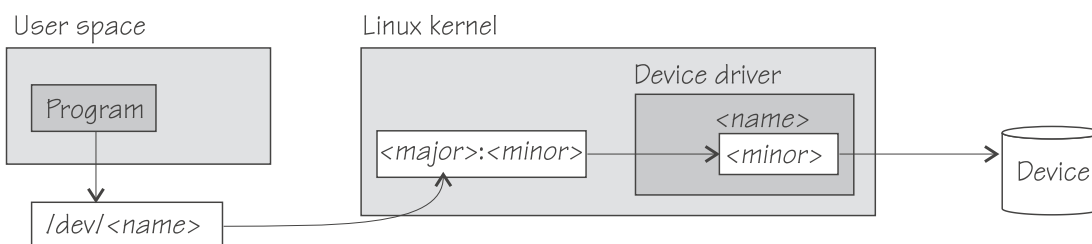


Figure 2. Device nodes

Red Hat Enterprise Linux 8.1 uses udev to create device nodes for you. There is always a device node that matches the device name that is used by the kernel, and additional nodes might be created by special udev rules. See the udev man page for more details.

## Network interfaces

The Linux kernel representation of a network device is an interface.

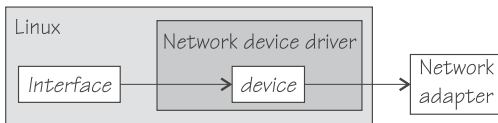


Figure 3. Interfaces

When a network device is defined, it is associated with a real or virtual network adapter (see [Figure 3 on page 4](#)). You can configure the adapter properties for a particular network device through the device representation in sysfs (see “[Device directories](#)” on page 9).

You activate or deactivate a connection by addressing the interface with **ip** or an equivalent command. All interfaces that are provided by the IBM Z specific network device drivers are interfaces for the Internet Protocol (IP).

On Red Hat Enterprise Linux, you configure network interfaces through the NetworkManager. Use the **nmcli** command line tool to interact with the NetworkManager.

## Predictable network device names

Red Hat Enterprise Linux uses predictable names for network devices. These names are stable across reboots and network adapter replacements.

Predictable naming is enabled by default. In this naming scheme, a mainframe network device has a name of the following form:

```
<pf><type><bus_id>
```

For example:

```
encf5f0
```

Where:

### <pf>

A two-character prefix for the network type. The type can be one of the following:

- en - Ethernet
- ww - WAN
- sl - serial line, such as CTC

### <type>

The device type. The device type of channel command word (CCW) devices is c. For PCIe devices, the type is s. For an introduction to mainframe devices in Linux, see “[Device categories](#)” on page 7.

### <bus\_id>

For predictable network names, Red Hat Enterprise Linux 8.1 shortens the device bus-ID by omitting all dots and leading zeroes.

### Examples:

- 0.0.0b01 becomes encb01
- 0.1.00cd becomes enc100cd

You can use **lszdev -a** or **lscss -a** to obtain a list of the devices in your system.

For more information about the predictable naming scheme, see the *Configuring and managing networking in Red Hat Enterprise Linux 8.1* available at

```
https://access.redhat.com/site/documentation/en-US/Red\_Hat\_Enterprise\_Linux
```

## Matching devices with the corresponding interfaces

If you define multiple interfaces on a Linux instance, you must keep track of the interface names assigned to your network devices.



Red Hat Enterprise Linux 8.1 uses predictable network names, which make it easy to match network devices with their interface names. The interface names are preserved across reboots.

How to keep track of the mapping between interface names and devices depends on the network device driver. For qeth, you can use the **lszdev qeth** command (see [“lszdev - Display IBM Z device configurations”](#) on page 605) to obtain a mapping.

After setting a device online, issue **journalctl** to find the associated interface name in the messages that are issued in response to the device being set online.

For each network device that is online, there is a symbolic link of the form `/sys/class/net/<interface>/device` where `<interface>` is the interface name. This link points to a `sysfs` directory that represents the corresponding network device. You can read this symbolic link with **readlink** to confirm that an interface name corresponds to a particular network device.

[“Device views in sysfs”](#) on page 11 tells you where you can find the device directories with their attributes in `sysfs`.

## Main steps for setting up a network interface

The main steps apply to all network devices drivers that are based on ccwgroup devices (for example, qeth and lcs devices). How to perform a particular step can be different for the different device drivers.

The steps that follow apply to Linux on z/VM and to Linux in LPAR mode. For Linux on KVM, these steps are performed for you on the KVM host. The steps can be different for the different device drivers.

1. Create a network device by combining suitable subchannels into a group device. The device driver then creates directories that represent the device in `sysfs`.
2. Configure the device through its attributes in `sysfs`. See [“Device views in sysfs”](#) on page 11. Some devices have attributes that can or must be set later when the device is online or when the connection is active.
3. Set the device online. This step associates the device with an interface name and thus makes the device known to the Linux network stack. For devices that are associated with a physical network adapter it also initializes the adapter for the network interface.
4. Configure and activate the interface. This step adds interface properties like IP addresses, netmasks, and MTU to the network interface and moves the network interface into state "up". The interface is then ready for user space (socket) programs to run connections and transfer data across it.

To configure a network device, use tools provided with Red Hat Enterprise Linux. See *Configuring and managing networking in Red Hat Enterprise Linux 8.1*



## Chapter 2. Devices in sysfs

Most Linux device drivers create structures in sysfs. These structures hold information about individual devices and are also used to configure and control the devices.

### Device categories

The `/sys/devices` directory includes several device categories that are specific to z/Architecture.

Figure 4 on page 7 illustrates a part of sysfs.

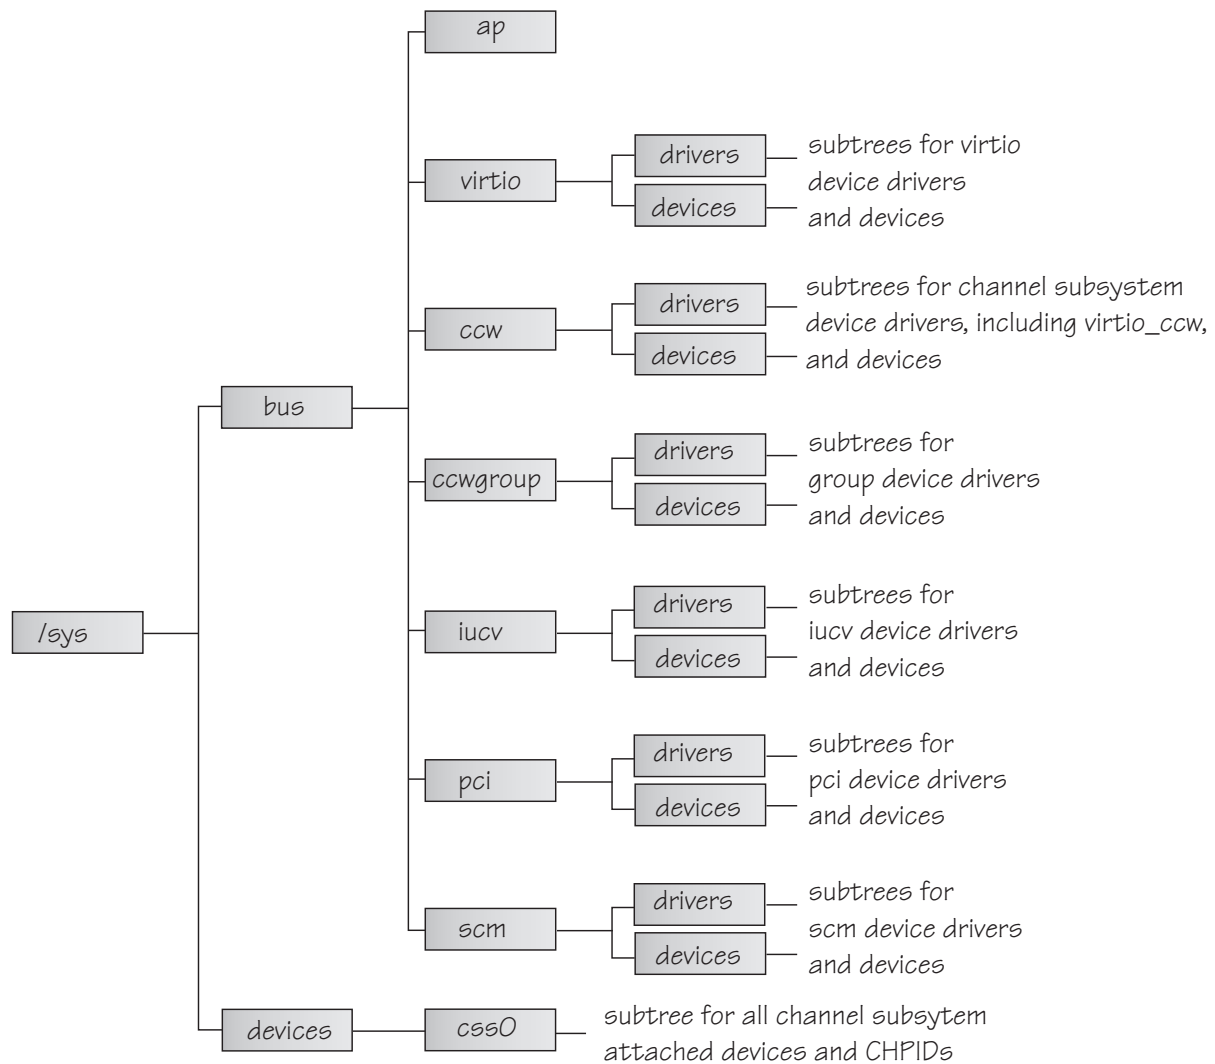


Figure 4. sysfs

`/sys/bus` and `/sys/devices` are common Linux directories. The directories following `/sys/bus` sort the device drivers according to the categories of devices they control. The sysfs branch for a particular category might be missing if there is no device for that category.

#### AP devices

are adjunct processors used for cryptographic operations.

## virtio devices

are virtualized devices as used on KVM guests. This branch lists devices with names `virtio<n>` that represent the virtio aspects of virtio-ccw devices.

The CCW aspects of virtio-ccw devices are represented by corresponding devices in the `/sys/bus/ccw` branch, with device bus-IDs as device names. You usually use the representation in the `/sys/bus/ccw` branch to work with virtio-ccw devices.

## CCW devices

are devices that can be addressed with channel-command words (CCWs). These devices use a single subchannel on the mainframe's channel subsystem.

## CCW group devices

are devices that use multiple subchannels on the mainframe's channel subsystem.

## IUCV devices

are devices for virtual connections between z/VM guest virtual machines within an IBM mainframe. IUCV devices do not use the channel subsystem.

## PCI devices

represent PCIe devices, for example, a 10GbE RoCE Express device. In sysfs, PCIe devices are listed in the `/pci` directory rather than the `/pcie` directory.

Table 1 on page 8 lists the z/Architecture specific device drivers that have representation in sysfs:

Table 1. Device drivers with representation in sysfs

Device driver	Category	sysfs directories
3215 console	CCW	<code>/sys/bus/ccw/drivers/3215</code>
3270 console	CCW	<code>/sys/bus/ccw/drivers/3270</code>
DASD	CCW	<code>/sys/bus/ccw/drivers/dasd-eckd</code> <code>/sys/bus/ccw/drivers/dasd-fba</code>
SCSI-over-Fibre Channel	CCW	<code>/sys/bus/ccw/drivers/zfcp</code>
Channel-attached tape	CCW	<code>/sys/bus/ccw/drivers/tape_34xx</code> <code>/sys/bus/ccw/drivers/tape_3590</code>
virtio CCW transport device driver	CCW	<code>/sys/bus/ccw/drivers/virtio_ccw</code>
Storage class memory supporting Flash Express	SCM	<code>/sys/bus/scm/drivers/scm_block</code>
Cryptographic	AP	<code>/sys/bus/ap/drivers/cex3a</code>
DCSS	n/a	<code>/sys/devices/dcssblk</code>
z/VM recording	IUCV	<code>/sys/bus/iucv/drivers/vmlogrdr</code>
qeth (OSA-Express features and HiperSockets )	CCW group	<code>/sys/bus/ccwgroup/drivers/qeth</code>
LCS	CCW group	<code>/sys/bus/ccwgroup/drivers/lcs</code>
CTCM	CCW group	<code>/sys/bus/ccwgroup/drivers/ctcm</code>
10GbE RoCE Express devices (mlx4_en)	PCI	<code>sys/bus/pci/drivers/mlx4_core</code>
10 GbE RoCE Express2 devices (mlx5_core)	PCI	<code>sys/bus/pci/drivers/mlx5_core</code>

Some device drivers do not relate to physical devices that are connected through the channel subsystem. Their representation in sysfs differs from the CCW and CCW group devices, for example, the Cryptographic device drivers have their own category, AP.

The following sections provide more details about devices and their representation in sysfs.

## Device directories

---

Each device that is known to Linux is represented by a directory in sysfs.

For CCW and CCW group devices the name of the directory is a *bus ID* that identifies the device within the scope of a Linux instance. For a CCW device, the bus ID is the device's device number with a leading "0.<n>", where <n> is the subchannel set ID. For example, 0.1.0ab1.

CCW group devices are associated with multiple device numbers. For CCW group devices, the bus ID is the primary device number with a leading "0.<n>", where <n> is the subchannel set ID.

[“Device views in sysfs” on page 11](#) tells you where you can find the device directories with their attributes in sysfs. Red Hat Enterprise Linux 8.1 uses configuration files to control devices. For example, network devices have interface scripts called `/etc/sysconfig/network-scripts/ifcfg-<interface-name>`. See the *Configuring and managing networking in Red Hat Enterprise Linux 8.1* for details about configuration files.

## Device attributes

The device directories contain attributes. You control a device by writing values to its attributes.

Some attributes are common to all devices in a device category, other attributes are specific to a particular device driver. The following attributes are common to all CCW devices:

### online

You use this attribute to set the device online or offline. To set a device online, write the value 1 to its online attribute. To set a device offline, write the value 0 to its online attribute.

### cutype

specifies the control unit type and model, if applicable. This attribute is read-only.

### cmb\_enable

enables I/O data collection for the device. See [“Enabling, resetting, and switching off data collection” on page 472](#) for details.

### devtype

specifies the device type and model, if applicable. This attribute is read-only.

### availability

indicates whether the device can be used. The following values are possible:

#### good

This is the normal state. The device can be used.

#### boxed

DASD only: The device is locked by another operating system instance and cannot be used until the lock is surrendered or the DASD is accessed by force (see [“Accessing DASD by force” on page 129](#)).

#### no device

Applies to disconnected devices only. The device disappears after a machine check and the device driver requests to keep the device online anyway. Changes back to "good" when the device returns after another machine check and the device driver accepts the device back.

#### no path

Applies to disconnected devices only. After a machine check or a logical vary off, no path remains to the device. However, the device driver keeps the device online. Changes back to "good" when

the path returns after another machine check or logical vary on and the device driver accepts the device back.

### modalias

contains the module alias for the device. It is of the format:

```
ccw:t<cu_type>m<cu_model>
```

or

```
ccw:t<cu_type>m<cu_model>dt<dev_type>dm<dev_model>
```

## Setting attributes

Directly write to attributes or, for CCW devices, use the **chccwdev** command to set attribute values.

### About this task

Because the KVM hypervisor hides many aspects of physical devices that back virtio devices, the scope for setting device attributes for these devices on KVM guests is limited.

### Procedure

- You can set a writable attribute by writing the designated value to the corresponding attribute file.
- For CCW devices, you can also use the **chzdev** or the **chccwdev** command (see [“chzdev - Configure IBM Z devices”](#) on page 515 and [“chccwdev - Set CCW device attributes”](#) on page 502) to set attributes.

With a single **chzdev** or **chccwdev** command you can:

- Set an attribute for multiple devices
- Set multiple attributes for a device, including setting the device online
- Set multiple attributes for multiple devices

## Working with newly available devices

Errors can occur if you try to work with a device before its sysfs representation is completely initialized.

### About this task

When new devices become available to a running Linux instance, some time elapses until the corresponding device directories and their attributes are created in sysfs. Errors can occur if you attempt to work with a device for which the sysfs structures are not present or are not complete. These errors are most likely to occur and most difficult to handle when you are configuring devices with scripts.

### Procedure

Use the following steps before you work with a newly available device to avoid such errors:

1. Attach the device, for example, with a z/VM CP ATTACH command or by dynamically attaching a device to a KVM virtual server.
2. Assure that the sysfs structures for the new device are complete:

```
# echo 1 > /proc/cio_settle
```

This command returns control after all pending updates to sysfs are complete.

**Tip:** For CCW devices, you can omit this step if you then use **chccwdev** (see [“chccwdev - Set CCW device attributes”](#) on page 502) to work with the devices. **chccwdev** triggers `cio_settle` for you and waits for `cio_settle` to complete.

3. Assure that udev actions for the new device are complete.

```
# udevadm settle
```

The **settle** command returns control after all pending events are complete.

## Results

You can now work with the new device. For example, you can set the device online or set attributes for the device.

## Device views in sysfs

---

sysfs provides multiple views of device specific data.

The most important views are:

- “[Device driver view](#)” on page 11
- “[Device category view](#)” on page 12
- “[Device view](#)” on page 12
- “[Channel subsystem view](#)” on page 13

Many paths in sysfs contain device bus-IDs to identify devices. Device bus-IDs of subchannel-attached devices are of the form:

```
0.<n>.<devno>
```

where *<n>* is the subchannel set-ID and *<devno>* is the device number.

## Device driver view

This view groups devices by the device drivers that control them.

The device driver view is of the form:

```
/sys/bus/<bus>/drivers/<driver>/<device_bus_id>
```

where:

### **<bus>**

is the device category, for example, ccw or ccwgroup.

### **<driver>**

is a name that specifies an individual device driver or the device driver component that controls the device (see [Table 1 on page 8](#)).

### **<device\_bus\_id>**

identifies an individual device (see “[Device directories](#)” on page 9).

**Note:** DCSSs are not represented in this view.

## Examples

- This example shows the path for an ECKD type DASD device:

```
/sys/bus/ccw/drivers/dasd-eckd/0.0.b100
```

- This example shows the path for a qeth device:

```
/sys/bus/ccwgroup/drivers/qeth/0.0.a100
```

- This example shows the path for a cryptographic device (a CEX3A card):

```
/sys/bus/ap/drivers/cex3a/card3b
```

## Device category view

This view groups devices by major categories that can span multiple device drivers.

The device category view does not sort the devices according to their device drivers. All devices of the same category are contained in a single directory. The device category view is of the form:

```
/sys/bus/<bus>/devices/<device_bus_id>
```

where:

**<bus>**

is the device category, for example, ccw or ccwgroup.

**<device\_bus\_id>**

identifies an individual device (see [“Device directories”](#) on page 9).

### Note:

- DCSSs are not represented in this view.
- /sys/bus/ccw/devices includes virtio CCW devices.

### Examples

- This example shows the path for a CCW device.

```
/sys/bus/ccw/devices/0.0.b100
```

- This example shows the path for a CCW group device.

```
/sys/bus/ccwgroup/devices/0.0.a100
```

- This example shows the path for a cryptographic device:

```
/sys/bus/ap/devices/card3b
```

## Device view

This view sorts devices according to their device drivers, but independent from the device category. It also includes logical devices that are not categorized.

The device view is of the form:

```
/sys/devices/<driver>/<device>
```

where:

**<driver>**

is a name that specifies an individual device driver or the device driver component that controls the device.

**<device>**

identifies an individual device. The name of this directory can be a device bus-ID or the name of a DCSS or IUCV device.

### Examples

- This example shows the path for a qeth device.

```
/sys/devices/qeth/0.0.a100
```

- This example shows the path for a DCSS block device.

```
/sys/devices/dcssblk/mydcss
```



## Channel subsystem view

The channel subsystem view shows the relationship between subchannels and devices.

The channel subsystem view is of the form:

```
/sys/devices/css0/<subchannel>
```

where:

### <subchannel>

is a subchannel number with a leading "0.<n>.", where <n> is the subchannel set ID.

I/O subchannels show the devices in relation to their respective subchannel sets and subchannels. An I/O subchannel is of the form:

```
/sys/devices/css0/<subchannel>/<device_bus_id>
```

where:

### <subchannel>

is a subchannel number with a leading "0.<n>.", where <n> is the subchannel set ID.

### <device\_bus\_id>

is a device number with a leading "0.<n>.", where <n> is the subchannel set ID (see [“Device directories”](#) on page 9).

## Examples

- This example shows a CCW device with device number 0xb100 that is associated with a subchannel 0x0001.

```
/sys/devices/css0/0.0.0001/0.0.b100
```

- This example shows a CCW device with device number 0xb200 that is associated with a subchannel 0x0001 in subchannel set 1.

```
/sys/devices/css0/0.1.0001/0.1.b200
```

- The entries for a group device show as separate subchannels. If a CCW group device uses three subchannels 0x0002, 0x0003, and 0x0004 the subchannel information could be:

```
/sys/devices/css0/0.0.0002/0.0.a100  
/sys/devices/css0/0.0.0003/0.0.a101  
/sys/devices/css0/0.0.0004/0.0.a102
```

Each subchannel is associated with a device number. Only the primary device number is used for the bus ID of the device in the device driver view and the device view.

- This example lists the information available for a non-I/O subchannel with which no device is associated:

```
ls /sys/devices/css0/0.0.ff00/  
bus driver modalias subsystem type uevent
```

## Subchannel attributes

There are sysfs attributes that represent subchannel properties, including common attributes and information specific to the subchannel type.

Subchannels have two common attributes:

### type

The subchannel type, which is a numerical value, for example:

- 0 for an I/O subchannel
- 1 for a CHSC subchannel

- 3 for an EADM subchannel

#### **modalias**

The module alias for the device of the form `css:t<n>`, where `<n>` is the subchannel type (for example, 0 or 1).

These two attributes are the only ones that are always present. Some subchannels, like I/O subchannels, might contain devices and further attributes.

Apart from the bus ID of the attached device, I/O subchannel directories typically contain these attributes:

#### **chpids**

is a list of the channel-path identifiers (CHPIDs) through which the device is connected. See also [“Channel path ID information”](#) on page 15.

#### **pimpampom**

provides the path installed, path available, and path operational masks. See *z/Architecture Principles of Operation*, SA22-7832 for details about the masks.

## Channel path measurement

For Linux in LPAR mode and Linux on z/VM, a `sysfs` attribute controls the channel path measurement facility of the channel subsystem.

```
/sys/devices/css0/cm_enable
```

With the `cm_enable` attribute you can enable and disable the extended channel-path measurement facility. It can take the following values:

#### **0**

Deactivates the measurement facility and remove the measurement-related attributes for the channel paths. No action if measurements are not active.

#### **1**

Attempts to activate the measurement facility and create the measurement-related attributes for the channel paths. No action if measurements are already active.

If a machine does not support extended channel-path measurements the `cm_enable` attribute is not created.

Two `sysfs` attributes are added for each channel path object:

#### **cmg**

Specifies the channel measurement group or unknown if no characteristics are available.

#### **shared**

Specifies whether the channel path is shared between LPARs or unknown if no characteristics are available.

If measurements are active, two more `sysfs` attributes are created for each channel path object:

#### **measurement**

A binary `sysfs` attribute that contains the extended channel-path measurement data for the channel path. It consists of eight 32-bit values and must always be read in its entirety, or 0 will be returned.

#### **measurement\_chars**

A binary `sysfs` attribute that is either empty, or contains the channel measurement group dependent characteristics for the channel path, if the channel measurement group is 2 or 3. If not empty, it consists of five 32-bit values.

### Examples

- To turn measurements on issue:

```
# echo 1 > /sys/devices/css0/cm_enable
```

- To turn measurements off issue:

```
# echo 0 > /sys/devices/css0/cm_enable
```

## Channel path ID information

All CHPIDs that are known to Linux are shown alongside the subchannels in the `/sys/devices/css0` directory.

The directories that represent the CHPIDs have the form:

```
/sys/devices/css0/chp0.<chpid>
```

where `<chpid>` is a two digit hexadecimal CHPID.

**Example:** `/sys/devices/css0/chp0.4a`

## Setting a CHPID logically online or offline

Directories that represent CHPIDs contain a `status` attribute that you can use to set the CHPID logically online or offline.

### Before you begin

Do not set all CHPIDs that connect a vital device offline. For example, Linux will crash if you set all CHPIDs for the root device offline.

### About this task

When a CHPID has been set logically offline from a particular Linux instance, the CHPID is, in effect, offline for this Linux instance. A CHPID that is shared by multiple operating system instances can be logically online to some instances and offline to others. A CHPID can also be logically online to Linux while it has been varied off at the SE.

### Procedure

Issue a command of this form:

```
# echo <value> > /sys/devices/css0/chp0.<CHPID>/status
```

where:

**<CHPID>**

is a two digit hexadecimal CHPID.

**<value>**

is either `on` or `off`.

### Examples

- To set a CHPID 0x4a logically offline issue:

```
# echo off > /sys/devices/css0/chp0.4a/status
```

- To read the `status` attribute to confirm that the CHPID is logically offline issue:

```
# cat /sys/devices/css0/chp0.4a/status  
offline
```

- To set the same CHPID logically online issue:

```
# echo on > /sys/devices/css0/chp0.4a/status
```

- To read the status attribute to confirm that the CHPID is logically online issue:

```
# cat /sys/devices/css0/chp0.4a/status
online
```

## Configuring a CHPID on LPAR

For Linux in LPAR mode, directories that represent CHPIDs contain a `configure` attribute that you can use to query and change the configuration state of I/O channel-paths.

### About this task

The following configuration changes are supported:

- From standby to configured ("configure")
- From configured to standby ("deconfigure")

### Procedure

Issue a command of this form:

```
# echo <value> > /sys/devices/css0/chp0.<CHPID>/configure
```

where:

#### <CHPID>

is a two digit hexadecimal CHPID.

#### <value>

is either 1 or 0.

To query and set the configure value using commands, see [“chchp - Change channel path status”](#) on page 504 and [“lschp - List channel paths”](#) on page 577.

### Examples

- To set a channel path with the ID 0x40 to standby issue:

```
# echo 0 > /sys/devices/css0/chp0.40/configure
```

This operation is equivalent to performing a Configure Channel Path Off operation on the hardware management console.

- To read the configure attribute to confirm that the channel path has been set to standby issue:

```
# cat /sys/devices/css0/chp0.40/configure
0
```

- To set the same CHPID to configured issue:

```
# echo 1 > /sys/devices/css0/chp0.40/configure
```

This operation is equivalent to performing a Configure Channel Path On operation on the hardware management console.

- To read the status attribute to confirm that the CHPID has been set to configured issue:

```
# cat /sys/devices/css0/chp0.40/configure
1
```

## Finding the physical channel associated with a CHPID

Use the mapping of physical channel IDs (PCHID) to CHPIDs to find the hardware from the CHPID number or the CHPID numbers from the PCHID.

### About this task

A CHPID is associated with either a physical port or with an internal connection defined inside the mainframe, such as HiperSockets. See Figure 5 on page 17. You can determine the PCHID or internal channel ID number associated with a CHPID number.

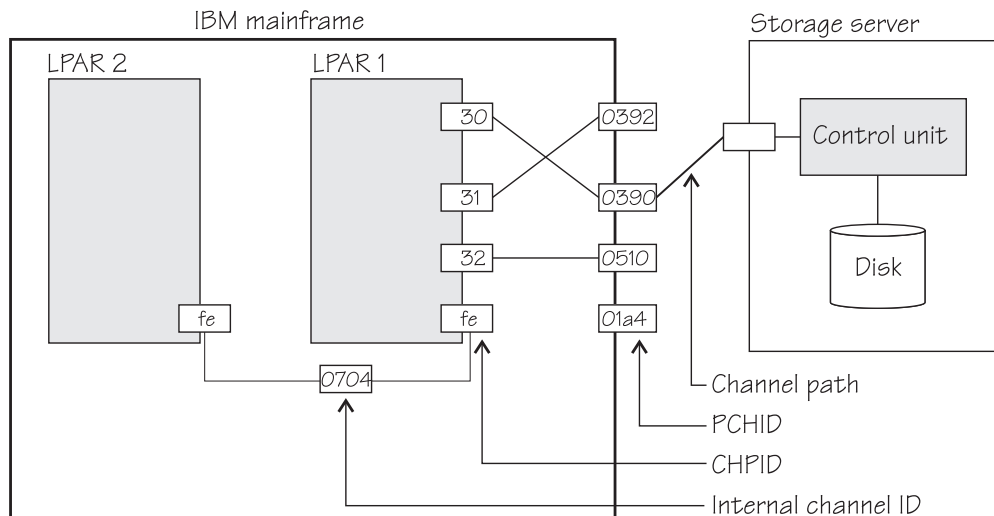


Figure 5. Relationships between CHPIDs, PCHIDs, and internal channel ID numbers.

Knowing the PCHID number can be useful in the following situations:

- When Linux indicates that a CHPID is in an error state, you can use the PCHID number to identify the associated hardware.
- When a hardware interface requires service action, the PCHID mapping can be used to determine which CHPIDs and I/O devices will be affected.

The internal channel ID number can be useful to determine which CHPIDs are connected to the same communication path, such as a HiperSockets link.

### Procedure

To find the physical channel ID corresponding to a CHPID, either:

- Display the mapping of all CHPIDs to PCHIDs. Issue the **lschp** command:

```
# lschp
```

- Find the channel-ID related files for the CHPID.

These sysfs files are located under `/sys/devices/css0/chp0.<num>`, where `<num>` is the two-digit, lower-case, hexadecimal CHPID number. There are two attribute files:

#### chid

The channel ID number.

#### chid\_external

A flag indicating whether this CHPID is associated with an internal channel ID (value 0) or a physical channel ID (value 1).

The sysfs attribute files are not created when no channel ID information is available to Linux. For Linux in LPAR mode, this information is always available. For Linux on z/VM and Linux on KVM, the availability depends on the configuration and on the hypervisor version.

### Example

The **lschp** command shows channel ID information in a column labeled PCHID. Internal channel IDs are enclosed in brackets. If no channel ID information is available, the column will show "-".

```
# lschp
CHPID  Vary  Cfg.  Type  Cmg  Shared  PCHID
=====
0.30   1     1     1b    2     1      0390
0.31   1     1     1b    2     1      0392
0.32   1     1     1b    2     1      0510
0.33   1     1     1b    2     1      0512
0.34   1     0     1b    -     -      0580
0.fc   1     1     24    3     1      (0702)
0.fd   1     1     24    3     1      (0703)
0.fe   1     1     24    3     1      (0704)
```

This example shows that CHPID 30 is associated with PCHID 0390, while CHPID fe is associated with internal channel ID 0704.

Alternatively, check the channel ID sysfs files, for example for CHPID 30:

```
# cat /sys/devices/css0/chp0.30/chid
0390
# cat /sys/devices/css0/chp0.30/chid_external
1
```

## CCW hotplug events

A hotplug event is generated when a CCW device appears or disappears with a machine check.

The hotplug events provide the following variables:

### CU\_TYPE

for the control unit type of the device that appeared or disappeared.

### CU\_MODEL

for the control unit model of the device that appeared or disappeared.

### DEV\_TYPE

for the type of the device that appeared or disappeared.

### DEV\_MODEL

for the model of the device that appeared or disappeared.

### MODALIAS

for the module alias of the device that appeared or disappeared. The module alias is the same value that is contained in `/sys/devices/css0/<subchannel_id>/<device_bus_id>/modalias` and is of the format `ccw:t<cu_type>m<cu_model>` or `ccw:t<cu_type>m<cu_model>dt<dev_type>dm<dev_model>`

Hotplug events can be used, for example, for:

- Automatically setting devices online as they appear
- Automatically loading driver modules for which devices have appeared

---

## Chapter 3. Device auto-configuration for Linux in LPAR mode

Mainframes as of z14 can store device configuration data for Linux in LPAR mode on the Support Element (SE).

You provide this configuration data through a hardware management console (HMC) interface on mainframes or LinuxONE systems in Dynamic Partitioning Manager (DPM) mode. This data can then be processed automatically by Linux during the boot process.

---

### Making devices available to Linux

Devices must be configured on the hardware and in Linux before they can be used.

#### Defining devices to an LPAR

Typical mainframe systems run numerous operating system instances in parallel and connect to a considerable number of storage, network, and other peripheral devices. In this environment, device access must be controlled.

- Workload isolation demands selective and controlled device access.
- Operating systems expend cycles, time, and memory to manage each device. For example, on Linux, `udev` creates structures for each registered device.

Data centers with discrete host systems can use physical cabling between hosts and peripheral devices to manage device access. On mainframes with their logical partitions (LPARs), much of this cabling would need to be within the mainframe itself.

Instead of cables, the mainframe's *hardware configuration* controls which LPAR has access to which I/O device. The hardware configuration is specified in an input/output configuration data set (IOCDs). Traditionally, IOCDs are created with the hardware configuration definition (HCD) program.

**DPM:** The mainframe firmware automatically processes the device-configuration data you provide on the HMC interface, and creates and activates a corresponding IOCDs for you.

#### Controlling device availability on Linux

The mainframe configuration already limits the I/O devices that are available to a Linux instance. The `cio_ignore` feature provides another control point on Linux. With `cio_ignore`, you can create and maintain a list of devices to be ignored by Linux.

**DPM:** If `cio_ignore` is active, the list of devices to be ignored by Linux is automatically adjusted to accommodate all devices that are configured on the HMC interface. If available to the hardware, these devices become available to Linux and are set online.

To enforce the current `cio_ignore` list, you can use the `rd.zdev=no-auto` kernel parameter to disregard auto-configuration for devices on Linux.

#### Configuring devices on Linux

On a running Linux instance, you can use the **`chzdev`** command to configure individual devices. With the **`lszdev`** command you can display the device settings. These tools distinguish different types of configurations.

##### Active configuration

The current configuration, which might include settings that do not persist across reboots.

##### Persistent configuration

The configuration to be applied when the Linux instance is booted.

### DPM only: Auto-configuration

The configuration as specified on the HMC interface.

**chzdev** provides a richer set of configuration options than the HMC interface. The active and persistent settings are often a fine-tuned version of the auto-configuration.

### Overriding the auto-configuration

You can override the auto-configuration for a device with a persistent configuration.

For devices that come online early in the boot process, use the `zdev:early` device attribute to ensure that this persistent configuration is available at this early stage (see [“chzdev - Configure IBM Z devices”](#) on page 515).

## Managing auto-configuration data

Use the **lszdev** and **chzdev** commands version 2.5 or later to manage auto-configuration data.

### Displaying auto-configuration data

The **lszdev** command can display auto-configuration data.

Use the **lszdev** command with the `--auto-config` option to display a list of devices for which auto-configuration data is available.

#### Example:

```
# lszdev --auto-config
TYPE      ID      AUTO
dasd-eckd 0.0.ec30 yes
dasd-eckd 0.0.ec31 yes
```

Auto-configuration settings can be overridden with settings in the persistent configuration. Omit the `--auto-config` option to find out for which devices auto-configuration is effective:

#### Example:

```
# lszdev
TYPE      ID      ON  PERS  NAMES
dasd-eckd 0.0.ec30 yes yes  dasda
dasd-eckd 0.0.ec31 yes auto dasdb
dasd-eckd 0.0.ec32 yes no   dasdc
qeth      0.0.f5f0:0.0.f5f1:0.0.f5f2 yes no   encf5f0
generic-ccw 0.0.0009 yes no
```

In the example, auto-configuration data is effective for only one device, `0.0.ec31`. Effective auto-configuration data is indicated through the value `auto` in the `PERS` column of the command output.

The **lszdev** output for detailed information about a device includes a separate column, `AUTOCONF`, for auto-configuration data, if available.

#### Example:



```
# lsdev -i 0.0.ec31
DEVICE dasd-eckd 0.0.ec31
Names      : -
Modules    : dasd_eckd_mod dasd_mod
Online     : no
Exists     : yes
Persistent : no
Auto-configured : yes
```

ATTRIBUTE	ACTIVE	PERSISTENT	AUTOCONF
cmb_enable	"0"	-	-
eer_enabled	"0"	-	-
erplog	"0"	-	-
failfast	"0"	-	-
last_known_reservation_state	"none"	-	-
online	"1"	-	"1"
raw_track_access	"0"	-	-
readonly	"0"	-	-
reservation_policy	"ignore"	-	-
use_diag	"0"	-	-

If the AUTOCONF column is omitted, no auto-configuration data is available for this device. You can force the column with the `--auto-config` option.

## Modifying the auto-configuration

Persistent changes to the auto-configuration can be made only through the hardware interface through which the original device configuration is specified. Such changes are applied with the next reboot.

You can use **chzdev** with the `-d` and `--auto-conf` options to temporarily remove the auto-configuration for a device.

### Example:

```
# chzdev -d --auto-conf 0.0.ec31
Deconfiguring devices in the auto-configuration only
ECKD DASD 0.0.ec31 deconfigured
```

Auto-configuration settings are then not applied when the device appears. These configuration changes do not remove the corresponding configuration data on the SE. The auto-configuration data for the device is restored with the next reboot.

## Overriding the auto-configuration for devices that are used early in the boot process

With **chzdev**, you can override settings from the auto-configuration in the active configuration or persistently. Some persistent settings for devices that are set online early in the boot process must be included in the initial RAM disk.

Use the **chzdev** command to set the `zdev:early` device attribute for such devices.

### Example:

```
# chzdev -e dasd-fba e030 zdev:early=1
FBA DASD 0.0.e030 configured
Note: The initial RAM-disk must be updated for these changes to take effect:
- FBA DASD 0.0.e030
Update initial RAM-disk now? (yes/no) yes
```

Do not indiscriminately include configuration settings in the initial RAM disk. To remove settings for a device, remove the `zdev:early` attribute from the device settings.

### Example:

```
# chzdev -e dasd-fba e030 --remove-attribute zdev:early
FBA DASD 0.0.e030 configured
Note: The initial RAM-disk must be updated for these changes to take effect:
- FBA DASD 0.0.e030
Update initial RAM-disk now? (yes/no) yes
```

Use the **lszdev** command to list all devices that are configured with the `zdev:early` attribute.

**Example:**

```
# lszdev --by-attr zdev:early=1
TYPE      ID                                ON  PERS NAMES
dasd-fba  0.0.e030                          yes yes  dasda
zfcp-lun  0.0.1911:0x50050763070845e3:0x4082409f00000000 no  yes
```

---

## Chapter 4. Kernel and module parameters

Kernel and module parameters are used to configure the kernel and kernel modules.

Individual kernel parameters or module parameters are single keywords, or keyword-value pairs of the form `keyword=<value>` with no blank. Blanks separate consecutive parameters.

Kernel parameters and module parameters are encoded as strings of ASCII characters. For tape or the z/VM reader as a boot device, the parameters can also be encoded in EBCDIC.

Use *kernel parameters* to configure the base kernel and any optional kernel parts that have been compiled into the kernel image. Use *module parameters* to configure separate kernel modules. Do not confuse kernel and module parameters. Although a module parameter can have the same syntax as a related kernel parameter, kernel and module parameters are specified and processed differently.

Where possible, this document describes kernel parameters with the device driver or feature to which they apply. Kernel parameters that apply to the base kernel or cannot be attributed to a particular device driver or feature are described in [Chapter 62, “Selected kernel parameters,” on page 681](#). You can also find descriptions for most of the kernel parameters in `Documentation/kernel-parameters.txt` in the Linux source tree.

Separate kernel modules must be loaded before they can be used. Many modules are loaded automatically by Red Hat Enterprise Linux 8.1 when they are needed. To keep the module parameters in the context of the device driver or feature module to which they apply, this document describes module parameters as part of the syntax you would use to load the module with `modprobe`.

To find the separate kernel modules for Red Hat Enterprise Linux 8.1, list the contents of the subdirectories of `/lib/modules/<kernel-release>` in the Linux file system. In the path, `<kernel-release>` denotes the kernel level. You can query the value for `<kernel-release>` with `uname -r`.

---

### Specifying kernel parameters

Different methods are available for passing kernel parameters to Linux.

- Including kernel parameters in a boot configuration
- Using a kernel parameter file
- Specifying kernel parameters when booting Linux

Kernel parameters that you specify when booting Linux are not persistent. To define a permanent set of kernel parameters for a Linux instance, include these parameters in the boot configuration.

**Note:** Parameters that you specify on the kernel parameter line might interfere with parameters that Red Hat Enterprise Linux 8.1 sets for you. Read `/proc/cmdline` to find out which parameters were used to start a running Linux instance.

### Including kernel parameters in a boot configuration

Use the `zipl` tool to create Linux boot configurations for IBM mainframe systems.

Which sources of kernel parameters you can use depends on the mode in which you run **zipl**. See [“zipl modes and syntax overview” on page 56](#) for details.


A boot configuration can include up to 895 characters of kernel parameters. See also [“How kernel parameters from different sources are combined” on page 26](#).

#### Running zipl in configuration-file mode

In configuration-file mode, you issue the **zipl** command with command arguments that identify a section in a **zipl** configuration file.

You specify details about the boot configuration in the configuration file.

As shown in [Figure 6 on page 24](#), there are three sources of kernel parameters for **zipl** in configuration-file mode.

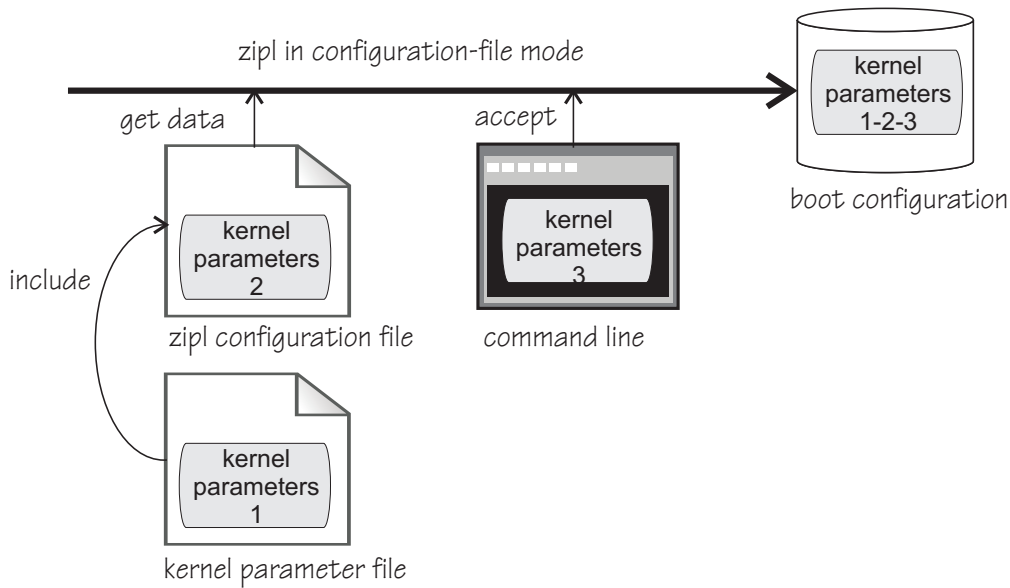

*Figure 6. Sources of kernel parameters for zipl in configuration-file mode*

In configuration-file mode, **zipl** concatenates the kernel parameters in the order:


1. Parameters that are specified in the kernel parameter file
2. Parameters that are specified in the **zipl** configuration-file
3. Parameters that are specified on the command line

See [“zipl modes and syntax overview” on page 56](#) for details about the **zipl** command modes.

### Running zipl in command-line mode

In command-line mode, you specify the details about the boot configuration to be created as arguments for the **zipl** command.

As shown in [Figure 7 on page 24](#), there are two sources of kernel parameters for **zipl** in command-line mode.

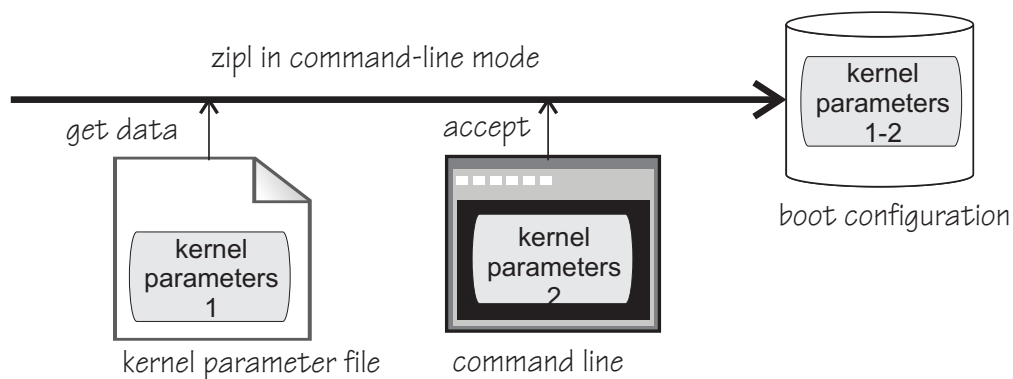

*Figure 7. Sources of kernel parameters for zipl in command-line mode*

In command-line mode, **zipl** concatenates the kernel parameters in the order:

1. Parameters that are specified in the kernel parameter file
2. Parameters that are specified on the command line

See [“zipl modes and syntax overview” on page 56](#) for details about the **zipl** command modes.

## Using a kernel parameter file in the z/VM reader

For booting Linux from the z/VM reader, you can use a kernel parameter file in the reader.

See [“Booting from the z/VM reader” on page 91](#) for more details.

## Specifying kernel parameters when booting Linux

Depending on the boot device and whether you boot Linux in a z/VM guest virtual machine or in LPAR mode, you can provide kernel parameters when you start the boot process.

### zipl interactive boot menu on DASD

When booting Linux on z/VM or in LPAR mode with a zipl interactive boot menu on a DASD boot device, you can display the menu and specify kernel parameters as you select a boot configuration. See [“Example for a DASD menu configuration on z/VM” on page 89](#) and [“Example for a DASD menu configuration \(LPAR\)” on page 82](#) for details.

### z/VM guest virtual machine with a CCW boot device

When booting Linux in a z/VM guest virtual machine from a CCW boot device, you can use the PARM parameter of the IPL command to specify kernel parameters. CCW boot devices include DASD, tape, the z/VM reader, and NSS.

For details, see the subsection of [“Booting Linux in a z/VM guest virtual machine” on page 88](#) that applies to your boot device.

### z/VM guest virtual machine with a SCSI boot device

When booting Linux in a z/VM guest virtual machine from a SCSI boot device, you can use the SET LOADDEV command with the SCPDATA option to specify kernel parameters. See [“Booting from a SCSI device” on page 90](#) for details.

### LPAR mode with a SCSI boot device

When booting Linux in LPAR mode from a SCSI boot device, you can specify kernel parameters in the **Operating system specific load parameters** field on the HMC Load panel. See [Figure 27 on page 83](#).

Kernel parameters as entered from a CMS or CP session are interpreted as lowercase on Linux.

## Adding kernel parameters to a boot configuration

When booting a Linux instance, you can specify kernel parameters that are used in addition to parameters in the boot configuration.

By default, the kernel parameters you specify when booting are concatenated to the end of the kernel parameters in your boot configuration. In total, the combined kernel parameter string that is used for booting can be up to 4096 characters.

If kernel parameters are specified in a combination of methods, they are concatenated in the following order:

1. Kernel parameters that have been included in the boot configuration with zipl
2. DASD only: zipl kernel parameters that are specified with the interactive boot menu
3. Depending on where you are booting Linux:
  - z/VM: kernel parameters that are specified with the PARM parameter for CCW boot devices; kernel parameters specified as SCPDATA for SCSI boot devices
  - LPAR: kernel parameters that are specified on the HMC Load panel for SCSI boot devices

If the combined kernel parameter string contains conflicting settings, the last specification in the string overrides preceding ones. Thus, you can specify a kernel parameter when booting to override an unwanted setting in the boot configuration.

## Examples

- If the kernel parameters in your boot configuration include `possible_cpus=8` but you specify `possible_cpus=2` when booting, Linux uses `possible_cpus=2`.

- If the kernel parameters in your boot configuration include `resume=/dev/dasda2` to specify a disk from which to resume the Linux instance when it has been suspended, you can circumvent the resume process by specifying `noresume` when booting.

### Replacing all kernel parameters in a boot configuration

Kernel parameters that you specify when booting can completely replace the kernel parameters in your boot configuration.

To replace all kernel parameters in your boot configuration, specify the new parameter string with a leading equal sign (=).

**Note:** This feature is intended for expert users who want to test a set of parameters. By replacing all parameters, you might inadvertently omit parameters that the boot configuration requires. Furthermore, you might omit parameters other than kernel parameters that Red Hat Enterprise Linux 8.1 includes in the parameter string for use by the init process.

Read `/proc/cmdline` to find out with which parameters a running Linux instance was started (see also [“Displaying the current kernel parameter line”](#) on page 27).

## How kernel parameters from different sources are combined

If kernel parameters are specified in a combination of methods, they are concatenated in a specific order.

1. Kernel parameters that have been included in the boot configuration (see [“Including kernel parameters in a boot configuration”](#) on page 23).

The kernel parameters in the boot configuration cannot exceed 895 characters. If more than 895 characters are specified, the excessive characters are truncated.

2. LPAR or z/VM: Kernel parameters that you specify through the HMC or through z/VM interfaces (see [“Specifying kernel parameters when booting Linux”](#) on page 25).

For DASD boot devices you can specify up to 64 characters (z/VM only); for SCSI boot devices you can specify up to 3452 characters.

In total, the combined kernel parameter string that is passed to the Linux kernel for booting can be up to 4096 characters.

### Multiple specifications for the same parameter

For some kernel parameters, multiple instances in the kernel parameter string are treated cumulatively. For example, multiple specifications for `cio_ignore=` are all processed and combined.

### Conflicting kernel parameters

If the kernel parameter string contains kernel parameters with mutually exclusive settings, the last specification in the string overrides preceding ones. Thus, you can specify a kernel parameter when booting to override an unwanted setting in the boot configuration.

#### Examples:

- If the kernel parameters in your boot configuration include `possible_cpus=8` but you specify `possible_cpus=2` when booting, Linux uses `possible_cpus=2`.
- If the kernel parameters in your boot configuration include `resume=/dev/dasda2` to specify a disk from which to resume the Linux instance when it has been suspended, you can circumvent the resume process by specifying `noresume` when booting.

### Parameters other than kernel parameters

Parameters on the kernel parameter string that the kernel does not recognize as kernel parameters are ignored by the kernel and made available to user space programs. How multiple specifications and conflicts are resolved for such parameters depends on the program that evaluates them.

## Examples for kernel parameters

Typical parameters that are used for booting Red Hat Enterprise Linux 8.1 configure the console and the suspend and resume function.

**conmode=<mode>, condev=<cuu>, console=<name>**

to set up the Linux console. See [“Console kernel parameter syntax” on page 40](#) for details.

**resume=<partition>, noresume, no\_console\_suspend**

to configure suspend-and-resume support (see [Chapter 8, “Suspending and resuming Linux,” on page 97](#)).

See [Chapter 62, “Selected kernel parameters,” on page 681](#) for more examples of kernel parameters.

## Displaying the current kernel parameter line

Read `/proc/cmdline` to find out with which kernel parameters a running Linux instance was booted.

### About this task

Apart from kernel parameters, which are evaluated by the Linux kernel, the kernel parameter line can contain parameters that are evaluated by user space programs, for example, `modprobe`.

See also [“Displaying current IPL parameters” on page 93](#) about displaying the parameters that were used to IPL and boot the running Linux instance.

### Procedure

- Read `/proc/cmdline`.  
For example:

```
# cat /proc/cmdline
vconsole.keymap=us
cio_ignore=all,!condev
crashkernel=auto
rd.zfcp=0.0.1707,0x500507630513c1ae,0x402140b600000000
rd.zfcp=0.0.1807,0x500507630508c1ae,0x402140b600000000
vconsole.font=latacyrheb-sun16
LANG=en_US.UTF-8
BOOT_IMAGE=0
```

## Kernel parameters for rebooting

When rebooting, you can use the current kernel parameters or an alternative set of kernel parameters. By default, Linux uses the current kernel parameters for rebooting. See [“Rebooting from an alternative source” on page 94](#) about how to set up Linux to use different kernel parameters for re-IPL and the associated reboot.

## Specifying parameters for modules

How to specify parameters for modules depends on how the module is loaded, for example, automatically, through a tool, or from the command line.

You can specify parameters for modules with the **modprobe** command or on the kernel parameter line. You can specify certain parameters for modules in a boot configuration. Avoid specifying the same parameter through multiple means.

### Specifying module parameters with modprobe

If you load a module explicitly with a `modprobe` command, you can specify the module parameters as command arguments.

Module parameters that are specified as arguments to `modprobe` are effective until the module is unloaded only.

**Note:** Parameters that you specify as command arguments might interfere with parameters that Red Hat Enterprise Linux 8.1 sets for you.

## Specifying parameters on the kernel parameter line

Parameters that the kernel does not recognize as kernel parameters are ignored by the kernel and made available to user space programs.

One of these programs is `modprobe`, which Red Hat Enterprise Linux 8.1 uses to load modules for you. `modprobe` interprets module parameters that are specified on the kernel parameter line if they are qualified with a leading module prefix and a dot.

For example, you can include a specification with `dasd_mod . dasd=` on the kernel parameter line. `modprobe` evaluates this specification as the `dasd=` module parameter when it loads the `dasd_mod` module.

## Including parameters for modules in a boot configuration

Parameters for modules that are required early during the boot process must be included in the boot configuration.

### About this task

Red Hat Enterprise Linux 8.1 uses an initial file system (`initramfs`) when booting. The `initramfs` does not contain device specifications. Instead, it takes parameters from **dracut** during the boot process. **dracut** obtains the parameters by parsing the kernel parameter line for parameters with an "rd." prefix.

Anaconda writes information about devices that must be accessible during the boot process to `zipl.conf` for you. Examples are the device with the root file system and, if configured, the swap partition that is used to resume a suspended system.

### Procedure

Follow these steps to provide parameters on a kernel command line to be evaluated, for example, by **dracut**:

1. With an "rd." prefix, specify the parameters in `zipl.conf`. For example, to specify a DASD, use `rd.dasd=`. The parameters are lower case and are case-sensitive. See the **dracut** man page, `dracut.cmdline(7)`, for more details about parameters with an "rd." prefix.
2. Run **zipl** to include the new parameter line in your boot configuration.

## Displaying information about module parameters

Loaded modules can export module parameter settings to `sysfs`.

The parameters for modules are available as `sysfs` attributes of the form:

```
/sys/module/<module_name>/parameters/<parameter_name>
```

### Before you begin

You can display information about modules that fulfill these prerequisites:

- The module must be loaded.
- The module must export the parameters to `sysfs`.

### Procedure

To find and display the parameters for a module, follow these steps:

1. Optional: Confirm that the module of interest is loaded by issuing a command of this form:

```
# lsmod | grep <module_name>
```



where *<module\_name>* is the name of the module.

2. Optional: Get an overview of the parameters for the module by issuing a command of this form:

```
# modinfo <module_name>
```

3. Check if the module of interest exports parameters to sysfs. Issue a command of the form:

```
# ls /sys/module/<module_name>/parameters
```

4. If the previous command listed parameters, you can display the value for the parameter you are interested in. Issue a command of the form:

```
# cat /sys/module/<module_name>/parameters/<parameter_name>
```

### Example

- To list the module parameters for the ap module, issue:

```
# ls /sys/module/ap/parameters
domain
...
```

- To display the value of the domain parameter, issue:

```
# cat /sys/module/ap/parameters/domain
1
```



---

## Part 2. Booting and shutdown

These device drivers and features are useful for booting and shutting down instances of Red Hat Enterprise Linux 8.1.

### **Newest version**

You can find the newest version of this book at  
[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at  
[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)



## Chapter 5. Console device drivers

The console device drivers support terminal devices for basic Linux control, for example, for booting Linux, for troubleshooting, and for displaying Linux kernel messages.

### Linux in LPAR mode

The only interface to a Linux instance in an LPAR before the boot process is completed is the Hardware Management Console (HMC), see Figure 8 on page 33. After the boot process has completed, you typically use a network connection to access Linux through a user login, for example, in an SSH session. The possible connections depend on the configuration of your particular Linux instance.

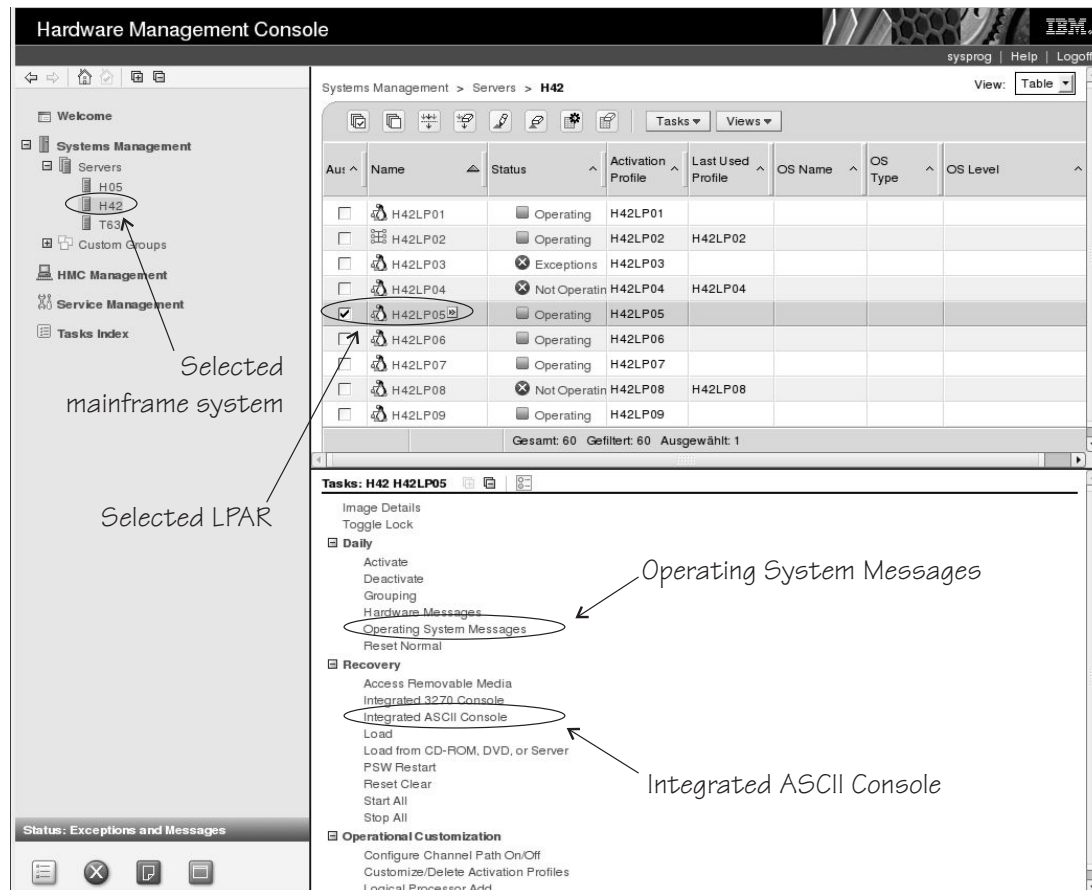


Figure 8. Hardware Management Console

### Linux on z/VM

With Linux on z/VM, you typically use a 3270 terminal or terminal emulator to log in to z/VM first. From the 3270 terminal you IPL the Linux boot device. Again, after boot you typically use a network connection to access Linux through a user login rather than a 3270 terminal.

### Linux on KVM

You initiate the boot process for Linux as a KVM guest on Z when you start the KVM virtual server through a **virsh** command on the KVM host. The **--console** of the **virsh start** command option gives you access to a terminal that displays the kernel messages.

After the boot process has completed, a guest is usually accessed through a user login, for example, in an SSH session. The possible connections depend on the configuration of your particular Linux instance.

## Console features

The console device drivers support several types of terminal devices.

### HMC applets

You can use two applets.

#### Operating System Messages

This applet provides a line-mode terminal for Linux in LPAR mode. See [Figure 9 on page 34](#) for an example.

#### Integrated ASCII Console

This applet provides a full-screen mode terminal for Linux in LPAR mode and for Linux on z/VM.

These HMC applets are accessed through the service-call logical processor (SCLP) console interface.

### 3270 terminal

This terminal can be based on physical 3270 terminal hardware or a 3270 terminal emulation.

z/VM can use the 3270 terminal as a 3270 device or perform a protocol translation and use it as a 3215 device. As a 3215 device it is a line-mode terminal for the United States code page (037).

### virsh command on the KVM host

For Linux on KVM, you can access the console through a virsh command on the KVM host. See [“Using virsh on a KVM host” on page 38](#).

The console device drivers support these terminals as output devices for Linux kernel messages.

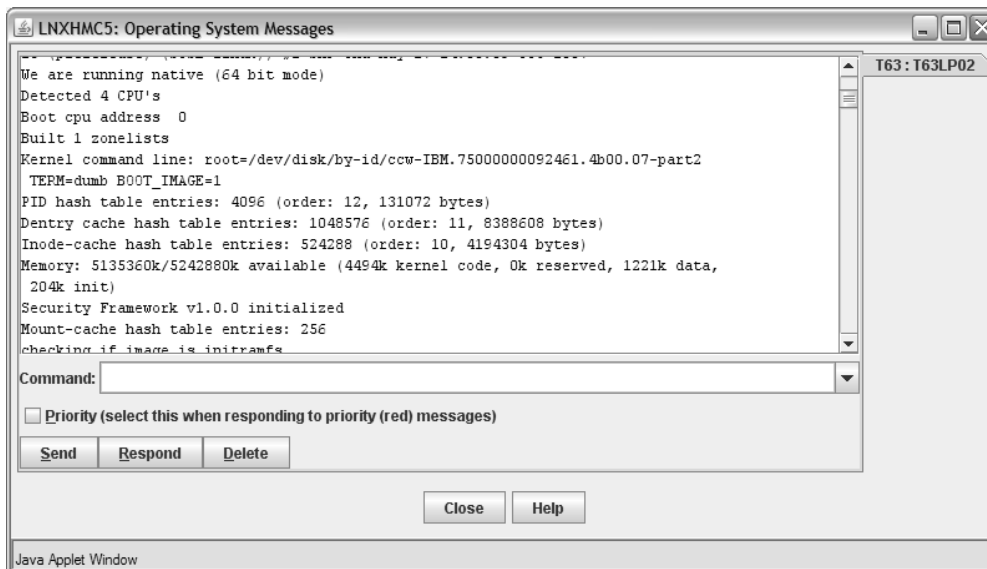


Figure 9. Linux kernel messages on the HMC Operating System Messages applet

## What you should know about the console device drivers

The console concepts, naming conventions, and terminology overview help you to understand the tasks you might have to perform with console and terminal devices.

### Console terminology

*Terminal* and *console* have special meanings in Linux.

#### Linux terminal

An input/output device through which users interact with Linux and Linux applications. Login programs and shells typically run on Linux terminals and provide access to the Linux system.

## Linux console

An output-only device to which the Linux kernel can write kernel messages. Linux console devices can be associated with Linux terminal devices. Thus, console output can be displayed on a Linux terminal.

## Mainframe terminal

Any device that gives a user access to operating systems and applications that run on a mainframe. A mainframe terminal can be a physical device such as a 3270 terminal hardware that is linked to the mainframe through a controller. It can also be a terminal emulator on a workstation that is connected through a network. For example, you access z/OS® through a mainframe terminal.

## Hardware Management Console (HMC)

A device that gives a system programmer control over IBM Z hardware resources, for example, LPARs. The HMC is a web application on a web server that is connected to the support element (SE). The HMC can be accessed from the SE but more commonly is accessed from a workstation within a secure network.

On the mainframe, the Linux console and Linux terminals can both be connected to a mainframe terminal.

## Before you have a Linux terminal - the zipl boot menu

Do not confuse the zipl boot menu with a Linux terminal.

Depending on your setup, a zipl boot menu might be displayed when you perform an IPL. The zipl boot menu is part of the boot loader that loads the Linux kernel and is displayed before a Linux terminal is set up. The zipl boot menu is very limited in its functions. For example, there is no way to specify uppercase letters because all input is converted to lowercase characters. For more details about booting Linux, see Chapter 7, “Booting Linux,” on page 77. For more details about the zipl boot menu, see Chapter 6, “Initial program loader for IBM Z - zipl,” on page 55.

## Device and console names

Each terminal device driver can provide a single console device.

Table 2 on page 35 lists the terminal device drivers with the corresponding device names and console names.

Table 2. Device and console names		
Device driver	Device name	Console name
SCLP line-mode terminal device driver	sclp_line0	ttyS0
SCLP VT220 terminal device driver	ttysclp0	ttyS1
3215 line-mode terminal device driver	ttyS0	ttyS0
3270 terminal device driver	3270/tty1 to 3270/ tty<N>	tty3270
z/VM IUCV HVC device driver	hvc0 to hvc7	hvc0
virtio-console device driver	hvc0 to hvc<n>	hvc0

As shown in Table 2 on page 35, the console with name ttyS0 can be provided either by the SCLP console device driver or by the 3215 line-mode terminal device driver. The system environment and settings determine which device driver provides ttyS0. For details, see the information about the conmode kernel parameter in “Console kernel parameter syntax” on page 40.

Of the terminal devices that are provided by the z/VM IUCV HVC device driver only hvc0 is associated with a console.

Of the 3270/tty<N> terminal devices only 3270/tty1 is associated with a console.

## Device nodes

Applications, for example, login programs, access terminal devices by device nodes.

Table 3 on page 36 shows all device nodes that udev can create for Linux instances in LPAR mode or as z/VM guests. Which of these device nodes are created depends on the `conmode=` and `hvc_iucv=` kernel parameters (see “Console kernel parameter syntax” on page 40).

<i>Table 3. Device nodes created by udev</i>					
Device driver	On LPAR	On z/VM	On KVM	Major	Minor
SCLP line-mode terminal device driver	/dev/sclp_line0	/dev/sclp_line0	/dev/sclp_line0	4	64
SCLP VT220 terminal device driver	/dev/ttysclp0	/dev/ttysclp0	/dev/ttysclp0	4	65
3215 line-mode terminal device driver	n/a	/dev/ttyS0	n/a	4	64
3270 terminal device driver	/dev/3270/tty1 to /dev/3270/tty<N>	/dev/3270/tty1 to /dev/3270/tty<N>	/dev/3270/tty1 to /dev/3270/tty<N>	227	1 - <N>
z/VM IUCV HVC device driver	n/a	/dev/hvc0	n/a	229	0 - 7
virtio-console device driver	n/a	n/a	/dev/hvc0 to /dev/hvc<n>	229	0 - <n>

Apart from the standard device nodes, there is also a generic device node, `/dev/console`, that maps to the current console. The console device driver itself presents `/dev/console` as a pure input device to the user space. However, through its association with the terminal device driver, it becomes bidirectional.

## Terminal modes

The Linux terminals that are provided by the console device drivers include line-mode terminals, block-mode terminals, and full-screen mode terminals.

On a full-screen mode terminal, pressing any key immediately results in data being sent to the terminal. Also, terminal output can be positioned anywhere on the screen. This feature facilitates advanced interactive capability for terminal-based applications like the vi editor.

On a line-mode terminal, the user first types a full line, and then presses Enter to indicate that the line is complete. The device driver then issues a read to get the completed line, adds a new line, and hands over the input to the generic TTY routines.

The terminal that is provided by the 3270 terminal device driver is a traditional IBM mainframe block-mode terminal. Block-mode terminals provide full-screen output support and users can type input in predefined fields on the screen. Other than on typical full-screen mode terminals, no input is passed on until the user presses Enter. The terminal that is provided by the 3270 terminal device driver provides limited support for full-screen applications. For example, the ned editor is supported, but not vi.

Table 4 on page 36 summarizes when to expect which terminal mode.

<i>Table 4. Terminal modes</i>			
Accessed through	Environment	Device driver	Mode
<b>Operating System Messages</b> applet on the HMC	LPAR	SCLP line-mode terminal device driver	Line mode
z/VM emulation of the HMC <b>Operating System Messages</b> applet	z/VM	SCLP line-mode terminal device driver	Line mode
<b>Integrated ASCII Console</b> applet on the HMC	z/VM or LPAR	SCLP VT220 terminal device driver	Full-screen mode



Table 4. Terminal modes (continued)			
Accessed through	Environment	Device driver	Mode
KVM host (for example, using the <b>virsh console</b> command)	KVM	SCLP line-mode terminal device driver	Line mode
KVM host (for example, using the <b>virsh console</b> command)	KVM	SCLP VT220 terminal device driver	Full-screen mode
3270 terminal hardware or emulation	z/VM with CONMODE=3215 or KVM	3215 line-mode terminal device driver	Line mode
3270 terminal hardware or emulation	z/VM with CONMODE=3270 or KVM	3270 terminal device driver	Block mode
iucvconn program	z/VM	z/VM IUCV HVC device driver	Full-screen mode
KVM host (for example, using the <b>virsh console</b> command)	KVM	virtio-console device driver	Full-screen mode

The 3270 terminal device driver provides three different views. See [“Switching the views of the 3270 terminal device driver”](#) on page 47 for details.

## How console devices are accessed

How you can access console devices depends on your environment.

The diagrams in the following sections omit device drivers that are not relevant for the particular access scenario.

### Using the HMC for Linux in an LPAR

You can use two applets on the HMC to access terminal devices on Linux instances that run directly in an LPAR.

Figure 10 on page 37 shows the possible terminal devices for Linux instances that run directly in an LPAR.

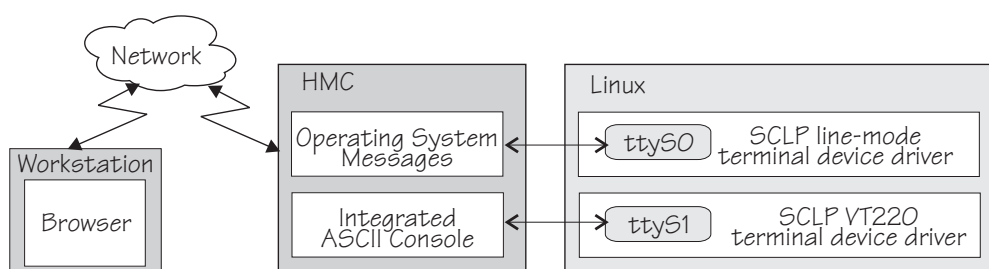


Figure 10. Accessing terminal devices on Linux in an LPAR from the HMC

The **Operating System Messages** applet accesses the device that is provided by the SCLP line-mode terminal device driver. The **Integrated ASCII console** applet accesses the device that is provided by the SCLP VT220 terminal device driver.

### Using the HMC for Linux on z/VM

You can use the HMC **Integrated ASCII Console** applet to access terminal devices on Linux instances that run as z/VM guests.

While the ASCII system console is attached to the z/VM guest virtual machine where the Linux instance runs, you can access the ttyS1 terminal device from the HMC **Integrated ASCII Console** applet (see [Figure 11 on page 38](#)).

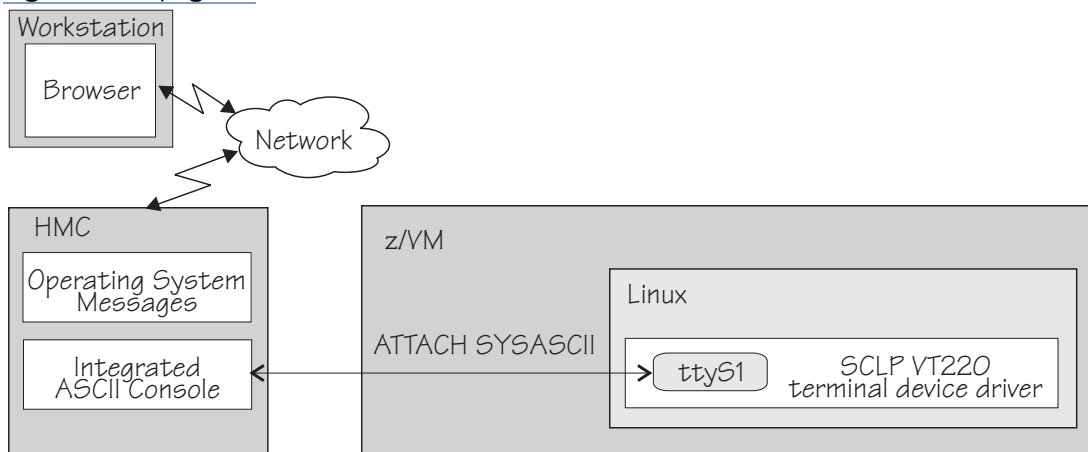


Figure 11. Accessing terminal devices from the HMC for Linux on z/VM

Use the CP ATTACH SYSASCII command to attach the ASCII system console to your z/VM guest virtual machine.

### Using virsh on a KVM host

You can use the **virsh console** command on a KVM host to access an sclp or virtio based terminal on a KVM guest.

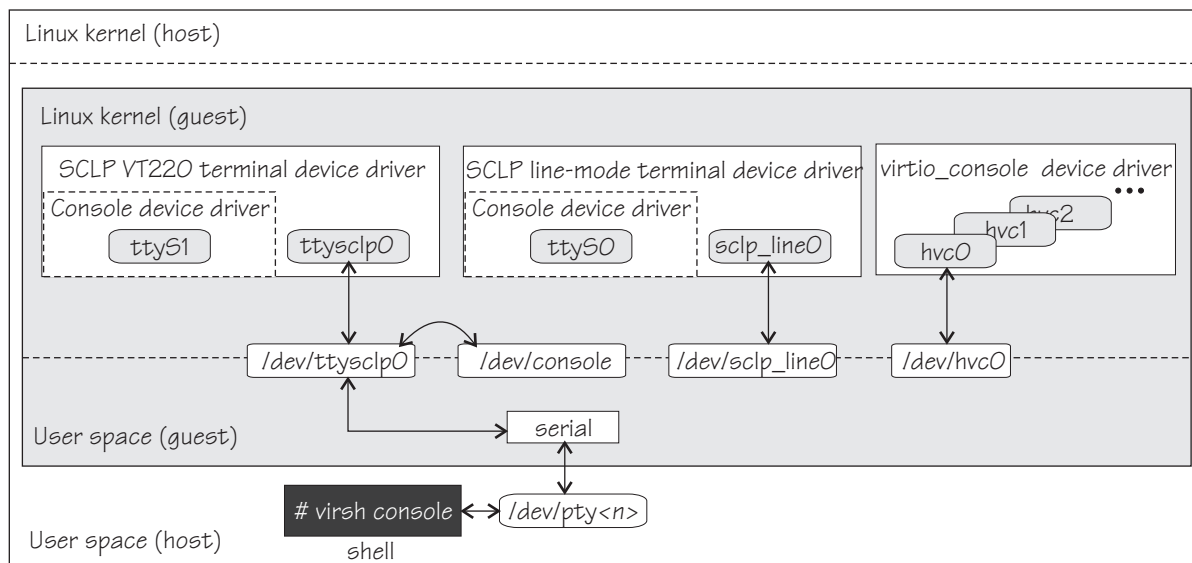


Figure 12. Using virsh to access a KVM guest console

Figure 12 on page 38, shows a KVM guest with three device drivers that can provide a console. The terminal that is accessed by the **virsh console** command depends on the guest configuration. For details, see *KVM Virtual Server Management*, SC34-2752.

In a common setup, the **virsh console** command opens a connection to the device that is provided by the SCLP VT220 terminal device driver. This device also becomes associated with the generic `/dev/console` device node.

Whether your Linux instance uses this device as the device to which Linux kernel messages are written depends on the Linux configuration. Use the `console=` parameter to control which devices are activated to receive Linux kernel messages (see in [“Console kernel parameter syntax” on page 40](#)).

### Using a 3270 terminal emulation for Linux on z/VM

For Linux on z/VM, you can use 3270 terminal emulation to access a console device.

Figure 13 on page 39 illustrates how z/VM can handle the 3270 communication.

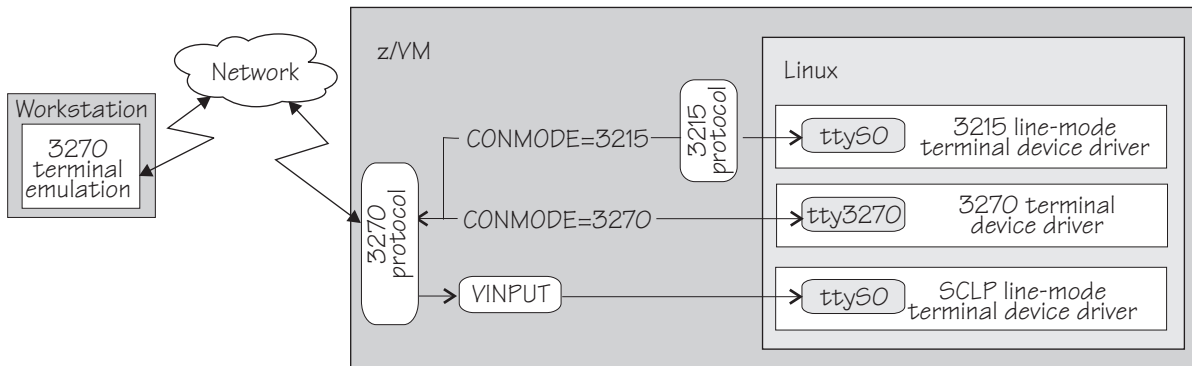


Figure 13. Accessing terminal devices from a 3270 device

**Note:** Figure 13 on page 39 shows two console devices with the name `ttyS0`. Only one of these devices can be present at any one time.

#### CONMODE=3215

translates between the 3270 protocol and the 3215 protocol and connects the 3270 terminal emulation to the 3215 line-mode terminal device driver in the Linux kernel.

#### CONMODE=3270

connects the 3270 terminal emulation to the 3270 terminal device driver in the Linux kernel.

#### VINPUT

is a z/VM CP command that directs input to the `ttyS0` device provided by the SCLP line-mode terminal device driver. In a default z/VM environment, `ttyS0` is provided by the 3215 line-mode terminal device driver. You can use the `conmode` kernel parameter to make the SCLP line-mode terminal device driver provide `ttyS0` (see “Console kernel parameter syntax” on page 40).

The terminal device drivers continue to support 3270 terminal hardware, which, if available at your installation, can be used instead of a 3270 terminal emulation.

### Using a 3270 terminal emulation for Linux on KVM

For Linux on Z as a KVM guest, you can use a 3270 terminal emulation to access a console device through the 3270 or 3215 terminal device driver.

“Using a 3270 terminal emulation for Linux on KVM” on page 39 illustrates how Linux on KVM can handle the 3270 communication.

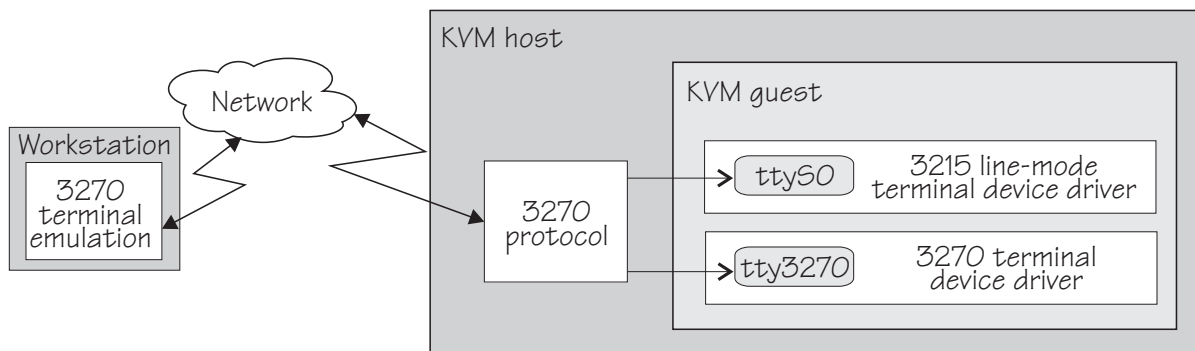


Figure 14. Accessing terminal devices from virt-manager

### Using iucvconn on Linux on z/VM

On Linux on z/VM, you can access the terminal devices that are provided by the z/VM IUCV Hypervisor Console (HVC) device driver.

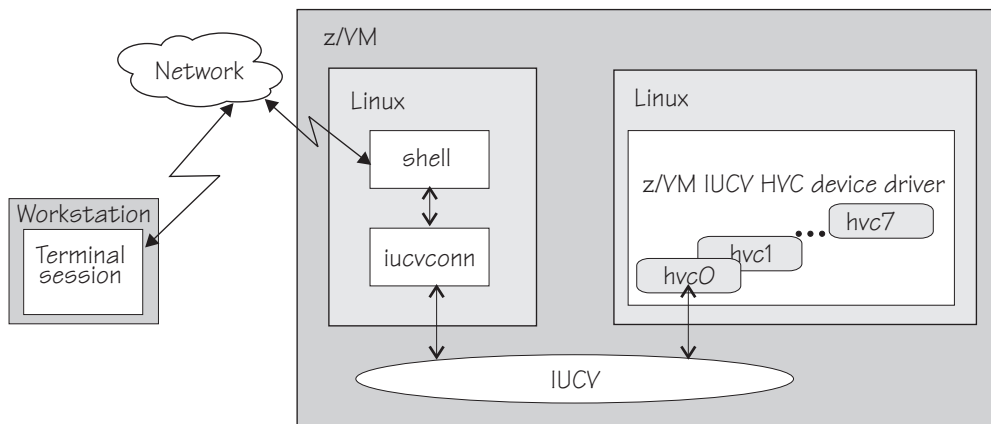


Figure 15. Accessing terminal devices from a peer Linux instance

As illustrated in [Figure 15 on page 40](#), you access the devices with the `iucvconn` program from another Linux instance. Both Linux instances are guests of the same z/VM system. IUCV provides the communication between the two Linux instances. With this setup, you can access terminal devices on Linux instances with no external network connection.

**Note:** Of the terminal devices that are provided by the z/VM IUCV HVC device driver only `hvc0` can be activated to receive Linux kernel messages.

## Setting up the console device drivers

You configure the console device drivers through kernel parameters. You also might have to enable user logins on terminals and ensure that the `TERM` environment variable has a suitable value.


### Console kernel parameter syntax

Use the console kernel parameters to configure the console device drivers, line-mode terminals, and HVC terminal devices.

The `sclp_con_pages=` and `sclp_con_drop=` parameters apply only to the SCLP line-mode terminal device driver and the VT220 terminal device driver.

The `hvc_iucv=` and `hvc_iucv_allow=` kernel parameters apply only to terminal devices that are provided by the z/VM IUCV HVC device driver.

## Console kernel parameter syntax

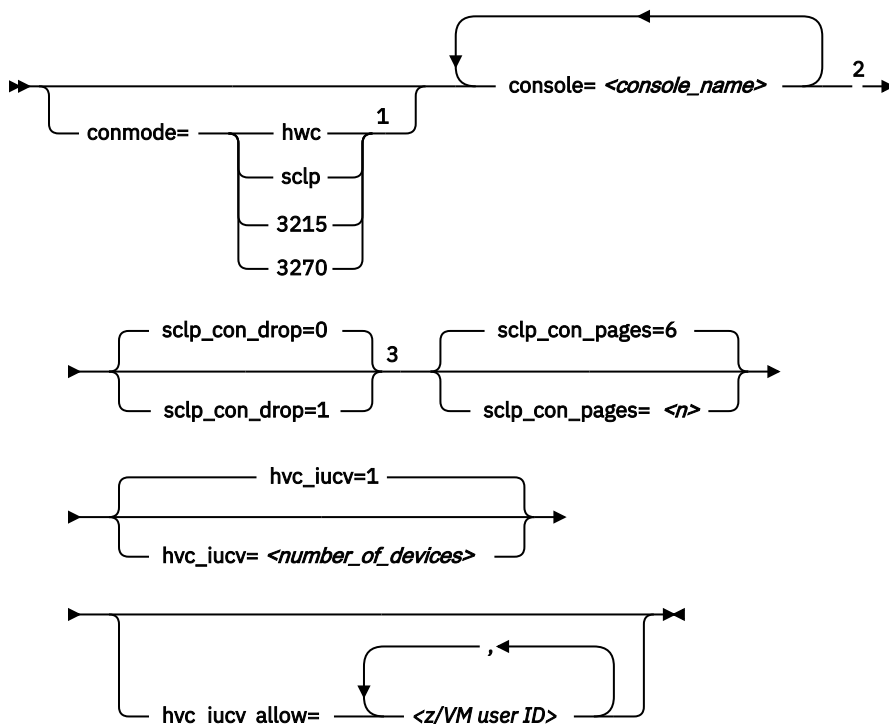

### Notes:

- <sup>1</sup> Specify the conmode= parameter for Linux on z/VM only.
- <sup>2</sup> If you specify both the conmode= and the console= parameter, specify them in the sequence that is shown, conmode= first.
- <sup>3</sup> The sclp\_con\_pages= and sclp\_con\_drop= parameters apply only to the SCLP line-mode terminal device driver and to the SCLP VT220 terminal device driver.

where:

### conmode

specifies which one of the line-mode or block-mode terminal devices is present and provided by which device driver.

A Linux kernel might include multiple console device drivers that can provide a line-mode terminal:

- SCLP line-mode terminal device driver
- 3215 line-mode terminal device driver
- 3270 terminal device driver

On a running Linux instance, only one of these device drivers can provide a device. [Table 5 on page 41](#) shows how the device driver that is used by default depends on the environment.

Table 5. Default device driver for the line-mode terminal device	
Mode	Default
LPAR	SCLP line-mode terminal device driver

Table 5. Default device driver for the line-mode terminal device (continued)	
Mode	Default
z/VM	3215 line-mode terminal device driver or 3270 terminal device driver, depending on the z/VM guest's console settings (the CONMODE field in the output of #CP QUERY TERMINAL).  If the device driver you specify with the conmode= kernel parameter contradicts the CONMODE z/VM setting, z/VM is reconfigured to match the specification for the kernel parameter.
KVM	SCLP line-mode terminal device driver

You can use the conmode= parameter to override the default for Linux on z/VM. Do not change the default for Linux on KVM or for Linux in LPAR mode.

### **sclp or hwc**

specifies the SCLP line-mode terminal device driver.

You need this specification if you want to use the z/VM CP VINPUT command ([“Using a z/VM emulation of the HMC Operating System Messages applet” on page 50](#)).

### **3270**

specifies the 3270 device driver.

### **3215**

specifies the 3215 device driver.

### **console=<console\_name>**

specifies the console devices to be activated to receive Linux kernel messages. If present, ttyS0 is always activated to receive Linux kernel messages and, by default, it is also the *preferred* console.

By default, ttyS0 is also the *preferred* console for Linux on z/VM and for Linux in LPAR mode. For Linux on KVM, the default order for the preferred console is ttyS1, followed by ttyS0, followed by hvc0.

The preferred console is used as an initial terminal device, beginning at the stage of the boot process when the initialization procedures run. Messages that are issued by programs that are run at this stage are therefore only displayed on the preferred console. Multiple terminal devices can be activated to receive Linux kernel messages but only one of the activated terminal devices can be the preferred console.

If you specify conmode=3270, there is no console with the name ttyS0.

If you want console devices other than ttyS0 to be activated to receive Linux kernel messages, specify a console statement for each of these other devices. The last console statement designates the preferred console.

If you specify one or more console parameters and you want to keep ttyS0 as the preferred console, add a console parameter for ttyS0 as the last console parameter. Otherwise, you do not need a console parameter for ttyS0.

<console\_name> is the console name that is associated with the terminal device to be activated to receive Linux kernel messages. Of the terminal devices that are provided by the z/VM IUCV HVC device driver only hvc0 can be activated. Specify the console names as shown in [Table 2 on page 35](#).

### **sclp\_con\_drop**

governs the behavior of the SCLP line-mode terminal device driver and VT220 terminal device driver if either of them runs out of output buffer pages. The trade-off is between slowing down Linux and losing console output. Possible values are 0 (default) and 1.

#### **0**

assures complete console output by pausing until used output buffer pages are written to an output device and can be reused without loss.

## 1

avoids system pauses by overwriting used output buffer pages, even if the content was never written to an output device.

You can use the `sclp_con_pages=` parameter to set the number of output buffers.

### **sclp\_con\_pages=<n>**

specifies the number of 4-KB memory pages to be used as the output buffer for the SCLP line-mode and VT220 terminal. Depending on the line length, each output buffer can hold multiple lines. Use many buffer pages for a kernel with frequent phases of producing console output faster than it can be written to the output device.

Depending on the setting for the `sclp_con_drop=`, running out of pages can slow down Linux or cause it to lose console output.

The value is a positive integer. The default is 6.

### **hvc\_iucv=<number\_of\_devices>**

specifies the number of terminal devices that are provided by the z/VM IUCV HVC device driver. `<number_of_devices>` is an integer in the range 0 - 8. Specify 0 to switch off the z/VM IUCV HVC device driver.

### **hvc\_iucv\_allow=<z/VM user ID>,<z/VM user ID>, ...**

specifies an initial list of z/VM guest virtual machines that are allowed to connect to HVC terminal devices. If this parameter is omitted, any z/VM guest virtual machine that is authorized to establish the required IUCV connection is also allowed to connect. On the running system, you can change this list with the **chiucvallow** command. See *How to Set up a Terminal Server Environment on z/VM*, SC34-2596 for more information.

## Examples

- To activate `ttys1` in addition to `ttys0`, and to use `ttys1` as the preferred console, add the following specification to the kernel command line:

```
console=ttys1
```

- To activate `ttys1` in addition to `ttys0`, and to keep `ttys0` as the preferred console, add the following specification to the kernel command line:

```
console=ttys1 console=ttys0
```

- To use an emulated HMC Operating System Messages applet in a z/VM environment specify:

```
conmode=sclp
```

- To activate `hvc0` in addition to `ttys0`, use `hvc0` as the preferred console, configure the z/VM IUCV HVC device driver to provide four devices, and limit the z/VM guest virtual machines that can connect to HVC terminal devices to `lxtserv1` and `lxtserv2`, add the following specification to the kernel command line:

```
console=hvc0 hvc_iucv=4 hvc_iucv_allow=lxtserv1,lxtserv2
```

- The following specification selects the SCLP line-mode terminal and configures 32 4-KB pages (128 KB) for the output buffer. If buffer pages run out, the SCLP line-mode terminal device driver does not wait for pages to be written to an output device. Instead of pausing, it reuses output buffer pages at the expense of losing content.

```
console=sclp sclp_con_pages=32 sclp_con_drop=1
```

## Setting up a z/VM guest virtual machine for iucvconn

Because the `iucvconn` program uses z/VM IUCV to access Linux, you must set up your z/VM guest virtual machine for IUCV.

See [“Setting up your z/VM guest virtual machine for IUCV” on page 298](#) for details about setting up the z/VM guest virtual machine.

For information about accessing Linux through the iucv tty program rather than through the z/VM IUCV HVC device driver, see *How to Set up a Terminal Server Environment on z/VM*, SC34-2596 or the man pages for the **iucv tty** and **iucv conn** commands.

## Setting up a line-mode terminal

The line-mode terminals are primarily intended for booting Linux.

The preferred user access to a running instance of Red Hat Enterprise Linux 8.1 is through a user login that runs, for example, in an SSH session. See [“Terminal modes” on page 36](#) for information about the available line-mode terminals.

**Tip:** If the terminal does not provide the expected output, ensure that `dumb` is assigned to the `TERM` environment variable. For example, enter the following command on the bash shell:

```
# export TERM=dumb
```

## Setting up a full-screen mode terminal

The full-screen terminal can be used for full-screen text editors, such as `vi`, and terminal-based full-screen system administration tools.

See [“Terminal modes” on page 36](#) for information about the available full-screen mode terminals.

**Tip:** If the terminal does not provide the expected output, ensure that `linux` is assigned to the `TERM` environment variable. For example, enter the following command on the bash shell:

```
# export TERM=linux
```

## Setting up a terminal provided by the 3270 terminal device driver

The terminal that is provided by the 3270 terminal device driver is not a line-mode terminal, but it is also not a typical full-screen mode terminal.

The terminal provides limited support for full-screen applications. For example, the `ned` editor is supported, but not `vi`.

**Tip:** If the terminal does not provide the expected output, ensure that `linux` is assigned to the `TERM` environment variable. For example, enter the following command on the bash shell:

```
# export TERM=linux
```

## Enabling user logins

Instantiate `getty` services for terminals to allow users access.

For the default terminals (see [“Device nodes” on page 35](#)) `systemd` starts a `getty`. In particular, you do not need to enable user logins for the following terminals:

- `hvc0`
- `3270/tty1`
- SCLP-based terminals

For other terminals, such as `hvc1` to `hvc7` or dynamically attached 3270 terminals, you must create a symbolic link.

### Procedure

To create a symbolic link and start a `getty` on terminal `hvc1`:



1. Create a new terminal instance, `hvc1`, for a serial `getty`. For example, issue:

```
# systemctl enable serial-getty@hvc1.service
```

2. Start the new instance with `systemctl`.  
For example:

```
# systemctl start serial-getty@hvc1.service
```

The terminal instance starts automatically at system start when the `getty.target` is processed.

## Preventing respawns for non-operational HVC terminals

If you enable user logins on a terminal that is not available or not operational, `systemd` keeps respawning the `getty` service.

### About this task

If user logins are enabled on unavailable HVC terminals `hvc1` to `hvc7`, `systemd` might keep respawning the `getty` program. To be free to change the conditions that affect the availability of these terminals, use the `ttyrun` service to enable user logins for them. HVC terminals are operational only in a `z/VM` environment, and they depend on the `hvc_iucv=` kernel parameter (see [“Console kernel parameter syntax”](#) on page 40).

Any other unavailable terminals with enabled user login, including `hvc0`, do not cause problems with `systemd`.

### Procedure

Perform these steps to use a `ttyrun` service for enabling user logins on a terminal:

1. Enable the `ttyrun` service by issuing a command of this form:

```
# systemctl enable ttyrun-getty@hvc<n>.service
```

where `hvc<n>` specifies one of the terminals `hvc1` to `hvc7`.

2. Optional: Start the new service by issuing a command of this form:

```
# systemctl start ttyrun-getty@hvc<n>.service
```

### Results

At the next system start, `systemd` starts the `ttyrun` service for `hvc<n>`. The `ttyrun` service starts a `getty` only if this terminal is available.

### Example

For `hvc1`, issue:

```
# systemctl enable ttyrun-getty@hvc1.service
# systemctl start ttyrun-getty@hvc1.service
```

## Setting up the code page for an x3270 emulation on Linux

For accessing `z/VM` from Linux through the `x3270` terminal emulation, you must add a number of settings to the `.Xdefaults` file to get the correct code translation.

Add these settings:

```
! X3270 keymap and charset settings for Linux
x3270.charset: us-intl
```

```
x3270.keymap: circumfix
x3270.keymap.circumfix: :<key>asciicircum: Key("^")\n
```

## Working with Linux terminals

---

You might have to work with different types of Linux terminals, and use special functions on these terminals.

- [“Using the terminal applets on the HMC” on page 46](#)
- [“Accessing terminal devices over z/VM IUCV” on page 46](#)
- [“Switching the views of the 3270 terminal device driver” on page 47](#)
- [“Setting a CCW terminal device online or offline” on page 48](#)
- [“Entering control and special characters on line-mode terminals” on page 48](#)
- [“Using the magic sysrequest feature” on page 49](#)
- [“Using a z/VM emulation of the HMC Operating System Messages applet” on page 50](#)
- [“Using a 3270 terminal in 3215 mode” on page 52](#)

### Using the terminal applets on the HMC

You should be aware of some aspects of the line-mode and the full-screen mode terminal when working with the corresponding applets on the HMC.

The following statements apply to both the line-mode terminal and the full-screen mode terminal on the HMC:

- On an HMC, you can open each applet only once.
- Within an LPAR, there can be only one active terminal session for each applet, even if multiple HMCs are used.
- A particular Linux instance supports only one active terminal session for each applet.
- Security hint: Always end a terminal session by explicitly logging off (for example, type "exit" and press Enter). Simply closing the applet leaves the session active and the next user to open the applet resumes the existing session without a logon.
- Slow performance of the HMC is often due to a busy console or increased network traffic.

The following statements apply to the full-screen mode terminal only:

- Output that is written by Linux while the terminal window is closed is not displayed. Therefore, a newly opened terminal window is always blank. For most applications, like login or shell prompts, it is sufficient to press Enter to obtain a new prompt.
- The terminal window shows only 24 lines and does not provide a scroll bar. To scroll up, press Shift+PgUp; to scroll down, press Shift+PgDn.

### Accessing terminal devices over z/VM IUCV

Use z/VM IUCV to access hypervisor console (HVC) terminal devices, which are provided by the z/VM IUCV HVC device driver.

#### About this task

For information about accessing terminal devices that are provided by the iucvttty program see *How to Set up a Terminal Server Environment on z/VM*, SC34-2596.

You access HVC terminal devices from a Linux instance where the iucvconn program is installed. The Linux instance with the terminal device to be accessed and the Linux instance with the iucvconn program must both run as guests of the same z/VM system. The two guest virtual machines must be configured such that IUCV communication is permitted between them.

## Procedure

Perform these steps to access an HVC terminal device over z/VM IUCV:

1. Open a terminal session on the Linux instance where the `iucvconn` program is installed.
2. Enter a command of this form:

```
# iucvconn <guest_ID> <terminal_ID>
```

where:

### **<guest\_ID>**

specifies the z/VM guest virtual machine on which the Linux instance with the HVC terminal device to be accessed runs.

### **<terminal\_ID>**

specifies an identifier for the terminal device to be accessed. HVC terminal device names are of the form `hvcn` where `n` is an integer in the range 0-7. The corresponding terminal IDs are `lnxhvcn`.

**Example:** To access HVC terminal device `hvc0` on a Linux instance that runs on a z/VM guest virtual machine `LXGUEST1`, enter:

```
# iucvconn LXGUEST1 lnxhvc0
```

For more details and further parameters of the **`iucvconn`** command, see the **`iucvconn`** man page or *How to Set up a Terminal Server Environment on z/VM*, SC34-2596.

3. Press Enter to obtain a prompt.

Output that is written by Linux while the terminal window is closed is not displayed. Therefore, a newly opened terminal window is always blank. For most applications, like login or shell prompts, it is sufficient to press Enter to obtain a new prompt.

## Security hint

Always end terminal sessions by explicitly logging off (for example, type **`exit`** and press Enter). If logging off results in a new login prompt, press Control and Underscore (Ctrl+\_), then press **`D`** to close the login window. Simply closing the terminal window for a `hvc0` terminal device that was activated for Linux kernel messages leaves the device active. The terminal session can then be reopened without a login.

## Switching the views of the 3270 terminal device driver

The 3270 terminal device driver provides a terminal with three different views for Linux on z/VM.

Use function key 3 (PF3) to switch between the views (see [Figure 16 on page 47](#)).

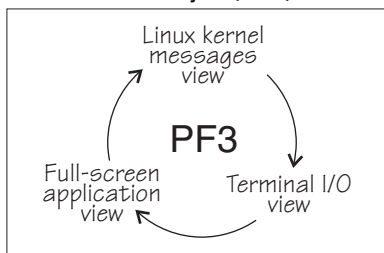


Figure 16. Switching views of the 3270 terminal device driver

The Linux kernel messages view is available only if the terminal device is activated for Linux kernel messages. The full-screen application view is available only if there is an application that uses this view, for example, the `ned` editor.

Be aware that the 3270 terminal provides only limited full-screen support. The full-screen application view of the 3270 terminal is not intended for applications that require vt220 capabilities. The application itself must create the 3270 data stream.

For the Linux kernel messages view and the terminal I/O view, you can use the PF7 key to scroll backward and the PF8 key to scroll forward. The scroll buffers are fixed at four pages (16 KB) for the Linux kernel messages view and five pages (20 KB) for the terminal I/O view. When the buffer is full and more terminal data needs to be printed, the oldest lines are removed until there is enough room. The number of lines in the history, therefore, vary. Scrolling in the full-screen application view depends on the application.

You cannot issue z/VM CP commands from any of the three views that are provided by the 3270 terminal device driver. If you want to issue CP commands, use the PA1 key to switch to the CP READ mode.

## Setting a CCW terminal device online or offline

The 3270 terminal device driver uses CCW devices and provides them as CCW terminal devices.

### About this task

This section applies to Linux on z/VM. A CCW terminal device can be:

- The tty3270 terminal device that can be activated for receiving Linux kernel messages.

If this device exists, it comes online early during the Linux boot process. In a default z/VM environment, the device number for this device is 0009. In sysfs, it is represented as `/sys/bus/ccw/drivers/3270/0.0.0009`. You need not set this device online and you must not set it offline.

- CCW terminal devices through which users can log in to Linux with the CP DIAL command.

These devices are defined with the CP DEF GRAF command. They are represented in sysfs as `/sys/bus/ccw/drivers/3270/0.<n>.<devno>` where `<n>` is the subchannel set ID and `<devno>` is the virtual device number. By setting these devices online, you enable them for user logins. If you set a device offline, it can no longer be used for user login.

See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for more information about the DEF GRAF and DIAL commands.

### Procedure

You can use the **chccwdev** command (see “[chccwdev - Set CCW device attributes](#)” on page 502) to set a CCW terminal device online or offline. Alternatively, you can write 1 to the device's online attribute to set it online, or 0 to set it offline.

### Examples

- To set a CCW terminal device 0.0.7b01 online, issue:

```
# chccwdev -e 0.0.7b01
```

Alternatively issue:

```
# echo 1 > /sys/bus/ccw/drivers/3270/0.0.7b01/online
```

- To set a CCW terminal device 0.0.7b01 offline, issue:

```
# chccwdev -d 0.0.7b01
```

Alternatively issue:

```
# echo 0 > /sys/bus/ccw/drivers/3270/0.0.7b01/online
```

## Entering control and special characters on line-mode terminals

Line-mode terminals do not have a control (Ctrl) key. Without a control key, you cannot enter control characters directly.

Also, pressing the Enter key adds a newline character to your input string. Some applications do not tolerate such trailing newline characters.

Table 6 on page 49 summarizes how you can use the caret character (^) to enter some control characters and to enter strings without appended newline characters.

Table 6. Control and special characters on line-mode terminals

For the key combination	Enter	Usage
Ctrl+C	^c	Cancel the process that is running in the foreground of the terminal.
Ctrl+D	^d	Generate an end of file (EOF) indication.
Ctrl+Z	^z	Stop a process.
n/a	^n	Suppresses the automatic generation of a new line. Thus, you can enter single characters; for example, the characters that are needed for yes/no answers in some utilities.

**Note:** For a 3215 line-mode terminal in 3215 mode, you must use United States code page (037).

## Using the magic sysrequest feature

The Linux on Z terminal device drivers support the magic sysrequest functions.

- To call the magic sysrequest functions on the VT220 terminal or on hvc0, enter the single character Ctrl+o followed by the character for the particular function.

You can call the magic sysrequest functions from the hvc0 terminal device if it is present and is activated to receive Linux kernel messages.

- To call the magic sysrequest functions on a line-mode terminal, enter the 2 characters "^-" (caret and hyphen) followed by a third character that specifies the particular function.

Table 7 on page 49 provides an overview of the commands for the magic sysrequest functions:

Table 7. Magic sysrequest functions

On line-mode terminals, enter	On hvc0 and the VT220 terminal, enter	To
^-b	Ctrl+ob	Re-IPL immediately (see <a href="#">“lsreipl - List IPL and re-IPL settings”</a> on page 593).
^-s	Ctrl+os	Emergency sync all file systems.
^-u	Ctrl+ou	Emergency remount all mounted file systems read-only.
^-t	Ctrl+ot	Show task info.
^-m	Ctrl+om	Show memory.
^- followed by a digit (0 - 9)	Ctrl+o followed by a digit (0 - 9)	Set the console log level.
^-e	Ctrl+oe	Send the TERM signal to end all tasks except init.
^-i	Ctrl+oi	Send the KILL signal to end all tasks except init.
^-p	Ctrl+op	See <a href="#">“Obtaining details about the CPU-measurement facilities”</a> on page 478.

**Note:** In [Table 7 on page 49](#) `Ctrl+O` means pressing `O` while holding down the control key.

[Table 7 on page 49](#) lists the main magic sysrequest functions that are known to work on Red Hat Enterprise Linux 8.1. For a more comprehensive list of functions, see `Documentation/sysrq.txt` in the Linux source tree. Some of the listed functions might not work on your system.

### Activating and deactivating the magic sysrequest feature

Use the `sysrq` procfs attribute to activate or deactivate the magic sysrequest feature.

#### Procedure

Issue the following command to activate the magic sysrequest function:

```
echo 1 > /proc/sys/kernel/sysrq
```

Issue the following command to deactivate the magic sysrequest feature:

```
echo 0 > /proc/sys/kernel/sysrq
```

Alternatively you can use **sysctl** to activate and deactivate the magic sysrequest feature. To check how the magic sysrequest function is set, issue:

```
# sysctl kernel.sysrq
kernel.sysrq = 1
```

In Red Hat Enterprise Linux 8.1 the magic sysrequest function is turned on by default. To turn it off using `sysctl`, issue:

```
# sysctl -w kernel.sysrq=0
```

### Triggering magic sysrequest functions from procfs

You can trigger the magic sysrequest functions through procfs.

#### Procedure

Write the character for the particular function to `/proc/sysrq-trigger`.

You can use this interface even if the magic sysrequest feature is not activated as described in [“Activating and deactivating the magic sysrequest feature” on page 50](#).

#### Example

To set the console log level to 9, enter:

```
# echo 9 > /proc/sysrq-trigger
```

## Using a z/VM emulation of the HMC Operating System Messages applet

You can use the **Operating System Messages** applet emulation; for example, if the 3215 terminal is not operational.

### About this task

The preferred terminal devices for Linux instances that run as z/VM guests are provided by the 3215 or 3270 terminal device drivers.

The emulation requires a terminal device that is provided by the SCLP line-mode terminal device driver. To use the emulation, you must override the default device driver for z/VM environments (see [“Console kernel parameter syntax” on page 40](#)).

For the emulation, you use the z/VM CP VINPUT command instead of the graphical user interface at the Support Element or HMC. Type any input to the operating system with a leading CP VINPUT.

The examples in the sections that follow show the input line of a 3270 terminal or terminal emulator (for example, x3270). Omit the leading #CP if you are in CP read mode. For more information about VINPUT, see *z/VM: CP Commands and Utilities Reference*, SC24-6268.

### Priority and non-priority commands

**VINPUT** commands require a VMSG (non-priority) or PVMSG (priority) specification.

Operating systems that accept this specification, process priority commands with a higher priority than non-priority commands.

The hardware console driver can accept both if supported by the hardware console within the specific machine or virtual machine.

Linux does not distinguish between priority and non-priority commands.

### Example

The specifications:

```
#CP VINPUT VMSG LS -L
```

and

```
#CP VINPUT PVMSG LS -L
```

are equivalent.

### Case conversion

All lowercase characters are converted by z/VM to uppercase. To compensate for this effect, the console device driver converts all input to lowercase.

For example, if you type `VINPUT VMSG echo $PATH`, the device driver gets `ECHO $PATH` and converts it into `echo $path`.

Linux and bash are case-sensitive and require some specifications with uppercase characters. To include uppercase characters in a command, use the percent sign (%) as a delimiter. The console device driver interprets characters that are enclosed by percent signs as uppercase.

### Examples

In the following examples, the first line shows the user input. The second line shows what the device driver receives after the case conversion by CP. The third line shows the command that is processed by bash:

```
• #cp vinput vmsg ls -l
  CP VINPUT VMSG LS -L
  ls -l
  ...
```

- The following input would result in a bash command that contains a variable `$path`, which is not defined in lowercase:

```
#cp vinput vmsg echo $PATH
CP VINPUT VMSG ECHO $PATH
echo $path
...
```

To obtain the correct bash command enclose the uppercase string with the conversion escape character:

```
#cp vinput vmsg echo $%PATH%
CP VINPUT VMSG ECHO $%PATH%
echo $PATH
...
```

### Using the escape character

The quotation mark (") is the standard CP escape character. To include the escape character in a command that is passed to Linux, you must type it twice.

### Example

The following command passes a string in double quotation marks to be echoed.

```
#cp vinput pvmsg echo ""here is ""$0
CP VINPUT PVMSG ECHO "HERE IS "$0
echo "here is "$0
here is -bash
```

In the example, \$0 resolves to the name of the current process.

### Using the end-of-line character

To include the end-of-line character in the command that is passed to Linux, you must specify it with a leading escape character.

If you are using the standard settings according to [“Using a 3270 terminal in 3215 mode” on page 52](#), you must specify `#` to pass `#` to Linux.

If you specify the end-of-line character without a leading escape character, z/VM CP interprets it as an end-of-line character that ends the **VINPUT** command.

### Example

In this example a number sign is intended to mark the begin of a comment in the bash command. This character is misinterpreted as the beginning of a second command.

```
#cp vinput pvmsg echo ""%N%umber signs start bash comments"" #like this one
CP VINPUT PVMSG ECHO "%N%UMBER SIGNS START BASH COMMENTS"
LIKE THIS ONE
HCPCMD001E Unknown CP command: LIKE
...
```

The escape character prevents the number sign from being interpreted as an e character.

```
#cp vinput pvmsg echo ""%N%umber signs start bash comments"" "#like this one
VINPUT PVMSG ECHO "%N%UMBER SIGNS START BASH COMMENTS" #LIKE THIS ONE
echo "Number signs start bash comments" #like this one
Number signs start bash comments
```

### Simulating the Enter and Spacebar keys

You can use the **CP VINPUT** command to simulate the Enter and Spacebar keys.

Simulate the Enter key by entering a blank followed by `\n`:

```
#CP VINPUT VMSG \n
```

Simulate the Spacebar key by entering two blanks followed by `\n`:

```
#CP VINPUT VMSG  \n
```

## Using a 3270 terminal in 3215 mode

The z/VM control program (CP) defines five characters as line-editing symbols. Use the **CP QUERY TERMINAL** command to see the current settings.



The default line-editing symbols depend on your terminal emulator. You can reassign the symbols by changing the settings of LINEND, TABCHAR, CHARDEL, LINEDEL, or ESCAPE with the **CP TERMINAL** command. [Table 8 on page 53](#) shows the most commonly used settings:

*Table 8. Line edit characters*

Character	Symbol	Usage
#	LINEND	The end of line character. With this character, you can enter several logical lines at once.
	TABCHAR	The logical tab character.
@	CHARDEL	The character delete symbol deletes the preceding character.
[ or ¢	LINEDEL	The line delete symbol deletes everything back to and including the previous LINEND symbol or the start of the input. "[" is common for ASCII terminals and "¢" for EBCDIC terminals.
"	ESCAPE	The escape character. With this character, you can enter a line-edit symbol as a normal character.

To enter a line-edit symbol, you must precede it with the escape character. In particular, to enter the escape character you must type it twice.

### Examples

The following examples assume the settings of [Table 8 on page 53](#) with the opening square bracket character ([) as the "delete line" character.

- To specify a tab character, specify:

```
" |
```

- To specify a double quotation mark character, specify:

```
" "
```

- If you type the character string:

```
#CP HALT#CP ZIPL 190[#CP IPL 1@290 PARM vmpoiff="MSG OP REBOOT"#IPL 290"
```

the actual commands that are received by CP are:

```
CP HALT
CP IPL 290 PARM vmpoiff="MSG OP REBOOT#IPL 290"
```



## Chapter 6. Initial program loader for IBM Z - zipl

Use **zipl** to prepare a boot device (with a Linux program loader) or to prepare a dump device.

Linux on Z as a KVM guest does not support dump devices with stand-alone dump tools. Instead of preparing a dump device with the zipl tool you can also use the kdump infrastructure. To use kdump, no preparation with zipl is necessary. For more information about the kdump infrastructure and the dump tools that **zipl** installs, see *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718.

You can simulate a **zipl** command to test a configuration before you apply the command to an actual device (see [dry-run](#)).

**zipl** supports the following devices for Linux on z/VM and Linux in LPAR mode:

- Enhanced Count Key Data (ECKD) DASDs with fixed block Linux disk layout (LDL)
- ECKD DASDs with z/OS-compliant compatible disk layout (CDL)
- Fixed Block Access (FBA) DASDs
- Magnetic tape subsystems compatible with IBM3480, IBM3490, or IBM3590
- SCSI disk with PC-BIOS disk layout

For supported IPL devices for Linux on KVM, see *KVM Virtual Server Management*, SC34-2752.

### Usage

The **zipl** tool has base functions that can be called from the command line or in configuration-file mode. There are generic parameters and parameters that are specific to particular base functions.

#### zipl base functions

For each base function, there is a short and a long command-line option and, with one exception, a corresponding configuration-file option.

Table 9. zipl base functions

Base function	Command line short option	Command line long option	Configuration file option	Environment
Install a boot loader  See <a href="#">“Preparing a boot device” on page 58</a> for details.	-i	--image	image=	LPAR z/VM KVM
Prepare a DASD, SCSI, or tape dump device  See <a href="#">“Preparing a DASD device, SCSI disk, or channel-attached tape dump device” on page 64</a> for details.	-d	--dumpto	dumpto=	LPAR z/VM
Prepare a list of ECKD volumes for a multi-volume dump  See <a href="#">“Preparing a multi-volume dump on ECKD DASD” on page 65</a> for details.	-M	--mvdump	mvdump=	LPAR z/VM

Table 9. *zipl* base functions (continued)

Base function	Command line short option	Command line long option	Configuration file option	Environment
Install a menu configuration See <a href="#">“Installing a menu configuration”</a> on page 67 for details.	-m	- -menu	(None)	LPAR z/VM KVM

## zipl modes and syntax overview

When running **zipl**, you can either directly specify a base function with its parameters or a configuration file with specifications, or you can use the default **zipl** configuration file.

**zipl** operates in one of two modes:


### Command-line mode

If a **zipl** command is issued with a base function other than installing a menu configuration (see [“Installing a menu configuration”](#) on page 67), the entire configuration must be defined by using command-line parameters. See the following base functions for how to specify command-line parameters:

- [“Preparing a boot device”](#) on page 58
- [“Preparing a DASD device, SCSI disk, or channel-attached tape dump device”](#) on page 64
- [“Preparing a multi-volume dump on ECKD DASD”](#) on page 65

### Configuration-file mode

If a **zipl** command is issued either without a base function or to install a menu configuration, a configuration file is accessed. For more information, see [“Configuration file structure”](#) on page 71.

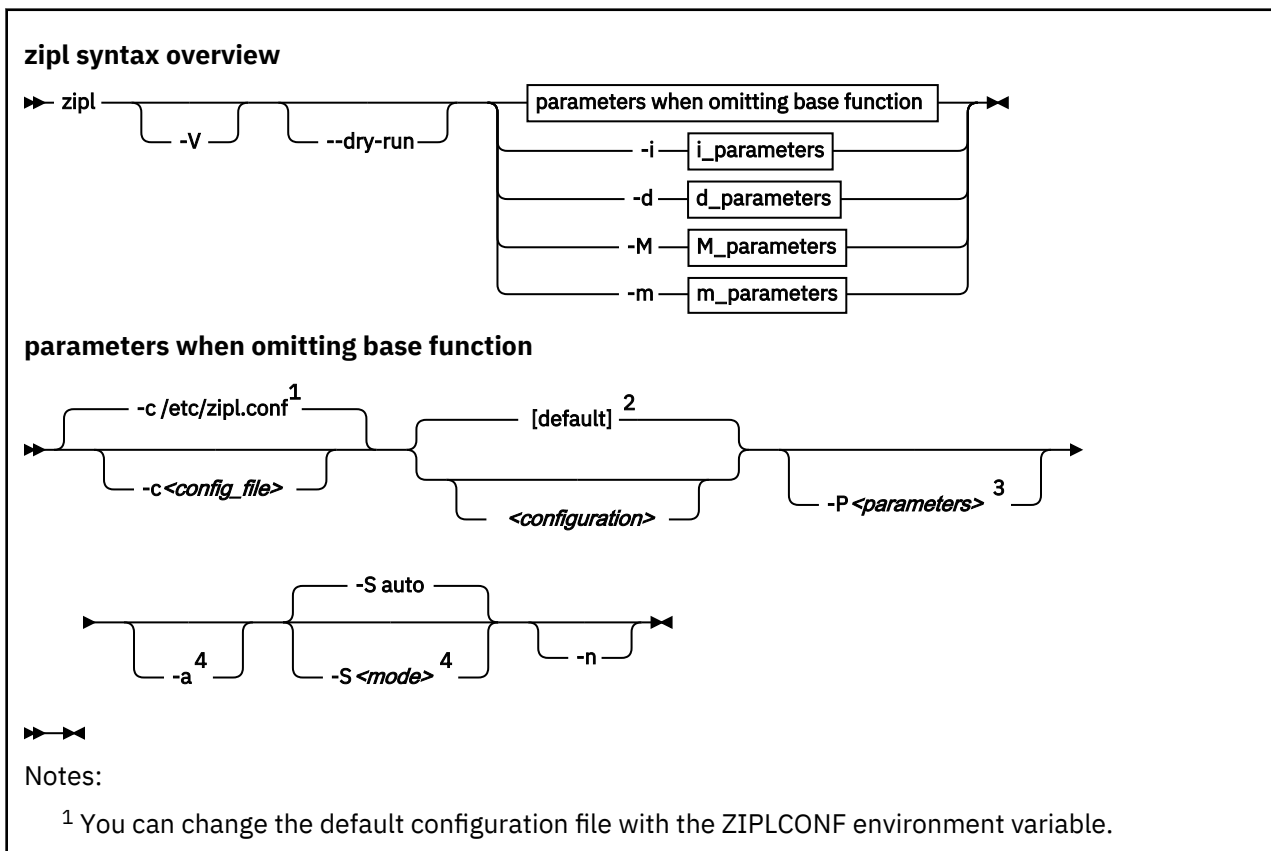

<sup>2</sup> If no configuration is specified, **zipl** uses the configuration in the [defaultboot] section of the configuration file (see “[Configuration file structure](#)” on page 71).

<sup>3</sup> In a boot configuration only.

<sup>4</sup> In a boot configuration or a menu configuration only.

Where:

**-c <config\_file>**

specifies the configuration file to be used.

**<configuration>**

specifies a single configuration section in a configuration file.

**-P <parameters>**

can optionally be used to provide kernel parameters in a boot configuration section. See “[How kernel parameters from different sources are combined](#)” on page 60 for information about how kernel parameters specified with the **-P** option are combined with any kernel parameters specified in the configuration file.

If you provide multiple parameters, separate them with a blank and enclose them within single quotation marks (') or double quotation marks (").

**-a**

in a boot configuration section, adds kernel image, kernel parameter file, and initial RAM disk to the bootmap file. Use this option when these files are spread across multiple disks to ensure that they are available at IPL time. Specifying this option significantly increases the size of the bootmap file that is created in the target directory.

**-S <mode> or --secure <mode>**

SCSI IPL disk device for LPAR only: Controls the format of the boot data that zipl writes to the IPL device. <mode> takes the following values:

**auto**

Uses the secure-boot enabled format if the zipl command is issued on a mainframe with secure-boot support. This is the default.

**1**

Enforces the secure-boot enabled format regardless of mainframe support. Use this option to prepare boot devices for systems other than the one you are working on. Disks with this format cannot be booted on machines z14 or earlier.

**0**

Enforces the traditional format, that does not support secure boot, regardless of mainframe support. Disks with this format can be booted on all machines but cannot be used for secure boot.

**-n**

suppresses confirmation prompts that require operator responses to allow unattended processing (for example, for processing DASD or tape dump configuration sections).

**-V**

provides verbose command output.

**--dry-run**

simulates a **zipl** command. Use this option to test a configuration without overwriting data on your device.

During simulation, **zipl** performs all command processing and issues error messages where appropriate. Data is temporarily written to the target directory and is cleared up when the command simulation is completed.

**-v**

displays version information.

**-h**

displays help information.

The basic functions and their parameters are described in detail in the following sections.

See “Parameter overview” on page 67 for a summary of the short and long command-line options and their configuration file equivalents.

## Examples

- To process the default configuration in the default configuration file (/etc/zipl.conf, unless specified otherwise with the environment variable ZIPLCONF) issue:

```
# zipl
```

- To process the default configuration in a configuration file /etc/myxmp.conf issue:

```
# zipl -c /etc/myxmp.conf
```

- To process a configuration [myconf] in the default configuration file issue:

```
# zipl myconf
```

- To process a configuration [myconf] in a configuration file /etc/myxmp.conf issue:

```
# zipl -c /etc/myxmp.conf myconf
```


- To simulate processing a configuration [myconf] in a configuration file /etc/myxmp.conf issue:

```
# zipl --dry-run -c /etc/myxmp.conf myconf
```

## Preparing a boot device

Use **zipl** with the **-i (--image)** command-line option or with the **image=** configuration-file option to prepare a boot device.

### zipl command line syntax for preparing a boot device

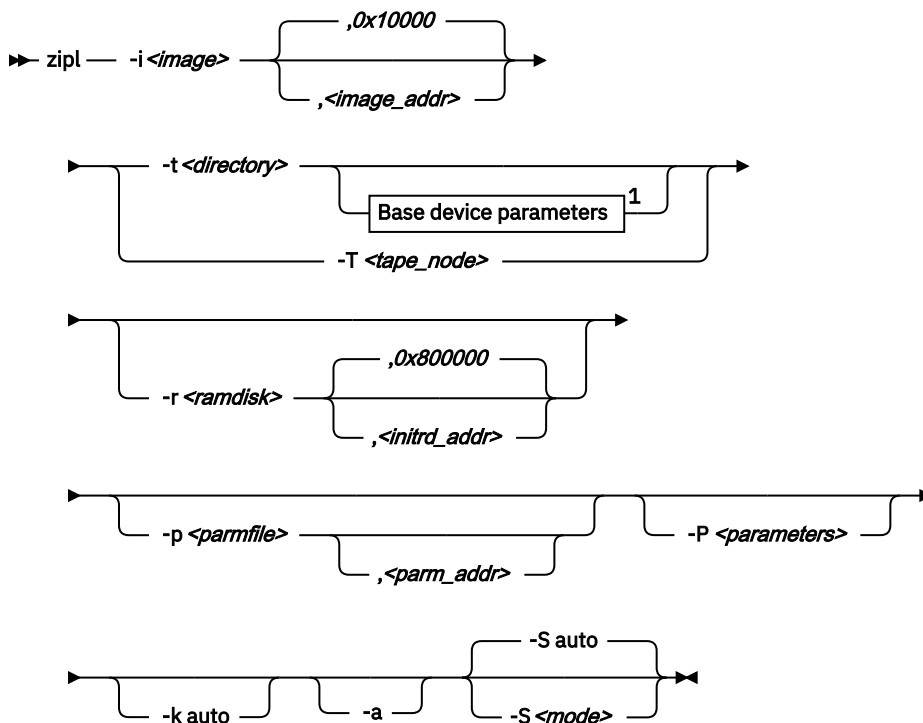

Notes:

<sup>1</sup> Additional parameters that are used only if **-t** specifies a logical device as a target. See [“Using base device parameters”](#) on page 62.

To prepare a device as a boot device, you must specify:

**The location *<image>***

of the Linux kernel image on the file system.

**A target *<directory>* or *<tape\_node>***

**zipl** installs the boot loader code on the device that contains the specified directory *<directory>* or to the specified tape device *<tape\_node>*.

For KVM guests the target device must be a virtual block device. For details, see *KVM Virtual Server Management*, SC34-2752.

Optionally, you can also specify:

**A kernel image address *<image\_addr>***

to which the kernel image is loaded at IPL time. The default address is 0x10000.

**The RAM disk location *<ramdisk>***

of an initial RAM disk image (initrd) on the file system.

**A RAM disk image address *<initrd\_addr>***

to which the RAM disk image is loaded at IPL time. If you do not specify this parameter, **zipl** investigates the location of other components and calculates a suitable address for you.

**Kernel parameters**

to be used at IPL time. If you provide multiple parameters, separate them with a blank and enclose them within single quotation marks (') or double quotation marks (").

You can specify parameters *<parameters>* directly on the command line. Instead or in addition, you can specify a location *<parmfile>* of a kernel parameter file on the file system. See [“How kernel parameters from different sources are combined”](#) on page 60 for a discussion of how **zipl** combines multiple kernel parameter specifications.

**A parameter address *<parm\_addr>***

to which the kernel parameters are loaded at IPL time. The default address is 0x1000.

**An option **-k auto****

to install a kdump kernel that can be used as a stand-alone dump tool. You can IPL this kernel in an LPAR or guest virtual machine to create a dump of a previously running operating system instance that has been configured with a reserved memory area for kdump. For Linux, this memory area is reserved with the `crashkernel=` kernel parameter.

**Note:** For SCSI disks, the accumulated size of the kernel and ramdisk must not exceed 16 MB.

**An option **-a****

to add the kernel image, kernel parameter file, and initial RAM disk to the bootmap file. Use this option when these files are spread across multiple disks to ensure that they are available at IPL time. This option is available on the command line only. Specifying this option significantly increases the size of the bootmap file that is created in the target directory.

**An option **-S****

SCSI IPL device for LPAR only: Controls the zipl secure boot support. *<mode>* takes the following values:

**auto**

Uses the secure-boot enabled format if the zipl command is issued on a mainframe with secure-boot support. This is the default.

**1**

Enforces the secure-boot enabled format regardless of mainframe support. Use this option to prepare boot devices for systems other than the one you are working on. Disks with this format cannot be booted on machines z14 or earlier.

Enforces the traditional format, that does not support secure boot, regardless of mainframe support. Disks with this format can be booted on all machines but cannot be used for secure boot.

See “Parameter overview” on page 67 for a summary of the parameters. This summary includes the long options that you can use on the command line.

Figure 17 on page 60 summarizes how you can specify a boot configuration within a configuration file section. Required specifications are shown in bold. See “Configuration file structure” on page 71 for a more comprehensive discussion of the configuration file.

```
[<section_name>]
image=<image>,<image_addr>
ramdisk=<ramdisk>,<initrd_addr>
parmfile=<parmfile>,<parm_addr>
parameters=<parameters>
# Next line for devices other than tape only
target=<directory>
# Next line for tape devices only
tape=<tape_node>
# Next line for stand-alone kdump only
kdump=auto
```

Figure 17. *zipl syntax for preparing a boot device - configuration file mode*

## Example

The following command identifies the location of the kernel image as `/boot/mnt/image-2`, identifies the location of an initial RAM disk as `/boot/mnt/initrd`, specifies a kernel parameter file `/boot/mnt/parmf-2`, and writes the required boot loader code to `/boot`. At IPL time, the initial RAM disk is to be loaded to address `0x900000`, rather than an address that is calculated by **zipl**. Kernel image, initial RAM disk, and the kernel parameter file are to be copied to the bootmap file on the target directory `/boot` rather than being referenced.

```
# zipl -i /boot/mnt/image-2 -r /boot/mnt/initrd,0x900000 -p /boot/mnt/parmf-2 -t /boot -a
```

An equivalent section in a configuration file might look like this example:

```
[boot2]
image=/boot/mnt/image-2
ramdisk=/boot/mnt/initrd,0x900000
parmfile=/boot/mnt/parmf-2
target=/boot
```

There is no configuration file equivalent for option **-a**. To use this option for a boot configuration in a configuration file, it must be specified with the **zipl** command that processes the configuration.

If the configuration file is called `/etc/myxmp.conf`:

```
# zipl -c /etc/myxmp.conf boot2 -a
```

## How kernel parameters from different sources are combined

**zipl** allows for multiple sources of kernel parameters when preparing boot devices.

In command-line mode, there are two possible sources of kernel parameters. The parameters are processed in the following order:

1. Parameters in the kernel parameter file (specified with the **-p** or **--parmfile** option)
2. Parameters that are specified on the command line (specified with the **-P** or **--parameters** option)

In configuration file mode, there are three possible sources of kernel parameters. The parameters are processed in the following order:



1. Parameters that are specified in the kernel parameter file (specified with the **parmfile=** option)
2. Parameters that are specified in the configuration section (specified with the **parameters=** option)
3. Parameters that are specified on the command line (specified with the **-P** or **--parameters** option)

Parameters from different sources are concatenated and passed to the kernel in one string. At IPL time, the combined kernel parameter string is loaded to address 0x1000, unless an alternate address is provided.

For more information about the different sources of kernel parameters, see [“Including kernel parameters in a boot configuration”](#) on page 23.

## Preparing a logical device as a boot device

A *logical device* is a block device that represents one or more real devices.

If your boot directory is on a logical DASD or SCSI device, zipl cannot detect all required information about the underlying real device or devices and needs extra input.

Logical devices can be two DASDs combined into a logical mirror volume. Another examples are a linear mapping of a partition to a real device or a more complex mapping hierarchy. Logical devices are controlled by a device mapper.

Blocks on the logical device must map to blocks on the underlying real device or devices linearly. If two blocks on the logical device are adjacent, they must also be adjacent on the underlying real devices. This requirement excludes mappings such as *striping*.

You always boot from a real device. **zipl** must be able to write to that device, starting at block 0. In a logical device setup, starting at the top of the mapping hierarchy, the first block device that grants access to block 0 (and subsequent blocks) is the *base device*, see [Figure 18 on page 61](#).

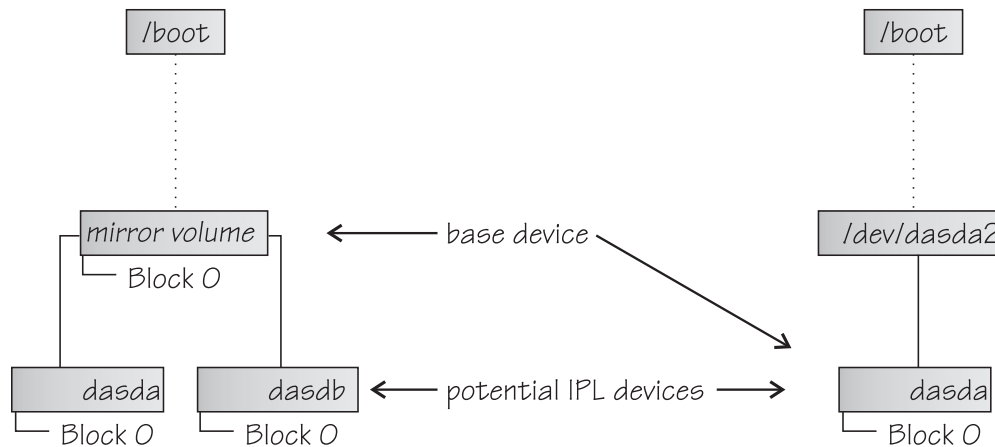


Figure 18. Definition of base device

A base device can have the following mappings:

- A mapping to a part of a real device that contains block 0
- A mapping to one complete real device
- A mapping to multiple real devices.

For a mapping to multiple real devices all the real devices must share the device characteristics and contain the same data (for example, a mirror setup). The mapping can also be to parts of the devices if these parts contain block 0. The mapping must not combine multiple devices into one large device.

The **zipl** command needs the device node of the base device and information about the physical characteristics of the underlying real devices. For most logical boot devices, a helper script automatically provides all the required information to **zipl** for you (see [“Using a helper script”](#) on page 62).

If you decide not to use the supplied helper script, or want to write your own helper script, you can use parameters to supply the base device information to **zipl**, see [“Using base device parameters”](#) on page 62 and [“Writing your own helper script”](#) on page 63.

### Using a helper script

**zipl** provides a helper script, `zipl_helper.device-mapper`, that detects the required information and provides it to **zipl** for you.

The helper script is used automatically when you run **zipl** to prepare a boot device. Specify the parameters for the kernel image, parameter file, initial RAM disk, and target as usual. See [“Preparing a boot device”](#) on page 58 for details about the parameters.

Assuming an example device for which the location of the kernel image is `/boot/image-5`, the location of an initial RAM disk as `/boot/initrd-5`, a kernel parameter file `/boot/parmf-5`, and which writes the required boot loader code to `/boot` and is a device mapper device, the command then becomes:

```
# zipl -i /boot/image-5 -r /boot/initrd-5 -p /boot/parmf-5 -t /boot
```

The corresponding configuration file section becomes:


```
[boot5]
image=/boot/image-5
ramdisk=/boot/initrd-5
paramfile=/boot/parmf-5
target=/boot
```

### Using base device parameters

You can use parameters to supply the base device information to **zipl** directly.

The following command syntax for the base device parameters is used for logical boot devices. It extends the **zipl** syntax as shown in [“Preparing a boot device”](#) on page 58.

#### Base device parameters

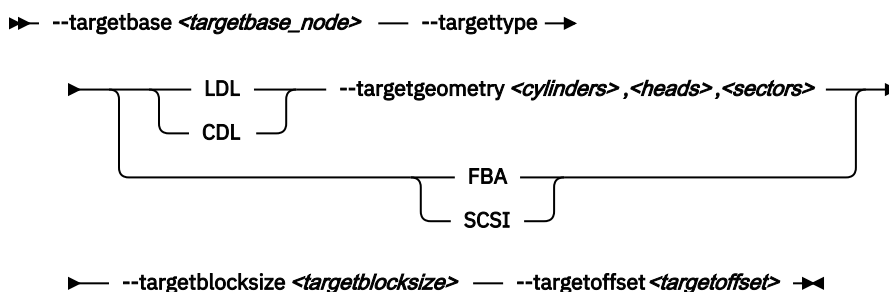

You must specify the following device information:

#### The device node **<targetbase\_node>**

of the base device, either by using the standard device name or in form of the major and minor number, separated by a colon (:).

**Example:** The device node specification for the device might be `/dev/dm-0` and the equivalent specification with major and minor numbers might be `253:0`.

#### The device type

of the base device. The following specifications are valid:

##### LDL

for ECKD type DASD with the Linux disk layout.

##### CDL

for ECKD type DASD with the compatible disk layout.

**FBA**

for FBA type DASD.

**SCSI**

for FCP-attached SCSI disks.

**LDL and CDL only: The disk geometry <cylinders>,<heads>,<sectors>**

of the base device in cylinders, heads, and sectors.

**The block size <targetblocksize>**

in bytes per block of the base device.

**The offset <targetoffset>**

in blocks between the start of the physical device and the start of the topmost logical device in the mapping hierarchy.

Figure 19 on page 63 shows how you can specify this information in a configuration file.

```
[<section_name>]
image=<image>,<image_addr>
ramdisk=<ramdisk>,<initrd_addr>
parmfile=<parmfile>,<parm_addr>
parameters=<parameters>
target=<directory>
targetbase=<targetbase_node>
targettype=LDL|CDL|FBA|SCSI
# Next line for target types LDL and CDL only
targetgeometry=<cylinders>,<heads>,<sectors>
targetblocksize=<targetblocksize>
targetoffset=<targetoffset>
```

Figure 19. zipl syntax for preparing a logical device as a boot device - configuration file mode

**Example**

The example command identifies the location of the kernel image as /boot/image-5, identifies the location of an initial RAM disk as /boot/initrd-5, specifies a kernel parameter file /boot/parmf-5, and writes the required boot loader code to /boot.

The command specifies the following information about the base device: the device node is /dev/dm-3, the device has the compatible disk layout, there are 6678 cylinders, there are 15 heads, there are 12 sectors, and the topmost logical device in the mapping hierarchy begins with an offset of 24 blocks from the start of the base device.

```
# zipl -i /boot/image-5 -r /boot/initrd-5 -p /boot/parmf-5 -t /boot --targetbase /dev/dm-3 \
# --targettype CDL --targetgeometry 6678,15,12 --targetblocksize=4096 --targetoffset 24
```

**Note:** Instead of using the continuation sign (\) at the end of the first line, you might want to specify the entire command on a single line.

An equivalent section in a configuration file might look like this example:

```
[boot5]
image=/boot/image-5
ramdisk=/boot/initrd-5
paramfile=/boot/parmf-5
target=/boot
targetbase=/dev/dm-3
targettype=CDL
targetgeometry=6678,15,12
targetblocksize=4096
targetoffset=24
```

**Writing your own helper script**


You can write your own helper script for device drivers that provide logical devices. The helper script must conform to a set of rules.

- The script must accept the name of the target directory as an argument. From this specification, it must determine a suitable base device. See [“Using base device parameters”](#) on page 62.
  - The script must write the following base device `<parameter>=<value>` pairs to stdout as ASCII text. Each pair must be written on a separate line.
    - `targetbase=<targetbase_node>`
    - `targettype=<type>` where type can be LDL, CDL, FBA, or SCSI.
    - `targetgeometry=<cylinders>,<heads>,<sectors>` (For LDL and CDL only)
    - `targetblocksize=<blocksize>`
    - `targetoffset=<offset>`
- See [“Using base device parameters”](#) on page 62 for the meaning of the base device parameters.
- The script must be named `zipl_helper.<device>` where `<device>` is the device name as specified in `/proc/devices`.
  - The script must be in `/lib/s390-tools`.

## ■ Preparing a DASD device, SCSI disk, or channel-attached tape dump device

Use **zipl** with the **-d (--dumpto)** command-line option or with the **dumpto=** configuration-file option to prepare a DASD device, SCSI disk, or channel-attached tape dump device.

### zipl command line syntax for preparing a DASD device, SCSI disk, or channel-attached tape dump device

► `zipl — -d <dump_device>` 

To prepare a DASD device, SCSI disk, or channel-attached tape dump device, you must specify:

#### The device node `<dump_device>`

of the DASD device, SCSI disk partition, or channel-attached tape device to be prepared as a dump device. **zipl** deletes all data on the partition or tape and installs the boot loader code there.

#### Note:

- If the dump device is an ECKD disk with fixed-block layout (LDL), a dump overwrites the dump utility. You must reinstall the dump utility before you can use the device for another dump.
- If the dump device is a channel-attached tape, SCSI disk, FBA disk, or ECKD disk with the compatible disk layout (CDL), you do not need to reinstall the dump utility after every dump.

Optionally, you can also specify:

#### An option `-n`

to suppress confirmation prompts to allow unattended processing (for example, from a script). This option is available on the command line only.

#### A limit `<size>`

for the amount of memory to be dumped. The value is a decimal number that can optionally be suffixed with K for kilobytes, M for megabytes, or G for gigabytes. The value is rounded to the next megabyte boundary.

If you limit the dump size below the amount of memory that is used by the system to be dumped, the resulting dump is incomplete.

**Note:** For SCSI dump devices, the "size" option is not available.

DASD device, SCSI disk, or channel-attached tape dump devices are not formatted with a file system so no target directory can be specified. See *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 for details about processing these dumps.

See “Parameter overview” on page 67 for a summary of the parameters. The summary includes the long options that you can use on the command line.

Figure 20 on page 65 summarizes how you can specify a DASD device, SCSI disk, or channel-attached tape dump configuration in a configuration file. See “Configuration file structure” on page 71 for a more comprehensive discussion of the configuration file.

```
[<section_name>]  
dump<to=<dump_device>,<size>
```

*Figure 20. zipl syntax for preparing a DASD device, SCSI disk, or channel-attached tape dump device - configuration file mode*

### DASD example

The following command prepares a DASD partition `/dev/dasdc1` as a dump device and suppresses confirmation prompts that require an operator response:

```
# zipl -d /dev/dasdc1 -n
```

An equivalent section in a configuration file might look like this example:

```
[dumpdasd]  
dump<to=/dev/dasdc1
```

There is no configuration file equivalent for option `-n`. To use this option for a DASD or tape dump configuration in a configuration file, it must be specified with the **zipl** command that processes the configuration.

If the configuration file is called `/etc/myxmp.conf`:

```
# zipl -c /etc/myxmp.conf dumpdasd -n
```

### SCSI disk example

The following command prepares a SCSI disk partition `/dev/mapper/36005076303ffd40100000000000020c0-part1` as a dump device:

```
# zipl -d /dev/mapper/36005076303ffd40100000000000020c0-part1
```

An equivalent section in a configuration file might look like this example:

```
[dumpscsi]  
dump<to=/dev/mapper/36005076303ffd40100000000000020c0-part1
```

If the configuration file is called `/etc/myxmp.conf`, the **zipl** command that processes the configuration would be:

```
# zipl -c /etc/myxmp.conf dumpscsi
```

## Preparing a multi-volume dump on ECKD DASD

Use **zipl** with the **-M** (**--mvdump**) command-line option or with the **mvdump=** configuration-file option to prepare a multi-volume dump on ECKD DASD.

## zipl command line syntax for preparing devices for a multi-volume dump

➔ zipl 

To prepare a set of DASD devices for a multi-volume dump, you must specify:

### **-M <dump\_device\_list>**

specifies a file that contains the device nodes of the dump partitions, separated by one or more line feed characters (0x0a). **zipl** writes a dump signature to each involved partition and installs the stand-alone multi-volume dump tool on each involved volume. Duplicate partitions are not allowed. A maximum of 32 partitions can be listed. The volumes must be formatted with cdl and use block size 4096.

Optionally, you can also specify:

### **-f or --force**

to force that no signature checking takes place when dumping. Any data on all involved partitions is overwritten without warning.

### **-n**

to suppress confirmation prompts to allow unattended processing (for example, from a script). This option is available on the command line only.

### **<size>**

for the amount of memory to be dumped. The value is a decimal number that can optionally be suffixed with K for kilobytes, M for megabytes, or G for gigabytes. The value is rounded to the next megabyte boundary.

If you limit the dump size below the amount of memory that is used by the system to be dumped, the resulting dump is incomplete.

DASD or tape dump devices are not formatted with a file system so no target directory can be specified. See *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 for details about processing these dumps.

See “Parameter overview” on page 67 for a summary of the parameters. This summary includes the long options that you can use on the command line.

Figure 21 on page 66 summarizes how you can specify a multi-volume DASD dump configuration in a configuration file. See “Configuration file structure” on page 71 for a more comprehensive discussion of the configuration file.

```
[<section_name>]
mvdump=<dump_device_list>,<size>
```

Figure 21. zipl syntax for preparing DASD devices for a multi-volume dump - configuration file mode

## Example

The following command prepares two DASD partitions `/dev/dasdc1`, `/dev/dasdd1` for a multi-volume dump and suppresses confirmation prompts that require an operator response:

```
# zipl -M mvdump.conf -n
```

where the `mvdump.conf` file contains the two partitions that are separated by line breaks:

```
/dev/dasdc1
/dev/dasdd1
```

An equivalent section in a configuration file might look like this example:

```
[multi_volume_dump]
mvdump=mvdump.conf
```

There is no configuration file equivalent for option **-n**. To use this option for a multi-volume DASD dump configuration in a configuration file, it must be specified with the **zipl** command that processes the configuration.

If the configuration file is called `/etc/myxmp.conf`:


```
# zipl -c /etc/myxmp.conf multi_volume_dump -n
```

## Installing a menu configuration

Use **zipl** with the **-m** (**--menu**) command-line option to install a menu configuration.

To prepare a menu configuration, you need a configuration file that includes at least one menu.

### zipl syntax for installing a menu configuration

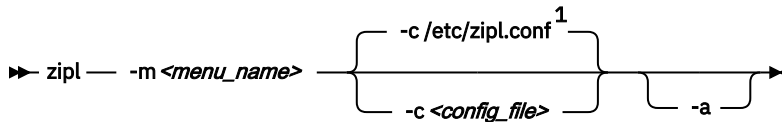

Notes:

<sup>1</sup> You can change the default configuration file with the `ZIPLCONF` environment variable.

Where:

#### **-m** or **--menu**

specifies the menu that defines the menu configuration in the configuration file.

#### **<config\_file>**

specifies the configuration file where the menu configuration is defined. The default, `/etc/zipl.conf`, can be changed with the `ZIPLCONF` environment variable.

#### **-a** or **--add-files**

adds the kernel image file, parmfile, and initial RAM disk image to the bootmap files in the respective target directories instead of referencing them. Use this option if the files are spread across disks to ensure that the files are available at IPL time. Specifying this option significantly increases the size of the bootmap file that is created in the target directory.

### Example

Using the sample configuration file of [Figure 22 on page 74](#), you could install a menu configuration with:

```
# zipl -m menu1
```

## Parameter overview

You might need to know all **zipl** options and how to specify them on the command line or in the configuration file.

Command line short option Command line long option  Configuration file option	Explanation
-a --add-files  n/a	Causes kernel image, kernel parameter file, and initial RAM disk to be added to the bootmap file in the target directory rather than being referenced from this file.  Use this option when these files are spread across multiple disks to ensure that they are available at IPL time. Specifying this option significantly increases the size of the bootmap file that is created in the target directory.
-c <config_file> --config=<config_file>  n/a	Specifies the configuration file. You can change the default configuration file /etc/zip1.conf with the environment variable ZIPLCONF.
<configuration> n/a  n/a	Specifies a configuration section to be read and processed from the configuration file.
-d <dump_device>[,<size>] --dumpto=<dump_device>[,<size>]  dumpto=<dump_device>[,<size>]	Specifies the DASD partition, SCSI disk partition, or tape device to which a dump is to be written after IPL.  The optional size specification limits the amount of memory to be dumped. The value is a decimal number that can optionally be suffixed with K for kilobytes, M for megabytes, or G for gigabytes. The value is rounded to the next megabyte boundary. If you limit the dump size below the amount of memory that is used by the system to be dumped, the resulting dump is incomplete. If no limit is provided, all of the available physical memory is dumped.  See <a href="#">“Preparing a DASD device, SCSI disk, or channel-attached tape dump device”</a> on page 64 and <a href="#">Using the Dump Tools on Red Hat Enterprise Linux 8</a> , SC34-7718 for details.
-h --help  n/a	Displays help information.
-i <image>[,<image_addr>] --image=<image>[,<image_addr>]  image=<image>[,<image_addr>]	Specifies the location of the Linux kernel image on the file system and, optionally, in memory after IPL. The default memory address is 0x10000.  See <a href="#">“Preparing a boot device”</a> on page 58 for details.



Command line short option Command line long option  Configuration file option	Explanation
-k auto --kdump=auto  kdump=auto	Installs a kdump kernel that can be used as a stand-alone dump tool. You can IPL this kernel in an LPAR or guest virtual machine to create a dump of a previously running operating system instance that has been configured with a reserved memory area for kdump. For Linux, this memory area is reserved with the <code>crashkernel=</code> kernel parameter.  See <a href="#">“Preparing a boot device” on page 58</a> for details.
-m <menu_name> --menu=<menu_name>  n/a	Specifies the name of the menu that defines a menu configuration in the configuration file (see <a href="#">“Menu configurations” on page 72</a> ).
-M <dump_device_list>[,<size>] --mvdump=<dump_device_list>[,<size>]  mvdump=<dump_device_list>[,<size>]	Specifies a file with a list of DASD partitions to which a dump is to be written after IPL.  The optional size specification limits the amount of memory to be dumped. The value is a decimal number that can optionally be suffixed with K for kilobytes, M for megabytes, or G for gigabytes. The value is rounded to the next megabyte boundary. If you limit the dump size below the amount of memory that is used by the system to be dumped, the resulting dump is incomplete. If no limit is provided, all of the available physical memory is dumped.  See <a href="#">“Preparing a multi-volume dump on ECKD DASD” on page 65</a> and <a href="#">Using the Dump Tools on Red Hat Enterprise Linux 8, SC34-7718</a> for details.
-n --noninteractive  n/a	Suppresses all confirmation prompts (for example, when preparing a DASD or tape dump device).
-p <parmfile>[,<parm_addr>] --parmfile=<parmfile>[,<parm_addr>]  parmfile=<parmfile>[,<parm_addr>]	In a boot configuration, specifies the location of a kernel parameter file.  You can specify multiple sources of kernel parameters. For more information, see <a href="#">“How kernel parameters from different sources are combined” on page 60</a> .  The optional <parm_addr> specifies the memory address where the combined kernel parameter list is to be loaded at IPL time.

Command line short option Command line long option  Configuration file option	Explanation
-P <parameters> --parameters=<parameters>  parameters=<parameters>	<p>In a boot configuration, specifies kernel parameters.</p> <p>Individual parameters are single keywords or have the form key=value, without spaces. If you provide multiple parameters, separate them with a blank and enclose them within single quotation marks (') or double quotation marks (").</p> <p>You can specify multiple sources of kernel parameters. For more information, see <a href="#">“How kernel parameters from different sources are combined” on page 60</a>.</p>
-r <ramdisk>[,<initrd_addr>] --ramdisk=<ramdisk>[,<initrd_addr>  ramdisk=<ramdisk>[,<initrd_addr>	<p>Specifies the location of the initial RAM disk (initrd) on the file system and, optionally, in memory after IPL. If you do not specify a memory address, <b>zipl</b> investigates the location of other components and calculates a suitable address for you.</p>
-S <mode> --secure=<mode>  secure=auto 0 1	<p>In an LPAR boot configuration, controls the format of the boot data that zipl writes to a SCSI IPL device. You can specify the following values for &lt;mode&gt;:</p> <p><b>auto</b>            Uses the secure-boot enabled format if the zipl command is issued on a mainframe with secure-boot support. This is the default.</p> <p><b>1</b>            Enforces the secure-boot enabled format regardless of mainframe support. Use this option to prepare boot devices for systems other than the one you are working on. Disks with this format cannot be booted on machines z14 or earlier.</p> <p><b>0</b>            Enforces the traditional format, that does not support secure boot, regardless of mainframe support. Disks with this format can be booted on all machines but cannot be used for secure boot.</p>
-t <directory> --target=<directory>  target=<directory>	<p>Specifies the target directory where <b>zipl</b> creates boot-relevant files. The boot loader is installed on the disk that contains the target directory.</p>
none --targetbase=<targetbase_node>  targetbase=<targetbase_node>	<p>For logical boot devices, specifies the device node of the base device, either by using the standard device name or in form of the major and minor number, separated by a colon (:).</p> <p>See <a href="#">“Using base device parameters” on page 62</a> for details.</p>
none --targetblocksize=<targetblocksize>  targetblocksize=<targetblocksize>	<p>For logical boot devices, specifies the bytes per block of the base device.</p> <p>See <a href="#">“Using base device parameters” on page 62</a> for details.</p>

Command line short option Command line long option  Configuration file option	Explanation
none -- targetgeometry=<cylinders>,<heads>,<sectors>  targetgeometry=<cylinders>,<heads>,<sectors>	For logical boot devices that map to ECKD type base devices, specifies the disk geometry of the base device in cylinders, heads, and sectors.  See <a href="#">“Using base device parameters” on page 62</a> for details.
none --targetoffset=<targetoffset>  targetoffset=<targetoffset>	For logical boot devices, specifies the offset in blocks between the start of the physical device and the start of the logical device.  See <a href="#">“Using base device parameters” on page 62</a> for details.
none --targettype=<type>  targettype=<type>	For logical boot devices, specifies the device type of the base device.  See <a href="#">“Using base device parameters” on page 62</a> for details.
-T <tape_node> --tape=<tape_node>  tape=<tape_node>	Specifies the tape device where <b>zipl</b> installs the boot loader code.
-v --version  n/a	Prints version information.
-V --verbose  n/a	Provides more detailed command output.

If you call **zipl** in configuration file mode without specifying a configuration file, the default `/etc/zipl.conf` is used. You can change the default configuration file with the environment variable `ZIPLCONF`.

## Configuration file structure

A configuration file comprises a default section and one or more sections with IPL configurations. In addition, there can be sections that define menu configurations.

### [defaultboot]

a default section that defines what is to be done if the configuration file is called without a section specification.

### [<configuration>]

one or more sections that describe IPL configurations.

**:<menu\_name>**

optionally, one or more menu sections that describe menu configurations.

A configuration file section consists of a section identifier and one or more option lines. Option lines are valid only as part of a section. Blank lines are permitted, and lines that begin with the number sign (#) are treated as comments and ignored. Option specifications consist of keyword=value pairs. There can but need not be blanks before and after the equal sign (=) of an option specification.

## Default section

The default section consists of the section identifier, [defaultboot], followed by a single option line.

The option line specifies one of these mutually exclusive options:

**default=<section\_name>**

where <section\_name> is one of the IPL configurations described in the configuration file. If the configuration file is called without a section specification, an IPL device is prepared according to this IPL configuration.

**defaultmenu=<menu\_name>**

where <menu\_name> is the name of a menu configuration that is described in the configuration file. If the configuration file is called without a section specification, IPL devices are prepared according to this menu configuration.

## Examples

- This default specification points to a boot configuration boot1 as the default.

```
[defaultboot]
default=boot1
```

- This default specification points to a menu configuration with a menu menu1 as the default.

```
[defaultboot]
defaultmenu=menu1
```

## IPL configurations

An IPL configuration has a section identifier that consists of a section name within square brackets and is followed by one or more option lines.

Each configuration includes one of the following mutually exclusive options that determine the type of IPL configuration:

**image=<image>**

Defines a boot configuration. See [“Preparing a boot device” on page 58](#) for details.

**dump=<dump\_device>**

Defines a DASD, SCSI, or tape dump configuration. See [“Preparing a DASD device, SCSI disk, or channel-attached tape dump device” on page 64](#) for details.

**mvdump=<dump\_device\_list>**

Defines a multi-volume DASD dump configuration. See [“Preparing a multi-volume dump on ECKD DASD” on page 65](#) for details.

**KVM:** For KVM guests, image= is the only supported option.

Additional parameters might be required for logical boot devices (see [“Preparing a logical device as a boot device” on page 61](#)).

## Menu configurations

For DASD and SCSI devices, you can define a menu configuration. A menu configuration has a section identifier that consists of a menu name with a leading colon.

The identifier is followed by one or more lines with references to IPL configurations in the same configuration file and one or more option lines.

**target=<directory>**

specifies a device where a boot loader is installed that handles multiple IPL configurations. For menu configurations, the target options of the referenced IPL configurations are ignored.

**<i>=<configuration>**

specifies a menu item. A menu includes one and more lines that specify the menu items.

<configuration> is the name of an IPL configuration that is described in the same configuration file. You can specify multiple boot configurations. For SCSI target devices, you can also specify one or more SCSI dump configurations. You cannot include DASD dump configurations as menu items.

<i> is the configuration number. The configuration number sequentially numbers the menu items, beginning with 1 for the first item. When initiating an IPL from a menu configuration, you can specify the configuration number of the menu item you want to use.

**default=<n>**

specifies the configuration number of one of the configurations in the menu to define it as the default configuration. If this option is omitted, the first configuration in the menu is the default configuration.

**prompt=<flag>**

for a DASD target device, determines whether the menu is displayed when an IPL is performed. Menus cannot be displayed for SCSI target devices.

For prompt=1 the menu is displayed, for prompt=0 it is suppressed. If this option is omitted, the menu is not displayed. Independent of this parameter, the operator can force a menu to be displayed by specifying prompt in place of a configuration number for an IPL configuration to be used.

If the menu of a menu configuration is not displayed, the operator can either specify the configuration number of an IPL configuration or the default configuration is used.

**timeout=<seconds>**

for a DASD target device and a displayed menu, specifies the time in seconds, after which the default configuration is IPLed, if no configuration has been specified by the operator. If this option is omitted or if 0 is specified as the timeout, the menu stays displayed indefinitely on the operator console and no IPL is performed until the operator specifies an IPL configuration.

**Example**

Figure 22 on page 74 shows a sample configuration file that defines multiple configuration sections and two menu configurations.

```

[defaultboot]
defaultmenu=menu1

# First boot configuration (DASD)
[boot1]
ramdisk=/boot/initrd
parameters='root=/dev/ram0 ro'
image=/boot/image-1
target=/boot

# Second boot configuration (SCSI)
[boot2]
image=/boot/mnt/image-2
ramdisk=/boot/mnt/initrd,0x900000
parmfile=/boot/mnt/parmf-2
target=/boot

# Third boot configuration (DASD)
[boot3]
image=/boot/mnt/image-3
ramdisk=/boot/mnt/initrd
parmfile=/boot/mnt/parmf-3
target=/boot

# Configuration for dumping to tape
[dumptape]
dumppto=/dev/rtibm0

# Configuration for dumping to DASD
[dumpdasd]
dumppto=/dev/dasdc1

# Configuration for multi-volume dumping to DASD
[multi_volume_dump]
mvdump=sample_dump_conf

# Configuration for dumping to SCSI disk
[dumpscsi]
dumppto=/dev/mapper/36005076303ffd40100000000000020c0-part1

# Menu containing the SCSI boot and SCSI dump configurations
:menu1
1=dumpscsi
2=boot2
target=/boot
default=2

# Menu containing two DASD boot configurations
:menu2
1=boot1
2=boot3
target=/boot
default=1
prompt=1
timeout=30

```

Figure 22. Sample `/etc/zipl.conf` file

The following commands assume that the configuration file of the sample is the default configuration file.

- Call **zipl** to use the default configuration file settings:

```
# zipl
```

**Result:** **zipl** reads the default option from the `[defaultboot]` section and selects the `:menu1` section. It then installs a menu configuration with a boot configuration and a SCSI dump configuration.

- Call **zipl** to install a menu configuration (see also [“Installing a menu configuration” on page 67](#)):

```
# zipl -m menu2
```

**Result: zipl** selects the :menu2 section. It then installs a menu configuration with two DASD boot configurations. “[Example for a DASD menu configuration on z/VM](#)” on page 89 and “[Example for a DASD menu configuration \(LPAR\)](#)” on page 82 illustrate what this menu looks like when it is displayed.

- Call **zipl** to install a boot loader for boot configuration [boot2]:

```
# zipl boot2
```

**Result: zipl** selects the [boot2] section. It then installs a boot loader that loads copies of /boot/mnt/image-2, /boot/mnt/initrd, and /boot/mnt/parmf-2.

- Call **zipl** to prepare a tape that can be IPLed for a tape dump:

```
# zipl dumptape
```

**Result: zipl** selects the [dumptape] section and prepares a dump tape on /dev/rtibm0.

- Call **zipl** to prepare a DASD dump device:

```
# zipl dumpdasd -n
```

**Result: zipl** selects the [dumpdasd] section and prepares the dump device /dev/dasdc1. Confirmation prompts that require an operator response are suppressed.

- Call **zipl** to prepare a SCSI dump device:

```
# mount /dev/sda1 /boot
# mount /dev/sda2 /dumps
# mkdir /dumps/mydumps
# zipl dumpscsi
# umount /dev/sda1
# umount /dev/sda2
```

**Result: zipl** selects the [dumpscsi] section and prepares the dump device /dev/sda1. The associated dump file is created uncompressed in directory /mydumps on the dump partition. If space is required, the lowest-numbered dump file in the directory is deleted.





## Chapter 7. Booting Linux

The options and requirements you have for booting Linux depend on your platform, LPAR, z/VM, or KVM, and on your boot medium.

For details about defining a Linux virtual machine, see *z/VM: Getting Started with Linux on System z*®, SC24-6287, the chapter about creating your first Linux virtual machine.

For details about setting up a KVM virtual server, see *KVM Virtual Server Management*, SC34-2752.

### IPL and booting

On IBM Z, you usually start booting Linux by performing an Initial Program Load (IPL) from an IPL device.

A traditional IPL device contains all data that is required to start a Z operating system or a stand-alone program. For Linux this includes a kernel image, possibly an initial RAM disk and kernel parameters, and a boot loader.

For SCSI IPL devices and generally for IPL of a KVM guest, the boot loader code is supplied by the hypervisor and not required on the IPL device.

Figure 23 on page 77 summarizes the main steps of the boot process for a traditional IPL device.

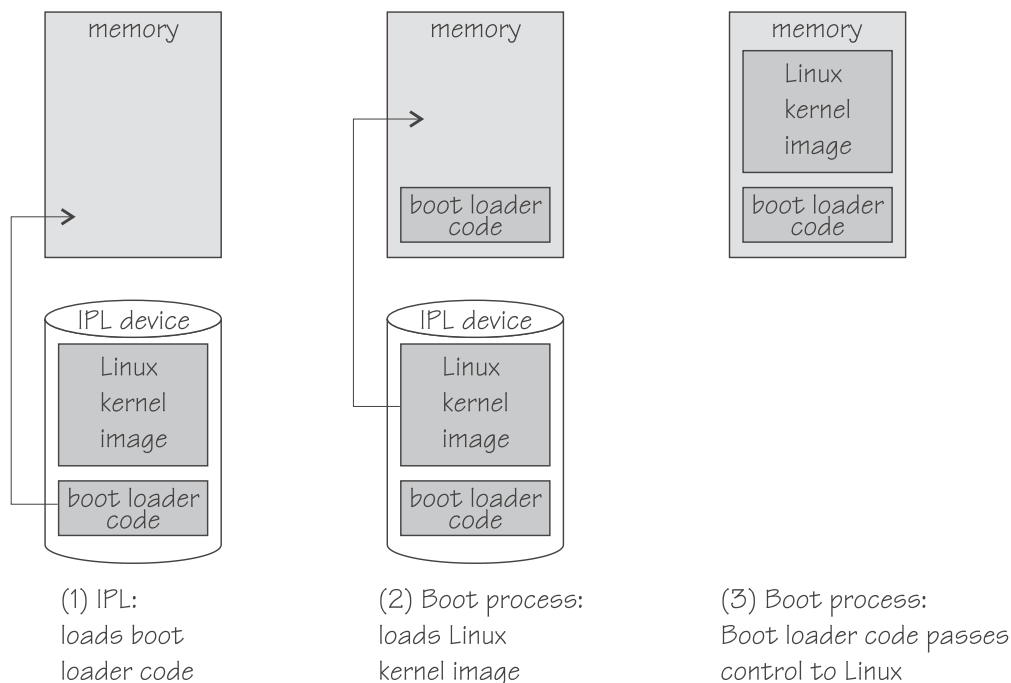


Figure 23. IPL and boot process

Use the **zipl** tool to prepare DASD, SCSI, and tape devices as IPL devices for booting Linux or for dumping. For more information about **zipl**, see [Chapter 6, “Initial program loader for IBM Z - zipl,” on page 55](#).

#### LPAR

If your Linux instance is to run in an LPAR, you can initiate the IPL from the service element (SE) through a load action against an IPL device. Alternatively, you can initiate an IPL by copying the Linux kernel to the mainframe memory (see [“Loading Linux from removable media or from an FTP server” on page 85](#)).

You can use secure boot if you IPL from a SCSI device. For more information, see [“Secure boot” on page 84](#).

## KVM

For Linux on Z as a KVM guest, an IPL is initiated by starting a virtual server on the KVM hypervisor.

The hypervisor first assigns resources to the virtual hardware, then it loads `s390-ccw.img` into the memory of the new virtual hardware. For KVM guests, `s390-ccw.img` takes the role of the boot loader. If needed, `s390-ccw.img` loads `s390-netboot.img` to retrieve boot data over the network.

## LPAR and z/VM

An IPL can also start a dump process. See *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 for more information about dumps.

You can find the newest version of this book at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

Use the **zipl** tool to prepare DASD, SCSI, and tape devices as IPL devices for booting Linux or for dumping. For more information about **zipl**, see [Chapter 6, “Initial program loader for IBM Z - zipl,” on page 55](#).

## Control point and boot medium

The control point from where you can start the IPL depends on your hypervisor environment.

### LPAR

For Linux in LPAR mode, the control point is the mainframe's Support Element (SE) or an attached Hardware Management Console (HMC).

### z/VM

For Linux on z/VM, the control point is the control program (CP) of the hosting z/VM system.

### KVM

For Linux on KVM, the control point is the KVM host.

The media that can be used as boot devices also depend on where Linux is to run. [Table 10 on page 78](#) provides an overview of the possibilities:

Table 10. Boot media

	DASD	tape	SCSI	CD-ROM/DVD/FTP	z/VM reader	virtio block device
LPAR	✓	✓	✓	✓		
z/VM guest	✓	✓	✓		✓	
KVM guest						✓

DASDs, tapes on channel-attached tape devices, and SCSI device that are attached through an FCP channel can be used for both LPAR and z/VM guest virtual machines. A SCSI device can be a disk or an FC-attached CD-ROM or DVD drive. The z/VM reader is available only in a z/VM environment.

If your Linux runs in LPAR mode, you can also boot from a CD-ROM drive on the SE or HMC, or you can obtain the boot data from a remote FTP server.

The virtio block devices for Linux on KVM can be backed on the KVM host by an ISO image in the file system or by any IPL device that has been prepared with **zipl**.

## Menu configurations

---

In Red Hat Enterprise Linux 8.1, you can use **zipl** to prepare a DASD or SCSI boot disk with a menu configuration.

A boot device with a menu configuration can hold the code for multiple boot configurations. For SCSI disks, the menu can also include one or more SCSI system dumpers.

Each boot and dump configuration in a menu is associated with a configuration number. At IPL time, you can specify a configuration number to select the configuration to be used.

For menu configurations on DASD, you can display a menu with the configuration numbers (see [“Example for a DASD menu configuration on z/VM”](#) on page 89 and [“Example for a DASD menu configuration \(LPAR\)”](#) on page 82). For menu configurations on SCSI disks, you need to know the configuration numbers without being able to display the menus.

See [“Menu configurations”](#) on page 72 for information about defining menu configurations.

## Boot data

---

To boot Linux, you generally need a kernel image, boot loader code, kernel parameters, and an initial RAM disk image.

For sequential I/O boot devices, z/VM reader and tape, the order in which this data is provided is significant. For random access devices, there is no required order.

On Red Hat Enterprise Linux 8.1, kernel images are installed into the `/boot` directory and are named `vmlinux-<version>.s390x`. For information about where to find the images and how to start an installation, see the Red Hat documentation website [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

### Boot loader code

Red Hat Enterprise Linux 8.1 kernel images are compiled to contain boot loader code for IPL from z/VM reader devices.

If you want to boot a kernel image from a device that does not correspond to the included boot loader code, you can provide alternate boot loader code separate from the kernel image.

Use **zipl** to prepare boot devices with separate DASD, SCSI, or tape boot loader code. You can then boot from DASD, SCSI, or tape regardless of the boot loader code in the kernel image.

### Kernel parameters

The kernel parameters are in form of an ASCII text string of up to 895 characters. If the boot device is tape or the z/VM reader, the string can also be encoded in EBCDIC.

Individual kernel parameters are single keywords or keyword/value pairs of the form `keyword=<value>` with no blank. Blanks are used to separate consecutive parameters.

If you use the **zipl** command to prepare your boot device, you can provide kernel parameters on the command line, in a parameter file, and in a **zipl** configuration file.

See Chapter 4, [“Kernel and module parameters,”](#) on page 23, Chapter 6, [“Initial program loader for IBM Z - zipl,”](#) on page 55, or the **zipl** and `zipl.conf` man pages for more details.

### Initial RAM disk image

An initial RAM disk holds files, programs, or modules that are not included in the kernel image but are required for booting.

Red Hat Enterprise Linux 8.1 provides a ramdisk in `/boot` and named `initramfs-<kernel version>.s390x.img`. When a ramdisk is installed or modified, you must call **zipl** to update the boot record.

## Rebuilding the initial RAM disk image

Configuration changes might apply to components that are required in the boot process before the root file system is mounted. For Red Hat Enterprise Linux, such components and their configuration are provided through an initial RAM disk.

### Procedure

Perform these steps to make configuration changes for components in the `initrd` take effect:

1. Issue **dracut -f** to update the initial RAM disk of your target kernel.
2. Issue **zipl** to rewrite the `zipl` boot record.

## Booting Linux in LPAR mode

---

You can boot Linux in LPAR mode from a Hardware Management Console (HMC) or Support Element (SE).

### About this task

The following description refers to an HMC, but the same steps also apply to an SE.

## Booting from DASD

Use the SE or HMC to boot Linux in LPAR mode from a DASD boot device.

### Before you begin

You need a boot device that is prepared with **zipl** (see [“Preparing a boot device” on page 58](#)).

### Procedure

Perform these steps to boot from a DASD boot device:

1. In the navigation pane of the HMC, expand **Systems Management** and **Servers** and select the mainframe system you want to work with. A table of LPARs is displayed on the **Images** tab in the content area.
2. Select the LPAR where you want to boot Linux.
3. In the **Tasks** area, expand **Recovery** and click **Load** (see [Figure 24 on page 81](#)).

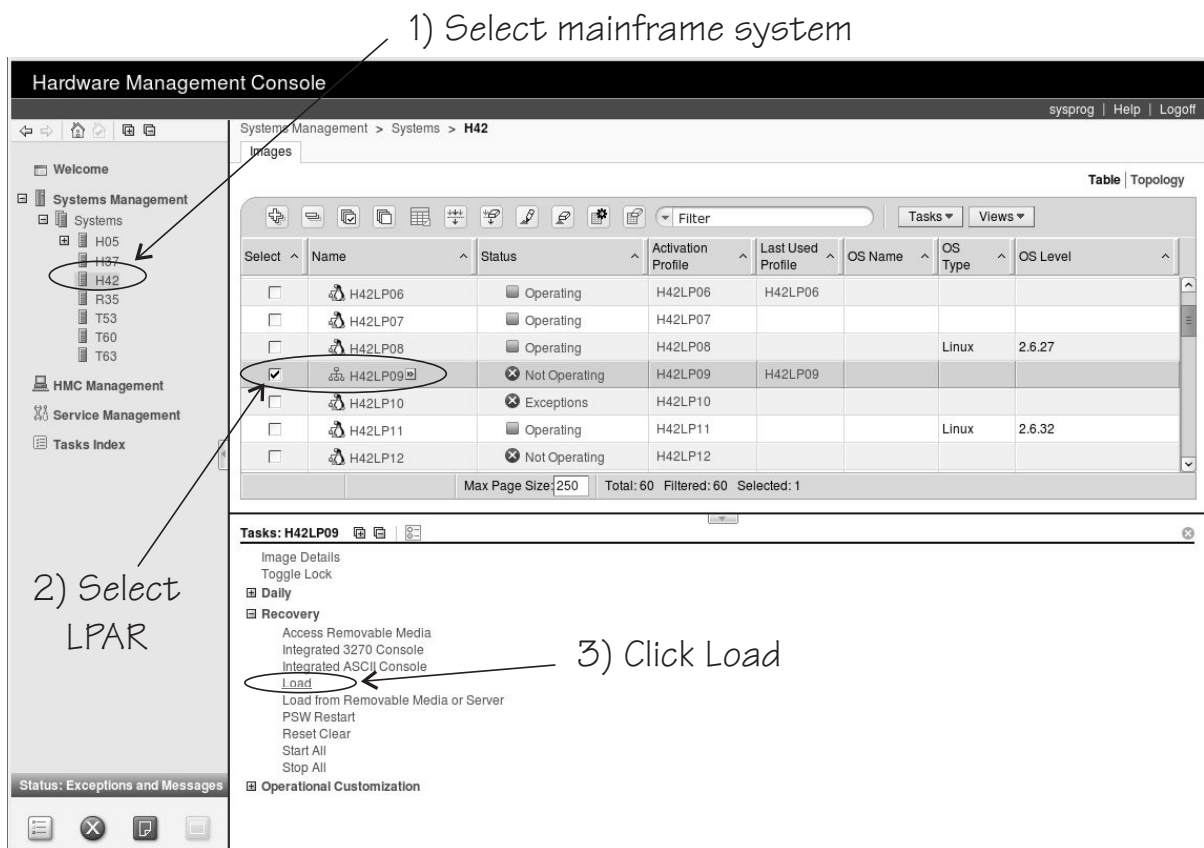


Figure 24. Load task on the HMC

4. Select the load type **Normal** (see Figure 25 on page 81).

Load - H42:H42LP05

CPC: H42:H42LP05

Image: H42:H42LP05

Load type: ☒ Normal ☐ Clear ☐ SCSI ☐ SCSI dump

☐ Store status

Load address: \*E711

Load parameter:

Time-out value: 60 60 to 600 seconds

Worldwide port name: 0

Logical unit number: 0

Boot program selector: 0

Boot record logical block address: 0

Operating system specific load parameters:

OK Reset Cancel Help

Figure 25. Load panel for booting from DASD

5. Enter the device number of the DASD boot device in the **Load address** field.
6. If the boot configuration is part of a **zip1** created menu configuration, enter the configuration number that identifies your DASD boot configuration within the menu in the **Load parameter** field.

Configuration number 0 specifies the default configuration. Depending on the menu configuration, omitting this option might display the menu or select the default configuration. Specifying "prompt" instead of a configuration number forces the menu to be displayed.

When the menu is displayed, you can specify additional kernel parameters (see [“Example for a DASD menu configuration \(LPAR\)”](#) on page 82). These additional kernel parameters are appended to the parameters you might have provided in a parameter file. The combined parameter string must not exceed 895 bytes.

See [“Menu configurations”](#) on page 72 for more details about menu configurations.

7. Click **OK** to start the boot process.

## Results

Check the output on the preferred console (see [“Console kernel parameter syntax”](#) on page 40) to monitor the boot progress.

### Example for a DASD menu configuration (LPAR)

This example illustrates how menu2 in the sample configuration file in [Figure 22 on page 74](#) is displayed on the HMC or SE:

```
zIPL interactive boot menu
```

```
0. default (boot1)
```

```
1. boot1  
2. boot3
```

```
Please choose (default will boot in 30 seconds):
```

You choose a configuration by specifying the configuration number. For example, to boot configuration boot3, issue:

```
# 2
```

You can also specify additional kernel parameters by appending them to this command. For example:

```
# 2 maxcpus=1
```

## Booting from SCSI

Use the SE or HMC to boot Linux in LPAR from a SCSI boot device.

### Before you begin

You need a boot device that is prepared with **zip1** (see [“Preparing a boot device”](#) on page 58).

### Procedure

Perform these steps to boot from a SCSI boot device:

1. In the navigation pane of the HMC, expand **Systems Management** and **Servers** and select the mainframe system you want to work with. A table of LPARs is displayed on the **Images** tab in the content area.
2. Select the LPAR where you want to boot Linux.
3. In the **Tasks** area, expand **Recovery** and click **Load** (see [Figure 26 on page 83](#)).

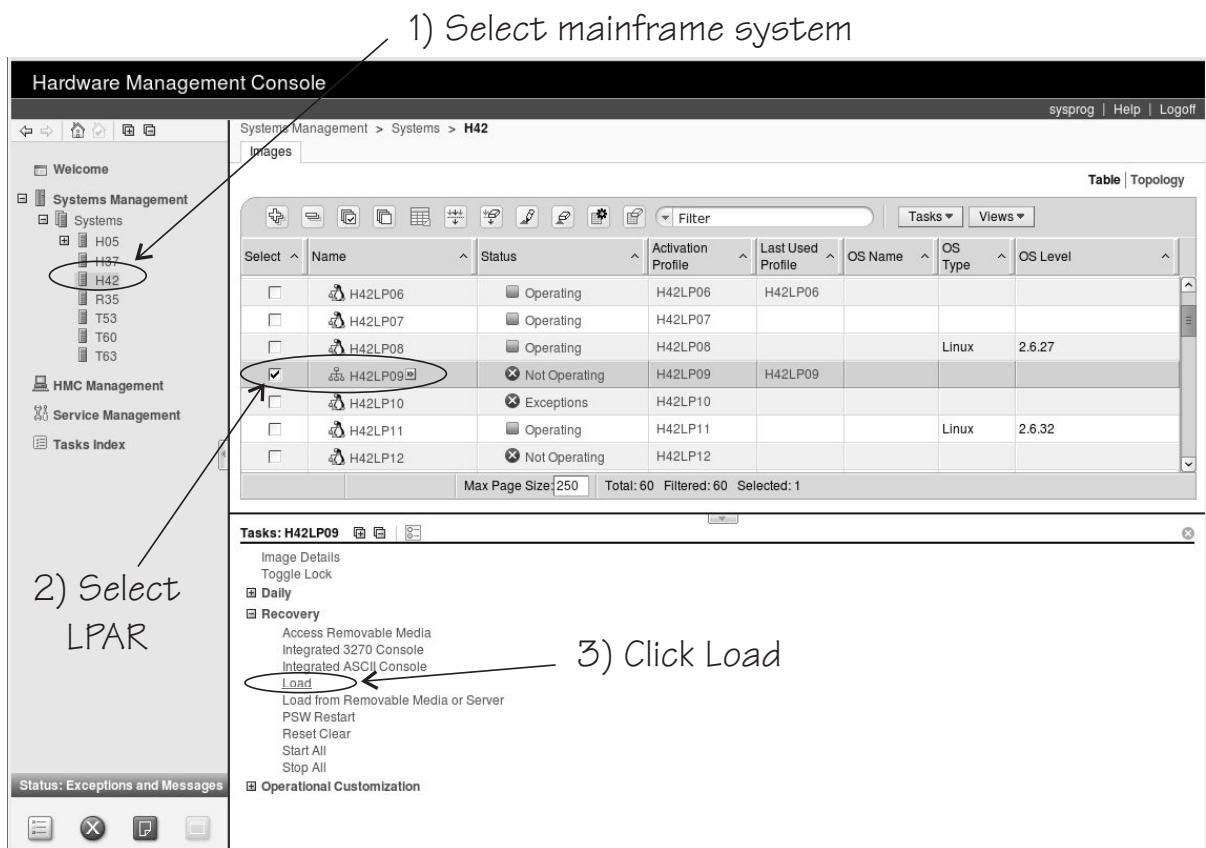


Figure 26. Load task on the HMC

4. A SCSI device can be a disk or an FC-attached CD-ROM or DVD drive. Select load type **SCSI** (see Figure 27 on page 83).

**Load - H42:H42LP05**

CPC: H42:H42LP05  
 Image: H42:H42LP05  
 Load type: ☐ Normal ☐ Clear ☒ SCSI ☐ SCSI dump  
☐ Store status  
 Load address: \* 3C00  
 Load parameter:   
 Time-out value: 60   60 to 600 seconds  
 Worldwide port name: 500507630300c562  
 Logical unit number: 4010403c00000000  
 Boot program selector: 0  
 Boot record logical block address: 0  
 Operating system specific load parameters: noresume

OK Reset Cancel Help

Figure 27. Load panel with SCSI feature enabled - for booting from a SCSI device

5. Enter the device number of the FCP channel through which the SCSI device is accessed in the **Load address** field.
6. Enter the WWPN of the SCSI device in the **World wide port name** field.
7. Enter the LUN of the SCSI device in the **Logical unit number** field.



8. If the boot configuration is part of a **zipl** created menu configuration, enter the configuration number that identifies your SCSI boot configuration within the menu in the **Boot program selector** field.

Configuration number 0 specifies the default configuration. For example, an installation from DVD is typically done with boot program selector 2.

See [“Menu configurations” on page 72](#) for more details about menu configurations.

9. Type kernel parameters in the **Operating system specific load parameters** field.

These parameters are concatenated to the end of the existing kernel parameters that are used by your boot configuration when booting Linux.

Use ASCII characters only. If you enter characters other than ASCII characters, the boot process ignores the data in the **Operating system specific load parameters** field.

10. Accept the defaults for the remaining fields.

11. Click **OK** to start the boot process.

## Results

Check the output on the preferred console (see [“Console kernel parameter syntax” on page 40](#)) to monitor the boot progress.

## Secure boot

As of z15, the operating system loader verifies that components that are loaded from SCSI devices come from a trusted source. You can cancel loading for components that cannot be verified.

With secure boot enabled, an IPL fails if a component containing code is not signed or cannot be verified.

For details about how to prepare a device for secure boot, see [“zipl modes and syntax overview” on page 56](#).

To check if a Linux instance was IPLed with secure boot see [“Displaying current IPL parameters” on page 93](#).

Kernel interfaces are restricted in a kernel that is prepared for secure boot.

## Booting from tape

You can boot Linux in LPAR mode from tape.

### Before you begin

You need a boot device that is prepared with **zipl** (see [“Preparing a boot device” on page 58](#)).

### Procedure

Perform these steps to boot from a tape boot device:

1. In the navigation pane of the HMC, expand **Systems Management** and **Servers** and select the mainframe system you want to work with. A table of LPARs is displayed on the **Images** tab in the content area.
2. Select the LPAR where you want to boot Linux.
3. In the **Tasks** area, expand **Recovery** and click **Load** (see [Figure 28 on page 85](#)).



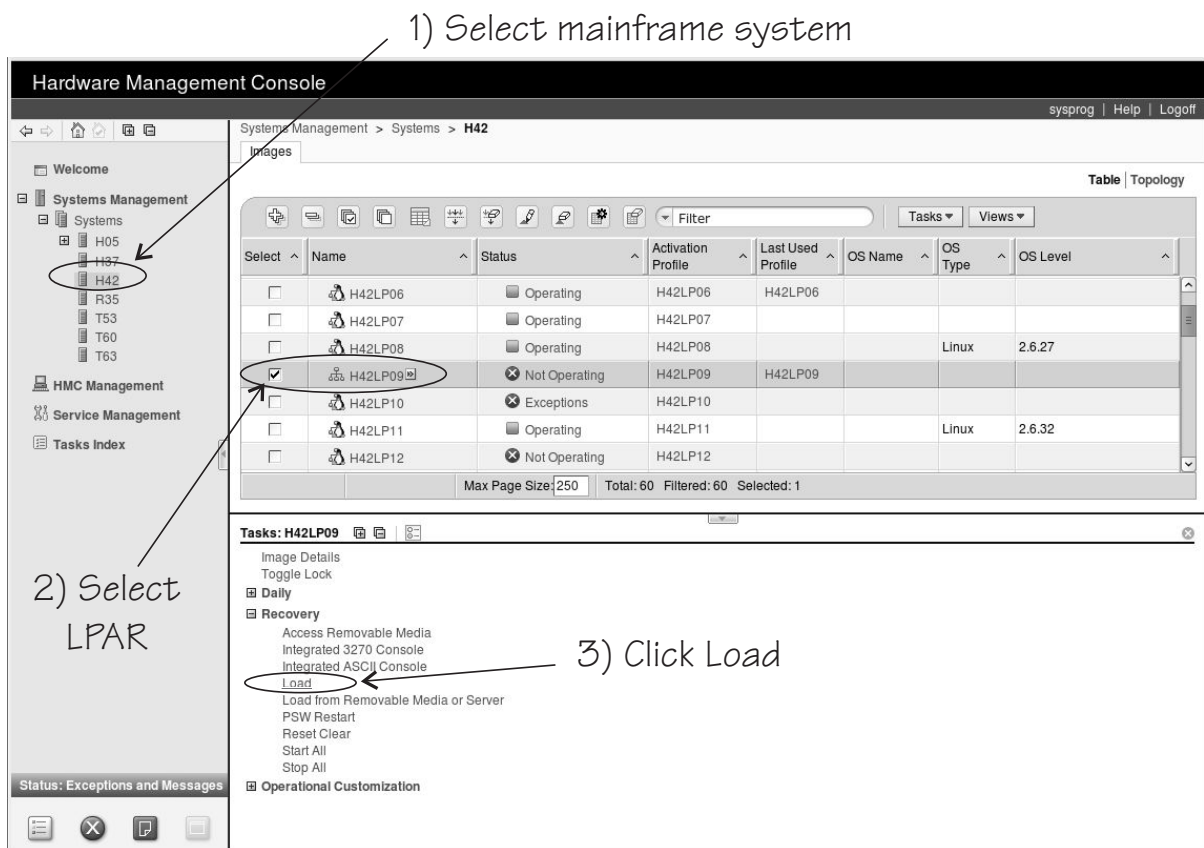


Figure 28. Load task on the HMC

4. Select load type **Normal** (see Figure 25 on page 81).
5. Enter the device number of the tape boot device in the **Load address** field.
6. Click **OK** to start the boot process.

## Results

Check the output on the preferred console (see “Console kernel parameter syntax” on page 40) to monitor the boot progress.

## Loading Linux from removable media or from an FTP server

Instead of a boot loader, you can use SE functions to copy the Linux kernel image to your LPAR memory. After the Linux kernel is loaded, Linux is started using restart PSW.

### Before you begin

You need installation data that includes a special file with installation information (with extension "ins"). This file can be in different locations:

- On a disk that is inserted in the CD-ROM or DVD drive of the system where the HMC runs
- In the file system of an FTP server that you can access through FTP from your HMC system

The `.ins` file contains a mapping of the location of installation data on the disk or FTP server and the memory locations where the data is to be copied.

For Red Hat Enterprise Linux 8.1, this file is called `generic.ins` and in the root directory of the file system on the DVD.

### Procedure

Perform these steps:

1. In the navigation pane of the HMC expand **Systems Management** and **Servers** and select the mainframe system that you want to work with. A table of LPARs is displayed on the **Images** tab in the content area.
2. Select the LPAR where you want to boot Linux.
3. In the **Tasks** area, expand **Recovery** and click **Load from Removable Media or Server** (see [Figure 29](#) on page 86).

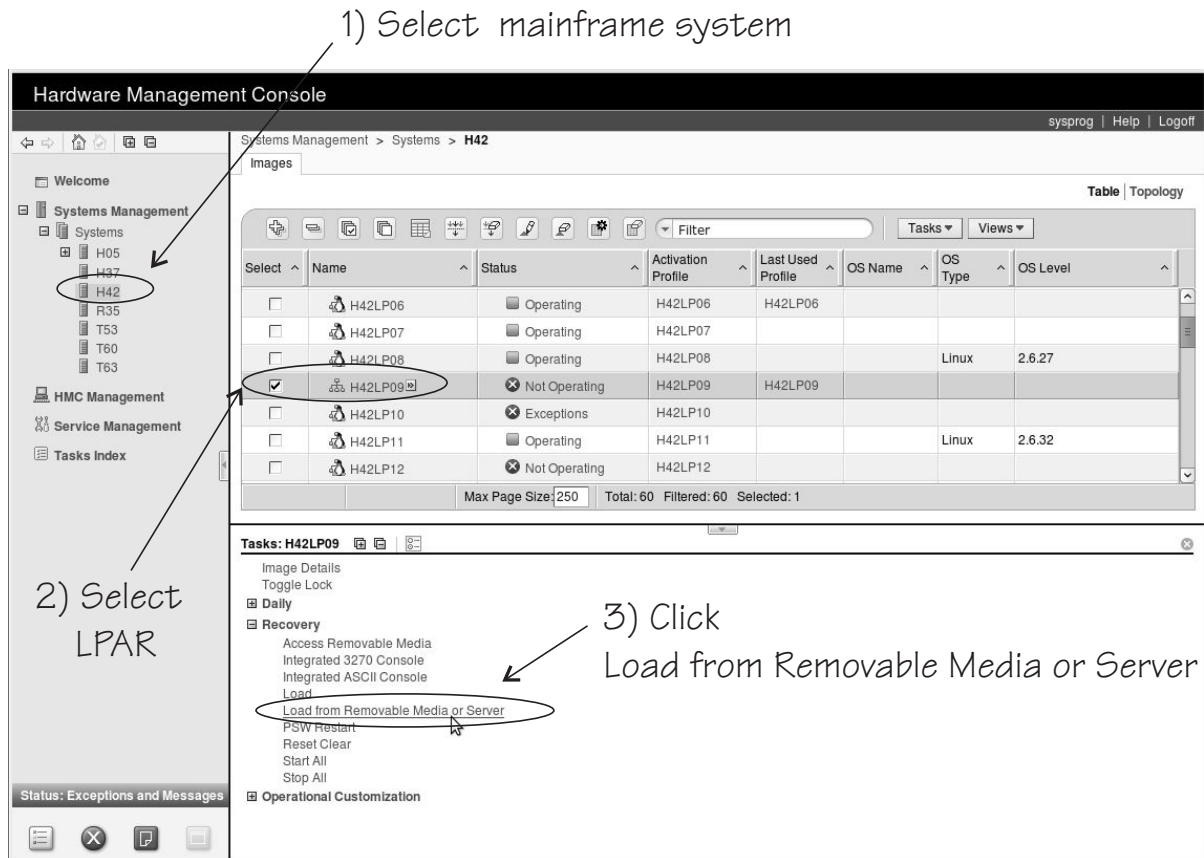


Figure 29. Load from Removable Media or Server task on the HMC

4. Specify the source of the code to be loaded.
  - For loading from a CD-ROM drive:
    - a. Select **Hardware Management Console CD-ROM/DVD** (see [Figure 30](#) on page 87).

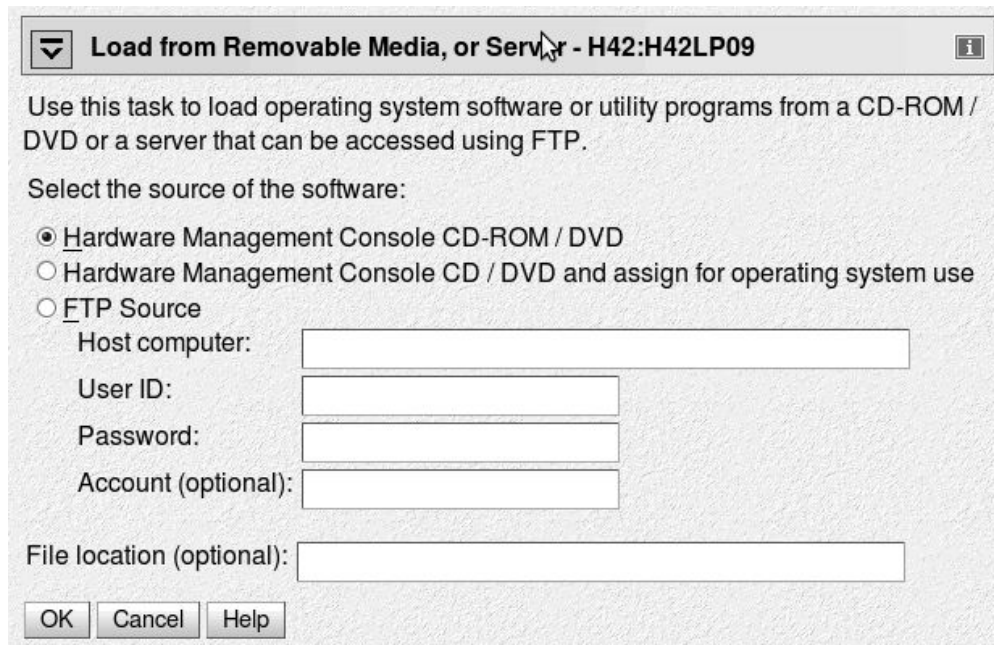


Figure 30. Load from Removable Media or Server panel

- b. Leave the **File location** field blank.
- For loading from an FTP server:
  - a. Select **FTP Source**.
  - b. Enter the IP address or host name of the FTP server with the installation code in the **Host computer** entry field.
  - c. Enter your user ID for the FTP server in the **User ID** entry field.
  - d. Enter your password for the FTP server in the **Password** entry field.
  - e. If required by your FTP server, enter your account information in the **Account** entry field.
  - f. Enter the path to the directory with the `generic.ins` in the file location entry field. You can leave this field blank if the file is in the FTP server's root directory.
5. Click **Continue** to display the **Select Software to Install** panel (Figure 31 on page 87).

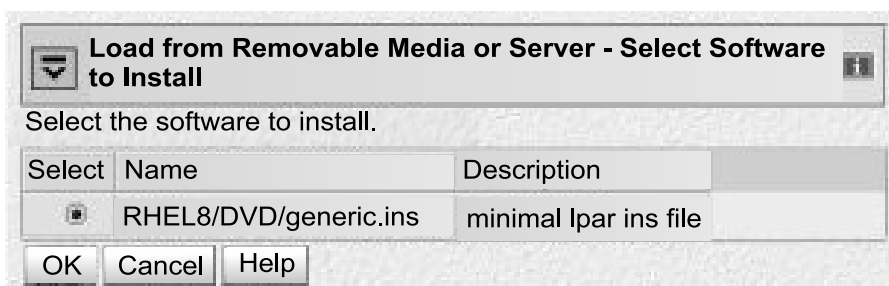


Figure 31. Select Software to Install panel

6. Select the `generic.ins` file.
7. Click **OK** to start loading Linux.

## Results

The kernel has started and the Red Hat Enterprise Linux 8.1 boot process continues.

## Booting Linux in a z/VM guest virtual machine

---

You boot Linux in a z/VM guest virtual machine by issuing CP commands from a CMS or CP session.

For more general information about z/VM guest environments for Linux, see *z/VM: Getting Started with Linux on System z*, SC24-6287.

### Booting from a tape device

Boot Linux by issuing the IPL command with a tape boot device. The boot data on the tape must be arranged in a specific order.

#### Before you begin

You need a tape that is prepared as a boot device. A tape boot device must contain the following items in the specified order:

1. Tape boot loader code

The tape boot loader code is included in the s390utils RPM.

2. Tape mark
3. Kernel image
4. Tape mark
5. Kernel parameters (optional)
6. Tape mark
7. Initial RAM disk (optional)
8. Tape mark
9. Tape mark

All tape marks are required even if an optional item is omitted. For example, if you do not provide an initial RAM disk image, the end of the boot information is marked with three consecutive tape marks. **zipl** prepared tapes conform to this layout. See [“Preparing a boot device” on page 58](#) for information about preparing a tape with **zipl**.

#### Procedure

Perform these steps to start the boot process:

1. Establish a CMS or CP session with the z/VM guest virtual machine where you want to boot Linux.
2. Ensure that the boot device is accessible to your z/VM guest virtual machine.
3. Ensure that the correct tape is inserted and rewound.
4. Issue a command of this form:

```
#cp i <devno> clear parm <kernel_parameters>
```

where

**<devno>**

is the device number of the boot device as seen by the guest virtual machine.

**parm <kernel\_parameters>**

is an optional 64-byte string of kernel parameters to be concatenated to the end of the existing kernel parameters that are used by your boot configuration (see [“Preparing a boot device” on page 58](#) for information about the boot configuration).

See also [“Specifying kernel parameters when booting Linux” on page 25](#).

## Booting from a DASD

Boot Linux by issuing the IPL command with a DASD boot device. You can specify additional parameters with the IPL command.

### Before you begin

You need a DASD boot device that is prepared with **zipl** (see [“Preparing a boot device”](#) on page 58).

### Procedure

Perform these steps to start the boot process:

1. Establish a CMS or CP session with the z/VM guest virtual machine where you want to boot Linux.
2. Ensure that the boot device is accessible to your z/VM guest virtual machine.
3. Issue a command of this form:

```
#cp i <devno> clear loadparm <n> parm <kernel_parameters>
```

where:

#### **<devno>**

specifies the device number of the boot device as seen by the guest.

#### **loadparm <n>**

is applicable to menu configurations only. Omit this parameter if you are not working with a menu configuration.

Configuration number 0 specifies the default configuration. Depending on the menu configuration, omitting this option might display the menu or select the default configuration. Specifying "prompt" instead of a configuration number forces the menu to be displayed.

When the menu is displayed, you can specify additional kernel parameters (see [“Example for a DASD menu configuration on z/VM”](#) on page 89). These additional kernel parameters are appended to the parameters you might have provided in a parameter file. The combined parameter string must not exceed 895 bytes.

See [“Menu configurations”](#) on page 72 for more details about menu configurations.

#### **parm <kernel\_parameters>**

is an optional 64-byte string of kernel parameters to be concatenated to the end of the existing kernel parameters that are used by your boot configuration (see [“Preparing a boot device”](#) on page 58 for information about the boot configuration).

See also [“Specifying kernel parameters when booting Linux”](#) on page 25.

### Example for a DASD menu configuration on z/VM

Use the VI VMSG z/VM CP command to choose a boot configuration from a menu configuration.

This example illustrates how menu2 in the sample configuration file in [Figure 22 on page 74](#) is displayed on the z/VM guest virtual machine console:

```
00: zIPL interactive boot menu
00:
00: 0. default (boot1)
00:
00: 1. boot1
00: 2. boot3
00:
00: Note: VM users please use '#cp vi vmsg <number> <kernel-parameters>'
00:
00: Please choose (default will boot in 30 seconds): #cp vi vmsg 2
```

You choose a configuration by specifying the configuration number. For example, to boot configuration boot3 specify

```
#cp vi vmsg 2
```

You can also specify additional kernel parameters by appending them to the configuration number. For example, you can specify:

```
#cp vi vmsg 2 maxcpus=1
```

These parameters are concatenated to the end of the existing kernel parameters that are used by your boot configuration when booting Linux.

## Booting from a SCSI device

Boot Linux by issuing the IPL command with an FCP channel as the IPL device. You must specify the target port and LUN for the boot device in advance by setting the z/VM CP LOADDEV parameter.

### Before you begin

You need a SCSI boot device that is prepared with **zipl** (see [“Preparing a boot device”](#) on page 58). A SCSI device can be a disk or an FC-attached CD-ROM or DVD drive.

### Procedure

Perform these steps to start the boot process:

1. Establish a CMS or CP session with the z/VM guest virtual machine where you want to boot Linux.
2. Ensure that the FCP channel that provides access to the SCSI boot disk is accessible to your z/VM guest virtual machine.
3. Specify the target port and LUN of the SCSI boot disk.

Enter a command of this form:

```
#cp set loaddev portname <wwpn> lun <lun>
```

where:

#### <wwpn>

specifies the world wide port name (WWPN) of the target port in hexadecimal format. A blank separates the first eight digits from the final eight digits.

#### <lun>

specifies the LUN of the SCSI boot disk in hexadecimal format. A blank separating the first eight digits from the final eight digits.

**Example:** To specify a WWPN 0x5005076300c20b8e and a LUN 0x5241000000000000:

```
#cp set loaddev portname 50050763 00c20b8e lun 52410000 00000000
```

4. Optional for menu configurations: Specify the boot configuration (boot program in z/VM terminology) to be used. Enter a command of this form:

```
#cp set loaddev bootprog <n>
```

where <n> specifies the configuration number of the boot configuration. Omitting the bootprog parameter or specifying the value 0 selects the default configuration. For more information about menu configurations, see [“Menu configurations”](#) on page 72.

**Example:** To select a configuration with configuration number 2 from a menu configuration:

```
#cp set loaddev bootprog 2
```

5. Optional: Specify kernel parameters.

```
#cp set loaddev scpdata <APPEND|NEW> '<kernel_parameters>'
```

where:

**<kernel\_parameters>**

specifies a set of kernel parameters to be stored as system control program data (SCPDATA). When booting Linux, these kernel parameters are concatenated to the end of the existing kernel parameters that are used by your boot configuration.

<kernel\_parameters> must contain ASCII characters only. If characters other than ASCII characters are present, the boot process ignores the SCPDATA.

<kernel\_parameters> as entered from a CMS or CP session is interpreted as lowercase on Linux. If you require uppercase characters in the kernel parameters, run the SET LOADDEV command from a REXX script instead. In the REXX script, use the "address command" statement. See *z/VM: REXX/VM Reference*, SC24-6314 and *z/VM: REXX/VM User's Guide*, SC24-6315 for details.

**Optional: APPEND**

appends kernel parameters to existing SCPDATA. This is the default.

**Optional: NEW**

replaces existing SCPDATA.

**Examples:**

- To append kernel parameter `noresume` to the current SCPDATA:

```
#cp set loaddev scpdata 'noresume'
```

- To replace the current SCPDATA with the kernel parameters `resume=/dev/sda2` and `no_console_suspend`:

```
#cp set loaddev scpdata NEW 'resume=/dev/sda2 no_console_suspend'
```

For a subsequent IPL command, these kernel parameters are concatenated to the end of the existing kernel parameters in your boot configuration.

6. Start the IPL and boot process by entering a command of this form:

```
#cp i <devno>
```

where <devno> is the device number of the FCP channel that provides access to the SCSI boot disk.

**Tip**

You can specify the target port and LUN of the SCSI boot disk, a boot configuration, and SCPDATA all with a single SET LOADDEV command. See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for more information about the SET LOADDEV command.

## Booting from the z/VM reader

Boot Linux by issuing the IPL command with the z/VM reader as the IPL device. You first must transfer the boot data to the reader.

**Before you begin**

You need the following files, all in record format `fixed 80`:

- Linux kernel image with built-in z/VM reader boot loader code. This is the case for the default Red Hat Enterprise Linux 8.1 kernel.
- Kernel parameters (optional)
- Initial RAM disk image (optional)

## About this task

This information is a summary of how to boot Linux from a z/VM reader. For more details, refer to Redpaper *Building Linux Systems under IBM VM*, REDP-0120.

## Procedure

Proceed like this to boot Linux from a z/VM reader:

1. Establish a CMS session with the guest where you want to boot Linux.
2. Transfer the kernel image, kernel parameters, and the initial RAM disk image to your guest.

You can obtain the files from a shared minidisk or use:

- The z/VM sendfile facility.
- An FTP file transfer in binary mode.

Files that are sent to your reader contain a file header that you must remove before you can use them for booting. Receive files that you obtain through your z/VM reader to a minidisk.

3. Set up the reader as a boot device.
  - a) Ensure that your reader is empty.
  - b) Direct the output of the punch device to the reader. Issue:

```
spool pun * rdr
```

- c) Use the CMS PUNCH command to transfer each of the required files to the reader.  
Be sure to use the "no header" option to omit the file headers.

First transfer the kernel image.

Second transfer the kernel parameters.

Third transfer the initial RAM disk image, if present.

For each file, issue a command of this form:

```
pun <file_name> <file_type> <file_mode> (noh
```

- d) Optional: Ensure that the contents of the reader remain fixed.

```
change rdr all keep nohold
```

If you omit this step, all files are deleted from the reader during the IPL that follows.

4. Issue the IPL command:

```
ipl 000c clear parm <kernel_parameters>
```

where:

### **0x000c**

is the device number of the reader.

### **parm <kernel\_parameters>**

is an optional 64-byte string of kernel parameters to be concatenated to the end of the existing kernel parameters that are used by your boot configuration (see [“Preparing a boot device”](#) on page 58 for information about the boot configuration).

See also [“Specifying kernel parameters when booting Linux”](#) on page 25.

## Booting Linux on KVM

You boot Linux as a KVM guest on Z from the KVM host, by starting a KVM virtual server.



## About this task

For information about managing virtual servers, see *KVM Virtual Server Management*, SC34-2752.

## Displaying current IPL parameters

To display the IPL parameters, use the **lsreipl** command with the **-i** option. Alternatively, a sysfs interface is available.

For more information about the **lsreipl** command, see [“lsreipl - List IPL and re-IPL settings”](#) on page 593. In sysfs, information about IPL parameters is available in subdirectories of `/sys/firmware/ipl`.

```
/sys/firmware/ipl/ipl_type
```

The `/sys/firmware/ipl/ipl_type` file contains the device type from which the kernel was booted. The following values are possible:

### ccw

The IPL device is a CCW device, for example, a DASD, the z/VM reader, or a virtio block device.

### fcp

The IPL device is an FCP device.

### unknown

The IPL device is not known.

Depending on the IPL type, there might be more files in `/sys/firmware/ipl/`.

If the device is a CCW device, the additional files `device` and `loadparm` are present.

### device

Contains the bus ID of the CCW device that is used for IPL, for example:

```
# cat /sys/firmware/ipl/device
0.0.1234
```

### loadparm

Contains up to 8 characters for the loadparm that is used for selecting from a zipl boot menu during IPL of a CCW device, for example:

```
# cat /sys/firmware/ipl/loadparm
1
```

### parm

Contains additional kernel parameters that are specified with the PARM parameter when booting with the z/VM CP IPL command, for example:

```
# cat /sys/firmware/ipl/parm
noresume
```

See also [“Specifying kernel parameters when booting Linux”](#) on page 25.

A leading equal sign (=) indicates that the existing kernel parameters used by the boot configuration were ignored and the kernel parameters of the parm attribute were the only kernel parameters used for booting Linux. See [“Replacing all kernel parameters in a boot configuration”](#) on page 26.

If the device is FCP, a number of additional files are present (also see [Chapter 12, “SCSI-over-Fibre Channel device driver,”](#) on page 151 for details):

### secure

Read the sysfs attribute

`/sys/firmware/ipl/secure` to check whether the Linux instance was IPLed with secure boot.

Issue the following command:

```
# cat /sys/firmware/ipl/secure
1
```

If the value is 1, Linux was IPLed with secure boot.

### **has\_secure**

The sysfs attribute

/sys/firmware/ipl/has\_secure is read by zipl to detect whether the boot image is capable of secure boot.

If the attribute value is 1, the boot image is capable of secure boot.

### **device**

Contains the bus ID of the FCP device that is used for IPL, for example:

```
# cat /sys/firmware/ipl/device
0.0.50dc
```

### **wwpn**

Contains the WWPN used for IPL, for example:

```
# cat /sys/firmware/ipl/wwpn
0x5005076300c20b8e
```

### **lun**

Contains the LUN used for IPL, for example:

```
# cat /sys/firmware/ipl/lun
0x5010000000000000
```

### **br\_lba**

Contains the logical block address of the boot record on the boot device (usually 0).

### **bootprog**

Contains the boot program number. Used for selecting from a zipl boot menu during IPL of a SCSI disk device.

### **scp\_data**

Contains additional kernel parameters that are used when booting from a SCSI device (see [“Booting from a SCSI device”](#) on page 90 and [“Booting from SCSI”](#) on page 82). A leading equal sign (=) indicates that the existing kernel parameters used by the boot configuration were ignored and the kernel parameters of the scp\_data attribute where the only kernel parameters used for booting Linux.

```
# cat /sys/firmware/ipl/scp_data
noresume
```

### **binary\_parameter**

Contains the information of the preceding files in binary format.

## **Rebooting from an alternative source**

When you reboot Linux, the system conventionally boots from the last used location. However, you can configure an alternative device to be used for re-IPL instead of the last used IPL device.

When the system is re-IPLed, the alternative device is used to boot the kernel.

To configure the re-IPL device, use the **chreipl** tool (see [“chreipl - Modify the re-IPL configuration”](#) on page 507).

Alternatively, you can use a sysfs interface. The virtual configuration files are located under `/sys/firmware/reipl`. To configure, write strings into the configuration files. The following re-IPL types can be set with the `/sys/firmware/reipl/reipl_type` attribute:

**ccw**

For ccw devices such as DASDs that are attached through ESCON or FICON®, and for virtio block devices on KVM guests.

**fcp**

For FCP SCSI devices, including SCSI disks and CD or DVD drives (Hardware support is required.)

**nss**

For Named Saved Systems (z/VM only)

For each supported re-IPL type a sysfs directory is created under `/sys/firmware/reipl` that contains the configuration attributes for the device. The directory name is the same as the name of the re-IPL type.

When Linux is booted, the re-IPL attributes are set by default to the values of the boot device, which can be found under `/sys/firmware/ipl`.

## Attributes for ccw

You can find the attributes for re-IPL type ccw in the `/sys/firmware/reipl/ccw` sysfs directory.

**device**

Device number of the re-IPL device. For example 0.0.7412 or 0.1.5119.

**loadparm**

Up to eight characters for the loadparm used to select the boot configuration in the zipl menu (if available).

**parm**

A 64-byte string of kernel parameters that is concatenated to the boot command-line. The PARM parameter can be set only for Linux on z/VM. See also [“Specifying kernel parameters when booting Linux” on page 25](#).

A leading equal sign (=) means that the existing kernel parameter line in the boot configuration is ignored and the boot process uses the kernel parameters in the parm attribute only. See also [“Replacing all kernel parameters in a boot configuration” on page 26](#).

## Attributes for fcp

You can find the attributes for re-IPL type fcp in the `/sys/firmware/reipl/fcp` sysfs directory.

**device**

Device number of the FCP device that is used for re-IPL. For example, 0.0.7412.

**Note:** IPL is possible only from subchannel set 0.

**wwpn**

World wide port number of the FCP re-IPL device.

**lun**

Logical unit number of the FCP re-IPL device.

**bootprog**

Boot program selector. Used to select the boot configuration in the zipl menu (if available).

**br\_lba**

Boot record logical block address. Master boot record. Is always 0 for Linux.

**scp\_data**

Kernel parameters to be used for the next FCP re-IPL.

A leading equal sign (=) means that the existing kernel parameter line in the boot configuration is ignored and the boot process uses the kernel parameters in the scp\_data attribute only. See also [“Replacing all kernel parameters in a boot configuration” on page 26](#).

## Attributes for nss

You can find the attributes for re-IPL type nss in the `/sys/firmware/reipl/nss` sysfs directory.

### name

Name of the NSS. The NSS name can be 1-8 characters long and must consist of alphabetic or numeric characters. The following examples are all valid NSS names: 73248734, NSSCSITE, or NSS1234.

### parm

A 56-byte string of parameters that is passed to the NSS to be booted.

## Kernel panic settings

Set the attribute `/sys/firmware/shutdown_actions/on_panic` to `reipl` to make the system re-IPL with the current re-IPL settings if a kernel panic occurs.

For Linux in LPAR mode and Linux on z/VM, you might want to trigger a system dump in response to a kernel panic. See also the description of the **dumpconf** tool in *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 on the IBM Knowledge Center website at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/serviceandsupport.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/serviceandsupport.html)

## Examples for configuring re-IPL

Typical examples include configuring re-IPL from an FCP device and specifying parameters for re-IPL.

- To configure a CCW device with bus ID `0.0.7e78` as the re-IPL device:

```
# chreipl 0.0.7e78
```

Alternatively, you can write directly to sysfs:

```
# echo 0.0.7e78 > /sys/firmware/reipl/ccw/device
```

- To configure an FCP re-IPL device `0.0.5711` with a LUN `0x1711000000000000` and a WWPN `0x5005076303004715` with an additional kernel parameter `noresume`:

```
# chreipl 0.0.5711 0x5005076303004715 0x1711000000000000 -p "noresume"
```

Alternatively, you can write directly to sysfs. For an FCP re-IPL device, additional boot parameters, as specified with the `-p` option, are stored as `scp` data. Therefore, the `noresume` kernel parameter of the example is written to `/sys/firmware/reipl/fcp/scp_data`.

```
# echo 0.0.5711 > /sys/firmware/reipl/fcp/device
# echo 0x5005076303004715 > /sys/firmware/reipl/fcp/wwpn
# echo 0x1711000000000000 > /sys/firmware/reipl/fcp/lun
# echo 0 > /sys/firmware/reipl/fcp/bootprog
# echo 0 > /sys/firmware/reipl/fcp/br_lba
# echo "noresume" > /sys/firmware/reipl/fcp/scp_data
# echo fcp > /sys/firmware/reipl/reipl_type
```

- To specify additional kernel parameters for re-IPL of an instance of Linux on z/VM:

Write the parameters to the `parm` attribute:

```
# echo "noresume" > /sys/firmware/reipl/ccw/parm
```

---

## Chapter 8. Suspending and resuming Linux

With suspend and resume support, you can stop a running instance of Red Hat Enterprise Linux 8.1 and later continue operations.

When Linux is suspended, data is written to a swap partition. The resume process uses this data to make Linux continue from where it left off when it was suspended. A suspended Linux instance does not require memory or processor cycles.

During suspension, a z/VM guest virtual machine or an LPAR where the suspended Linux instance was running is free to run another instance of an operating system.

---

### What you should know about suspend and resume

Before suspending a Linux instance, you must be aware of the prerequisites and of activities that can cause resume to fail.

#### Prerequisites for suspending a Linux instance

Suspend and resume support checks for conditions that might prevent resuming a suspended Linux instance. You cannot suspend a Linux instance unless all prerequisites are fulfilled.

##### All hypervisor environments

The following prerequisites apply to all hypervisor environments:

- All tape device nodes must be closed and online tape drives must be unloaded.
- The Linux instance must not have used any hotplug memory since it was last booted.
- No program must be in a prolonged uninterruptible sleep state.

Programs can assume this state while they are waiting for an outstanding I/O request to complete. Most I/O requests complete in a very short time and do not compromise suspend processing. An example of an I/O request that can take too long to complete is rewinding a tape.

##### z/VM

For Linux on z/VM, the following additional prerequisites must be fulfilled:

- No discontinuous saved segment (DCSS) device must be accessed in exclusive-writable mode.

You must remove all DCSSs of segment types EW, SW, and EN by writing the DCSS name to the sysfs `remove` attribute.

You must remove all DCSSs of segment types SR and ER that are accessed in exclusive-writable mode or change their access mode to shared.

For more information, see [“Removing a DCSS device” on page 392](#) and [“Setting the access mode” on page 390](#).

- All device nodes of the z/VM recording device driver must be closed.
- All device nodes of the z/VM unit record device driver must be closed.
- No watchdog timer must run and the watchdog device node must be closed.

##### KVM

KVM guests must also fulfill these prerequisites:

- No AP queues must be in use.

## Precautions while a Linux instance is suspended

There are conditions outside the control of the suspended Linux instance that can cause resume to fail.

- The CPU configuration must remain unchanged between suspend and resume.
- The data that is written to the swap partition when the Linux instance is suspended must not be compromised.

In particular, be sure that the swap partition is not used if another operating system instance runs in the LPAR, z/VM guest virtual machine, or KVM virtual server while the initial Linux instance is suspended.

- If an instance of Linux on z/VM uses one or more DCSSs these DCSSs must remain unchanged until the Linux instance is resumed.

If the size, location, or content of a DCSS is changed before the Linux instance is resumed, resuming fails with a kernel panic.

- For an instance of Linux on z/VM with a Linux kernel that is a named saved system (NSS), the NSS must remain unchanged until the Linux instance is resumed.

If the size, location, or content of the NSS is changed before the Linux instance is resumed, resuming fails.

- Take special care when replacing a DASD and, thus, making a different device available at a particular device bus-ID.

You might intentionally replace a device with a backup device. Changing the device also changes its UID-based device nodes. Expect problems if you run an application that depends on UID-based device nodes and you exchange one of the DASD the application uses. In particular, you cannot use multipath tools when the UID changes.

- The SCSI configuration must remain unchanged until the Linux instance is resumed.
- Generally, avoid changes to the real or virtual hardware configuration between suspending and resuming a Linux instance.
- Disks that hold swap partitions or the root file system must be present when resuming the Linux instance.

## Handling of devices that are unavailable when resuming

Devices that were available when the Linux instance was suspended might be unavailable when resuming.

If such unavailable devices were offline when the Linux instance was suspended, they are de-registered and the device name can be assigned to other devices.

If unavailable devices were online when the Linux instance was suspended, handling depends on the respective device driver. DASD and FCP devices remain registered as disconnected devices. The device name and the device configuration are preserved. Devices that are controlled by other device drivers are de-registered.

## Handling of devices that become available at a different subchannel

The mapping between subchannels and device bus-IDs can change if the real or virtual hardware is restarted between suspending and resuming Linux.

If the subchannel changes for a DASD or FCP device, the device configuration is changed to reflect the new subchannel. This change is accomplished without de-registration. Thus, device name and device configuration are preserved.

If the subchannel changes for any other device, the device is de-registered and registered again as a new device.

## Setting up Linux for suspend and resume

Configure suspend and resume support through kernel parameters and set up a suitable swap partition for suspending and resuming a Linux instance.

### Kernel parameters

You configure the suspend and resume support by adding parameters to the kernel parameter line.

#### suspend and resume kernel parameter syntax

► resume= <device\_node> — no\_console\_suspend — noresume —►

where:

#### resume=<device\_node>

specifies the standard device node of the swap partition with the data that is required for resuming the Linux instance.

#### no\_console\_suspend

prevents Linux consoles from being suspended early in the suspend process. Without this parameter, you cannot see the kernel messages that are issued by the suspend process.

#### noresume

boots the kernel without resuming a previously suspended Linux instance. Add this parameter to circumvent the resume process, for example, if the data written by the previous suspend process is damaged.

### Example

To use a partition `/dev/disk/by-path/ccw-0.0.2f50-part1` as the swap partition and prevent Linux consoles from being suspended early in the suspend process specify:

```
resume=/dev/disk/by-path/ccw-0.0.2f50-part1 no_console_suspend
```

The example uses a "by-path" definition of the disk to ensure that the correct device is used, for example, after a reboot.

## Setting up a swap partition

During the suspend process, Linux writes data to a swap partition. This data is required later to resume Linux.

Set up a swap partition that is at least the size of the available LPAR memory, memory of the z/VM guest virtual machine, or memory of the KVM virtual server.

Do not use this swap partition for any other operating system that might run in the LPAR, z/VM guest virtual machine, or KVM virtual server while the Linux instance is suspended.

You cannot suspend a Linux instance while most of the memory and most of the swap space is in use. If there is not sufficient remaining swap space to hold the data for resuming the Linux instance, suspending the Linux instance fails.

To assure sufficient swap space you might have to configure two swap partitions, one partition for regular swapping and another for suspending the Linux instance. Configure the swap partition for suspending the Linux instance with a lower priority than the regular swap partition.

Use the `pri=` parameter to specify the swap partitions in `/etc/fstab` with different priorities. See the `swapon` man page for details.

The following example shows two swap partitions with different priorities:

```
# cat /etc/fstab
...
/dev/dasdb1 swap swap pri=-1 0 0
/dev/dasdc1 swap swap pri=-2 0 0
```

In the example, the partition to be used for the resume data is /dev/dasdc1.

You can check your current swap configuration by reading /proc/swaps.

```
# cat /proc/swaps
Filename      Type      Size      Used      Priority
/dev/dasdb1   partition 7212136   71056     -1
/dev/dasdc1   partition 7212136   0         -2
```

## Configuring for fast resume

The more devices are available to a Red Hat Enterprise Linux instance, the longer it takes to resume a suspended instance.

With a thousand or more available devices, the resume process can take longer than an IPL. If the duration of the resume process is critical for a Linux instance with many devices, include unused devices in the exclusion list (see [“cio\\_ignore - List devices to be ignored” on page 682](#)).

## Suspending a Linux instance

Suspend a Linux instance by writing to the /sys/power/state sysfs attribute.

### Before you begin



**Attention:** Suspend only Linux instances for which you specified the `resume=` kernel parameter. Without this parameter, you cannot resume the suspended Linux instance.

### Procedure

Enter the following command to suspend a Linux instance:

```
# echo disk > /sys/power/state
```

### Results

On the Linux console you might see progress indications until the console itself is suspended. Most of these messages require log level 7 or higher to be printed. See [“Using the magic sysrequest feature” on page 49](#) about setting the log level. You cannot see such progress messages if you suspend the Linux instance from an SSH session.

## Resuming a suspended Linux instance

Boot Linux to resume a suspended Linux instance.

### About this task

Use the same kernel, initial RAM disk, and kernel parameters that you used to first boot the suspended Linux instance.

You must reestablish any terminal session for HVC terminal devices and for terminals that are provided by the iucv tty program. You also must reestablish all SSH sessions that timed out while the Linux instance was suspended.



If resuming the Linux instance fails, boot Linux again with the `noresume` kernel parameter. The boot process then ignores the data that was written to the swap partition and starts Linux without resuming the suspended instance.



## Chapter 9. Shutdown actions

Several triggers can cause Linux to shut down. For each shutdown trigger, you can configure a specific shutdown action to be taken as a response.

Table 11. Shutdown triggers and default action overview

Trigger	Command or condition	Default shutdown action
halt	Linux <b>shutdown -H</b> command	stop
poff	Linux <b>poweroff</b> or <b>shutdown -P</b> command	stop
reboot	Linux <b>reboot</b> or <b>shutdown -r</b> command	reipl
restart	Depending on the hypervisor environment: <b>LPAR</b> A <b>PSW restart</b> on the HMC <b>z/VM</b> A CP <b>system restart</b> command <b>KVM</b> A <b>virsh</b> command on the KVM host	stop
panic	Linux kernel panic	stop

The available shutdown actions are summarized in [Table 12 on page 103](#).

Table 12. Shutdown actions

Action	Explanation	See also
stop	For panic or restart, enters a disabled wait state. For all other shutdown triggers, stops all CPUs.  For Linux on KVM, frees the resources that were used by the Linux instance. Depending on your virtual server configuration, the memory might be preserved.	n/a
ipl	Performs an IPL according to the specifications in <code>/sys/firmware/ipl</code> .	<a href="#">“Displaying current IPL parameters” on page 93</a>
reipl	Performs an IPL according to the specifications in <code>/sys/firmware/reipl</code> .	<a href="#">“Rebooting from an alternative source” on page 94</a>
dump	For Linux in LPAR mode and Linux on z/VM, creates a dump according to the specifications in <code>/sys/firmware/dump</code> .	<a href="#">Using the Dump Tools on Red Hat Enterprise Linux 8, SC34-7718</a>
dump_reipl	For Linux in LPAR mode and Linux on z/VM, performs the dump action followed by the reipl action.	<a href="#">Using the Dump Tools on Red Hat Enterprise Linux 8, SC34-7718</a>

Table 12. Shutdown actions (continued)		
Action	Explanation	See also
vmcmd	For Linux on z/VM, issues one or more z/VM CP commands according to the specifications in <code>/sys/firmware/vmcmd</code> .	<a href="#">“Configuring z/VM CP commands as a shutdown action” on page 106</a>

Use **lsshut** to find out which shutdown action is configured for each shutdown trigger, see [“lsshut - List the current system shutdown actions” on page 596](#).

Use the applicable command to configure the shutdown action for a shutdown trigger:

- For `halt`, `power off`, and `reboot` use **chshut**, see [“chshut - Control the system shutdown actions” on page 511](#).
- For `restart` and `panic` on Linux in LPAR mode or Linux on z/VM, use **dumpconf**, see *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718

### kdump for restart and panic

If `kdump` is set up for a Linux instance, `kdump` is started to create a dump, regardless of the shutdown actions that are specified for `restart` and `panic`. With `kdump`, these settings act as a backup that is used only if `kdump` fails.

**Note:** `kdump` is not a shutdown action that you can set as a `sysfs` attribute value for a shutdown trigger. See *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 about how to set up `kdump`.

## The shutdown configuration in sysfs

The configured shutdown action for each shutdown trigger is stored in a `sysfs` attribute `/sys/firmware/shutdown_actions/on_<trigger>`.

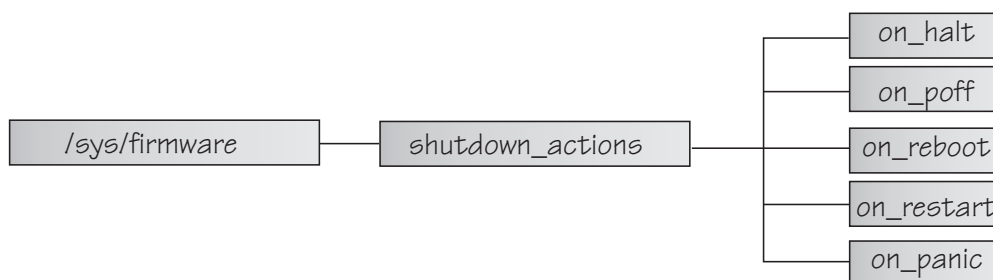


Figure 32. `sysfs` branch with shutdown action settings

The preferred way to read or change these settings is using the **lsshut**, **chshut**. For dump actions on Linux in LPAR mode or Linux on z/VM, the preferred way is the **dumpconf** command. Alternatively, you can read and write to the `/sys/firmware/shutdown_actions/on_<trigger>` attributes.

### Examples

- This command reads the shutdown configuration:

```
# lsshut
Trigger      Action
=====
Halt         stop
Power off    stop
Reboot       reipl
Restart      kdump,stop
Panic        kdump,stop
```

- This command reads the shutdown setting for the `poff` shutdown trigger.

```
# cat /sys/firmware/shutdown_actions/on_poff  
stop
```

- This command changes the setting for the `reboot` shutdown trigger to `ipl`:

```
# chshut reboot ipl
```

Alternatively, you can directly write the new setting to `sysfs`:

```
# echo ipl > /sys/firmware/shutdown_actions/on_reboot
```

- This command changes the setting for the `restart` shutdown trigger to `ipl`:

```
# echo ipl > /sys/firmware/shutdown_actions/on_restart
```

Details for the `ipl`, `reipl`, `dump`, and `vmcmd` shutdown actions are contained in the corresponding subdirectories in `/sys/firmware`. For example, `/sys/firmware/ipl` contains specifications for an IPL device and other IPL parameters.

## Configuring z/VM CP commands as a shutdown action

Use **chshut** and **dumpconf** to configure a CP command as a shutdown action, or directly write to the relevant sysfs attributes.

**Before you start:** This information applies to Linux on z/VM only.

In sysfs, two attributes are required to set a z/VM CP command as a shutdown action for a trigger *<trigger>*:

- `/sys/firmware/shutdown_actions/on_<trigger>` must be set to `vmcmd`.
- `/sys/firmware/vmcmd/on_<trigger>` specifies the z/VM CP command.

The values of the attributes in the `/sys/firmware/vmcmd` directory must conform to these rules:

- The value must be a valid z/VM CP command.
- The commands, including any z/VM user IDs or device numbers, must be specified with uppercase characters.
- Commands that include blanks must be delimited by double quotation marks (").
- The value must not exceed 127 characters.

You can specify multiple z/VM CP commands that are separated by the newline character `"\n"`. Each newline is counted as one character. When writing values with multiple commands, use this syntax to ensure that the newline character is processed correctly:

```
# echo -e <cmd1>\n<cmd2>... | cat > /sys/firmware/vmcmd/on_<trigger>
```

where `<cmd1>\n<cmd2>...` are two or more z/VM CP commands and `on_<trigger>` is one of the attributes in the `vmcmd` directory.

The **-e** **echo** option and redirect through **cat** are required because of the newline character.

### Example for a single z/VM CP command

Issue the following command to configure the z/VM CP LOGOFF command as the shutdown action for the `poff` shutdown trigger.

```
# chshut poff vmcmd "LOGOFF"
```

Alternatively, you can issue the following commands to directly write the shutdown configuration to sysfs:

```
# echo vmcmd > /sys/firmware/shutdown_actions/on_poff
# echo LOGOFF > /sys/firmware/vmcmd/on_poff
```

[Figure 33 on page 107](#) illustrates the relationship of the sysfs attributes for this example.

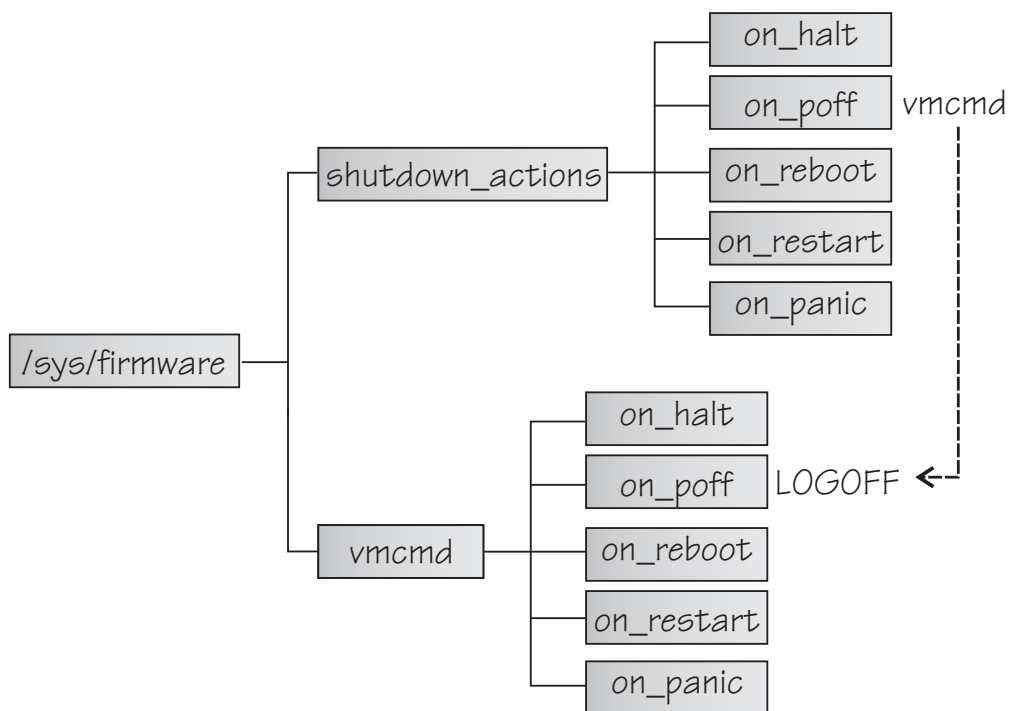


Figure 33. sysfs branch with shutdown action settings

### Example for multiple z/VM CP commands

Issue the following command to configure two z/VM CP commands as the shutdown action for the `poff` shutdown trigger. First a message is sent to user OPERATOR, and then the LOGOFF command is issued.

```
# chshut poff vmcmd "MSG OPERATOR Going down" vmcmd "LOGOFF"
```

Alternatively, you can issue the following commands to directly write the shutdown configuration to sysfs:

```
# echo vmcmd > /sys/firmware/shutdown_actions/on_poff
# echo -e "MSG OPERATOR Going down\nLOGOFF" | cat > /sys/firmware/vmcmd/on_poff
```





## Chapter 10. The diag288 watchdog device driver

The watchdog device driver provides Linux watchdog applications with access to the watchdog timer.

You can use the diag288 watchdog in these environments:

- Linux on z/VM
- Linux in LPAR mode as of z13s<sup>®</sup> and z13<sup>®</sup> with the enhancements of February 2016.
- Linux as a KVM guest

The diag288 watchdog device driver provides the following features:

- Access to the watchdog timer on Z.
- An API for watchdog applications (see [“External programming interfaces”](#) on page 111).

Watchdog applications can be used to set up automated restart mechanisms. Watchdog-based restart mechanisms are an alternative to a networked heartbeat with STONITH.

Watchdog applications that communicate directly with the Z firmware, the z/VM control program (CP), or the KVM host do not require a third operating system to monitor a heartbeat.

### What you should know about the diag288 watchdog device driver

The watchdog function comprises two components: a watchdog application that runs on the Linux instance being controlled and a watchdog timer outside the Linux instance. For Linux in LPAR mode, the timer runs in the IBM Z firmware. For Linux on z/VM the timer is provided by z/VM CP. For Linux on KVM, the timer runs on the KVM host.

While the Linux instance operates satisfactorily, the watchdog application reports a positive status to the watchdog timer at regular intervals. The watchdog application uses a device node to pass these status reports to the timer ([Figure 34 on page 109](#)).

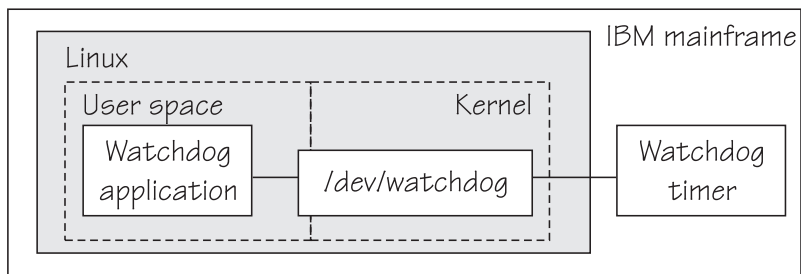


Figure 34. Watchdog application and timer

The watchdog application typically derives its status by monitoring critical network connections, file systems, and processes on the Linux instance. If a specified time elapses without a positive report being received by the watchdog timer, the watchdog timer assumes that the Linux instance is in an error state. The watchdog timer then triggers a predefined action against the Linux instance. For example, Linux might be shut down or rebooted, or a system dump might be initiated. For information about setting the default timer and performing other actions, see [“External programming interfaces”](#) on page 111.


**Linux on z/VM only:** Loading or saving a DCSS can take a long time during which the virtual machine does not respond, depending on the size of the DCSS. As a result, a watchdog might time out and restart the guest. You are advised not to use the watchdog in combination with loading or saving DCSSs.

See also the generic watchdog documentation in the Linux kernel source tree under Documentation/watchdog.

## Loading and configuring the diag288 watchdog device driver

You configure the diag288 watchdog device driver when you load the module.

### watchdog module parameter syntax

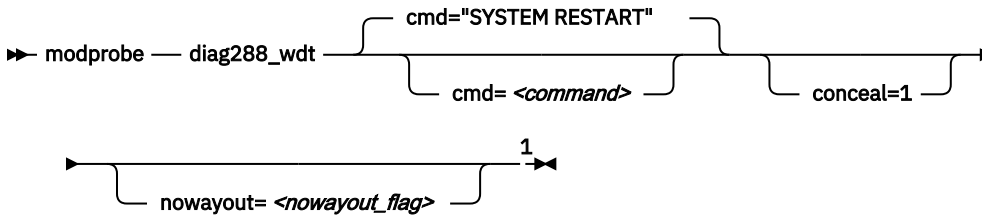

#### Notes:

<sup>1</sup> `cmd=` and `conceal=` apply only to Linux on z/VM and are ignored for Linux in LPAR mode and Linux on KVM.

where:

#### <command>

configures the shutdown action to be taken if Linux on z/VM fails. The default, "SYSTEM RESTART", configures the shutdown action that is specified for the `restart` shutdown trigger (see [Chapter 9, "Shutdown actions,"](#) on page 103).

Any other specification dissociates the timeout action from the `restart` shutdown trigger. Instead, the specification is issued by CP and must adhere to these rules:

- It must be a single valid CP command
- It must not exceed 230 characters
- It must be enclosed by quotation marks if it contains any blanks or newline characters

The specification is converted from ASCII to uppercase EBCDIC.

For details about CP commands see *z/VM: CP Commands and Utilities Reference*, SC24-6268.

On an running instance of Linux on z/VM, you can write to `/sys/module/diag288_wdt/parameters/cmd` to replace the command you specify when loading the module. Through this sysfs interface, you can also specify multiple commands to be issued, see [Examples](#) for more details.

The preferred method for configuring a timeout action other than a system restart is to configure a different shutdown action for the `restart` shutdown trigger.

#### conceal=1

enables the protected application environment where the guest is protected from unexpectedly entering CP READ. Do not enable the protected environment for guests with multiprocessor configurations. The protected application facility supports only virtual uniprocessor systems.

For details, see the "SET CONCEAL" section of *z/VM: CP Commands and Utilities Reference*, SC24-6268.

#### <nowayout\_flag>

determines what happens when the watchdog device node is closed by the watchdog application.

If the flag is set to 1 (default), the watchdog timer keeps running and triggers an action if no positive status report is received within the specified time interval. If the character "V" is written to the device and the flag is set to 0, the z/VM watchdog timer is stopped and the Linux instance continues without the watchdog support.

## Examples for Linux on z/VM

The following command loads the watchdog module and determines that, on failure, the Linux instance is to be IPLed from a device with devno 0xb1a0. The protected application environment is not enabled. The watchdog application can close the watchdog device node after writing "V" to it. As a result the watchdog timer becomes ineffective and does not IPL the guest.

```
# modprobe diag288_wdt cmd="ipl b1a0" nowayout=0
```

The following example shows how to specify multiple commands to be issued.

```
# /usr/bin/printf "<cmd1>\n<cmd2>\n<cmd3>" > /sys/module/diag288_wdt/parameters/cmd
```

where <cmd1>, <cmd2>, and <cmd3> are z/VM commands.

Use the **printf** version at /usr/bin/printf. The built-in **printf** command from bash might not process the newline characters as intended.

To verify that your commands have been accepted, issue: To verify that your commands have been accepted, issue:

```
# cat /sys/module/diag288_wdt/parameters/cmd
<cmd1>
<cmd2>
<cmd3>
```

**Note:** You cannot specify multiple commands as module parameters while loading the module.

## Setting the timeout action

How to configure the timeout action for the diag288 watchdog device driver depends on your hypervisor environment.

### LPAR

For Linux in LPAR mode, the shutdown action is defined through the `restart` shutdown trigger (see Chapter 9, “Shutdown actions,” on page 103).

### z/VM

For Linux on z/VM, the shutdown action is defined through the `restart` shutdown trigger.

You can also use the `diag288_wdt.cmd=` kernel parameter or the `cmd=` module parameter to bypass the `restart` shutdown trigger and directly specify a z/VM CP command to be issued.

### KVM

For Linux on KVM, the shutdown action is defined in the virtual server configuration on the KVM hypervisor.

## External programming interfaces

There is an API for applications that work with the watchdog device driver.

**Application programmers:** This information is intended for programmers who want to write watchdog applications that work with the watchdog device driver.

For information about the API and the supported IOCTLs, see the `Documentation/watchdog/watchdog-api.txt` file in the Linux source tree.

The default watchdog timeout is 30 seconds, the minimum timeout that can be set through the IOCTL `WDIOC_SETTIMEOUT` is 15 seconds.



---

## Part 3. Storage

**LPAR and z/VM:** This part applies to Linux in LPAR mode and to Linux on z/VM.

Red Hat Enterprise Linux 8.1 includes several storage device drivers that are specific to z/Architecture.

### **Newest version**

You can find the newest version of this book at

[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)



# Chapter 11. DASD device driver

**LPAR and z/VM:** The DASD device driver applies to Linux in LPAR mode and to Linux on z/VM.

The DASD device driver provides access to all real or emulated direct access storage devices (DASD) that can be attached to the channel subsystem of an IBM mainframe.

DASD devices include various physical media on which data is organized in blocks or records or both. The blocks or records in a DASD can be accessed for read or write in random order.

Traditional DASD devices are attached to a control unit that is connected to a mainframe I/O channel. Today, these real DASDs have been largely replaced by emulated DASDs. For example, emulated DASDs can be the volumes of the IBM System Storage® DS8000® Turbo, or the volumes of the IBM System Storage DS6000™. These emulated DASD are completely virtual and the identity of the physical device is hidden.

SCSI disks that are attached through an FCP channel are not classified as DASD. They are handled by the zfcpx driver (see Chapter 12, “SCSI-over-Fibre Channel device driver,” on page 151).

## Features

The DASD device driver supports a wide range of disk devices and disk functions.

- The DASD device driver has no dependencies on the adapter hardware that is used to physically connect the DASDs to the IBM Z hardware. You can use any adapter that is supported by the IBM Z hardware (see [www.ibm.com/systems/z/connectivity](http://www.ibm.com/systems/z/connectivity) for more information).
- The DASD device driver supports ESS virtual ECKD type disks
- The DASD device driver supports the control unit attached physical ECKD (Extended Count Key Data) and FBA (Fixed Block Access) devices as summarized in Table 13 on page 115:

Table 13. Supported control unit attached DASD		
Device format	Control unit type	Device type
ECKD	1750	3380 and 3390
ECKD	2107	3380 and 3390
ECKD	2105	3380 and 3390
ECKD	3990	3380 and 3390
ECKD	9343	9345
ECKD	3880	3390
FBA	6310	9336
FBA	3880	3370

All models of the specified control units and device types can be used with the DASD device driver. This includes large devices with more than 65520 cylinders, for example, 3390 Model A. Check the storage support statement to find out what works for Red Hat Enterprise Linux.

- The DASD device driver provides a disk format with up to three partitions per disk. See “[IBM Z compatible disk layout](#)” on page 117 for details.
- The DASD device driver provides an option for extended error reporting for ECKD devices. Extended error reporting can support high availability setups.
- The DASD device driver supports parallel access volume (PAV) and HyperPAV on storage devices that provide this feature. For more information about PAV and HyperPAV, see *How to Improve Performance*

with PAV, SC33-8414. Use the **dasdstat** command to check whether a DASD uses PAV, see [“Scenario: Verifying that PAV and HPF are used”](#) on page 139.

- The DASD device driver supports High Performance FICON, including multitrack requests, on storage devices that provide this feature. Use the **dasdstat** command to check whether a DASD uses High Performance FICON, see [“Scenario: Verifying that PAV and HPF are used”](#) on page 139.
- The DASD device driver supports large volumes (devices with more than 65520 cylinders, for example, 3390 Model A), solid state devices, and encrypted devices.

## What you should know about DASD

---

The DASD device driver supports various disk layouts with different partitioning capabilities. The DASD device naming scheme helps you to keep track of your DASDs and DASD device nodes.

### The IBM label partitioning scheme

Linux on Z supports the same standard DASD format that is also used by traditional mainframe operating systems, but it also supports any other Linux partition table.

The DASD device driver is embedded into the Linux generic support for partitioned disks. As a result, you can use any partition table format that is supported by Linux for your DASDs.

Traditional mainframe operating systems (such as, z/OS, z/VM, and z/VSE®) expect a standard DASD format. In particular, the format of the first two tracks of a DASD is defined by this standard. These tracks include the Z IPL, label, and for some layouts VTOC records. Partitioning schemes for platforms other than Z generally do not preserve these mainframe specific records.

Red Hat Enterprise Linux 8.1 for Z includes the IBM label partitioning scheme that preserves the Z IPL, label, and VTOC records. With this partitioning scheme, Linux can share a disk with other mainframe operating systems. For example, a traditional mainframe operating system can handle backup and restore for a partition that is used by Linux.

The following sections describe the layouts that are supported by the IBM label partitioning scheme:

- [“IBM Z compatible disk layout”](#) on page 117
- [“Linux disk layout”](#) on page 119
- [“CMS disk layout”](#) on page 119

### DASD partitions

Partitioning DASD has the same advantages as for other disk types, but there are some prerequisites and a special tool, **fdasd**.

A DASD partition is a contiguous set of DASD blocks that is treated by Linux as an independent disk and by the traditional mainframe operating systems as a data set.

With the Linux disk layout (LDL) and the CMS disk layout, you always have a single partition only. This partition is defined by the LDL or CMS formatted area of the disk. With the compatible disk layout, you can have up to three partitions.

There are several reasons why you might want to have multiple partitions on a DASD, for example:

#### Limit data growth

Runaway processes or undisciplined users can consume disk space to an extent that the operating system runs short of space for essential operations. Partitions can help to isolate the space that is available to particular processes.

#### Encapsulate your data

If a file system gets damaged, this damage is likely to be restricted to a single partition. Partitioning can reduce the scope of data damage.

#### Recommendations:



- Use **fdasd** to create or alter partitions on ECKD type DASD that are formatted with the compatible disk layout. If you use another partition editor, it is your responsibility to ensure that partitions do not overlap. If they do, data damage occurs.
- Leave no gaps between adjacent partitions to avoid wasting space. Gaps are not reported as errors, and can be reclaimed only by deleting and re-creating one or more of the surrounding partitions and rebuilding the file system on them.

A disk need not be partitioned completely. You can begin by creating only one or two partitions at the start of your disk and convert the remaining space to a partition later.

There is no facility for moving, enlarging, or reducing partitions, because **fdasd** has no control over the file system on the partition. You can only delete and re-create them. Changing the partition table results in loss of data in all altered partitions. It is up to you to preserve the data by copying it to another medium.

## IBM Z compatible disk layout

With the compatible disk layout a DASD can have up to three partitions that can be accessed by traditional mainframe operating systems.

You can only format ECKD type DASD with the compatible disk layout.

Figure 35 on page 117 illustrates a DASD with the compatible disk layout.



Figure 35. Compatible disk layout

The IPL records, volume label (VOL1), and VTOC of disks with the compatible disk layout are on the first two tracks of the disks. These tracks are not intended for use by Linux applications. Using the tracks can result in data loss.

Linux can address the device as a whole as `/dev/dasd<x>`, where `<x>` can be one to four letters that identify the individual DASD (see “DASD naming scheme” on page 120). See “DASD device nodes” on page 121 for alternative addressing possibilities.

Disks with the compatible disk layout can have one to three partitions. Linux addresses the first partition as `/dev/dasd<x>1`, the second as `/dev/dasd<x>2`, and the third as `/dev/dasd<x>3`.

You use the **dasdfmt** command (see “dasdfmt - Format a DASD” on page 540) to format a disk with the compatible disk layout. You use the **fdasd** command (see “fdasd – Partition a DASD” on page 557) to create and modify partitions.

### Volume label

The volume label includes information about the disk layout, the VOLSER, and a pointer to the VTOC.

The DASD volume label is located in the third block of the first track of the device (cylinder 0, track 0, block 2). This block has a 4-byte key, and an 80-byte data area with the following content:

#### key

for disks with the compatible disk layout, contains the four EBCDIC characters "VOL1" to identify the block as a volume label.

#### label identifier

is identical to the key field.

#### VOLSER

is a name that you can use to identify the DASD device. A volume serial number (VOLSER) can be one to six EBCDIC characters. If you want to use VOLSERS as identifiers for your DASD, be sure to assign unique VOLSERS.

You can assign VOLSERs from Linux by using the **dasdfmt** or **fdasd** command. These commands enforce that VOLSERs:

- Are alphanumeric
- Are uppercase (by uppercase conversion)
- Contain no embedded blanks
- Contain no special characters other than \$, #, @, and %

**Tip:** Avoid special characters altogether.

**Note:** The VOLSER values SCRTCH, PRIVAT, MIGRAT, or Lnnnnn (An "L" followed by five digits) are reserved for special purposes by other mainframe operating systems and should not be used by Linux.

These rules are more restrictive than the VOLSERs that are allowed by the traditional mainframe operating systems. For compatibility, Linux tolerates existing VOLSERs with lowercase letters and special characters other than \$, #, @, and %. Enclose VOLSERs with special characters in single quotation marks if you must specify it, for example, as a command parameter.

### VTOC address

contains the address of a standard IBM format 4 data set control block (DSCB). The format is: *cylinder* (2 bytes) *track* (2 bytes) *block* (1 byte).

All other fields of the volume label contain EBCDIC space characters (code 0x40).

### VTOC

Instead of a regular Linux partition table, Red Hat Enterprise Linux 8.1 for Z, like other mainframe operating systems, uses a Volume Table Of Contents (VTOC).

The VTOC contains pointers to the location of every data set on the volume. These data sets form the Linux partitions.

The VTOC is on the second track (cylinder 0, track 1). It contains a number of records, each written in a separate data set control block (DSCB). The number of records depends on the size of the volume:

- One DSCB that describes the VTOC itself (format 4)
- One DSCB that is required by other operating systems but is not used by Linux. **fdasd** sets it to zeros (format 5).
- For volumes with more than 65534 cylinders, 1 DSCB (format 7)
- For each partition:
  - On volumes with 65534 or less cylinders, 1 DSCB (format 1)
  - On volumes with more than 65534 cylinders, 1 format 8 and one format 9 DSCB

The key of the format 1 or format 8 DSCB contains the data set name, which identifies the partition to z/OS, z/VM, and z/VSE.

The VTOC can be displayed with standard IBM Z tools such as VM/DITTO. A Linux DASD with physical device number 0x0193, volume label "LNX001", and three partitions might be displayed like this example:

```
====>                                VM/DITTO DISPLAY VTOC                                LINE 1 OF 5
                                           SCROLL ==> PAGE

CUU,193 ,VOLSER,LNX001   3390, WITH   100 CYLS, 15 TRKS/CYL, 58786 BYTES/TRK

--- FILE NAME --- (SORTED BY =,NAME ,) ---- EXT   BEGIN-END       RELTRK,
1...5...10...15...20...25...30...35...40.... SQ   CYL-HD   CYL-HD       NUMTRKS
*** VTOC EXTENT ***
LINUX.VLNX001.PART0001.NATIVE          0      0  1      0  1          1,1
LINUX.VLNX001.PART0002.NATIVE          0      46 12     66 11         2,700
LINUX.VLNX001.PART0003.NATIVE          0      66 12     99 14        1002,498
*** THIS VOLUME IS CURRENTLY 100 PER CENT FULL WITH      0 TRACKS AVAILABLE

PF 1=HELP      2=TOP      3=END      4=BROWSE    5=BOTTOM    6=LOCATE
PF 7=UP        8=DOWN     9=PRINT    10=RGT/LEFT 11=UPDATE    12=RETRIEVE
```

The **ls** command on Linux might list this DASD and its partitions like this example:

```
# ls -l /dev/dasda*
brw-rw---- 1 root disk 94, 0 Jan 27 09:04 /dev/dasda
brw-rw---- 1 root disk 94, 1 Jan 27 09:04 /dev/dasda1
brw-rw---- 1 root disk 94, 2 Jan 27 09:04 /dev/dasda2
brw-rw---- 1 root disk 94, 3 Jan 27 09:04 /dev/dasda3
```

where dasda represent the whole DASD and dasda1, dasda2, and dasda3 represent the individual partitions.

## Linux disk layout

The Linux disk layout does not have a VTOC, and DASD partitions that are formatted with this layout cannot be accessed by traditional mainframe operating systems.

You can format only ECKD type DASD with the Linux disk layout. Apart from accessing the disks as ECKD devices, you can also access them using the DASD DIAG access method. See [“Enabling the DASD device driver to use the DIAG access method” on page 130](#) for how to enable DIAG.

Figure 36 on page 119 illustrates a disk with the Linux disk layout.



Figure 36. Linux disk layout

DASDs with the Linux disk layout either have an LNX1 label or are not labeled. The first records of the device are reserved for IPL records and the volume label, and are not intended for use by Linux applications. All remaining records are grouped into a single partition. You cannot have more than a single partition on a DASD that is formatted in the Linux disk layout.

Linux can address the device as a whole as `/dev/dasd<x>`, where `<x>` can be one to four letters that identify the individual DASD (see [“DASD naming scheme” on page 120](#)). Linux can access the partition as `/dev/dasd<x>1`.

You use the **dasdfmt** command (see [“dasdfmt - Format a DASD” on page 540](#)) to format a disk with the Linux disk layout.

## CMS disk layout

The CMS disk layout applies only to Linux on z/VM. The disks are formatted with z/VM tools.

Both ECKD or FBA type DASD can have the CMS disk layout. DASD partitions that are formatted with this layout cannot be accessed by traditional mainframe operating systems. Apart from accessing the disks as ECKD or FBA devices, you can also access them using the DASD DIAG access method.

Figure 37 on page 120 illustrates two variants of the CMS disk layout.



Figure 37. CMS disk layout

The first variant contains IPL records, a volume label (CMS1), and a CMS data area. Linux treats DASD like this equivalent to a DASD with the Linux disk layout, where the CMS data area serves as the Linux partition.

The second variant is a CMS reserved volume. In this variant, the DASD was reserved by a CMS `RESERVE fn ft fm` command. In addition to the IPL records and the volume label, DASD with the CMS disk layout also have CMS metadata. The CMS reserved file serves as the Linux partition.

For both variants of the CMS disk layout, you can have only a single Linux partition. The IPL record, volume label and (where applicable) the CMS metadata, are not intended for use by Linux applications.

Addressing the device and partition is the same for both variants. Linux can address the device as a whole as `/dev/dasd<x>`, where `<x>` can be one to four letters that identify the individual DASD (see [“DASD naming scheme”](#) on page 120). Linux can access the partition as `/dev/dasd<x>1`.

[“Enabling the DASD device driver to use the DIAG access method”](#) on page 130 describes how you can enable DIAG.

## Disk layout summary

The available disk layouts differ in their support of device formats, the DASD DIAG access method, and the maximum number of partitions.

Table 14. Disk layout summary					
Disk layout	ECKD device format	FBA device format	DIAG access method support (z/VM only)	Maximum number of partitions	Formatting tool
Compatible disk layout	Yes	No	No	3	<b>dasdfmt</b>
Linux disk layout	Yes	No	Yes	1	<b>dasdfmt</b>
CMS (z/VM only)	Yes	Yes	Yes	1	z/VM tools

## DASD naming scheme

The DASD naming scheme maps device names and minor numbers to whole DASDs and to partitions.

The DASD device driver uses the major number 94. For each configured device it uses four minor numbers:

- The first minor number always represents the device as a whole, including IPL, VTOC, and label records.
- The remaining three minor numbers represent the up to three partitions.

With 1,048,576 (20-bit) available minor numbers, the DASD device driver can address 262,144 devices.

The DASD device driver uses a device name of the form `dasd<x>` for each DASD. In the name, `<x>` is one to four lowercase letters. [Table 15 on page 121](#) shows how the device names map to the available minor numbers.

<i>Table 15. Mapping of DASD names to minor numbers</i>				
Name for device as a whole		Minor number for device as a whole		Number of devices
From	To	From	To	
dasda	dasdz	0	100	26
dasdaa	dasdzz	104	2804	676
dasdaaa	dasdzzz	2808	73108	17,576
dasdaaaa	dasdnwtl	73112	1048572	243,866
<b>Total number of devices:</b>				262,144

The DASD device driver also uses a device name for each partition. The name of the partition is the name of the device as a whole with a 1, 2, or 3 appended to identify the first, second, or third partition. The three minor numbers that follow the minor number of the device as a whole are the minor number for the first, second, and third partition.

### Examples

- "dasda" refers to the whole of the first disk in the system and "dasda1", "dasda2", and "dasda3" to the three partitions. The minor number for the whole device is 0. The minor numbers of the partitions are 1, 2, and 3.
- "dasdz" refers to the whole of the 101st disk in the system and "dasdz1", "dasdz2", and "dasdz3" to the three partitions. The minor number for the whole device is 100. The minor numbers of the partitions are 101, 102, and 103.
- "dasdaa" refers to the whole of the 102nd disk in the system and "dasdaa1", "dasdaa2", and "dasdaa3" to the three partitions. The minor number for the whole device is 104. The minor numbers of the partitions are 105, 106, and 107.

## DASD device nodes

Red Hat Enterprise Linux 8.1 uses `udev` to create multiple device nodes for each DASD that is online.

### Device nodes based on device names

`udev` creates device nodes that match the device names used by the kernel. These standard device nodes have the form `/dev/<name>`.

The mapping between standard device nodes and the associated physical disk space can change, for example, when you reboot Linux. To ensure that you access the intended physical disk space, you need device nodes that are based on properties that identify a particular DASD.

`udev` creates additional devices nodes that are based on the following information:

- The bus ID of the disk
- The disk label (VOLSER)
- The universally unique identifier (UUID) of the file system on the disk
- If available: The label of the file system on the disk

### Device nodes based on bus IDs

`udev` creates device nodes of the form

```
/dev/disk/by-path/ccw-<device_bus_id>
```

for whole DASD and

```
/dev/disk/by-path/ccw-<device_bus_id>-part<n>
```

for the <n>th partition.

### Device nodes that are based on VOLSERs

udev creates device nodes of the form

```
/dev/disk/by-id/ccw-<volser>
```

for whole DASD and

```
/dev/disk/by-id/ccw-<volser>-part<n>
```

for the <n>th partition.

If you want to use device nodes based on VOLSER, be sure that the VOLSERs in your environment are unique (see [“Volume label” on page 117](#)).

If you assign the same VOLSER to multiple devices, Linux can still access each device through its standard device node. However, only one of the devices can be accessed through the VOLSER-based device node. Thus, the node is ambiguous and might lead to unintentional data access.

Furthermore, if the VOLSER on the device that is addressed by the node is changed, the previously hidden device is not automatically addressed instead. To reassign the node, you must reboot Linux or force the kernel to reread the partition tables from disks, for example, by issuing:

```
# blockdev --rereadpt /dev/dasdzzz
```

You can assign VOLSERs to ECKD type devices with **dasdfmt** when formatting or later with **fdasd** when creating partitions.

### Device nodes based on file system information

udev creates device nodes of the form

```
/dev/disk/by-uuid/<uuid>
```

where <uuid> is the UUID for the file system in a partition.

If a file system label exists, udev also creates a node of the form

```
/dev/disk/by-label/<label>
```

There are no device nodes for the whole DASD that are based on file system information.

If you want to use device nodes that are based on file system labels, be sure that the labels in your environment are unique.

### Additional device nodes

/dev/disk/by-id contains additional device nodes for the DASD and partitions, that are all based on a device identifier as contained in the uid attribute of the DASD.

**Note:** If you want to use device nodes that are based on file system information and VOLSER, be sure that they are unique for the scope of your Linux instance. This information can be changed by a user or it can be copied, for example when backup disks are created. If two disks with the same VOLSER or UUID are online to the same Linux instance, the matching device node can point to either of these disks.

### Example

For a DASD that is assigned the device name dasdzzz, has two partitions, a device bus-ID 0.0.b100 (device number 0xb100), VOLSER LNX001, and a UUID 6dd6c43d-a792-412f-a651-0031e631caed for the first and f45e955d-741a-4cf3-86b1-380ee5177ac3 for the second partition, udev creates the following device nodes:

For the whole DASD:

- /dev/dasdzzz (standard device node according to the DASD naming scheme)
- /dev/disk/by-path/ccw-0.0.b100
- /dev/disk/by-id/ccw-LNX001

For the first partition:

- /dev/dasdzzz1 (standard device node according to the DASD naming scheme)
- /dev/disk/by-path/ccw-0.0.b100-part1
- /dev/disk/by-id/ccw-LNX001-part1
- /dev/disk/by-uuid/6dd6c43d-a792-412f-a651-0031e631caed

For the second partition:

- /dev/dasdzzz2 (standard device node according to the DASD naming scheme)
- /dev/disk/by-path/ccw-0.0.b100-part2
- /dev/disk/by-id/ccw-LNX001-part2
- /dev/disk/by-uuid/f45e955d-741a-4cf3-86b1-380ee5177ac3

## Accessing DASD by udev-created device nodes

Use udev-created device nodes to access a particular physical disk space, regardless of the device name that is assigned to it.

### Example

The following example is based on these assumptions:

- A DASD with bus ID 0.0.b100 has two partitions.
- The standard device node of the DASD is dasdzzz.
- udev creates the following device nodes for a DASD and its partitions:

```
/dev/disk/by-path/ccw-0.0.b100
/dev/disk/by-path/ccw-0.0.b100-part1
/dev/disk/by-path/ccw-0.0.b100-part2
```

Instead of issuing:

```
# fdasd /dev/dasdzzz
```

issue:

```
# fdasd /dev/disk/by-path/ccw-0.0.b100
```

In the file system information in /etc/fstab replace the following specifications:

```
/dev/dasdzzz1 /temp1 ext4 defaults 0 0
/dev/dasdzzz2 /temp2 ext4 defaults 0 0
```


with these specifications:

```
/dev/disk/by-path/ccw-0.0.b100-part1 /temp1 ext4 defaults 0 0
/dev/disk/by-path/ccw-0.0.b100-part2 /temp2 ext4 defaults 0 0
```

You can make similar substitutions with other device nodes that udev provides for you (see [“DASD device nodes”](#) on page 121).

## Setting up the DASD device driver

Unless the DASD device driver modules are loaded for you during the boot process, load and configure them with the **modprobe** command.

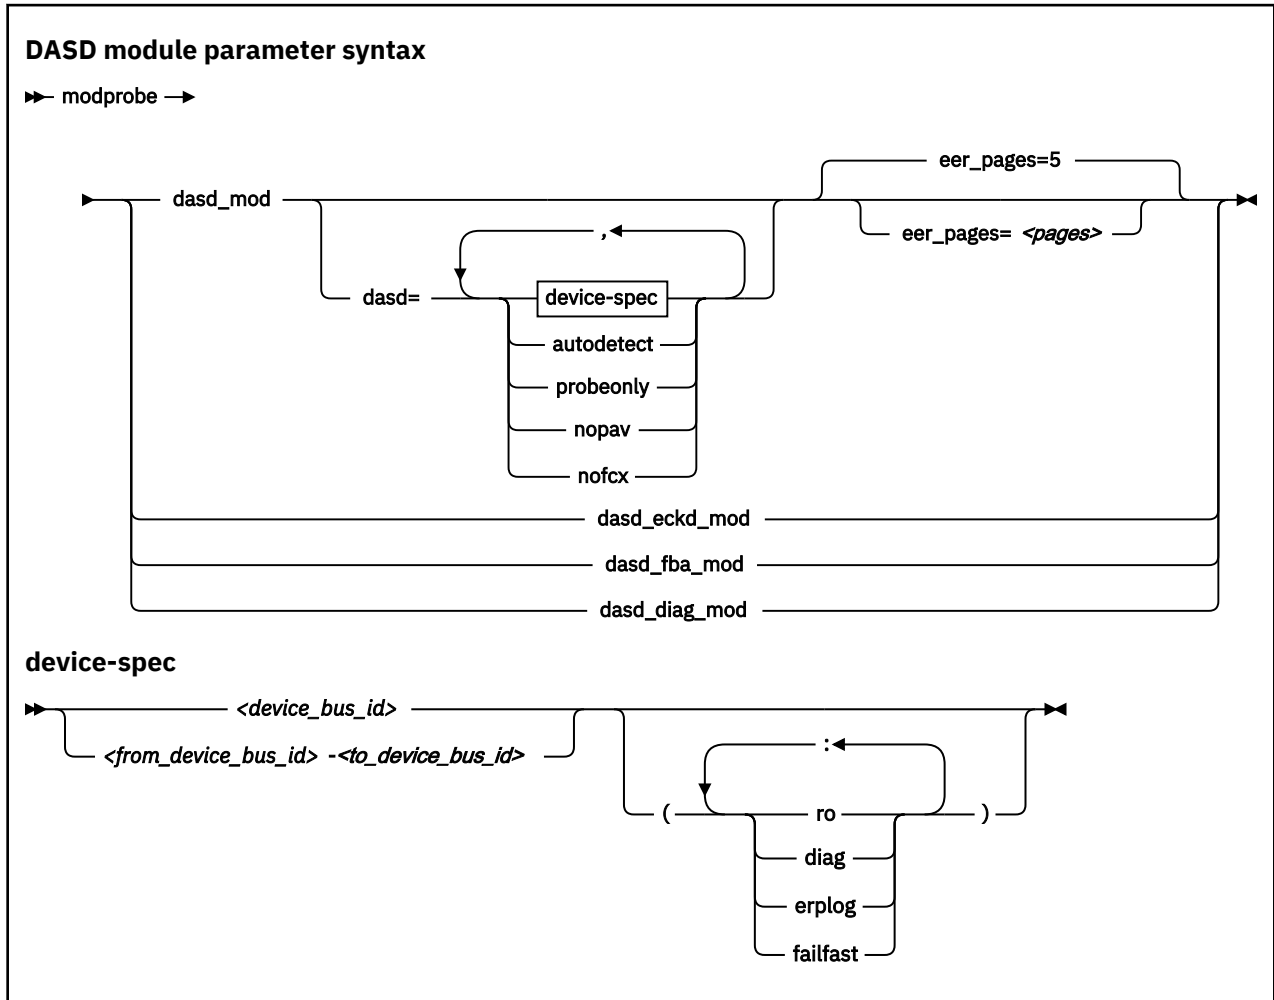

Where:

### **dasd\_mod**

loads the device driver base module.

When you are loading the base module you can specify the `dasd=` parameter.

You can use the `eer_pages` parameter to determine the number of pages that are used for internal buffering of error records.

### **autodetect**

causes the DASD device driver to allocate device names and the corresponding minor numbers to all DASD devices and set them online during the boot process. See [“DASD naming scheme” on page 120](#) for the naming scheme.

The device names are assigned in order of ascending subchannel numbers. Auto-detection can yield confusing results if you change your I/O configuration and reboot, or if your Linux instance runs as a z/VM guest because the devices might appear with different names and minor numbers after rebooting.

### **probeonly**

causes the DASD device driver to reject any "open" syscall with EPERM.



**autodetect,probeonly**

causes the DASD device driver to assign device names and minor numbers as for auto-detect. All devices regardless of whether they are accessible as DASD return EPERM to any "open" requests.

**nopav**

suppresses parallel access volume (PAV and HyperPAV) enablement for Linux instances that run in LPAR mode. The **nopav** keyword has no effect for Linux on z/VM.

**nofcx**

suppresses accessing the storage server with the I/O subsystem in transport mode (also known as High Performance FICON).

**<device\_bus\_id>**

specifies a single DASD.

**<from\_device\_bus\_id>-<to\_device\_bus\_id>**

specifies the first and last DASD in a range. All DASD devices with bus IDs in the range are selected. The device bus-IDs *<from\_device\_bus\_id>* and *<to\_device\_bus\_id>* need not correspond to actual DASD.

**(ro)**

accesses the specified device or device range in read-only mode.

**(diag)**

forces the device driver to access the device (range) with the DIAG access method.

**(erplog)**

enables enhanced error recovery processing (ERP) related logging through syslogd. If **erplog** is specified for a range of devices, the logging is switched on during device initialization.

**(failfast)**

immediately returns "failed" for an I/O operation when the last path to a DASD is lost.



**Attention:** Enable immediate failure of I/O requests only in setups where a failed I/O request can be recovered outside the scope of a single DASD (see [“Enabling and disabling immediate failure of I/O requests”](#) on page 134).

**dasd\_eckd\_mod**

loads the ECKD module.

**dasd\_fba\_mod**

loads the FBA module.

**dasd\_diag\_mod**

loads the DIAG module.

If you supply a DASD module parameter with device specifications `dasd=<device-list1>,<device-list2> . . .`, the device names and minor numbers are assigned in the order in which the devices are specified. The names and corresponding minor numbers are always assigned, even if the device is not present, or not accessible. For information about including device specifications in a boot configuration, see [“Including parameters for modules in a boot configuration”](#) on page 28.

If you use **autodetect** in addition to explicit device specifications, device names are assigned to the specified devices first and device-specific parameters, like **ro**, are honored. The remaining devices are handled as described for **autodetect**.

The DASD base component is required by the other modules. **modprobe** takes care of this dependency for you and ensures that the base module is loaded automatically, if necessary.

**Hint:** **modprobe** might return before udev has created all device nodes for the specified DASDs. If you need to assure that all nodes are present, for example in scripts, follow the **modprobe** command with:

```
# udevadm settle
```

For command details see the **modprobe** man page.

## Example

The following example specifies a range of DASD devices and two individual DASD devices:

```
modprobe dasd_mod dasd=0.0.7000-0.0.7002,0.0.7005(ro),0.0.7006
```

Table 16 on page 126 shows the resulting allocation of device names:

*Table 16. Example mapping of device names to devices*

Name	To access
dasda	device 0.0.7000 as a whole
dasda1	the first partition on 0.0.7000
dasda2	the second partition on 0.0.7000
dasda3	the third partition on 0.0.7000
dasdb	device 0.0.7001 as a whole
dasdb1	the first partition on 0.0.7001
dasdb2	the second partition on 0.0.7001
dasdb3	the third partition on 0.0.7001
dasdc	device 0.0.7002 as a whole
dasdc1	the first partition on 0.0.7002
dasdc2	the second partition on 0.0.7002
dasdc3	the third partition on 0.0.7002
dasdd	device 0.0.7005 as a whole
dasdd1	the first partition on 0.0.7005 (read-only)
dasdd2	the second partition on 0.0.7005 (read-only)
dasdd3	the third partition on 0.0.7005 (read-only)
dasde	device 0.0.7006 as a whole
dasde1	the first partition on 0.0.7006
dasde2	the second partition on 0.0.7006
dasde3	the third partition on 0.0.7006

The following example specifies that High Performance FICON are to be suppressed for all DASDs:

```
modprobe dasd_mod dasd=nofcx,4711-4713
```

## Working with DASDs

You might have to prepare DASD for use, configure troubleshooting functions, or configure special device features for your DASDs.

Most of the following tasks involve writing to and reading from device attributes in sysfs. This method is useful on a running system where you want to make dynamic changes. For changes that persist across IPLs, use the configuration file `/etc/zip1.conf` for DASDs that are part of the root file system and `/etc/dasd.conf` for data disks. An example of how to define a DASD device persistently is included in the installation documentation on the Red Hat documentation website. A general discussion of configuration files can also be found there, see

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux).

See “Working with newly available devices” on page 10 to avoid errors when you are working with devices that have become available to a running Linux instance.

- “Preparing an ECKD type DASD for use” on page 127
- “Preparing an FBA-type DASD for use” on page 128
- “Accessing DASD by force” on page 129
- “Enabling the DASD device driver to use the DIAG access method” on page 130
- “Using extended error reporting for ECKD type DASD” on page 131
- “Setting a DASD online or offline” on page 132
- “Enabling and disabling logging” on page 133
- “Enabling and disabling immediate failure of I/O requests” on page 134
- “Setting the timeout for I/O requests” on page 134
- “Working with DASD statistics in debugfs” on page 135
- “Accessing full ECKD tracks” on page 139
- “Handling lost device reservations” on page 141
- “Reading and resetting the reservation state” on page 142
- “Setting defective channel paths offline automatically” on page 143
- “Querying the HPF setting of a channel path” on page 144
- “Checking for access by other operating system instances” on page 145
- “Displaying DASD information” on page 146

## Preparing an ECKD type DASD for use

Before you can use an ECKD type DASD as a disk for Linux on Z, you must format it with a suitable disk layout. You must then create a file system or define a swap space.

### Before you begin

- The modules for the base component and the ECKD component of the DASD device driver must have been loaded.
- The DASD device driver must have recognized the device as an ECKD type device.
- You must know the device bus-ID for your DASD.

### About this task

If you format the DASD with the compatible disk layout, you must create one, two, or three partitions. You can then use your partitions as swap areas or to create a Linux file system.

### Procedure

Perform these steps to prepare the DASD:

1. Issue **lsdasd** (see “[lsdasd - List DASD devices](#)” on page 585) to find out if the device is online.  
If necessary, set the device online using **chccwdev** (see “[chccwdev - Set CCW device attributes](#)” on page 502).

#### Example:

```
# chccwdev -e 0.0.b100
```

2. Format the device with the **dasdfmt** command (see “[dasdfmt - Format a DASD](#)” on page 540 for details). The formatting process can take hours for large DASDs.

If you want to use the CMS disk layout, and your DASD is already formatted with the CMS disk layout, skip this step.

**Tips:**

- Use the largest possible block size, ideally 4096; the net capacity of an ECKD DASD decreases for smaller block sizes. For example, a DASD formatted with a block size of 512 byte has only half of the net capacity of the same DASD formatted with a block size of 4096 byte.
- For DASDs that have previously been formatted with the `cd1` or `ld1` disk layout, use the **`dasdfmt`** quick format mode.
- Use the **`-p`** option to display a progress bar.

**Example:** Assuming that `/dev/dasdzzz` is a valid device node for 0.0.b100:

```
# dasdfmt -b 4096 -p /dev/dasdzzz
```

3. Proceed according to your chosen disk layout:

- If you have formatted your DASD with the Linux disk layout or the CMS disk layout, skip this step and continue with step “4” on page 128. You already have one partition and cannot add further partitions on your DASD.
- If you have formatted your DASD with the compatible disk layout use the **`fdasd`** command to create up to three partitions (see “`fdasd – Partition a DASD`” on page 557 for details).

**Example:** To start the partitioning tool in interactive mode for partitioning a device `/dev/dasdzzz` issue:

```
# fdasd /dev/dasdzzz
```

If you create three partitions for a DASD `/dev/dasdzzz`, the device nodes for the partitions are `/dev/dasdzzz1`, `/dev/dasdzzz2`, and `/dev/dasdzzz3`.

**Result:** **`fdasd`** creates the partitions and updates the partition table (see “`VTOC`” on page 118).

4. Depending on the intended use of each partition, create a file system on the partition or define it as a swap space.

- Either, create a file system. For example, use the Linux **`mkfs.ext4`** command to create an ext4 file system (see the man page for details).

**Note:** Do not make the block size of the file system smaller than the block size that was used for formatting the disk with the **`dasdfmt`** command.

**Example:**

```
# mkfs.ext4 -b 4096 /dev/dasdzzz1
```

- Or define the partition as a swap space with the **`mkswap`** command (see the man page for details).
5. Mount each file system to the mount point of your choice in Linux and enable your swap partitions.

**Example:** To mount a file system in a partition `/dev/dasdzzz1` to a mount point `/mnt` and to enable a swap partition `/dev/dasdzzz2` issue:

```
# mount /dev/dasdzzz1 /mnt
# swapon /dev/dasdzzz2
```

## Preparing an FBA-type DASD for use

Before you can use an FBA-type DASD as a disk for Linux on Z, you must create a file system or define a swap space.

## Before you begin

- The modules for the base component and the FBA component of the DASD device driver must have been loaded.
- The DASD device driver must have recognized the device as an FBA device.
- You must know the device bus-ID or the device node through which the DASD can be addressed.

## Procedure

Perform these steps to prepare the DASD:

1. Depending on the intended use of the partition, create a file system on it or define it as a swap space.
  - Either create a file system, for example, with the Linux **mke2fs** command (see the man page for details).

### Example:

```
# mke2fs -b 4096 /dev/dasdzy1
```

- Or define the partition as a swap space with the **mkswap** command (see the man page for details).
2. Mount the file system to the mount point of your choice in Linux or enable your swap partition.

**Tip:** Mount file systems on FBA devices that are backed by z/VM VDISKs with the **discard** mount option. This option frees memory when data is deleted from the device.

### Examples:

- To mount a file system in a partition `/dev/dasdzy1`, issue:

```
# mount /dev/dasdzy1 /mnt
```

- To mount a VDISK-backed file system in a partition `/dev/dasdzx1`, and use the **discard** option to free memory when data is deleted, issue:

```
# mount -o discard /dev/dasdzx1 /mnt
```

## What to do next

To access FBA devices, use the DIAG access method (see [“Enabling the DASD device driver to use the DIAG access method”](#) on page 130 for more information).

## Accessing DASD by force

A Linux instance can encounter DASDs that are locked by another system. Such a DASD is referred to as "externally locked" or "boxed". The Linux instance cannot analyze a DASD while it is externally locked.

### About this task

To check whether a DASD has been externally locked, read its availability attribute. This attribute should be "good". If it is "boxed", the DASD has been externally locked. Because a boxed DASD might not be recognized as DASD, it might not show up in the device driver view in `sysfs`. If necessary, use the device category view instead (see [“Device views in `sysfs`”](#) on page 11).



**CAUTION:** Breaking an external lock can have unpredictable effects on the system that holds the lock.

## Procedure

1. Optional: To read the availability attribute of a DASD, issue a command of this form:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/availability
```

**Example:** This example shows that a DASD with device bus-ID 0.0.b110 (device number 0xb110) has been externally locked.

```
# cat /sys/bus/ccw/devices/0.0.b110/availability  
boxed
```

If the DASD is an ECKD type DASD and if you know the device bus-ID, you can break the external lock and set the device online. This means that the lock of the external system is broken with the "unconditional reserve" channel command.

2. To force a boxed DASD online, write `force` to the online device attribute. Issue a command of this form:

```
# echo force > /sys/bus/ccw/devices/<device_bus_id>/online
```

**Example:** To force a DASD with device number 0xb110 online issue:

```
# echo force > /sys/bus/ccw/devices/0.0.b110/online
```

## Results

If the external lock is successfully broken or if the lock has been surrendered by the time the command is processed, the device is analyzed and set online. If it is not possible to break the external lock (for example, because of a timeout, or because it is an FBA-type DASD), the device remains in the boxed state. This command might take some time to complete.

For information about breaking the lock of a DASD that has already been analyzed see [“tunedasd - Adjust low-level DASD settings”](#) on page 647.

## Enabling the DASD device driver to use the DIAG access method

Linux on z/VM can use the DIAG access method to access DASDs with the help of z/VM functions.

### Before you begin

This section applies only to Linux instances and DASD for which all of the following conditions are true:

- The Linux instance runs as a z/VM guest.
- The device can be of type ECKD with either LDL or CMS disk layout, or it can be a device of type FBA.
- The module for the DIAG component must be loaded.
- The module for the component that corresponds to the DASD type (`dasd_eckd_mod` or `dasd_fba_mod`) must be loaded.
- The DASD is offline.
- The DASD does not represent a parallel access volume alias device.

### About this task

You can use the DIAG access method to access both ECKD and FBA-type DASD. You use the device's `use_diag` sysfs attribute to enable or switch off the DIAG access method in a system that is online. Set the `use_diag` attribute to 1 to enable the DIAG access method. Set the `use_diag` attribute to 0 to switch off the DIAG access method (this is the default).

Alternatively, you can specify `diag` on the command line, for example during IPL, to force the device driver to access the device (range) with the DIAG access method.

### Procedure

Issue a command of this form:

```
# echo <flag> > /sys/bus/ccw/devices/<device_bus_id>/use_diag
```

where `<device_bus_id>` identifies the DASD.

If the DIAG access method is not available and you set the `use_diag` attribute to 1, you cannot set the device online (see “Setting a DASD online or offline” on page 132).

**Note:** When switching between an enabled and a disabled DIAG access method on FBA-type DASD, first reinitialize the DASD, for example, with CMS format or by overwriting any previous content. Switching without initialization might cause data-integrity problems.

For more details about DIAG, see *z/VM: CP Programming Services*, SC24-6272.

### Example

In this example, the DIAG access method is enabled for a DASD with device number 0xb100.

1. Ensure that the driver is loaded:

```
# modprobe dasd_diag_mod
```

2. Identify the sysfs CCW-device directory for the device in question and change to that directory:

```
# cd /sys/bus/ccw/devices/0.0.b100/
```

3. Ensure that the device is offline:

```
# echo 0 > online
```

4. Enable the DIAG access method for this device by writing '1' to the `use_diag` sysfs attribute:

```
# echo 1 > use_diag
```

5. Use the online attribute to set the device online:

```
# echo 1 > online
```

## Using extended error reporting for ECKD type DASD

Control the extended error reporting feature for individual ECKD type DASD through the `eer_enabled` sysfs attribute. Use the character device of the extended error reporting module to obtain error records.

### Before you begin

To use the extended error reporting feature, you need ECKD type DASD

### About this task

The extended error reporting feature is turned off by default.

### Procedure

To enable extended error reporting, issue a command of this form:

```
# echo 1 > /sys/bus/ccw/devices/<device_bus_id>/eer_enabled
```

where `/sys/bus/ccw/devices/<device_bus_id>` represents the device in sysfs.

When it is enabled on a device, a specific set of errors generates records and might have further side effects.

Disable extended error reporting, issue a command of this form:

```
# echo 0 > /sys/bus/ccw/devices/<device_bus_id>/eer_enabled
```

## What to do next

You can obtain error records for all DASD for which extended error reporting is enabled from the character device of the extended error reporting module, `/dev/dasd_eer`. The device supports these file operations:

### open

Multiple processes can open the node concurrently. Each process that opens the node has access to the records that are created from the time the node is opened. A process cannot access records that were created before the process opened the node.

### close

You can close the node as usual.

### read

Blocking read and non-blocking read are supported. When a record is partially read and then purged, the next read returns an I/O error -EIO.

### poll

The poll operation is typically used with non-blocking read.

## Setting a DASD online or offline

Use the **chzdev** command, the **chccwdev** command, or the `online` sysfs attribute of the device to set DASDs online or offline.

### About this task

When Linux boots, it senses your DASD. Depending on your specification for the `"dasd="` parameter, it automatically sets devices online.

### Procedure

Use the **chzdev** command ([“chzdev - Configure IBM Z devices” on page 515](#)) to set a DASD online or offline.

Alternatively, use the **chccwdev** command, or write `1` to the device's `sysfs` `online` attribute to set it online or `0` to set it offline. In contrast to the `sysfs` attribute, the **chccwdev** command triggers a `cio_settle` for you and waits for the `cio_settle` to complete.

Outstanding I/O requests are canceled when you set a device offline. To wait indefinitely for outstanding I/O requests to complete before setting the device offline, use the **chccwdev** option `--safeoffline` or the `sysfs` attribute `safe_offline.fcp_`. The **chzdev** command uses `safe offline` (if available), unless you specify the `--force` option.

When you set a DASD offline, the deregistration process is synchronous, unless the device is disconnected. For disconnected devices, the deregistration process is asynchronous.

### Examples

- To set a DASD with device bus-ID `0.0.b100` online, issue:

```
# chzdev -e dasd 0.0.b100 --active
```

or

```
# chccwdev -e 0.0.b100
```

or

```
# echo 1 > /sys/bus/ccw/devices/0.0.b100/online
```

- To set a DASD with device bus-ID `0.0.b100` offline, issue:



```
# chzdev -d dasd 0.0.b100 --active
```

or

```
# chccwdev -d 0.0.b100
```

or

```
# echo 0 > /sys/bus/ccw/devices/0.0.b100/online
```

- To complete outstanding I/O requests and then set a DASD with device bus-ID 0.0.4711 offline, issue:

```
# chccwdev -s 0.0.4711
```

or

```
# echo 1 > /sys/bus/ccw/devices/0.0.4711/safe_offline
```

If an outstanding I/O request is blocked, the command might wait forever. Reasons for blocked I/O requests include reserved devices that can be released or disconnected devices that can be reconnected.

1. Try to resolve the problem that blocks the I/O request and wait for the command to complete.
2. If you cannot resolve the problem, issue `chccwdev -d` to cancel the outstanding I/O requests. The data is lost.

### **Dynamic attach and detach**

You can dynamically attach devices to a running Red Hat Enterprise Linux 8.1 for Z instance, for example, from z/VM.

When a DASD is attached, Linux attempts to initialize it according to the DASD device driver configuration. You can then set the device online. You can automate setting dynamically attached devices online by using CCW hotplug events (see [“CCW hotplug events” on page 18](#)).



**Attention:** Do not detach a device that is still being used by Linux. Detaching devices might cause the system to hang or crash. Ensure that you unmount a device and set it offline before you detach it.

See [“Working with newly available devices” on page 10](#) to avoid errors when working with devices that have become available to a running Linux instance.

Be careful to avoid errors when working with devices that have become available to a running Linux instance.

## **Enabling and disabling logging**

Use the `dasd=` kernel or module parameter or use the `explog` sysfs attribute to enable or disable error recovery processing (ERP) logging.

### **Procedure**

You can enable and disable error recovery processing (ERP) logging on a running system. There are two methods:

- Use the `dasd=` parameter when you load the base module of the DASD device driver.

#### **Example:**

To define a device range (0.0.7000-0.0.7005) and enable, change the parameter line to contain:

```
dasd=0.0.7000-0.0.7005(explog)
```

- Use the sysfs attribute `explog` to turn ERP-related logging on or off. Logging can be enabled for a specific device by writing 1 to the `explog` attribute.

**Example:**

```
echo 1 > /sys/bus/ccw/devices/<device_bus_id>/explog
```

To disable logging, write 0 to the `explog` attribute.

**Example:**

```
echo 0 > /sys/bus/ccw/devices/<device_bus_id>/explog
```

## Enabling and disabling immediate failure of I/O requests

Prevent devices in mirror setups from being blocked while paths are unavailable by making I/O requests fail immediately.

### About this task

By default, if all path have been lost for a DASD, the corresponding device in Linux waits for one of the paths to recover. I/O requests are blocked while the device is waiting.

If the DASD is part of a mirror setup, this blocking might cause the entire virtual device to be blocked. You can use the `failfast` attribute to immediately return I/O requests as failed while no path to the device is available.



**Attention:** Use this attribute with caution and only in setups where a failed I/O request can be recovered outside the scope of a single DASD.

### Procedure

Use one of these methods:

- You can enable immediate failure of I/O requests when you load the base module of the DASD device driver.

**Example:**

To define a device range (0.0.7000-0.0.7005) and enable immediate failure of I/O requests specify:

```
dasd=0.0.7000-0.0.7005(failfast)
```

- You can use the sysfs attribute `failfast` of a DASD to enable or disable immediate failure of I/O requests on or off.

To enable immediate failure of I/O requests, write 1 to the `failfast` attribute.

**Example:**

```
echo 1 > /sys/bus/ccw/devices/<device_bus_id>/failfast
```

To disable immediate failure of I/O requests, write 0 to the `failfast` attribute.

**Example:**

```
echo 0 > /sys/bus/ccw/devices/<device_bus_id>/failfast
```

## Setting the timeout for I/O requests

The timeout specifies how long Linux is to wait for a response from a storage server before it considers an I/O requests failed and cancels it.

## About this task

The default timeout for DASD I/O requests depends on the type of DASD:

### ECKD

uses the default that is provided by the storage server.

### FBA

300 s

### DIAG

50 s

## Procedure

You can use the `expires` attribute of a DASD to change the timeout value for that DASD.

1. To find out the current timeout value issue a command of this form:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/expires
```

2. To set the timeout to a different value issue a command of this form:

```
# echo <timeout> > /sys/bus/ccw/devices/<device_bus_id>/expires
```

where:

#### <timeout>

is the new timeout value in seconds. The value must be an integer in the range 1 - 40,000,000.

#### <device\_bus\_id>

is the device bus-ID of the DASD.

## Example

This example reads the current timeout value and then sets it to 120 s.

```
# cat /sys/bus/ccw/devices/0.0.7008/expires
30
# echo 120 > /sys/bus/ccw/devices/0.0.7008/expires
```

## Working with DASD statistics in debugfs

Gather DASD statistics and display the data with the **dasdstat** command.

### Before you begin

Instead of accessing raw DASD performance data in debugfs, you can use the **dasdstat** command to obtain more structured data (see [“dasdstat - Display DASD performance statistics”](#) on page 545).

## About this task

The DASD performance data is contained in the following subdirectories of `<mountpoint>/dasd`, where `<mountpoint>` is the mount point of debugfs:

- A directory `global` that represents all available DASDs taken together.
- For each DASD, one directory with the name of the DASD block device with which the DASD is known to the DASD device driver (for example, `dasda`, `dasdb`, and `dasdc`).
- For each CCW device that corresponds to a DASD, a directory with the bus ID as the name.

Block devices that are not set up for PAV or HyperPAV map to exactly one CCW device and the corresponding directories contain the same statistics.

With PAV or HyperPAV, a bus ID can represent a base device or an alias device. Each base device is associated with a particular block device. The alias devices are not permanently associated with the

same block device. At any one time, a DASD block device is associated with one or more CCW devices. Statistics that are based on bus ID, therefore, show more detail for PAV and HyperPAV setups.

Each of these directories contains a file statistics that you can use to perform these tasks:

- Start and stop data gathering.
- Reset statistics counters.
- Read statistics.

To control data gathering at the scope of a directory in `<mountpoint>/dasd`, issue a command of this form:

```
# echo <keyword> > <mountpoint>/dasd/<directory>/statistics
```

Where:

**<directory>**

is one of the directories in `<mountpoint>/dasd`.

**<keyword>**

specifies the action to be taken:

**on**

to start data gathering.

**off**

to stop data gathering.

**reset**

to reset the statistics counters.

To read performance data, issue a command of this form:

```
# cat <mountpoint>/dasd/<directory>/statistics
```

**Examples for gathering and reading DASD statistics in debugfs**

Use the **echo** command to start and stop data gathering for individual devices or across all DASDs. Use the **cat** command to access the raw performance data.

The following examples assume that debugfs is mounted at `/sys/kernel/debug`, see [“debugfs” on page xi](#).

- To start data gathering for summary data across all available DASDs:

```
# echo on > /sys/kernel/debug/dasd/global/statistics
```

- To stop data gathering for block device dasdb:

```
# echo off > /sys/kernel/debug/dasd/dasdb/statistics
```

- To reset the counters for CCW device 0.0.b301:

```
# echo reset > /sys/kernel/debug/dasd/0.0.b301/statistics
```

- To read performance data for dasda, assuming that the debugfs mount point is `/sys/kernel/debug`, issue:



often the queue contained one request, and the n-th value shows how often the queue contained n-1 requests.

**histogram\_ccw\_queue\_length**

is the histogram data for all requests, read and write.

**histogram\_read\_ccw\_queue\_length**

is the histogram data for read requests only.

**Logarithmic histograms**

have a series of 32 integers as the statistics data. The integers represent a histogram with a logarithmic scale:

- The first integer always represents all measures of fewer than 4 units
- The second integer represents measures of 4 or more but less than 8 units
- The third integer represents measures of 8 or more but less than 16 units
- The n-th integer ( $1 < n < 32$ ) represents measures of  $2^n$  or more but less than  $2^{n+1}$  units
- The 32nd integer represents measures of  $2^{32}$  ( $= 4G = 4,294,967,296$ ) units or more.

The following rows show data for the sum of all requests, read and write:

**histogram\_sectors**

is the histogram data for request sizes. A unit is a 512-byte sector.

**histogram\_io\_times**

is the histogram data for the total time that is needed from creating the cqr to its completion in the DASD device driver and return to the block layer. A unit is a microsecond.

**histogram\_io\_times\_weighted**

is the histogram data of the total time, as measured for histogram\_io\_times, divided by the requests size in sectors. A unit is a microsecond per sector.

This metric is deprecated and there is no corresponding histogram data for read requests.

**histogram\_time\_build\_to\_ssck**

is the histogram data of the time that is needed from creating the cqr to submitting the request to the subchannel. A unit is a microsecond.

**histogram\_time\_ssck\_to\_irq**

is the histogram data of the time that is needed from submitting the request to the subchannel until an interrupt indicates that the request has been completed. A unit is a microsecond.

**histogram\_time\_ssck\_to\_irq\_weighted**

is the histogram data of the time that is needed from submitting the request to the subchannel until an interrupt indicates that the request has been completed, divided by the request size in 512-byte sectors. A unit is a microsecond per sector.

This metric is deprecated and there is no corresponding histogram data for read requests.

**histogram\_time\_irq\_to\_end**

is the histogram data of the time that is needed from return of the request from the channel subsystem, until the request is returned to the block layer. A unit is a microsecond.

The following rows show data for read requests only:

**histogram\_read\_sectors**

is the histogram data for read request sizes. A unit is a 512-byte sector.

**histogram\_read\_io\_times**

is the histogram data, for read requests, for the total time that is needed from creating the cqr to its completion in the DASD device driver and return to the block layer. A unit is a microsecond.

**histogram\_read\_time\_build\_to\_ssck**

is the histogram data, for read requests, of the time that is needed from creating the cqr to submitting the request to the subchannel. A unit is a microsecond.

**histogram\_read\_time\_ssch\_to\_irq**

is the histogram data, for read requests, of the time that is needed from submitting the request to the subchannel until an interrupt indicates that the request has been completed. A unit is a microsecond.

**histogram\_read\_time\_irq\_to\_end**

is the histogram data, for read requests, of the time that is needed from return of the request from the channel subsystem, until the request is returned to the block layer. A unit is a microsecond.

**Scenario: Verifying that PAV and HPF are used**

Use the **dasdstat** command to display DASD performance statistics, including statistics about Parallel Access Volume (PAV) and High Performance FICON (HPF).

**Procedure**

1. Enable DASD statistics for the device of interest.

**Example:**

```
# dasdstat -e dasdc
enable statistic "/sys/kernel/debug/dasd/dasdc/statistics"
```

2. Assure that I/O requests are directed to the device.

**Hints:**

- Access a partition, rather than the whole device, to avoid directing the I/O request towards the first 2 tracks of a CDL formatted DASD. Requests to the first 2 tracks of a CDL formatted DASD are exceptional in that they never use High Performance FICON.
- Assure that a significant I/O load is applied to the device. PAV aliases are used only if multiple I/O requests for the device are processed simultaneously.

**Example:**

```
# dd if=/dev/dasdc1 of=/dev/null bs=4k count=256
```

3. Look for PAV and HPF in the statistics.

**Example:**

```
# dasdstat dasdc
-----
statistics data for statistic: dasdc
start time of data collection: Fri Dec 11 14:22:18 CET 2015

7 dasd I/O requests
with 4000 sectors(512B each)
3 requests used a PAV alias device
7 requests used HPF
```

In the example, dasdc uses both Parallel Access Volume and High Performance FICON.

**Accessing full ECKD tracks**

In raw-track access mode, the DASD device driver accesses full ECKD tracks, including record zero and the count and key data fields.

**Before you begin**

- This section applies to ECKD type DASD only.
- The DASD must be offline when you change the access mode.
- The DIAG access method must not be enabled for the device.

## About this task

With this mode, Linux can access an ECKD device regardless of the track layout. In particular, the device does not need to be formatted for Linux.

For example, with raw-track access mode Linux can create a backup copy of any ECKD device. Full-track access can also enable a special program that runs on Linux to access and process data on an ECKD device that is not formatted for Linux.

By default, the DASD device driver accesses only the data fields of ECKD devices. In default access mode, you can work with partitions, file systems, and files in the file systems on the DASD.

When using a DASD in raw-track access mode be aware that:

- In memory, each track is represented by 64 KB of data, even if the track occupies less physical disk space. Therefore, a disk in raw-track access mode appears bigger than in default mode.
- Programs must write and should read data in multiples of complete 64 KB tracks. The minimum is a single track. The maximum is eight tracks by default but can be extended to up to 16 tracks.

The maximum number of tracks depends on the maximum number of sectors as specified in the `max_sectors_kb` sysfs attribute of the DASD. This attribute is located in the block device branch of sysfs at `/sys/block/dasd<x>/queue/max_sectors_kb`. In the path, `dasd<x>` is the device name assigned by the DASD device driver.

To extend the maximum beyond eight tracks, set the `max_sectors_kb` to the maximum amount of data to be processed in a single read or write operation. For example, to extend the maximum to reading or writing 16 tracks at a time, set `max_sectors_kb` to 1024 (16 x 64).

- Programs must write only valid ECKD tracks of 64 KB.
- Programs must use direct I/O to prevent the Linux block layer from splitting tracks into fragments. Open the block device with option `O_DIRECT` or work with programs that use direct I/O.

For example, the options `iflag=direct` and `oflag=direct` cause **dd** to use direct I/O. When using **dd**, also specify the block size with the `bs=` option. The block size determines the number of tracks that are processed in a single I/O operation. The block size must be a multiple of 64 KB and can be up to 1024 KB. Specifying a larger block size often results in better performance. If you receive disk image data from a pipe, also use the option `iflag=fullblock` to ensure that full blocks are written to the DASD device.

Tools cannot directly work with partitions, file systems, or files within a file system. For example, **fdasd** and **dasdfmt** cannot be used.

## Procedure

To change the access mode, issue a command of this form:

```
# echo <switch> > /sys/bus/ccw/devices/<device_bus_id>/raw_track_access
```

where:

**<switch>**

is 1 to activate raw data access and 0 to deactivate raw data access.

**<device\_bus\_id>**

identifies the DASD.

## Example

The following example creates a backup of a DASD 0.0.7009 on a DASD 0.0.70a1.

The initial commands ensure that both devices are offline and that the DIAG access method is not enabled for either of them. The subsequent commands activate the raw-track access mode for the two devices and set them both online. The **lsdasd** command that follows shows the mapping between device bus-IDs and device names.



The **dd** command for the copy operation specifies direct I/O for both the input and output device and the block size of 1024 KB. After the copy operation is completed, both devices are set offline. The access mode for the original device is then set back to the default and the device is set back online.

```
#cat /sys/bus/ccw/devices/0.0.7009/online
1
# chccwdev -d 0.0.7009
# cat /sys/bus/ccw/devices/0.0.7009/use_diag
0
# cat /sys/bus/ccw/devices/0.0.70a1/online
0
# cat /sys/bus/ccw/devices/0.0.70a1/use_diag
0
# echo 1 > /sys/bus/ccw/devices/0.0.7009/raw_track_access
# echo 1 > /sys/bus/ccw/devices/0.0.70a1/raw_track_access
# chccwdev -e 0.0.7009,0.0.70a1
# lsdasd 0.0.7009 0.0.70a1
Bus-ID      Status      Name          Device Type BlkSz  Size    Blocks
=====
0.0.7009    active      dasdf         94:20  ECKD  4096   7043MB  1803060
0.0.70a1    active      dasdj         94:36  ECKD  4096   7043MB  1803060
# echo 1024 > /sys/block/dasdf/queue/max_sectors_kb
# echo 1024 > /sys/block/dasdj/queue/max_sectors_kb
# dd if=/dev/dasdf of=/dev/dasdj bs=1024k iflag=direct oflag=direct
# chccwdev -d 0.0.7009,0.0.70a1
# echo 0 > /sys/bus/ccw/devices/0.0.7009/raw_track_access
# chccwdev -e 0.0.7009
```

## Handling lost device reservations

A DASD reservation by your Linux instance can be lost if another system unconditionally reserves this DASD.

### About this task

This other system then has exclusive I/O access to the DASD for the duration of the unconditional reservation. Such unconditional reservations can be useful for handling error situations where:

- Your Linux instance cannot gracefully release the DASD.
- Another system requires access to the DASD, for example, to perform recovery actions.

After the DASD is released by the other system, your Linux instance might process pending I/O requests and write faulty data to the DASD. How to prevent pending I/O requests from being processed depends on the reservation policy. There are two reservation policies:

#### ignore

All I/O operations for the DASD are blocked until the DASD is released by the second system. When using this policy, reboot your Linux instance before the other system releases the DASD. This policy is the default.

#### fail

All I/O operations are returned as failed until the DASD is set offline or until the reservation state is reset. When using this policy, set the DASD offline and back online after the problem is resolved. See [“Reading and resetting the reservation state” on page 142](#) about resetting the reservation state to resume operations.

### Procedure

Set the reservation policy with a command of this form:

```
# echo <policy> > /sys/bus/ccw/devices/<device_bus_id>/reservation_policy
```

where:

**<device\_bus\_id>**

specifies the DASD.

### <policy>

is one of the available policies, ignore or fail.

### Examples

- The command of this example sets the reservation policy for a DASD with bus ID 0.0.7009 to fail.

```
# echo fail > /sys/bus/ccw/devices/0.0.7009/reservation_policy
```

- This example shows a small scenario. The first two commands confirm that the reservation policy of the DASD is fail and that the reservation has been lost to another system. Assuming that the error that had occurred has already been resolved and that the other system has released the DASD, operations with the DASD are resumed by setting it offline and back online.

```
# cat /sys/bus/ccw/devices/0.0.7009/reservation_policy
fail
# cat /sys/bus/ccw/devices/0.0.7009/last_known_reservation_state
lost
# chccwdev -d 0.0.7009
# chccwdev -e 0.0.7009
```

## Reading and resetting the reservation state

How the DASD device driver handles I/O requests depends on the `last_known_reservation_state` sysfs attribute of the DASD.

### About this task

The `last_known_reservation_state` attribute reflects the reservation state as held by the DASD device driver and can differ from the actual reservation state. Use the **tunedasd -Q** command to find out the actual reservation state. The `last_known_reservation_state` sysfs attribute can have the following values:

#### none

The DASD device driver has no information about the device reservation state. I/O requests are processed as usual. If the DASD is reserved by another system, the I/O requests remain in the queue until they time out, or until the reservation is released.

#### reserved

The DASD device driver holds a valid reservation for the DASD and I/O requests are processed as usual. The DASD device driver changes this state if notified that the DASD is no longer reserved to this system. The new state depends on the reservation policy (see [“Handling lost device reservations” on page 141](#)).

#### ignore

The state is changed to none.

#### fail

The state is changed to lost.

#### lost

The DASD device driver had reserved the DASD, but subsequently another system has unconditionally reserved the DASD (see [“Handling lost device reservations” on page 141](#)). The device driver processes only requests that query the actual device reservation state. All other I/O requests for the device are returned as failed.

When the error that led another system to unconditionally reserve the DASD is resolved and the DASD has been released by this other system there are two methods for resuming operations:

- Setting the DASD offline and back online.
- Resetting the reservation state of the DASD.



**Attention:** Do not resume operations by resetting the reservation state unless your system setup maintains data integrity on the DASD despite:

- The I/O errors that are caused by the unconditional reservation
- Any changes to the DASD through the other system

You reset the reservation state by writing `reset` to the `last_known_reservation_state` sysfs attribute of the DASD. Resetting is possible only for the fail reservation policy (see [“Handling lost device reservations”](#) on page 141) and only while the value of the `last_known_reservation_state` attribute is `lost`.

To find out the reservation state of a DASD issue a command of this form:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/last_known_reservation_state
```

where `<device_bus_id>` specifies the DASD.

### Example

The command in this example queries the reservation state of a DASD with bus ID `0.0.7009`.

```
# cat /sys/bus/ccw/devices/0.0.7009/last_known_reservation_state
reserved
```

## Setting defective channel paths offline automatically

Control the automatic removal of defective channel paths through the `path_threshold`, `path_interval`, and `path_autodisable` sysfs attributes.

### About this task

A channel control check (CCC) is caused by any machine malfunction that affects channel-subsystem controls. An interface control check (IFCC) indicates that an incorrect signal occurred on the channel path. Usually, these errors can be recovered automatically.

However, if IFCC or CCC errors occur frequently on a particular channel path, these errors indicate a failure of this channel path. Error recovery processing on defective channel paths can result in performance degradation. If at least one operational channel path remains, overall device performance might improve if a defective channel path is excluded from I/O.

By default, automatic path removal is enabled with an error threshold of 256 and a reset interval of 300 s (5 minutes). Accordingly, a channel path is set offline automatically, when the error count reaches 256 and if at least one other channel path remains. If 300 seconds elapse without an error, the error count is reset to 0.

You can change the error threshold and reset interval, or you can prevent automatic removal of channel paths altogether.

### Procedure

- To specify the number of errors that must occur before the channel path is taken offline, issue a command of this form:

```
# echo <no_of_errors> > /sys/bus/ccw/devices/<device_bus_id>/path_threshold
```

where `/sys/bus/ccw/devices/<device_bus_id>` represents the device in sysfs and `<no_of_errors>` is an integer that specifies the error threshold.

To disable detecting defective paths, and to suppress messages about IFCC or CCC errors, set `<no_of_errors>` to 0.

- To specify the time that must elapse without errors to trigger a counter reset, issue a command of this form:

```
# echo <time> > /sys/bus/ccw/devices/<device_bus_id>/path_interval
```

where *<time>* is the reset interval in seconds.

- To prevent defective paths from being set offline automatically, issue a command of this form:

```
# echo <flag> > /sys/bus/ccw/devices/<device_bus_id>/path_autodisable
```

where *<flag>* can be "1" to enable automatic path removal, or "0" to prevent automatic path removal. By default, automatic path removal is enabled.

## Examples

- Setting 512 for the error threshold and 6 minutes (360 s) for the reset interval:

```
echo 512 > /sys/bus/ccw/devices/0.0.4711/path_threshold
echo 360 > /sys/bus/ccw/devices/0.0.4711/path_interval
```

According to this example, a channel path is automatically removed if a count of 512 IFCCs or CCCs is reached. Any 6-minute interval without a IFCCs or CCCs causes the counter to be reset to zero.

- Preventing automatic removal of defective channel paths:

```
# echo 0 > /sys/bus/ccw/devices/0.0.4711/path_autodisable
```

In this example, messages about defective paths are issued according to the settings for the error threshold and the reset interval, but defective paths are not removed automatically.

## What to do next

After you repair the faulty channel path, set it online again by using the **tunedasd** command with the **-p** option. See [“tunedasd - Adjust low-level DASD settings”](#) on page 647 for details.

## Querying the HPF setting of a channel path

Query the High Performance FICON (HPF) state of a channel path through the `hpfi` sysfs attribute. The HPF function can be lost if the device cannot provide the function, or if the channel path is not able to do HPF.

### About this task

The HPF channel-path is deactivated if an HPF error occurs indicating that HPF is not available if there are other channel paths available. If no other channel paths are available, the path remains operational with HPF deactivated.

If the device loses HPF functionality, HPF is disabled for all channel paths defined for the device.

### Procedure

To query the HPF function for a channel path, issue a command of this form:

```
# lsdasd -l <device_bus_id>
```

Alternatively, you can query the sysfs attribute directly:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/hpfi
```

where `/sys/bus/ccw/devices/<device_bus_id>` represents the device in sysfs.

## Example

To query the availability of HPF for a device 0.0.4711, issue:

```
lsdasd -l 0.0.4711
0.0.4711/dasdc/94:8
  status:          active
  type:            ECKD
  ...
  hpfi:            1
```

This example indicates that HPF is enabled for the device.

Alternatively, read from the hpfi sysfs attribute:

```
cat /sys/bus/ccw/devices/0.0.4712/hpfi
0
```

This example indicates that HPF is disabled for device 0.0.4712.

## What to do next

You can now reset the paths to the device. You can use the **tunedasd** command to reset all or one channel path.

To re-validate all paths for one device and if possible reset HPF:

```
# tunedasd --path_reset_all /dev/dasdc
Resetting all chpids for device </dev/dasdc>...
Done.
```

See [“tunedasd - Adjust low-level DASD settings” on page 647](#) for details.

You can also use sysfs to reset a path. sysfs expects a path mask. For example to reset CHPID 44, you can use **tunedasd**:

```
tunedasd -p 44 /dev/dasde
```

This would be the same as specifying the following in sysfs:

```
echo 08 > /sys/bus/ccw/devices/0.0.9330/path_reset
```

Both commands will reset CHPID 44 (path mask 08).

## Checking for access by other operating system instances

Query if a DASD volume is online to another operating system instance by reading the `host_access_count` attribute.

### Before you begin

To query the number of operating system instances that use the DASD device, the DASD must be online.

### About this task

Storage servers that support this feature know about the online status of the device on all attached operating system instances in an LPAR (so called hosts). If a DASD device is set online it might potentially be used on another operating system instance. This information can help to reduce the chance for outages or possible data corruption due to concurrent access to DASD volumes from different operating system instances.

## Procedure

To check whether a DASD device is being used by other operating system instances, issue a command of this form:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/host_access_count
```

where `/sys/bus/ccw/devices/<device_bus_id>` represents the device in sysfs.

For example, to query how many operating system instances have access to a device 0.0.bf45, issue:

```
# cat /sys/bus/ccw/devices/0.0.bf45/host_access_count
13
```

In the example, 13 operating system instances have access to the device, including the current Linux instance.

## What to do next

To see details for each host connected to the DASD device, use the **lsdasd** command with the `--host-access-list` option. For more information and an example, see [“lsdasd - List DASD devices” on page 585](#).

## Displaying DASD information

Use tools to display information about your DASDs, or read the attributes of the devices in sysfs.

### About this task

There are several methods to display DASD information:

- Use **lsdasd -l** (see [“lsdasd - List DASD devices” on page 585](#)) to display summary information about the device settings and the device geometry of multiple DASDs.
- Use **dasdview** (see [“dasdview - Display DASD structure” on page 547](#)) to display details about the contents of a particular DASD.
- Read information about a particular DASD from sysfs, as described in this section.

The sysfs representation of a DASD is a directory of the form `/sys/bus/ccw/devices/<device_bus_id>`, where `<device_bus_id>` is the bus ID of the DASD. This sysfs directory contains a number of attributes with information about the DASD.

Table 17. Attributes with DASD information

Attribute	Explanation
alias	<p>1 if the DASD is a parallel access volume (PAV) alias device. 0 if the DASD is a PAV base device or has not been set up as a PAV device.</p> <p>For an example of how to use PAV see <i>How to Improve Performance with PAV</i>, SC33-8414 on IBM Knowledge Center at <a href="https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_hp.html">https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_hp.html</a></p> <p>This attribute is read-only.</p>
discipline	<p>Indicates the base discipline, ECKD or FBA, that is used to access the DASD. If DIAG is enabled, this attribute might read DIAG instead of the base discipline.</p> <p>This attribute is read-only.</p>
eer_enabled	<p>1 if the DASD is enabled for extended error reporting, 0 if it is not enabled (see <a href="#">“Using extended error reporting for ECKD type DASD” on page 131</a>).</p>

Table 17. Attributes with DASD information (continued)

Attribute	Explanation
erplug	1 if error recovery processing (ERP) logging is enabled, 0 if ERP logging is not enabled (see <a href="#">“Enabling and disabling logging”</a> on page 133).
expires	Indicates the time, in seconds, that Linux waits for a response to an I/O request for the DASD. If this time expires, Linux considers a request as failed and cancels it (see <a href="#">“Setting the timeout for I/O requests”</a> on page 134).
failfast	1 if I/O operations are returned as failed immediately when the last path to the DASD is lost. 0 if a wait period for a path to return expires before an I/O operation is returned as failed. (see <a href="#">“Enabling and disabling immediate failure of I/O requests”</a> on page 134).
host_access_count	Shows how many operating system instances have access to the device. See <a href="#">“Checking for access by other operating system instances”</a> on page 145.
hpf	1 if High Performance FICON is available for the device. See <a href="#">“Querying the HPF setting of a channel path”</a> on page 144.
last_known_reservation_state	<p>The reservation state as held by the DASD device driver. Values can be:</p> <p><b>none</b> The DASD device driver has no information about the device reservation state.</p> <p><b>reserved</b> The DASD device driver holds a valid reservation for the DASD.</p> <p><b>lost</b> The DASD device driver had reserved the device, but this reservation has been lost to another system.</p> <p>See <a href="#">“Reading and resetting the reservation state”</a> on page 142 for details.</p>
online	1 if the DASD is online, 0 if it is offline (see <a href="#">“Setting a DASD online or offline”</a> on page 132).
path_autodisable path_interval path_threshold	Control the automatic removal of defective channel path (see <a href="#">“Setting defective channel paths offline automatically”</a> on page 143)
raw_track_access	1 if the DASD is in raw-track access mode, 0 if it is in default access mode (see <a href="#">“Accessing full ECKD tracks”</a> on page 139).
readonly	1 if the DASD is read-only, 0 if it can be written to. This attribute is a device driver setting and does not reflect any restrictions that are imposed by the device itself. This attribute is ignored for PAV alias devices.

Table 17. Attributes with DASD information (continued)

Attribute	Explanation
status	<p>Reflects the internal state of a DASD device. Values can be:</p> <p><b>unknown</b> Device detection has not started yet.</p> <p><b>new</b> Detection of basic device attributes is in progress.</p> <p><b>detected</b> Detection of basic device attributes has finished.</p> <p><b>basic</b> The device is ready for detecting the disk layout. Low-level tools can set a device to this state when changing the disk layout, for example, when formatting the device.</p> <p><b>unformatted</b> The disk layout detection found no valid disk layout. The device is ready for use with low-level tools like <b>dasdfmt</b>.</p> <p><b>ready</b> The device is in an intermediate state.</p> <p><b>online</b> The device is ready for use.</p>
uid	<p>A device identifier of the form <code>&lt;vendor&gt;.&lt;serial&gt;.&lt;subsystem_id&gt;.&lt;unit_address&gt;.&lt;minidisk_identifier&gt;</code> where</p> <p><b>&lt;vendor&gt;</b> is the specification from the vendor attribute.</p> <p><b>&lt;serial&gt;</b> is the serial number of the storage system.</p> <p><b>&lt;subsystem_id&gt;</b> is the ID of the logical subsystem to which the DASD belongs on the storage system.</p> <p><b>&lt;unit_address&gt;</b> is the address that is used within the storage system to identify the DASD.</p> <p><b>&lt;minidisk_identifier&gt;</b> is an identifier that the z/VM system assigns to distinguish between minidisks on the DASD. This part of the uid is only present for Linux on z/VM and if the z/VM version and service level support this identifier.</p> <p>This attribute is read-only.</p>
use_diag	<p>1 if the DIAG access method is enabled, 0 if the DIAG access method is not enabled (see “<a href="#">Enabling the DASD device driver to use the DIAG access method</a>” on page 130). Do not enable the DIAG access method for PAV alias devices.</p>
vendor	<p>Identifies the manufacturer of the storage system that contains the DASD.</p> <p>This attribute is read-only.</p>

There are some more attributes that are common to all CCW devices (see “[Device directories](#)” on page 9).

## Procedure

Issue a command of this form to read an attribute:



```
# cat /sys/bus/ccw/devices/<device_bus_id>/<attribute>
```

where *<attribute>* is one of the attributes of [Table 17 on page 146](#).

### Example

The following sequence of commands reads the attributes for a DASD with a device bus-ID 0.0.b100:

```
# cat /sys/bus/ccw/devices/0.0.b100/alias
0
# cat /sys/bus/ccw/devices/0.0.b100/discipline
ECKD
# cat /sys/bus/ccw/devices/0.0.b100/eer_enabled
0
# cat /sys/bus/ccw/devices/0.0.b100/erplog
0
# cat /sys/bus/ccw/devices/0.0.b100/expires
30
# cat /sys/bus/ccw/devices/0.0.b100/failfast
0
# cat /sys/bus/ccw/devices/0.0.b100/host_access_count
1
# cat /sys/bus/ccw/devices/0.0.b100/hpf
1
# cat /sys/bus/ccw/devices/0.0.b100/last_known_reservation_state
reserved
# cat /sys/bus/ccw/devices/0.0.b100/online
1
# cat /sys/bus/ccw/devices/0.0.b100/path_autodisable
1
# cat /sys/bus/ccw/devices/0.0.b100/path_interval
300
# cat /sys/bus/ccw/devices/0.0.b100/path_threshold
256
# cat /sys/bus/ccw/devices/0.0.b100/raw_track_access
0
# cat /sys/bus/ccw/devices/0.0.b100/readonly
1
# cat /sys/bus/ccw/devices/0.0.b100/status
online
# cat /sys/bus/ccw/devices/0.0.b100/uid
IBM.75000000092461.e900.8a
# cat /sys/bus/ccw/devices/0.0.b100/use_diag
1
# cat /sys/bus/ccw/devices/0.0.b100/vendor
IBM
```



---

## Chapter 12. SCSI-over-Fibre Channel device driver

**LPAR and z/VM:** The SCSI-over-Fibre Channel device driver applies to Linux in LPAR mode and to Linux on z/VM.

The SCSI-over-Fibre Channel device driver for Linux on Z (zfcp device driver) supports virtual QDIO-based SCSI-over-Fibre Channel adapters (FCP devices) and attached SCSI devices (LUNs).

Z adapter hardware typically provides multiple channels, with one port each. You can configure a channel to use the Fibre Channel Protocol (FCP). This *FCP channel* is then virtualized into multiple FCP devices. Thus, an FCP device is a virtual QDIO-based SCSI-over-Fibre Channel adapter with a single port.

A single physical port supports multiple FCP devices. Using N\_Port ID virtualization (NPIV) you can define virtual ports and establish a one-to-one mapping between your FCP devices and virtual ports (see “N\_Port ID Virtualization for FCP channels” on page 155).

On Linux, an FCP device is represented by a CCW device that is listed under `/sys/bus/ccw/drivers/zfcp`. Do not confuse FCP devices with SCSI devices. A SCSI device is identified by a LUN.

---

### Features

The zfcp device driver supports a wide range of SCSI devices, various hardware adapters, specific topologies, and specific features that depend on the Z hardware.

- Linux on Z can use various SAN-attached SCSI device types, including SCSI disks, tapes, CD-ROMs, and DVDs. For a list of supported SCSI devices, see

[www.ibm.com/systems/z/connectivity](http://www.ibm.com/systems/z/connectivity)

- SAN access through the following FCP adapters:
  - FICON Express16SA (as of z15)
  - FCP Express32S (LinuxONE only, as of LinuxONE II)
  - FICON Express16S+ (as of z14)
  - FICON Express16S (as of z13)
  - FICON Express8S (z13)
  - FICON Express8 (z13)

You can order hardware adapters as features for mainframe systems.

See *Fibre Channel Protocol for Linux and z/VM on IBM System z*, SG24-7266 for more details about using FCP with Linux on Z.

- The zfcp device driver supports switched fabric and point-to-point topologies.
- The zfcp device driver supports end-to-end data consistency checking.
- As of FICON Express8S, the zfcp device driver supports the data router hardware feature to improve performance by reducing the path length.

For information about SCSI-3, the Fibre Channel Protocol, and Fibre Channel related information, see [www.t10.org](http://www.t10.org) and [www.t11.org](http://www.t11.org)

---

### What you should know about zfcp

The zfcp device driver is a low-level driver or host-bus adapter driver that supplements the Linux SCSI stack.

[Figure 38 on page 152](#) illustrates how the device drivers work together.

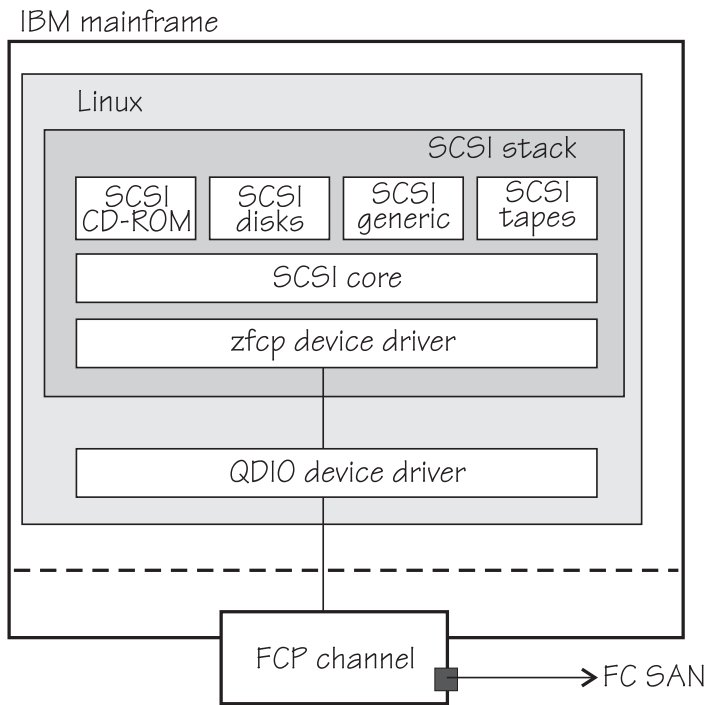


Figure 38. Device drivers that support the FCP environment

## sysfs structures for FCP devices and SCSI devices

FCP devices are CCW devices. In the sysfs device driver view, remote target ports with their LUNs are nested below the FCP devices.

When Linux is booted, it senses the available FCP devices and creates directories of the form:

```
/sys/bus/ccw/drivers/zfcp/<device_bus_id>
```

where *<device\_bus\_id>* is the device bus-ID that corresponds to an FCP device. You use the attributes in this directory to work with the FCP device.

**Example:** `/sys/bus/ccw/drivers/zfcp/0.0.3d0c`

The zfc device driver automatically adds port information when the FCP device is set online and when remote storage ports (*target ports*) are added. Each added target port extends this structure with a directory of the form:

```
/sys/bus/ccw/drivers/zfcp/<device_bus_id>/<wwpn>
```

where *<wwpn>* is the worldwide port name (WWPN) of the target port. You use the attributes of this directory to work with the port.

**Example:** `/sys/bus/ccw/drivers/zfcp/0.0.3d0c/0x500507630300c562`

With NPIV-enabled FCP devices, Red Hat Enterprise Linux 8.1 uses automatic LUN scanning by default. The zfc sysfs branch ends with the target port entries. FCP devices that are not NPIV-enabled, or if automatic LUN scanning is disabled, can be configured manually, see [“Configuring SCSI devices”](#) on page 172.

Information about zfc objects and their associated objects in the SCSI stack is distributed over the sysfs tree. To ease the burden of collecting information about zfc devices, ports, units, and their associated SCSI stack objects, a command that is called **lszfc** is provided with the s390utils RPM. See [“lszfc - List zfc devices”](#) on page 610 for more details about the command.

See also [“Mapping the representations of a SCSI device in sysfs”](#) on page 174.

## SCSI device nodes

User space programs access SCSI devices through device nodes.

SCSI device names are assigned in the order in which the devices are detected. In a typical SAN environment, this can mean a seemingly arbitrary mapping of names to actual devices that can change between boots. Therefore, using standard device nodes of the form `/dev/<device_name>` where `<device_name>` is the device name that the SCSI stack assigns to a device, can be a challenge.

Red Hat Enterprise Linux 8.1 provides udev to create device nodes for you. Use the device nodes to identify the corresponding actual device.

### Device nodes that are based on device names

udev creates device nodes that match the device names used by the kernel. These standard device nodes have the form `/dev/<name>`.

The examples in this section use standard device nodes as assigned by the SCSI stack. These nodes have the form `/dev/sd<x>` for entire disks and `/dev/sd<x><n>` for partitions. In these node names `<x>` represents one or more letters and `<n>` is an integer. See `Documentation/devices.txt` in the Linux source tree for more information about the SCSI device naming scheme.

To help you identify a particular device, udev creates device nodes that are based on the device's bus ID, the device label, and information about the file system on the device. The file system information can be a universally unique identifier (UUID) and, if available, the file system label.

### Device nodes that are based on bus IDs

udev creates device nodes of the form

```
/dev/disk/by-path/ccw-<device_bus_id>-fc-<wwpn>-lun-<lun>
```

for whole SCSI device and

```
/dev/disk/by-path/ccw-<device_bus_id>-fc-<wwpn>-lun-<lun>-part<n>
```

for the `<n>`th partition, where `<wwpn>` is the worldwide port number of the target port and `<lun>` is the logical unit number that represents the target SCSI device.

**Note:** The format of these udev-created device nodes has changed and now matches the common code format. Device nodes of the prior form, `ccw-<device_bus_id>-zfc-<wwpn>:<lun>` or `ccw-<device_bus_id>-zfc-<wwpn>:<lun>-part<n>`, are also created for compatibility reasons.

### Device nodes that are based on file system information

udev creates device nodes of the form

```
/dev/disk/by-uuid/<uuid>
```

where `<uuid>` is a unique file-system identifier (UUID) for the file system in a partition.

If a file system label has been assigned, udev also creates a node of the form

```
/dev/disk/by-label/<label>
```

There are no device nodes for the whole SCSI device that are based on file system information.

### Additional device nodes

`/dev/disk/by-id` contains additional device nodes for the SCSI device and partitions, that are all based on a unique SCSI identifier generated by querying the device.

### Example

For a SCSI device that is assigned the device name `sda`, has two partitions labeled `boot` and `SWAP-sda2`, a device bus-ID `0.0.3c1b` (device number `0x3c1b`), and a UUID `7eaf9c95-55ac-4e5e-8f18-065b313e63ca` for the first and `b4a818c8-747c-40a2-bfa2-acaa3ef70ead` for the second partition, udev creates the following device nodes:

For the whole SCSI device:

- `/dev/sda` (standard device node according to the SCSI device naming scheme)
- `/dev/disk/by-path/ccw-0.0.3c1b-fc-0x500507630300c562-lun-0x401040ea00000000`
- `/dev/disk/by-id/scsi-36005076303ffc56200000000000010ea`
- `/dev/disk/by-id/wwn-0x6005076303ffc56200000000000010ea`

For the first partition:

- `/dev/sda1` (standard device node according to the SCSI device naming scheme)
- `/dev/disk/by-path/ccw-0.0.3c1b-fc-0x500507630300c562-lun-0x401040ea00000000-part1`
- `/dev/disk/by-uuid/7eaf9c95-55ac-4e5e-8f18-065b313e63ca`
- `/dev/disk/by-label/boot`
- `/dev/disk/by-id/scsi-36005076303ffc56200000000000010ea-part1`
- `/dev/disk/by-id/wwn-0x6005076303ffc56200000000000010ea-part1`

For the second partition:

- `/dev/sda2` (standard device node according to the SCSI device naming scheme)
- `/dev/disk/by-path/ccw-0.0.3c1b-fc-0x500507630300c562-lun-0x401040ea00000000-part2`
- `/dev/disk/by-uuid/b4a818c8-747c-40a2-bfa2-acaa3ef70ead`
- `/dev/disk/by-label/SWAP-sda2`
- `/dev/disk/by-id/scsi-36005076303ffc56200000000000010ea-part2`
- `/dev/disk/by-id/wwn-0x6005076303ffc56200000000000010ea-part2`

Device nodes by-uuid use a unique file-system identifier that does not relate to the partition number.

## Multipath

Users of SCSI-over-Fibre Channel attached devices should always consider setting up and using redundant paths through their Fibre Channel storage area network.

Path redundancy improves the availability of the LUNs. In Linux, you can set up path redundancy with the device-mapper multipath tool. For information about multipath devices and multipath partitions, see the chapter about multipathing in *How to use FC-attached SCSI devices with Linux on z Systems*, SC33-8413.

## Partitioning a SCSI device

You can partition SCSI devices that are attached through an FCP channel in the same way that you can partition SCSI attached devices on other platforms.

### About this task

Use the **fdisk** command to partition a SCSI disk, not **fdasd**.

udev creates device nodes for partitions automatically. For the SCSI disk `/dev/sda`, the partition device nodes are called `/dev/sda1`, `/dev/sda2`, `/dev/sda3`, and so on.

### Example

To partition a SCSI disk with a device node `/dev/sda` issue:

```
# fdisk /dev/sda
```

## zfcplib HBA API (FC-HBA) support

The zfcplib host bus adapter API (HBA API) provides an interface for HBA management clients that run on Z. As shown in [Figure 39 on page 155](#), the zfcplib HBA API support includes a user space library.

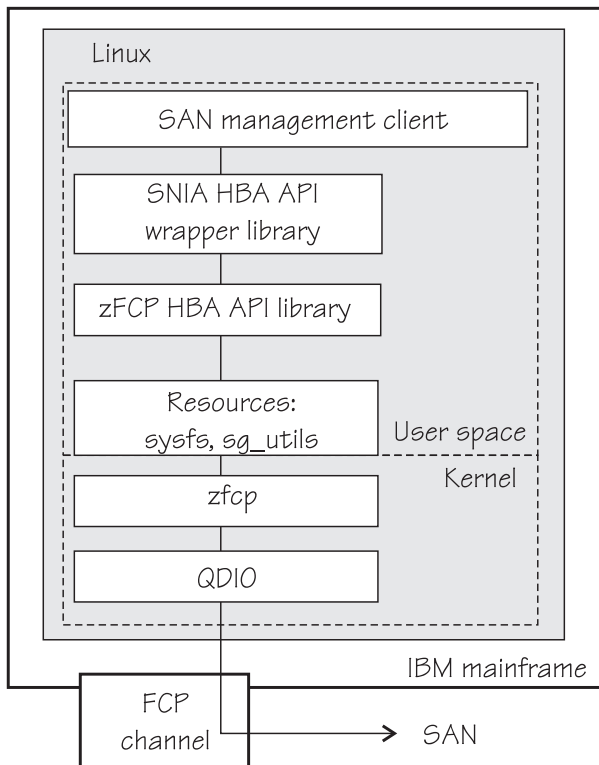


Figure 39. zfcplib HBA API support modules

The SNIA (Storage Networking Industry Association) library can interface with the zFCP HBA API. The SNIA library is part of Red Hat Enterprise Linux 8.1. It is available as software package `libhbaapi`, which is automatically installed when installing the zfcplib HBA API, see [“Getting ready to run applications” on page 189](#).

The default method in Red Hat Enterprise Linux 8.1 is for applications to use the zFCP HBA API indirectly through the SNIA HBA API. If you develop applications yourself, see [“Developing applications” on page 188](#).

In a Linux on Z environment HBAs are usually virtualized and are shown as *FCP devices*. FCP devices are represented by CCW devices that are listed in `/sys/bus/ccw/drivers/zfcplib`. Do not confuse FCP devices with SCSI devices. A SCSI device is a disk device that is identified by a LUN.

For information about setting up the HBA API support, see [“zfcplib HBA API support” on page 188](#).

## N\_Port ID Virtualization for FCP channels

Through N\_Port ID Virtualization (NPIV), the sole port of an FCP channel appears as multiple, distinct ports with separate port identification.

NPIV support can be configured on the SE per CHPID and LPAR for an FCP channel. The zfcplib device driver supports NPIV error messages and adapter attributes. See [“Displaying FCP channel and device information” on page 159](#) for the Fibre Channel adapter attributes.

For more information, see the connectivity page at

[www.ibm.com/systems/z/connectivity](http://www.ibm.com/systems/z/connectivity)

See also the chapter on NPIV in *How to use FC-attached SCSI devices with Linux on z Systems*, SC33-8413.

## Setting up the zfcplib device driver

Red Hat Enterprise Linux loads the zfcplib device driver for you when an FCP device becomes available. Use anaconda or dracut to configure the zfcplib device driver. You might also need to install the zfcplib HBA API library.

**Important:** Configuration changes can directly or indirectly affect information that is required to mount the root file system. Such changes require an update of the initial RAM disk, followed by a re-write of the boot record (see “Rebuilding the initial RAM disk image” on page 80).


You have the following options for configuring FCP LUNs to attach SCSI devices:

- During installation, use the **anaconda** GUI, the **dracut** boot parameter `rd.zfcplib=`, or the **kickstart** parameter `zfcplib`.
- On an installed system, use the **dracut** boot parameter `rd.zfcplib=` only for SCSI disks that are required for the root file system. Use the configuration file `/etc/zfcplib.conf` for all other SCSI devices, such as data volumes or tape libraries.

For details about configuration, see the Red Hat documentation website [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

You can always specify additional zfcplib module parameters as explained in Chapter 4, “Kernel and module parameters,” on page 23.

### zfcplib module parameter syntax

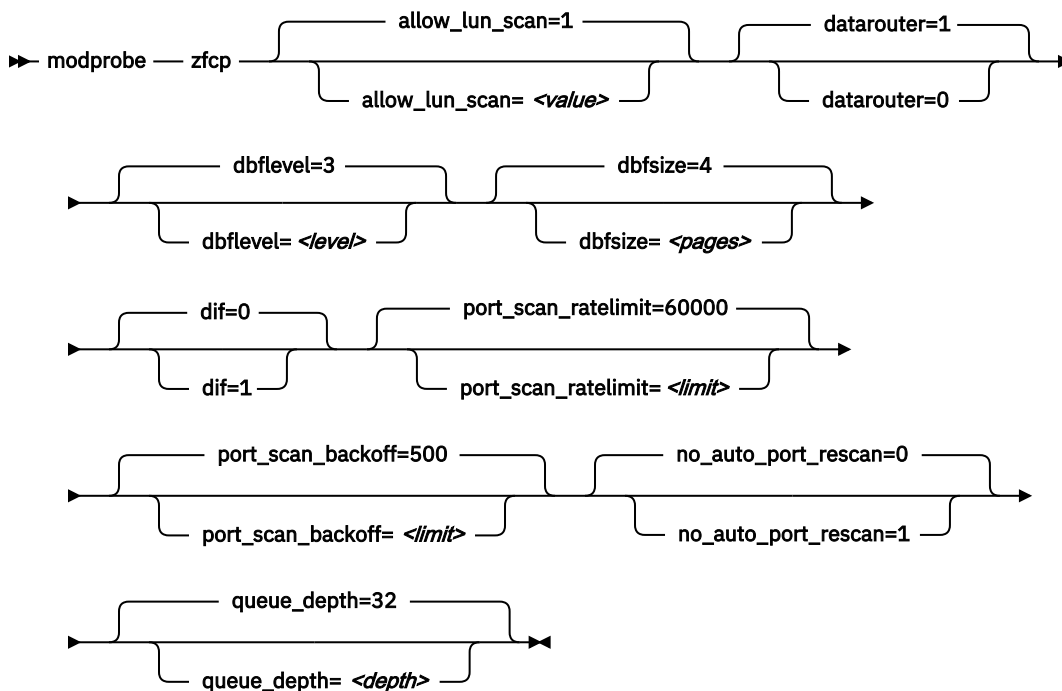

where:

#### **allow\_lun\_scan=<value>**

disables the automatic LUN scan for FCP devices that run in NPIV mode if set to 0, n, or N. To enable the LUN scanning set the parameter to 1, y, or Y. When the LUN scan is disabled, all LUNs must be configured through the `unit_add zfcplib` attribute in `sysfs`. LUN scan is enabled by default.

#### **datarouter=**

enables (if set to 1, y, or Y) or disables (if set to 0, n, or N) support for the hardware data routing feature. The default is 1.



**Note:** The hardware data routing feature becomes active only for FCP devices that are based on adapter hardware with hardware data routing support.

**dbflevel=<level>**

sets the initial log level of the debug feature. The value is an integer in the range 0 - 6, where greater numbers generate more detailed information. The default is 3.

**dbfsiz=<pages>**

specifies the number of pages to be used for the debug feature.

The debug feature is available for each FCP device and the following areas:

**hba**

FCP device

**san**

Storage Area Network

**rec**

Error Recovery Process

**scsi**

SCSI

**pay**

Payloads for entries in the hba, san, rec, or scsi areas. The default is 8 pages.

The value given is used for all areas. The default is 4, that is, four pages are used for each area and FCP device. In the following example the dbfsiz is increased to 6 pages:

```
dbfsiz=6
```

This results in six pages being used for each area and FCP device. The payload is doubled to use 12 pages.

**dif=**

turns end-to-end data consistency checking on if set to 1, y, or Y and off if set to 0, n, or N. The default is 0.

**no\_auto\_port\_rescan=**

turns the automatic port rescan feature off (if set to 1, y, or Y) or on (if set to 0, n, or N). The default is 0. Automatic rescan is always performed when setting an adapter online and when user-triggered writes to the sysfs attribute port\_rescan occur.

**port\_scan\_ratelimit=<limit>**

sets the minimum delay, in milliseconds, between automatic port scans of your Linux instance. The default value is 60000 milliseconds. To turn off the rate limit, specify 0. Use this parameter to avoid frequent scans, while you still ensure that a scan is conducted eventually.

**port\_scan\_backoff=<delay>**

sets additional random delay, in milliseconds, in which the port scans of your Linux instance are spread. The default value is 500 milliseconds. To turn off the random delay, specify 0. In an installation with multiple Linux instances, use this attribute for every Linux instance to spread scans to avoid potential multiple simultaneous scans.

**queue\_depth=<depth>**

specifies the number of commands that can be issued simultaneously to a SCSI device. The default is 32. The value you set here is used as the default queue depth for new SCSI devices. You can set the queue depth for each SCSI device using the queue\_depth sysfs attribute, see [“Setting the queue depth”](#) on page 180.

**device=<device\_bus\_id>, <wwpn>, <fcplun>**



**Attention:** The device= module parameter is reserved for internal use. Do not use.

**<device\_bus\_id>**

specifies the FCP device through which the SCSI device is attached.

**<wwpn>**

specifies the target port through which the SCSI device is attached.

**<fcplun>**

specifies the LUN of the SCSI device.

## Working with FCP devices

---

Set an FCP device online before you attempt to perform any other tasks.

Working with FCP devices comprises the following tasks:

- “Setting an FCP device online or offline” on page 158
- “Displaying FCP channel and device information” on page 159
- “Recovering a failed FCP device” on page 163
- “Finding out whether NPIV is in use” on page 164
- “Logging I/O subchannel status information” on page 165

### Setting an FCP device online or offline

By default, FCP devices are offline. Set an FCP device online before you perform any other tasks.

#### About this task



**Attention:** Use the procedure described here for dynamic testing of configuration settings. For persistent configuration in a production system, use one of the following options:

- The configuration file `/etc/zip1.conf` for FCP devices that are part of the root file system
- The configuration file `/etc/zfcpl.conf` for data disks.

An example of how to define an FCP device persistently is in the Red Hat installation information. For a general discussion of configuration files, see the configuration documentation on the Red Hat documentation website

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux).

You have the following options for configuring FCP LUNs to attach SCSI devices:

- During installation, use the **anaconda** GUI, the **dracut** boot parameter `rd.zfcp=`, or the **kickstart** parameter `zfcp`.
- On an installed system, use the **dracut** boot parameter `rd.zfcp=` only for SCSI disks that are required for the root file system. Use the configuration file `/etc/zfcpl.conf` for all other SCSI devices, such as data volumes or tape libraries.

For details about configuration, see the Red Hat documentation website

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

You can always specify additional `zfcp` module parameters as explained in [Chapter 4, “Kernel and module parameters,”](#) on page 23

**Important:** Configuration changes can directly or indirectly affect information that is required to mount the root file system. Such changes require an update of the initial RAM disk, followed by a re-write of the boot record (see [“Rebuilding the initial RAM disk image”](#) on page 80).

See [“Working with newly available devices”](#) on page 10 to avoid errors when you work with devices that have become available to a running Linux instance.

Setting an FCP device online registers it with the Linux SCSI stack. It also automatically runs the scan for ports in the SAN and waits for this port scan to complete. To check if setting the FCP device online was successful, you can use a script that first sets the FCP device online and after this operation completes checks if the WWPN of a remote storage port has appeared in `sysfs`.

When you set an FCP device offline, the port and LUN subdirectories are preserved. Setting an FCP device offline in sysfs interrupts the communication between Linux and the FCP channel. After a timeout has expired, the port and LUN attributes indicate that the ports and LUNs are no longer accessible. The transition of the FCP device to the offline state is synchronous, unless the device is disconnected.

For disconnected devices, writing 0 to the online sysfs attribute triggers an asynchronous deregistration process. When this process is completed, the device with its ports and LUNs is no longer represented in sysfs.

When the FCP device is set back online, the SCSI device names and minor numbers are freshly assigned. The mapping of devices to names and numbers might be different from what they were before the FCP device was set offline.

## Procedure

There are two methods for setting an FCP device online or offline:

- Use the **chzdev** command with the **-a** option, or the **chccwdev** command ([“chccwdev - Set CCW device attributes”](#) on page 502).
- Alternatively, you can write 1 to an FCP device's online attribute to set it online, or 0 to set it offline.

## Examples

- To set an FCP device with bus ID 0.0.3d0c online issue:

```
# chzdev -e -a zfcw-host 0.0.3d0c
```

or

```
# chccwdev -e 0.0.3d0c
```

or

```
# echo 1 > /sys/bus/ccw/drivers/zfcw/0.0.3d0c/online
```

- To set an FCP device with bus ID 0.0.3d0c offline issue:

```
# chzdev -d -a zfcw-host 0.0.3d0c
```

or

```
# chccwdev -d 0.0.3d0c
```

or

```
# echo 0 > /sys/bus/ccw/drivers/zfcw/0.0.3d0c/online
```

## Displaying FCP channel and device information

For each online FCP device, there is a number of read-only attributes in sysfs that provide information about the corresponding FCP channel and FCP device.

### Before you begin

The FCP device must be online for the FCP channel information to be valid.

### About this task

The following tables summarize the relevant attributes.

*Table 18. Attributes with Fibre Channel adapter hardware information*

Attribute	Explanation
card_version	Version number that identifies a particular hardware feature.
hardware_version	Number that identifies a hardware version for a particular feature. The initial hardware version of a feature is zero. This version indicator is increased only for hardware modifications of the same feature. Appending hardware_version to card_version results in a hierarchical version indication for a physical adapter.
lic_version	Microcode level.
peer_wwnn	WWNN of peer for a point-to-point connection.
peer_wwpn	WWPN of peer for a point-to-point connection.
peer_d_id	Destination ID of the peer for a point-to-point connection.

*Table 19. Attributes with FCP device information*

Attribute	Explanation
in_recovery	Shows if the FCP device is in recovery (0 or 1).

For the attributes availability, cmb\_enable, and cutype, see [“Device directories” on page 9](#). The status attribute is reserved.

*Table 20. Relevant transport class attributes, fc\_host attributes*

Attribute	Explanation
maxframe_size	Maximum frame size of adapter.
node_name	Worldwide node name (WWNN) of adapter.
permanent_port_name	WWPN associated with the physical port of the FCP channel.
port_id	A unique ID (N_Port_ID) assigned by the fabric. In an NPIV setup, each virtual port is assigned a different port_id.
port_name	WWPN associated with the FCP device. If N_Port ID Virtualization is not available, the WWPN of the physical port (see permanent_port_name).
port_type	The port type indicates the topology of the port.
serial_number	The 32-byte serial number of the adapter hardware that provides the FCP channel.
speed	Speed of FC link.
supported_classes	Supported FC service class.
supported_speeds	Supported speeds.
tgid_bind_type	Target binding type.

*Table 21. Relevant transport class attributes, fc\_host statistics*

Attribute	Explanation
reset_statistics	Writeable attribute to reset statistic counters.
seconds_since_last_reset	Seconds since last reset of statistic counters.

Table 21. Relevant transport class attributes, fc\_host statistics (continued)

Attribute	Explanation
tx_frames	Transmitted FC frames.
tx_words	Transmitted FC words.
rx_frames	Received FC frames.
rx_words	Received FC words.
lip_count	Number of LIP sequences.
nos_count	Number of NOS sequences.
error_frames	Number of frames that are received in error.
dumped_frames	Number of frames that are lost because of lack of host resources.
link_failure_count	Link failure count.
loss_of_sync_count	Loss of synchronization count.
loss_of_signal_count	Loss of signal count.
prim_seq_protocol_err_count	Primitive sequence protocol error count.
invalid_tx_word_count	Invalid transmission word count.
invalid_crc_count	Invalid CRC count.
fc_p_input_requests	Number of FCP operations with data input.
fc_p_output_requests	Number of FCP operations with data output.
fc_p_control_requests	Number of FCP operations without data movement.
fc_p_input_megabytes	Megabytes of FCP data input.
fc_p_output_megabytes	Megabytes of FCP data output.

## Procedure

Use the **cat** command to read an attribute.

- Issue a command of this form to read an attribute:

```
# cat /sys/bus/ccw/drivers/zfcp/<device_bus_id>/<attribute>
```

where:

**<device\_bus\_id>**

specifies an FCP device that corresponds to the FCP channel.

**<attribute>**

is one of the attributes in [Table 18 on page 160](#) or [Table 19 on page 160](#).

- To read attributes of the associated Fibre Channel host use:

```
# cat /sys/class/fc_host/<host_name>/<attribute>
```

where:

**<host\_name>**

is the ID of the Fibre Channel host.

**<attribute>**

is one of the attributes in [Table 20 on page 160](#).

- To read statistics attributes of the FCP channel associated with this Fibre Channel host, use:

```
# cat /sys/class/fc_host/<host_name>/statistics/<attribute>
```

where:

**<host\_name>**

is the ID of the Fibre Channel host.

**<attribute>**

is one of the attributes in [Table 21 on page 160](#).

### Examples

- In this example, information is displayed about an FCP channel that corresponds to an FCP device with bus ID 0.0.3d0c:

```
# cat /sys/bus/ccw/drivers/zfcp/0.0.3d0c/hardware_version
0x00000000
# cat /sys/bus/ccw/drivers/zfcp/0.0.3d0c/lic_version
0x00000715
```

- Alternatively you can use **lszfcp** (see [“lszfcp - List zfcp devices” on page 610](#)) to display attributes of an FCP channel:

```
# lszfcp -b 0.0.3d0c -a
0.0.3d0c host0
Bus = "ccw"
    availability      = "good"
    card_version      = "0x0007"
    cmb_enable        = "0"
    cutype            = "1731/03"
    devtype           = "1732/03"
    failed            = "0"
    hardware_version   = "0x00000000"
    in_recovery        = "0"
    lic_version        = "0x00000715"
    modalias          = "ccw:t1731m03dt1732dm03"
    online            = "1"
    peer_d_id          = "0x000000"
    peer_wwnn          = "0x0000000000000000"
    peer_wwpn          = "0x0000000000000000"
    status            = "0x5400040b"
    uevent            = "DRIVER=zfcp"
Class = "fc_host"
    active_fc4s        = "0x00 0x00 0x01 0x00 ..."
    dev_loss_tmo       = "60"
    maxframe_size      = "2112 bytes"
    node_name          = "0x5005076400c7ec87"
    permanent_port_name = "0xc05076ffd6801981"
    port_id            = "0x671a29"
    port_name          = "0xc05076ffd6801e10"
    port_state         = "Online"
    port_type          = "NPIV VPORT"
    serial_number      = "IBM0200000007EC87"
    speed              = "16 Gbit"
    supported_classes   = "Class 2, Class 3"
    supported_fc4s      = "0x00 0x00 0x01 0x00 ..."
    supported_speeds    = "4 Gbit, 8 Gbit, 16 Gbit"
    symbolic_name       = "IBM type serial PCHID: 0198 NPIV UlpId: 05600300 DEVNO: 0.0.3d0c NAME:"
hostname.domain"
    tgtid_bind_type    = "wwpn (World Wide Port Name)"
Class = "scsi_host"
    active_mode        = "Initiator"
    can_queue          = "4096"
    cmd_per_lun        = "0"
    eh_deadline        = "off"
    host_busy          = "0"
    megabytes          = "15 0"
    proc_name          = "zfcp"
    prot_capabilities   = "0"
    prot_guard_type     = "0"
    queue_full         = "0 2357653"
    requests           = "815 0 66"
    seconds_active      = "11"
    sg_prot_tablesize   = "0"
    sg_tablesize        = "574"
    state              = "running"
    supported_mode      = "Initiator"
    unchecked_isa_dma   = "0"
    unique_id          = "6400"
    use_blk_mq          = "0"
    utilization         = "0 0 0"
```

## Recovering a failed FCP device

Failed FCP devices are automatically recovered by the zfcp device driver. You can read the `in_recovery` attribute to check whether recovery is under way.

### Before you begin

The FCP device must be online.

### Procedure

Perform these steps to find out the recovery status of an FCP device and, if needed, start or restart recovery:

1. Issue a command of this form:

```
# cat /sys/bus/ccw/drivers/zfcp/<device_bus_id>/in_recovery
```

The value is 1 if recovery is under way and 0 otherwise. If the value is 0 for a non-operational FCP device, recovery might have failed. Alternatively, the device driver might have failed to detect that the FCP device is malfunctioning.

2. To find out whether recovery failed, read the failed attribute. Issue a command of this form:

```
# cat /sys/bus/ccw/drivers/zfcp/<device_bus_id>/failed
```

The value is 1 if recovery failed and 0 otherwise.

3. You can start or restart the recovery process for the FCP device by writing 0 to the failed attribute. Issue a command of this form:

```
# echo 0 > /sys/bus/ccw/drivers/zfcp/<device_bus_id>/failed
```

### Example

In the following example, an FCP device with a device bus-ID 0.0.3d0c is malfunctioning. The first command reveals that recovery is not already under way. The second command manually starts recovery for the FCP device:

```
# cat /sys/bus/ccw/drivers/zfcp/0.0.3d0c/in_recovery
0
# echo 0 > /sys/bus/ccw/drivers/zfcp/0.0.3d0c/failed
```

## Finding out whether NPIV is in use

An FCP device runs in NPIV mode if the port\_type attribute of the FCP device attribute contains the string "NPIV". Alternatively, if the applicable permanent\_port\_name and port\_name are not the same and are not NULL.

### Procedure

Read the port\_type attribute of the FCP device.

Issue a command of the following form:

```
# cat /sys/bus/ccw/drivers/zfcp/<device_bus_id>/<host_no>/fc_host/<host_no>/port_type
NPIV VPORT
```

For example:

```
# cat /sys/bus/ccw/drivers/zfcp/0.0.3d0c/host0/fc_host/host0/port_type
NPIV VPORT
```

Alternatively, compare the values of the permanent\_port\_name attribute and the port\_name.

**Tip:** You can use **lszfcp** (see [“lszfcp - List zfcp devices”](#) on page 610) to list the FCP device attributes.



## Example

```
# lszfcp -b 0.0.3d0c -a
0.0.3d0c host0
Bus = "ccw"
  availability      = "good"
...
Class = "fc_host"
...
  node_name        = "0x5005076400c7ec87"
  permanent_port_name = "0xc05076ffd6801981"
  port_id          = "0x671a29"
  port_name        = "0xc05076ffd6801e10"
  port_state       = "Online"
  port_type        = "NPIV VPORT"
...
  symbolic_name    = "IBM type serial PCHID: 0198 NPIV UlpId: 05600300 DEVNO: 0.0.3d0c NAME:
hostname.domain"
...
```

The `port_type` attribute directly indicates that NPIV is used. The example also shows that `permanent_port_name` is different from `port_name` and neither is NULL. The example also shows the `symbolic_name` attribute that shows the symbolic port name that was registered on the FC name server.

## Logging I/O subchannel status information

When severe errors occur for an FCP device, the FCP device driver triggers a set of log entries with I/O subchannel status information.

The log entries are available through the SE Console Actions Work Area with the View Console Logs function. In the list of logs, these entries have the prefix 1F00. The content of the entries is intended for support specialists.

## Working with target ports

You can scan for ports, display port information, recover a port, or remove a port.

Working with target ports comprises the following tasks:

- [“Scanning for ports” on page 165](#)
- [“Controlling automatic port scanning” on page 166](#)
- [“Displaying port information” on page 168](#)
- [“Recovering a failed port” on page 170](#)
- [“Removing ports” on page 171](#)

## Scanning for ports

Newly available target ports are discovered. However, you might want to trigger a port scan to re-create accidentally removed port information or to assure that all ports are present.

### Before you begin

The FCP device must be online.

### About this task

The `zfc` device driver automatically adds port information to `sysfs` when:

- The FCP device is set online
- Target ports are added to the Fibre Channel fabric, unless the module parameter `no_auto_port_rescan` is set to 1. See [“Setting up the `zfc` device driver” on page 156](#).

Scanning for ports might take some time to complete. Commands that you issue against ports or LUNs while scanning is in progress are delayed and processed when port scanning is completed.

Use the `port_rescan` attribute if a remote storage port was accidentally deleted from the adapter configuration or if you are unsure whether all ports were added to sysfs.

## Procedure

Issue a command of this form:

```
# echo 1 > /sys/bus/ccw/drivers/zfcp/<device_bus_id>/port_rescan
```

where `<device_bus_id>` specifies the FCP device through which the target ports are attached.

**Tip:** List the contents of `/sys/bus/ccw/drivers/zfcp/<device_bus_id>` to find out which ports are currently configured for the FCP device.

## Example

In this example, a port with WWPN `0x500507630303c562` is already configured for an FCP device with bus ID `0.0.3d0c`. An additional target port with WWPN `0x500507630300c562` is automatically configured by triggering a port scan.

```
# ls /sys/bus/ccw/drivers/zfcp/0.0.3d0c/0x*
0x500507630303c562
# echo 1 > /sys/bus/ccw/drivers/zfcp/0.0.3d0c/port_rescan
# ls /sys/bus/ccw/drivers/zfcp/0.0.3d0c/0x*
0x500507630303c562
0x500507630300c562
```

## Controlling automatic port scanning

Automatic port scanning includes two `zfcp` parameters that improve the behaviour of Linux instances in SANs. These `zfcp` parameters are set to default values that work well for most installations. If needed, you can fine-tune the frequency and timing of automatic port scans with the `zfcp` parameters `port_scan_backoff` and `port_scan_ratelimit`. You can enable automatic port scanning with the `zfcp` parameter `no_auto_port_rescan=0`. This value is the default.

### About this task

In a large installation, where many Linux instances receive the same notifications of SAN changes, multiple instances might trigger scans simultaneously and too frequently. See [Figure 40 on page 166](#)

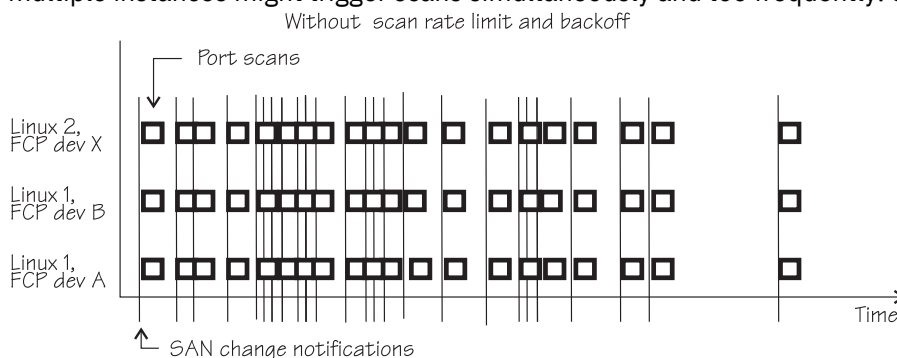


Figure 40. Numerous port scans in a Linux installation

These scans might put unnecessary load on the name server function of fabric switches and potentially result in late or inconclusive results.

You can avoid excessive scanning, yet still ensure that a port scan is eventually conducted. You can control port scanning with the `zfcp` parameters:

### `port_scan_ratelimit`

sets the minimum delay, in milliseconds, between automatic port scans of your Linux instance. The default value is 60000 milliseconds. To turn off the rate limit, specify 0.

## port\_scan\_backoff

sets an additional random delay, in milliseconds, in which the port scans of your Linux instance are spread. In an installation with multiple Linux instances, use this zfcpl parameter for every Linux instance to spread scans to avoid potential multiple simultaneous scans. The default value is 500 milliseconds. To turn off the random delay, specify 0.

Use module parameters (see “Setting up the zfcpl device driver” on page 156). On a running Linux system, you can also query or set these values by using the sysfs attributes with the same names.

Using `port_scan_ratelimit` reduces the number of scans, as shown in [Figure 41 on page 167](#)

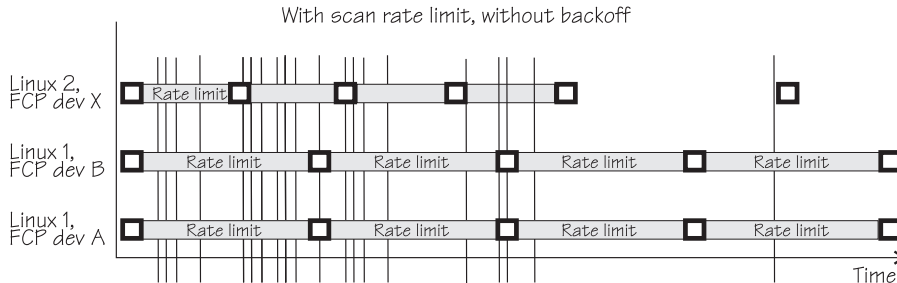


Figure 41. Port scan behavior with scan rate limit.

However, if the rate limit is set to the same value, the scans can still occur almost simultaneously, as for FCP device A and B in Linux 1.

Using `port_scan_backoff` and `port_scan_ratelimit` together delays port scans even further and avoids simultaneous scans, as shown in [Figure 42 on page 167](#). In the figure, FCP devices A and B in Linux 1 have the same rate limit and the same backoff values. The random element in the backoff value causes the scans to occur at slightly different times.

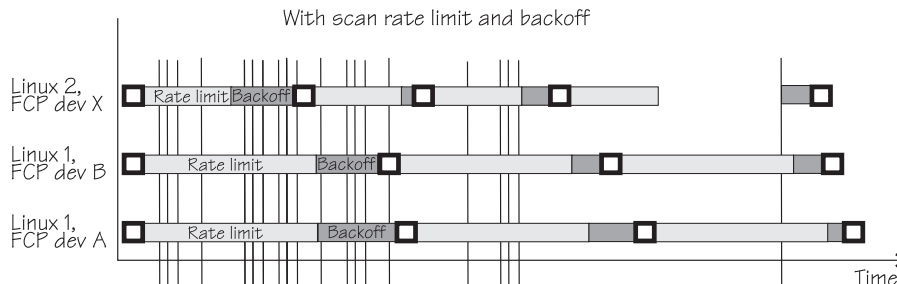


Figure 42. Port scan behavior with backoff and scan rate limit.

## Procedure

Use `port_scan_backoff` and `port_scan_ratelimit` together or separately to tune the behavior of port scanning:

- To avoid too frequent scanning, set a minimum wait time between two consecutive scans for the same Linux instance. Use the `port_scan_ratelimit` sysfs attribute.

By default, `port_scan_ratelimit` is turned on and has a value of 60000 milliseconds.

For example, to specify an attribute value of 12 seconds, issue:

```
# echo 12000 > /sys/module/zfcpl/parameters/port_scan_ratelimit
```

- To further spread scans over a certain time and thus avoid multiple simultaneous scans, set the `port_scan_backoff` sysfs attribute.

By default, `port_scan_backoff` is turned on and has a value of 500 milliseconds.

For example, to query the setting, issue a command of this form:

```
# cat /sys/module/zfcp/parameters/port_scan_backoff
500
```

To set the attribute to 1 second, issue:

```
# echo 1000 > /sys/module/zfcp/parameters/port_scan_backoff
```

## Results

The automatic port scans are delayed by the values specified. If a SAN notification is received during the rate limit time, a port scan is conducted immediately after the delay time passed.

Setting the attributes in sysfs is a useful method on a running system where you want to make dynamic changes. If you want to make the changes persistent across IPLs, use the kernel or module parameter.

Depending on the port event, one or more of the three zfcp parameters are evaluated to schedule a port scan. For example, port scans that are triggered manually through sysfs are not delayed. [Table 22 on page 168](#) shows which events evaluate which zfcp parameters.

Table 22. Port events and their use of port scanning zfcp parameters			
zfcp parameter	no_auto_port_rescan	port_scan_backoff	port_scan_ratelimit
Event			
FCP device resume	Yes	Yes	No
User sets FCP device online	No	Yes	No
User initiates a port scan	No	No	No
User starts FCP device recovery	Yes	Yes	Yes
Automatic FCP device recovery	Yes	Yes	Yes
SAN change notification	Yes	Yes	Yes

## Displaying port information

For each target port, there is a number of read-only sysfs attributes with port information.

### About this task

[Table 23 on page 168](#) and [Table 24 on page 168](#) summarize the relevant attributes.

Table 23. zfcp-specific attributes with port information within the FCP device sysfs tree	
Attribute	Explanation
access_denied	This attribute is obsolete. The value is always 0.
in_recovery	Shows if port is in recovery (0 or 1).

Table 24. Transport class attributes with port information	
Attribute	Explanation
node_name	WWNN of the remote port (target port).
port_name	WWPN of remote port.
port_id	Destination ID of remote port.

Table 24. Transport class attributes with port information (continued)

Attribute	Explanation
port_state	State of remote port.
roles	Role of remote port (usually FCP target).
scsi_target_id	Linux SCSI ID of remote port.
supported_classes	Supported classes of service.

## Procedure

Use the **cat** command to read an attribute.

- Issue a command of this form to read a zfcplib-specific attribute:

```
# cat /sys/bus/ccw/drivers/zfcplib/<device_bus_id>/<wwpn>/<attribute>
```

where:

**<device\_bus\_id>**

specifies the FCP device.

**<wwpn>**

is the WWPN of the target port.

**<attribute>**

is one of the attributes in [Table 23 on page 168](#).

- To read transport class attributes of the associated target port, use a command of this form:

```
# cat /sys/class/fc_remote_ports/<rport_name>/<attribute>
```

where:

**<rport\_name>**

is the name of the remote port.

**<attribute>**

is one of the attributes in [Table 24 on page 168](#).

**Tip:** With the HBA API package installed, you can also use the **zfcplib\_ping** and **zfcplib\_show** commands to find out more about your ports. See [“Tools for investigating your SAN configuration” on page 190](#).

## Examples

- In this example, information is displayed for a target port 0x500507630300c562 that is attached through an FCP device with bus ID 0.0.3d0c:

```
# cat /sys/bus/ccw/drivers/zfcplib/0.0.3d0c/0x500507630300c562/in_recovery
0
```

- To display transport class attributes of a target port you can use **lszfcplib**:

```
# lszfcp -p 0x500507630300c562 -a
0.0.3d0c/0x500507630300c562 rport-0:0-0
Class = "fc_remote_ports"
  dev_loss_tmo      = "2147483647"
  fast_io_fail_tmo  = "5"
  maxframe_size     = "2048 bytes"
  node_name         = "0x5005076303ffc562"
  port_id           = "0x652113"
  port_name         = "0x500507630300c562"
  port_state        = "Online"
  roles             = "FCP Target"
  scsi_target_id    = "0"
  supported_classes = "Class 2, Class 3"
```

## Recovering a failed port

Failed target ports are automatically recovered by the zfc device driver. You can read the `in_recovery` attribute to check whether recovery is under way.

### Before you begin

The FCP device must be online.

### Procedure

Perform these steps to find out the recovery status of a port and, if needed, start or restart recovery:

1. Issue a command of this form:

```
# cat /sys/bus/ccw/drivers/zfc/<device_bus_id>/<wwpn>/in_recovery
```

where:

**<device\_bus\_id>**

specifies the FCP device.

**<wwpn>**

is the WWPN of the target port.

The value is 1 if recovery is under way and 0 otherwise. If the value is 0 for a non-operational port, recovery might have failed or the device driver might have failed to detect that the port is malfunctioning.

2. To find out whether recovery failed, read the `failed` attribute. Issue a command of this form:

```
# cat /sys/bus/ccw/drivers/zfc/<device_bus_id>/<wwpn>/failed
```

The value is 1 if recovery has failed and 0 otherwise.

3. You can start or restart the recovery process for the port by writing 0 to the `failed` attribute. Issue a command of this form:

```
# echo 0 > /sys/bus/ccw/drivers/zfc/<device_bus_id>/<wwpn>/failed
```

### Example

In the following example, a port with WWPN 0x500507630300c562 that is attached through an FCP device with bus ID 0.0.3d0c is malfunctioning. The first command reveals that recovery is not already under way. The second command manually starts recovery for the port:

```
# cat /sys/bus/ccw/drivers/zfc/0.0.3d0c/0x500507630300c562/in_recovery
0
# echo 0 > /sys/bus/ccw/drivers/zfc/0.0.3d0c/0x500507630300c562/failed
```

## Removing ports

Removing unused ports can save FCP channel resources. Additionally setting the `no_auto_port_rescan` attribute avoids unnecessary attempts to recover unused remote ports.

### Before you begin

The FCP device must be online.

### About this task

List the contents of `/sys/bus/ccw/drivers/zfcp/<device_bus_id>` to find out which ports are currently configured for the FCP device.

You cannot remove a port while SCSI devices are configured for it (see [“Configuring SCSI devices” on page 172](#)) or if the port is in use, for example, by error recovery.

**Note:** The next port scan will attach all available ports, including any previously removed ports. To prevent removed ports from being reattached automatically, use zoning or the `no_auto_port_rescan` module parameter, see [“Setting up the zfcp device driver” on page 156](#).

### Procedure

Issue a command of this form:

```
# echo <wwpn> > /sys/bus/ccw/drivers/zfcp/<device_bus_id>/port_remove
```

where:

**<device\_bus\_id>**

specifies the FCP device.

**<wwpn>**

is the WWPN of the port to be removed.

### Example

In this example, two ports with WWPN `0x500507630303c562` and `0x500507630300c562` are configured for an FCP device with bus ID `0.0.3d0c`. The port with WWPN `0x500507630303c562` is then removed.

```
# ls /sys/bus/ccw/drivers/zfcp/0.0.3d0c/0x*
0x500507630303c562
0x500507630300c562
# echo 0x500507630303c562 > /sys/bus/ccw/drivers/zfcp/0.0.3d0c/port_remove
# ls /sys/bus/ccw/drivers/zfcp/0.0.3d0c/0x*
0x500507630300c562
```

## Working with SCSI devices

In an NPIV setup with auto lun scan, the SCSI devices are configured automatically. Otherwise, you must configure FCP LUNs to obtain SCSI devices. In both cases, you can configure SCSI devices, display information, and remove SCSI devices.

Working with SCSI devices comprises the following tasks:

- [“Configuring SCSI devices” on page 172](#)
- [“Mapping the representations of a SCSI device in sysfs” on page 174](#)
- [“Displaying information about SCSI devices” on page 178](#)
- [“Setting the queue depth” on page 180](#)
- [“Recovering failed SCSI devices” on page 181](#)

- [“Updating the information about SCSI devices” on page 182](#)
- [“Setting the SCSI command timeout” on page 183](#)
- [“Controlling the SCSI device state” on page 183](#)
- [“Removing SCSI devices” on page 184](#)

## Configuring SCSI devices

FCP devices that use NPIV mode detect the LUNs automatically and no configuring is necessary. If needed, configure the LUN manually.

For each FCP device that uses NPIV mode and if you did not disable automatic LUN scanning (see [“Setting up the zfcplib device driver” on page 156](#)), the LUNs are configured for you. In this case, *no* FCP LUN entries are created under `/sys/bus/ccw/drivers/zfcplib/<device_bus_id>/<wwpn>`.

To find out whether an FCP device is using NPIV mode, check the `port_type` attribute, for example:

```
# cat /sys/bus/ccw/drivers/zfcplib/0.0.1901/host*/fc_host/host*/port_type
NPIV VPORT
```

To find out whether automatic LUN scanning is enabled, check the current setting of the module parameter `zfcplib.allow_lun_scan`. The example below shows automatic LUN scanning as turned on.

```
# cat /sys/module/zfcplib/parameters/allow_lun_scan
Y
```

**Important:** Configuration changes can directly or indirectly affect information that is required to mount the root file system. Such changes require an update of the initial RAM disk, followed by a re-write of the boot record (see [“Rebuilding the initial RAM disk image” on page 80](#)).

### Automatically attached SCSI devices

FCP devices that use NPIV mode detect the LUNs automatically and no configuring is necessary. In this case, *no* FCP LUN entries are created under `/sys/bus/ccw/drivers/zfcplib/<device_bus_id>/<wwpn>`.

### What to do next

To check whether a SCSI device is registered, check for a directory with the name of the LUN in `/sys/bus/scsi/devices`. If there is no SCSI device for this LUN, the LUN is not valid in the storage system, or the FCP device is offline in Linux.

### Manually configured FCP LUNs and their SCSI devices

For FCP devices that do not use NPIV mode, or if automatic LUN scanning is disabled, FCP LUNs must be configured manually to obtain SCSI devices.

### Before you begin



**Attention:** Use this procedure only to dynamically test configuration settings.

You have the following options for configuring FCP LUNs to attach SCSI devices:

- During installation, use the **anaconda** GUI, the **dracut** boot parameter `rd.zfcplib=`, or the **kickstart** parameter `zfcplib`.
- On an installed system, use the **dracut** boot parameter `rd.zfcplib=` only for SCSI disks that are required for the root file system. Use the configuration file `/etc/zfcplib.conf` for all other SCSI devices, such as data volumes or tape libraries.

For details about configuration, see the Red Hat documentation website [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

You can always specify additional `zfcplib` module parameters as explained in [Chapter 4, “Kernel and module parameters,” on page 23](#)



## Procedure

If your FCP device does not use NPIV mode, or if you have disabled automatic LUN scanning, proceed as follows:

- Use the **chzdev** command.

```
# chzdev -e -a zfcplun <device_bus_id>:<wwpn>:<fcp_lun>
```

where:

### <fcp\_lun>

is the LUN of the SCSI device to be configured. The LUN is a 16 digit hexadecimal value padded with zeroes, for example 0x4010403300000000.

### <device\_bus\_id>

specifies the FCP device.

### <wwpn>

is the WWPN of the target port.

- Alternatively, using sysfs, write the device's LUN to the port's unit\_add attribute. Issue a command of this form:

```
# echo <fcp_lun> > /sys/bus/ccw/drivers/zfcplun/<device_bus_id>/<wwpn>/unit_add
```

## Results

This command starts a process with multiple steps:

1. It creates a directory in `/sys/bus/ccw/drivers/zfcplun/<device_bus_id>/<wwpn>` with the LUN as the directory name. The directory is part of the list of all LUNs to configure. Without NPIV or with auto LUN scanning disabled, zfcplun registers only FCP LUNs contained in this list with the Linux SCSI stack in the next step.
2. It initiates the registration of the SCSI device with the Linux SCSI stack. The FCP device must be online for this step.
3. It waits until the Linux SCSI stack registration completes successfully or returns an error. It then returns control to the shell. A successful registration creates a sysfs entry in the SCSI branch (see [“Mapping the representations of a SCSI device in sysfs”](#) on page 174).

## Example

Using **chzdev**: In this example, an FCP device with bus ID 0.0.3d0c is enabled. The WWPN of the target port is 0x500507630300c562. A SCSI device with LUN 0x4010403300000000 is added to the port.

```
# chzdev -e -a zfcplun 0.0.3d0c:0x500507630300c562:0x4010403300000000
```

Alternatively, using sysfs: In this example, a target port with WWPN 0x500507630300c562 is attached through an FCP device with bus ID 0.0.3d0c. A SCSI device with LUN 0x4010403200000000 is already configured for the port. An additional SCSI device with LUN 0x4010403300000000 is added to the port.

```
# ls /sys/bus/ccw/drivers/zfcplun/0.0.3d0c/0x500507630300c562/0x*
0x4010403200000000
# echo 0x4010403300000000 > /sys/bus/ccw/drivers/zfcplun/0.0.3d0c/0x500507630300c562/unit_add
# ls /sys/bus/ccw/drivers/zfcplun/0.0.3d0c/0x500507630300c562/0x*
0x4010403200000000
0x4010403300000000
```

## What to do next

To check whether a SCSI device is registered for the configured LUN, check for a directory with the name of the LUN in `/sys/bus/scsi/devices`. If there is no SCSI device for this LUN, the LUN is not valid in the storage system, or the FCP device is offline in Linux.

To see which LUNs are currently configured for the port, list the contents of `/sys/bus/ccw/drivers/zfcp/<device_bus_id>/<wwpn>`.

## Mapping the representations of a SCSI device in sysfs

Each SCSI device that is configured is represented by multiple directories in sysfs, in particular, within the SCSI branch. Only manually configured LUNs are also represented within the zfcp branch.

You can find the FCP device bus-ID, the target WWPN, and the FCP LUN triplet that corresponds to a SCSI device in two ways: By traversing the sysfs directory tree or by using commands.

**Note:** The zfcp-specific sysfs attributes `hba_id`, `wwpn`, and `fcplun` are deprecated. Use the methods described here instead to find the addressing of a SCSI device.

## About this task

The directory in the sysfs SCSI branch has the following form:

```
/sys/bus/scsi/devices/<scsi_host_no>:0:<scsi_id>:<scsi_lun>
```

where:

### <scsi\_host\_no>

is the SCSI host number that corresponds to the FCP device.

### <scsi\_id>

is the SCSI ID of the target port.

### <scsi\_lun>

is the LUN of the SCSI device.

The value for `<scsi_lun>` depends on the storage device. Often, it is a single-digit number, but for some storage devices it has numerous digits.

For manually configured FCP LUNs, see [“Manually configured FCP LUNs and their SCSI devices”](#) on page 172 for details about the directory in the zfcp branch.

## Before you begin

You must identify the SCSI device in sysfs. For example, use **readlink** to find the path in sysfs with all symbolic links resolved:

```
# readlink -e /sys/bus/scsi/devices/2:0:1:1074741413  
/sys/devices/css0/0.0.000a/0.0.1800/host2/ipropt-2:0-1/target2:0:1/2:0:1:1074741413
```

## Using sysfs

**Note:** Do not assume a stable sysfs structure. The following procedure accommodates changes in sysfs.

This example shows how you can traverse the directory tree to find the FCP device bus-ID, the target WWPN, and the FCP LUN that correspond to a SCSI device name. The example assumes:

### SCSI device

2:0:1:1074741413

### FCP LUN

0x40a5400f00000000

### target WWPN

0x50050763030bd327

## FCP device bus-ID

0.0.1800

### 1. Obtain the hexadecimal FCP LUN.

- Start at the SCSI device directory or anywhere in the subtree below the SCSI device. Ascend the sysfs tree until you find the SCSI device. To do this, test every subdirectory for a symbolic link named "subsystem" that points to a relative directory path whose last entry is `scsi`. Search for the symbolic link named "subsystem":

```
# ls -dl subsystem
lrwxrwxrwx 1 root root 0 Oct 19 16:08 subsystem -> ../../../../../../../../bus/scsi
```

The subsystem symbolic link points to a directory tree where the last subdirectory is `scsi`.

- Confirm that this is a SCSI device by reading the DEVTYPE line within the uevent attribute. The value must be "scsi\_device".

```
# grep "^DEVTYPE=" uevent
DEVTYPE=scsi_device
```

The last part of the current directory name is then the decimal SCSI LUN, for example, assuming you have found this directory:

```
# pwd
/sys/devices/css0/0.0.000a/0.0.1800/host2/rport-2:0-1/target2:0:1/2:0:1:1074741413
```

Here, the SCSI LUN is 1074741413.

- Transform the SCSI LUN to the FCP LUN as follows:

Step	Example
Take decimal LUN in decimal notation:	1074741413
Convert to hexadecimal notation:	0x400f40a5
Pad with 0 from the left to obtain a 64-bit value:	0x00000000400f40a5
Divide into 16-bit blocks (LUN levels):	0x0000 0000 400f 40a5
Reverse the order of the blocks:	0x40a5 400f 0000 0000
The resulting hexadecimal number is the FCP LUN:	0x40a5400f00000000

The Linux kernel function **int\_to\_scsilun()** in `drivers/scsi/scsi_common.c` converts a decimal SCSI LUN to obtain the hexadecimal FCP LUN according to this algorithm. The conversion works in both directions.

- Confirm that the path includes a directory "rport-<no>". For example, assuming you have found this directory:

```
# pwd
/sys/devices/css0/0.0.000a/0.0.1800/host2/rport-2:0-1/target2:0:1/2:0:1:1074741413
```

If there is no `rport` directory, the transport is not fibre channel and thus not `zfcp`-related. Abandon the search.

Table 25 on page 176 lists the libudev functions that you can use instead of manually traversing the sysfs.

Table 25. Useful udev functions	
Name	Task
udev_device_get_parent()	Ascend the sysfs tree.
udev_device_get_subsystem()	Retrieve subsystem name.
udev_device_get_devtype()	Retrieve device type.
udev_device_get_syspath()	Check if <code>rport</code> is a subdirectory.

2. Obtain the target WWPN.

- Continue ascending the sysfs tree the same way until you find the SCSI target. To do this, test every subdirectory for a symbolic link named "subsystem" that points to a relative directory path whose last entry is `scsi`. Search for the symbolic link named "subsystem":

```
# ls -dl subsystem
lrwxrwxrwx 1 root root 0 Oct 19 16:08 subsystem -> ../../../../../../../bus/scsi
```

- Confirm that this is a SCSI target by reading the DEVTYPE line within the uevent attribute. The value must be "scsi\_target".

```
# grep "^DEVTYPE=" uevent
DEVTYPE=scsi_target
```

For example, assuming you have found this directory:

```
# pwd
/sys/devices/css0/0.0.000a/0.0.1800/host2/rport-2:0-1/target2:0:1
```

- The SCSI target has a subdirectory `fc_transport`. Descend this subtree until you find a subdirectory that matches the SCSI target name. In this example, you would descend to `fc_transport/target2:0:1`.
- In the found target, read the `port_name` attribute:

```
# cat port_name
0x50050763030bd327
```

The value of the `port_name` is the target WWPN.

Table 26. Useful udev functions	
Name	Task
udev_device_get_parent_with_subsystem_devtype(dev, "scsi", "scsi_target")	Find the SCSI target.
udev_device_new_from_subsystem_sysname(udev_device_get_udev(scsidev), "fc_transport", udev_device_get_sysname(targetdev))	Find a matching target in the <code>fc_transport</code> branch.
udev_device_get_sysattr_value()	Read the <code>port_name</code> attribute.

- Obtain the FCP device-bus ID. Keep ascending the sysfs tree. Search for the symbolic link "subsystem" that points to a relative path where the last subdirectory is `ccw`.

For example:

```
# ls -dl subsystem
lrwxrwxrwx 1 root root 0 Oct 19 16:08 subsystem -> ../../../../bus/ccw
```

Then the name of the last directory in the current path is the FCP device-bus ID, for example:

```
# pwd
/sys/devices/css0/0.0.000a/0.0.1800
```

Here, 0.0.1800 is the FCP device-bus ID.

### Using commands

To map a SCSI device name to its corresponding FCP device bus-ID, target WWPN, and LUN, you can use one of the following commands. The example assumes:

#### SCSI device

2:0:1:1074741413

#### FCP LUN

0x40a5400f00000000

#### target WWPN

0x50050763030bd327

#### FCP device bus-ID

0.0.1800

- Use the **lszfc** with the -D option to list the FCP device-bus ID, the target WWPN, and the FCP LUN for all SCSI devices. For example:

```
lszfc -D
...
0.0.1800/0x50050763030bd327/0x40a5400f00000000 2:0:1:1074741413
...
```

For details about the **lszfc** command, see [“lszfc - List zfc devices” on page 610](#).

- Use the **lszdev** command on device type zfc-lun devices, and display the ID and ATTR:scsi\_dev columns. For example:

```
# lszdev zfc-lun -a -c ID,ATTR:scsi_dev
ID                                ATTR:scsi_dev
...
0.0.1800:0x50050763030bd327:0x40a5400f00000000 2:0:1:1074741413
...
```

For details about the **lszdev** command, see [“lszdev - Display IBM Z device configurations” on page 605](#).

- Use the **lsscsi** command with the --transport and --lunhex options in verbose mode to get information about a SCSI device:

```
# lsscsi -xxtv
[2:0:1:0x40a5400f00000000] disk    fc:0x50050763030bd327,0x249900 /dev/sda
  dir: /sys/bus/scsi/devices/2:0:1:1074741413 [/sys/devices/css0/0.0.000a/0.0.1800/host2
                                         /rport-2:0-1/target2:0:1/2:0:1:1074741413]
...
```

For details about the **lsscsi** command, see the man page.

**Note:** The details of the command output is subject to change. Do not rely on the output always being exactly as shown.

Figure 43 on page 178 illustrates the sysfs structure of a SCSI device and how it corresponds to the **lszfc** command output.



**Warning:** Do not rely on the sysfs structure in the example. The sysfs structure changes without notice.

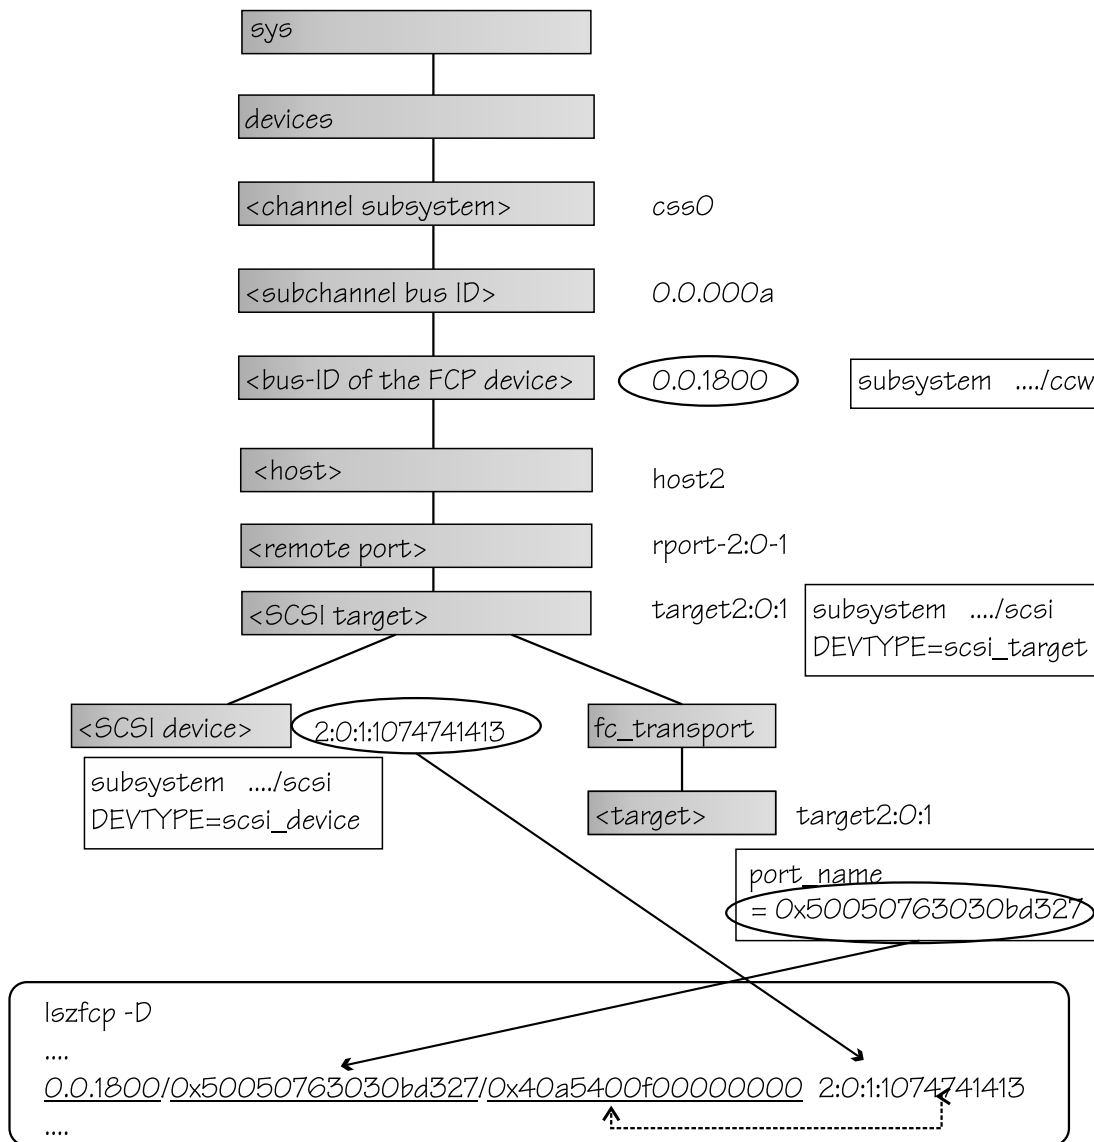


Figure 43. Example SCSI device in sysfs and command output

## Displaying information about SCSI devices

For each SCSI device, there is a number of read-only attributes in sysfs that provide information for the device.

### About this task

Table 27 on page 179 summarizes the read-only attributes for manually configured FCP LUNs, including those attributes that indicate whether the device access is restricted by access control software on the FCP channel. These attributes can be found in the `zfc` branch of sysfs. The path has the form:

```
/sys/bus/ccw/drivers/zfc/<device_bus_id>/<wwpn>/<fcp_lun>/<attribute>
```

Table 27. Attributes of manually configured FCP LUNs with device access information

Attribute	Explanation
access_denied	Flag that indicates whether access to the device is restricted by the FCP channel.  The value is 1 if access is denied and 0 if access is permitted.  If access is denied to your Linux instance, confirm that your SCSI devices are configured as intended. Also, be sure that you really want to share a SCSI device. For shared access to a SCSI device, preferably use NPIV (see “N_Port ID Virtualization for FCP channels” on page 155). You might also use different FCP channels or target ports.
access_shared	This attribute is obsolete. The value is always 0.
access_readonly	This attribute is obsolete. The value is always 0.
in_recovery	Shows if unit is in recovery (0 or 1)

Table 28 on page 179 lists further read-only attributes with information about the SCSI device. These attributes can be found in the SCSI branch of sysfs. The path has the form:

```
/sys/class/scsi_device/<device_name>/device/<attribute>
```

Table 28. SCSI device class attributes

Attribute	Explanation
device_blocked	Flag that indicates whether the device is in blocked state (0 or 1).
iocounterbits	The number of bits used for I/O counters.
iodone_cnt	The number of completed or rejected SCSI commands.
ioerr_cnt	The number of SCSI commands that completed with an error.
iorequest_cnt	The number of issued SCSI commands.
model	The model of the SCSI device, received from inquiry data.
rev	The revision of the SCSI device, received from inquiry data.
scsi_level	The SCSI revision level, received from inquiry data.
type	The type of the SCSI device, received from inquiry data.
vendor	The vendor of the SCSI device, received from inquiry data.
zfcplib_access_denied	Flag that indicates whether access to the device is restricted by the FCP channel.  The value is 1 if access is denied and 0 if access is permitted.  If access is denied to your Linux instance, confirm that your SCSI devices are configured as intended. Also, be sure that you really want to share a SCSI device. For shared access to a SCSI device, preferably use NPIV (see “N_Port ID Virtualization for FCP channels” on page 155). You might also use different FCP channels or target ports.
zfcplib_in_recovery	Shows if unit is in recovery (0 or 1).

## Procedure

Use the **lszfcp** command (see [“lszfcp - List zfcps”](#) on page 610) to display information about the associated SCSI device.

Alternatively, you can use sysfs to read the information. To read attributes of the associated SCSI device, use a command of this form:

```
# cat /sys/class/scsi_device/<device_name>/device/<attribute>
```

where:

### <device\_name>

is the name of the associated SCSI device.

### <attribute>

is one of the attributes in [Table 28 on page 179](#).

**Tip:** For SCSI-attached tape devices, you can display a summary of this information by using the **lstape** command (see [“lstape - List tape devices”](#) on page 597).

## Examples

- In this example, information is displayed for a manually configured FCP LUN with LUN 0x4010403200000000 that is accessed through a target port with WWPN 0x500507630300c562 and is attached through an FCP device 0.0.3d0c. For the device, access is permitted.

```
# cat /sys/bus/ccw/drivers/zfc/0.0.3d0c/0x500507630300c562/0x4010403200000000/access_denied
0
```

For the device to be accessible, the access\_denied attribute of the target port, 0x500507630300c562, must also be 0 (see [“Displaying port information”](#) on page 168).

- You can use **lszfcp** to display attributes of a SCSI device. The example shows the attributes listed in [Table 28 on page 179](#) as well as other relevant attributes:

```
# lszfcp -l 0x4010403200000000 -a
0.0.3d0c/0x500507630300c562/0x4010403200000000 0:0:0:0
Class = "scsi_device"
...
device_blocked      = "0"
...
iocounterbits       = "32"
iodone_cnt           = "0xbe"
ioerr_cnt            = "0x2"
iorequest_cnt        = "0xbe"
...
model                = "2107900"
queue_depth          = "32"
queue_ramp_up_period = "120000"
...
rev                  = ".166"
scsi_level            = "6"
state                = "running"
timeout              = "30"
type                  = "0"
uevent               = "DEVTYPE=scsi_device"
vendor                = "IBM"
...
zfc_access_denied    = "0"
zfc_failed            = "0"
zfc_in_recovery       = "0"
zfc_status            = "0x54000000"
```

## Setting the queue depth

The Linux SCSI code automatically adjusts the queue depth as necessary. Changing the queue depth is usually a storage server requirement.



### Before you begin

Check the documentation of the storage server used or contact your storage server support group to establish if there is a need to change this setting.

### About this task

The value of the `queue_depth` kernel parameter (see [“Setting up the zfcpl device driver”](#) on page 156) is used as the default queue depth of new SCSI devices. You can query the queue depth by issuing a command of this form:

```
# cat /sys/bus/scsi/devices/<SCSI device>/queue_depth
```

Example:

```
# cat /sys/bus/scsi/devices/0:0:19:1086537744/queue_depth
16
```

You can change the queue depth of each SCSI device by writing to the `queue_depth` attribute, for example:

```
# echo 8 > /sys/bus/scsi/devices/0:0:19:1086537744/queue_depth
# cat /sys/bus/scsi/devices/0:0:19:1086537744/queue_depth
8
```

This is useful on a running system where you want to make dynamic changes. If you want to make the changes persistent across IPLs, you can:

- Use the module parameter `queue_depth` described in [“Setting up the zfcpl device driver”](#) on page 156.
- Write a udev rule to change the setting for each new SCSI device.

Linux forwards SCSI commands to the storage server until the number of pending commands exceeds the queue depth. If the server lacks the resources to process a SCSI command, Linux queues the command for a later retry and decreases the queue depth counter. Linux then waits for a defined ramp-up period. If no indications of resource problems occur within this period, Linux increases the queue depth counter until reaching the previously set maximum value. To query the current value for the queue ramp-up period in milliseconds:

```
# cat /sys/bus/scsi/devices/0:0:13:1086537744/queue_ramp_up_period
120000
```

To set a new value for the queue ramp-up period in milliseconds:

```
# echo 1000 > /sys/bus/scsi/devices/0:0:13:1086537744/queue_ramp_up_period
```

## Recovering failed SCSI devices

Failed SCSI devices are automatically recovered by the zfcpl device driver. You can read the `zfcpl_in_recovery` attribute to check whether recovery is under way.

### Before you begin

The FCP device must be online.

### Procedure

Perform the following steps to check the recovery status of a failed SCSI device:

1. Check the value of the `zfcpl_in_recovery` attribute. Issue the **lszfcpl** command:

```
# lszfcpl -l <LUN> -a
```

where `<LUN>` is the LUN of the associated SCSI device.

Alternatively, you can issue a command of this form:

```
# cat /sys/class/scsi_device/<device_name>/device/zfcp_in_recovery
```

The value is 1 if recovery is under way and 0 otherwise. If the value is 0 for a non-operational SCSI device, recovery might have failed. Alternatively, the device driver might have failed to detect that the SCSI device is malfunctioning.

2. To find out whether recovery failed, read the `zfcp_failed` attribute. Either use the **lszfcp** command again, or issue a command of this form:

```
# cat /sys/class/scsi_device/<device_name>/device/zfcp_failed
```

The value is 1 if recovery has failed, and 0 otherwise.

3. You can start or restart the recovery process for the SCSI device by writing 0 to the `zfcp_failed` attribute. Issue a command of this form:

```
# echo 0 > /sys/class/scsi_device/<device_name>/device/zfcp_failed
```

### Example

In the following example, SCSI device 0:0:0:0 is malfunctioning. The first command reveals that recovery is not already under way. The second command manually starts recovery for the SCSI device:

```
# cat /sys/class/scsi_device/0:0:0:0/device/zfcp_in_recovery
0
# echo 0 > /sys/class/scsi_device/0:0:0:0/device/zfcp_failed
```

### What to do next

If you manually configured an FCP LUN (see [“Manually configured FCP LUNs and their SCSI devices” on page 172](#)), but did not get a corresponding SCSI device, you can also use the corresponding FCP LUN sysfs attributes, `in_recovery` and `failed`, to check on recovery. See [Table 27 on page 179](#).

## Updating the information about SCSI devices

Use the `rescan` attribute of the SCSI device to detect changes to a storage device on the storage server that are made after the device was discovered.

### Before you begin

The FCP device must be online.

### About this task

The initial information about the available SCSI devices is discovered automatically when LUNs first become available.

### Procedure

To update the information about a SCSI device issue a command of this form:

```
# echo <string> > /sys/bus/scsi/devices/<scsi_host_no>:0:<scsi_id>:<scsi_lun>/rescan
```

where `<string>` is any alphanumeric string and the other variables have the same meaning as in [“Mapping the representations of a SCSI device in sysfs” on page 174](#).

### Example

In the following example, the information about a SCSI device 1:0:18:1086537744 is updated:

```
# echo 1 > /sys/bus/scsi/devices/1:0:18:1086537744/rescan
```

## Setting the SCSI command timeout

You can change the timeout if the default is not suitable for your storage system.

### Before you begin

The FCP device must be online.

### About this task

There is a timeout for SCSI commands. If the timeout expires before a SCSI command completes, error recovery starts. The default timeout is 30 seconds.

To find out the current timeout, read the `timeout` attribute of the SCSI device:

```
# cat /sys/bus/scsi/devices/<scsi_host_no>:0:<scsi_id>:<scsi_lun>/timeout
```

where the variables have the same meaning as in [“Mapping the representations of a SCSI device in sysfs”](#) on page 174.

The attribute value specifies the timeout in seconds.

### Procedure

To set a different timeout, enter a command of this form:

```
# echo <timeout> > /sys/bus/scsi/devices/<scsi_host_no>:0:<scsi_id>:<scsi_lun>/timeout
```

where `<timeout>` is the new timeout in seconds.

### Example

In the following example, the timeout of a SCSI device 1:0:18:1086537744 is first read and then set to 45 seconds:

```
# cat /sys/bus/scsi/devices/1:0:18:1086537744/timeout
30
# echo 45 > /sys/bus/scsi/devices/1:0:18:1086537744/timeout
```

## Controlling the SCSI device state

You can use the `state` attribute of the SCSI device to set a SCSI device back online if it was set offline by error recovery.

### Before you begin

The FCP device must be online.

### About this task

If the connection to a storage system is working but the storage system has a problem, the error recovery might set the SCSI device offline. This condition is indicated by a message like "Device offlined - not ready after error recovery".

To find out the current state of the device, read the `state` attribute:

```
# cat /sys/bus/scsi/devices/<scsi_host_no>:0:<scsi_id>:<scsi_lun>/state
```

where the variables have the same meaning as in [“Mapping the representations of a SCSI device in sysfs”](#) on page 174. The state can be:

**running**

The SCSI device can be used for running regular I/O requests.

**cancel**

The data structure for the device is being removed.

**deleted**

Follows the `cancel` state when the data structure for the device is being removed.

**quiesce**

No I/O requests are sent to the device, only special requests for managing the device. This state is used when the system is suspended.

**offline**

Error recovery for the SCSI device has failed.

**blocked**

Error recovery is in progress and the device cannot be used until the recovery process is completed.

**Procedure**

Issue a command of this form:

```
# echo running > /sys/bus/scsi/devices/<scsi_host_no>:0:<scsi_id>:<scsi_lun>/state
```

**Example**

In the following example, SCSI device 1:0:18:1086537744 is offline and is then set online again:

```
# cat /sys/bus/scsi/devices/1:0:18:1086537744/state
offline
# echo running > /sys/bus/scsi/devices/1:0:18:1086537744/state
```

## Removing SCSI devices

How to remove a SCSI device depends on whether your environment is set up to use NPIV.

**Important:** Configuration changes can directly or indirectly affect information that is required to mount the root file system. Such changes require an update of the initial RAM disk, followed by a re-write of the boot record (see [“Rebuilding the initial RAM disk image”](#) on page 80).

**Removing automatically attached SCSI devices**

When running with NPIV and automatic LUN scan, you can temporarily delete a SCSI device by writing 1 to the `delete` attribute of the directory that represents the device in the `sysfs` SCSI branch.

**About this task**

See [“Mapping the representations of a SCSI device in sysfs”](#) on page 174 about how to find this directory.

**Note:** These steps delete the SCSI device only temporarily, until the next automatic or user triggered Linux SCSI target scan. The scan automatically adds the SCSI devices again, unless the LUNs were deconfigured on the storage target. To permanently delete SCSI devices, you must disable automatic LUN scanning and configure all LUNs manually, see [“Manually configured FCP LUNs and their SCSI devices”](#) on page 172.

**Procedure**

Issue a command of this form:

```
# echo 1 > /sys/bus/scsi/devices/<device>/delete
```

### Example

In this example, an SCSI device with LUN 0x4010403700000000 is to be removed. Before the device is deleted, the corresponding device in the sysfs SCSI branch is found with an **lszfcp** command.

```
# lszfcp -l 0x4010403700000000
0.0.3d0f/0x500507630300c567/0x4010403700000000 0:0:3:1
# echo 1 > /sys/bus/scsi/devices/0:0:3:1/delete
```

### Removing manually configured FCP LUNs and their SCSI device

Manually remove a SCSI device if your environment is not set up to use NPIV or if you disabled automatic LUN scan. For details about disabling automatic LUN scan, see [“Setting up the zfcplib device driver”](#) on page 156.

### Before you begin



**Attention:** Use this procedure only to dynamically test configuration settings.

To configure a persistent setting in a production system, remove the dracut boot parameter `rd.zfcp=` only for SCSI disks that are no longer required for the root file system. Use the configuration file `/etc/zfcp.conf` for all other SCSI devices, such as data volumes or tape libraries.

### Procedure

Follow these steps to remove a manually configured FCP LUN and its SCSI device:

- Use the **chzdev** command. Issue a command of this form:

```
chzdev -d -a zfcp-lun <device_bus_id>:<wwpn>:<fcp_lun>
```

- Alternatively, remove the SCSI device from the target port by writing the LUN of the device to the `unit_remove` attribute of the port. Issue a command of this form:

```
# echo <fcp_lun> > /sys/bus/ccw/drivers/zfcp/<device_bus_id>/<wwpn>/unit_remove
```

where the variables have the same meaning as in [“Configuring SCSI devices”](#) on page 172. Removing a LUN with `unit_remove` automatically unregisters the SCSI device first.

### Example

The following example removes a SCSI device with LUN 0x4010403200000000, accessed through a target port with WWPN 0x500507630300c562 and is attached through an FCP device with bus ID 0.0.3d0c. The corresponding directory in the sysfs SCSI branch is assumed to be `/sys/bus/scsi/devices/0:0:1:1`.

- Using **chzdev**, issue:

```
# chzdev -d zfcp-lun 0.0.3d0c:0x500507630300c562:0x4010403200000000
```

- Using sysfs, remove the device and the LUN:

```
# echo 0x4010403200000000 > /sys/bus/ccw/drivers/zfcp/0.0.3d0c/0x500507630300c562/unit_remove
```

## Confirming end-to-end data consistency checking

There are different types of end-to-end data consistency checking, with dependencies on hardware and software.

### About this task

End-to-end data consistency checking is based on a data integrity field (DIF) that is added to transferred data blocks. DIF data is used to confirm that a data block originates from the expected source and was not modified during the transfer between the storage system and the FCP device. The SCSI Block Commands (T10 SBC) standard defines several types of DIF. Linux data integrity extension (DIX) builds on DIF to extend consistency checking, for example, to the operating system, middleware, or an application.

You enable the zfcplib device driver for end-to-end data consistency checking with the `zfcplib.dif=` kernel or `dif=` module parameter (see “Setting up the zfcplib device driver” on page 156). With end-to-end data consistency checking for SCSI disks enabled, Linux automatically discovers which FCP devices and which SCSI disks support end-to-end data consistency checking. No further setup is required.

**Note:** SCSI devices for which end-to-end data consistency checking is enabled must be accessed with direct I/O. Direct I/O requires direct access through the block device or through a file system that fully supports end-to-end data consistency checking. For example, XFS provides this support. Expect error messages about invalid checksums when using other access methods.

The zfcplib device driver supports the following modes:

- The FCP device calculates and checks a DIF checksum (DIF type 1)
- The Linux block integrity layer calculates and checks a TCP/IP checksum, which the FCP device then translates to a DIF checksum (DIX type 1 with DIF type 1)

For SCSI devices for which end-to-end data consistency checking is used, there is a `sysfs` directory

```
/sys/block/sd<x>/integrity
```

In the path, `sd<x>` is the standard name of the SCSI device.

End-to-end data consistency checking is used only if all of the following components support it:

### SCSI disk

Check your storage server documentation about T10 DIF support and any restrictions.

### IBM Z hardware

IBM Z FCP adapter hardware supports end-to-end data consistency checking as of FICON Express8.

### Hypervisor

For Linux on z/VM, you require a z/VM version with guest support for end-to-end data consistency checking.

### FCP device

Check your FCP adapter hardware documentation about the support and any restrictions. For example, end-to-end data consistency checking might be supported only for disks with 512-byte block size.

Read the `prot_capabilities` `sysfs` attribute of the SCSI host associated with an FCP device to find out about its end-to-end data consistency checking support. The following values are possible:

**0**

The FCP device does not support end-to-end data consistency checking.

**1**

The FCP device supports DIF type 1.

**16**

The FCP device supports DIX type 1.

**17**

The FCP device supports DIX type 1 with DIF type 1.

## Procedure

Issue a command of this form:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/host<n>/scsi_host/host<n>/prot_capabilities
```

where `<device_bus_id>` identifies the FCP device and `<n>` is an integer that identifies the corresponding SCSI host.

## Example

```
# cat /sys/bus/ccw/devices/0.0.1940/host0/scsi_host/host0/prot_capabilities
17
```

## Scenario for finding available LUNs

There are several steps from setting an FCP device online to listing the available LUNs.

### Procedure

1. Check for available FCP devices of type 1732/03:

```
# lscss -t 1732/03
Device    Subchan.  DevType CU Type Use  PIM PAM POM  CHPIDs
-----
0.0.3c02  0.0.0015  1732/03 1731/03      80  80  ff  36000000 00000000
```

Another possible type would be, for example, 1732/04.

2. Set the FCP device online:

```
# chccwdev -e 0.0.3c02
```

A port scan is performed automatically when the FCP device is set online.

3. Optional: Confirm that the FCP device is available and online:

```
# lszfcp -b 0.0.3c02 -a
0.0.3c02 host0
Bus = "ccw"
  availability      = "good"
...
  failed            = "0"
...
  in_recovery       = "0"
...
  online            = "1"
...
```

4. Optional: List the available ports:

```
# lszfcp -P
0.0.3c02/0x50050763030bc562 rport-0:0-0
0.0.3c02/0x500507630310c562 rport-0:0-1
0.0.3c02/0x500507630040727b rport-0:0-10
0.0.3c02/0x500507630e060521 rport-0:0-11
...
```

5. Scan for available LUNs on FCP device 0.0.3c02, port 0x50050763030bc562:

```
# lslns -c 0.0.3c02 -p 0x50050763030bc562
Scanning for LUNs on adapter 0.0.3c02
  at port 0x50050763030bc562:
    0x4010400000000000
    0x4010400100000000
    0x4010400200000000
    0x4010400300000000
    0x4010400400000000
    0x4010400500000000
    0x4010400600000000
    ...
```

## zfc HBA API support

You require different libraries for developing and running HBA management client applications. To develop applications, you need the development version of the SNIA HBA API library. To run applications, you need the zFCP HBA API library.

### Developing applications

To develop applications, you must install the development version of the SNIA HBA API provided by the `libhbaapi-devel` RPM, link your application against the library, and load the library.

#### Procedure

1. Install the development RPM for the SNIA HBA API.  
Use, for example, `yum`:

```
# yum install libhbaapi-devel
```

The development RPM `libhbaapi-devel` provides the necessary header files and `.so` symbolic links needed to program against the SNIA HBA API.

2. Add the command line option `-lhbaapi` during the linker step of the build process to link your application against the SNIA HBA API library.

3. In the application, issue the **HBA\_LoadLibrary()** call as the first call to load the library.

The vendor-specific library `libzfcphbaapi`, in turn, supplies the function **HBA\_RegisterLibrary** that returns all function pointers to the common library and thus makes them available to the application.

#### Functions provided

The zfc HBA API implements Fibre Channel - HBA API (FC-HBA) functions as defined in the FC-HBA specification.

You can find the FC-HBA specification at [www.t11.org](http://www.t11.org). The following functions are available:

- `HBA_GetVersion()`
- `HBA_LoadLibrary()`
- `HBA_FreeLibrary()`
- `HBA_RegisterLibrary()`
- `HBA_RegisterLibraryV2()`
- `HBA_GetNumberOfAdapters()`
- `HBA_GetAdapterName()`
- `HBA_OpenAdapter()`
- `HBA_CloseAdapter()`
- `HBA_RefreshInformation()`
- `HBA_RefreshAdapterConfiguration()`



- HBA\_GetAdapterAttributes()
- HBA\_GetAdapterPortAttributes()
- HBA\_GetDiscoveredPortAttributes()
- HBA\_GetFcpTargetMapping()
- HBA\_GetFcpTargetMappingV2()
- HBA\_SendScsiInquiry()
- HBA\_SendReadCapacity()
- HBA\_SendReportLUNs()
- HBA\_SendReportLUNsV2()
- HBA\_SendCTPassThru()
- HBA\_SendCTPassThruV2()
- HBA\_SetRNIDMgmtInfo()
- HBA\_GetRNIDMgmtInfo()
- HBA\_SendRNID()
- HBA\_SendRNIDV()
- HBA\_SendRPL()
- HBA\_SendRPS()
- HBA\_SendSRL()
- HBA\_SendLIRR()
- HBA\_GetEventBuffer()
- HBA\_RegisterForAdapterAddEvents()
- HBA\_RegisterForAdapterEvents()
- HBA\_RegisterForAdapterPortEvents()
- HBA\_RegisterForAdapterPortStatEvents()
- HBA\_RegisterForTargetEvents()
- HBA\_RegisterForLinkEvents()
- HBA\_RemoveCallback()

All other FC-HBA functions return status code HBA\_STATUS\_ERROR\_NOT\_SUPPORTED where possible.

**Note:** ZFCP HBA API can access only FCP devices, ports, and units that are configured in the operating system.

## Getting ready to run applications

To run an application, you must install the zFCP HBA API library that is provided by the `libzfcphbaapi` RPM. You can set environment variables to log any errors in the library, and use tools to investigate the SAN configuration.

### Before you begin

To use the HBA API support, you need the following packages:

- The zFCP HBA API library RPM, `libzfcphbaapi`.
- The SNIA HBA API library RPM, `libhbaapi`.

The application must be developed to use the SNIA HBA API library, see [“Developing applications” on page 188](#).

### Procedure

Follow these steps to access the library from a client application:

1. Install the `libzfcphbaapi` RPM with **yum**. **Yum** automatically installs all dependent packages such as `libhbaapi`.  
For example:

```
# yum install libzfcphbaapi
```

2. Ensure that the `/etc/hba.conf` file exists and contains a line of the form:

```
<library name> <library pathname>
```

For example:

```
libzfcphbaapi /usr/lib64/libzfcphbaapi-2.1.1.so
```

The SNIA library requires a configuration file called `/etc/hba.conf` that contains the path to the vendor-specific library `libzfcphbaapi.so`.

3. Optional: Set the environment variables for logging errors.

The zfc HBA API support uses the following environment variables to log errors in the zfc HBA API library:

**LIB\_ZFCP\_HBAAPI\_LOG\_LEVEL**

specifies the log level. If not set or set to zero, there is no logging (default). If set to an integer value greater than 1, logging is enabled.

**LIB\_ZFCP\_HBAAPI\_LOG\_FILE**

specifies a file for the logging output. If not specified, `stderr` is used.

**What to do next**

You can use the **zfc ping** and **zfc show** commands to investigate your SAN configuration.

**Tools for investigating your SAN configuration**

As of version 2.1, the HBA API package includes tools that can help you to investigate your SAN configuration and to solve configuration problems.

**zfc ping**

to probe a port in the SAN.

**zfc show**

to retrieve information about the SAN topology and details about the SAN components.

See *How to use FC-attached SCSI devices with Linux on z Systems*, SC33-8413 for details.

---

## Chapter 13. Storage-class memory device driver

**LPAR only:** The Storage-class memory device driver applies to Linux in LPAR mode only.

Storage-class memory (SCM) is a class of data storage devices that combines properties of both storage and memory..

SCM can be implemented as Flash Express or as Virtual Flash Memory.

---

### What you should know about storage-class memory

Storage-class memory (SCM) is accessed, in chunks called *increments*, through extended asynchronous data mover (EADM) subchannels.

The LPAR on which your Linux instance runs must be configured to provide SCM.

- At least one EADM subchannel must be available to the LPAR. Because SCM supports multiple concurrent I/O requests, it is advantageous to configure multiple EADM subchannels. A typical number of EADM subchannels is 64.
- One or more SCM increments must be added to the I/O configuration of the LPAR.

In Linux, each increment is represented as a block device. You can use the block device with standard Linux tools as you would use any other block device. Commonly used tools that work with block devices include: **fdisk**, **mkfs**, and **mount**.

Storage-class memory is useful for workloads with large write operations, that is, with a block size of 256 KB or more of data. Write operations with a block size of less than 256 KB of data might not perform optimally. Read operations can be of any size.

### Storage-class memory device nodes

Applications access storage-class memory devices by device nodes. Red Hat Enterprise Linux creates a device node for each storage increment.

The device driver uses a device name of the form `/dev/scm<x>` for an entire block device. In the name, `<x>` is one or two lowercase letters.

You can partition a block device into up to seven partitions. If you use partitions, the device driver numbers them from 1 - 7. The partitions then have device nodes of the form `/dev/scm<x><n>`, where `<n>` is a number in the range 1 - 7, for example, `/dev/scma1`.

The following example shows two block devices, `scma` and `scmb`, where `scma` has one partition, `scma1`.


```
# lsblk
NAME      MAJ:MIN RM  SIZE RO MOUNTPOINT
scma       252:0    0   16G  0
`-scma1    252:1    0   16G  0
scmb       252:8    0   16G  0
```

---

### Setting up the storage-class memory device driver

Configure the storage-class memory device driver by using the module parameters.

### Storage-class memory module parameter syntax

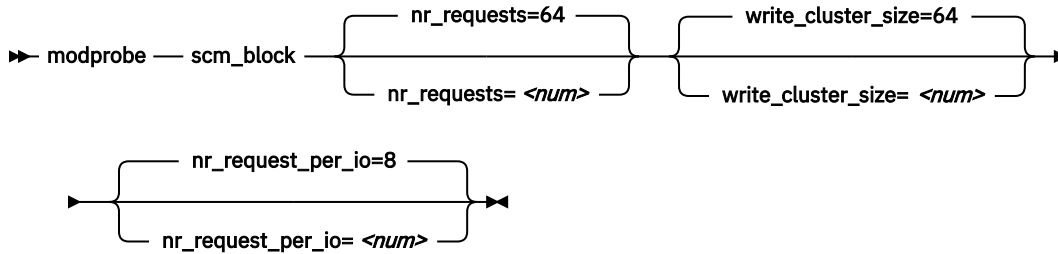

where

#### **nr\_requests**

specifies the number of parallel I/O requests. Set this number to the number of EADM subchannels. The default is 64.

#### **write\_cluster\_size**

specifies the number of pages that are used by the read-modify-write algorithm (available if CONFIG\_SCM\_BLOCK\_CLUSTER\_WRITE=y). The default is 64, resulting in all write requests smaller than 256 KiB being translated to 256 KiB writes. 1 KiB is 1024 bytes. Valid values are 2, 4, 8, 16, 32, 64, and 128. Do not change this value unless asked to do so by your service organization.

#### **nr\_request\_per\_io**

submits more concurrent I/O requests than the current limit, which is based on the number of available EADM subchannels (64). Valid values are 1 - 64. Increasing the requests increases the number of I/O requests per second, especially for requests with a small block size. The default number of requests is 8. Depending on the workload, this setting might improve the throughput of the scm\_block driver.

## Working with storage-class memory increments

You can list storage-class memory increments and EADM devices.

- [“Displaying EADM subchannels” on page 192](#)
- [“Listing storage-class memory increments” on page 193](#)
- [“Combining SCM devices with LVM” on page 193](#)

### Displaying EADM subchannels

Use the **lscss** command to list EADM subchannels.

#### **About this task**

The extended asynchronous data mover (EADM) subchannels are used to transfer data to and from the storage-class memory. At least one EADM subchannel must be available to the LPAR.

#### **Procedure**

To list EADM subchannels, issue:

```
# lscss --eadm
Device    Subchan.
-----
n/a       0.0.ff00
n/a       0.0.ff01
n/a       0.0.ff02
n/a       0.0.ff03
n/a       0.0.ff04
n/a       0.0.ff05
n/a       0.0.ff06
n/a       0.0.ff07
```

For more information about the **lscss** command, see [“lscss - List subchannels” on page 582](#).

## Listing storage-class memory increments

Use the **lsscm** command to see the status and attributes of storage-class memory increments.

### About this task

Each storage-class memory increment can be accessed as a block device through a device node `/dev/scm<x>`. Optionally, you can partition a storage-class memory increment in up to seven partitions.

You can also use the **lsblk** command to list all block devices.

### Procedure

To list all storage-class memory increments, their status, and attributes, issue:

```
# lsscm
SCM Increment    Size    Name  Rank D_state O_state Pers ResID
-----
0000000000000000 16384MB scma   1      2      1    2    1
0000000040000000 16384MB scmb   1      2      1    2    1
```

See [“lsscm - List storage-class memory increments” on page 594](#) for details about the **lsscm** command.

## Combining SCM devices with LVM

You can use LVM to combine multiple SCM block devices into an arbitrary sized LVM device.

### Example

Configure SCM as any other block devices in LVM. If your version of LVM does not accept SCM devices as valid LVM device types and issues an error message, add the SCM devices to the LVM configuration file `/etc/lvm/lvm.conf`. Add the following line to the section labeled “devices”:

```
types = [ "scm", 8 ]
```



---

## Chapter 14. Channel-attached tape device driver

**LPAR and z/VM:** The channel-attached tape device driver applies to Linux in LPAR mode and to Linux on z/VM.

The tape device driver supports channel-attached tape devices on Red Hat Enterprise Linux 8.1 for Z.

SCSI tape devices that are attached through an FCP channel are handled by the zfcpx device driver (see [Chapter 12, “SCSI-over-Fibre Channel device driver,”](#) on page 151).

### Features

---

The tape device driver supports a range of channel-attached tape devices and functions of these devices.

- The tape device driver supports channel-attached tape drives that are compatible with IBM 3480, 3490, 3590, and 3592 magnetic tape subsystems. Various models of these device types are handled (for example, the 3490/10).
- 3592 devices that emulate 3590 devices are recognized and treated as 3590 devices.
- Logical character devices for non-rewinding and rewinding modes of operation (see [“Tape device modes and logical devices”](#) on page 195).
- Control operations through **mt** (see [“Using the mt command”](#) on page 197).
- Message display support (see [“tape390\\_display - Display messages on tape devices and load tapes”](#) on page 645).
- Encryption support (see [“tape390\\_crypt - Manage tape encryption”](#) on page 641).
- Up to 128 physical tape devices.

### What you should know about channel-attached tape devices

---

A naming scheme helps you to keep track of your tape devices, their modes of operation, and the corresponding device nodes.

#### Tape device modes and logical devices

The tape device driver supports up to 128 physical tape devices. Each physical tape device can be used as a character device in non-rewinding or in rewinding mode.

In non-rewinding mode, the tape remains at the current position when the device is closed. In rewinding mode, the tape is rewound when the device is closed. The tape device driver treats each mode as a separate logical device.

Both modes provide sequential (traditional) tape access without any caching done in the kernel.

You can use a channel-attached tape device in the same way as any other Linux tape device. You can write to it and read from it using standard Linux facilities such as GNU **tar**. You can perform control operations (such as rewinding the tape or skipping a file) with the standard tool **mt**.

#### Tape naming scheme

The tape device driver assigns minor numbers along with an index number when a physical tape device comes online.

The naming scheme for tape devices is summarized in [Table 29 on page 196](#):

Table 29. Tape device names and minor numbers

Device	Names	Minor numbers
Non-rewinding character devices	ntibm<n>	2×<n>
Rewinding character devices	rtibm<n>	2×<n>+1

where <n> is the index number that is assigned by the device driver. The index starts from 0 for the first physical tape device, 1 for the second, and so on. The name space is restricted to 128 physical tape devices, so the maximum index number is 127 for the 128th physical tape device.

The index number and corresponding minor numbers and device names are not permanently associated with a specific physical tape device. When a tape device goes offline, it surrenders its index number. The device driver assigns the lowest free index number when a physical tape device comes online. An index number with its corresponding device names and minor numbers can be reassigned to different physical tape devices as devices go offline and come online.

**Tip:** Use the **lstape** command (see “[lstape - List tape devices](#)” on page 597) to determine the current mapping of index numbers to physical tape devices.

When the tape device driver is loaded, it dynamically allocates a major number to channel-attached character tape devices. A different major number might be used when the device driver is reloaded, for example when Linux is rebooted.

For online tape devices directories provide information about the major/minor assignments. The directories have the form:

- /sys/class/tape390/ntibm<n>
- /sys/class/tape390/rtibm<n>

Each of these directories has a dev attribute. The value of the dev attribute has the form <major>:<minor>, where <major> is the major number of the device and <minor> is the minor number specific to the logical device.

### Example

In this example, four physical tape devices are present, with three of them online. The TapeNo column shows the index number and the BusID indicates the associated physical tape device. In the example, no index number is allocated to the tape device in the first row. The device is offline and, currently, no names and minor numbers are assigned to it.

```
# lstape --ccw-only
TapeNo  BusID      CuType/Model DevType/DevMod BlkSize State  Op      MedState
0       0.0.01a1    3490/10      3490/40        auto  UNUSED ---  UNLOADED
1       0.0.01a0    3480/01      3480/04        auto  UNUSED ---  UNLOADED
2       0.0.0172    3590/50      3590/11        auto  IN_USE ---  LOADED
N/A     0.0.01ac     3490/10      3490/40        N/A   OFFLINE --- N/A
```

Table 30 on page 196 summarizes the resulting names and minor numbers.

Table 30. Example names and minor numbers

Bus ID	Index (TapeNo)	Device	Device name	Minor number
0.0.01a1	0	non-rewind	ntibm0	0
		rewind	rtibm0	1
0.0.01a0	1	non-rewind	ntibm1	2
		rewind	rtibm1	3
0.0.0172	2	non-rewind	ntibm2	4
		rewind	rtibm2	5



Table 30. Example names and minor numbers (continued)

Bus ID	Index (TapeNo)	Device	Device name	Minor number
0.0.01ac	not assigned	n/a	n/a	not assigned

For the online character devices, the major/minor assignments can be read from their respective representations in `/sys/class`:

```
# cat /sys/class/tape390/ntibm0/dev
254:0
# cat /sys/class/tape390/rtibm0/dev
254:1
# cat /sys/class/tape390/ntibm1/dev
254:2
# cat /sys/class/tape390/rtibm1/dev
254:3
# cat /sys/class/tape390/ntibm2/dev
254:4
# cat /sys/class/tape390/rtibm2/dev
254:5
```

In the example, the major number that is used for character devices is 254. The minor numbers are as expected for the respective device names.

## Tape device nodes

Applications access tape devices by device nodes. Red Hat Enterprise Linux 8.1 uses `udev` to create two device nodes for each tape device.

The device nodes have the form `/dev/<name>`, where `<name>` is the device name according to “Tape naming scheme” on page 195.

For example, if you have two tape devices, `udev` creates the device nodes that are shown in Table 31 on page 197:

Table 31. Tape device nodes

Node for	non-rewind device	rewind device
First tape device	<code>/dev/ntibm0</code>	<code>/dev/rtibm0</code>
Second tape device	<code>/dev/ntibm1</code>	<code>/dev/rtibm1</code>

## Using the `mt` command

There are differences between the MTIO interface for channel-attached tapes and other tape drives. Correspondingly, some operations of the `mt` command are different for channel-attached tapes.

The `mt` command handles basic tape control in Linux. See the man page for general information about `mt`.

Basic Linux tape control is handled by the `mt` utility. See the man page for general information about `mt`.

### **setdensity**

has no effect because the recording density is automatically detected on channel-attached tape hardware.

### **drvbuffer**

has no effect because channel-attached tape hardware automatically switches to unbuffered mode if buffering is unavailable.

### **lock / unlock**

have no effect because channel-attached tape hardware does not support media locking.

### **setpartition / mkpartition**

have no effect because channel-attached tape hardware does not support partitioning.

**status**

returns a structure that, aside from the block number, contains mostly SCSI-related data that does not apply to the tape device driver.

**load**

does not automatically load a tape but waits for a tape to be loaded manually.

**offline or rewoffl or eject**


all include expelling the currently loaded tape. Depending on the stacker mode, it might attempt to load the next tape (see [“Loading and unloading tapes” on page 202](#) for details).

## Loading the tape device driver

---

You must load the appropriate tape device driver module before you can work with tape devices.

Use the **modprobe** command to ensure that any other required modules are loaded in the correct order.

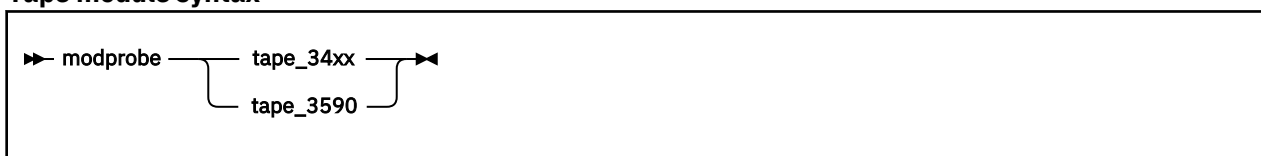**Tape module syntax**

See the **modprobe** man page for details about **modprobe**.

To load the tape device driver module automatically at boot time, see the section on persistent module loading in *Configuring basic system settings on Red Hat Enterprise Linux 8.1*

## Working with tape devices

---

Typical tasks for working with tape devices include displaying tape information, controlling compression, and loading and unloading tapes.

For information about working with the channel measurement facility, see [Chapter 54, “Channel measurement facility,” on page 471](#).

For information about displaying messages on a tape device's display unit, see [“tape390\\_display - Display messages on tape devices and load tapes” on page 645](#).

See [“Working with newly available devices” on page 10](#) to avoid errors when working with devices that have become available to a running Linux instance.

- [“Setting a tape device online or offline” on page 198](#)
- [“Displaying tape information” on page 200](#)
- [“Enabling compression” on page 202](#)
- [“Loading and unloading tapes” on page 202](#)

### Setting a tape device online or offline

Set a tape device online or offline with the **chccwdev** command or through the `online` sysfs attribute of the device.

**About this task**

Setting a physical tape device online makes both corresponding logical devices accessible:

- The non-rewind character device
- The rewind character device

At any time, the device can be online to a single Linux instance only. You must set the tape device offline to make it accessible to other Linux instances in a shared environment.

## Procedure

Use the **chzdev** command (see [“chzdev - Configure IBM Z devices” on page 515](#)) to set a tape online or offline.

Alternatively, you can write 1 to the device's online attribute to set it online or 0 to set it offline.

## Results

When a physical tape device is set online, the device driver assigns an index number to it. This index number is used in the standard device nodes (see [“Tape device nodes” on page 197](#)) to identify the corresponding logical devices. The index number is in the range 0 - 127. A maximum of 128 physical tape devices can be online concurrently.

If you are using the standard device nodes, you must find out which index number the tape device driver has assigned to your tape device. This index number, and consequently the associated standard device node, can change after a tape device was set offline and back online.

If you need to know the index number, issue a command of this form:

```
# lstape --ccw-only <device_bus_id>
```

where *<device\_bus\_id>* is the device bus-ID that corresponds to the physical tape device. The index number is the value in the TapeNo column of the command output. For more information about the **lstape** command, see [“lstape - List tape devices” on page 597](#).

## Examples

- To set a physical tape device with device bus-ID 0.0.015f online, first load the module if you have not already done so:

```
# modprobe tape_3590
```

Then issue:

```
# chzdev -e -a tape 015f
```

Alternatively, issue:

```
# chccwdev -e 0.0.015f
```

or

```
# echo 1 > /sys/bus/ccw/devices/0.0.015f/online
```

To find the index number that the tape device driver assigned to the device, issue:

```
# lstape 0.0.015f --ccw-only
TapeNo  BusID      CuType/Model  DevType/Model  BlkSize  State   Op      MedState
2        0.0.015f    3480/01      3480/04        auto    UNUSED  ---    LOADED
```

In the example, the assigned index number is 2. The standard device nodes for working with the device until it is set offline are then:

- /dev/ntibm2 for the non-rewinding device
- /dev/rtibm2 for the rewinding device
- To set a physical tape device with device bus-ID 0.0.015f offline, issue:

```
# chzdev -d -a tape 015f
```

or

```
# chccwdev -d 0.0.015f
```

or

```
# echo 0 > /sys/bus/ccw/devices/0.0.015f/online
```

## Displaying tape information

Use the **lstape** command to display summary information about your tape devices, or read tape information from sysfs.

Alternatively, you can read tape information from sysfs. Each physical tape device is represented in a sysfs directory of the form

```
/sys/bus/ccw/devices/<device_bus_id>
```

where *<device\_bus\_id>* is the device bus-ID that corresponds to the physical tape device. This directory contains a number of attributes with information about the physical device. The attributes: blocksize, state, operation, and medium\_state, might not show the current values if the device is offline.

Table 32. Tape device attributes

Attribute	Explanation
online	1 if the device is online or 0 if it is offline (see <a href="#">“Setting a tape device online or offline”</a> on page 198)
cmb_enable	1 if channel measurement block is enabled for the physical device or 0 if it is not enabled (see <a href="#">Chapter 54, “Channel measurement facility,”</a> on page 471)
cutype	Type and model of the control unit
devtype	Type and model of the physical tape device
blocksize	Currently used block size in bytes or 0 for auto
state	State of the physical tape device, either of: <b>UNUSED</b> Device is not in use and is available to any operating system image in a shared environment <b>IN_USE</b> Device is being used as a character device by a process on this Linux image <b>OFFLINE</b> The device is offline. <b>NOT_OP</b> Device is not operational

Table 32. Tape device attributes (continued)

Attribute	Explanation
operation	<p>The current tape operation, for example:</p> <p>---</p> <p>No operation</p> <p><b>WRI</b></p> <p>Write operation</p> <p><b>RFO</b></p> <p>Read operation</p> <p><b>MSN</b></p> <p>Medium sense</p> <p>Several other operation codes exist, for example, for rewind and seek.</p>
medium_state	<p>The current state of the tape cartridge:</p> <p><b>1</b></p> <p>Cartridge is loaded into the tape device</p> <p><b>2</b></p> <p>No cartridge is loaded</p> <p><b>0</b></p> <p>The tape device driver does not have information about the current cartridge state</p>

## Procedure

Issue a command of this form to read an attribute:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/<attribute>
```

where *<attribute>* is one of the attributes of [Table 32 on page 200](#).

## Example

The following **lstape** command displays information about a tape device with bus ID 0.0.015f:

```
# lstape 0.0.015f --ccw-only
TapeNo  BusID      CuType/Model  DevType/Model  BlkSize  State   Op      MedState
2        0.0.015f    3480/01      3480/04        auto    UNUSED  ---     LOADED
```

This sequence of commands reads the same information from sysfs:

```
# cat /sys/bus/ccw/devices/0.0.015f/online
1
# cat /sys/bus/ccw/devices/0.0.015f/cmb_enable
0
# cat /sys/bus/ccw/devices/0.0.015f/cutype
3480/01
# cat /sys/bus/ccw/devices/0.0.015f/devtype
3480/04
# cat /sys/bus/ccw/devices/0.0.015f/blocksize
0
# cat /sys/bus/ccw/devices/0.0.015f/state
UNUSED
# cat /sys/bus/ccw/devices/0.0.015f/operation
---
# cat /sys/bus/ccw/devices/0.0.015f/medium_state
1
```

## Enabling compression

Control Improved Data Recording Capability (IDRC) compression with the **mt** command provided by the RPM **mt-st**.

### About this task

Compression is off after the tape device driver is loaded.

### Procedure

To enable compression, issue:

```
# mt -f <node> compression
```

or

```
# mt -f <node> compression 1
```

where *<node>* is the device node for a character device, for example, `/dev/ntibm0`.

To disable compression, issue:

```
# mt -f <tape> compression 0
```

Any other numeric value has no effect, and any other argument disables compression.

### Example

To turn on compression for a tape device with a device node `/dev/ntibm0` issue:

```
# mt -f /dev/ntibm0 compression 1
```

## Loading and unloading tapes

Unload tapes with the **mt** command. How to load tapes depends on the stacker mode of your tape hardware.

### Procedure

Unload tapes by issuing a command of this form:

```
# mt -f <node> unload
```

where *<node>* is one of the character device nodes.

Whether or not you can load tapes from your Linux instance depends on the stacker mode of your tape hardware. There are three possible modes:

#### manual

Tapes must always be loaded manually by an operator. You can use the **tape390\_display** command (see [“tape390\\_display - Display messages on tape devices and load tapes”](#) on page 645) to display a short message on the tape device’s display unit when a new tape is required.

#### automatic

If there is another tape present in the stacker, the tape device automatically loads a new tape when the current tape is expelled. You can load a new tape from Linux by expelling the current tape with the **mt** command.

## system

The tape device loads a tape when instructed from the operating system. From Linux, you can load a tape with the **tape390\_display** command (see [“tape390\\_display - Display messages on tape devices and load tapes”](#) on page 645). You cannot use the **mt** command to load a tape.

## Example

To expel a tape from a tape device that can be accessed through a device node `/dev/ntibm0`, issue:

```
# mt -f /dev/ntibm0 unload
```

Assuming that the stacker mode of the tape device is "system" and that a tape is present in the stacker, you can load a new tape by issuing:

```
# tape390_display -l "NEW TAPE" /dev/ntibm0
```

"NEW TAPE" is a message that is displayed on the tape devices display unit until the tape device receives the next tape movement command.





## Part 4. Networking

Red Hat Enterprise Linux 8.1 includes several network device drivers that are specific to z/Architecture.

### Newest version

You can find the newest version of this book at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### Restrictions

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

### Example

An example network setup that uses some available network setup types is shown in [Figure 44 on page 205](#).

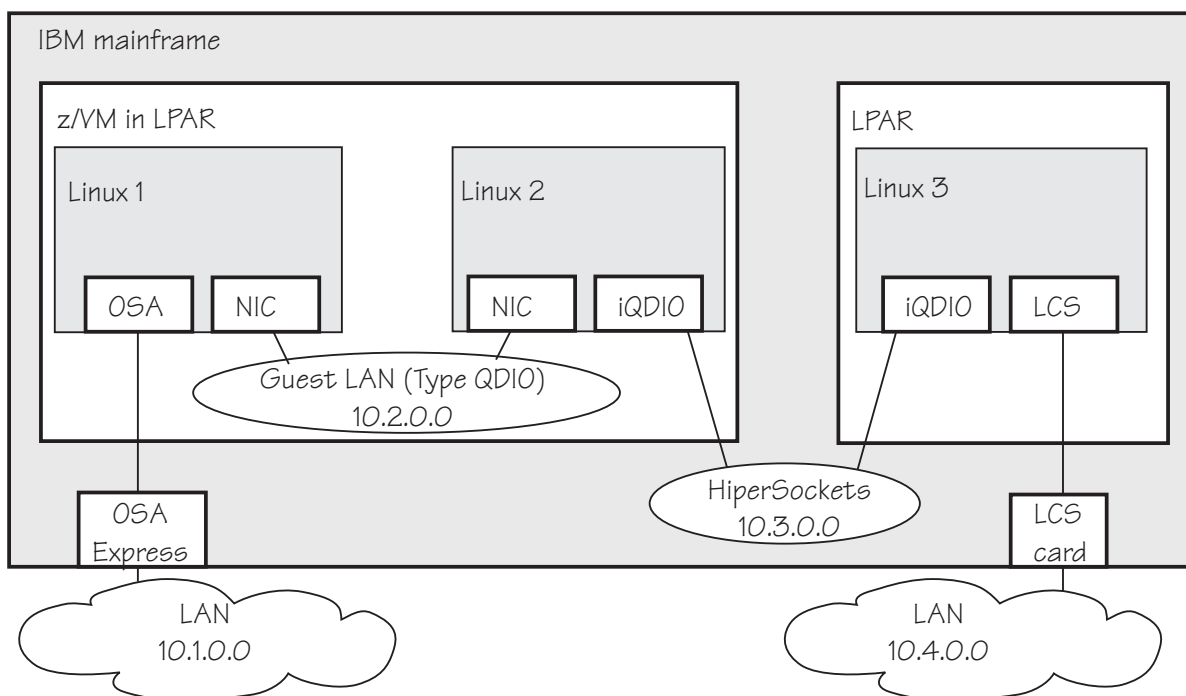


Figure 44. Networking example

In the example there are three Linux instances; two of them run as z/VM guests in one LPAR and a third Linux instance runs in another LPAR. Within z/VM, Linux instances can be connected through a guest LAN or VSWITCH. Within and between LPARs, you can connect Linux instances through HiperSockets. OSA-Express cards running in either non-QDIO mode (called LCS here) or in QDIO mode can connect the mainframe to an external network.

Table 33 on page 206 lists which control units and device type combinations are supported by the network device drivers.

<i>Table 33. Supported device types, control units, and corresponding device drivers</i>			
<b>Device type</b>	<b>Control unit</b>	<b>Device driver</b>	<b>Comment</b>
1732/01	1731/01	qeth	OSA configured as OSD
1732/02	1731/02	qeth	OSA configured as OSX
1732/03	1731/02	qeth	OSA configured as OSM
1732/05	1731/05	qeth	HiperSockets
0000/00	3088/01	lcs	P/390
0000/00	3088/08	ctcm	Virtual CTC under z/VM
0000/00	3088/1e	ctcm	FICON channel
0000/00	3088/1f	lcs	2216 Nways Multiaccess Connector
0000/00	3088/1f	ctcm	ESCON channel
0000/00	3088/60	lcs	OSA configured as OSE (non-QDIO)

# Chapter 15. qeth device driver for OSA-Express (QDIO) and HiperSockets

**LPAR and z/VM:** The qeth device driver applies to Linux in LPAR mode and to Linux on z/VM.

The qeth device driver supports a multitude of network connections, for example, connections through Open Systems Adapters (OSA), HiperSockets, guest LANs, and virtual switches.

**Real connections that use OSA-Express**

An IBM mainframe uses OSA-Express adapters, which are real LAN-adapter hardware, see [Figure 45 on page 207](#). These adapters provide connections to the outside world, but can also connect virtual systems (between LPARs or between z/VM guest virtual machines) within the mainframe. The qeth driver supports these adapters if they are defined to run in queued direct I/O (QDIO) mode (defined as OSD, OSM, or OSX in the hardware configuration). OSD-devices are the standard IBM Z LAN-adapters. For details about OSA-Express in QDIO mode, see *Open Systems Adapter-Express Customer's Guide and Reference*, SA22-7935.

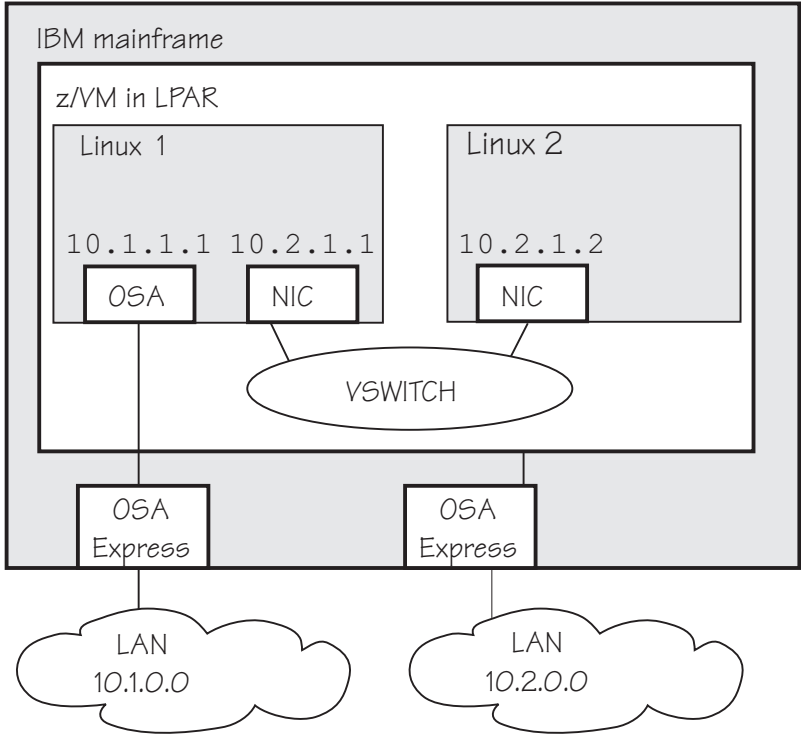


Figure 45. OSA-Express adapters are real LAN-adapter hardware

The qeth device driver supports OSA-Express features for the IBM Z mainframes that are relevant to Red Hat Enterprise Linux 8.1 as shown in [Table 34 on page 207](#):

Table 34. The qeth device driver support for OSA-Express features			
Feature	z15	z14 and z14 ZR1	z13 and z13s
OSA-Express7S	Gigabit Ethernet 10 Gigabit Ethernet 25 Gigabit Ethernet 1000Base-T Ethernet	25 Gigabit Ethernet	Not supported

Table 34. The qeth device driver support for OSA-Express features (continued)			
Feature	z15	z14 and z14 ZR1	z13 and z13s
<b>OSA-Express6S</b>	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet
<b>OSA-Express5S</b>	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet
<b>OSA-Express4S</b>	Not supported	Not supported	Gigabit Ethernet 10 Gigabit Ethernet 1000Base-T Ethernet

**Note:** Unless otherwise indicated, OSA-Express refers to the OSA-Express features as shown in [Table 34 on page 207](#).

The qeth device driver supports CHPIDs of type OSM and OSX:

#### OSM

provides connectivity to the intranode management network (INMN) from Unified Resource Manager functions to a zEnterprise® CPC. OSM is also used for machines in DPM mode.

#### OSX

provides connectivity to and access control for the intraensemble data network (IEDN), which is managed by Unified Resource Manager functions. A zEnterprise CPC and zBX within an ensemble are connected through the IEDN. See *zEnterprise System Introduction to Ensembles*, GC27-2609 and *zEnterprise System Ensemble Planning and Configuring Guide*, GC27-2608 for more details.

#### HiperSockets

An IBM mainframe uses internal connections that are called *HiperSockets*. These simulate QDIO network adapters and provide high-speed TCP/IP communication for operating system instances within and across LPARs. For details about HiperSockets, see *HiperSockets Implementation Guide*, SG24-6816.

#### Virtual connections for Linux on z/VM

z/VM offers virtualized LAN-adapters that enable connections between z/VM guest virtual machines and the outside world. It allows definitions of simulated network interface cards (NICs) attached to certain z/VM guest virtual machines. The NICs can be connected to a simulated LAN segment called *guest LAN* for z/VM internal communication between z/VM guest virtual machines, or they can be connected to a virtual switch called *VSWITCH* for external LAN connectivity.

#### Guest LAN

Guest LANs represent a simulated LAN segment that can be connected to simulated network interface cards. There are three types of guest LANs:

- Simulated OSA-Express in layer 3 mode
- Simulated HiperSockets (layer 3) mode
- Simulated Ethernet in layer 2 mode

Each guest LAN is isolated from other guest LANs on the same system (unless some member of one LAN group acts as a router to other groups). See [Figure 46 on page 209](#).

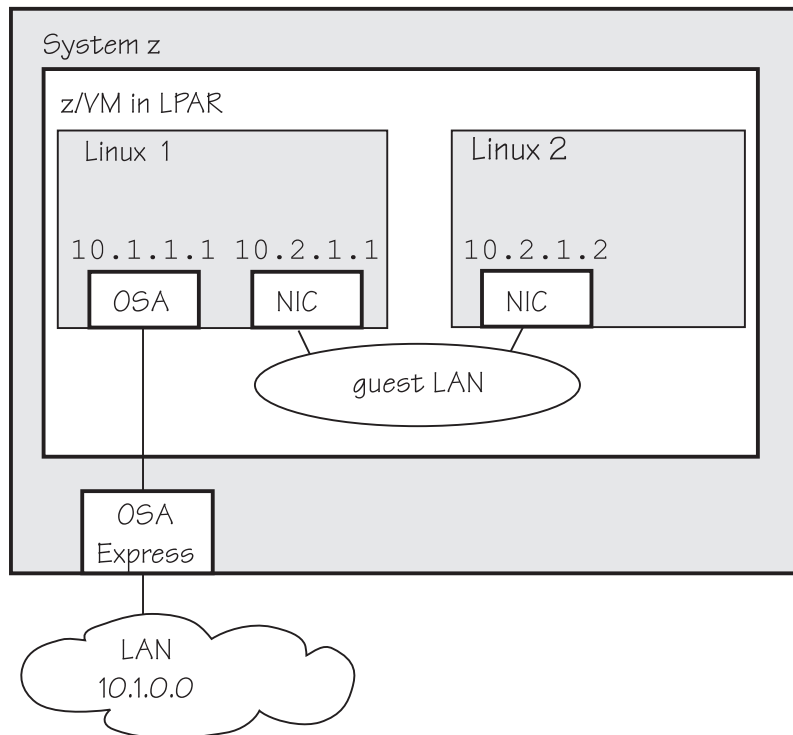


Figure 46. Guest LAN

### Virtual switch

A virtual switch (VSWITCH) is a special-purpose guest LAN that provides external LAN connectivity through an additional OSA-Express device served by z/VM without the need for a routing virtual machine, see Figure 47 on page 209.

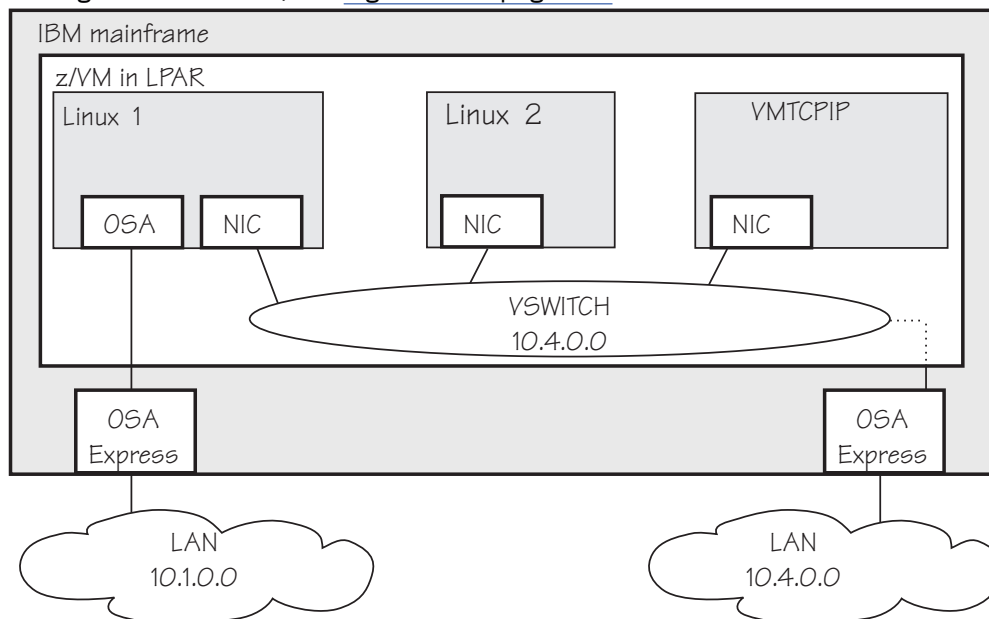


Figure 47. Virtual switch

A dedicated OSA adapter can be an option, but is not required for a VSWITCH.

From a Linux point of view there is no difference between guest LAN- and VSWITCH-devices; thus Linux talks about guest LAN-devices independently of their z/VM-attachment to a guest LAN or VSWITCH.

For information about guest LANs, virtual switches, and virtual HiperSockets, see *z/VM: Connectivity*, SC24-6267.

## Device driver functions

The qeth device driver supports many networking transport protocol functions, as well as offload functions and problem determination functions.

The qeth device driver supports functions listed in [Table 35 on page 210](#) and [Table 36 on page 211](#).

<i>Table 35. Real connections</i>				
Function	OSA Layer 2	OSA Layer 3	HiperSockets Layer 2	HiperSockets Layer 3
<b>Basic device or protocol functions</b>				
IPv4/multicast/broadcast	Yes/Yes/Yes	Yes/Yes/Yes	Yes/Yes/Yes	Yes/Yes/Yes
IPv6/multicast	Yes/Yes	Yes/Yes	Yes/Yes	Yes/Yes
Non-IP traffic	Yes	Yes	Yes	No
VLAN IPv4/IPv6/non IP	sw/sw/sw	hw/sw/sw	sw/sw/sw	hw/hw/No
Linux ARP	Yes	No (hw ARP)	Yes	No
Linux neighbor solicitation	Yes	Yes	Yes	No
Unique MAC address	Yes (random for LPAR)	No	Yes	Yes
Change MAC address	Yes	No	Yes	No
Promiscuous mode	Yes (bridgeport)	No	Yes (bridgeport or VNIC characteristics: flooding)	<ul style="list-style-type: none"> <li>• Yes (for sniffer=1)</li> <li>• No (for sniffer=0)</li> </ul>
MAC headers send/receive	Yes/Yes	faked/faked	Yes/Yes	faked/faked
ethtool support	Yes	Yes	Yes	Yes
Bonding	Yes	No	Yes	No
Priority queueing	Yes	Yes	Yes	Yes
Secondary unicast MAC address	Yes	No	Yes	No
Bridge port	Yes	No	Yes	No
<b>Offload features</b>				
TCP segmentation offload (TSO)	Yes	Yes	No	No
Inbound (rx) checksum	Yes	Yes	No	No
Outbound (tx) checksum	Yes	Yes	No	No
<b>OSA/QETH specific features</b>				
Special device driver setup for VIPA	No	required	No	Yes

Table 35. Real connections (continued)

Function	OSA Layer 2	OSA Layer 3	HiperSockets Layer 2	HiperSockets Layer 3
Special device driver setup for proxy ARP	No	required	No	Yes
Special device driver setup for IP takeover	No	required	No	Yes
Special device driver setup for routing IPv4/IPv6	No/No	required/required	No/No	Yes/Yes
Receive buffer count	Yes	Yes	Yes	Yes
Direct connectivity to z/OS	Yes by HW	Yes	No	Yes
SNMP support	Yes	Yes	No	No
Multiport support	Yes	Yes	No	No
Data connection isolation	Yes	Yes	No	No
<b>Problem determination</b>				
Hardware trace	Yes	Yes	No	No
<p>Legend:</p> <p><b>No</b> - Function not supported or not required.</p> <p><b>Yes</b> - Function supported.</p> <p><b>hw</b> - Function performed by hardware.</p> <p><b>sw</b> - Function performed by software.</p> <p><b>faked</b> - Function will be simulated.</p> <p><b>required</b> - Function requires special setup.</p>				

Table 36. z/VM VSWITCH or Guest LAN connections

Function	Emulated OSA Layer 2	Emulated OSA Layer 3	Emulated HiperSockets Layer 3
<b>Basic device or protocol features</b>			
IPv4/multicast/broadcast	Yes/Yes/Yes	Yes/Yes/Yes	Yes/Yes/Yes
IPv6/multicast	Yes/Yes	Yes/Yes	No/No
Non-IP traffic	Yes	No	No
VLAN IPv4/IPv6/non IP	sw/sw/sw	hw/sw/No	hw/No/No
Linux ARP	Yes	No (hw ARP)	No
Linux neighbor solicitation	Yes	Yes	No
Unique MAC address	Yes	Yes	Yes
Change MAC address	Yes	No	No
Promiscuous mode	Yes	Yes	No
MAC headers send/receive	Yes/Yes	faked/faked	faked/faked
ethtool support	Yes	Yes	Yes

Table 36. z/VM VSWITCH or Guest LAN connections (continued)

Function	Emulated OSA Layer 2	Emulated OSA Layer 3	Emulated HiperSockets Layer 3
Bonding	Yes	No	No
Priority queueing	Yes	Yes	Yes
Secondary unicast MAC address	Yes	No	No
<b>Offload features</b>	No	No	No
<b>OSA/QETH specific features</b>			
Special device driver setup for VIPA	No	required	required
Special device driver setup for proxy ARP	No	required	required
Special device driver setup for IP takeover	No	required	required
Special device driver setup for routing IPv4/IPv6	No/No	required/required	required/required
Receive buffer count	Yes	Yes	Yes
Direct connectivity to z/OS	No	Yes	Yes
SNMP support	No	No	No
Multiport support	No	No	No
Data connection isolation	No	No	No
<b>Problem determination</b>			
Hardware trace	No	No	No
Legend: <b>No</b> - Function not supported or not required. <b>Yes</b> - Function supported. <b>hw</b> - Function performed by hardware. <b>sw</b> - Function performed by software. <b>faked</b> - Function will be simulated. <b>required</b> - Function requires special setup.			

## What you should know about the qeth device driver

Interface names are assigned to qeth group devices, which map to subchannels and their corresponding device numbers and device bus-IDs. An OSA-Express adapter can handle both IPv4 and IPv6 packets.

### Layer 2 and layer 3

The qeth device driver consists of a common core and two device disciplines: layer 2 and layer 3.

In layer 2 mode, OSA routing to the destination is based on MAC addresses. A local MAC address is assigned to each interface of a Linux instance and registered in the OSA Address Table. These MAC addresses are unique and different from the MAC address of the OSA adapter. See [“MAC headers in layer 2 mode”](#) on page 215 for details.



In layer 3 mode, all interfaces of all Linux instances share the MAC address of the OSA adapter. OSA routing to the destination Linux instance is based on IP addresses. See [“MAC headers in layer 3 mode”](#) on page 216 for details.

### The layer 2 discipline (qeth\_l2)

The layer 2 discipline supports:

- OSA devices and z/VM virtual NICs that couple to VSWITCHes or QDIO guest LANs running in layer 2 mode
- HiperSockets devices
- OSM (OSA-Express for Unified Resource Manager) devices
- OSX (OSA-Express for zBX) devices for IEDN

The layer 2 discipline is the default setup for OSA. On HiperSockets the default continues to be layer 3. See [“Setting the layer2 attribute”](#) on page 225 for details.

For z/VM NICs that are coupled to a guest LAN or VSWITCH, the qeth device driver detects the required layer and configures it automatically. If a qeth device is created before the NIC is coupled, the qeth device driver defaults to layer 2.

### The layer 3 discipline (qeth\_l3)

The layer 3 discipline supports:

- OSA devices and z/VM virtual NICs that couple to VSWITCHes or QDIO guest LANs that are running in layer 3 mode (with faked link layer headers)
- HiperSockets and HiperSockets guest LAN devices that are running in layer 3 mode (with faked link layer headers)
- OSX (OSA-Express for zBX) devices for IEDN

This discipline supports those devices that are not capable of running in layer 2 mode. Not all Linux networking features are supported and others need special setup or configuration. See [Table 42](#) on page 223. Some performance-critical applications might benefit from being layer 3.

Layer 2 and layer 3 interfaces cannot communicate within a HiperSockets LAN or within a VSWITCH or guest LAN. However, a shared OSA adapter can convert traffic between layer 2 and layer 3 networks.

## qeth group devices

The qeth device driver requires three I/O subchannels for each HiperSockets CHPID or OSA-Express CHPID in QDIO mode. One subchannel is for control reads, one for control writes, and the third is for data.

The qeth device driver uses the QDIO protocol to communicate with the HiperSockets and OSA-Express adapter.

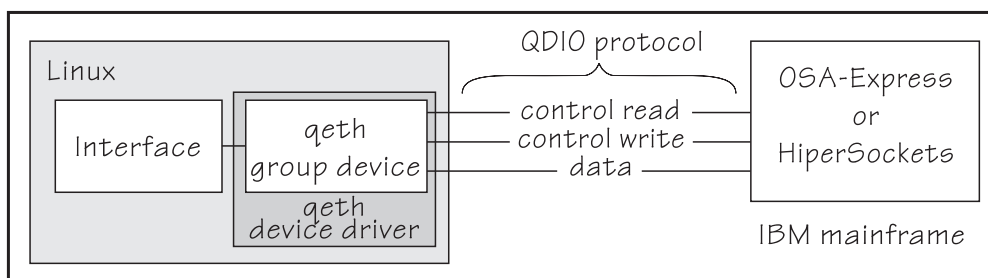


Figure 48. I/O subchannel interface

The three device bus-IDs that correspond to the subchannel triplet are grouped as one qeth group device. The following rules apply for the device bus-IDs:

#### read

no specific rules.

**write**

must be the device bus-ID of the read subchannel plus one.

**data**

can be any free device bus-ID on the same CHPID.

You can configure different triplets of device bus-IDs on the same CHPID differently. For example, if you have two triplets on the same CHPID they can have different attribute values for priority queueing.

## Overview of the steps for setting up a qeth group device

You need to perform several steps before user-space applications on your Linux instance can use a qeth group device.

**Before you begin**

Find out how the hardware is configured and which qeth device bus-IDs are on which CHPID, for example by looking at the IOCDS. Identify the device bus-IDs that you want to group into a qeth group device. The three device bus-IDs must be on the same CHPID.

**Procedure**

Perform these steps to allow user-space applications on your Linux instance to use a qeth group device:

1. Create the qeth group device.

After booting Linux, each qeth device bus-ID is represented by a subdirectory in `/sys/bus/ccw/devices/`. These subdirectories are then named with the bus IDs of the devices. For example, a qeth device with bus IDs 0.0.fc00, 0.0.fc01, and 0.0.fc02 is represented as `/sys/bus/ccw/drivers/qeth/0.0.fc00`

2. Configure the device.
3. Set the device online.
4. Activate the device and assign an IP address to it.

**What to do next**

These tasks and the configuration options are described in detail in [“Working with qeth devices”](#) on page 221.

## qeth interface names and device directories

Red Hat Enterprise Linux automatically assigns interface names to the qeth group devices. The qeth device driver creates the corresponding sysfs structures.

While an interface is online, it is represented in sysfs as:

```
/sys/class/net/<interface>
```

The mapping between interface names and the device bus-ID that represents the qeth group device in sysfs is preserved when a device is set offline and back online.

[“Finding out the interface name of a qeth group device”](#) on page 231 and [“Finding out the bus ID of a qeth interface”](#) on page 232 provide information about mapping device bus-IDs and interface names.

## Support for IP Version 6 (IPv6)

The qeth device driver supports IPv6 in many network setups.

IPv6 is supported on:

- Ethernet interfaces of the OSA-Express adapter that runs in QDIO mode.
- HiperSockets layer 2 and layer 3 interfaces.
- z/VM guest LAN interfaces running in QDIO or HiperSockets layer 3 mode.
- z/VM guest LAN and VSWITCH interfaces in layer 2.

There are noticeable differences between the IP stacks for versions 4 and 6. Some concepts in IPv6 are different from IPv4, such as neighbor discovery, broadcast, and Internet Protocol security (IPsec). IPv6 uses a 16-byte address field, while the addresses under IPv4 are 4 bytes in length.

Stateless autoconfiguration generates unique IP addresses for all Linux instances, even if they share an OSA-Express adapter with other operating systems.

Be aware of the IP version when you specify IP addresses and when you use commands that return IP version-specific output (such as **qetharp**).

## MAC headers in layer 2 mode

In LAN environments, data packets find their destination through Media Access Control (MAC) addresses in their MAC header.

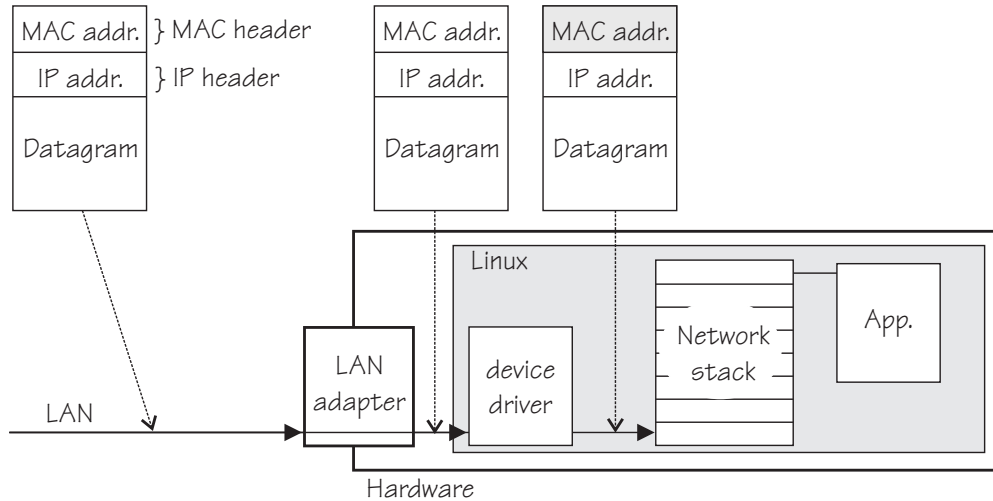


Figure 49. Standard IPv4 processing

MAC address handling as shown in Figure 49 on page 215) applies to non-mainframe environments and a mainframe environment with an OSA-Express adapter where the layer2 option is enabled.

The layer2 option keeps the MAC addresses on incoming packets. Incoming and outgoing packets are complete with a MAC header at all stages between the Linux network stack and the LAN as shown in Figure 49 on page 215. This layer2-based forwarding requires unique MAC addresses for all concerned Linux instances.

In layer 2 mode, the Linux TCP/IP stack has full control over the MAC headers and the neighbor lookup. The Linux TCP/IP stack does not configure IPv4 or IPv6 addresses into the hardware, but requires a unique MAC address for the card.

When Linux is running as a z/VM guest, the qeth device driver obtains a MAC address for each L2 device from the z/VM host. No configuration is necessary.

When Linux is running in an LPAR and you work with a directly attached OSA adapter in QDIO mode, you should assign a unique MAC address.

To assign a MAC address, add a line `MACADDR='<MAC address>'` to the configuration file `/etc/sysconfig/network-scripts/ifcfg-if-name`. Alternatively, you can set the MAC address by issuing the command:

```
ip link set addr <MAC address> dev <interface>
```

**Note:** Be sure not to assign the MAC address of the OSA-Express adapter to your Linux instance.

For OSX and OSM CHPIDs, you cannot set your own MAC addresses. Linux uses the MAC addresses defined by the Unified Resource Manager.

For HiperSockets connections, a MAC address is generated. For most purposes the generated address is adequate. However, you can change the address by using the **ip** command if you need to.

## MAC headers in layer 3 mode

A qeth layer 3 mode device driver is an Ethernet offload engine for IPv4 and a partial Ethernet offload engine for IPv6. Hence, there are some special things to understand about the layer 3 mode.

To support IPv6 and protocols other than IPv4, the device driver registers a layer 3 card as an Ethernet device to the Linux TCP/IP stack.

In layer 3 mode, the OSA-Express adapter in QDIO mode removes the MAC header with the MAC address from incoming IPv4 packets. It uses the registered IP addresses to forward a packet to the recipient TCP/IP stack. See [Figure 50 on page 216](#). Thus the OSA-Express adapter is able to deliver IPv4 packets to the correct Linux images. Apart from broadcast packets, a Linux image can get only packets for IP addresses it configured in the stack and registered with the OSA-Express adapter.

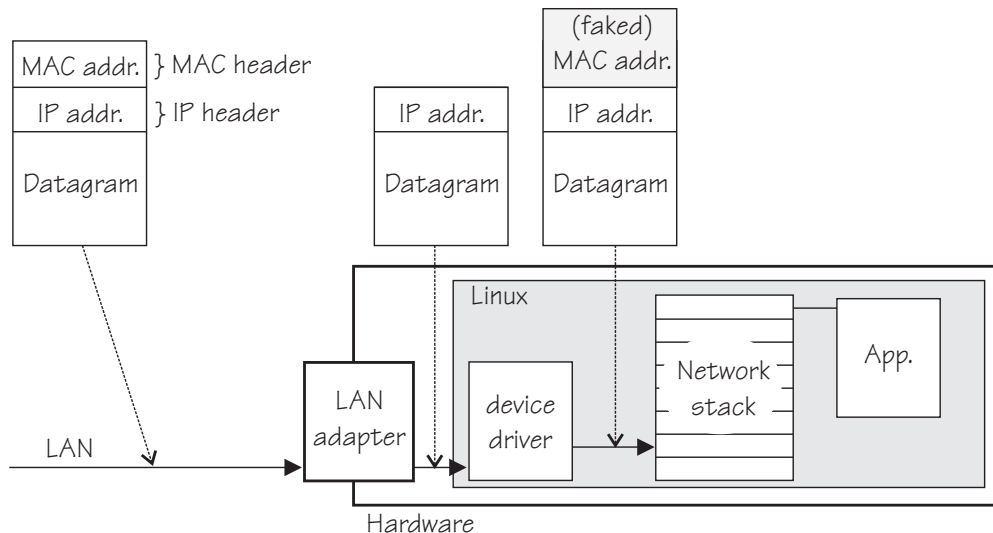


Figure 50. MAC address handling in layer3 mode

The OSA-Express QDIO microcode builds MAC headers for outgoing IPv4 packets and removes them from incoming IPv4 packets. Hence, the operating systems' network stacks send and receive only IPv4 packets without MAC headers.

This lack of MAC headers can be a problem for applications that expect MAC headers. For examples of how such problems can be resolved, see [“Setting up for DHCP with IPv4” on page 267](#).

### Outgoing frames

The qeth device driver registers the layer 3 card as an Ethernet device. Therefore, the Linux TCP/IP stack will provide complete Ethernet frames to the device driver.

If the hardware does not require the Ethernet frame (for example, for IPv4) the driver removes the Ethernet header prior to sending the frame to the hardware. If necessary information like the Ethernet target address is not available (because of the offload functionality) the value is filled with the hardcoded address FAKELL.

Table 37. Ethernet addresses of outgoing frames		
Frame	Destination address	Source address
IPv4	FAKELL	Real device address
IPv6	Real destination address	Real device address
Other packets	Real destination address	Real device address

### Incoming frames

The device driver provides Ethernet headers for all incoming frames.

If necessary information like the Ethernet source address is not available (because of the offload functionality) the value is filled with the hardcoded address FAKELL.

Table 38. Ethernet addresses of incoming frames		
Frame	Destination address	Source address
IPv4	Real device address	FAKELL
IPv6	Real device address	FAKELL
Other packets	Real device address	Real source address

Note that if a source or destination address is a multicast or broadcast address the device driver can provide the corresponding (real) Ethernet multicast or broadcast address even when the packet was delivered or sent through the offload engine. Always providing the link layer headers enables packet socket applications like **tcpdump** to work properly on a qeth layer 3 device without any changes in the application itself (the patch for libpcap is no longer required).

While the faked headers are syntactically correct, the addresses are not authentic, and hence applications requiring authentic addresses will not work. Some examples are given in [Table 39 on page 217](#).

Table 39. Applications that react differently to faked headers		
Application	Support	Reason
tcpdump	Yes	Displays only frames, fake Ethernet information is displayed.
iptables	Partially	As long as the rule does not deal with Ethernet information of an IPv4 frame.
dhcp	Yes	Is non-IPv4 traffic.

### IP addresses

The network stack of each operating system that shares an OSA-Express adapter in QDIO mode registers all its IP addresses with the adapter.

Whenever IP addresses are deleted from or added to a network stack, the device drivers download the resulting IP address list changes to the OSA-Express adapter.

For the registered IP addresses, the OSA-Express adapter off-loads various functions, in particular also:

- Handling MAC addresses and MAC headers
- ARP processing

### ARP

The OSA-Express adapter in QDIO mode responds to Address Resolution Protocol (ARP) requests for all registered IPv4 addresses.

ARP is a TCP/IP protocol that translates 32-bit IPv4 addresses into the corresponding hardware addresses. For example, for an Ethernet device, the hardware addresses are 48-bit Ethernet Media Access Control (MAC) addresses. The mapping of IPv4 addresses to the corresponding hardware addresses is defined in the ARP cache. When it needs to send a packet, a host consults the ARP cache of its network adapter to find the MAC address of the target host.

If there is an entry for the destination IPv4 address, the corresponding MAC address is copied into the MAC header and the packet is added to the appropriate interface's output queue. If the entry is not found, the ARP functions retain the IPv4 packet, and broadcast an ARP request asking the destination host for its MAC address. When a reply is received, the packet is sent to its destination.

### Notes:

1. On an OSA-Express adapter in QDIO mode, do not set the NO\_ARP flag on the Linux Ethernet device. The device driver disables the ARP resolution for IPv4. Because the hardware requires no neighbor lookup for IPv4, but neighbor solicitation for IPv6, the NO\_ARP flag is not allowed on the Linux Ethernet device.
2. On HiperSockets, which is a full Ethernet offload engine for IPv4 and IPv6 and supports no other traffic, the device driver sets the NO\_ARP flag on the Linux Ethernet interface. Do not remove this flag from the interface.

## Layer 2 promiscuous mode

OSA and HiperSockets ports that operate in layer 2 mode can be set up to receive all frames that are addressed to unknown MAC addresses.

On most architectures, traffic between operating systems and networks is handled by Ethernet Network Interface Controllers (NICs). NICs usually filter incoming traffic to admit only frames with destination MAC addresses that are registered with the NIC.

However, a NIC can also be configured to receive and pass to the operating system all Ethernet frames that reach it, regardless of the destination MAC address. This mode of operation is known as "promiscuous mode". For example, promiscuous mode is a prerequisite for configuring a NIC as a member of a Linux software bridge.

For more information about how to set up a software bridge, see the documentation that is provided by Red Hat Enterprise Linux, or the bridging how-to available at <http://www.tldp.org/HOWTO/BRIDGE-STP-HOWTO>

On IBM Z, you can realize a promiscuous mode for Ethernet traffic through a bridge port configuration or through Virtual Network Interface Controller (VNIC) characteristics. OSA devices can be configured as bridge ports. HiperSockets Devices can be configured either as bridge ports or with VNIC characteristics, but not both simultaneously.

### VNIC characteristics

With (VNIC) characteristics, you can set and fine-tune a promiscuous mode for HiperSockets devices, (see [“Advanced packet-handling configuration”](#) on page 253).

### Bridge ports

Linux can assign a bridge port *role* to a logical port, and the adapter assigns an active *state* to one of the logical ports to which a role was assigned. A local port in active bridge port state receives all Ethernet frames with unknown destination MAC addresses.

[Figure 51 on page 219](#) shows a setup with a HiperSockets bridge port and an OSA bridge port.

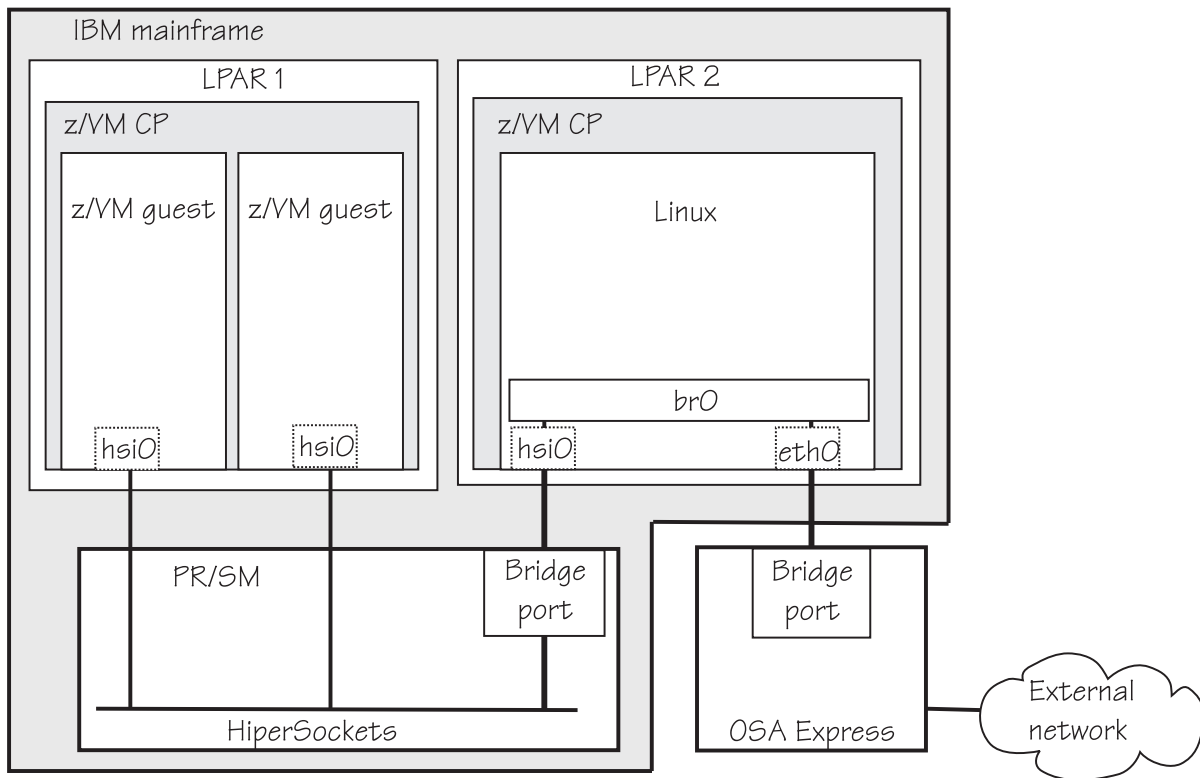


Figure 51. HiperSockets and OSA bridge port in Linux

HiperSockets only: On IQDX channels permission to configure ports as bridge ports must be granted in IBM zEnterprise Unified Resource Manager (zManager). On machines in PR/SM mode, bridge ports can only be configured on IQD channels that are defined as "external-bridged" in the IOCDS. On machines in DPM mode, bridge ports can be configured on any IQD channel.

### Differences between promiscuous mode and bridge-port roles

Making a logical port of an OSA or HiperSockets adapter an active bridge port is similar to enabling promiscuous mode on a non-mainframe NIC that is connected to a real Ethernet switch. However, there are important differences:

#### Number of ports in promiscuous mode

- Real switches: Any number of interfaces that are connected to a real switch can be turned to promiscuous mode, and all of them then receive frames with unknown destination addresses.
- Bridge ports on Z: Although you can assign the bridge-port role to multiple ports of a single OSA or HiperSockets adapter, only one port is active and receives traffic to unknown destinations.

#### Interception of traffic to other systems

- Real switches: A port of a real switch can be configured to receive frames with both known and unknown destinations. If a NIC in promiscuous mode is connected to the port, the corresponding host receives a copy of all traffic that passes through the switch. This includes traffic that is destined to other hosts connected to this switch.
- Bridge ports on Z: Only frames with unknown destinations are passed to the operating system. It is not possible to intercept traffic addressed to systems connected to other ports of the same OSA adapter.
- On Z: The HiperSockets network traffic analyzer or z/VM guest LAN sniffer can be used to intercept traffic that is destined for other ports.

### Limitation by the source of traffic (OSA bridge port only)

- Real switches and HiperSockets bridge-port LAN: Frames with unknown destination MAC addresses are delivered to the promiscuous interfaces regardless of the port through which the frames enter the switch or HiperSockets adapter.
- OSA bridge port only: An active bridge port *learns* which MAC addresses need to be routed to the owning system by analyzing ARP and other traffic. Incoming frames are routed to the active bridge port if their destination MAC address:
  - Matches an address that is learned or registered with the bridge port
  - Is not learned or registered with any of the local ports of the OSA adapter, but arrived from the physical Ethernet port

### Bridge port roles

Linux can assign a primary or secondary role to a logical port of an OSA or a HiperSockets adapter. Only one logical port of such an adapter can be assigned the primary role, but multiple other logical ports can be assigned secondary role. When one or more logical ports of an adapter are assigned primary or secondary role, the hardware ensures that exactly one of these ports is active. The active port receives frames with unknown destination. When a port with primary role is present, it always becomes active. When only ports with secondary role are present, the hardware decides which one becomes active. Changes in the ports' state are reported to Linux user space through udev events.

You can set a bridge port role either directly by using the **bridge\_role** attribute or indirectly by using the **bridge\_reflect\_promisc** attribute. See [“Configuring a network device as a member of a Linux bridge”](#) on page 251.

## Setting up the qeth device driver


No module parameters exist for the qeth device driver. qeth devices are set up using sysfs.

### Loading the qeth device driver modules

You must load the qeth device driver before you can work with qeth devices.

Use the **modprobe** command to load the qeth device driver, and to automatically load all required additional modules in the correct order:

#### qeth module syntax

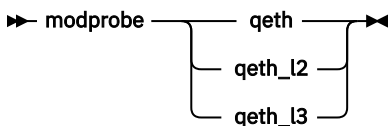

where:

#### qeth

is the core module that contains common functions that are used for both layer 2 and layer 3 disciplines.

#### qeth\_l2

is the module that contains layer 2 discipline-specific code.

#### qeth\_l3

is the module that contains layer 3 discipline-specific code.

When a qeth device is configured for a particular discipline, the driver tries to automatically load the corresponding discipline module.



## Switching the discipline of a qeth device

To switch the discipline of a device, the network interface must be shut down and the device must be offline.

Some devices can only run in one discipline, see “[Layer 2 and layer 3](#)” on page 212. The device driver rejects any request to switch the discipline of these devices.

If the new discipline is accepted by the device driver, the old network interface is deleted. When the new discipline is set online the first time, the new network interface is created.

## Removing the modules

Removing a module is not possible if there are cross dependencies between the discipline modules and the core module.

To release the dependencies from the core module to the discipline module, all devices of this discipline must be ungrouped. Now the discipline module can be removed. If all discipline modules are removed, the core module can be removed.

## Working with qeth devices

Typical tasks that you need to perform when working with qeth devices include creating group devices, finding out the type of a network adapter, and setting a device online or offline.

### About this task

Most of these tasks involve writing to and reading from attributes of qeth group devices in sysfs. This is useful on a running system where you want to make dynamic changes. If you want to make the changes persistent across IPLs, use the interface configuration files. Network configuration parameters are defined in `/etc/sysconfig/network-scripts/ifcfg-if_name`. An example of how to define a qeth device persistently is in the installation documentation on the Red Hat website. For a general discussion of network configuration files, see configuration documentation on the Red Hat documentation website

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

Table 40 on page 221 and Table 42 on page 223 serve as both a task overview and a summary of the attributes and the possible values you can write to them. Underlined values are defaults.

**Tip:** Use the **chzdev** command to configure devices instead of using the attributes directly (see “[chzdev - Configure IBM Z devices](#)” on page 515). You can also use the **znetconf** command for network devices.

Not all attributes are applicable to each device. Some attributes apply only to HiperSockets or only to OSA-Express CHPIDs in QDIO mode, other attributes are applicable to IPv4 interfaces only. See the task descriptions for the applicability of each attribute.

Table 40. *qeth* tasks and attributes common to layer2 and layer3

Task	Corresponding attributes	Possible attribute values
<a href="#">“Creating a qeth group device” on page 224</a>	group	n/a
<a href="#">“Removing a qeth group device” on page 225</a>	ungroup	0 or 1
<a href="#">“Setting the layer2 attribute” on page 225</a>	layer2	0 or 1, see “ <a href="#">Layer 2 and layer 3</a> ” on page 212 <sup>1</sup>

Table 40. qeth tasks and attributes common to layer2 and layer3 (continued)

Task	Corresponding attributes	Possible attribute values
<a href="#">“Using priority queueing” on page 227</a>	priority_queueing	prio_queueing_vlan prio_queueing_skb prio_queueing_prec prio_queueing_tos <a href="#">no_prio_queueing</a> no_prio_queueing:0 no_prio_queueing:1 no_prio_queueing:2 no_prio_queueing:3
<a href="#">“Specifying the number of inbound buffers” on page 229</a>	buffer_count	integer in the range 8 - 128. The default is <a href="#">64</a> for OSA devices and <a href="#">128</a> for HiperSockets devices
<a href="#">“Specifying the relative port number” on page 229</a>	portno	integer, either 0 or 1, the default is <a href="#">0</a>
<a href="#">“Finding out the type of your network adapter” on page 230</a>	card_type	n/a, read-only
<a href="#">“Setting a device online or offline” on page 231</a>	online	<a href="#">0</a> or 1
<a href="#">“Finding out the interface name of a qeth group device” on page 231</a>	if_name	n/a, read-only
<a href="#">“Finding out the bus ID of a qeth interface” on page 232</a>	none	n/a
<a href="#">“Activating an interface” on page 232</a>	none	n/a
<a href="#">“Deactivating an interface” on page 234</a>	none	n/a
<a href="#">“Recovering a device” on page 234</a>	recover	1
<a href="#">“Enabling and disabling TCP segmentation offload” on page 236</a>	none	n/a
<a href="#">“Configuring the receive checksum offload feature” on page 235</a>	none	n/a
<a href="#">“Configuring the transmit checksum offload feature” on page 236</a>	none	n/a
<a href="#">“Isolating data connections” on page 237</a>	isolation	none, drop, forward
<a href="#">“Starting and stopping collection of QETH performance statistics” on page 240</a>	performance_stats	<a href="#">0</a> or 1
<a href="#">“Capturing a hardware trace” on page 241</a>	hw_trap	arm <a href="#">disarm</a>

<sup>1</sup>A value of -1 means that the layer has not been set and that the default layer setting is used when the device is set online.

Table 41. *qeth functions and attributes in layer 2 mode*

Function	Corresponding attributes	Possible attribute values
<a href="#">“Configuring a network device as a member of a Linux bridge” on page 251</a>	bridge_role bridge_state bridge_hostnotify	primary, secondary, none active, standby, inactive 0 or 1
<a href="#">“Advanced packet-handling configuration” on page 253</a>	vnicc/bridge_invisible vnicc/flooding vnicc/learning vnicc/mcast_flooding vnicc/rx_bcast vnicc/takeover_learning vnicc/takeover_setvmac vnicc/learning_timeout	0 or 1 0 or 1 0 or 1 0 or 1 0 or 1 0 or 1 0 or 1 integer in the range 60 - 86400 the default is 600

Table 42. *qeth tasks and attributes in layer 3 mode*

Task	Corresponding attributes	Possible attribute values
<a href="#">“Setting up a Linux router in layer 3” on page 242</a>	route4 route6	primary_router secondary_router primary_connector secondary_connector multicast_router no_router
none	n/a	
<a href="#">“Faking broadcast capability” on page 245</a>	fake_broadcast <sup>1</sup>	0 or 1
<a href="#">“Taking over IP addresses” on page 246</a>	ipa_takeover/enable  ipa_takeover/add4 ipa_takeover/add6 ipa_takeover/del4 ipa_takeover/del6  ipa_takeover/invert4 ipa_takeover/invert6	0 or 1 or toggle  IPv4 or IPv6 IP address and mask bits  0 or 1 or toggle
<a href="#">“Configuring a device for proxy ARP” on page 248</a>	rxip/add4 rxip/del4	IPv4 IP address
Configuring a device for NDP proxy	rxip/add6 rxip/del6	IPv6 IP address
<a href="#">“Configuring a device for virtual IP address (VIPA)” on page 249</a>	vipa/add4 vipa/add6 vipa/del4 vipa/del6	IPv4 or IPv6 IP address
<a href="#">“Configuring a HiperSockets device for AF_IUCV addressing” on page 250</a>	hsuid	1 to 8 characters
<a href="#">“Setting up a HiperSockets network traffic analyzer” on page 268</a>	sniffer	0 or 1

Table 42. qeth tasks and attributes in layer 3 mode (continued)

Task	Corresponding attributes	Possible attribute values
<sup>1</sup> not valid for HiperSockets		

**Tip:** Use the **qethconf** command instead of using the attributes for IPA, proxy ARP, and VIPA directly (see “[qethconf - Configure qeth devices](#)” on page 625).

sysfs provides multiple paths through which you can access the qeth group device attributes. For example, if a device with bus ID 0.0.a100 corresponds to interface enca100:

```
/sys/bus/ccwgroup/drivers/qeth/0.0.a100
/sys/bus/ccwgroup/devices/0.0.a100
/sys/devices/qeth/0.0.a100
/sys/class/net/enca100/device
```

all lead to the attributes for the same device. For example, the following commands are all equivalent and return the same value:

```
# cat /sys/bus/ccwgroup/drivers/qeth/0.0.a100/if_name
enca100
# cat /sys/bus/ccwgroup/devices/0.0.a100/if_name
enca100
# cat /sys/devices/qeth/0.0.a100/if_name
enca100
# cat /sys/class/net/enca100/device/if_name
enca100
```

However, the path through `/sys/class/net` is available only while the device is online.

**Tip:** Work through one of the paths that are based on the device bus-ID.

The following sections describe the tasks in detail.

## Creating a qeth group device

Use the **znetconf** command to configure network devices. Alternatively, you can use sysfs.

### Before you begin

You must know the device bus-IDs that correspond to the read, write, and data subchannel of your OSA-Express CHPID in QDIO mode or HiperSockets CHPID as defined in the IOCDs of your mainframe.

### Procedure

To create a qeth group device, either:

- Issue the **znetconf** command to create and configure a group device. The command groups the correct bus-IDs for you and sets the device online.  
For information about the **znetconf** command, see “[znetconf - List and configure network devices](#)” on page 669.
- Write the device numbers of the subchannel triplet to the sysfs group attribute to only define a group device.

Issue a command of the form:

```
# echo <read_device_bus_id>,<write_device_bus_id>,<data_device_bus_id> > /sys/bus/ccwgroup/drivers/qeth/group
```

### Results

The qeth device driver uses the device bus-ID of the read subchannel to create a directory for a group device:

```
/sys/bus/ccwgroup/drivers/qeth/<read_device_bus_id>
```

This directory contains a number of attributes that determine the settings of the qeth group device. The following sections describe how to use these attributes to configure a qeth group device.

### Example

In this example (see [Figure 52 on page 225](#)), a single OSA-Express CHPID in QDIO mode is used to connect a Linux instance to a network.

#### Mainframe configuration:

IBM mainframe

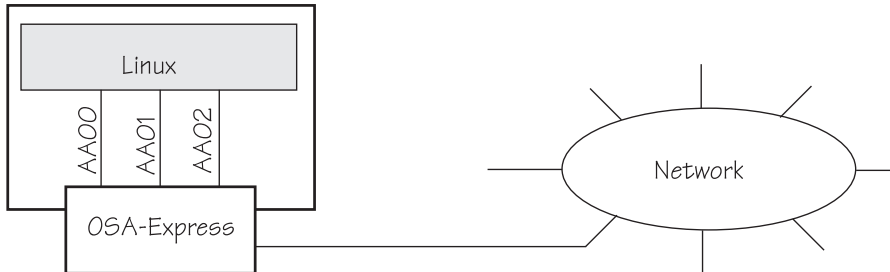


Figure 52. Mainframe configuration

#### Linux configuration:

Assuming that 0.0.aa00 is the device bus-ID that corresponds to the read subchannel:

```
# echo 0.0.aa00,0.0.aa01,0.0.aa02 > /sys/bus/ccwgroup/drivers/qeth/group
```

This command results in the creation of the following directories in sysfs:

- /sys/bus/ccwgroup/drivers/qeth/0.0.aa00
- /sys/bus/ccwgroup/devices/0.0.aa00
- /sys/devices/qeth/0.0.aa00

Both the command and the resulting directories would be the same for a HiperSockets CHPID.

## Removing a qeth group device

Use the ungroup sysfs attribute to remove a qeth group device.

### Before you begin

The device must be set offline before you can remove it.

### Procedure

To remove a qeth group device, write 1 to the ungroup attribute.

Issue a command of the form:

```
echo 1 > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/ungroup
```

### Example

This command removes device 0.0.aa00:

```
echo 1 > /sys/bus/ccwgroup/drivers/qeth/0.0.aa00/ungroup
```

## Setting the layer2 attribute

If the detected hardware always runs in a specific discipline, the corresponding discipline module is automatically requested.

## Before you begin

- To change a configured `layer2` attribute, the network interface must be shut down and the device must be set offline.
- If you are using the `layer2` option within a QDIO-based guest LAN environment, you cannot define a VLAN with ID 1, because ID 1 is reserved for z/VM use.

## About this task

The `qeth` device driver attempts to load the layer 3 discipline for HiperSockets devices and layer 2 for non-HiperSockets devices.

You can use the layer 2 mode for almost all device types, however, note the following about layer 2 to layer 3 conversion:

### real OSA-Express

Hardware is able to convert layer 2 to layer 3 traffic and vice versa and thus there are no restrictions.

### HiperSockets

There is no support for layer 2 to layer 3 conversion and, thus, no communication is possible between HiperSockets layer 2 interfaces and HiperSockets layer 3 interfaces. Do not include HiperSockets layer 2 interfaces and HiperSockets layer 3 interfaces in the same LAN.

### z/VM guest LAN

The `qeth` device driver detects the mode of the VSWITCH or LAN to which the NIC is coupled, and sets this mode on the device. The z/VM definition "Ethernet mode" is available for VSWITCHes and for guest LANs of type QDIO.

## Procedure

The `qeth` device driver separates the configuration options in `sysfs` according to the device discipline. Hence the first configuration action after you group the device must be the configuration of the discipline. To set the discipline, issue a command of the form:

```
chzdev -a <device_bus_id> layer2=<integer>
```

or, using `sysfs`:

```
echo <integer> > /sys/devices/qeth/<device_bus_id>/layer2
```

where `<integer>` is

- 0 to turn off the `layer2` attribute; this results in the layer 3 discipline.
- 1 to turn on the `layer2` attribute; this results in the layer 2 discipline (default).

If the `layer2` attribute has a value of -1, the layer was not set. The default layer setting is used when the device is set online.

## Results

If you configured the discipline successfully, more configuration attributes are shown (for example `route4` for the layer 3 discipline) and can be configured. If an OSA device is not configured for a discipline but is set online, the device driver assumes that it is a layer 2 device. It then tries to load the layer 2 discipline.

For more information about `layer2`, see:

- *Open Systems Adapter-Express Customer's Guide and Reference*, SA22-7935
- *OSA-Express Implementation Guide*, SG24-5948
- *Networking Overview for Linux on zSeries*, REDP-3901
- *z/VM: Connectivity*, SC24-6267

## Using priority queueing

An OSA-Express CHPID in QDIO mode has up to four output queues (queues 0 - 3). The priority queueing feature gives these queues different priorities (queue 0 having the highest priority). The four output queues are available only if multiple priority is enabled for queues on the OSA-Express CHPID in QDIO mode.

### Before you begin

- Priority queueing applies to OSA-Express CHPIDs in QDIO mode only.
- If more than 160 TCP/IP stacks per OSA-Express CHPID are defined in the IOCDs, priority queueing is disabled.
- The device must be offline while you set the queueing options.

### About this task

Queueing is relevant mainly to high-traffic situations. When there is little traffic, queueing has no impact on processing. The qeth device driver can put data on one or more of the queues. By default, the driver uses queue 2 for all data.

### Procedure

You can determine how outgoing IP packages are assigned to queues by setting a value for the `priority_queueing` attribute of your qeth device.

Issue a command of the form:

```
# chzdev -a <device_bus_id> priority_queueing=<method>
```

or, using sysfs:

```
# echo <method> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/priority_queueing
```

where `<method>` can be any of these values:

#### prio\_queueing\_vlan

to base the queue assignment on the two most significant bits in the priority code point in the IEEE 802.1Q header as used in VLANs. This value affects only traffic with VLAN headers, and hence works only with qeth devices in layer 2 mode.

You can set the priority code point in the IEEE 802.1Q headers of the traffic based on `skb->priority` by using a command of the form:

```
ip link add link <link> name <name> type vlan id <vlan-id> egress-qos-map <mapping>
```

**Note:** Enabling this option makes all traffic default to queue 3.

#### prio\_queueing\_skb

to base the queue assignment on the priority flag of the skbs. An skb, or socket buffer, is a Linux kernel-internal structure that represents network data. The mapping to the priority queues is as follows:

Table 43. Mapping of flag value to priority queues

Priority flag of the skb	Priority queue
0-1	3
2-3	2
4-5	1

Table 43. Mapping of flag value to priority queues (continued)

Priority flag of the skb	Priority queue
≥6	0

You can use `prio_queueing_skb` for any network setups, including conventional LANs.

Use either `sockopt SO_PRIORITY` or an appropriate **iptables** command to adjust the priority flag of the skb (`skb->priority`).

Note: The priority flag of the skbs defaults to 0, hence enabling this option makes all traffic default to queue 3.

#### **prio\_queueing\_prec**

to base the queue assignment on the two most significant bits of each packet's IP header precedence field.

#### **prio\_queueing\_tos**

Deprecated; do not use for new setups.

#### **no\_prio\_queueing**

causes the qeth device driver to use queue 2 for all packets. This value is the default.

#### **no\_prio\_queueing:0**

causes the qeth device driver to use queue 0 for all packets.

#### **no\_prio\_queueing:1**

causes the qeth device driver to use queue 1 for all packets.

#### **no\_prio\_queueing:2**

causes the qeth device driver to use queue 2 for all packets. This value is equivalent to the default.

#### **no\_prio\_queueing:3**

causes the qeth device driver to use queue 3 for all packets.

### **Example**

To read the current value of priority queueing for device 0.0.a110, issue:

```
# cat /sys/bus/ccwgroup/drivers/qeth/0.0.a110/priority_queueing
```

Possible results are:

#### **by VLAN headers**

if `prio_queueing_vlan` is set.

#### **by skb-priority**

if `prio_queueing_skb` is set.

#### **by precedence**

if `prio_queueing_prec` is set.

#### **by type of service**

if `prio_queueing_tos` is set.

#### **always queue <x>**

otherwise.

To configure queueing by `skb->priority` setting for device 0.0.a110, issue:

```
# chzdev -a 0.0.a110 priority_queueing=prio_queueing_skb
```

Alternatively, using sysfs:

```
# echo prio_queueing_skb > /sys/bus/ccwgroup/drivers/qeth/0.0.a110/priority_queueing
```



## Specifying the number of inbound buffers

Depending on the amount of available storage and the amount of traffic, you can assign 8 - 128 inbound buffers for each qeth group device.

### Before you begin

The device must be offline while you specify the number of inbound buffers.

### About this task

By default, the qeth device driver assigns 64 inbound buffers to OSA devices and 128 to HiperSockets devices.

The Linux memory usage for inbound data buffers for the devices is (number of buffers) × (buffer size).

The buffer size is equivalent to the frame size, which depends on the type of CHPID:

- For an OSA-Express CHPID in QDIO mode: 64 KB
- For HiperSockets: depending on the HiperSockets CHPID definition, 16 KB, 24 KB, 40 KB, or 64 KB

### Procedure

Set the `buffer_count` attribute to the number of inbound buffers you want to assign.

Issue a command of the form:

```
# chzdev <device_type> <device_bus_id> buffer_count=<number>
```

or, using sysfs:

```
# echo <number> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/buffer_count
```

### Example

In this example, 64 inbound buffers are assigned to device 0.0.a000:

```
# chzdev -a qeth 0.0.a000 buffer_count=64
```

or, using sysfs:

```
# echo 64 > /sys/bus/ccwgroup/drivers/qeth/0.0.a000/buffer_count
```

## Specifying the relative port number

Use the `portno` sysfs attribute to specify the relative port number.

### Before you begin

- This description applies to adapters that, per CHPID, show more than one port to Linux.
- The device must be offline while you specify the relative port number.

### Procedure

By default, the qeth group device uses port 0.

To use a different port, issue a command of the form:

```
# chzdev -a <device_bus_id> portno=<integer>
```

or, using sysfs:

```
# echo <integer> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/portno
```

Where *<integer>* is either 0 or 1.

### Example

In this example, port 1 is assigned to the qeth group device.

```
# chzdev -a 0.0.a000 portno=1
```

or, using sysfs:

```
# echo 1 > /sys/bus/ccwgroup/drivers/qeth/0.0.a000/portno
```

## Finding out the type of your network adapter

Use the `card_type` attribute to find out the type of the network adapter through which your device is connected.

### Procedure

You can find out the type of the network adapter through which your device is connected. To find out the type, read the device's `card_type` attribute.

To list all attributes, issue a command of the form:

```
# lsazdev -a <device_type> <device_bus_id> --info --info
```

or, using sysfs:

```
# cat /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/card_type
```

The `card_type` attribute gives information about both the type of network adapter and the type of network link (if applicable) available at the card's ports. See [Table 44 on page 230](#) for details.

Table 44. Possible values of <code>card_type</code> and what they mean		
Value of <code>card_type</code>	Adapter type	Link type
OSD_25GIG	OSA card in OSD mode	25 Gigabit Ethernet
OSD_10GIG		10 Gigabit Ethernet
OSD_1000		Gigabit Ethernet, 1000BASE-T
OSD_GbE_LANE		Gigabit Ethernet, LAN Emulation
OSD_FE_LANE		Unknown
OSD_Express		
OSM	OSA-Express for Unified Resource Manager	1000BASE-T
OSX	OSA-Express for zBX	10 Gigabit Ethernet
HiperSockets	HiperSockets, CHPID type IQD	N/A
Virtual NIC QDIO	VSWITCH or guest LAN based on OSA	N/A
Virtual NIC Hiper	Guest LAN based on HiperSockets	N/A
Unknown	Other	

### Example

To find the card\_type of a device 0.0.a100 issue:

```
# lsudev -a qeth 0.0.a100 --info --info
...
READONLY    ACTIVE
card_type   "OSD_1000"
....
```

or, using sysfs:

```
# cat /sys/bus/ccwgroup/drivers/qeth/0.0.a100/card_type
OSD_1000
```

## Setting a device online or offline

Use the online device group attribute to set a device online or offline.

### Procedure

To set a qeth group device online, set the online device group attribute to 1. To set a qeth group device offline, set the online device group attribute to 0.

Issue a command of the form:

```
# chzdev -a <device_bus_id> online=<flag>
```

or, using sysfs:

```
# echo <flag> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/online
```

Setting a device online associates it with an interface name (see [“Finding out the interface name of a qeth group device”](#) on page 231).

Setting a device offline closes this network device. If IPv6 is active, you lose any IPv6 addresses set for this device. After you set the device online, you can restore lost IPv6 addresses only by issuing the **ip** or **ifconfig** commands again.

### Example

To set a qeth device with bus ID 0.0.a100 online issue:

```
# chzdev -a 0.0.a100 online=1
```

or, using sysfs:

```
# echo 1 > /sys/bus/ccwgroup/drivers/qeth/0.0.a100/online
```

To set the same device offline issue:

```
# chzdev -a 0.0.a100 online=0
```

or, using sysfs:

```
# echo 0 > /sys/bus/ccwgroup/drivers/qeth/0.0.a100/online
```

## Finding out the interface name of a qeth group device

When a qeth group device is set online, an interface name is assigned to it.

## Procedure

To find the interface name of a qeth group device, either:

- Obtain a list of all attributes for a device by issuing the **lszdev** command for the device.  
Issue a command of the form:

```
# lszdev -a qeth <device_bus_id> --info --info
```

- Obtain a mapping for all qeth interfaces and devices by issuing the **lsqeth -p** command.
- Find out the interface name of a qeth group device for which you know the device bus-ID by reading the group device's `if_name` attribute.

Issue a command of the form:

```
# cat /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/if_name
```

## Example

```
# lszdev -a qeth 0.0.a100 --info --info
....
if_name    "enca100"
....
```

or, using sysfs:

```
# cat /sys/bus/ccwgroup/drivers/qeth/0.0.a100/if_name
enca100
```

## Finding out the bus ID of a qeth interface

Use the **lsqeth -p** command to obtain a mapping for all qeth interfaces and devices. Alternatively, you can use sysfs.

## Procedure

To find the device bus-ID that corresponds to an interface, either:

- Use the **lsqeth -p** command.
- Use the `readlink` command.  
For each network interface, there is a directory in sysfs under `/sys/class/net/`, for example, `/sys/class/net/encf500` for interface `encf500`. This directory contains a symbolic link "device" to the corresponding device in `/sys/devices`. Read this link to find the device bus-ID of the device that corresponds to the interface.

## Example

To find out which device bus-ID corresponds to an interface `enca100` issue, for example:

```
# readlink /sys/class/net/enca100/device
../../../../0.0.a100
```

In this example, `enca100` corresponds to the device bus-ID `0.0.a100`.

## Activating an interface

Use the **ip** command or equivalent to activate an interface.

## Before you begin

- You must know the interface name of the qeth group device (see [“Finding out the interface name of a qeth group device”](#) on page 231).
- You must know the IP address that you want to assign to the device.

## About this task

The MTU size defaults to the correct settings for HiperSockets devices. For OSA-Express CHPIDs in QDIO mode, the default MTU size depends on the device mode, layer 2 or layer 3.

- For layer 2, the default MTU is 1500 bytes.
- For layer 3, the default MTU is 1492 bytes.

In most cases, the default MTU sizes are well suited for OSA-Express CHPIDs in QDIO mode. If your network is laid out for jumbo frames, increase the MTU size to a maximum of 9000 bytes for layer 2, or to 8992 bytes for layer 3. Exceeding the defaults for regular frames or the maximum frame sizes for jumbo frames might cause performance degradation. See *Open Systems Adapter-Express Customer's Guide and Reference*, SA22-7935 for more details about MTU size.

For HiperSockets, the maximum MTU size is restricted by the maximum frame size as announced by the Licensed Internal Code (LIC). The maximum MTU is equal to the frame size minus 8 KB. Hence, the possible frame sizes of 16 KB, 24 KB, 40 KB, or 64 KB result in maximum corresponding MTU sizes of 8 KB, 16 KB, 32 KB, or 56 KB.

The MTU size defaults to the correct settings for both HiperSockets and OSA-Express CHPIDs in QDIO mode. As a result, you do not need to specify the MTU size when you activate the interface.

## Procedure

You activate or deactivate network devices with **ip** or an equivalent command. For details of the **ip** command, see the **ip** man page.

## Examples

- This example activates a HiperSockets CHPID with broadcast address 192.168.100.255:

```
# ip addr add 192.168.100.10/24 dev enca1c0
# ip link set dev enca1c0 up
```

- This example activates an OSA-Express CHPID in QDIO mode with broadcast address 192.168.100.255:

```
# ip addr add 192.168.100.11/24 dev encf500
# ip link set dev encf500 up
```

- This example reactivates an interface that was already activated and subsequently deactivated:

```
# ip link set dev encf500 up
```

## Confirming that an IP address has been set under layer 3

There may be circumstances that prevent an IP address from being set, most commonly if another system in the network has set that IP address already.

## About this task

The Linux network stack design does not allow feedback about IP address changes. If **ip** or an equivalent command fails to set an IP address on an OSA-Express network CHPID, a query with **ip** shows the address as being set on the interface although the address is not actually set on the CHPID.

There are usually failure messages about not being able to set the IP address or duplicate IP addresses in the kernel messages. You can find these messages in the output of the **dmesg** command. In Red Hat Enterprise Linux 8.1, you can also find the messages if you issue **journalctl**.

If you are not sure whether an IP address was set properly or experience a networking problem, check the messages or logs to see if an error was encountered when setting the address. This also applies in the context of HiperSockets and to both IPv4 and IPv6 addresses. It also applies to whether an IP address has been set for IP takeover, for VIPA, or for proxy ARP.

### Duplicate IP addresses

The OSA-Express adapter in QDIO mode recognizes duplicate IP addresses on the same OSA-Express adapter or in the network using ARP and prevents duplicates.

### About this task

Several setups require duplicate addresses:

- To perform IP takeover you need to be able to set the IP address to be taken over. This address exists prior to the takeover. See [“Taking over IP addresses” on page 246](#) for details.
- For proxy ARP you need to register an IP address for ARP that belongs to another Linux instance. See [“Configuring a device for proxy ARP” on page 248](#) for details.
- For VIPA you need to assign the same virtual IP address to multiple devices. See [“Configuring a device for virtual IP address \(VIPA\)” on page 249](#) for details.

You can use the **qethconf** command (see [“qethconf - Configure qeth devices” on page 625](#)) to maintain a list of IP addresses that your device can take over, a list of IP addresses for which your device can handle ARP, and a list of IP addresses that can be used as virtual IP addresses, regardless of any duplicates on the same OSA-Express adapter or in the LAN.

## Deactivating an interface

You can deactivate an interface with **ip** or an equivalent command or by setting the network device offline.

### About this task

Setting a device offline involves actions on the attached device, but deactivating a device only stops the interface logically within Linux.

### Procedure

To deactivate an interface with **ip**, issue a command of the form:

```
# ip link set dev <interface_name> down
```

### Example

To deactivate encf500 issue:

```
# ip link set dev encf500 down
```

## Recovering a device

You can use the recover attribute of a qeth group device to recover it in case of failure.

### About this task

issue **journalctl** to find messages that might inform you of a malfunctioning device.

## Procedure

Issue a command of the form:

```
# chzdev -a <device_bus_id> -a recover=1
```

or, using sysfs:

```
# echo 1 > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/recover
```

## Example

```
# chzdev 0.0.a100 -a recover=1
```

Alternatively, using sysfs:

```
# echo 1 > /sys/bus/ccwgroup/drivers/qeth/0.0.a100/recover
```

## Configuring hardware offload operations

Some CPU-intensive operations can be offloaded to the OSA adapter, thus reducing the load on the host CPU.

The qeth device driver supports offloading for the following operations on both layer 2 and layer 3:

- Inbound (receive) and outbound (transmit) checksum calculations for TCP and UDP network packets
- TCP segmentation, see [“Enabling and disabling TCP segmentation offload” on page 236](#).

VLAN interfaces inherit offload settings from their base interface.

You can set the offload operations with the Linux **ethtool** command. See the **ethtool** man page for details. The following abbreviated example shows some offload settings:

```
# ethtool -k encf500
Features for encf500:
rx-checksumming: on
tx-checksumming: on
    tx-checksum-ipv4: on
    tx-checksum-ip-generic: off [fixed]
    tx-checksum-ipv6: on
    tx-checksum-fcoe-crc: off [fixed]
    tx-checksum-sctp: off [fixed]
scatter-gather: on
    tx-scatter-gather: on
    tx-scatter-gather-fraglist: off [fixed]
tcp-segmentation-offload: on
    tx-tcp-segmentation: on
    tx-tcp-ecn-segmentation: off [fixed]
    tx-tcp6-segmentation: on
udp-fragmentation-offload: off [fixed]
generic-segmentation-offload: off [requested on]
generic-receive-offload: on
large-receive-offload: off [fixed]
...
```

### Configuring the receive checksum offload feature

A checksum calculation is a form of redundancy check to protect the integrity of data.

## Procedure

The qeth device driver supports offloading checksum calculations on inbound packets (receive) to the OSA feature.

To enable or disable checksum calculations by the OSA feature, issue a command of this form:

```
# ethtool -K <interface_name> rx <value>
```

where <value> is on or off.

### Examples

- To let the OSA feature calculate the receive checksum for network device encf500, issue

```
# ethtool -K encf500 rx on
```

- To let the host CPU calculate the receive checksum for network device encf500, issue

```
# ethtool -K encf500 rx off
```

### Configuring the transmit checksum offload feature

The qeth device driver supports offloading outbound (transmit) checksum calculations to the OSA feature.

#### About this task

You can enable or disable the OSA feature that calculates the transmit checksums by using the **ethtool** command.

#### Procedure

Issue a command of the form:

```
# ethtool -K <interface_name> tx <value>
```

where <value> is on or off.

### Examples

- To let the OSA feature calculate the transmit checksum for network device encf500, issue

```
# ethtool -K encf500 tx on
```

- To let the host CPU calculate the transmit checksum for network device encf500, issue

```
# ethtool -K encf500 tx off
```

### Enabling and disabling TCP segmentation offload

Offloading the TCP segmentation operation from the Linux network stack to the adapter can lead to enhanced performance for interfaces with predominately large outgoing packets.

#### About this task

TCP segmentation offload is supported for OSA connections on layer 3. On layer 2 it is available as of z14 for OSA Express6S and newer adapters. Use the **ethtool -k** (see example in [“Configuring hardware offload operations”](#) on page 235) to check whether your system supports it.

#### Procedure

Outbound (TX) checksumming and scatter gather are prerequisites for TCP segmentation offload (TSO). You must turn on scatter gather and outbound checksumming before configuring TSO.

All three options can be turned on or off with a single **ethtool** command of the form:

```
# ethtool -K <interface_name> tx <value> sg <value> tso <value>
```



where *<value>* is either on or off. For more information about TX checksumming, see [“Configuring the transmit checksum offload feature”](#) on page 236.

**Attention:** When TCP segmentation is offloaded, the OSA feature performs the calculations. Offloaded calculations are supported only for packets that go out to the LAN.

### Examples

- To offload the TCP segmentation operation for a network device encf500 issue:

```
# ethtool -K encf500 tx on sg on tso on
```

- To disable offloading the TCP segmentation operation for a network device encf500 issue:

```
# ethtool -K encf500 tx off sg off tso off
```

## Isolating data connections

You can restrict communications between operating system instances that share an OSA port on an OSA adapter.

### About this task

A Linux instance can configure the OSA adapter to prevent any direct package exchange between itself and other operating system instances that share an OSA adapter. This configuration ensures a higher degree of isolation than VLANs.

QDIO data connection isolation is configured as a policy. The policy is implemented as a sysfs attribute called `isolation`. The attribute appears in sysfs regardless of whether the hardware supports the feature. The policy can take the following values:

#### **none**

No isolation. This is the default.

#### **drop**

Specifies the `ISOLATION_DROP` policy. All packets from guests sharing the same OSA adapter to the guest having this policy configured are dropped automatically. The same holds for all packets sent by the guest having this policy configured to guests on the same OSA card. All packets to or from the isolated guest need to have a target that is not hosted on the OSA card. You can accomplish this by a router hosted on a separate machine or a separate OSA adapter.

For example, assume that three Linux instances share an OSA adapter, but only one instance (Linux A) needs to be isolated. Then Linux A declares its OSA adapter (QDIO Data Connection to the OSA adapter) to be isolated. Any packet being sent to or from Linux A must pass at least the physical switch to which the shared OSA adapter is connected. Linux A cannot communicate with other instances that share the OSA adapter, here B or C. The two other instances could still communicate directly through the OSA adapter without the external switch in the network path (see [Figure 53 on page 238](#)).

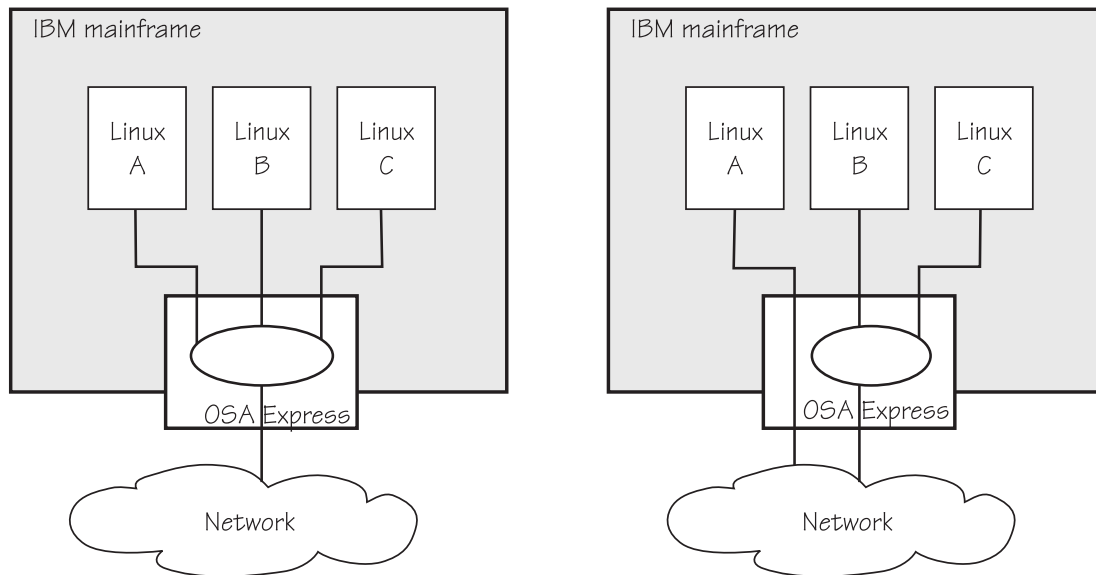


Figure 53. Linux instance A is isolated from instances B and C

### forward

Specifies the ISOLATION\_FORWARD policy. All packets are passed through a switch. The ISOLATION\_FORWARD policy requires a network adapter in Virtual Ethernet Port Aggregator (VEPA) mode with an adjacent switch port configured for reflective relay mode.

To check whether the switch of the adapter is in reflective relay mode, read the sysfs attribute `switch_attrs`. The attribute lists all supported forwarding modes, with the currently active mode enclosed in square brackets. For example:

```
lszdev -a qeth 0.0.f5f0 --info --info
...
READONLY      ACTIVE
...
switch_attrs:  "802.1 [rr]"
```

Or, using sysfs to query the attribute directly:

```
cat /sys/devices/qeth/0.0.f5f0/switch_attrs
802.1 [rr]
```

The example indicates that the adapter supports both 802.1 forwarding mode and reflective relay mode, and reflective relay mode is active.

Using a network adapter in VEPA mode achieves further isolation. VEPA mode forces traffic from the Linux guests to be handled by the external switch. For example, [Figure 54 on page 239](#) shows instances A and B with ISOLATION\_FORWARD specified for the policy. All traffic between A and B goes through the external switch. The rule set of the switch now determines which connections are possible. The graphic assumes that A can communicate with B, but not with C.

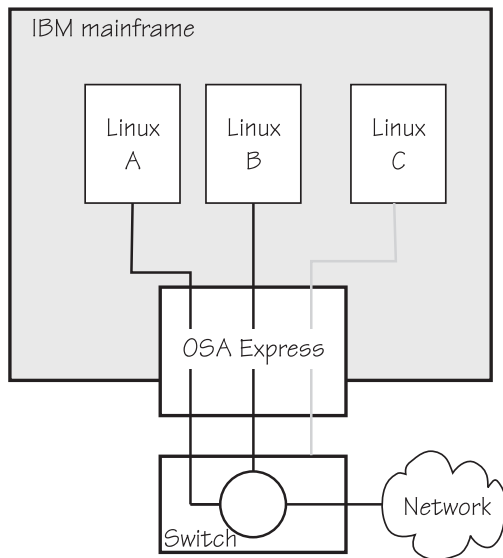


Figure 54. Traffic from Linux instance A and B is forced through an external switch

If the ISOLATION\_FORWARD policy was enforced successfully, but the switch port later loses the reflective-relay capability, the device is set offline to prevent damage.

You can configure the policy regardless of whether the device is online. If the device is online, the policy is configured immediately. If the device is offline, the policy is configured when the device comes online.

### Examples

- To check the current isolation policy:

```
# cat /sys/devices/qeth/0.0.f5f0/isolation
```

- To set the isolation policy to ISOLATION\_DROP:

```
# chzdev -a qeth 0.0.f5f0 isolation=drop
```

Or, using sysfs:

```
# echo "drop" > /sys/devices/qeth/0.0.f5f0/isolation
```

- To set the isolation policy to ISOLATION\_FORWARD:

```
# chzdev -a qeth 0.0.f5f0 isolation=forward
```

Or, using sysfs:

```
# echo "forward" > /sys/devices/qeth/0.0.f5f0/isolation
```

If the switch is not capable of VEPA support, or VEPA support is not configured on the switch, then you cannot set the isolation attribute value to 'forward' while the device is online. If the switch does not support VEPA and you set the isolation value 'forward' while the device is offline, then the device cannot be set online until the isolation value is set back to 'drop' or 'none'.

- To set the isolation policy to none:

```
# chzdev -a qeth 0.0.f5f0 isolation=none
```

Or, using sysfs:

```
# echo "none" > /sys/devices/qeth/0.0.f5f0/isolation
```

When using vNICs, VEPA mode needs to be enabled on the respective VSWITCH. See *z/VM: Connectivity*, SC24-6267 for information about setting up data connection isolation on a VSWITCH.

## Starting and stopping collection of QETH performance statistics

Use the `performance_stats` attribute to start and stop collection of QETH performance statistics.

### About this task

For QETH performance statistics, there is a device group attribute called `/sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/performance_stats`.

This attribute is initially set to 0, that is, QETH performance data is not collected.

### Procedure

To start collection for a specific QETH device, write 1 to the attribute.

For example:

```
# chzdev -a <device_bus_id> performance_stats=1
```

or, using `sysfs`:

```
echo 1 > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/performance_stats
```

To stop collection write 0 to the attribute, for example:

```
# chzdev -a <device_bus_id> performance_stats=0
```

or, using `sysfs`:

```
echo 0 > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/performance_stats
```

Stopping QETH performance data collection for a specific QETH device is accompanied by a reset of current statistic values to zero.

To display QETH performance statistics, use the **ethtool** command. See the **ethtool** man page for details.

### Example

The following example shows statistic and device driver information:

```

# ethtool -S encf500
NIC statistics:
  rx skbs: 86
  rx buffers: 85
  tx skbs: 86
  tx buffers: 86
  tx skbs no packing: 86
  tx buffers no packing: 86
  tx skbs packing: 0
  tx buffers packing: 0
  tx sg skbs: 0
  tx sg frags: 0
  rx sg skbs: 0
  rx sg frags: 0
  rx sg page allocs: 0
  tx large kbytes: 0
  tx large count: 0
  tx pk state ch n->p: 0
  tx pk state ch p->n: 0
  tx pk watermark low: 2
  tx pk watermark high: 5
  queue 0 buffer usage: 0
  queue 1 buffer usage: 0
  queue 2 buffer usage: 0
  queue 3 buffer usage: 0
  rx handler time: 856
  rx handler count: 84
  rx do_QDIO time: 16
  rx do_QDIO count: 11
  tx handler time: 330
  tx handler count: 87
  tx time: 1236
  tx count: 86
  tx do_QDIO time: 997
  tx do_QDIO count: 86
  tx csum: 0
  tx lin: 0
  cq handler count: 0
  cq handler time: 0
  rx csum: 9

# ethtool -i encf500
driver: qeth_l3
version: 1.0
firmware-version: 087a
bus-info: 0.0.f5f0/0.0.f5f1/0.0.f5f2
supports-statistics: yes
supports-test: no
supports-eeprom-access: no
supports-register-dump: no
supports-priv-flags: no

```

## Capturing a hardware trace

Hardware traces are intended for use by the IBM Support organization. Hardware tracing is turned off by default. Turn on the hardware-tracing feature only when instructed to do so by IBM Support.

### Before you begin

- The OSA-Express adapter must support the hardware-tracing feature.
- The qeth device must be online to return valid values of the `hw_trap` attribute.

### About this task

When errors occur on an OSA-Express adapter, both software and hardware traces must be collected. The hardware-tracing feature requests a hardware trace if an error is detected. This feature makes it possible to correlate the hardware trace with the device driver trace. If the hardware-tracing feature is activated, traces are captured automatically, but you can also start the capturing yourself.

### Procedure

To activate or deactivate the hardware-tracing feature, issue a command of the form:

```
# chzdev -a <device_bus_id> hw_trap=<value>
```

or, using sysfs:

```
# echo <value> > /sys/devices/qeth/<device_bus_id>/hw_trap
```

Where <value> can be:

#### **arm**

If the hardware-tracing feature is supported, write arm to the hw\_trap sysfs attribute to activate it. If the hardware-tracing feature is present and activated, the hw\_trap sysfs attribute has the value arm.

#### **disarm**

Write disarm to the hw\_trap sysfs attribute to turn off the hardware-tracing feature. If the hardware-tracing feature is not present or is turned off, the hw\_trap sysfs attribute has the value disarm. This setting is the default.

#### **trap**

(Write only) Capture a hardware trace. Hardware traces are captured automatically, but if asked to do so by IBM Support, you can start the capturing yourself by writing trap to the hw\_trap sysfs attribute. The hardware trap function must be set to arm.

### **Examples**

In this example the hardware-tracing feature is activated and then started for qeth device 0.0.a000:

```
# chzdev -a 0.0.a000 hw_trap=arm
# chzdev 0.0.a000 -a hw_trap=trap
```

or, using sysfs:

```
# echo arm > /sys/devices/qeth/0.0.a000/hw_trap
# echo trap > /sys/devices/qeth/0.0.a000/hw_trap
```

## **Working with qeth devices in layer 3 mode**

Tasks you can perform on qeth devices in layer 3 mode include setting up a router and taking over IP addresses. Use the layer 2 attribute to set the mode. See [“Setting the layer2 attribute” on page 225](#) about setting the mode. See [“Layer 2 and layer 3” on page 212](#) for general information about the layer 2 and layer 3 disciplines.

### **Setting up a Linux router in layer 3**

By default, your Linux instance is not a router. Depending on your IP version, IPv4 or IPv6 you can use the route4 or route6 attribute of your qeth device to define it as a router.

#### **Before you begin**

- A suitable hardware setup must be in place that enables your Linux instance to act as a router.
- The Linux instance is set up as a router. To configure Linux running in a z/VM guest virtual machine or in an LPAR as a router, IP forwarding must be enabled in addition to setting the route4 or route6 attribute.

For IPv4, enable IP forwarding by issuing:

```
# sysctl -w net.ipv4.conf.all.forwarding=1
```

For IPv6, enable IP forwarding by issuing:

```
# sysctl -w net.ipv6.conf.all.forwarding=1
```

## About this task

You can set the route4 or route6 attribute dynamically, while the qeth device is online.

The same values are possible for route4 and route6 but depend on the type of CHPID:

Table 45. Summary of router setup values		
Router specification	OSA-Express CHPID in QDIO mode	HiperSockets CHPID
primary_router	Yes	No
secondary_router	Yes	No
primary_connector	No	Yes
secondary_connector	No	Yes
multicast_router	Yes	Yes
no_router	Yes	Yes

Both types of CHPIDs accept:

### **multicast\_router**

causes the qeth driver to receive all multicast packets of the CHPID. For a unicast function for HiperSockets see [“HiperSockets Network Concentrator”](#) on page 263.

### **no\_router**

is the default. You can use this value to reset a router setting to the default.

An OSA-Express CHPID in QDIO mode accepts the following values:

### **primary\_router**

to make your Linux instance the principal connection between two networks.

### **secondary\_router**

to make your Linux instance a backup connection between two networks.

A HiperSockets CHPID accepts the following values, if the microcode level supports the feature:

### **primary\_connector**

to make your Linux instance the principal connection between a HiperSockets network and an external network (see [“HiperSockets Network Concentrator”](#) on page 263).

### **secondary\_connector**

to make your Linux instance a backup connection between a HiperSockets network and an external network (see [“HiperSockets Network Concentrator”](#) on page 263).

## Example

In this example, two Linux instances, "Linux P" and "Linux S", running on an IBM mainframe use OSA-Express to act as primary and secondary routers between two networks. IP forwarding must be enabled for Linux in an LPAR or as a z/VM guest to act as a router. In Red Hat Enterprise Linux 8.1 you can set IP forwarding permanently in `/etc/sysctl.conf` or dynamically with the `sysctl` command.

## Mainframe configuration:

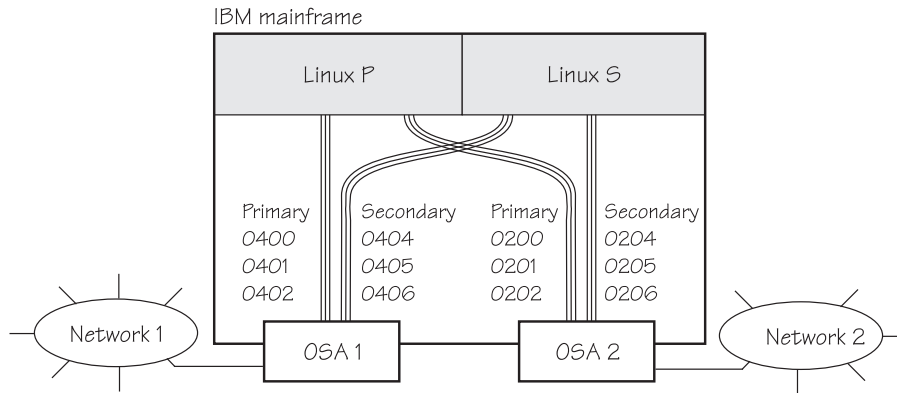


Figure 55. Mainframe configuration

It is assumed that both Linux instances are configured as routers in their LPARs or in z/VM.

## Linux P configuration:

To create the qeth group devices:

```
# chzdev --active --enable qeth 0.0.0400,0.0.0401,0.0.0402
# chzdev --active --enable qeth 0.0.0200,0.0.0201,0.0.0202
```

Alternatively, use the sysfs attribute group:

```
# echo 0.0.0400,0.0.0401,0.0.0402 > /sys/bus/ccwgroup/drivers/qeth/group
# echo 0.0.0200,0.0.0201,0.0.0202 > /sys/bus/ccwgroup/drivers/qeth/group
```

To make Linux P a primary router for IPv4:

```
# chzdev -a qeth 0.0.0400 route4=primary_router
# chzdev -a qeth 0.0.0200 route4=primary_router
```

or, using sysfs:

```
# echo primary_router > /sys/bus/ccwgroup/drivers/qeth/0.0.0400/route4
# echo primary_router > /sys/bus/ccwgroup/drivers/qeth/0.0.0200/route4
```

## Linux S configuration:

To create the qeth group devices:

```
# chzdev --active --enable qeth 0.0.0404,0.0.0405,0.0.0406
# chzdev --active --enable qeth 0.0.0204,0.0.0205,0.0.0206
```

or, using sysfs:

```
# echo 0.0.0404,0.0.0405,0.0.0406 > /sys/bus/ccwgroup/drivers/qeth/group
# echo 0.0.0204,0.0.0205,0.0.0206 > /sys/bus/ccwgroup/drivers/qeth/group
```

To make Linux S a secondary router for IPv4:

```
# chzdev -a qeth 0.0.0400 route4=secondary_router
# chzdev -a qeth 0.0.0200 route4=secondary_router
```

or, using sysfs:

```
# echo secondary_router > /sys/bus/ccwgroup/drivers/qeth/0.0.0404/route4
# echo secondary_router > /sys/bus/ccwgroup/drivers/qeth/0.0.0204/route4
```



In this example, qeth device 0.01510 is defined as a primary router for IPv6:

```
/sys/bus/ccwgroup/drivers/qeth # cd 0.0.1510
# echo 1 > online
# echo primary_router > route6
# cat route6
primary_router
```

See [“HiperSockets Network Concentrator” on page 263](#) for further examples.

## Faking broadcast capability

It is possible to fake the broadcast capability for devices that do not support broadcasting.

### Before you begin

- You can fake the broadcast capability only on devices that do not support broadcast.
- The device must be offline while you enable faking broadcasts.

### About this task

For devices that support broadcast, the broadcast capability is enabled automatically.

To find out whether a device supports broadcasting, use the **ip** command. If the resulting list shows the BROADCAST flag, the device supports broadcast. This example shows that the device encf500 supports broadcast:

```
# ip -s link show dev encf500
3: encf500: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1492 qdisc pfifo_fast qlen 1000
    link/ether 00:11:25:bd:da:66 brd ff:ff:ff:ff:ff:ff
    RX: bytes    packets  errors  dropped overrun mcast
      236350      2974      0        0        0        9
    TX: bytes    packets  errors  dropped carrier collsns
      374443      1791      0        0        0        0
```

Some processes, for example, the *gated* routing daemon, require the devices' broadcast capable flag to be set in the Linux network stack.

### Procedure

To set the broadcast capable flag for devices that do not support broadcast, set the `fake_broadcast` attribute of the qeth group device to 1. To reset the flag, set it to 0.

Issue a command of the form:

```
# chzdev -a <device_bus_id> fake_broadcast=<flag>
```

or, using sysfs:

```
# echo <flag> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/fake_broadcast
```

### Example

In this example, a device 0.0.a100 is instructed to pretend that it can broadcast.

```
# chzdev -a 0.0.a100 fake_broadcast=1
```

or, using sysfs:

```
# echo 1 > /sys/bus/ccwgroup/drivers/qeth/0.0.a100/fake_broadcast
```

## Taking over IP addresses

You can configure IP takeover if the layer2 option is not enabled. If you enabled the layer2 option, you can configure for IP takeover as you would in a distributed server environment.

### About this task

For information about the layer2 option, see [“MAC headers in layer 2 mode”](#) on page 215.

Taking over an IP address overrides any previous allocation of this address to another LPAR. If another LPAR on the same CHPID already registered for that IP address, this association is removed.

An OSA-Express CHPID in QDIO mode can take over IP addresses from any IBM Z operating system. IP takeover for HiperSockets CHPIDs is restricted to taking over addresses from other Linux instances in the same Central Electronics Complex (CEC).

IP address takeover between multiple CHPIDs requires ARP for IPv4 and Neighbor Discovery for IPv6. OSA-Express handles ARP transparently, but not Neighbor Discovery.

There are three stages to taking over an IP address:

- Stage 1: Ensure that your qeth group device is enabled for IP takeover
- Stage 2: Activate the address to be taken over for IP takeover
- Stage 3: Issue a command to take over the address

### Stage 1: Enabling a qeth group device for IP takeover

For OSA-Express and HiperSockets CHPIDs, both the qeth group device that is to take over an IP address and the device that surrenders the address must be enabled for IP takeover.

### Procedure

By default, qeth devices are not enabled for IP takeover. To enable a qeth group device for IP address takeover set the enable device group attribute to 1. To switch off the takeover capability set the enable device group attribute to 0.

In sysfs, the enable attribute is located in a subdirectory `ipa_takeover`. Issue a command of the form:

```
# echo <flag> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/ipa_takeover/enable
```

### Example

In this example, a device 0.0.a500 is enabled for IP takeover:

```
# echo 1 > /sys/bus/ccwgroup/drivers/qeth/0.0.a500/ipa_takeover/enable
```

### Stage 2: Activating and deactivating IP addresses for takeover

The qeth device driver maintains a list of IP addresses that qeth group devices can take over or surrender. To enable Linux to take over an IP-address or to surrender an address, the address must be added to this list.

### Procedure

Use the **qethconf** command to add IP addresses to the list.

- To display the list of IP addresses that are activated for IP takeover issue:

```
# qethconf ipa list
```

- To activate an IP address for IP takeover, add it to the list.  
Issue a command of the form:

```
# qethconf ipa add <ip_address>/<mask_bits> <interface_name>
```

- To deactivate an IP address delete it from the list.

Issue a command of the form:

```
# qethconf ipa del <ip_address>/<mask_bits> <interface_name>
```

In these commands, *<ip\_address>/<mask\_bits>* is the range of IP addresses to be activated or deactivated. See “[qethconf - Configure qeth devices](#)” on page 625 for more details about the **qethconf** command.

#### **IPv4 example**

In this example, there is only one range of IP addresses (192.168.10.0 to 192.168.10.255) that can be taken over by HiperSockets device enca1c0.

List the range of IP addresses (192.168.10.0 to 192.168.10.255) that can be taken over by HiperSockets device enca1c0.

```
# qethconf ipa list
ipa add 192.168.10.0/24 enca1c0
```

The following command adds a range of IP addresses that can be taken over by OSA device encf500.

```
# qethconf ipa add 192.168.11.0/24 encf500
qethconf: Added 192.168.11.0/24 to /sys/class/net/encf500/device/ipa_takeover/add4.
qethconf: For verification please use "qethconf ipa list"
```

Listing the activated IP addresses now shows both ranges of addresses.

```
# qethconf ipa list
ipa add 192.168.10.0/24 enca1c0
ipa add 192.168.11.0/24 encf500
```

The following command deletes the range of IP addresses that can be taken over by OSA device encf500.

```
# qethconf ipa del 192.168.11.0/24 encf500
qethconf: Deleted 192.168.11.0/24 from
          sysfs entry /sys/class/net/encf500/device/ipa_takeover/del4.
qethconf: For verification please use "qethconf ipa list"
```

#### **IPv6 example**

The following command adds one range of IPv6 addresses,

fec0:0000:0000:0000:0000:0000:0000:0000 to fec0:0000:0000:0000:FFFF:FFFF:FFFF:FFFF, that can be taken over by device encd300.

Add a range of IP addresses:

```
qethconf ipa add fec0::/64 encd300
qethconf: Added fec0:0000:0000:0000:0000:0000:0000:0000/64 to
          sysfs entry /sys/class/net/encd300/device/ipa_takeover/add6.
qethconf: For verification please use "qethconf ipa list"
```

Listing the activated IP addresses now shows the range of addresses:

```
qethconf ipa list
...
ipa add fec0:0000:0000:0000:0000:0000:0000:0000/64 encd300
```

The following command deletes the IPv6 address range that can be taken over by encd300:

```
qethconf ipa del fec0:0000:0000:0000:0000:0000:0000:0000/64 encd300:
qethconf: Deleted fec0:0000:0000:0000:0000:0000:0000:0000/64 from
          sysfs entry /sys/class/net/encd300/device/ipa_takeover/del6.
qethconf: For verification please use "qethconf ipa list"
```

### Stage 3: Issuing a command to take over the address

To complete taking over a specific IP address and remove it from the CHPID or LPAR that previously held it, issue an **ip addr** or equivalent command.

#### Before you begin

- Both the device that is to take over the IP address and the device that is to surrender the IP address must be enabled for IP takeover. This rule applies to the devices on both OSA-Express and HiperSockets CHPIDs. (See [“Stage 1: Enabling a qeth group device for IP takeover” on page 246](#)).
- The IP address to be taken over must have been activated for IP takeover (see [“Stage 2: Activating and deactivating IP addresses for takeover” on page 246](#)).

#### About this task

Be aware of the information in [“Confirming that an IP address has been set under layer 3” on page 233](#) when using IP takeover.

#### Examples

##### IPv4 example:

To make a HiperSockets device enca1c0 take over IP address 192.168.10.22 issue:

```
# ip addr add 192.168.10.22/24 dev enca1c0
```

For IPv4, the IP address you are taking over must be different from the one that is already set for your device. If your device already has the IP address it is to take over, you must issue two commands: First remove the address to be taken over if it is already there. Then add the IP address to be taken over.

For example, to make a HiperSockets device enca1c0 take over IP address 192.168.10.22 if enca1c0 is already configured to have IP address 192.168.10.22 issue:

```
# ip addr del 192.168.10.22/24 dev enca1c0
# ip addr add 192.168.10.22/24 dev enca1c0
```

##### IPv6 example:

To make a device encd300 take over fec0::111:25ff:febd:d9da/64 issue:

```
ip addr add fec0::111:25ff:febd:d9da/64 nodad dev encd300
```

For IPv6, setting the **nodad** (no duplicate address detection) option ensures that the encd300 interface uses the IP address fec0::111:25ff:febd:d9da/64. Without the **nodad** option, the previous owner of the IP address might prevent the takeover by responding to a duplicate address detection test.

The IP address you are taking over must be different from the one that is already set for your device. If your device already has the IP address it is to take over you must issue two commands: First remove the address to be taken over if it is already there. Then add the IP address to be taken over.

For example, to make a device encd300 take over IP address fec0::111:25ff:febd:d9da/64 when encd300 is already configured to have that particular IP address issue:

```
ip addr del fec0::111:25ff:febd:d9da/64 nodad dev encd300
ip addr add fec0::111:25ff:febd:d9da/64 nodad dev encd300
```

## Configuring a device for proxy ARP

You can configure a device for proxy ARP if the layer2 option is not enabled. If you enabled the layer2 option, you can configure for proxy ARP as you would in a distributed server environment.

## Before you begin

Configure only qeth group devices that are set up as routers for proxy ARP.

## About this task

For information about the layer2 option, see “MAC headers in layer 2 mode” on page 215.

The qeth device driver maintains a list of IP addresses for which a qeth group device handles ARP and issues gratuitous ARP packets. For more information about proxy ARP, see

<http://www.cisco.com/c/en/us/support/docs/ip/dynamic-address-allocation-resolution/13718-5.html>

Use the **qethconf** command to display this list or to change the list by adding and removing IP addresses (see “qethconf - Configure qeth devices” on page 625).

Be aware of the information in “Confirming that an IP address has been set under layer 3” on page 233 when you work with proxy ARP.

## Example

Figure 56 on page 249 shows an environment where proxy ARP is used.

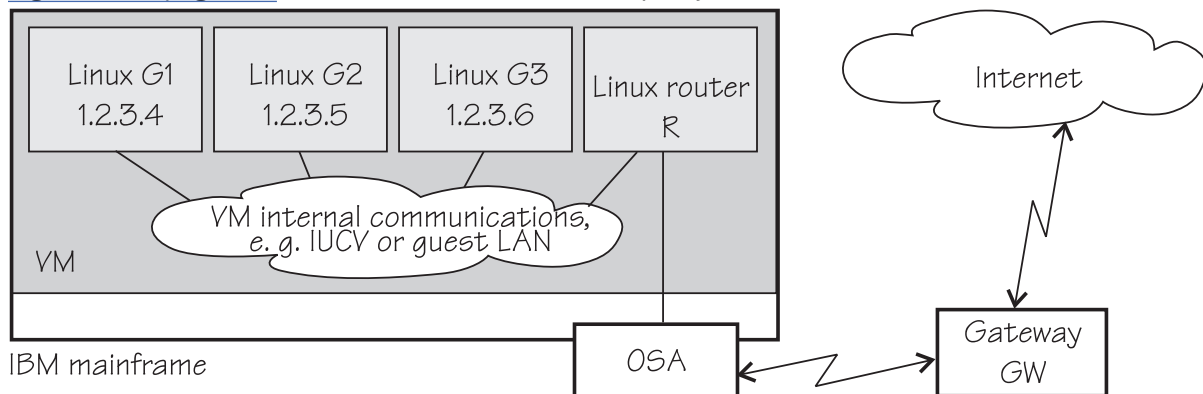


Figure 56. Example of proxy ARP usage

G1, G2, and G3 are instances of Linux on z/VM (connected, for example, through a guest LAN to a Linux router R), reached from GW (or the outside world) through R. R is the ARP proxy for G1, G2, and G3. That is, R agrees to take care of packets that are destined for G1, G2, and G3. The advantage of using proxy ARP is that GW does not need to know that G1, G2, and G3 are behind a router.

To receive packets for 1.2.3.4, so that it can forward them to G1 1.2.3.4, R would add 1.2.3.4 to its list of IP addresses for proxy ARP for the interface that connects it to the OSA adapter.

```
# qethconf parp add 1.2.3.4 encf500
qethconf: Added 1.2.3.4 to /sys/class/net/encf500/device/ixip/add4.
qethconf: Use "qethconf parp list" to check for the result
```

After issuing similar commands for the IP addresses 1.2.3.5 and 1.2.3.6 the proxy ARP configuration of R would be:

```
# qethconf parp list
parp add 1.2.3.4 encf500
parp add 1.2.3.5 encf500
parp add 1.2.3.6 encf500
```

## Configuring a device for virtual IP address (VIPA)

You can configure a device for VIPA if the layer2 option is not enabled. If you enabled the layer2 option, you can configure for VIPA as you would in a distributed server environment.

## About this task

For information about the layer2 option, see [“MAC headers in layer 2 mode” on page 215](#).

IBM Z uses VIPAs to protect against certain types of hardware connection failure. You can assign VIPAs that are independent from particular adapter. VIPAs can be built under Linux using *dummy* devices (for example, "dummy0" or "dummy1").

The qeth device driver maintains a list of VIPAs that the OSA-Express adapter accepts for each qeth group device. Use the **qethconf** utility to add or remove VIPAs (see [“qethconf - Configure qeth devices” on page 625](#)).

For an example of how to use VIPA, see [“Scenario: VIPA – minimize outage due to adapter failure” on page 255](#).

Be aware of [“Confirming that an IP address has been set under layer 3” on page 233](#) when you work with VIPAs.

## Configuring a HiperSockets device for AF\_IUCV addressing

Use the `hsuid` attribute of a HiperSockets device in layer 3 mode to identify it to the AF\_IUCV addressing family support.

### Before you begin

- Support for AF\_IUCV based connections through real HiperSockets requires Completion Queue Support.
- The device must be set up for AF\_IUCV addressing (see [“Setting up HiperSockets devices for AF\\_IUCV addressing” on page 298](#)).

### Procedure

To set an identifier, issue a command of this form:

```
# echo <value> > /sys/bus/ccwgroup/drivers/qeth/0.0.a007/hsuid
```

The identifier is case-sensitive and must adhere to these rules:

- It must be 1 - 8 characters.
- It must be unique across your environment.
- It must not match any z/VM user ID in your environment. The AF\_IUCV addressing family support also supports z/VM IUCV connections.

### Example

In this example, MYHOST01 is set as the identifier for a HiperSockets device with bus ID 0.0.a007.

```
# echo MYHOST01 > /sys/bus/ccwgroup/drivers/qeth/0.0.a007/hsuid
```

## Working with qeth devices in layer 2 mode

Tasks that you can perform on qeth devices in layer 2 mode include setting up a OSA or HiperSockets bridge port and tuning packet handling for a HiperSockets device with VNIC characteristics..

VNIC characteristics and the bridge port role are mutually exclusive.

Use the `layer2` attribute to set the mode. See [“Setting the layer2 attribute” on page 225](#) about setting the mode. See [“Layer 2 and layer 3” on page 212](#) for general information about the layer 2 and layer 3 disciplines.

## Configuring a network device as a member of a Linux bridge

You can define an OSA or HiperSockets device to be a bridge port, which allows it to act as a member of a Linux software bridge. Use the `bridge_role` attribute of a network device in layer 2 to make it receive all traffic with unknown destination MAC addresses.

Alternatively, use VNIC characteristics to configure a layer 2 network device to receive all unknown traffic (see [“Advanced packet-handling configuration”](#) on page 253).

### Before you begin

To use the bridging support, you need OSA or HiperSockets hardware that supports layer 2 SETBRIDGEPORT functionality.

You can have one active bridge port per Internal Queued Direct Communication (IQD) channel. You can have either only secondary bridge ports, or one primary and several secondary bridge ports per OSA or HiperSockets channel.

Devices for which VNIC characteristics are configured cannot also be configured as bridge ports.

On z13 and earlier mainframes: HiperSockets bridge ports only bridge traffic to and from HiperSockets ports in z/VM guests. On z14 and later HiperSockets bridge ports bridge traffic to and from all layer 2 HiperSockets ports that are not configured as "bridge\_invisible", see [“Advanced packet-handling configuration”](#) on page 253.

HiperSockets only: On IQDX channels permission to configure ports as bridge ports must be granted in IBM zEnterprise Unified Resource Manager (zManager). On machines in PR/SM mode, bridge ports can only be configured on IQD channels that are defined as "external-bridged" in the IOCDs. On machines in DPM mode, bridge ports can be configured on any IQD channel.

For more information about the bridge port concept, see [“Layer 2 promiscuous mode”](#) on page 218.

### About this task

The following sysfs attributes control the bridge port functions. The attributes can be found in the `/sys/bus/ccwgroup/drivers/qeth/<device_bus_id>` directory.

#### **bridge\_role**

Read-write attribute that controls the role of the port. Valid values are:

##### **primary**

Assigns the port the primary bridge port role.

##### **secondary**

Assigns the port a secondary bridge port role.

##### **none**

Revokes existing bridge port roles and indicates that no role is assigned.

Assigning a role directly to a port prevents use of the **bridge\_reflect\_promisc** attribute.

#### **bridge\_state**

Read-only attribute that shows the state of the port. Valid values are:

##### **active**

The port is assigned a bridge port role and is switched into active state by the adapter. The device receives frames that are addressed to unknown MAC addresses.

##### **standby**

The port is assigned a bridge port role, but is not currently switched into active state by the adapter. The device does not receive frames that are destined to unknown MAC addresses.

##### **inactive**

The port is not assigned a bridge port role.

#### **bridge\_hostnotify**

HiperSockets only: Read-write attribute that controls the sending of notifications for the port. When you enable notifications (even if notifications were already enabled), udev events are emitted for all

currently connected communication peers in quick succession. After that, a udev event is emitted every time a communication peer is connected, or a previously connected peer is disconnected. Any user space program that monitors these events must repopulate its list of registered peers every time the status of the bridge port device changes to enable notifications.

Valid values are:

**1**

The port is set to send notifications.

**0**

Notifications are turned off.

Notifications about the change of the state of bridge ports, and (if enabled) about registration and deregistration of communication peers on the LAN are delivered as udev events. The events are described in the file `Documentation/s390/qeth.txt` in the Linux kernel source tree.

### **bridge\_reflect\_promisc**

Read-write attribute that, when set, makes the bridge-port role of the port follow ("reflect") the promiscuity flag (`IFF_PROMISC`) of the corresponding Linux network interface. You can specify the following values:

**none**

Setting and resetting the promiscuous mode on the network interface has no effect on the bridge-port role of the underlying port.

**primary**

Setting or resetting the promiscuous mode on the network interface that is served by this device causes the driver to attempt assigning (or resetting) the primary role to the port. If a port with the primary role exists, assignment fails.

**secondary**

Setting or resetting the promiscuous mode on the network interface that is served by this device causes the driver to attempt assigning (or resetting) the secondary role to the port.

Setting **bridge\_reflect\_promisc** to anything but **none** causes the **bridge\_role** attribute to become read-only. The role of a port changes as a result of setting or unsetting the promiscuity flag (`IFF_PROMISC`) of the corresponding network interface. You can check the currently assigned role by reading the **bridge\_role** attribute.

### **Procedure**

1. To configure a network device as a bridge, issue a command of this form:

```
# chzdev -a <device_bus_id> bridge_role=<value>
```

or, using sysfs:

```
# echo <value> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/bridge_role
```

Setting the **bridge\_role** attribute requires the **bridge\_reflect\_promisc** attribute to be **none**. Alternatively, to make the bridge-port role of the port follow the promiscuity flag (`IFF_PROMISC`) of the corresponding Linux network interface, issue a command of the following form:

```
# chzdev -a <device_bus_id> bridge_reflect_promisc=<value>
```

or, using sysfs:

```
# echo <value> > /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/bridge_reflect_promisc
```

where valid values are:

- primary



- secondary
  - none
2. Check the state of the bridge port by reading the `bridge_state` attribute. Issue a command of this form:

```
# lsudev -a qeth <device_bus_id> --info --info
```

Alternatively, use the sysfs attribute `bridge_state` directly:

```
# cat /sys/bus/ccwgroup/drivers/qeth/<device_bus_id>/bridge_state
```

where displayed values could be:

- active
- standby
- inactive

### Example

In this example, a network device with bus ID `0.0.a007` is defined as a primary bridge port.

```
# chzdev -a 0.0.a007 bridge_role=primary
```

Equivalently, using sysfs:

```
# echo primary > /sys/bus/ccwgroup/drivers/qeth/0.0.a007/bridge_role
# cat /sys/bus/ccwgroup/drivers/qeth/0.0.a007/bridge_state
active
```

### What to do next

You can specify up to four secondary bridge ports together with one primary bridge port. If the primary bridge port fails, one of these bridge ports takes over. For each secondary bridge port, set `bridge_role` to secondary.

## Advanced packet-handling configuration

Use VNIC characteristics to control how HiperSockets devices in layer 2 mode handle packets with unknown MAC addresses.

### Before you begin

- VNIC characteristics are supported for HiperSockets devices only.
- VNIC characteristics are supported for layer 2 mode only.
- VNIC characteristics cannot be configured on devices that are configured as bridge ports.

### About this task

You can configure and fine-tune a promiscuous mode for incoming packets. You can configure the device to receive all packets regardless of the MAC address, or you can reject incoming multicast packets, or broadcast packets, or both.

For Linux instances that host multiple guest operating systems with different MAC addresses, you can configure the device to learn and handle these MAC addresses. The device then provides functions similar to a switch or to a software bridge.

The VNIC characteristics also include settings that can protect the MAC address of the device from being taken over by another device. You can deny takeover, or you can explicitly permit takeover to configure redundancy.

The VNIC characteristics of a HiperSockets device are represented by sysfs attributes in `/sys/devices/qeth/<device_bus_id>/vnicc`:

#### **flooding**

With flooding enabled, the device receives packets to any unknown destination MAC address. Valid values are 0 for disabled and 1 for enabled. By default, flooding is disabled.

#### **mcast\_flooding**

With multicast flooding enabled, the device receives packets to any multicast MAC addresses. Valid values are 0 for disabled and 1 for enabled. By default, multicast flooding is disabled and the device receives only packets to multicast MAC addresses to which it has previously registered.

#### **rx\_bcast**

With broadcast receiving enabled, the device receives packets with the broadcast destination MAC address. Valid values are 0 for disabled and 1 for enabled. By default, the device is enabled to receive broadcast packets.

#### **learning**

With learning enabled, the device assembles a list of source MAC addresses of outgoing packets. An entry is added to the list if a MAC address is unknown and has not already been learned by another device. The device then receives incoming packets to any listed MAC addresses. Valid values are 0 for disabled and 1 for enabled. By default, learning is disabled.

A learned MAC address is dropped from the list of learned MAC addresses unless packets with this MAC address are sent within a specific timeout period. The default timeout period is 600 s. You can specify a different timeout period with the `learning_timeout` attribute.

#### **takeover\_setvmac**

With this option enabled, the device's MAC address can be configured on a different device. Valid values are 0 for disabled and 1 for enabled. By default, this option is disabled and the MAC address cannot be configured on a different device.

#### **takeover\_learning**

With takeover by learning enabled, the MAC address of this device can be learned on a different device and, thus, taken over by this other device. Valid values are 0 for disabled and 1 for enabled. By default, takeover by learning is disabled.

#### **bridge\_invisible**

With bridge-port invisible enabled, packets are not transferred between the device and any other device that is configured as a bridge port. Valid values are 0 for disabled and 1 for enabled. By default, this option is disabled and, thus, traffic to and from bridge ports is permitted.

#### **learning\_timeout**

With learning enabled, this attribute specifies a timeout period, in seconds. A MAC address is dropped from the list of learned MAC addresses if this timeout period expires without any packets with this MAC address being received or sent.

You can set this timeout period by writing a value in the range 60 - 86400 to the attribute. The default is 600. The timeout must be set before learning is enabled on the device.

### **Procedure**

1. Optional: To read a VNIC characteristic setting from sysfs, issue a command of this form:

```
# cat /sys/devices/qeth/<device_bus_id>/vnicc/<attribute>
```

where `<device_bus_id>` is the device-bus ID of the HiperSockets device and `<attribute>` is one of the attributes that represent the VNIC characteristics.

#### **Example:**

```
# cat /sys/devices/qeth/0.0.a016/vnicc/learning
0
```

**Tip:** For an overview of all VNIC characteristics of the device, find the interface name of the device, then use the **lsqeth** command.

**Example:**

```
# cat /sys/devices/qeth/0.0.a016/if_name
enca160
# lsqeth enca160 | grep vnicc
vnicc/bridge_invisible : 0
vnicc/flooding          : 0
vnicc/learning          : 0
vnicc/learning_timeout  : 600
vnicc/mcast_flooding    : 1
vnicc/rx_bcast          : 1
vnicc/takeover_learning : 0
vnicc/takeover_setvmac  : 0
```

2. To set a VNIC characteristic issue a command of this form:

```
# chzdev <device_bus_id> vnicc/<attribute>=<value>
```

where *<device\_bus\_id>* is the device-bus ID of the HiperSockets device, *<attribute>* is one of the attributes that represent the VNIC characteristics, and *<value>* is the value to be set.

This setting persists across re-boots. To apply this setting to the running system only, use the **chzdev** command with the **-a** option or use the corresponding sysfs attribute.

**Example:** In this example, learning is enabled for a device with bus-ID 0.0.a016.

```
# chzdev 0.0.a016 vnicc/learning=1
```

or, using sysfs:

```
# echo 1 > /sys/devices/qeth/0.0.a016/vnicc/learning
```

**Example**

This example shows a typical configuration for a bridge-like behavior of the device.

```
# lsqeth enca160 | grep vnicc
vnicc/bridge_invisible : 0
vnicc/flooding          : 1
vnicc/learning          : 1
vnicc/learning_timeout  : 600
vnicc/mcast_flooding    : 1
vnicc/rx_bcast          : 1
vnicc/takeover_learning : 1
vnicc/takeover_setvmac  : 1
```

## Scenario: VIPA – minimize outage due to adapter failure

Using VIPA you can assign IP addresses that are not associated with a particular adapter. VIPA thus minimizes outage that is caused by adapter failure.

This scenario describes how to use:

- Standard VIPA
- Source VIPA (version 2.0.0 and later)

Standard VIPA is sufficient for applications, such as web servers, that do *not* open connections to other nodes. Source VIPA is used for applications that open connections to other nodes. Use Source VIPA Extensions to work with multiple VIPAs per destination in order to achieve multipath load balancing.

**Note:**

1. See the information in [“Confirming that an IP address has been set under layer 3” on page 233](#) concerning possible failure when you set IP addresses for OSA-Express features in QDIO mode (qeth driver).
2. The configuration file layout for Source VIPA changed since the 1.x versions. In the 2.0.0 version a policy is included. For details, see the readme file and the man pages that are provided with the package.

**Standard VIPA**

VIPA is a facility for assigning an IP address to a system, instead of to individual adapters. It is supported by the Linux kernel. The addresses can be in IPv4 or IPv6 format.

**Setting up standard VIPA**

To set up VIPA you must create a dummy device, ensure that your service listens to the IP address, and set up routing to it.

**Procedure**

Follow these main steps to set up VIPA in Linux:

1. Create a dummy device with a virtual IP address.
2. Ensure that your service (for example, the Apache web server) listens to the virtual IP address assigned in step [“1” on page 256](#).
3. Set up routes to the virtual IP address, on clients or gateways. To do so, you can use either:
  - Static routing (shown in [“Example of how to set up standard VIPA” on page 256](#)).
  - Dynamic routing. For details of how to configure routes, you must see the documentation that is delivered with your routing daemon (for example, zebra or gated).

**Adapter outage**

If outage of an adapter occurs, you must switch adapters.

**Procedure**

- Under static routing:
  - a) Delete the route that was set previously.
  - b) Create an alternative route to the virtual IP address.
- Under dynamic routing, see the documentation that is delivered with your routing daemon for details.

**Example of how to set up standard VIPA**

This example shows you how to configure VIPA under static routing, and how to switch adapters when an adapter outage occurs.

**About this task**

[Figure 57 on page 257](#) shows the network adapter configuration that is used in the example.

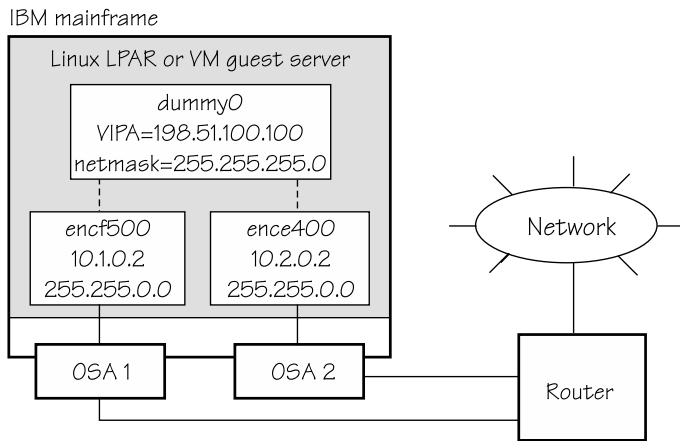


Figure 57. Example of using Virtual IP Address (VIPA)

## Procedure

1. Define the real interfaces.

```
[server]# ip addr add 10.1.0.2/16 dev encf500
[server]# ip link set dev encf500 up
[server]# ip addr add 10.2.0.2/16 dev ence400
[server]# ip link set dev ence400 up
```

2. If the dummy component was not compiled into the kernel, ensure that the dummy module was loaded.

If necessary, load it by issuing:

```
[server]# modprobe dummy
```

3. Create a dummy interface with a virtual IP address 198.51.100.100 and a netmask 255.255.255.0:

```
[server]# ip addr add 198.51.100.100/24 dev dummy0
[server]# ip link set dev dummy0 up
```

4. Enable the network devices for this VIPA so that it accepts packets for this IP address.

- IPv4 example:

```
[server]# qethconf vipa add 198.51.100.100 encf500
qethconf: Added 198.51.100.100 to /sys/class/net/encf500/device/vipa/add4.
qethconf: For verification please use "qethconf ipa list"
[server]# qethconf vipa add 198.51.100.100 ence400
qethconf: Added 198.51.100.100 to /sys/class/net/ence400/device/vipa/add4.
qethconf: For verification please use "qethconf ipa list"
```

- For IPv6, the address is specified in IPv6 format:

```
[server]# qethconf vipa add 2002::1235:5678 encf500
qethconf: Added 2002:0000:0000:0000:0000:0000:1235:5678 to
/sys/class/net/encf500/device/vipa/add6.
qethconf: For verification please use "qethconf ipa list"
[server]# qethconf vipa add 2002::1235:5678 ence400
qethconf: Added 2002:0000:0000:0000:0000:0000:1235:5678 to
/sys/class/net/ence400/device/vipa/add6.
qethconf: For verification please use "qethconf ipa list"
```

5. Ensure that the addresses are set:

```
[server]# qethconf vipa list
vipa add 198.51.100.100 encf500
vipa add 198.51.100.100 ence400
```

6. Ensure that your service (such as the Apache web server) listens to the virtual IP address.
7. Set up a route to the virtual IP address (static routing) so that VIPA can be reached through the gateway with address 10.1.0.2.

```
[router]# ip route add 198.51.100.100 via 10.1.0.2
```

### What to do next

Now assume that an adapter outage occurs. You must then:

1. Delete the previously created route.

```
[router]# ip route del 198.51.100.100
```

2. Create the alternative route to the virtual IP address.

```
[router]# ip route add 198.51.100.100 via 10.2.0.2
```

## Source VIPA

Source VIPA is particularly suitable for high-performance environments. It selects one source address out of a range of source addresses when it replaces the source address of a socket.

Some operating system kernels cannot do load balancing among several connections with the same source and destination address over several interfaces. The solution is to use several source addresses.

To achieve load balancing, a policy must be selected in the policy section of the configuration file of Source VIPA (/etc/src\_vipa.conf). In this policy section, you can also specify several source addresses that are used for one destination. Source VIPA then applies the source address selection according to the rules of the policy that is selected in the configuration file.

This Source VIPA solution does not affect kernel stability. Source VIPA is controlled by a configuration file that contains flexible rules for when to use Source VIPA based on destination IP address ranges.

You can use IPv6 or IPv4 addresses for Source VIPA. IPv6 addresses are supported as of Source VIPA 2.1.0.

### Setting up source VIPA

To set up source VIPA, define your address ranges in the configuration file. Source VIPA is delivered as part of the s390utils package. Install the package as usual.

### Configuration

With Source VIPA version 2.0.0 the configuration file changed: the policy section was added. The default configuration file is /etc/src\_vipa.conf.

/etc/src\_vipa.conf or the file pointed to by the environment variable SRC\_VIPA\_CONFIG\_FILE, contains lines such as the following:

```
# comment
D1.D2.D3.D4/MASK POLICY S1.S2.S3.S4 [T1.T2.T3.T4 [...]]
.INADDR_ANY P1-P2 POLICY S1.S2.S3.S4 [T1.T2.T3.T4 [...]]
.INADDR_ANY P POLICY S1.S2.S3.S4 [T1.T2.T3.T4 [...]]
```

D1.D2.D3.D4/MASK specifies a range of destination addresses and the number of bits set in the subnet mask (MASK). As soon as a socket is opened and connected to these destination addresses and the application does not do an explicit bind to a source address, Source VIPA does a bind to one of the source addresses specified (S, T, [...]). It uses the policy that is selected in the configuration file to distribute the source addresses. See “Policies” on page 259 for available load distribution policies. Instead of IP addresses in dotted notation, host names can also be used and are resolved by using DNS.

You can use IPv6 or IPv4 IP addresses, but not both within a single rule in the configuration file. The following example shows an IPv6 configuration file with a random policy:

```
# IPv6
2221:11c3:0123:d9d8:05d5:5a44:724c:783b/64 random ed27:120:da42:: 1112::33cc
```

.INADDR\_ANY P1-P2 POLICY S1.S2.S3.S4 or .INADDR\_ANY P POLICY S1.S2.S3.S4 causes bind calls with .INADDR\_ANY as a local address to be intercepted if the port the socket is bound to is between P1 and P2 (inclusive). In this case, .INADDR\_ANY is replaced by one of the source addresses specified (S, T, [...]), which can be 0.0.0.0.

All .INADDR\_ANY statements are read and evaluated in order of appearance. This method means that multiple .INADDR\_ANY statements can be used to have bind calls intercepted for every port outside a certain range. This is useful, for example, for `rlogin`, which uses the `bind` command to bind to a local port but with .INADDR\_ANY as a source address to use automatic source address selection. See “Policies” on page 259 for available load distribution policies.

The default behavior for all ports is that the kind of bind calls is not modified.

## Policies

With Source VIPA Extensions, you provide a range of dummy source addresses for replacing the source addresses of a socket. The policy that is selected determines which method is used for selecting the source addresses from the range of dummy addresses.

### onevipa

Only the first address of all source addresses specified is used as source address.

### random

The source address that is used is selected randomly from all the specified source addresses.

### lrr (local round robin)

The source address that is used is selected in a round robin manner from all the specified source addresses. The round robin takes place on a per-invocation base: each process is assigned the source addresses round robin independently from other processes.

### rr: ABC

Stands for round robin and implements a global round robin over all Source VIPA instances that share a configuration file. All processes that use Source VIPA access an IPC shared memory segment to fulfil a global round robin algorithm. This shared memory segment is destroyed when the last running Source VIPA ends. However, if this process does not end gracefully (for example, is ended by a `kill` command), the shared memory segment (size: 4 bytes) can stay in the memory until it is removed by `ipcrm`. The tool `ipcs` can be used to display all IPC resources and to get the key or id used for `ipcrm`. ABC are UNIX permissions in octal writing (for example, 700) that are used to create the shared memory segment. Make this permission mask as restrictive as possible. A process that has access to this mask can cause an imbalance of the round robin distribution in the worst case.

### lc

Attempts to balance the number of connections per source address. This policy always associates the socket with the VIPA that is least in use. If the policy cannot be parsed correctly, the policy is set to round robin per default.

## Enabling an application

The command:

```
src_vipa.sh <application and parameters>
```

enables the Source VIPA function for the application. The configuration file is read when the application is started. It is also possible to change the starter script and run multiple applications with different Source VIPA settings in separate files. To do this, define and export a `SRC_VIPA_CONFIG_FILE` environment variable that points to the separate file before you start an application.

### Note:

1. LD\_PRELOAD security prevents `setuid` programs to be run under Source VIPA; programs of this kind can be run only when the real UID is 0. The `ping` utility is usually installed with `setuid` permissions.

2. The maximum number of VIPAs per destination is 8.

### Example of how to set up source VIPA

An example shows how to set up source VIPA.

Figure 58 on page 260 shows a configuration where two applications with VIPA 198.51.100.100 and 198.51.100.200 are to be set up for Source VIPA with a local round robin policy.

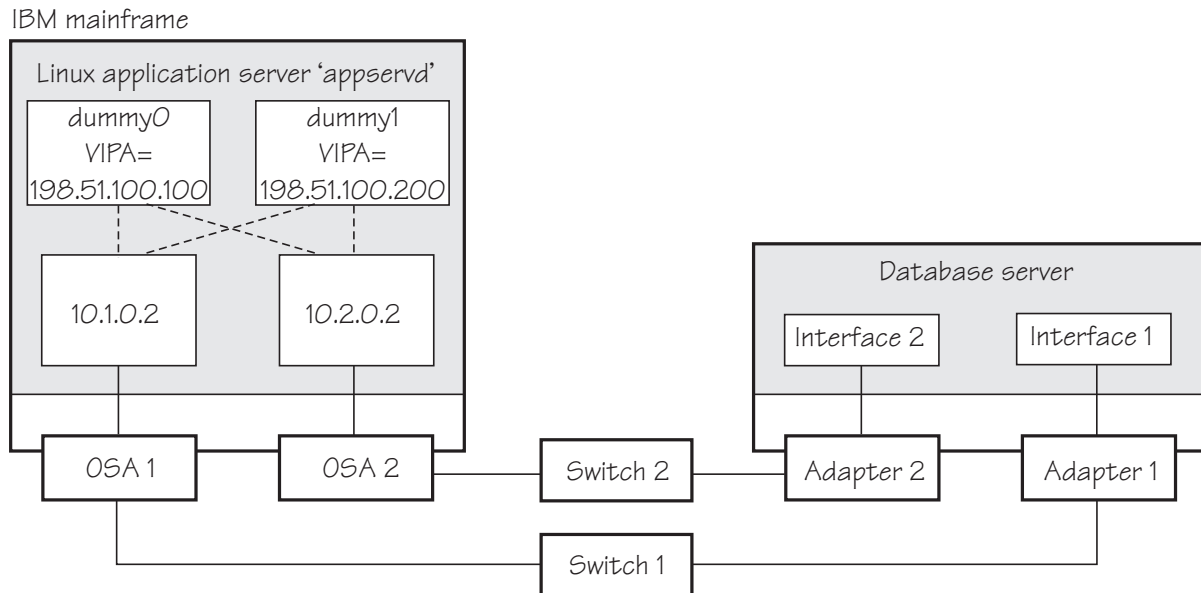


Figure 58. Example of using source VIPA

The required entry in the Source VIPA configuration file is:

```
9.0.0.0/8 lrr 198.51.100.100 198.51.100.200
```

## Scenario: Virtual LAN (VLAN) support

VLAN technology works according to IEEE Standard 802.1Q by logically segmenting the network into different broadcast domains. Thus packets are switched only between ports that are designated for the same VLAN.

By containing traffic that originates on a particular LAN to other LANs within the same VLAN, switched virtual networks avoid wasting bandwidth. Wasted bandwidth is a drawback inherent in traditional bridged/switched networks where packets are often forwarded to LANs that do not require them.


The qeth device driver for OSA-Express (QDIO) and HiperSockets supports priority tags as specified by IEEE Standard 802.1Q for both layer 2 and layer 3.

### Introduction to VLANs

Use VLANs to increase traffic flow and reduce latency. With VLANs, you can organize your network by traffic patterns rather than by physical location.


In a conventional network topology, such as that shown in the following figure, devices communicate across LAN segments in different broadcast domains by using routers. Although routers add latency by delaying transmission of data while they are using more of the data packet to determine destinations, they are preferable to building a single broadcast domain. A single domain can easily be flooded with traffic.



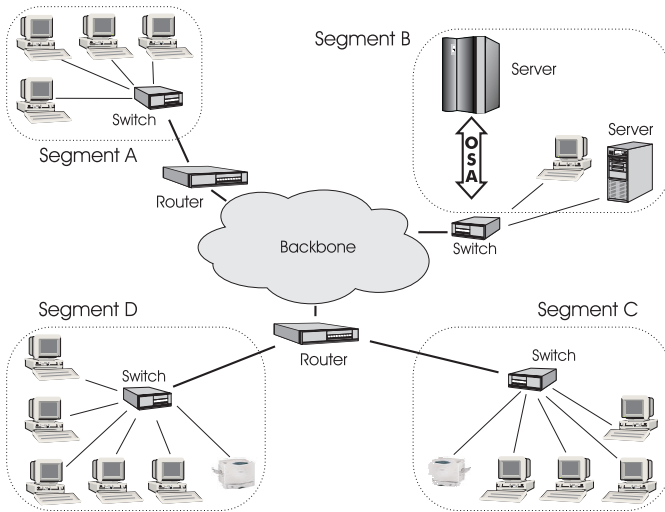

*Figure 59. Conventional routed network*

By organizing the network into VLANs by using Ethernet switches, distinct broadcast domains can be maintained without the latency that is introduced by multiple routers. As the following figure shows, a single router can provide the interfaces for all VLANs that appeared as separate LAN segments in the previous figure.

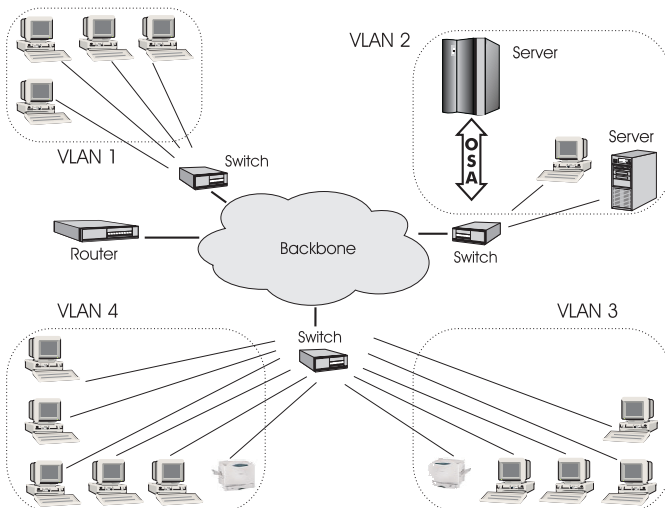

*Figure 60. Switched VLAN network*

The following figure shows how VLANs can be organized logically, according to traffic flow, rather than being restricted by physical location. If workstations 1-3 communicate mainly with the small server, VLANs can be used to organize only these devices in a single broadcast domain that keeps broadcast traffic within the group. This setup reduces traffic both inside the domain and outside, on the rest of the network.

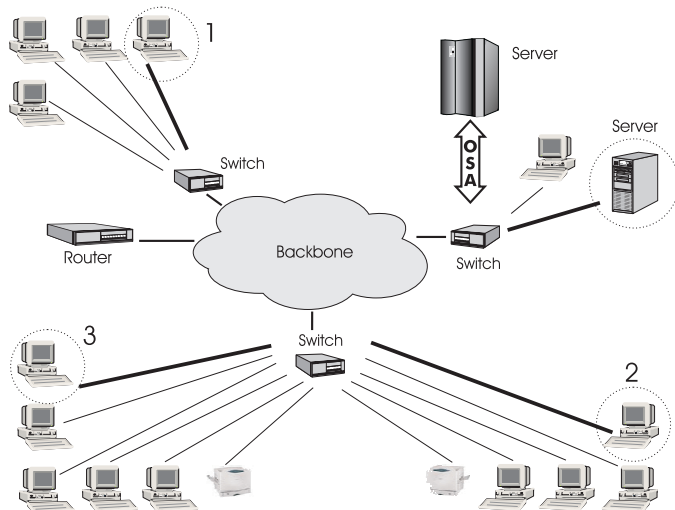


Figure 61. VLAN network organized for traffic flow

## Configuring VLAN devices

Configure VLANs with the **ip link add** command. See the **ip-link** man page for details.

### About this task

Information about the current VLAN configuration is available by listing the files in `/proc/net/vlan/*` with **cat** or **more**. For example:

```
# cat /proc/net/vlan/config
VLAN Dev name | VLAN ID
Name-Type: VLAN_NAME_TYPE_RAW_PLUS_VID_NO_PAD bad_proto_rcvd: 0
encd300.100 | 100 | encd300
encd300.200 | 200 | encd300
encd300.300 | 300 | encd300

# cat /proc/net/vlan/encd300.300
encd300.300 VID: 300 REORDER_HDR: 1 dev->priv_flags: 1
    total frames received: 10914061
    total bytes received: 1291041929
    Broadcast/Multicast Rcvd: 6

    total frames transmitted: 10471684
    total bytes transmitted: 4170258240
    total headroom inc: 0
    total encap on xmit: 10471684
Device: encd300
INGRESS priority mappings: 0:0 1:0 2:0 3:0 4:0 5:0 6:0 7:0
EGRESS priority Mappings:
#
```

## Example: Creating two VLANs

VLANs are allocated in an existing interface that represents a physical Ethernet LAN.

The following example creates two VLANs, one with ID 3 and one with ID 5.

```
ip addr add 198.51.160.23/19 dev ence400
ip link set dev ence400 up
ip link add dev ence400.3 link ence400 type vlan id 3
ip link add dev ence400.5 link ence400 type vlan id 5
```

The **ip link add** commands added interfaces "ence400.3" and "ence400.5", which you can then configure:

```
ip addr add 1.2.3.4/24 dev ence400.3
ip link set dev ence400.3 up
ip addr add 10.100.2.3/16 dev ence400.5
ip link set dev ence400.5 up
```

The traffic that flows out of ence400.3 is in the VLAN with ID=3. This traffic is not received by other stacks that listen to VLANs with ID=4.

The internal routing table ensures that every packet to 1.2.3.x goes out through ence400.3 and everything to 10.100.x.x through ence400.5. Traffic to 198.51.1xx.x flows through ence400 (without a VLAN tag).

To remove one of the VLAN interfaces:

```
ip link set dev ence400.3 down
ip link delete ence400.3 type vlan
```

## HiperSockets Network Concentrator

You can configure a HiperSockets Network Concentrator on a QETH device in layer 3 mode.

**Before you begin:** The instructions that are given apply to IPv4 only. The HiperSockets Network Concentrator connector settings are available in layer 3 mode only.

The HiperSockets Network Concentrator connects systems to an external LAN within one IP subnet using HiperSockets. HiperSockets Network Concentrator connected systems look as if they were directly connected to the LAN. This simplification helps to reduce the complexity of network topologies that result from server consolidation.

Without changing the network setup, you can use HiperSockets Network Concentrator to port systems:

- From the LAN into an IBM Z Server environment
- From systems that are connected by a different HiperSockets Network Concentrator into an IBM Z Server environment

Thus, HiperSockets Network Concentrator helps to simplify network configuration and administration.

### Design

A connector Linux system forwards traffic between the external OSA interface and one or more internal HiperSockets interfaces. The forwarding is done via IPv4 forwarding for unicast traffic and via a particular bridging code (xcec\_bridge) for multicast traffic.

A script named ip\_watcher.pl observes all IP addresses registered in the HiperSockets network and configures them as proxy ARP entries (see “Configuring a device for proxy ARP” on page 248) on the OSA interfaces. The script also establishes routes for all internal systems to enable IP forwarding between the interfaces.

All unicast packets that cannot be delivered in the HiperSockets network are handed over to the connector by HiperSockets. The connector also receives all multicast packets to bridge them.

### Setup

The setup principles for configuring the HiperSockets Network Concentrator are as follows:

#### leaf nodes

The leaf nodes do not require a special setup. To attach them to the HiperSockets network, their setup should be as if they were directly attached to the LAN. They do not have to be Linux systems.

#### connector systems

In the following, HiperSockets Network Concentrator IP refers to the subnet of the LAN that is extended into the HiperSockets net.

- If you want to support forwarding of all packet types, define the OSA interface for traffic into the LAN as a multicast router (see “Setting up a Linux router in layer 3” on page 242).
- All HiperSockets interfaces that are involved must be set up as connectors: set the route4 attributes of the corresponding devices to "primary\_connector" or to "secondary\_connector". Alternatively, you can add the OSA interface name to the start script as a parameter. This option results in HiperSockets Network Concentrator ignoring multicast packets, which are then not forwarded to the HiperSockets interfaces.
- IP forwarding must be enabled for the connector partition. Enable the forwarding either manually with the command

```
sysctl -w net.ipv4.ip_forward=1
```

Alternatively, you can enable IP forwarding in the `/etc/sysctl.conf` configuration file to activate IP forwarding for the connector partition automatically after booting.

- The network routes for the HiperSockets interface must be removed. A network route for the HiperSockets Network Concentrator IP subnet must be established through the OSA interface. To establish a route, assign the IP address 0.0.0.0 to the HiperSockets interface. At the same time, assign an address used in the HiperSockets Network Concentrator IP subnet to the OSA interface. These assignments set up the network routes correctly for HiperSockets Network Concentrator.
- To start HiperSockets Network Concentrator, run the script `start_hsnr.sh`. You can specify an interface name as optional parameter. The interface name makes HiperSockets Network Concentrator use the specified interface to access the LAN. There is no multicast forwarding in that case.
- To stop HiperSockets Network Concentrator, use the command **killall ip\_watcher.pl** to remove changes that are caused by running HiperSockets Network Concentrator.

## Availability setups

If a connector system fails during operation, it can simply be restarted. If all the startup commands are run automatically, it will instantaneously be operational again after booting. Two common availability setups are mentioned here:

### One connector partition and one monitoring system

As soon as the monitoring system cannot reach the connector for a specific timeout (for example, 5 seconds), it restarts the connector. The connector itself monitors the monitoring system. If it detects (with a longer timeout than the monitoring system, for example, 15 seconds) a monitor system failure, it restarts the monitoring system.

### Two connector systems monitoring each other

In this setup, there is an active and a passive system. As soon as the passive system detects a failure of the active connector, it takes over operation. To take over operation, it must reset the other system to release all OSA resources for the multicast\_router operation. The failed system can then be restarted manually or automatically, depending on the configuration. The passive backup HiperSockets interface can either switch into primary\_connector mode during the failover, or it can be set up as secondary\_connector. A secondary\_connector takes over the connecting function, as soon as there is no active primary\_connector. This setup has a faster failover time than the first one.

## Hints

- The MTU of the OSA and HiperSockets link should be of the same size. Otherwise, multicast packets that do not fit in the link's MTU are discarded as there is no IP fragmentation for multicast bridging. Warnings are printed to a corresponding syslog destination.
- The script `ip_watcher.pl` prints error messages to the standard error descriptor of the process.
- `xcec-bridge` logs messages and errors to syslog. On Red Hat Enterprise Linux 8.1, issue **journalctl** to find these messages.
- Registering all internal addresses with the OSA adapter can take several seconds for each address.

- To shut down the HiperSockets Network Concentrator function, issue `killall ip_watcher.pl`. This script removes all routing table and Proxy ARP entries added during the use of HiperSockets Network Concentrator.

**Note:**

1. Broadcast bridging is active only on OSA or HiperSockets hardware that can handle broadcast traffic without causing a bridge loop. If you see the message "Setting up broadcast echo filtering for ... failed" in the message log when you set the qeth device online, broadcast bridging is not available.
2. Unicast packets are routed by the common Linux IPv4 forwarding mechanisms. As bridging and forwarding are done at the IP Level, the IEEE 802.1q VLAN and the IPv6 protocol are not supported.

## Examples for setting up a network concentrator

An example of a network environment with a network concentrator.

Figure 62 on page 265 shows a network environment where a Linux instance C acts as a network concentrator that connects other operating system instances on a HiperSockets LAN to an external LAN.

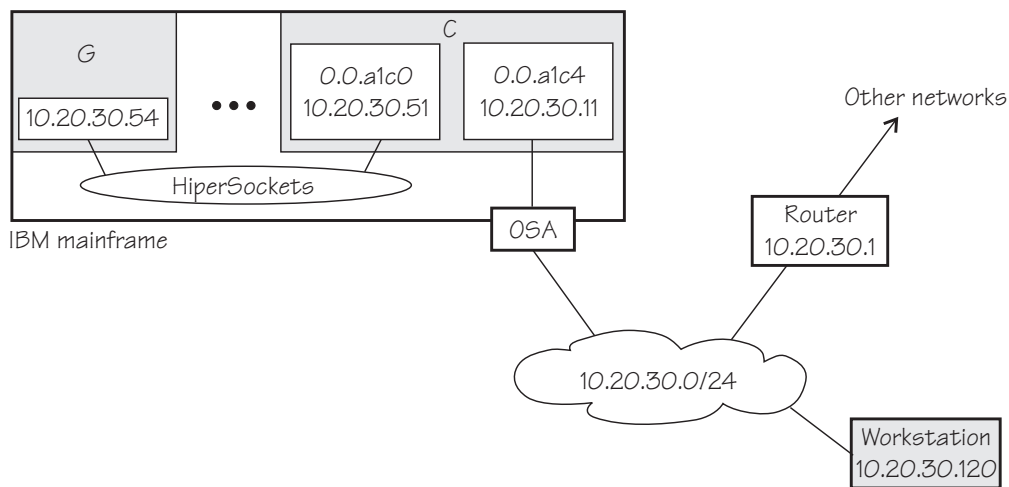


Figure 62. HiperSockets network concentrator setup

### Setup for the network concentrator C:

The HiperSockets interface enca1c0 (you can infer the interface name from the device bus-ID 0.0.a1c0) has IP address 10.20.30.51, and the netmask is 255.255.255.0. The default gateway is 10.20.30.1.

Issue:

```
# echo primary_connector > /sys/bus/ccwgroup/drivers/qeth/0.0.a1c0/route4
```

The OSA-Express CHPID in QDIO mode interface enca1c4 has IP address 10.20.30.11, and the netmask is 255.255.255.0. The default gateway is 10.20.30.1.

Issue:

```
# echo multicast_router > /sys/bus/ccwgroup/drivers/qeth/0.0.a1c4/route4
```

To enable IP forwarding issue:

```
# sysctl -w net.ipv4.ip_forward=1
```

To remove the network routes for the HiperSockets interface issue:

```
# ip route del 10.20.30/24
```

To start the HiperSockets network concentrator, run the script `start_hsync.sh`. Issue:

```
# start_hsync.sh &
```

### Setup for G:

No special setup required. The HiperSockets interface has IP address 10.20.30.54, and the netmask is 255.255.255.0. The default gateway is 10.20.30.1.

### Setup for workstation:

No special setup required. The network interface IP address is 10.20.30.120, and the netmask is 255.255.255.0. The default gateway is 10.20.30.1.

Figure 63 on page 266 shows the example of Figure 62 on page 265 with an additional mainframe. On the second mainframe a Linux instance D acts as a HiperSockets network concentrator.

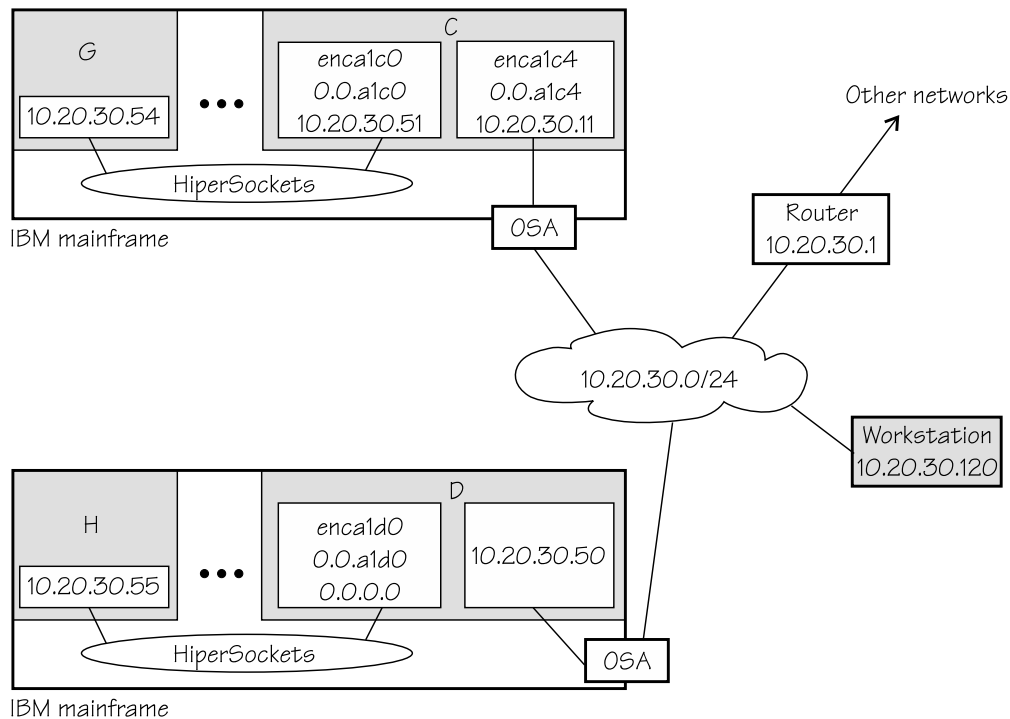


Figure 63. Expanded HiperSockets network concentrator setup

The configuration of C, G, and the workstation remain the same as for [Figure 62 on page 265](#).

### Setup for the network concentrator D:

The HiperSockets interface `enca1c0` has IP address 0.0.0.0.

Assuming that the device bus-ID of the HiperSockets interface is 0.0.a1d0, issue:

```
# echo primary_connector > /sys/bus/ccwgroup/drivers/qeth/0.0.a1d0/route4
```

The OSA-Express CHPID in QDIO mode interface `enca1d0` has IP address 10.20.30.50, and the netmask is 255.255.255.0. The default gateway is 10.20.30.1.

D is not configured as a multicast router, it therefore only forwards unicast packets.

To enable IP forwarding issue:

```
# sysctl -w net.ipv4.ip_forward=1
```

**Tip:** See the Red Hat documentation website for information about using configuration files to automatically enable IP forwarding when Linux boots:  
[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

To start the HiperSockets network concentrator, run the script `start_hsync.sh`. Issue:

```
# start_hsync.sh &
```

#### Setup for H:

No special setup required. The HiperSockets interface has IP address 10.20.30.55, and the netmask is 255.255.255.0. The default gateway is 10.20.30.1.

## Setting up for DHCP with IPv4

For connections through an OSA-Express adapter in QDIO mode, the OSA-Express adapter offloads ARP, MAC header, and MAC address handling.

For information about MAC headers, see [“MAC headers in layer 3 mode”](#) on page 216.

Because a HiperSockets connection does not go out on a physical network, there are no ARP, MAC headers, and MAC addresses for packets in a HiperSockets LAN. The resulting problems for DHCP are the same in both cases and the fixes for connections through the OSA-Express adapter also apply to HiperSockets.

Dynamic Host Configuration Protocol (DHCP) is a TCP/IP protocol that allows clients to obtain IP network configuration information (including an IP address) from a central DHCP server. The DHCP server controls whether the address it provides to a client is allocated permanently or is leased temporarily. DHCP specifications are described by RFC 2131 "Dynamic Host Configuration Protocol" and RFC 2132 "DHCP options and BOOTP Vendor Extensions", which are available at

[www.ietf.org](http://www.ietf.org)

Two types of DHCP environments must be taken into account:

- DHCP that uses OSA-Express adapters in QDIO mode
- DHCP in a z/VM VSWITCH or guest LAN

For information about setting up DHCP for a Linux instance in a z/VM guest LAN environment, see Redpaper *Linux on IBM eServer™ zSeries and S/390: TCP/IP Broadcast on z/VM Guest LAN*, REDP-3596 at

[www.ibm.com/redbooks](http://www.ibm.com/redbooks)

The programs *dhclient* and *dhcp* are examples of a DHCP client and a DHCP server you can use.

### Required options for using dhclient with layer3

You must configure the DHCP client program `dhclient` to use it on Linux on Z with layer3.

- Run the DHCP client with an option that instructs the DHCP server to broadcast its response to the client.

Because the OSA-Express adapter in QDIO mode forwards packets to Linux based on IP addresses, a DHCP client that requests an IP address cannot receive the response from the DHCP server without this option.

- Run the DHCP client with an option that specifies the client identifier string.

By default, the client uses the MAC address of the network interface. Hence, without this option, all Linux instances that share the OSA-Express adapter in QDIO mode would also have the same client identifier.

See the documentation for `dhclient` about how to select these options.

You need no special options for the DHCP server program, `dhcp`. You need no special options for using `dhcp`.

## Setting up Linux as a LAN sniffer

---

You can set up a Linux instance to act as a LAN sniffer, for example, to make data on LAN traffic available to tools like **tcpdump** or Wireshark.

The LAN sniffer can be:

- A HiperSockets Network Traffic Analyzer for LAN traffic between LPARs
- A LAN sniffer for LAN traffic between z/VM guest virtual machines, for example, through a z/VM virtual switch (VSWITCH)

## Setting up a HiperSockets network traffic analyzer

A HiperSockets network traffic analyzer (NTA) runs in an LPAR and monitors LAN traffic between LPARs.

### Before you begin

- Your Linux instance must run in LPAR mode.
- On the SE, the LPARs must be authorized for analyzing and being analyzed.

**Tip:** SE authorization changes for the HiperSockets network traffic analyzer require re-creating the device by ungrouping and regrouping (see [“Removing a qeth group device” on page 225](#) and [“Creating a qeth group device” on page 224](#)). Do any authorization changes before you configure the NTA device.

- You need a traffic-dumping tool such as **tcpdump**.

### About this task

HiperSockets NTA is available to trace both layer 3 and layer 2 network traffic, but the analyzing device itself must be configured as a layer 3 device. The analyzing device is a dedicated NTA device and cannot be used as a regular network interface.

### Linux setup:

Ensure that the qeth device driver module was loaded.

### Procedure

Perform the following steps:

1. Configure a HiperSockets interface dedicated to analyzing with the `layer2` sysfs attribute set to 0 and the `sniffer` sysfs attribute set to 1.

For example, assuming the HiperSockets interface is `enca1c0` with device bus-ID `0.0.a1c0`:

```
# znetconf -a a1c0 -o layer2=0 -o sniffer=1
```

The **znetconf** command also sets the device online. For more information about **znetconf**, see [“znetconf - List and configure network devices” on page 669](#). The qeth device driver automatically sets the `buffer_count` attribute to 128 for the analyzing device.

2. Activate the device (no IP address is needed):

```
# ip link set enca1c0 up
```

3. Switch the interface into promiscuous mode:

```
# tcpdump -i enca1c0
```



## Results

The device is now set up as a HiperSockets network traffic analyzer.

**Hint:** A HiperSockets network traffic analyzer with no free empty inbound buffers might have to drop packets. Dropped packets are reflected in the "dropped counter" of the HiperSockets network traffic analyzer interface and reported by **tcpdump**.

### Example:

```
# ip -s link show dev ena1c0
...
RX: bytes  packets  errors  dropped  overrun  mcast
223242    6789      0       5        0       176
...
# tcpdump -i ena1c0
tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on ena1c0, link-type EN10MB (Ethernet), capture size 96 bytes
...
5 packets dropped by kernel
```

## Setting up a z/VM guest LAN sniffer

You can set up a guest LAN sniffer on a virtual NIC that is coupled to a z/VM VSWITCH or guest LAN.

### Before you begin

- You need class B authorization on z/VM.
- The Linux instance to be set up as a guest LAN sniffer must run as a guest of the same z/VM system as the guest LAN you want to investigate.

### About this task

If a virtual switch connects to a VLAN that includes nodes outside the z/VM system, these external nodes are beyond the scope of the sniffer.

For information about VLANs and z/VM virtual switches, see *z/VM: Connectivity*, SC24-6267.

### Procedure

- Set up Linux.

Ensure that the qeth device driver is loaded.

- Set up z/VM.

Ensure that the z/VM guest virtual machine on which you want to set up the guest LAN sniffer is authorized for the switch or guest LAN and for promiscuous mode.

For example, if your virtual NIC is coupled to a z/VM virtual switch, perform the following steps on your z/VM system:

- a) Check whether the z/VM guest virtual machine already has the requisite authorizations. Enter a CP command of this form:

```
q vswitch <switchname> promisc
```

where <switchname> is the name of the virtual switch. If the output lists the z/VM guest virtual machine as authorized for promiscuous mode, no further setup is needed.

- b) If the output from step “1” on page 269 does not list the guest virtual machine, check if the guest is authorized for the virtual switch. Enter a CP command of this form:

```
q vswitch <switchname> acc
```

where <switchname> is the name of the virtual switch.

If the output lists the z/VM guest virtual machine as authorized, you must temporarily revoke the authorization for the switch before you can grant authorization for promiscuous mode. Enter a CP command of this form:

```
set vswitch <switchname> revoke <userid>
```

where <switchname> is the name of the virtual switch and <userid> identifies the z/VM guest virtual machine.

- c) Authorize the Linux instance for the switch and for promiscuous mode. Enter a CP command of this form:

```
set vswitch <switchname> grant <userid> promisc
```

where <switchname> is the name of the virtual switch and <userid> identifies the z/VM guest virtual machine.

For details about the CP commands that are used here and for commands you can use to check and assign authorizations for other types of guest LANs, see *z/VM: CP Commands and Utilities Reference*, SC24-6268.

---

## Chapter 16. OSA-Express SNMP subagent support

**LPAR and z/VM:** The SNMP subagent support applies to Linux in LPAR mode and to Linux on z/VM.

The OSA-Express Simple Network Management Protocol (SNMP) subagent (osasnmppd) supports management information bases (MIBs) for the OSA-Express features.

The subagent supports OSA-Express features as shown in [Table 34 on page 207](#).

This subagent capability through the OSA-Express features is also called *Direct SNMP* to distinguish it from another method of accessing OSA SNMP data through OSA/SF, a package for monitoring and managing OSA features that does not run on Linux.

To use the osasnmppd subagent, you need:

- An OSA-Express feature running in QDIO mode with the latest textual MIB file for the appropriate LIC level (recommended)
- The qeth device driver for OSA-Express (QDIO)
- The osasnmppd subagent from the s390utils RPM
- The net-snmp package delivered with Red Hat Enterprise Linux 6

---

### What you should know about osasnmppd

The osasnmppd subagent requires a master agent to be installed on a Linux system.

You get the master agent from the net-snmp package. The subagent uses the Agent eXtensibility (AgentX) protocol to communicate with the master agent.

net-snmp is an open source project that is owned by the Open Source Development Network, Inc. (OSDN). For more information about net-snmp visit:

[net-snmp.sourceforge.net](http://net-snmp.sourceforge.net)

When the master agent (snmpd) is started on a Linux system, it binds to a port (default 161) and awaits requests from SNMP management software. Subagents can connect to the master agent to support MIBs of special interest (for example, OSA-Express MIB). When the osasnmppd subagent is started, it retrieves the MIB objects of the OSA-Express features currently present on the Linux system. It then registers with the master agent the object IDs (OIDs) for which it can provide information.

An OID is a unique sequence of dot-separated numbers (for example, .1.3.6.1.4.1.2) that represents a particular information. OIDs form a hierarchical structure. The longer the OID, that is the more numbers it is made up of, the more specific is the information that is represented by the OID. For example, .1.3.6.1.4.1.2 represents all IBM-related network information while .1.3.6.1.4.1.2.6.188 represents all OSA-Express-related information.

A MIB corresponds to a number of OIDs. MIBs provide information about their OIDs including textual representations the OIDs. For example, the textual representation of .1.3.6.1.4.1.2 is .iso.org.dod.internet.private.enterprises.ibm.

The structure of the MIBs might change when updating the OSA-Express Licensed Internal Code (LIC) to a newer level. If MIB changes are introduced by a new LIC level, you must download the appropriate MIB file for the LIC level (see [“Downloading the IBM OSA-Express MIB” on page 272](#)). You do not need to update the subagent. Place the updated MIB file in a directory that is searched by the master agent.

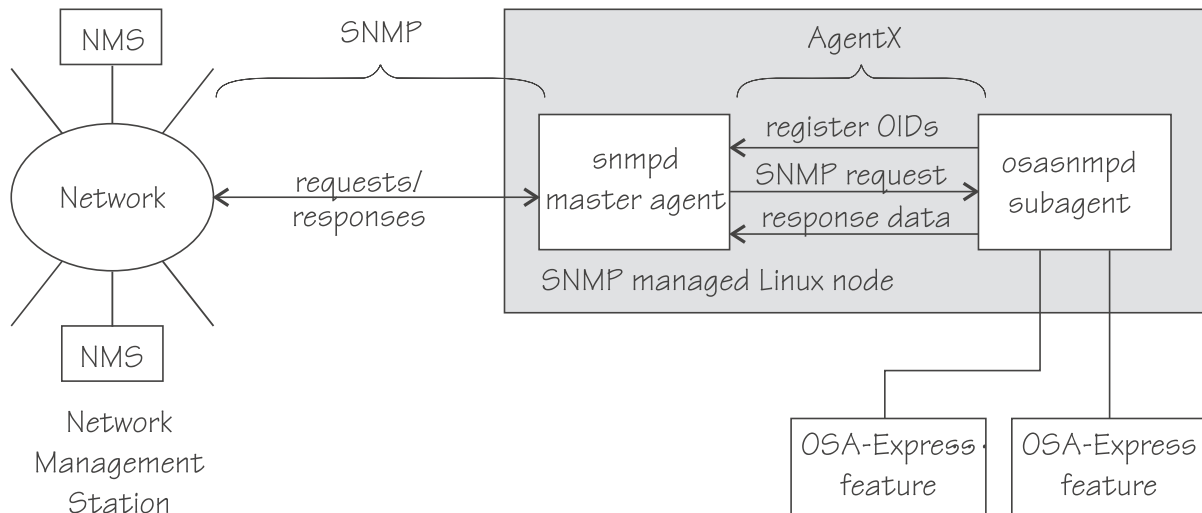


Figure 64. OSA-Express SNMP agent flow

Figure 64 on page 272 illustrates the interaction between the `snmpd` master agent and the `osasnmppd` subagent.

**Example:** This example shows the processes that run after the `snmpd` master agent and the `osasnmppd` subagent are started. When you start `osasnmppd`, a daemon called `osasnmppd` starts. In the example, PID 687 is the SNMP master agent and PID 729 is the OSA-Express SNMP subagent process:

```
ps -ef | grep snmp
```

USER	PID								
root	687	1	0	11:57	pts/1	00:00:00	snmpd		
root	729	659	0	13:22	pts/1	00:00:00	osasnmppd		

When the master agent receives an SNMP request for an OID that is registered by a subagent, the master agent uses the subagent to collect any requested information and to perform any requested operations. The subagent returns any requested information to the master agent. Finally, the master agent returns the information to the originator of the request.

## Setting up osasnmppd

You must download the IBM OSA-Express MIB and configure access control before you use can the `osasnmppd` subagent.

### Downloading the IBM OSA-Express MIB

Keep your MIB file up to date by downloading the latest version.

#### About this task

Perform the following steps to download the IBM OSA-Express MIB. The MIB file is valid only for hardware that supports the OSA-Express adapter.

#### Procedure

1. Go to [www.ibm.com/servers/resourcelink](http://www.ibm.com/servers/resourcelink)

A user ID and password are required. If you do not yet have one, you can apply for a user ID.

2. Sign in.
3. Select **Library** from the navigation area.
4. Under **Library shortcuts**, select **Open Systems Adapter (OSA) Library**.

5. Follow the link for **OSA-Express Direct SNMP MIB module**.
6. Select and download the MIB for your LIC level.
7. Rename the MIB file to the name specified in the MIBs definition line and use the extension `.txt`.

**Example:** If the definition line in the MIB looks like this:

```
==>IBM-OSA-MIB DEFINITIONS ::= BEGIN
```

Rename the MIB to `IBM-OSA-MIB.txt`.

8. Place the MIB into `/usr/share/snmp/mibs`.

If you want to use a different directory, be sure to specify the directory in the `snmp.conf` configuration file (see step “10” on page 275).

## Results

You can now make the OID information from the MIB file available to the master agent. You can then use textual OIDs instead of numeric OIDs when you use master agent commands.

See also the FAQ (How do I add a MIB to the tools?) for the master agent package at

[net-snmp.sourceforge.net/FAQ.html](http://net-snmp.sourceforge.net/FAQ.html)

## Configuring access control

To start successfully, the subagent requires at least read access to the standard MIB-II on the local node.

### About this task

During subagent startup or when network interfaces are added or removed, the subagent must query OIDs from the interfaces group of the standard MIB-II.

Given here is an example of how you can use the `snmpd.conf` and `snmp.conf` configuration files to assign access rights with the View-Based Access Control Mechanism (VACM). The following access rights are assigned on the local node:

- General read access for the scope of the standard MIB-II
- Write access for the scope of the OSA-Express MIB
- Public local read access for the scope of the interfaces MIB

The example is intended for illustration purposes only. Depending on the security requirements of your installation, you might need to define your access differently. See the `snmpd` man page for a more information about assigning access rights to `snmpd`.

### Procedure

1. See the Red Hat Enterprise Linux 8.1 documentation to find out where you must place the `snmpd.conf` file.  
Some of the possible locations are:
  - `/etc`
  - `/etc/snmp`
2. Open `snmpd.conf` with your preferred text editor. There might be a sample in `usr/share/doc/packages/net-snmp/EXAMPLE.conf`
3. Find the security name section and include a line of this form to map a community name to a security name:

```
com2sec <security-name> <source> <community-name>
```

where:

**<security-name>**

is given access rights through further specifications within `snmpd.conf`.

**<source>**

is the IP-address or DNS-name of the accessing system, typically a Network Management Station.

**<community-name>**

is the community string used for basic SNMP password protection.

**Example:**

#	sec.name	source	community
com2sec	osasec	default	osacom
com2sec	pubsec	localhost	public

#### 4. Find the group section.

Use the security name to define a group with different versions of the master agent for which you want to grant access rights. Include a line of this form for each master agent version:

```
group <group-name> <security-model> <security-name>
```

where:

**<group-name>**

is a group name of your choice.

**<security-model>**

is the security model of the SNMP version.

**<security-name>**

is the same as in step [“3” on page 273](#).

**Example:**

#	groupName	securityModel	securityName
group	osagroup	v1	osasec
group	osagroup	v2c	osasec
group	osagroup	usm	osasec
group	osasnmpd	v2c	pubsec

Group "osasnmpd" with community "public" is required by osasnmpd to determine the number of network interfaces.

#### 5. Find the view section and define your views.

A view is a subset of all OIDs. Include lines of this form:

```
view <view-name> <included|excluded> <scope>
```

where:

**<view-name>**

is a view name of your choice.

**<included|excluded>**

indicates whether the following scope is an inclusion or an exclusion statement.

**<scope>**

specifies a subtree in the OID tree.

**Example:**

#	name	incl/excl	subtree	mask(optional)
view	allview	included	.1	
view	osaview	included	.1.3.6.1.4.1.2	
view	ifmibview	included	interfaces	
view	ifmibview	included	system	

View "allview" encompasses all OIDs while "osaview" is limited to IBM OIDs. The numeric OID provided for the subtree is equivalent to the textual OID

".iso.org.dod.internet.private.enterprises.ibm" View "ifmibview" is required by osasnmpr to determine the number of network interfaces.

**Tip:** Specifying the subtree with a numeric OID leads to better performance than using the corresponding textual OID.

6. Find the access section and define access rights. Include lines of this form:

```
access <group-name> "" any noauth exact <read-view> <write-view> none
```

where:

**<group-name>**

is the group you defined in step "4" on page 274.

**<read-view>**

is a view for which you want to assign read-only rights.

**<write-view>**

is a view for which you want to assign read-write rights.

**Example:**

#	group	context	sec.model	sec.level	prefix	read	write	notif
access	osagroup	""	any	noauth	exact	allview	osaview	none
access	osasnmpr	""	v2c	noauth	exact	ifmibview	none	none

The access line of the example gives read access to the "allview" view and write access to the "osaview". The second access line gives read access to the "ifmibview".

7. Also include the following line to enable the AgentX support:

```
master agentx
```

AgentX support is compiled into the net-snmp master agent.

8. Save and close snmpd.conf.

Example of an snmpd.conf file:

#	sec.name	source	community					
com2sec	osasec	default	osacom					
com2sec	pubsec	localhost	public					
#	groupName	securityModel	securityName					
group	osagroup	v1	osasec					
group	osagroup	v2c	osasec					
group	osagroup	usm	osasec					
group	osasnmpr	v2c	pubsec					
#	name	incl/excl	subtree	mask(optional)				
view	allview	included	.1					
view	osaview	included	.1.3.6.1.4.1.2					
view	ifmibview	included	interfaces					
view	ifmibview	included	system					
#	group	context	sec.model	sec.level	prefix	read	write	notif
access	osagroup	""	any	noauth	exact	allview	osaview	none
access	osasnmpr	""	v2c	noauth	exact	ifmibview	none	none
master	agentx							

9. Open ~/ .snmp/snmp.conf with your preferred text editor.

**Tip:** See **man snmp.conf** for possible locations of snmp.conf.

10. Include a line of this form to specify the directory to be searched for MIBs:

```
mibdirs +<mib-path>
```

Example:

```
mibdirs +/usr/share/snmp/mibs
```

11. Include a line of this form to make the OSA-Express MIB available to the master agent:

```
mibs +<mib-name>
```

where *<mib-name>* is the stem of the MIB file name you assigned in [“Downloading the IBM OSA-Express MIB”](#) on page 272.

**Example:** `mibs +IBM-OSA-MIB`

12. Define defaults for the version and community to be used by the `snmp` commands. Add lines of this form:

```
defVersion    <version>
defCommunity  <community-name>
```

where *<version>* is the SNMP protocol version and *<community-name>* is the community you defined in step “3” on page 273.

**Example:**

```
defVersion    2c
defCommunity  osacom
```

These default specifications simplify issuing master agent commands.

13. Save and close `~/ .snmp/snmp.conf`.

## Working with the `osasnmppd` subagent

Working with the `osasnmppd` subagent includes starting it, checking the log file, issuing queries, and stopping the subagent.

Working with `osasnmppd` comprises the following tasks:

- [“Starting the `osasnmppd` subagent”](#) on page 276
- [“Checking the log file”](#) on page 276
- [“Issuing queries”](#) on page 277
- [“Stopping `osasnmppd`”](#) on page 278

### Starting the `osasnmppd` subagent

Use the **`osasnmppd`** command to start the `osasnmppd` subagent.

#### Procedure

After you download the `s390utils-osasnmppd` package and set up the `osasnmppd` subagent, start the subagent with the command:

```
# osasnmppd
```

The `osasnmppd` subagent, in turn, starts a daemon that is called `osasnmppd`.

For command options see the **`osasnmppd`** command man page.

If you restart the master agent, you must also restart the subagent. When the master agent is started, it does not look for already running subagents. Any running subagents must also be restarted to be register with the master agent.

### Checking the log file

Warnings and messages are written to the log file of either the master agent or the OSA-Express subagent. It is good practice to check these files at regular intervals.



## Example

This example assumes that the default subagent log file is used. The lines in the log file show the messages after a successful OSA-Express subagent initialization.

```
# cat /var/log/osasnmppd.log
IBM OSA-E NET-SNMP 5.1.x subagent version 1.3.0
Jul 14 09:28:41 registered Toplevel OID .1.3.6.1.2.1.10.7.2.
Jul 14 09:28:41 registered Toplevel OID .1.3.6.1.4.1.2.6.188.1.1.
Jul 14 09:28:41 registered Toplevel OID .1.3.6.1.4.1.2.6.188.1.3.
Jul 14 09:28:41 registered Toplevel OID .1.3.6.1.4.1.2.6.188.1.4.
Jul 14 09:28:41 registered Toplevel OID .1.3.6.1.4.1.2.6.188.1.8.
OSA-E microcode level is 611 for interface encf500
Initialization of OSA-E subagent successful...
```

## Issuing queries

You can issue queries against your SNMP setup.

### About this task

Examples of what SNMP queries might look like are given here. For more comprehensive information about the master agent commands, see the **snmpcmd** man page.

The commands can use either numeric or textual OIDs. While the numeric OIDs might provide better performance, the textual OIDs are more meaningful and give a hint about which information is requested.

### Examples

The query examples assume an interface, encf500, for which the CHPID is 6B. You can use the **lsqeth** command to find the mapping of interface names to CHPIDs.

- To list the ifIndex and interface description relation (on one line):

```
# snmpget -v 2c -c osacom localhost interfaces.ifTable.ifEntry.ifDescr.6
interfaces.ifTable.ifEntry.ifDescr.6 = encf500
```

Using this GET request you can see that encf500 has the ifIndex 6 assigned.

- To find the CHPID numbers for your OSA devices:

```
# snmpwalk -OS -v 2c -c osacom localhost .1.3.6.1.4.1.2.6.188.1.1.1.1
IBM-OSA-MIB::ibmOSAExpChannelNumber.6 = Hex-STRING: 00 6B
IBM-OSA-MIB::ibmOSAExpChannelNumber.7 = Hex-STRING: 00 7A
IBM-OSA-MIB::ibmOSAExpChannelNumber.8 = Hex-STRING: 00 7D
```

The first line of the command output, with index number 6, corresponds to CHPID 0x6B of the encf500 example. The example assumes that the community osacom is authorized as described in [“Configuring access control” on page 273](#).

If you provided defaults for the SNMP version and the community (see step [“12” on page 276](#)), you can omit the -v and -c options:

```
# snmpwalk -OS localhost .1.3.6.1.4.1.2.6.188.1.1.1.1
IBM-OSA-MIB::ibmOSAExpChannelNumber.6 = Hex-STRING: 00 6B
IBM-OSA-MIB::ibmOSAExpChannelNumber.7 = Hex-STRING: 00 7A
IBM-OSA-MIB::ibmOSAExpChannelNumber.8 = Hex-STRING: 00 7D
```

You can obtain the same output by substituting the numeric OID .1.3.6.1.4.1.2.6.188.1.1.1.1 with its textual equivalent:

```
.iso.org.dod.internet.private.enterprises.ibm.ibmProd.ibmOSAMib.ibmOSAMibObjects.ibmOSAExpChannelTable.ibmOSAExpChannelEntry.ibmOSAExpChannelNumber
```

You can shorten this unwieldy OID to the last element, **ibmOsaExpChannelNumber**:

```
# snmpwalk -OS localhost ibmOsaExpChannelNumber
IBM-OSA-MIB::ibmOSAExpChannelNumber.6 = Hex-STRING: 00 6B
IBM-OSA-MIB::ibmOSAExpChannelNumber.7 = Hex-STRING: 00 7A
IBM-OSA-MIB::ibmOSAExpChannelNumber.8 = Hex-STRING: 00 7D
```

- To find the port type for the interface with index number 6:

```
# snmpwalk -OS localhost .1.3.6.1.4.1.2.6.188.1.4.1.2.6
IBM-OSA-MIB::ibmOsaExpEthPortType.6 = INTEGER: fastEthernet(81)
```

fastEthernet(81) corresponds to card type OSD\_100.

Using the short form of the textual OID:

```
# snmpwalk -OS localhost ibmOsaExpEthPortType.6
IBM-OSA-MIB::ibmOsaExpEthPortType.6 = INTEGER: fastEthernet(81)
```

Specifying the index, 6 in the example, limits the output to the interface of interest.

## Stopping osasnmppd

The subagent can be stopped by sending either a SIGINT or SIGTERM signal to the thread.

### About this task

Avoid stopping the subagent with **kill -9** or with **kill -SIGKILL**. These commands do not allow the subagent to unregister the OSA-Express MIB objects from the SNMP master agent. This can cause problems when restarting the subagent.

If you saved the subagent PID to a file when you started it, you can consult this file for the PID. Otherwise, you can issue a **ps** command to find it out.

### Example

The osasnmppd subagent starts a daemon that is called osasnmppd. To stop osasnmppd, issue the **kill** command for either the daemon or its PID:

```
# ps -ef | grep snmp
USER      PID      1  0 11:57 pts/1    00:00:00 snmpd
root      729     659  0 13:22 pts/1    00:00:00 osasnmppd
# killall osasnmppd
```

# Chapter 17. LAN channel station device driver

**LPAR and z/VM:** The LCS device driver applies to Linux in LPAR mode and to Linux on z/VM.

The LAN channel station device driver (LCS device driver) supports Open Systems Adapters (OSA) features in non-QDIO mode.

Table 46 on page 279 shows the supported OSA-Express features.

Table 46. The LCS device driver supported OSA features			
Feature	z15	z14 and z14 ZR1	z13 and z13s
OSA-Express7S	1000Base-T Ethernet	Not supported	Not supported
OSA-Express6S	1000Base-T Ethernet	1000Base-T Ethernet	Not supported
OSA-Express5S	1000Base-T Ethernet	1000Base-T Ethernet	1000Base-T Ethernet
OSA-Express4S	1000Base-T Ethernet	1000Base-T Ethernet	1000Base-T Ethernet

The LCS device driver supports automatic detection of Ethernet connections. The LCS device driver can be used for Internet Protocol, version 4 (IPv4) only.

## What you should know about LCS

Interface names are assigned to LCS group devices, which map to subchannels and their corresponding device numbers and device bus-IDs.

### LCS group devices

The LCS device driver requires two I/O subchannels for each LCS interface, a read subchannel and a write subchannel. The corresponding bus IDs must be configured for control unit type 3088.

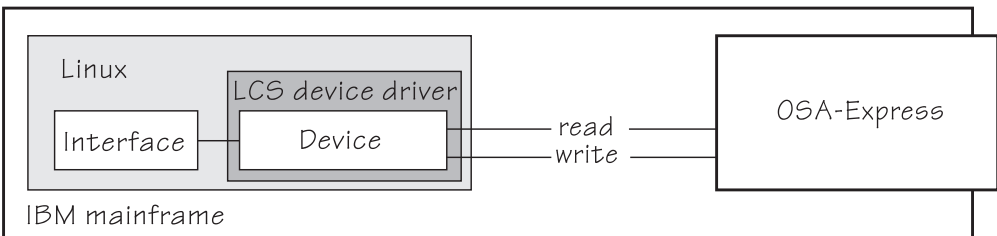


Figure 65. I/O subchannel interface

The device bus-IDs that correspond to the subchannel pair are grouped as one LCS group device. The following rules apply for the device bus-IDs:

**read**

must be even.

**write**

must be the device bus-ID of the read subchannel plus one.

## Setting up the LCS device driver

There are no module parameters for the LCS device driver.

You must load the lcs module before you can work with LCS devices. Load the lcs module with the **modprobe** command to ensure that any other required modules are loaded in the correct order:

```
# modprobe lcs
```

## Working with LCS devices

Working with LCS devices includes tasks such as creating an LCS group device, specifying a timeout, or activating an interface.

- [“Creating an LCS group device” on page 280](#)
- [“Removing an LCS group device” on page 281](#)
- [“Specifying a timeout for LCS LAN commands” on page 281](#)
- [“Setting an LCS group device online or offline” on page 282](#)
- [“Activating and deactivating an interface” on page 282](#)
- [“Recovering an LCS group device” on page 283](#)

Most of these tasks involve writing to and reading from device attributes in sysfs. Using attributes is useful on a running system where you want to make dynamic changes. If you want to make persistent changes across IPLs, use the interface configuration files. Network configuration parameters are defined in `/etc/sysconfig/network-scripts/ifcfg-<if_name>`. See the Red Hat documentation website for an example of how to define an LCS device persistently. The website also contains a general discussion of network configuration files, see [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux).

## Creating an LCS group device

Use the group attribute to create an LCS group device.

### Before you begin

You must know the device bus-IDs that correspond to the read and write subchannel of your OSA card. The subchannel is defined in the IOCDs of your mainframe.

### Procedure

To define an LCS group device, write the device bus-IDs of the subchannel pair to `/sys/bus/ccwgroup/drivers/lcs/group`.

Issue a command of this form:

```
# echo <read_device_bus_id>,<write_device_bus_id> > /sys/bus/ccwgroup/drivers/lcs/group
```

### Results

The lcs device driver uses the device bus-ID of the read subchannel to create a directory for a group device:

```
/sys/bus/ccwgroup/drivers/lcs/<read_device_bus_id>
```

This directory contains a number of attributes that determine the settings of the LCS group device. The following sections describe how to use these attributes to configure an LCS group device.

### Example

Assuming that 0.0.d000 is the device bus-ID that corresponds to a read subchannel:

```
# echo 0.0.d000,0.0.d001 > /sys/bus/ccwgroup/drivers/lcs/group
```

This command results in the creation of the following directories in sysfs:

- /sys/bus/ccwgroup/drivers/lcs/0.0.d000
- /sys/bus/ccwgroup/devices/0.0.d000
- /sys/devices/lcs/0.0.d000

**Note:** When the device subchannels are added, device types 3088/08 and 3088/1f can be assigned to either the CTCM or the LCS device driver.

To check which devices are assigned to which device driver, issue the following commands:

```
# ls -l /sys/bus/ccw/drivers/ctcm
# ls -l /sys/bus/ccw/drivers/lcs
```

To change a faulty assignment, use the unbind and bind attributes of the device. For example, to change the assignment for device bus-IDs 0.0.2000 and 0.0.2001 issue the following commands:

```
# echo 0.0.2000 > /sys/bus/ccw/drivers/ctcm/unbind
# echo 0.0.2000 > /sys/bus/ccw/drivers/lcs/bind
# echo 0.0.2001 > /sys/bus/ccw/drivers/ctcm/unbind
# echo 0.0.2001 > /sys/bus/ccw/drivers/lcs/bind
```

## Removing an LCS group device

Use the ungroup attribute to remove an LCS group device.

### Before you begin

The device must be set offline before you can remove it.

### Procedure

To remove an LCS group device, write 1 to the ungroup attribute.

Issue a command of the form:

```
echo 1 > /sys/bus/ccwgroup/drivers/lcs/<device_bus_id>/ungroup
```

### Example

This command removes device 0.0.d000:

```
echo 1 > /sys/bus/ccwgroup/drivers/lcs/0.0.d000/ungroup
```

## Specifying a timeout for LCS LAN commands

Use the lancmd\_timeout attribute to set a timeout for an LCS LAN command.

### About this task

You can specify a timeout for the interval that the LCS device driver waits for a reply after issuing a LAN command to the LAN adapter. For older hardware, the replies can take a longer time. The default is 5 s.

### Procedure

To set a timeout, issue a command of this form:

```
# echo <timeout> > /sys/bus/ccwgroup/drivers/lcs/<device_bus_id>/lancmd_timeout
```

where <timeout> is the timeout interval in seconds in the range 1 - 60.

## Example

In this example, the timeout for a device 0.0.d000 is set to 10 s.

```
# echo 10 > /sys/bus/ccwgroup/drivers/lcs/0.0.d000/lancmd_timeout
```

## Setting an LCS group device online or offline

Use the online device group attribute to set an LCS device online or offline.

### About this task

Setting a device online associates it with an interface name. Setting the device offline preserves the interface name.

You must know the interface name to activate the network interface. To determine the assigned interface name, use the **chzdev --existing** command. For each online interface, the interface name is shown in the Name column.

Alternatively, for each online interface, there is a symbolic link of the form `/sys/class/net/<interface_name>/device` in sysfs. You can confirm that you found the correct interface name by reading the link.

### Procedure

To set an LCS group device online, set the online device group attribute to 1. To set an LCS group device offline, set the online device group attribute to 0.

Issue a command of this form:

```
# echo <flag> > /sys/bus/ccwgroup/drivers/lcs/<device_bus_id>/online
```

## Example

To set an LCS device with bus ID 0.0.d000 online issue:

```
# echo 1 > /sys/bus/ccwgroup/drivers/lcs/0.0.d000/online
# lsudev --existing
TYPE      ID                      ON   PERS  NAMES
lcs       0.0.d000:0.0.d001      yes  no    encd000
...
```

The interface name that was assigned to the LCS group device in the example is encd000. To confirm that this name is correct for the group device issue:

```
# readlink /sys/class/net/encd000/device
../../../../devices/lcs/0.0.d000
```

If an error occurs when you set the device online, ensure that the physical connection from the port to the network is in place. If the error persists, note the return code from the error message and contact IBM support.

To set the device offline issue:

```
# echo 0 > /sys/bus/ccwgroup/drivers/lcs/0.0.d000/online
```

## Activating and deactivating an interface

Use the **ip** command or equivalent to activate or deactivate an interface.

### About this task

Before you can activate an interface, you must set the group device online and find out the interface name that is assigned by the LCS device driver. See [“Setting an LCS group device online or offline”](#) on page 282.

You activate or deactivate network devices with **ip** or an equivalent command. For details of the **ip** command, see the **ip** man page.

### Examples

- This example activates an Ethernet interface:

```
# ip addr add 192.168.100.10/24 dev encf500
# ip link set dev encf500 up
```

- This example deactivates the Ethernet interface:

```
# ip link set dev encf500 down
```

- This example reactivates an interface that was already activated and subsequently deactivated:

```
# ip link set dev encf500 up
```

## Recovering an LCS group device

You can use the recover attribute of an LCS group device to recover it in case of failure. For example, issue **journalctl** to find error messages that inform you of a malfunctioning device.

### Procedure

Issue a command of the form:

```
# echo 1 > /sys/bus/ccwgroup/drivers/lcs/<device_bus_id>/recover
```

### Example

```
# echo 1 > /sys/bus/ccwgroup/drivers/lcs/0.0.d100/recover
```





---

## Chapter 18. CTCM device driver

**LPAR and z/VM:** The CTCM device driver applies to Linux in LPAR mode and to Linux on z/VM.

The CTCM device driver provides Channel-to-Channel (CTC) connections and CTC-based Multi-Path Channel (MPC) connections. The CTCM device driver is required by Communications Server for Linux.

**Deprecated connection type:** CTC connections are deprecated. Do not use for new network setups.

CTC connections are high-speed point-to-point connections between two mainframe operating system instances.

Communications Server for Linux uses MPC connections to connect Red Hat Enterprise Linux 8.1 to VTAM® on traditional mainframe operating systems.

---

### Features

The CTCM device driver provides different kinds of CTC connections between mainframes, z/VM guests, and LPARs.

The CTCM device driver provides:

- MPC connections to VTAM on traditional mainframe operating systems.
- ESCON or FICON CTC connections (standard CTC and basic CTC) between mainframes in basic mode, LPARs or z/VM guests.

For more information about FICON, see Redpaper *FICON CTC Implementation*, REDP-0158.

- Virtual CTCA connections between guests of the same z/VM system.
- CTC connections to other Linux instances or other mainframe operating systems.

---

### What you should know about CTCM

The CTCM device driver assigns network interface names to CTCM group devices.

#### CTCM group devices

The CTCM device driver requires two I/O subchannels for each interface, a read subchannel and a write subchannel.

The CTCM device driver requires two I/O subchannels for each interface, a read subchannel and a write subchannel (see Figure 66 on page 286). The device bus-IDs that correspond to the two subchannels must be configured for control unit type 3088.

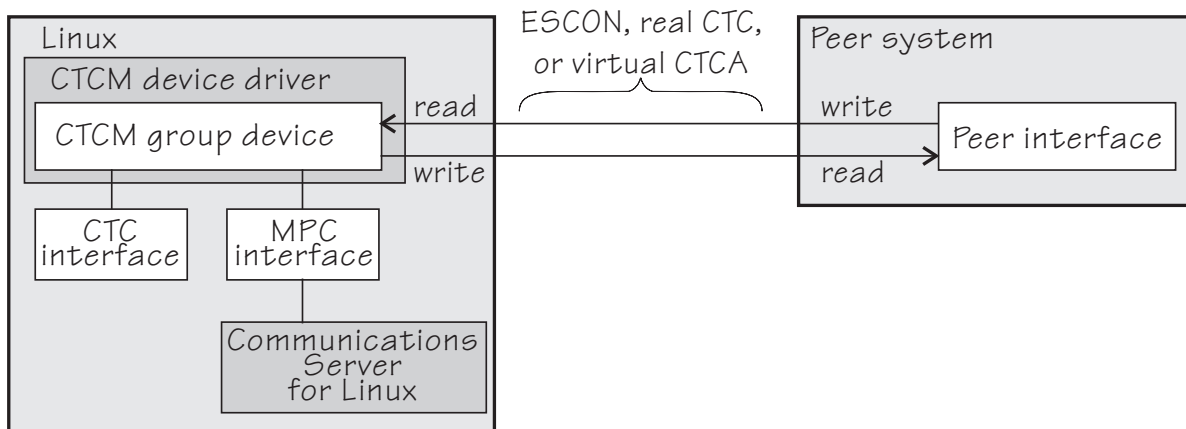


Figure 66. I/O subchannel interface

The device bus-IDs that correspond to the subchannel pair are grouped as one CTCM group device. There are no constraints on the device bus-IDs of read subchannel and write subchannel. In particular, it is possible to group non-consecutive device bus-IDs.

On the communication-peer operating system instance, read and write subchannels are reversed. That is, the write subchannel of the local interface is connected to the read subchannel of the remote interface and vice versa.

Depending on the protocol, the interfaces can be CTC interfaces or MPC interfaces. MPC interfaces are used by Communications Server for Linux and connect to peer interfaces that run under VTAM. For more information about Communications Server for Linux and on using MPC connections, go to [www.ibm.com/software/network/commserver/linux](http://www.ibm.com/software/network/commserver/linux).

## Interface names assigned by the CTCM device driver

When a CTCM group device is set online, the CTCM device driver automatically assigns an interface name to it. The interface name depends on the protocol.

If the protocol is set to 4, you get an MPC connection and the interface names are of the form `mpc<n>`.

If the protocol is set to 0, 1, or 3, you get a CTC connection and the interface name is of the form `ctc<n>`.

`<n>` is an integer that identifies the device. When the first device is set online it is assigned 0, the second is assigned 1, the third 2, and so on. The devices are counted separately for CTC and MPC.

## Network connections

If your CTC connection is to a router or z/VM TCP/IP service machine, you can connect CTC interfaces to an external network.

Figure 67 on page 286 shows a CTC interface that is connected to a network.

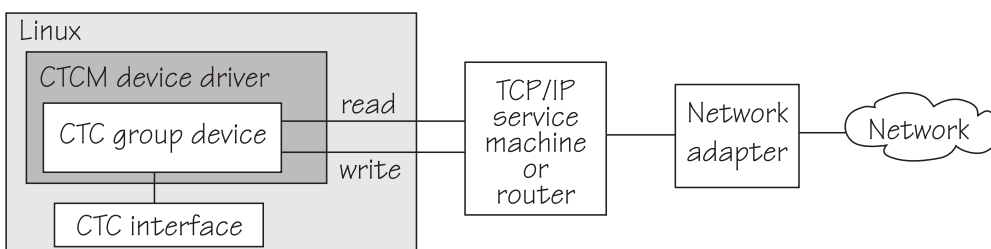


Figure 67. Network connection

## Setting up the CTCM device driver

There are no module parameters for the CTCM device driver. Load the `ctcm` module before you use it.

Load the ctc module with the **modprobe** command to ensure that any other required modules are loaded:

```
# modprobe ctc
```

## Working with CTCM devices

When you work with CTCM devices you might create a CTCM group device, set the protocol, and activate an interface.

The following sections describe typical tasks that you need when you work with CTCM devices.

- [“Creating a CTCM group device” on page 287](#)
- [“Removing a CTCM group device” on page 288](#)
- [“Displaying the channel type” on page 288](#)
- [“Setting the protocol” on page 289](#)
- [“Setting a device online or offline” on page 289](#)
- [“Setting the maximum buffer size” on page 290 \(CTC only\)](#)
- [“Activating and deactivating a CTC interface” on page 291 \(CTC only\)](#)
- [“Recovering a lost CTC connection” on page 292 \(CTC only\)](#)

See the Communications Server for Linux documentation for information about configuring and activating MPC interfaces.

### Creating a CTCM group device

Use the group attribute to create a CTCM group device.

#### Before you begin

You must know the device bus-IDs that correspond to the local read and write subchannel of your CTCM connection as defined in your IOCDS.

#### Procedure

To define a CTCM group device, write the device bus-IDs of the subchannel pair to `/sys/bus/ccwgroup/drivers/ctcm/group`.

Issue a command of this form:

```
# echo <read_device_bus_id>,<write_device_bus_id> > /sys/bus/ccwgroup/drivers/ctcm/group
```

#### Results

The CTCM device driver uses the device bus-ID of the read subchannel to create a directory for a group device:

```
/sys/bus/ccwgroup/drivers/ctcm/<read_device_bus_id>
```

This directory contains a number of attributes that determine the settings of the CTCM group device.

#### Example

Assuming that device bus-ID 0.0.2000 corresponds to a read subchannel:

```
# echo 0.0.2000,0.0.2001 > /sys/bus/ccwgroup/drivers/ctcm/group
```

This command results in the creation of the following directories in sysfs:

- /sys/bus/ccwgroup/drivers/ctcm/0.0.2000
- /sys/bus/ccwgroup/devices/0.0.2000
- /sys/devices/ctcm/0.0.2000

**Note:** When the device subchannels are added, device types 3088/08 and 3088/1f can be assigned to either the CTCM or the LCS device driver.

To check which devices are assigned to which device driver, issue the following commands:

```
# ls -l /sys/bus/ccw/drivers/ctcm
# ls -l /sys/bus/ccw/drivers/lcs
```

To change a faulty assignment, use the unbind and bind attributes of the device. For example, to change the assignment for device bus-IDs 0.0.2000 and 0.0.2001 issue the following commands:

```
# echo 0.0.2000 > /sys/bus/ccw/drivers/lcs/unbind
# echo 0.0.2000 > /sys/bus/ccw/drivers/ctcm/bind
# echo 0.0.2001 > /sys/bus/ccw/drivers/lcs/unbind
# echo 0.0.2001 > /sys/bus/ccw/drivers/ctcm/bind
```

## Removing a CTCM group device

Use the ungroup attribute to remove a CTCM group device.

### Before you begin

The device must be set offline before you can remove it.

### Procedure

To remove a CTCM group device, write 1 to the ungroup attribute.

Issue a command of the form:

```
# echo 1 > /sys/bus/ccwgroup/drivers/ctcm/<device_bus_id>/ungroup
```

### Example

This command removes device 0.0.2000:

```
echo 1 > /sys/bus/ccwgroup/drivers/ctcm/0.0.2000/ungroup
```

## Displaying the channel type

Use the type attribute to display the channel type of a CTCM group device.

### Procedure

Issue a command of this form to display the channel type of a CTCM group device:

```
# cat /sys/bus/ccwgroup/drivers/ctcm/<device_bus_id>/type
```

where <device\_bus\_id> is the device bus-ID that corresponds to the CTCM read channel. Possible values are: CTC/A, ESCON, and FICON.

### Example

In this example, the channel type is displayed for a CTCM group device with device bus-ID 0.0.f000:

```
# cat /sys/bus/ccwgroup/drivers/ctcm/0.0.f000/type
ESCON
```

## Setting the protocol

Use the `protocol` attribute to set the protocol.

### Before you begin

The device must be offline while you set the protocol.

### About this task

The type of interface depends on the protocol. Protocol 4 results in MPC interfaces with interface names `mpc<n>`. Protocols 0, 1, or 3 result in CTC interfaces with interface names of the form `ctc<n>`.

To choose a protocol, set the `protocol` attribute to one of the following values:

**0**

This protocol provides compatibility with peers other than z/OS, for example, a z/VM TCP service machine. This value is the default.

**1**

This protocol provides enhanced package checking for Linux peers.

**3**

This protocol provides for compatibility with z/OS peers.

**4**

This protocol provides for MPC connections to VTAM on traditional mainframe operating systems.

### Procedure

Issue a command of this form:

```
# echo <value> > /sys/bus/ccwgroup/drivers/ctcm/<device_bus_id>/protocol
```

### Example

In this example, the protocol is set for a CTCM group device 0.0.2000:

```
# echo 4 > /sys/bus/ccwgroup/drivers/ctcm/0.0.2000/protocol
```

## Setting a device online or offline

Use the `online device group` attribute to set a CTCM device online or offline.

### About this task

Setting a group device online associates it with an interface name. Setting the group device offline and back online with the same protocol preserves the association with the interface name. If you change the protocol before you set the group device back online, the interface name can change as described in [“Interface names assigned by the CTCM device driver” on page 286](#).

You must know the interface name to access the CTCM group device. To determine the assigned interface name, use the `znetconf -c` command. For each online interface, the interface name is shown in the `Name` column. Alternatively, to determine the assigned interface name issue a command of the form:

```
# ls /sys/devices/ctcm/<device_bus_id>/net/
```

For each online interface, there is a symbolic link of the form `/sys/class/net/<interface_name>/device` in `sysfs`. You can confirm that you found the correct interface name by reading the link.

### Procedure

To set a CTCM group device online, set the `online device group` attribute to 1. To set a CTCM group device offline, set the `online device group` attribute to 0.

Issue a command of this form:

```
# echo <flag> > /sys/bus/ccwgroup/drivers/ctcm/<device_bus_id>/online
```

### Example

To set a CTCM device with bus ID 0.0.2000 online issue:

```
# echo 1 > /sys/bus/ccwgroup/drivers/ctcm/0.0.2000/online
```

To determine the interface name issue:

```
# znetconf -c
Device IDs          Type      Card Type      CHPID  Drv.  Name      State
-----
0.0.2000,0.0.2001  3088/08 CTC/A          ctcml slc2000  online
```

or

```
# ls /sys/devices/ctcm/0.0.2000/net/
slc2000
```

To set group device 0.0.2000 offline issue:

```
# echo 0 > /sys/bus/ccwgroup/drivers/ctcm/0.0.2000/online
```

## Setting the maximum buffer size

Use the buffer device group attribute to set a maximum buffer size for a CTCM group device.

### Before you begin

- Set the maximum buffer size for CTC interfaces only. MPC interfaces automatically use the highest possible maximum buffer size.
- The device must be online when you set the buffer size.

### About this task

You can set the maximum buffer size for a CTC interface. The permissible range of values depends on the MTU settings. It must be in the range *<minimum MTU + header size>* to *<maximum MTU + header size>*. The header space is typically 8 byte. The default for the maximum buffer size is 32768 byte (32 KB).

Changing the buffer size is accompanied by an MTU size change to the value *<buffer size - header size>*.

### Procedure

To set the maximum buffer size, issue a command of this form:

```
# echo <value> > /sys/bus/ccwgroup/drivers/ctcm/<device_bus_id>/buffer
```

where *<value>* is the number of bytes you want to set. If you specify a value outside the valid range, the command is ignored.

### Example

In this example, the maximum buffer size of a CTCM group device 0.0.f000 is set to 16384 byte.

```
# echo 16384 > /sys/bus/ccwgroup/drivers/ctcm/0.0.f000/buffer
```

## Activating and deactivating a CTC interface

Use **ip** or an equivalent command to activate or deactivate an interface.

### Before you begin

- Activate and deactivate a CTC interfaces only. For information about how to activate MPC interfaces, see the Communications Server for Linux documentation.
- You must know the interface name. See [“Setting a device online or offline”](#) on page 289.

### About this task

#### Syntax for setting an IP address for a CTC interface with the ip command

```
➤ ip address — add <ip_address> — dev <interface> — peer <peer_ip_address> ➤
```

#### Syntax for activating a CTC interface with the ip command

```
➤ ip link set — dev <interface> — up — mtu 32760 — mtu <max_transfer_unit> ➤
```

Where:

#### <interface>

is the interface name that was assigned when the CTCM group device was set online.

#### <ip\_address>

is the IP address that you want to assign to the interface.

#### <peer\_ip\_address>

is the IP address of the remote side.

#### <max\_transfer\_unit>

is the size of the largest IP packet that might be transmitted. Be sure to use the same MTU size on both sides of the connection. The MTU must be in the range of 576 byte to 65,536 byte (64 KB).

#### Syntax for deactivating a CTC interface with the ip command

```
➤ ip link set — dev <interface> — down ➤
```

Where:

#### <interface>

is the interface name that was assigned when the CTCM group device was set online.

### Procedure

- Use **ip** or an equivalent command to activate the interface.
- To deactivate an interface, issue a command of this form:

```
# ip link set dev <interface> down
```

### Examples

- This example activates a CTC interface slc2000 with an IP address 10.0.51.3 for a peer with address 10.0.50.1 and an MTU of 32760.

```
# ip addr add 10.0.51.3 dev slc2000 peer 10.0.50.1
# ip link set dev slc2000 up mtu 32760
```

- This example deactivates slc2000:

```
# ip link set dev slc2000 down
```

## Recovering a lost CTC connection

If one side of a CTC connection crashes, you cannot simply reconnect after a reboot. You must also deactivate the interface of the peer of the crashed side.

### Before you begin

These instructions apply to CTC interfaces only.

### Procedure

Proceed as follows to recover a lost CTC connection:

1. Reboot the crashed side.
2. Deactivate the interface on the peer. See [“Activating and deactivating a CTC interface” on page 291](#).
3. Activate the interface on the crashed side and on the peer.

For details, see [“Activating and deactivating a CTC interface” on page 291](#).

If the connection is between a Linux instance and a non-Linux instance, activate the interface on the Linux instance first. Otherwise, you can activate the interfaces in any order.

### Results

If the CTC connection is uncoupled, you must couple it again and reconfigure the interface of both peers with the **ip** command. See [“Activating and deactivating a CTC interface” on page 291](#).

## CTCM scenarios

---

Typical use cases of CTC connections include connecting to a peer in a different LPAR and connecting Linux instances running as z/VM guests to each other.

This section provides some typical scenarios for CTC connections:

- [“Connecting to a peer in a different LPAR” on page 292](#)
- [“Connecting Linux on z/VM to another guest of the same z/VM system ” on page 294](#)

## Connecting to a peer in a different LPAR

A Linux instance and a peer run in LPAR mode on the same or on different mainframes and are to be connected with a CTC FICON or CTC ESCON network interface.

### Assumptions:

- Locally, the read and write channels have been configured for type 3088 and use device bus-IDs 0.0.f008 and 0.0.f009.
- IP address 10.0.50.4 is to be used locally and 10.0.50.5 for the peer.

[Figure 68 on page 293](#) illustrates a CTC setup with a peer in a different LPAR.



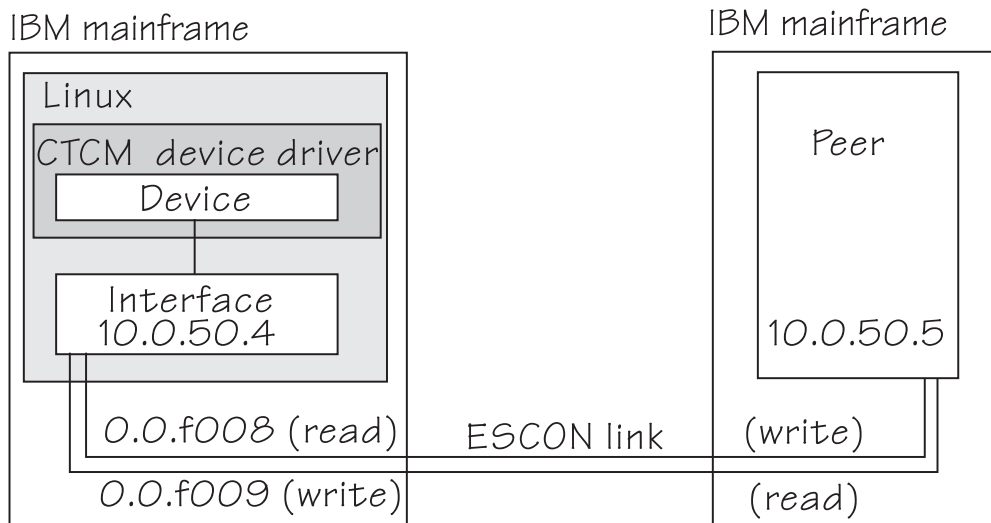


Figure 68. CTC scenario with peer in a different LPAR

## Procedure

1. Create a CTCM group device.

Issue:

```
# echo 0.0.f008,0.0.f009 > /sys/bus/ccwgroup/drivers/ctcm/group
```

2. Confirm that the device uses CTC FICON or CTC ESCON:

```
# cat /sys/bus/ccwgroup/drivers/ctcm/0.0.f008/type
ESCON
```

In this example, ESCON is used. You would proceed the same for FICON.

3. Select a protocol.

The choice depends on the peer.

If the peer is ...	Choose ...
Linux	1
z/OS or OS/390	3
Any other operating system	0

Assuming that the peer is Linux:

```
# echo 1 > /sys/bus/ccwgroup/drivers/ctcm/0.0.f008/protocol
```

4. Set the CTCM group device online and find out the assigned interface name:

```
# echo 1 > /sys/bus/ccwgroup/drivers/ctcm/0.0.f008/online
# ls /sys/devices/ctcm/0.0.f008/net/
slcf008
```

In the example, the interface name is slcf008.

5. Assure that the peer interface is configured.
6. Activate the interface locally and on the peer.

If you are connecting two Linux instances, either instance can be activated first. If the peer is not Linux, activate the interface on Linux first. To activate the local interface:

```
# ip addr add 10.0.50.4 dev slcf008 peer 10.0.50.5
# ip link set dev slcf008 up
```

## Connecting Linux on z/VM to another guest of the same z/VM system

A virtual CTCA connection is to be set up between an instance of Linux on z/VM and another guest of the same z/VM system.

### Assumptions:

- The guest ID of the peer is "guestp".
- A separate subnet has been obtained from the TCP/IP network administrator. The Linux instance will use IP address 10.0.100.100 and the peer will use IP address 10.0.100.101.

Figure 69 on page 294 illustrates a CTC setup with a peer in the same z/VM.

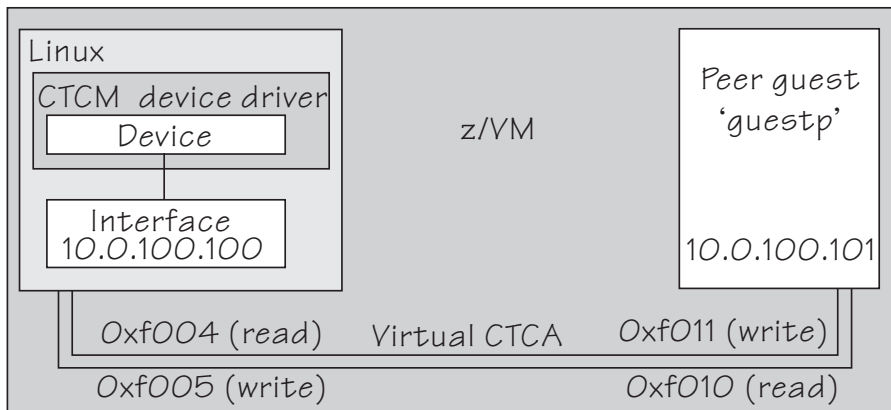


Figure 69. CTC scenario with peer in the same z/VM

### Procedure

1. Define two virtual channels to your user ID.

The channels can be defined in the z/VM user directory using directory control SPECIAL statements, for example:

```
special f004 ctca
special f005 ctca
```

Alternatively, you can use the CP commands:

```
define ctca as f004
define ctca as f005
```

2. Assure that the peer interface is configured.
3. Connect the virtual channels.

Assuming that the read channel on the peer corresponds to device number 0xf010 and the write channel to 0xf011 issue:

```
couple f004 to guestp f011
couple f005 to guestp f010
```

Be sure that you couple the read channel to the peers write channel and vice versa.

4. From your booted Linux instance, create a CTCM group device. Issue:

```
# echo 0.0.f004,0.0.f005 > /sys/bus/ccwgroup/drivers/ctcm/group
```

5. Confirm that the group device is a virtual CTCA device:

```
# cat /sys/bus/ccwgroup/drivers/ctcm/0.0.f004/type
CTC/A
```

6. Select a protocol.

The choice depends on the peer.

If the peer is ...	Choose ...
Linux	1
z/OS or OS/390®	3
Any other operating system	0

Assuming that the peer is Linux:

```
# echo 1 > /sys/bus/ccwgroup/drivers/ctcm/0.0.f004/protocol
```

7. Set the CTCM group device online and find out the assigned interface name:

```
# echo 1 > /sys/bus/ccwgroup/drivers/ctcm/0.0.f004/online
# ls /sys/devices/ctcm/0.0.f004/net/
slcf004
```

In the example, the interface name is slcf004.

8. Activate the interface locally and on the peer.

If you are connecting two Linux instances, either can be activated first. If the peer is not Linux, activate the local interface first. To activate the local interface:

```
# ip addr add 10.0.100.100 dev slcf004 peer 10.0.100.101
# ip link set dev slcf004 up
```

Be sure that the MTU on both sides of the connection is the same. If necessary change the default MTU (see [“Activating and deactivating a CTC interface” on page 291](#)).

9. Ensure that the buffer size on both sides of the connection is the same. For the Linux side see [“Setting the maximum buffer size” on page 290](#). If the peer is not Linux, see the operating system documentation of the peer.



---

## Chapter 19. AF\_IUCV address family support

**LPAR and z/VM:** The AF\_IUCV address family support applies to Linux in LPAR mode and to Linux on z/VM.

The AF\_IUCV address family provides an addressing mode for communications between applications that run on Z.

This addressing mode can be used for connections through real HiperSockets and through the z/VM Inter-User Communication Vehicle (IUCV).

Support for AF\_IUCV based connections through real HiperSockets requires Completion Queue Support.

HiperSockets devices facilitate connections between applications across LPARs within an IBM Z. In particular, an application that runs on an instance of Linux on Z can communicate with:

- Itself
- Other applications that run on the same Linux instance
- An application on an instance of Linux on Z in another LPAR

IUCV facilitates connections between applications across z/VM guest virtual machines within a z/VM system. In particular, an application that runs on Linux on z/VM can communicate with:

- Itself
- Other applications that run on the same Linux instance
- Applications running on other instances of Linux on z/VM, within the same z/VM system
- Applications running on a z/VM guest other than Linux, within the same z/VM system
- The z/VM control program (CP)

The AF\_IUCV address family supports stream-oriented sockets (SOCK\_STREAM) and connection-oriented datagram sockets (SOCK\_SEQPACKET). Stream-oriented sockets can fragment data over several packets. Sockets of type SOCK\_SEQPACKET always map a particular socket write or read operation to a single packet.

---

### Features

The AF\_IUCV address family provides socket connections for HiperSockets and IUCV.

For all instances of Linux on Z, the AF\_IUCV address family provides the following features:

- Multiple outgoing socket connections for real HiperSockets
- Multiple incoming socket connections for real HiperSockets

For instances of Linux on z/VM, the AF\_IUCV address family also provides the following features:

- Multiple outgoing socket connections for IUCV
- Multiple incoming socket connections for IUCV
- Socket communication with applications that use the CMS AF\_IUCV support

---

### Setting up the AF\_IUCV address family support

You must authorize your z/VM guest virtual machine and load those components that were compiled as separate modules.

There are no module parameters for the AF\_IUCV address family support.

## Setting up HiperSockets devices for AF\_IUCV addressing

In AF\_IUCV addressing mode, HiperSockets devices in layer 3 mode are identified through their `hsuid` `sysfs` attribute.

You set up a HiperSockets device for AF\_IUCV by assigning a value to this attribute (see [“Configuring a HiperSockets device for AF\\_IUCV addressing”](#) on page 250).

## Setting up your z/VM guest virtual machine for IUCV

You must specify suitable IUCV statements for your z/VM guest virtual machine.

For details and for general IUCV setup information for z/VM guest virtual machines, see *z/VM: CP Programming Services*, SC24-6272 and *z/VM: CP Planning and Administration*, SC24-6271.

### Granting IUCV authorizations

Use the IUCV statement to grant the necessary authorizations.

#### IUCV ALLOW

allows any other z/VM virtual machine to establish a communication path with this z/VM virtual machine. With this statement, no further authorization is required in the z/VM virtual machine that initiates the communication.

#### IUCV ANY

allows this z/VM guest virtual machine to establish a communication path with any other z/VM guest virtual machine.

#### IUCV <user ID>

allows this z/VM guest virtual machine to establish a communication path to the z/VM guest virtual machine with the z/VM user ID <user ID>.

You can specify multiple IUCV statements. To any of these IUCV statements you can append the `MSGLIMIT <limit>` parameter. <limit> specifies the maximum number of outstanding messages that are allowed for each connection that is authorized by the statement. If no value is specified for `MSGLIMIT`, AF\_IUCV requests 65 535, which is the maximum that is supported by IUCV.

### Setting a connection limit

Use the `OPTION` statement to limit the number of concurrent connections.

#### OPTION MAXCONN <maxno>

<maxno> specifies the maximum number of IUCV connections that are allowed for this virtual machine. The default is 64. The maximum is 65 535.

### Example

These sample statements allow any z/VM guest virtual machine to connect to your z/VM guest virtual machine with a maximum of 10 000 outstanding messages for each incoming connection. Your z/VM guest virtual machine is permitted to connect to all other z/VM guest virtual machines. The total number of connections for your z/VM guest virtual machine cannot exceed 100.

```
IUCV ALLOW MSGLIMIT 10000
IUCV ANY
OPTION MAXCONN 100
```

## Loading the IUCV modules

Red Hat Enterprise Linux 8.1 loads the `af_iucv` module when an application requests a socket in the AF\_IUCV domain.

You can also use the `modprobe` command to load the AF\_IUCV address family support module `af_iucv`:

```
# modprobe af_iucv
```

## Addressing AF\_IUCV sockets in applications

---

To use AF\_IUCV sockets in applications, you must code a special AF\_IUCV sockaddr structure.

**Application programmers:** This information is intended for programmers who want to use connections that are based on AF\_IUCV addressing in their applications.

The primary difference between AF\_IUCV sockets and TCP/IP sockets is how communication partners are identified (for example, how they are named). To use the AF\_IUCV support in an application, code a sockaddr structure with AF\_IUCV as the socket address family and with AF\_IUCV address information.

For details, see the `af_iucv` man page.





---

## Chapter 20. SMC protocol support

The shared memory communication (SMC) protocol is an addition to TCP/IP and can be used transparently for shared memory communications.

The SMC protocol can be used for connections through:

- Shared Memory Communications through RDMA (SMC-R) with RoCE devices.
- Shared Memory Communications Direct (SMC-D) with ISM devices

If both variants are available for a connection, SMC-D is used.

### Prerequisites

SMC connections are initiated through TCP/IP. Hence, the communication partners must be able to reach each other through TCP/IP. Also, SMC is not routable and thus both communication partners must be in the same IP subnet.

An SMC connection requires both communication partners to support SMC. Unless both partners support SMC, the connection falls back to TCP/IP.

The SMC-R protocol requires a system with a RoCE Express adapter. See [Chapter 21, “RDMA over Converged Ethernet,”](#) on page 305.

The SMC-D protocol requires:

- A system with an Internal Shared Memory (ISM) device. For more information about ISM devices, see [Chapter 22, “Internal shared memory device driver,”](#) on page 307. ISM devices are supported for Linux in LPAR mode and for Linux on z/VM.
- The communication partners must be running on the same CPC.

To use SMC on Linux, a socket application must use the AF\_SMC address family. For AF\_SMC support in existing applications without code changes, the SMC-Tools package provides a preload library and the **smc\_run** command. For more information about these tools and how to convert socket applications from AF\_INET or AF\_INET6 to AF\_SMC, see [“Setting up the SMC support”](#) on page 301.

### Features

The AF\_SMC address family provides DMA communication through remote or internal shared memory. Benefits include:

- Transparency to existing TCP/IP applications with the preload library and **smc\_run**.
- Low latency
- Lower CPU usage compared to native TCP/IP

---

## Setting up the SMC support

SMC traffic requires a mapping of the OSA or HiperSockets network interfaces to the RoCE adapters or ISM devices.

Physical network (PNET) IDs provide this mapping. If a network interface and a RoCE or ISM device have the same PNET ID, they are connected to the same physical network and can be used together for SMC.

### LPAR and z/VM

For Linux in LPAR mode and for Linux on z/VM you can assign PNET IDs to OSA, HiperSockets, RoCE, and ISM devices through the IOCDs.

Figure 70 on page 302 illustrates how the IOCDs assigns the PNETID NET1 to an ISM device and a network interface for an Ethernet device. In Linux, the matching PNETID associates the ISM device with an Ethernet device.

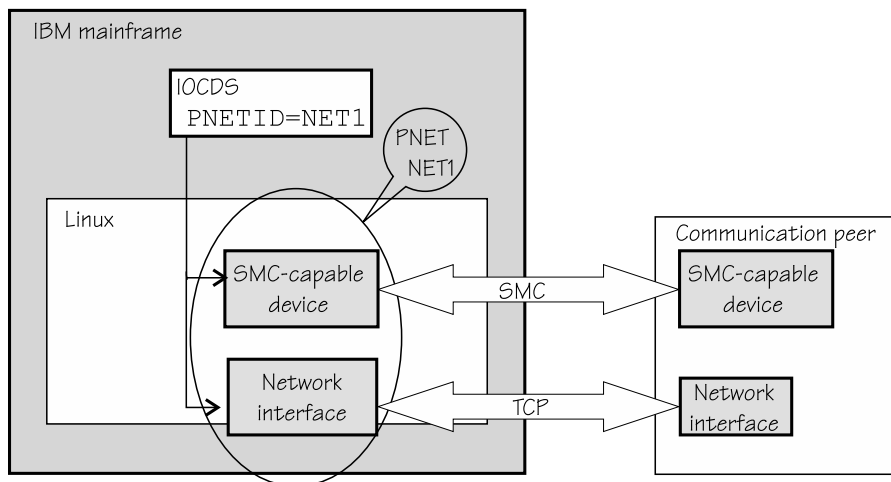


Figure 70. PNET ID and ISM device association

As a fallback, you can also use a software PNET table that maps network interfaces to RoCE adapters. For details, see the KVM information that follows.

## KVM

For SMC on Linux on KVM, you need a software PNET table that maps network interfaces to RoCE adapters or ISM devices. Use the **smc\_pnet** command to create a physical network (PNET) table with this mapping.

**Note:** z/OS does not support the RoCE Express adapter as an Ethernet device, and therefore uses OSA adapters for the initial handshake for SMC-R connections. Linux has no such constraint.

## Network device settings

On the network device that is associated with the IB (RoCE) device you want to use for SMC traffic, check the settings with the **ethtool** command and ensure that pause settings are turned on.

For example, if enP2s13 is the network device that is associated with the desired IB device port:

```
# ethtool -a enP2s13
Pause parameters for enP2s13:
Autonegotiate: off
RX: on
TX: on
```

## Sysctl settings

SMC requires contiguous memory. The minimum is 16 KB, and the maximum is 512 MB. The SMC implementation selects a value as follows:

- Some socket applications define the socket send- and receive buffer sizes with a **setsockopt** call, whose upper limits are defined in `net.core.wmem_max` and `net.core.rmem_max`.
- If **setsockopt** `SO_SNDBUF` is not used, the socket send buffer size is taken from the value of `net.ipv4.tcp_wmem`.
- If **setsockopt** `SO_RCVBUF` is not used, the socket receive buffer is taken from the value of `net.ipv4.tcp_rmem`, rounded to the next higher power of 2.

## Make an existing application use SMC

Use the preload library to make the unmodified socket application use SMC. Existing TCP/IP applications can benefit from the SMC protocol without recompiling, if they are invoked with the SMC preload library

ld\_pre\_smc.so. See the smc-tools package for the **smc\_run** script (see “smc\_run - Run a TCP socket program with the SMC protocol using a preloaded library” on page 636), which makes an existing TCP/IP socket program use SMC.

### Converting an application to use SMC

Alternatively, if you need to, you can convert an application. To convert an application from TCP/IP to SMC sockets, change the `socket()` function call from `AF_INET` to `AF_SMC` with protocol "0" and from `AF_INET6` to `AF_SMC` with protocol "1". For example, change:

```
sd = socket(AF_INET, SOCK_STREAM, 0);
```

to:

```
sd = socket(AF_SMC, SOCK_STREAM, 0);
```

and

```
sd = socket(AF_INET6, SOCK_STREAM, 0);
```

to:

```
sd = socket(AF_SMC, SOCK_STREAM, 1);
```

Use the `sockets.h` header file from the glibc-header package. For more programming information, see the `af_smc(7)` man page.

## Investigating PNET IDs

You can find the PNET IDs for PCIe devices and for CCW group devices in `sysfs`.

### PCIe devices

The PNET ID of PCI devices can be read, in EBCDIC format, as the value of the `util_string` attribute of the device in `sysfs`. You can use a command of the following form to read a PNET ID and convert it to ASCII:

```
# cat /sys/devices/pci<function_name>/<function_address>/util_string | iconv -f IBM-1047 -t ASCII
```

In the command, `/sys/devices/pci<function_name>/<function_address>` represents the PCI device in `sysfs`.

#### Example:

```
# cat /sys/devices/pci0000:00/0000:00:00.0/util_string | iconv -f IBM-1047 -t ASCII
NET1
```

The PNET ID of the example is `NET1`. If there is no command output or if the output is blank, no PNET ID is assigned to the device.

### CCW group devices

The PNET ID of CCW group devices can be read, in EBCDIC format, as the value of the `util_string` of the corresponding channel path ID in `sysfs`. To find the channel path ID of a CCW group device, read its `chpid` attribute in `sysfs`.

#### Example:

```
# cat /sys/bus/ccwgroup/devices/0.0.b1f0/chpid
4a
```

To find the PNET ID issue a command of this form:

```
# cat /sys/devices/css0/chp0.<chpid>/util_string | iconv -f IBM-1047 -t ASCII
```

where *<chpid>* is the channel path ID.

#### Example:

```
# cat /sys/devices/css0/chp0.4a/util_string | iconv -f IBM-1047 -t ASCII  
NET1
```

The PNET ID of the example is NET1. If there is no command output or if the output is blank, no PNET ID is assigned to the device.

#### Tips

- The output of the **iconv** command does not have a trailing line break, so displayed PNET IDs are followed by a command prompt. Pipe the output to a suitable **sed** command, for example `sed 's/$/\n/'`, to display the PNET IDs on a separate line .
- Use the following command to display a list of all CCW devices and their PNET IDs:

```
# for device in `ls -1 /sys/bus/ccwgroup/devices`; do  
chpid=`cat /sys/bus/ccwgroup/devices/$device/chpid | tr [A-F] [a-f]`;  
pnetid=""`cat /sys/devices/css0/chp0.$chpid/util_string | iconv -f IBM-1047 -t ASCII | sed 's/^/ /'`;  
echo " device: $device chpid: $chpid pnetID: $pnetid";  
done
```

## Chapter 21. RDMA over Converged Ethernet

Linux on Z supports RDMA over Converged Ethernet (RoCE) in the form of 10GbE RoCE Express adapters.

The adapters are two-port Ethernet adapters. On a mainframe, the mapping of ports to function keys depend on the adapter hardware:

- The two RoCE Express® adapter ports belong to the same function ID.
- The two RoCE Express2 adapter ports belong to different function IDs.

The RoCE support requires PCI Express support, see [Chapter 32, “PCI Express support,” on page 351](#).

### Using a RoCE device for SMC-R

SMC-R requires RoCE devices that are associated with network devices of TCP networks through a PNET ID, for example through statements in the IOCDs.

The following figure illustrates how a RoCE device and a Ethernet device are associated by a matching PNET ID. A communication peer has a similarly associated pair of an RoCE device and Ethernet device. With this setup, the TCP connection can switch over to an SMC-R connection over the SMC protocol. The communication peer can but need not be on the same CPC.

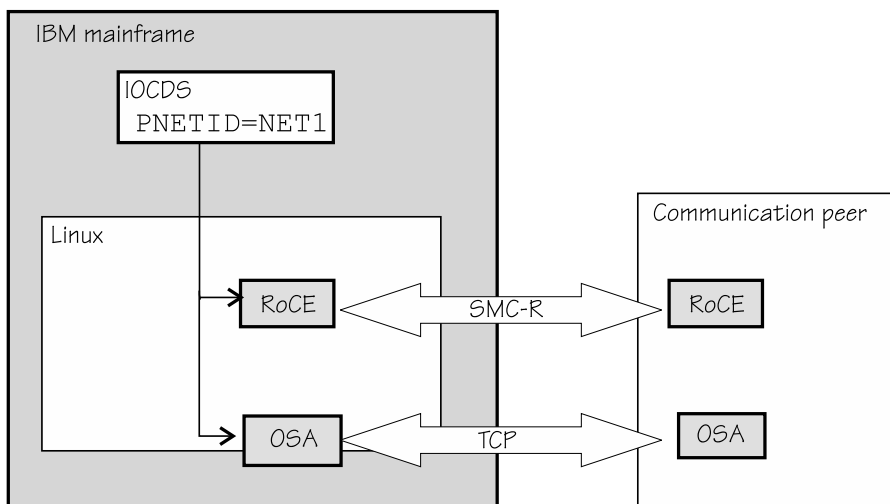


Figure 71. A matching PNET ID associates RoCE devices and Ethernet device

For more information about PNET IDs, see [“Setting up the SMC support” on page 301](#).

## Working with the RoCE support

Because the 10 GBE RoCE Express feature hardware physically consists of a Mellanox adapter, you must ensure that the following prerequisites are fulfilled before you can work with it.

### Procedure

1. Ensure that PCIe support is enabled and the PCI card is active on your system. See [“Setting up the PCIe support” on page 351](#) and [“Using PCIe hotplug on LPAR” on page 351](#).
2. Use the appropriate Mellanox device driver:
  - If you want to use TCP/IP, you need the `m1x4_core` and `m1x4_en` or `m1x5_core` module. If it is not already loaded, load it using for example, **modprobe**.

- If you also want to use RDMA with InfiniBand (that is, using reliable datagram sockets, RDS), you need the `mlx4_ib` or `mlx5_ib` module. If it is not compiled into kernel or already loaded, load it using for example, **`modprobe`**. To use RDS, you also need the `rds` module and the `rds_rdma` module, see `Documentation/networking/rds.txt` in the Linux source tree and the `rds` and `rds-rdma` man pages.

### 3. Activate the network interface.

You need to know the network interface name, which you can find under:

- `/sys/bus/pci/drivers/mlx4_core/<pci_slot>/net/<interface>` for RoCE Express.
- `/sys/bus/pci/drivers/mlx5_core/<pci_slot>/net/<interface>` for RoCE Express2.

Use the **`ip`** command or equivalent to activate the interface. See the `dev_port` sysfs attribute of the interface name to ensure that you are working with the correct port. Note that the numbering of network device ports start with 0, but the numbering of InfiniBand device ports start with 1. For example:

```
# cat /sys/class/infiniband/mlx4_0/ports/
1/ 2/
```

### What to do next

For further information about Mellanox, see:

- [http://www.mellanox.com/page/products\\_dyn?product\\_family=27&mtag=linux\\_driver](http://www.mellanox.com/page/products_dyn?product_family=27&mtag=linux_driver)
- [http://www.mellanox.com/page/products\\_dyn?product\\_family=79&mtag=roce](http://www.mellanox.com/page/products_dyn?product_family=79&mtag=roce)

## Enabling debugging

The `mlx4` device driver can be configured with a kernel configuration option for debugging.

### About this task

Debugging for the `mlx4` device driver is only available if the device driver is compiled with the kernel-configuration menu option `CONFIG_MLX4_DEBUG`.

### Procedure

1. Check that the device driver has the `CONFIG_MLX4_DEBUG` option enabled.
2. Load the `mlx4` modules with the sysfs parameter `debug_level=1` to write debug messages to the syslog.

Check the value of the `debug_level` parameter . If the parameter is set to 0, you can set it to 1 with the following command:

```
echo 1 > /sys/module/mlx4_core/parameters/debug_level
```

## Chapter 22. Internal shared memory device driver

**LPAR and z/VM:** The ISM device driver applies to Linux in LPAR mode and to Linux on z/VM.

The internal shared memory (ISM) device driver provides virtual PCI devices for shared memory communications direct (SMC-D).

ISM devices are defined in the IOCDs. Each ISM definition includes a physical network ID (PNET ID) to associate the ISM device with Ethernet devices.

The following figure illustrates how an ISM device and a HiperSockets device are associated by a matching PNET ID. A communication peer on the same CPC has a similarly associated pair of an ISM device and HiperSockets device. With this setup, the TCP connection can switch over to an SMC-D connection over the SMC protocol.

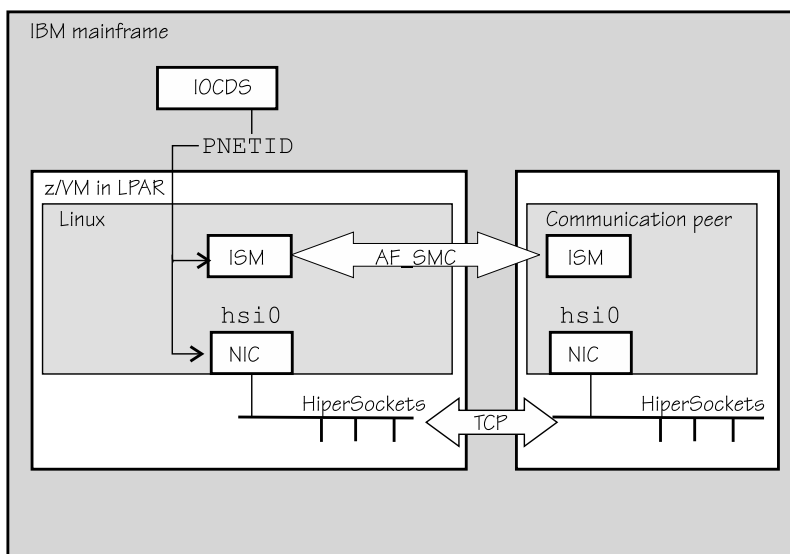


Figure 72. A matching PNET ID associates ISM devices and Ethernet devices

For information about how to find the PNET ID of PCI devices from your Linux instance, see [“Investigating PNET IDs”](#) on page 303.

For more information on SMC and SMC-D, see [Chapter 20, “SMC protocol support,”](#) on page 301.

### Loading the ISM device driver

If the ISM device driver is compiled as a separate module, you must load it before you can use ISM devices.

Load the `ism` module with the **modprobe** command. The `ism` module has no module parameters.

```
# modprobe ism
```

### Listing ISM devices

Because ISM devices are PCI devices, you can list them with the **lspci** command.

## Example

```
# lspci -v
0001:00:00.0 Non-VGA unclassified device: IBM Internal Shared Memory (ISM) virtual PCI device
Physical Slot: 000002e1
Flags: bus master, fast devsel, latency 0, IRQ 8
Memory at 8001000000000000 (64-bit, prefetchable) [size=256T]
Memory at 8002000000000000 (64-bit, prefetchable) [size=256]
Capabilities: [40] MSI: Enable+ Count=1/32 Maskable- 64bit+
Kernel driver in use: ism
Kernel modules: ism
```



---

## Part 5. System resources

These device drivers and features help you to manage the resources of your real or virtual hardware.

### **Newest version**

You can find the newest version of this book at  
[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at  
[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)



## Chapter 23. Managing CPUs

You can control the online status, check the capability, and, for LPAR mode, examine the topology of CPUs.

Use the **lscpu** and **chcpu** commands to manage CPUs. These commands are part of the `util-linux` package. For details, see the man pages. Alternatively, you can manage CPUs through the attributes of their entries in `sysfs`.

Some attributes that govern CPUs are available in `sysfs` under:

```
/sys/devices/system/cpu/cpu<N>
```

where `<N>` is the number of the logical CPU. Both the `sysfs` interface and the **lscpu** and **chcpu** commands manage CPUs through their logical representation in Linux.

You can obtain a mapping of logical CPU numbers to physical CPU addresses by issuing the **lscpu** command with the **-e** option.

### Example:

```
# lscpu -e
CPU NODE DRAWER BOOK SOCKET CORE L1d:L1i:L2d:L2i ONLINE CONFIGURED POLARIZATION ADDRESS
0 1 0 0 0 0 0:0:0:0 yes yes horizontal 0
1 1 0 0 0 0 1:1:1:1 yes yes horizontal 1
2 1 0 0 0 1 2:2:2:2 yes yes horizontal 2
3 1 0 0 0 1 3:3:3:3 yes yes horizontal 3
4 1 0 0 0 2 4:4:4:4 yes yes horizontal 4
5 1 0 0 0 2 5:5:5:5 yes yes horizontal 5
6 1 0 0 0 3 6:6:6:6 yes yes horizontal 6
7 1 0 0 0 3 7:7:7:7 yes yes horizontal 7
8 0 1 1 1 4 8:8:8:8 yes yes horizontal 8
...
```

The logical CPU numbers are shown in the CPU column and the physical address in the ADDRESS column of the output table.

Alternatively, you can find the physical address of a CPU in the `sysfs` `address` attribute of a logical CPU.

### Example:

```
# cat /sys/devices/system/cpu/cpu0/address
0
```

## Simultaneous multithreading

Linux in LPAR mode can use the simultaneous multithreading technology on mainframes.

IBM z13 introduced the simultaneous multithreading technology to the mainframe. In Linux terminology, simultaneous multithreading is also known as SMT or Hyper-Threading.

With multithreading enabled, a single *core* on the hardware is mapped to multiple logical CPUs on Linux. Thus, multiple threads can issue instructions to a core simultaneously during each cycle.

To find out whether multithreading is enabled for a particular Linux instance, compare the number of cores with the number of threads that are available in the LPAR. You can use the **hyptop** command to obtain this information.

Simultaneous multithreading is designed to enhance performance. Whether this goal is achieved strongly depends on the available resources, the workload, and the applications that run on a particular Linux instance. Depending on these conditions, it might be advantageous to not make full use of multithreading or to disable it completely. Use the **hyptop** command to obtain utilization data for threads while Linux runs with multithreading enabled.

You can use the `smt=` and `nosmt` kernel parameters to control multithreading. By default, Linux in LPAR mode uses multithreading if it is provided by the hardware.

## CPU capability change

---

When the CPUs of a mainframe heat or cool, the Linux kernel generates a uevent for all affected online CPUs.

You can read the CPU capability from the Capability and, if present, Secondary Capability fields in `/proc/sysinfo`.

The capability value is an unsigned integer as defined in the system information block (SYSIB) 1.2.2 (see *z/Architecture Principles of Operation*, SA22-7832). A smaller value indicates a proportionally greater CPU capacity. Beyond that, there is no formal description of the algorithm that is used to generate this value. The value is used as an indication of the capability of the CPU relative to the capability of other CPU models.

## Changing the configuration state of CPUs

---

A CPU on an LPAR can be in a configured, standby, or reserved state. You can change the state of standby CPUs to configured state and vice versa.

### Before you begin

- You can change the configuration state of CPUs for Linux in LPAR mode only. For Linux on z/VM, CPUs are always in a configured state.
- Daemon processes like **cpuplugd** can change the state of any CPU at any time. Such changes can interfere with manual changes.

### About this task

When Linux is booted, only CPUs that are in a configured state are brought online and used. The kernel does not detect CPUs in reserved state.

### Procedure

Issue a command of this form to change the configuration state of a CPU:

```
# chcpu -c|-g <N>
```

where

**<N>**

is the number of the logical CPU.

**-c**

changes the configuration state of a CPU from standby to configured.

**-g**

changes the configuration state of a CPU from configured to standby. Only offline CPUs can be changed to the standby state.

Alternatively, you can write 1 to the `configure` sysfs attribute of a CPU to set its configuration state to configured, or 0 to change its configuration state to standby.

### Examples:

- The following **chcpu** command changes the state of the logical CPU with number 2 from standby to configured:

```
# chcpu -c 2
```

The following command achieves the same results by writing 1 to the `configure` sysfs attribute of the CPU.

```
# echo 1 > /sys/devices/system/cpu/cpu2/configure
```

- The following **chcpu** command changes the state of the logical CPU with number 2 from `configured` to `standby`:

```
# chcpu -g 2
```

The following command achieves the same results by writing 0 to the `configure` sysfs attribute of the CPU.

```
# echo 0 > /sys/devices/system/cpu/cpu2/configure
```

## Setting CPUs online or offline

Use the **chcpu** command or the `online` sysfs attribute of a logical CPU to set a CPU online or offline.

### Before you begin

- Daemon processes like **cpuplugd** can change the state of any CPU at any time. Such changes can interfere with manual changes.

### Procedure

1. Optional: Rescan the CPUs to ensure that Linux has a current list of configured CPUs.

To initiate a rescan, issue the **chcpu** command with the **-r** option.

```
# chcpu -r
```

Alternatively, you can write 1 to `/sys/devices/system/cpu/rescan`.

You might need a rescan for Linux on z/VM after one or more CPUs have been added to the z/VM guest virtual machine by the z/VM hypervisor. Linux in LPAR mode automatically detects newly available CPUs.

Linux on KVM and Linux in LPAR mode automatically detect newly available CPUs.

2. Change the online state of a CPU by issuing a command of this form:

```
# chcpu -e|-d <N>
```

where

**<N>**

is the number of the logical CPU.

**-e**

sets an offline CPU online. Only CPUs that are in the configuration state `configured` can be set online. For Linux on z/VM, all CPUs are in the `configured` state.

**-d**

sets an online CPU offline.

Alternatively, you can write 1 to the `online` sysfs attribute of a CPU to set it online, or 0 to set it offline.

### Examples:

- The following **chcpu** commands force a CPU rescan, and then set the logical CPU with number 2 online.

```
# chcpu -r
# chcpu -e 2
```

The following commands achieve the same results by writing 1 to the online sysfs attribute of the CPU.

```
# echo 1 > /sys/devices/system/cpu/rescan
# echo 1 > /sys/devices/system/cpu/cpu2/online
```

- The following **chcpu** command sets the logical CPU with number 2 offline.

```
# chcpu -d 2
```

The following command achieves the same results by writing 0 to the online sysfs attribute of the CPU.

```
# echo 0 > /sys/devices/system/cpu/cpu2/online
```

## Examining the CPU topology

If supported by your hardware, an interface is available that you can use to get information about the CPU topology of an LPAR.

### Before you begin

Meaningful CPU topology information is available only to Linux in LPAR mode.

### About this task

Use this information, for example, to optimize the Linux scheduler, which bases its decisions on which process gets scheduled to which CPU. Depending on the workload, this optimization might increase cache hits and therefore overall performance.

**Note:** By default CPU topology support is enabled in the Linux kernel. If it is not suitable for your workload, disable the support by specifying the kernel parameter `topology=off` in your `parmfile` or `zip1.conf`. See [“Specifying kernel parameters” on page 23](#) for information about specifying kernel parameters.

The following sysfs attributes provide information about the CPU topology:

```
/sys/devices/system/cpu/cpu<N>/topology/thread_siblings
/sys/devices/system/cpu/cpu<N>/topology/core_siblings
/sys/devices/system/cpu/cpu<N>/topology/book_siblings
/sys/devices/system/cpu/cpu<N>/topology/drawer_siblings
```

where `<N>` specifies a particular logical CPU number. These attributes contain masks that specify sets of CPUs.

Because the mainframe hardware is evolving over time, the terms *drawer*, *book*, *core*, and *thread* do not necessarily correspond to fixed hardware entities. What matters for the Linux scheduler is the levels of relatedness that these terms signify, not the physical embodiment of the levels. In this context, more closely related means sharing more resources, like caches.

The `thread_siblings`, `core_siblings`, `book_siblings`, and `drawer_siblings` attribute each contain a mask that specifies the CPU and its peers at a particular level of relatedness.

1. The `thread_siblings` attribute covers the CPU and its closely related peers.

2. The `core_siblings` attribute covers all CPUs of the `thread_siblings` attribute and peers related at the core level.
3. The `book_siblings` attribute covers all CPUs of the `core_siblings` attribute and peers related at the book level.
4. The `drawer_siblings` attribute covers all CPUs of the `book_siblings` attribute and peers related at the drawer level.

If a machine reconfiguration causes the CPU topology to change, change uevents are created for each online CPU.

If the kernel also supports standby CPU activation and deactivation (see “[Changing the configuration state of CPUs](#)” on [page 312](#)), the masks also contains the CPUs that are in a configured, but offline state. Updating the masks after a reconfiguration might take some time.

## CPU polarization

---

You can modify the operation of a vertical SMP environment by adjusting the SMP factor.

### Before you begin

CPU polarization is relevant only to Linux in LPAR mode.

**Warning:** Turning on vertical CPU polarization without careful configuration can result in significant performance degradation. See [Configuration note](#) for details.

### About this task

Horizontal CPU polarization means that the underlying hypervisor dispatches each virtual CPU of an LPAR for the same amount of time.

If vertical CPU polarization is active, the hypervisor dispatches certain CPUs for a longer time than others for maximum performance. For example, if a guest has three virtual CPUs, each of them with a share of 33%, then in case of vertical CPU polarization all of the processing time would be combined to a single CPU, which would run all the time, while the other two CPUs would get nearly no CPU time.

There are three types of vertical CPUs: high, medium, and low. Low CPUs hardly get any real CPU time, while high CPUs get a full real CPU. Medium CPUs get something in between.

**Configuration note:** Switching to vertical CPU polarization usually results in a system with different types of vertical CPUs. Running a system with different types of vertical CPUs can result in significant performance degradation. If possible, use only one type of vertical CPUs. Set all other CPUs offline and deconfigure them.

### Procedure

To change the polarization, issue a command of this form:

```
# chcpu -p horizontal|vertical
```

Alternatively, you can write a 0 for horizontal polarization (the default) or a 1 for vertical polarization to `/sys/devices/system/cpu/dispatching`.

**Example:** The following **chcpu** command sets the polarization to vertical.

```
# chcpu -p vertical
```

You can achieve the same results by issuing the following command:

```
# echo 1 > /sys/devices/system/cpu/dispatching
```

### What to do next

You can issue the **lscpu** command with the **-e** option to find out the polarization of your CPUs. For more detailed information for a particular CPU, read the `polarization` attribute of the CPU in `sysfs`.

```
# cat /sys/devices/system/cpu/cpu<N>/polarization
```

The polarization can have one of the following values:

- `horizontal` - each of the guests' virtual CPUs is dispatched for the same amount of time.
- `vertical:high` - full CPU time is allocated.
- `vertical:medium` - medium CPU time is allocated.
- `vertical:low` - very little CPU time is allocated.
- `unknown` - temporary value following a polarization change until the change is completed and the kernel has established the new polarization of each CPU.



---

## Chapter 24. NUMA emulation

The NUMA emulation on Linux on Z distributes the available memory to logical NUMA nodes without using topology information about the physical memory.

Linux maintains separate memory management structures for each node. Especially on large systems, this separation can improve the overall system performance, or latency, or both.

---

### What you should know about NUMA emulation

The NUMA emulation distributes memory and CPU resources among NUMA nodes.

#### Memory distribution and stripe size

The NUMA emulation splits the usable system memory into stripes of a fixed size.

These memory stripes are then distributed, in round-robin mode, among the NUMA nodes. You can configure the number of NUMA nodes and the stripe size through kernel parameters (see [“Configuring NUMA emulation”](#) on page 317).

The difference between nodes in assigned memory cannot exceed the stripe size, so configuring small stripes leads to a balanced distribution. However, the stripes must not be too small, otherwise failing memory allocations prevent the kernel from booting. The minimum stripe size depends on the maximum number of CPUs (CONFIG\_NR\_CPUS) for which the kernel is compiled. For example, 2 CPUs require a minimum size of about 4 MB and 256 CPUs require about 512 MB.

Another approach to achieving a balanced memory distribution is to configure large stripes, such that exactly one stripe is assigned to each NUMA node.

#### CPU assignment to NUMA nodes

The Linux scheduler requires a stable mapping of CPUs to NUMA nodes. Therefore, cores are pinned to NUMA nodes when one of their CPUs is set online for the first time.

As a consequence, a CPU that is set offline is always assigned to its previous NUMA node when it is set back online. With multithreading enabled, a CPU is equivalent to a thread (see [“Simultaneous multithreading”](#) on page 311).

Pinned cores are distributed evenly across the NUMA nodes. You can distort this initial balance by setting a disproportionate number of CPUs from a particular NUMA node offline. New CPUs are assigned according to the number of pinned cores, not according to the number of online CPUs.

For example, assume a node A that has two cores and with one of four CPUs (threads) online. Further, assume a node B that has one core but two CPUs online. Because node B has fewer cores than node A, a newly configured CPU that is set online is assigned to node B, and the corresponding core is pinned to node B.

**Note:** Do not use NUMA emulation with **cpuplugd**. The **cpuplugd** daemon can distort the balance of CPU assignment to NUMA nodes. Issue the following command to find out if **cpuplugd** is running:

```
# service cpuplugd status
```


See also [“cpuplugd - Control CPUs and memory”](#) on page 531.

---

### Configuring NUMA emulation

You configure NUMA emulation through kernel parameters.

## NUMA emulation kernel parameter syntax

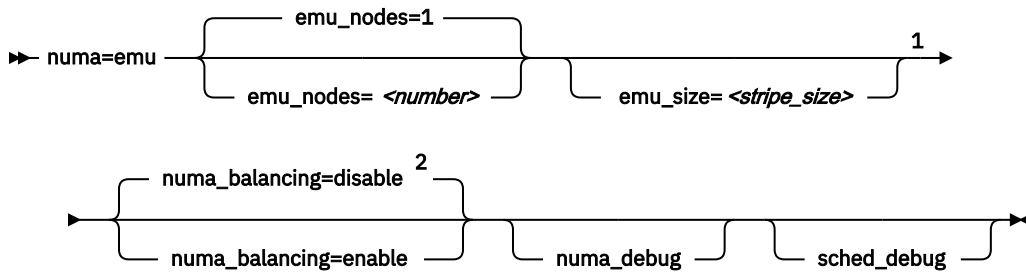

### Notes:

<sup>1</sup> The default stripe size is set through the `CONFIG_EMU_SIZE` kernel configuration parameter when the kernel is compiled.

<sup>2</sup> Do not enable NUMA balancing.

where:

### **numa=emu**

Sets the NUMA emulation mode and enables NUMA for the Linux instance.

### **emu\_nodes=<number>**

Specifies the number of NUMA nodes to be emulated. The default is 1. Emulating only one NUMA node, in effect, disables NUMA.

### **emu\_size=<stripe\_size>**

Specifies the memory stripe size in byte. You can use the k, M, G, and T suffixes. If this parameter is omitted NUMA uses a default value that is set when the kernel is compiled.

The memory stripe size must be a multiple of the memory block size (see [“Finding out the memory block size”](#) on page 320).

For other considerations about setting the stripe size see [“Memory distribution and stripe size”](#) on page 317.

### **numa\_balancing**

Do not enable NUMA balancing.

### **numa\_debug**

Enables kernel debug messages for the NUMA emulation on IBM Z.

### **sched\_debug**

Enables scheduler kernel debug messages.

## Example

```
numa=emu emu_nodes=4 emu_size=1G
```

---

## Chapter 25. Managing hotplug memory

**LPAR and z/VM:** Hotplug memory can be used by Linux in LPAR mode and by Linux on z/VM.

You can dynamically increase or decrease the memory for your running Linux instance.

To make memory available as hotplug memory, you must define it to your LPAR or z/VM. Hotplug memory is supported by z/VM 5.4 with the PTF for APAR VM64524 and by later z/VM versions.

For more information about memory hotplug, see `Documentation/memory-hotplug.txt` in the Linux source tree.

---

### What you should know about memory hotplug

Hotplug memory is represented in sysfs. After rebooting Linux, all hotplug memory is offline.

#### Hotplug memory management overhead

Linux requires 64 bytes of memory to manage a 4-KB page of hotplug memory.

Use the following formula to calculate the total amount of initial memory that is consumed to manage your hotplug memory:

```
<hotplug memory> / 64
```

**Example:** 4.5 TB of hotplug memory consume  $4.5 \text{ TB} / 64 = 72 \text{ GB}$ .

For large amounts of hotplug memory, you might have to increase the initial memory that is available to your Linux instance. Otherwise, booting Linux might fail with a kernel panic and a message that there is not enough free memory.

#### How memory is represented in sysfs

Both the core memory of a Linux instance and the available hotplug memory are represented by directories in sysfs.

The memory with which Linux is started is the *core memory*. On the running Linux system, additional memory can be added as *hotplug memory*. The Linux kernel requires core memory to allocate its own data structures.

In sysfs, both the core memory of a Linux instance and the available hotplug memory are represented in form of memory blocks of equal size. Each block is represented as a directory of the form `/sys/devices/system/memory/memory<n>`, where `<n>` is an integer. You can find out the block size by reading the `/sys/devices/system/memory/block_size_bytes` attribute.

In the naming scheme, the memory blocks with the lowest address ranges are assigned the lowest integer numbers. The core memory always begins with `memory0`. The hotplug memory blocks follow the core memory blocks.

You can calculate where the hotplug memory begins. To find the number of core memory blocks, divide the base memory by the block size.

**Example:**

- With a core memory of 512 MB and a block size of 128 MB, the core memory is represented by four blocks, `memory0` through `memory3`. Therefore, first hotplug memory block on this Linux instance is `memory4`.
- Another Linux instance with a core memory of 1024 MB and access to the same hotplug memory, represents this first hotplug memory block as `memory8`.

The hotplug memory is available to all operating system instances within the z/VM system or LPAR to which it was defined. The state sysfs attribute of a memory block indicates whether the block is in use by your own Linux system. The state attribute does not indicate whether a block is in use by another operating system instance. Attempts to add memory blocks that are already in use fail.

## Hotplug memory and reboot

The original core memory is preserved as core memory and hotplug memory is freed when rebooting a Linux instance.

When you perform an IPL after shutting down Linux, always use **ipl clear** to preserve the original memory configuration.

## Setting up hotplug memory

---

Before you can use hotplug memory on your Linux instance, you must define this memory as hotplug memory on your physical or virtual hardware.

### Defining hotplug memory to an LPAR

You use the Hardware Management Console (HMC) to define hotplug memory as *reserved storage* on an LPAR.

For information about defining reserved storage for your LPAR, see the *Processor Resource/Systems Manager Planning Guide*, SB10-7041 for your mainframe.

### Defining hotplug memory to z/VM

In z/VM, you define hotplug memory as *standby storage*.

There is also *reserved storage* in z/VM, but other than reserved memory defined for an LPAR, reserved storage that is defined in z/VM is not available as hotplug memory.

Always align the z/VM guest storage with the Linux memory block size. Otherwise, memory blocks might be missing or impossible to set offline in Linux.

For information about defining standby memory for z/VM guests, see the "DEFINE STORAGE" section in *z/VM: CP Commands and Utilities Reference*, SC24-6268.

## Performing memory management tasks

---

Typical memory management tasks include finding out the memory block size, adding memory, and removing memory.

- [“Finding out the memory block size” on page 320](#)
- [“Listing the available memory blocks” on page 321](#)
- [“Adding memory” on page 322](#)
- [“Removing memory” on page 322](#)

### Finding out the memory block size

On an IBM Z mainframe, memory is provided to Linux as memory blocks of equal size.

#### Procedure

- Use the **lsmem** command to find out the size of your memory blocks.

#### Example:

```
# lsmem
Address range                               Size (MB)  State    Removable  Device
=====
0x0000000000000000-0x0000000000000000    256  online   no         0
0x000000000100000000-0x0000000000000000    512  online   yes        1-2
0x000000000300000000-0x0000000000000000    256  online   no         3
0x000000000400000000-0x0000000000000000    768  online   yes        4-6
0x000000000700000000-0x0000000000000000   2304  offline  -         7-15

Memory device size : 256 MB
Memory block size  : 256 MB
Total online memory : 1792 MB
Total offline memory: 2304 MB
```

In the example, the block size is 256 MB.

- Alternatively, you can read `/sys/devices/system/memory/block_size_bytes`. This sysfs attribute contains the block size in byte in hexadecimal notation.

#### Example:

```
# cat /sys/devices/system/memory/block_size_bytes
10000000
```

This hexadecimal value corresponds to 256 MB.

## Listing the available memory blocks

List the available memory to find out how much memory is available and which memory blocks are online.

### Procedure

- Use the **lsmem** command to list your memory blocks.

#### Example:

```
# lsmem -a
Address range                               Size (MB)  State    Removable  Device
=====
0x0000000000000000-0x0000000000000000    256  online   no         0
0x000000000100000000-0x0000000000000000    256  online   no         1
0x000000000200000000-0x0000000000000000    256  online   no         2
0x000000000300000000-0x0000000000000000    256  online   yes        3
0x000000000400000000-0x0000000000000000    256  online   yes        4
0x000000000500000000-0x0000000000000000    256  offline  -         5
0x000000000600000000-0x0000000000000000    256  offline  -         6
0x000000000700000000-0x0000000000000000    256  offline  -         7

Memory device size : 256 MB
Memory block size  : 256 MB
Total online memory : 1280 MB
Total offline memory: 786 MB
```

- Alternatively, you can list the available memory blocks by listing the contents of `/sys/devices/system/memory`. Read the state attributes of each memory block to find out whether it is online or offline.

**Example:** The following command results in an overview for all available memory blocks.

```
# grep -r --include="state" "line" /sys/devices/system/memory/
/sys/devices/system/memory/memory0/state:online
/sys/devices/system/memory/memory1/state:online
/sys/devices/system/memory/memory2/state:online
/sys/devices/system/memory/memory3/state:online
/sys/devices/system/memory/memory4/state:online
/sys/devices/system/memory/memory5/state:offline
/sys/devices/system/memory/memory6/state:offline
/sys/devices/system/memory/memory7/state:offline
```

**Note:** Online blocks are in use by your Linux instance. An offline block can be free to be added to your Linux instance but it might also be in use by another Linux instance.

## Adding memory

You can add memory to your Linux instance by setting unused memory blocks online.

### Suspend and resume:

Do not add hotplug memory if you intend to suspend the Linux instance before the next IPL. Any changes to the original memory configuration prevent suspension, even if you restore the original memory configuration by removing memory blocks that have been added. See [Chapter 8, “Suspending and resuming Linux,”](#) on page 97 for more information about suspending and resuming Linux.

### Procedure

- Use the **chmem** command with the **-e** parameter to set memory online.  
You can specify the amount of memory you want to add with the command without specifying particular memory blocks. If there are enough eligible memory blocks to satisfy your request, the tool finds them for you and sets the most suitable blocks online.  
For information about the **chmem** command, see the man page. The **chmem** command is part of the `util-linux` package.
- Alternatively, you can write `online` to the `sysfs` state attribute of an unused memory block.  
Issue a command of the form:

```
# echo online > /sys/devices/system/memory/memory<n>/state
```

where `<n>` is an integer that identifies the memory unit.

### Results

Adding the memory block fails if the memory block is already in use. The state attribute changes to `online` when the memory block has been added successfully.

## Removing memory

You can remove memory from your Linux instance by setting memory blocks offline.

### About this task

Avoid removing core memory. The Linux kernel requires core memory to allocate its own data structures.

### Procedure

- Use the **chmem** command with the **-d** parameter to set memory offline.  
You can specify the amount of memory you want to remove with the command without specifying particular memory blocks. The tool finds eligible memory blocks for you and sets the most suitable blocks offline.  
For information about the **chmem** command, see the man page. The **chmem** command is part of the `util-linux` package.
- Alternatively, you can write `offline` to the `sysfs` state attribute of an unused memory block.  
Issue a command of the form:

```
# echo offline > /sys/devices/system/memory/memory<n>/state
```

where `<n>` is an integer that identifies the memory unit.

### Results

The hotplug memory functions first relocate memory pages to free the memory block and then remove it. The state attribute changes to `offline` when the memory block has been removed successfully.

The memory block is not removed if it cannot be freed completely.





## Chapter 26. Huge-page support

**Note:** Across the IT industry, *huge pages* and *large pages* are used synonymously for memory pages that exceed 4 KB. In keeping with the more commonly used term in the context of Linux, this publication uses *huge pages*.

Huge-page support entails support for the Linux hugetlbfs file system.

The huge-page support virtual file system is backed by larger memory pages than the usual 4 K pages; for IBM Z the hardware page size is 1 MB.

To check whether 1 MB huge pages are supported in your environment, issue the command:

```
# grep edat /proc/cpuinfo
features          : esan3 zarch stfle msa ldisp eimm dfp edat etf3eh highgprs te
```

An output line that lists `edat` as a feature indicates 1 MB huge-page support.

Applications that use huge-page memory save a considerable amount of page table memory. Another benefit from the support might be an acceleration in the address translation and overall memory access speed.

As of version 7, Red Hat Enterprise Linux also supports libhugetlbfs linking. For more information, see the libhugetlbfs package, `libhugetlbfs-<version>.s390x.rpm`, and the how-to document that is included in the package.


As of version 7, Red Hat Enterprise Linux supports transparent hugepages. For more information, see `Documentation/vm/transhuge.txt` in the Linux source tree.

As of zEC12, you can also configure 2 GB huge pages if Linux is running on an LPAR or as a KVM guest. There is no flag that indicates 2GB support; the support is always there as of zEC12. See [“Pre-allocating 2 GB huge pages”](#) on page 326.

## Setting up hugetlbfs huge-page support

You configure hugetlbfs huge-page support by adding parameters to the kernel parameter line.

### Huge-page support kernel parameter syntax

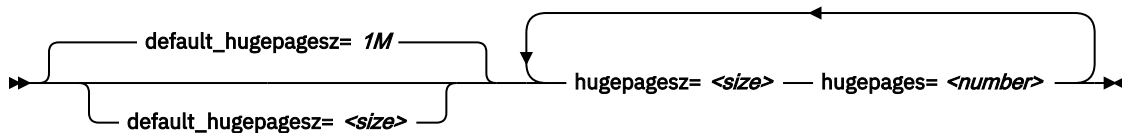

where:

**default\_hugepagesz=<size>**

specifies the default page size in byte. You can use suffixes K, M, and G to specify KB, MB, and GB. The default value is 1 MB.

**hugepages=<number>**

is the number of huge pages to be allocated at boot time.

**hugepagesz=<size>**

specifies the page size in byte. You can use suffixes K, M, and G to specify KB, MB, and GB.

**Note:** If you specify more pages than available, Linux reserves as many as possible. As a likely result, too few general pages remain for the boot process, and your system stops with an out-of-memory error.

## Pre-allocating 2 GB huge pages

If Linux is running in an LPAR or as a KVM guest, you can use 2 GB huge pages.

Before you can use 2 GB huge pages, you must pre-allocate them to the kernel page pool. To pre-allocate 2 GB pages, precede the **hugepages=** parameter with the page size selection parameter, **hugepagesz=2G**.

**Tip:** Memory quickly becomes fragmented after booting, and new 2 GB huge pages cannot be allocated. Use kernel boot parameters to allocate 2 GB huge pages to avoid the memory fragmentation problem.

To pre-allocate a number of pages of 2 GB size and also set the default size to 2 GB:

```
default_hugepagesz=2G hugepagesz=2G hugepages=<number>
```

## Setting up multiple huge-page pools

You can allocate multiple huge-page pools and use them simultaneously. To allocate multiple huge-page pools, specify the **hugepagesz=** parameter several times, each time followed by a corresponding **hugepages=** parameter.

For example, to specify two pools, one with 1 MB pages and one with 2 GB pages, specify:

```
hugepagesz=1M hugepages=8 hugepagesz=2G hugepages=2
```

This creates a sysfs attribute for each pool, `/sys/kernel/mm/hugepages/hugepages-<size>kB/nr_hugepages`, where *<size>* is the page size in KB. For the example given, the following attributes are created:

```
/sys/kernel/mm/hugepages/hugepages-1024kB/nr_hugepages
/sys/kernel/mm/hugepages/hugepages-2097152kB/nr_hugepages
```

## Huge pages and hotplug memory

Hotplug memory that is added to a running Linux instance is movable and can be allocated to movable resources only.

By default, huge pages are not movable and cannot be allocated from movable memory. You can enable allocation from movable memory with the sysctl setting **hugepages\_treat\_as\_movable**.

To enable allocation of huge pages from movable hotplug memory, issue:

```
# echo 1 > /proc/sys/vm/hugepages_treat_as_movable
```

Although this setting makes huge pages eligible for allocation through movable memory, it does not make huge pages movable. As a result, the allocated hotplug memory cannot be set offline until all huge pages are released from that memory.

To disable allocation of huge pages from movable hotplug memory, issue:

```
# echo 0 > /proc/sys/vm/hugepages_treat_as_movable
```

## Working with hugetlbfs huge-page support

Typical tasks for working with hugetlbfs huge-page support include reading the current number of huge pages, changing the number of huge pages, and display information about available huge pages.

### About this task

The huge-page memory can be used through `mmap()` or SysV shared memory system calls, more detailed information can be found in the Linux kernel source tree under `Documentation/vm/hugetlbpage.txt`, including implementation examples.

Your database product might support huge-page memory. See your database documentation to find out if and how it can be configured to use huge-page memory.

Depending on your version of Java™, you might require specific options to make a Java program use the huge-page feature. For IBM SDK, Java Technology Edition 7, specify the **-Xlp** option. If you use the SysV shared memory interface, which includes **java -Xlp**, you must adjust the shared memory allocation limits to match the workload requirements. Use the following `sysctl` attributes:

#### **/proc/sys/kernel/shmall**

Defines the global maximum amount of shared memory for all processes, specified in number of 4 KB pages.

#### **/proc/sys/kernel/shmmax**

Defines the maximum amount of shared memory per process, specified in number of bytes.

For example, the following commands would set both limits to 20 GB:

```
# echo 5242880 > /proc/sys/kernel/shmall
# echo 21474836480 > /proc/sys/kernel/shmmax
```

### Procedure

- Specify the `hugepages=` kernel parameter with the number of huge pages to be allocated at boot time. To read the current number of default huge pages, issue:

```
# cat /proc/sys/vm/nr_hugepages
```

- To change the number of default-sized huge pages dynamically during runtime, write to `procfs`:

```
# echo 20 > /proc/sys/vm/nr_hugepages
```

If there is not enough contiguous memory available to fulfill the request, the maximum number of huge pages are reserved.

- To obtain information about the number of huge pages currently available and the huge-page size, issue:

```
# cat /proc/meminfo
...
HugePages_Total: 20
HugePages_Free: 14
HugePages_Rsvd: 0
HugePages_Surp: 0
...
Hugepagesize: 1024 KB
...
```

- To adjust characteristics of a huge-page pool, when more than one pool exists, use the `sysfs` attributes of the pool.

These can be found under

```
/sys/kernel/mm/hugepages/hugepages-<size>/nr_hugepages
```

Where *<size>* is the page size in KB.

## Example

To allocate 2 GB huge pages:

1. Specify 2 GB huge pages and pre-allocate them to the page pool at boot time. Use the following kernel boot parameters:

```
default_hugepagesz=2G hugepagesz=2G hugepages=4
```

2. After booting, read `/proc/meminfo` to see information about the amount of huge pages currently available and the huge-page size:

```
cat /proc/meminfo
...
HugePages_Total: 4
HugePages_Free: 4
HugePages_Rsvd: 0
HugePages_Surp: 0
Hugepagesize: 2097152 kB
...
```

## Chapter 27. S/390 hypervisor file system

The S/390® hypervisor file system (hypfs) provides a mechanism to access LPAR and z/VM hypervisor data.

### Directory structure

When the hypfs file system is mounted, the accounting information is retrieved and a file system tree is created. The tree contains a full set of attribute files with the hypervisor information.

By convention, the mount point for the hypervisor file system is `/sys/hypervisor/s390`.

### LPAR directories and attributes

There are hypfs directories and attributes with hypervisor information for Linux in LPAR mode.

Figure 73 on page 329 illustrates the file system tree that is created for LPAR.

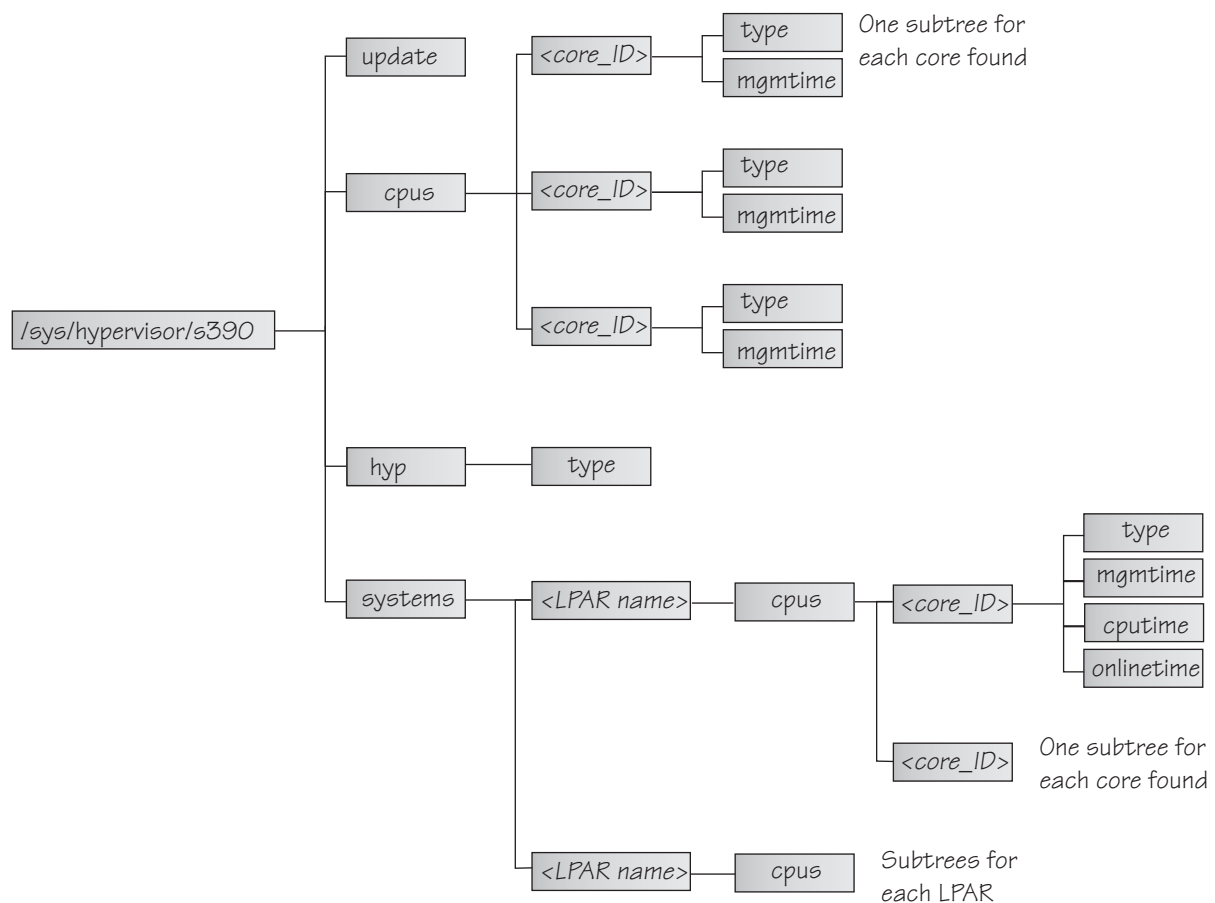


Figure 73. The hypervisor file system for LPAR

#### **update**

Write-only file to trigger an update of all attributes.

#### **cpus/**

Directory for all physical cores.

#### **cpus/<core ID>**

Directory for one physical core. `<core_ID>` is the logical (decimal) core number.

**type**

Type name of physical core, such as CP or IFL.

**mgmttime**

Physical-LPAR-management time in microseconds (LPAR overhead).

**hyp/**

Directory for hypervisor information.

**hyp/type**

Type of hypervisor (LPAR hypervisor).

**systems/**

Directory for all LPARs.

**systems/<lpar name>/**

Directory for one LPAR.

**systems/<lpar name>/cpus/<core\_ID>/**

Directory for the virtual cores for one LPAR. The <core\_ID> is the logical (decimal) core number.

**type**

Type of the logical core, such as CP or IFL.

**mgmttime**

LPAR-management time. Accumulated number of microseconds during which a physical core was assigned to the logical core and the core time was consumed by the hypervisor and was not provided to the LPAR (LPAR overhead).

**cputime**

Accumulated number of microseconds during which a physical core was assigned to the logical core and the core time was consumed by the LPAR.

**onlinetime**

Accumulated number of microseconds during which the logical core has been online.

**Note:** For LPARs with multithreading enabled, the entities in the cpus directories represent hardware cores, not threads.

**Note:** For older machines, the onlinetime attribute might be missing. Generally, it is advantageous for applications to tolerate missing attributes or new attributes that are added to the file system. To check the content of the files, you can use tools such as **cat** or **less**.

## z/VM directories and attributes

There are hypfs directories and attributes with hypervisor information for Linux on z/VM.

**update**

Write-only file to trigger an update of all attributes.

**cpus/**

Directory for all physical CPUs.

**cpus/count**

Total current CPUs.

**hyp/**

Directory for hypervisor information.

**hyp/type**

Type of hypervisor (z/VM hypervisor).

**systems/**

Directory for all z/VM guest virtual machines.

**systems/<guest name>/**

Directory for one z/VM guest virtual machine.

**systems/<guest name>/onlinetime\_us**

Time in microseconds that the guest virtual machine has been logged on.

**systems/<guest name>/cpus/**

Directory for the virtual CPUs for one guest virtual machine.

**capped**

Flag that shows whether CPU capping is on for the guest virtual machine (0 = off, 1 = soft, 2 = hard).

**count**

Total current virtual CPUs in the guest virtual machine.

**cputime\_us**

Number of microseconds where the guest virtual machine CPU was running on a physical CPU.

**dedicated**

Flag that shows if the guest virtual machine has at least one dedicated CPU (0 = no, 1 = yes).

**weight\_cur**

Current share of guest virtual machine (1-10000); 0 for ABSOLUTE SHARE guests.

**weight\_max**

Maximum share of guest virtual machine (1-10000); 0 for ABSOLUTE SHARE guests.

**weight\_min**

Number of operating CPUs. Do not be confused by the attribute name, which suggests a different meaning.

**systems/<guest name>/samples/**

Directory for sample information for one guest virtual machine.

**cpu\_delay**

Number of CPU delay samples that are attributed to the guest virtual machine.

**cpu\_using**

Number of CPU using samples attributed to the guest virtual machine.

**idle**

Number of idle samples attributed to the guest virtual machine.

**mem\_delay**

Number of memory delay samples that are attributed to the guest virtual machine.

**other**

Number of other samples attributed to the guest virtual machine.

**total**

Number of total samples attributed to the guest virtual machine.

**systems/<guest name>/mem/**

Directory for memory information for one guest virtual machine.

**max\_KiB**

Maximum memory in KiB (1024 bytes).

**min\_KiB**

Minimum memory in KiB (1024 bytes).

**share\_KiB**

Guest estimated core working set size in KiB (1024 bytes).

**used\_KiB**

Resident memory in KiB (1024 bytes).

To check the content of the files, you can use tools such as **cat** or **less**.

## Setting up the S/390 hypervisor file system

---

To use the file system, it must be mounted. You can mount the file system with the mount command or with an entry in /etc/fstab.

To mount the file system manually, issue the following command:

```
# mount none -t s390_hypfs <mount point>
```

where *<mount point>* is where you want the file system mounted. Preferably, use `/sys/hypervisor/s390`.

To mount hypfs by using `/etc/fstab`, add the following line:

```
none <mount point> s390_hypfs defaults 0 0
```

If your z/VM system does not support DIAG 2fc, the `s390_hypfs` is not activated and it is not possible to mount the file system. Instead, an error message like this is issued:

```
mount: unknown filesystem type 's390_hypfs'
```

To get data for all z/VM guests, privilege class B is required for the guest where hypfs is mounted. For non-class B guests, data is provided only for the local guest.

To get data for all LPARs, select the **Global performance data control** check box in the HMC or SE security menu of the LPAR activation profile. Otherwise, data is provided only for the local LPAR.

## Working with the S/390 hypervisor file system

Typical tasks that you must perform when working with the S/390 hypervisor file system include defining access permissions and updating hypfs information.

- [“Defining access permissions” on page 332](#)
- [“Updating hypfs information” on page 333](#)

### Defining access permissions

The root user usually has access to the hypfs file system. It is possible to explicitly define access permissions.

#### About this task

If no mount options are specified, the files and directories of the file system get the uid and gid of the user who mounted the file system (usually root). It is possible to explicitly define uid and gid by using the mount options `uid=<number>` and `gid=<number>`.

#### Example

You can define `uid=1000` and `gid=2000` with the following mount command:

```
# mount none -t s390_hypfs -o "uid=1000,gid=2000" <mount point>
```

Alternatively, you can add the following line to the `/etc/fstab` file:

```
none <mount point> s390_hypfs uid=1000,gid=2000 0 0
```

The first mount defines uid and gid. Subsequent mounts automatically have the same uid and gid setting as the first one.

The permissions for directories and files are as follows:

- Update file: 0220 (`--w--w----`)
- Regular files: 0440 (`-r--r-----`)
- Directories: 0550 (`dr-xr-x---`)



## Updating hypfs information

You trigger the update process by writing something into the update file at the top-level hypfs directory.

### Procedure

With hypfs mounted at `/sys/hypervisor/s390`, you can trigger the update process by issuing the following command:

```
# echo 1 > /sys/hypervisor/s390/update
```

During the update, the entire directory structure is deleted and rebuilt. If a file was open before the update, subsequent reads return the old data until the file is opened again. Within 1 second only one update can be done. If multiple updates are triggered within a second, only the first update is performed and subsequent write system calls return `-1` and `errno` is set to `EBUSY`.

Applications can use the following procedure to ensure consistent data:

1. Read modification time through `stat(2)` from the update attribute.
2. If data is too old, write to the update attribute and start again with step 1.
3. Read data from file system.
4. Read modification time of the update attribute again and compare it with first timestamp. If the timestamps do not match, return to step 2.



## Chapter 28. TOD clock synchronization

Your Linux instance might be part of an extended remote copy (XRC) setup that requires synchronization of the Linux time-of-day (TOD) clock with a timing network.

Linux in LPAR mode supports system time protocol (STP) based TOD synchronization. For information about STP, see

[www.ibm.com/systems/z/advantages/pso/stp.html](http://www.ibm.com/systems/z/advantages/pso/stp.html)




**Attention:** To avoid hanging I/O operations on XRC-enabled DASD, be sure that a reliable timing signal is available before enabling clock synchronization. Linux expects regular timing signals and might stop indefinitely to wait for such signals if it does not receive them.

STP support is included in Red Hat Enterprise Linux.

### Enabling clock synchronization when booting

Use the `stp=` kernel parameter to enable clock synchronization when booting.

#### stp syntax



By default, clock synchronization is not enabled.

The kernel parameter specifies the initial synchronization setting. On a running Linux instance, you can change these settings through attributes in `sysfs` (see [“Enabling and disabling clock synchronization” on page 335](#)).

### Enabling and disabling clock synchronization

Use the STP `sysfs` attribute `online` to enable or disable clock synchronization.

#### Procedure

To enable clock synchronization, set `/sys/devices/system/stp/online` to 1. To disable clock synchronization, set this attribute to 0.

#### Example

To disable clock synchronization, enter:

```
# echo 0 > /sys/devices/system/stp/online
```



---

## Chapter 29. Identifying the IBM Z hardware

In installations with several IBM Z mainframes, you might need to identify the particular hardware system on which a Linux instance is running.

On Linux in LPAR mode, two attributes in `/sys/firmware/ocf` can help you to identify the hardware.

### **cpc\_name**

contains the name that is assigned to the central processor complex (CPC). This name identifies the mainframe system on a Hardware Management Console (HMC).

### **hmc\_network**

contains the name of the HMC network to which the mainframe system is connected.

The two attributes contain the empty string if the Linux instance runs as a guest of a hypervisor that does not support the operations command facility (OCF) communication parameters interface.

Use the **cat** command to read these attributes.

### **Example:**

```
# cat /sys/firmware/ocf/cpc_name
Z05
# cat /sys/firmware/ocf/hmc_network
SNA00
```



## Chapter 30. HMC media device driver

**LPAR and z/VM:** The HMC media device driver applies to Linux in LPAR mode and to Linux on z/VM.

You use the HMC media device driver to access files on removable media at a system that runs the Hardware Management Console (HMC).

**Before you begin:** You must log in to the HMC on the system with the removable media and assign the media to the LPAR.

The HMC media device driver supports the following removable media:

- A DVD in the DVD drive of the HMC system
- A CD in the DVD drive of the HMC system
- USB-attached storage that is plugged into the HMC system

The most commonly used removable media at the HMC is a DVD.

The HMC media device driver uses the `/dev/hmcdrv` device node to support these capabilities:

- List the media contents with the `lshmc` command (see [“lshmc - List media contents in the HMC media drive”](#) on page 588).
- Mount the media contents as a file system with the `hmcdrvfs` command (see [“hmcdrvfs - Mount a FUSE file system for remote access to media in the HMC media drive”](#) on page 564).

Installers on suitably prepared installation DVDs can use these capabilities to install Linux in an LPAR.


### Setting up the HMC media device driver

You can set the cache size for the HMC media device driver.

#### Kernel parameters

If the HMC media device driver has been compiled into the kernel, you set the cache size by adding the `hmcdrv.cachesize=` parameter to the kernel parameter line.

##### hmcdrv kernel parameter syntax



where `<size>` is the cache size in bytes. The specification must be a multiple of 2048. You can use the suffixes K for kilobytes, M for megabytes, or G for gigabytes. Specify 0 to not cache any media content. By default, the cache size is 534288 bytes (0.5 MB).

Loading the `hmcdrv` module creates a device node at `/dev/hmcdrv`.

#### Example

The following specifications are equivalent:

```
hmcdrv.cachesize=153600
```


```
hmcdrv.cachesize=150K
```

## Module parameters

If the HMC media device driver has been built as a separate module, `hmcdrv`, you set the cache size through the `cachesize=` module parameter.

Before you can work with the HMC media device driver and with the dependent **lshmc** and **hmcdrvfs** commands, you must load the `hmcdrv` kernel module.

### hmcdrv module parameter syntax



where `<size>` is the cache size in bytes. The specification must be a multiple of 2048. You can use the suffixes K for kilobytes, M for megabytes, or G for gigabytes. Specify 0 to not cache any media content. By default, the cache size is 534288 bytes (0.5 MB).

Loading the `hmcdrv` module creates a device node at `/dev/hmcdrv`.

### Example

The following specifications are equivalent:

```
# modprobe hmcdrv cachesize=153600
```

```
# modprobe hmcdrv cachesize=150K
```

## Working with the HMC media

You can list files on media that are inserted into the HMC system and you can mount the media content on the Linux file system.

- [“Assigning the removable media of the HMC to an LPAR” on page 340](#)
- [“Listing files on the removable media at the HMC” on page 341](#)
- [“Mounting the content of the removable media at the HMC” on page 341](#)

## Assigning the removable media of the HMC to an LPAR

Use the HMC to assign the removable media to the LPAR where your Linux instance runs.

### Before you begin

- You need access to the HMC, and you must be authorized to use the **Access Removable Media** task for the LPAR to which you want to assign the media.
- For Linux on z/VM, the z/VM guest virtual machine must have at least privilege class B.
- For Linux in LPAR mode, the LPAR activation profile must allow issuing SCLP requests.

### About this task

You can list files on the removable media at the HMC without having to first mount the contents on the Linux file system.

### Procedure

1. Insert the removable media into the HMC system.
2. Use the **Access Removable Media** task on your HMC to assign the removable media to the LPAR where your Linux instance runs.



For Linux on z/VM, this is the LPAR where the z/VM hypervisor runs that provides the guest virtual machine to your Linux instance.

For details, see the HMC documentation for the HMC at your installation.

## Results

You can now access the removable media from your Linux instance.

## Listing files on the removable media at the HMC

Use the **lshmc** command to list files on the removable media at the HMC.

### Before you begin

Your Linux instance must have access to the removable media at the HMC (see [“Assigning the removable media of the HMC to an LPAR”](#) on page 340).

### About this task

You can list files on the removable media at the HMC without having to first mount the contents on the Linux file system.

### Procedure

Issue a command of this form:

```
# lshmc <filepath>
```

where *<filepath>* is an optional specification for a particular path and file. Path specifications are interpreted as relative to the root directory of the removable media. You can use the asterisk (\*) and question mark (?) as wildcards. If you omit *<filepath>*, all files in the root directory of the media are listed.

**Example:** The following command lists all .html files in the www subdirectory of the media.

```
# lshmc www/*.html
```

For more information about the **lshmc** command, see [“lshmc - List media contents in the HMC media drive”](#) on page 588.

## Mounting the content of the removable media at the HMC

Use the **hmcdrvfis** command to mount the content of the removable media at the HMC.

### Before you begin

Your Linux instance must have access to the removable media of the HMC (see [“Assigning the removable media of the HMC to an LPAR”](#) on page 340).

### About this task

You can mount the content of the removable media at the HMC in read-only mode on the Linux file system.

### Procedure

1. Optional: Confirm that you are accessing the intended content by issuing the **lshmc** command.
2. Mount the media content by issuing a command of this form:

```
# hmcdrvfis <mountpoint>
```

where *<mountpoint>* is the mount point on the Linux file system.

**Example:** The following command mounts the media content at `/mnt/hmc`:

```
# hmcdivfs /mnt/hmc
```

### Results

You can now access the files on the media in read-only mode through the Linux file system.

### What to do next

When you no longer need access to the media content, unmount the media with the **fusermount** command.

---

# Chapter 31. Data compression with GenWQE and zEDC Express

**LPAR and z/VM:** Data compression with GenWQE and zEDC Express applies to Linux in LPAR mode and to Linux on z/VM.

Generic Work Queue Engine (GenWQE) supports hardware-accelerated data compression and decompression through zEDC Express, a PCIe-attached Field Programmable Gate Array (FPGA) acceleration adapter.

zEDC hardware-acceleration is available for both Linux and z/OS. For more information about zEDC on z/OS and about setting up zEDC Express, see *Reduce Storage Occupancy and Increase Operations Efficiency with IBM zEnterprise Data Compression*, SG24-8259. You can obtain this publication from the IBM Redbooks® website at [www.redbooks.ibm.com/abstracts/sg248259.html](http://www.redbooks.ibm.com/abstracts/sg248259.html).

---

## Features

GenWQE supports hardware-accelerated data compression and decompression with common standards.

- GenWQE implements the `zlib` API.
- GenWQE adheres to the following RFCs:
  - RFC 1950 (`zlib`)
  - RFC 1951 (`deflate`)
  - RFC 1952 (`gzip`)

These standards ensure compatibility among different `zlib` implementations.

- Data that is compressed with GenWQE can be decompressed through a `zlib` software library.
- Data that is compressed through a software `zlib` software library can be decompressed with GenWQE.
- GenWQE supports the following PCIe FPGA acceleration hardware:
  - zEDC Express

---

## What you should know about GenWQE

Learn about the GenWQE components, how to enable GenWQE accelerated `zlib` for user applications, and device representation in Linux.

### The GenWQE accelerated `zlib`

The GenWQE accelerated `zlib` can replace a `zlib` software library.

For data compression and decompression tasks, Red Hat Enterprise Linux 8.1 includes software libraries. The `zlib` library, which provides the `zlib` API, is one of the most commonly used libraries for data compression and decompression. For information about `zlib`, see [www.zlib.net](http://www.zlib.net).

Because the GenWQE accelerated `zlib` offers the `zlib` API, applications can use it instead of the default `zlib` software library. The GenWQE hardware-accelerated `zlib` is designed to enhance performance by offloading tasks to a hardware accelerator.

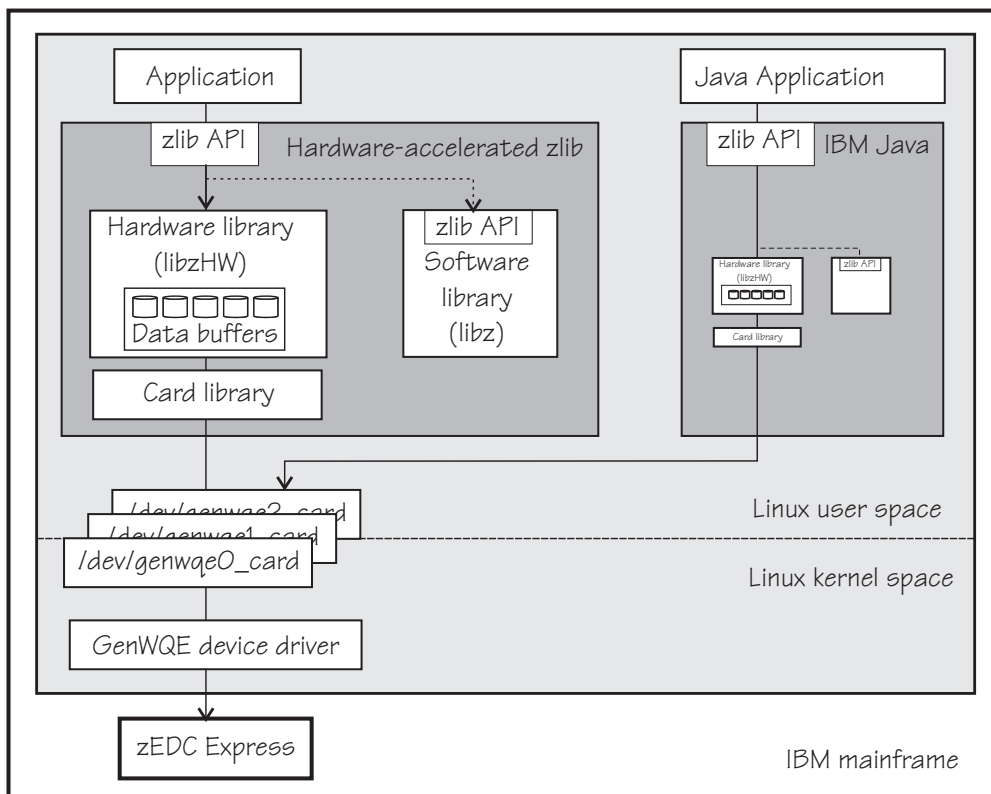


Figure 74. GenWQE accelerated zlib

## Applications

You can make the user space components of the GenWQE hardware-accelerated zlib available to applications that request data compression functions through the zlib API. Red Hat Enterprise Linux 8.1 provides these user space components with the `genwqe-zlib` RPM.

A second RPM, `genwqe-tools`, provides tools that use the GenWQE hardware-accelerated zlib.

IBM Java version 7.1 or later includes components of the GenWQE hardware-accelerated zlib. Through these components, it can directly address the GenWQE device nodes. With the required environment variables in place, it uses hardware-acceleration if it is available (see [“GenWQE hardware-acceleration for IBM Java”](#) on page 348).

## Hardware-accelerated zlib

The hardware-accelerated zlib is a zlib implementation that acts as a wrapper for two included libraries:

### libzHW

a hardware library that prepares requests for processing by the hardware accelerator. The hardware library is intended to handle the bulk of the requests.

This library also manages data buffers for optimized hardware compression.

### libz

a software implementation of the zlib interface. Because it provides the same interface as its wrapper library, it can handle any requests unmodified.

The hardware-accelerated zlib arbitrates between the two included libraries. It uses the software library as a backup if no hardware accelerator is available. It also evaluates the expected performance gain against the extra processing for channeling requests to the accelerator. For small or fragmented data, software processing might be advantageous, especially for decompression. The evaluation takes available resources, such as buffer space, into account.

### Card library

The card library, `libcard`, mediates between the hardware-accelerated `zlib` library and the GenWQE device driver. It provides recovery features and can move jobs between available accelerators.

### Device driver

The GenWQE device driver is the kernel part of GenWQE. It serializes requests to an accelerator in form of device driver control blocks (DDCBs), and it enables multi-process and multi-thread usage.

## GenWQE device nodes

GenWQE user space components use device nodes to exchange data with the GenWQE device driver.

Red Hat Enterprise Linux 8.1 automatically loads the GenWQE device driver module when it is required. It also creates a device node of the form `/dev/genwqe<n>_card` for each available virtual acceleration card. `<n>` is an index number that identifies an individual virtual card. Node `/dev/genwqe0_card` is assigned to the first card that is detected, `/dev/genwqe1_card` to the second card, and so on.

Do not directly use these device nodes. The nodes are intended to be used by the user space components of the GenWQE hardware-accelerated `zlib` and by IBM Java.

## Virtual accelerators

Each physical accelerator card can provide up to 15 virtual cards. In PCIe terminology, these virtual cards are called virtual functions.

GenWQE accelerator cards, as detected by Linux on Z, are virtual cards. Which and how many cards are available to a particular Linux instance depends on the mainframe configuration and, if applicable, the hypervisor configuration.

As for most mainframe devices, availability can be enhanced by assigning virtual accelerator cards from different physical cards.

A degree of load distribution can be achieved by unevenly distributing accelerator cards among different Linux instances.

## Tradeoff between best compression and speed

A minimum size of compressed data and fast compression are conflicting goals.

For hardware-accelerated compression with GenWQE, the compression ratio is roughly equivalent to **`gzip --fast`**.

Data that was compressed with GenWQE hardware-acceleration might have a different size from data that was compressed in software. The data compression standards are not violated by this difference. Despite possible differences in size of the compressed data, data that is compressed with GenWQE hardware-acceleration can be decompressed in software and vice versa.

## Setting up GenWQE hardware acceleration

---

Install the GenWQE components and understand how environment variables can override default settings.

### Installing the GenWQE hardware-accelerated `zlib`

Install the `genwqe-zlib` and `genwqe-tools` RPMs that are included in Red Hat Enterprise Linux 8.1.

The `genwqe-zlib` RPM includes the user space components of the GenWQE hardware-accelerated `zlib`.

The `genwqe-tools` RPM provides the following tools:

- **`genwqe_gzip`** and **`genwqe_gunzip`**, which are GenWQE versions of **`gzip`** and **`gunzip`** (see [“Examples for using GenWQE”](#) on page 347).

These tools can be used for most purposes, but they do not implement all of the more unusual options of their common code counterparts. See the man pages to find out which options are supported.

- **genwqe\_echo**, a tool to confirm the availability of accelerator hardware through the GenWQE accelerated zlib. See [“Confirming that the accelerator hardware can be reached”](#) on page 349 for details.

## Environment variables

You can set environment variables to control the GenWQE hardware-accelerated zlib.

The GenWQE hardware-accelerated zlib uses defaults that correspond to the following environment variable settings:

```
ZLIB_ACCELERATOR=GENWQE
ZLIB_CARD=-1
ZLIB_TRACE=0x0
ZLIB_DEFLATE_IMPL=0x41
ZLIB_INFLATE_IMPL=0x41
```

You can override these defaults by setting the following environment variables:

### **ZLIB\_ACCELERATOR**

Sets the accelerator type. For zEDC Express, the type is GENWQE.

### **ZLIB\_CARD**

-1, uses all accelerators that are available to the Linux instance. Failed requests are retried on alternative accelerators.

You can specify the ID of a particular virtual accelerator card to be used. The ID is the index number that makes the nodes unique. All other cards are ignored, and no retry on alternative cards is performed if the specified card fails. Specify an ID only if you want to test a particular card.

0 uses the first card that is found by the device driver. As for specifying an individual card, all other cards are ignored.

### **ZLIB\_TRACE**

Sets tracing bits:

#### **0x1**

General trace.

#### **0x2**

Hardware trace.

#### **0x4**

Software trace.

#### **0x8**

Trace summary at the end of a process.

Tracing requires extra processing and incurs a performance penalty. The least performance impact is to be expected from the trace summary. By default, tracing is off.

### **ZLIB\_DEFLATE\_IMPL**

0x01 and 0x41 enable hardware compression, where 0x41 adds an optimization setting. 0x00 forces software compression and is intended for experimentation, for example, for gathering performance data with and without hardware acceleration.

### **ZLIB\_INFLATE\_IMPL**

0x01 and 0x41 enable hardware decompression, where 0x41 adds an optimization setting. 0x00 forces software decompression and is intended for experimentation, for example, for gathering performance data with and without hardware acceleration.

You can find more details about the environment variables in the GenWQE wiki on GitHub at [github.com/ibm-genwqe/genwqe-user/wiki/Environment Variables](https://github.com/ibm-genwqe/genwqe-user/wiki/Environment-Variables).

## Examples for using GenWQE

---

You can use the GenWQE hardware-accelerated `zlib` through GenWQE tools.

### Activating the GenWQE hardware-accelerated `zlib` for an application

Whether and how you can make an application use the GenWQE hardware-accelerated `zlib` depends on how the application links to `libz.so`.

Examine the application for links to `libz.so`, for example with the **`ldd`** tool.

- If the application does not link to `libz.so` or if it statically links to `libz.so`, it would require recompilation, and possibly code changes, to make acceleration through GenWQE possible.
- If an application dynamically links to `libz.so`, you might be able to redirect the library calls from the default implementation to the GenWQE hardware-accelerated `zlib`.

Some applications require `zlib` features that are not available from the GenWQE hardware-accelerated `zlib`. Such applications fail if a global redirect is put in place. The following technique redirects calls for the scope of a particular application.

Specify the `LD_PRELOAD` environment variable to load the GenWQE hardware-accelerated `zlib`. Set the variable with the `start` command for your application.

#### Example:

```
# LD_PRELOAD=/lib/s390x-linux-gnu/genwqe/libz.so.1 <application_start_cmd>
```

### Compressing data with `genwqe_gzip`

GenWQE provides two tools, **`genwqe_gzip`** and **`genwqe_gunzip`** that can be used in place of the common code **`gzip`** and **`gunzip`** tools. The GenWQE versions of the tools use hardware acceleration if it is available.

#### Procedure

Run the **`genwqe_gzip`** command with the `-AGENWQE` parameter to compress a file.

```
# genwqe_gzip -AGENWQE <file>
```

The `-AGENWQE` parameter ensures that the correct, PCIe-attached, accelerator card is used. Also use this option when decompressing data with the **`genwqe_gunzip`** command. See the man pages for other options.

### Running tar with GenWQE hardware-acceleration

You can make `tar` use **`genwqe_gzip`** in place of the common code **`gzip`**.

#### About this task

If called with the `z` option, the **`tar`** utility uses the first **`gzip`** tool in the search path, which is usually the common code version. By inserting the path to the GenWQE **`gzip`** tool at the beginning of the `PATH` variable, you can make the **`tar`** utility use hardware acceleration.

The path points to `/usr/lib64/genwqe/gzip` and `/usr/lib64/genwqe/gunzip`, which are symbolic links to **`genwqe_gzip`** and **`genwqe_gunzip`**.

The acceleration is most marked for a single large text file. The example that follows compresses a directory with the Linux source code.

## Procedure

1. Run the **tar** command as usual to use software compression. To obtain performance data, specify the **tar** command as an argument to the **time** command.

```
# time tar cfz linux-src.sw.tar.gz linux-src
real 0m22.329s
user 0m22.147s
sys 0m0.849s
```

2. Run the **tar** command with an adjusted PATH variable to use GenWQE hardware acceleration. Again, use the **time** command to obtain performance data.

```
# time PATH=/usr/lib64/genwqe:$PATH \
tar cfz linux-src.hw.tar.gz linux-src
real 0m1.323s
user 0m0.242s
sys 0m1.023s
```

## Results

In the example, the accelerated operation is significantly faster. The hardware-compressed data is slightly larger than the software-compressed version of the same data

## GenWQE hardware-acceleration for IBM Java

---

IBM Java version 7.1 or later can use the GenWQE hardware-accelerated zlib.

To activate the GenWQE hardware-accelerated zlib for IBM Java, you must set environment parameters. See the documentation for your Java version to find out which settings are required.

**Note:** Any values that you set for the environment variables override the default settings for the GenWQE user space components (see [“Environment variables”](#) on page 346).

## Exploring the GenWQE setup

---

You might want to ensure that your GenWQE setup works as intended.

- [“Listing your GenWQE accelerator cards”](#) on page 348
- [“Checking the GenWQE device driver setup”](#) on page 349
- [“Confirming that the accelerator hardware can be reached”](#) on page 349

## Listing your GenWQE accelerator cards

Use the **lspci** command to list the available GenWQE accelerator cards.

### Procedure

1. Issue the **lspci** command and look for GenWQE.

#### Example:

```
# lspci |grep GenWQE
0002:00:00.0 Processing accelerators: IBM GenWQE Accelerator Adapter
```

2. Issue the **lspci** command with the verbose option to display details about a particular card.

#### Example:



```
# lspci -vs 0002:00:00.0
0002:00:00.0 Processing accelerators: IBM GenWQE Accelerator Adapter
Subsystem: IBM GenWQE Accelerator Adapter
Physical Slot: 000000ff
Flags: bus master, fast devsel, latency 0, IRQ 3
Memory at 8002000000000000 (64-bit, prefetchable) [disabled] [size=128M]
Capabilities: [50] MSI: Enable+ Count=1/1 Maskable- 64bit+
Capabilities: [80] Express Endpoint, MSI 00
Capabilities: [100] Alternative Routing-ID Interpretation (ARI)
Kernel driver in use: genwqe
Kernel modules: genwqe_card
```

## Checking the GenWQE device driver setup

Perform these tasks if GenWQE does not work as expected.

### Procedure

1. Confirm that the device driver is loaded.

```
# lsmod | grep genwqe
genwqe_card 88997 0
crc_itu_t 1910 1 genwqe_card
```

If the `genwqe_card` module is not listed in the command output, load it with **modprobe**.

```
# modprobe genwqe_card
```

The `genwqe_card` module does not have module parameters.

2. Confirm that GenWQE device nodes exist and that the nodes have the required permissions.

The nodes must grant read and write permissions to all users, for example:

```
# ls -l /dev/genwqe*
crw-rw-rw 1 root root 249, 0 Jun 30 10:01 /dev/genwqe0_card
crw-rw-rw 1 root root 248, 0 Jun 30 10:01 /dev/genwqe1_card
```

If the permissions are not `crw-rw-rw`, create a file `/etc/udev/rules.d/52-genwqedevice.rules` with this rule as its content:

```
KERNEL=="genwqe*", MODE="0666"
```

The new rule takes effect next time the GenWQE device driver is loaded.

**Tip:** Use the **chmod** command to temporarily set the permissions.

### What to do next

You can find debug information in the Linux source tree at `/sys/kernel/debug/genwqe` and at `/sys/class/genwqe`.

## Confirming that the accelerator hardware can be reached

The **genwqe\_echo** command is similar to a **ping** command.

### Before you begin

The **genwqe\_echo** command is included in the `genwqe-tools` RPM (see [“Installing the GenWQE hardware-accelerated zlib”](#) on page 345).

### Procedure

Issue a command of this form to confirm that you can reach the accelerator hardware.

```
# genwqe_echo -AGENWQE -C <n> -c <m>
```

In the command, *<n>* is the index number of the card and *<m>* is a positive integer that specifies how many requests are sent to the card. The `-AGENWQE` parameter ensures that the correct, PCIe-attached, accelerator card is used.

**Example:** The following command sends four requests to the card with device node `/dev/genwqe1_card`:

```
# genwqe_echo -AGENWQE -C 1 -c 4
1 x 33 bytes from UNIT #1: echo_req time=37.0 usec
1 x 33 bytes from UNIT #1: echo_req time=19.0 usec
1 x 33 bytes from UNIT #1: echo_req time=23.0 usec
1 x 33 bytes from UNIT #1: echo_req time=18.0 usec
--- UNIT #1 echo statistics ---
4 packets transmitted, 4 received, 0 lost, 0% packet loss
```

See the `genwqe_echo` man page for other command options.

## External programming interfaces

---

The GenWQE hardware-accelerated zlib implements a large subset of the original software zlib.

For information about programming against the GenWQE hardware-accelerated zlib, see the section about implemented zlib functions in *Accelerated Data Compressing using the GenWQE Linux Driver and Corsica FPGA PCIe card*.

To obtain this document, go to the developerWorks® website at [www.ibm.com/developerworks/community/files/app](http://www.ibm.com/developerworks/community/files/app) and search for "genwqe".

## Chapter 32. PCI Express support

The Peripheral Component Interconnect Express (PCIe) device driver supports various PCI devices, including but not limited to devices that implement the SMC network protocol. For more information about RoCE, see [Chapter 21, “RDMA over Converged Ethernet,”](#) on page 305. For more information about ISM, see [Chapter 22, “Internal shared memory device driver,”](#) on page 307.

PCIe functions are seen by Linux as devices, hence devices is used here synonymously. You can assign PCIe devices to LPARs in the IOCDs.

Linux supports UUIDs as persistent identifiers for PCI functions. Provide UUIDs for required PCI functions in the hardware configuration (IOCDs). The LPAR needs to be enabled for UUID checking. UUIDs are unique hexadecimal values in the range 1 - FFFF. For example, with a UUID of 0x318, the function address would be: 0318:00:00.0.


### Setting up the PCIe support

Configure the PCIe support through the `pci=` kernel parameter.

PCIe devices are automatically configured during the system boot process. In contrast to most IBM Z devices, all PCIe devices that are in a configured state are automatically set online. PCIe devices that are in stand-by state are not automatically enabled.

Scanning of PCIe devices is enabled by default. To disable use of PCI devices, set the kernel command line parameter **`pci=off`**.

#### PCI kernel parameter syntax



where:

#### **off**

disables automatic scanning of PCIe devices.

#### **on**

enables automatic scanning of PCIe devices (default).



**Attention:** Other PCI kernel parameters do not apply to IBM Z and might have adverse effects on your system.

#### **Example**

The following kernel parameter enables automatic scanning of PCIe devices.

```
pci=on
```

### | Using PCIe hotplug on LPAR

Use PCIe hotplug to change the availability of a shared PCIe device.

## About this task

Only one LPAR can access a PCIe device. Other LPARs can be candidates for access. Use the HMC or SE to define which LPAR is connected and which LPARs are on the candidate list. A PCIe device that is defined, but not yet used, is shown as a PCIe slot in Linux.

On Linux, you use the `power` sysfs attribute of a PCIe slot to connect the device to the LPAR where Linux runs. While a PCIe device is connected to one LPAR, it is in the reserved state for all other LPARs that are in the candidates list. A reserved PCIe device is invisible to the operating system. The slot is removed from sysfs.

## Procedure

The `power` attribute of a slot contains 0 if a PCIe device is in stand-by state, or 1 if the device is configured and usable.

1. Locate the slot for the card you want to work with.

To locate the slot, read the `function_id` attribute of the PCIe device from sysfs.

For example, to read the `/sys/bus/pci/devices/0000:00:00.0/function_id` issue:

```
# cat /sys/bus/pci/devices/0000:00:00.0/function_id
0x00000011
```

where 00000011 is the slot. Alternatively, you can use the **lspci -v** command to find the slot.

2. Write the value that you want to the `power` attribute:

- Write 1 to `power` to connect the PCIe device to the LPAR in which your Linux instance is running. Linux automatically scans the device, registers it, and brings it online. For example:

```
echo 1 > /sys/bus/pci/slots/00000011/power
```

- Write 0 to `power` to stop using the PCIe device. The device state changes to stand-by. The PCIe device is set offline automatically. For example:

```
echo 0 > /sys/bus/pci/slots/00000011/power
```

A PCIe device in standby is also in the standby state to all other LPARs in the candidates list. A standby PCIe device appears as a slot, but without a PCIe device.

## Recovering a PCIe device

Use the `recover` sysfs attribute to recover a PCIe device.

## About this task

A message is displayed when a PCIe device enters the error state. It is not possible to automatically relieve the PCIe device from this state.

## Procedure

1. Find the PCIe device directory in sysfs.

PCIe device directories are of the form `/sys/devices/pci<dev>` where `<dev>` is the device ID.

For example: `/sys/devices/pci0000:00/0000:00:00.0/`.

2. Write 1 to the `recover` attribute of the PCIe device.

For example:

```
# echo 1 > /sys/devices/pci0000:00/0000:00:00.0/recover
```

After a successful recovery, the PCI device is de-registered and reprobbed.

## Reporting defective PCIe devices

For Linux in LPAR mode or Linux on z/VM, use the **zpcictl** command to report defective PCIe devices to the support element (SE). Such devices might require physical repair actions.

### Before you begin

- You need to know the function address of the defective PCIe device or a device node that represents the device.
- To send diagnostic data with the error report you need to install the `smartmontools` package. Whether data is collected and which data is available depends on the PCI device type. For example, S.M.A.R.T. data is gathered for NVMe devices.

### Procedure

Issue a command of this form to report a device with function address `0000:00:00.0` to the SE:

```
# zpcictl --report-error <device>
```

where *<device>* is the device's function address or a device node that represents the device..

### Example:

```
# zpcictl --report-error 0000:00:00.0
```

## Displaying PCIe information

To display information about PCIe devices, read the attributes of the devices in sysfs.

### About this task

The sysfs representation of a PCIe device or slot is a directory of the form `/sys/devices/pci<device_bus_id>/<device_bus_id>`, where *<device\_bus\_id>* is the bus ID of the PCIe device. This sysfs directory contains a number of attributes with information about the PCIe device.

Table 47. Read-only attributes with PCIe device information

Attribute	Explanation
function_handle	Eight-character, hexadecimal PCI-function (device) handle.
function_id	Eight-character, hexadecimal PCI-function (device) ID. The ID identifies the PCIe device within the processor configuration.
pchid	Four-character, hexadecimal, physical channel ID. Specifies the slot of the PCIe adapter in the I/O drawer. Thus identifies the adapter that provides the device.
pfgid	Two-character, hexadecimal, physical function group ID.
pfp/segment0 /segment1 /segment2 /segment3	Two-character, hexadecimal, PCI-function internal path. Provides an abstract indication of the path that is used to access the PCI function. This can be used to compare the paths used by two or more PCI functions, to give an indication of the degree of isolation between them.
uid	Up to eight-character, hexadecimal, user-defined identifier.

Table 47. Read-only attributes with PCIe device information (continued)

Attribute	Explanation
vfn	Four-character, hexadecimal, virtual function number. If an adapter, identified by its PCHID, supports more than one PCI function, the VFN uniquely identifies the instance of that function within the adapter.
util_string	Type-specific information about the device. For RoCE devices and ISM devices, it contains the PNET ID if a PNET ID has been assigned in the I/O configuration.

### Procedure

Issue a command of this form to read an attribute:

```
# cat /sys/devices/pci<device_bus_id>/<device_bus_id>/<attribute>
```

where *<attribute>* is one of the attributes of [Table 47 on page 353](#).

## Reading statistics for a PCIe device

Use the statistics attribute file to see measurement data for a PCIe device.

### About this task

All PCIe devices collect measurement data by default. You can read the data in a sysfs attribute file in the debug file system, by default mounted at `/sys/kernel/debug`.

You can turn data collection on and off. To switch off measurement data collecting for the current session, write "0" to the statistics attribute. To enable data collection again, write "1" to the statistics attribute.

### Example

To read measurement data for a (RoCE) function named 0000:00:00.0 use:

```
# cat /sys/kernel/debug/pci/0000:00:00.0/statistics
```

The statistics attribute file might look similar to this example:

```
FMB @ 0000000078cd8000
Update interval: 4000 ms
Samples: 14373
Last update TOD: cefa44fa50006378
  Load operations:      1002780
  Store operations:     1950622
Store block operations: 0
  Refresh operations:   0
  Received bytes:       0
  Received packets:     0
  Transmitted bytes:    0
  Transmitted packets:  0
  Allocated pages:      9104
  Mapped pages:         16633
  Unmapped pages:       2337
```

---

## Part 6. z/VM virtual server integration

**I z/VM only:** This part applies to Linux on z/VM only.

These device drivers and features help you to effectively run and manage a z/VM-based virtual Linux server farm.

### **Newest version**

You can find the newest version of this book at  
[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at  
[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)





## Chapter 33. z/VM concepts

**z/VM only:** This chapter applies to Linux on z/VM only.

The z/VM performance monitoring and cooperative memory management concepts help you to understand how the different components interact with Linux.

### Performance monitoring for z/VM guest virtual machines


You can monitor the performance of z/VM guest virtual machines and their guest operating systems with performance monitoring tools on z/VM or on Linux.

These tools can be your own, IBM tools such as the Performance Toolkit for VM, or third-party tools. The guests being monitored require agents that write monitor data.

#### Monitoring on z/VM

z/VM monitoring tools must read performance data. For monitoring Linux instances, this data is APPLDATA monitor records.

Linux instances must write these records for the tool to read, as shown in [Figure 75 on page 357](#).

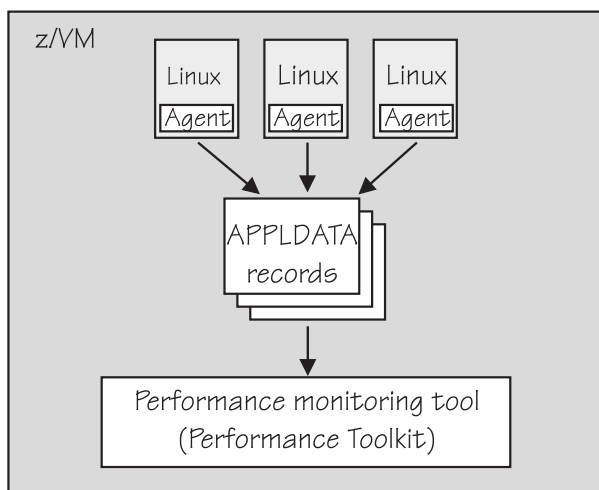

*Figure 75. Linux instances write APPLDATA records for performance monitoring tools*

Both user space applications and the Linux kernel can write performance data to APPLDATA records. Applications use the monwriter device driver to write APPLDATA records. The Linux kernel can be configured to collect system level data such as memory, CPU usage, and network-related data, and write it to data records.

For file system size data, there is a command, **mon\_fsstatd**. This user space tool uses the monwriter device driver to write file system size information as defined records.

For process data, there is a command, **mon\_procd**. This user space tool uses the monwriter device driver to write system information as defined records.

In summary, Red Hat Enterprise Linux 8.1 for Z supports writing and collecting performance data as follows:

- The Linux kernel can write z/VM monitor data for Linux instances, see [Chapter 34, “Writing kernel APPLDATA records,”](#) on page 361.
- Linux applications that run on z/VM guests can write z/VM monitor data, see [Chapter 35, “Writing z/VM monitor records,”](#) on page 367.

- You can collect monitor file system size information, see [“mon\\_fsstatd – Monitor z/VM guest file system size”](#) on page 612.
- You can collect system information about up to 100 concurrently running processes, see [“mon\\_procd – Monitor Linux on z/VM”](#) on page 616.

## Monitoring on Linux

A Linux instance can read the monitor data by using the monreader device driver.

Figure 76 on page 358 illustrates a Linux instance that is set up to read the monitor data. You can use an existing monitoring tool or write your own software.

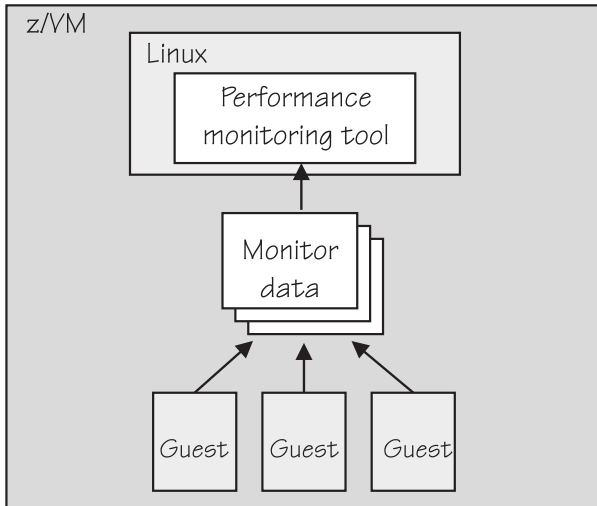


Figure 76. Performance monitoring using monitor DCSS data

In summary, Red Hat Enterprise Linux 8.1 for Z supports reading performance data in the form of read access to z/VM monitor data for Linux instances. See [Chapter 36, “Reading z/VM monitor records,”](#) on page 371 or more details.

## Further information

Several z/VM publications include information about monitoring.

- See *z/VM: Getting Started with Linux on System z*, SC24-6287, the chapter about monitoring performance for information about using the CP Monitor and the Performance Toolkit for VM.
- See *z/VM: Saved Segments Planning and Administration*, SC24-6322 for general information about DCSSs (z/VM keeps monitor records in a DCSS).
- See *z/VM: Performance*, SC24-6301 for information about creating a monitor DCSS.
- See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the CP commands that are used in the context of DCSSs and for controlling the z/VM monitor system service.
- For the layout of the monitor records, see [Chapter 34, “Writing kernel APPLDATA records,”](#) on page 361 and visit

[www.ibm.com/vm/pubs/ctlblk.html](http://www.ibm.com/vm/pubs/ctlblk.html)

- For more information about performance monitoring on z/VM, visit

[www.ibm.com/vm/perf](http://www.ibm.com/vm/perf)

## Cooperative memory management background

Cooperative memory management (CMM, or "cmm1") dynamically adjusts the memory available to Linux.

For information about setting up CMM, see [Chapter 42, “Cooperative memory management,”](#) on page 401.

In a virtualized environment it is common practice to give the virtual machines more memory than is actually available to the hypervisor. Linux tends to use all of its available memory. As a result, the hypervisor (z/VM) might start swapping.

To avoid excessive z/VM swapping, the memory available to Linux can be reduced. CMM allocates pages to page pools that make the pages unusable to Linux. There are two such page pools as shown in [Figure 77 on page 359](#).

z/VM memory

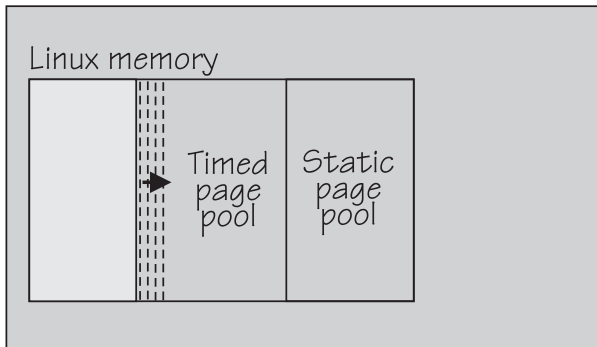


Figure 77. Page pools

There are two page pools:

#### A static page pool

The page pool is controlled by a resource manager that changes the pool size at intervals according to guest activity and overall memory usage on z/VM (see [Figure 78 on page 359](#)).

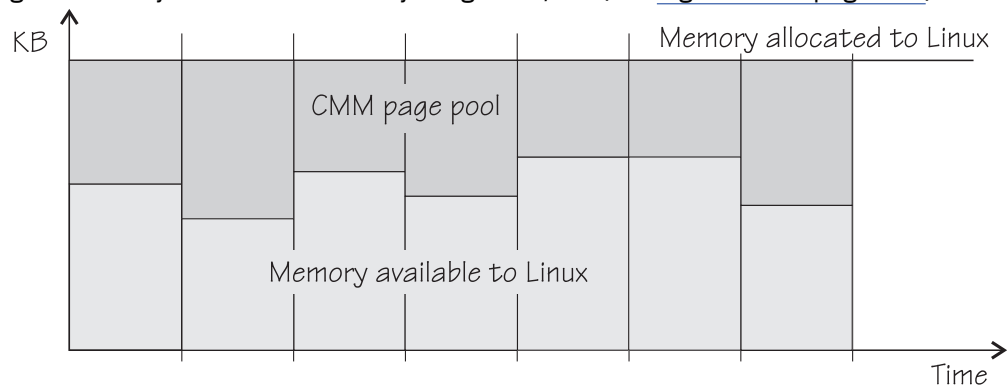


Figure 78. Static page pool

#### A timed page pool

Pages are released from this pool at a speed that is set in the *release rate* (see [Figure 79 on page 360](#)). According to guest activity and overall memory usage on z/VM, a resource manager adds pages at intervals. If no pages are added and the release rate is not zero, the pool empties.

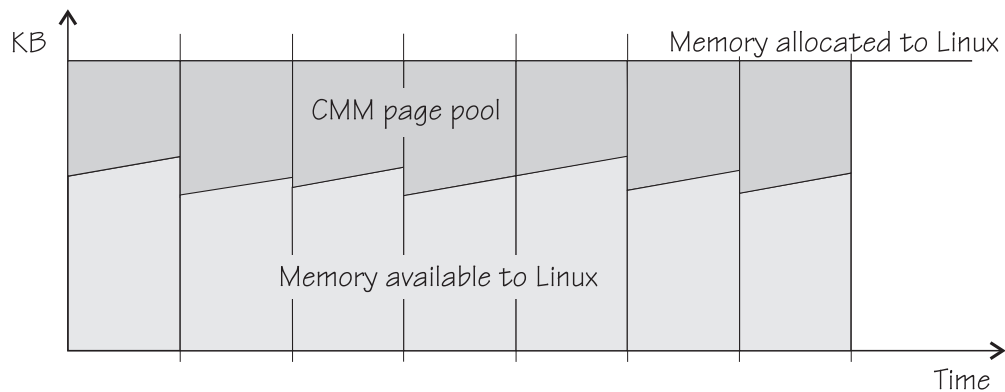


Figure 79. Timed page pool

The external resource manager that controls the pools can be the z/VM resource monitor (VMRM) or a third-party systems management tool.

VMRM controls the pools over a message interface. Setting up the external resource manager is beyond the scope of this information. For more details, see the chapter on VMRM in *z/VM: Performance*, SC24-6301.

Third-party tools can provide a Linux daemon that receives commands for the memory allocation through TCP/IP. The daemon, in turn, uses the procfs-based interface. You can use the procfs interface to read the pool sizes. These values are useful diagnostic data.

## Linux guest relocation

Information about guest relocations is stored in the s390 debug feature (s390dbf).

You can access this information in a kernel dump or from a running Linux instance. For more information, see *Troubleshooting*, SC34-2612.

---

## Chapter 34. Writing kernel APPLDATA records

**z/VM only:** APPLDATA records apply to Linux on z/VM only.

z/VM is a convenient point for collecting z/VM guest performance data and statistics for an entire server farm. Linux instances can export such data to z/VM by using APPLDATA monitor records.

z/VM regularly collects these records. The records are then available to z/VM performance monitoring tools.

A virtual CPU timer on the Linux instance to be monitored controls when data is collected. The timer accounts for only busy time to avoid unnecessarily waking up an idle guest. The APPLDATA record support comprises several modules. A base module provides an intra-kernel interface and the timer function. The intra-kernel interface is used by *data gathering modules* that collect actual data and determine the layout of a corresponding APPLDATA monitor record (see [“APPLDATA monitor record layout”](#) on page 363).

For an overview of performance monitoring support, see [“Performance monitoring for z/VM guest virtual machines”](#) on page 357.

---


### Setting up the APPLDATA record support

You must enable your z/VM guest virtual machine for data gathering and load the APPLDATA record support modules.

#### Procedure

1. On z/VM, ensure that the user directory of the guest virtual machine includes the option APPLMON.
2. On Linux, use the **modprobe** command to load any required modules.

#### APPLDATA record support module parameter syntax

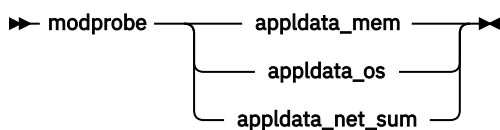

where **appldata\_mem**, **appldata\_os**, and **appldata\_net\_sum** are the modules for gathering memory-related data, operating system-related data, and network-related data.

See the **modprobe** man page for command details.

---

### Generating APPLDATA monitor records

You can set the timer interval and enable or disable data collection.

You control the monitor stream support through the **procfs**. APPLDATA monitor records are produced if both a particular data gathering module and the monitoring support in general are enabled.

#### Enabling or disabling the support

Use the **procfs** **timer** attribute to enable or disable the monitoring support.

#### Procedure

To read the current setting, issue:

```
# cat /proc/sys/appldata/timer
```

To enable the monitoring support issue:

```
# echo 1 > /proc/sys/appldata/timer
```

To disable the monitoring support issue:

```
# echo 0 > /proc/sys/appldata/timer
```

## Activating or deactivating individual data-gathering modules

Each data-gathering module has a procfs entry that contains a value 1 if the module is active and 0 if the module is inactive.

### About this task

The following procfs entries control the data-gathering modules:

/proc/sys/appldata/mem for the memory data-gathering module

/proc/sys/appldata/os for the CPU data-gathering module

/proc/sys/appldata/net\_sum for the net data-gathering module

To check whether a module is active look at the content of the corresponding procfs entry.

### Procedure

Issue a command of this form:

```
# echo <flag> > /proc/sys/appldata/<data_type>
```

where *<data\_type>* is one of mem, os, or net\_sum.

**Note:** An active data-gathering module produces APPLDATA monitor records only if the monitoring support is enabled (see [“Enabling or disabling the support” on page 361](#)).

### Example

To find out whether memory data-gathering is active, issue:

```
# cat /proc/sys/appldata/mem
0
```

In the example, memory data-gathering is off. To activate memory data-gathering, issue:

```
# echo 1 > /proc/sys/appldata/mem
```

To deactivate the memory data-gathering module, issue:

```
# echo 0 > /proc/sys/appldata/mem
```

## Setting the sampling interval

You can set the time that lapses between consecutive data samples.

### About this task

The time that you set is measured by the virtual CPU timer. Because the virtual timer slows down as the guest idles, the sampling interval in real time can be considerably longer than the value you set.

The value in `/proc/sys/appldata/interval` is the sample interval in milliseconds. The default sample interval is 10 000 ms.

### Procedure

To read the current value, issue:

```
# cat /proc/sys/appldata/interval
```

To set the sample interval to a different value, write the new value (in milliseconds) to `/proc/sys/appldata/interval`. Issue a command of this form:

```
# echo <interval> > /proc/sys/appldata/interval
```

where `<interval>` is the new sample interval in milliseconds. The specification must be in the range 1 - 2147483647, where  $2,147,483,647 = 2^{31} - 1$ .

### Example

To set the sampling interval to 20 s (20000 ms), issue:

```
# echo 20000 > /proc/sys/appldata/interval
```

## APPLDATA monitor record layout

Each of the data gathering modules writes a different type of record.

- Memory data (see Table 48 on page 363)
- Processor data (see Table 49 on page 364)
- Networking (see Table 50 on page 365)

z/VM can identify the records by their unique product ID. The product ID is an EBCDIC string of this form: "LINUXKRNL<record ID>260100". The `<record ID>` is treated as a byte value, not a string.

The records contain data of the following types:

#### u32

unsigned 4 byte integer

#### u64

unsigned 8 byte integer

Table 48. APPLDATA_MEM_DATA record (Record ID 0x01)				
Offset (Decimal)	Offset (Hex)	Type	Name	Description
0	0x0	u64	timestamp	TOD time stamp that is generated on the Linux side after record update
8	0x8	u32	sync_count_1	After z/VM collected the record data, sync_count_1 and sync_count_2 must be the same. Otherwise, the record was updated on the Linux side while z/VM was collecting the data. As a result, the data might be inconsistent.
12	0xC	u32	sync_count_2	
16	0x10	u64	pgpgin	Data that was read from disk (in KB)
24	0x18	u64	pgpgout	Data that was written to disk (in KB)
32	0x20	u64	pswpin	Pages that were swapped in

Table 48. APPLDATA\_MEM\_DATA record (Record ID 0x01) (continued)

Offset (Decimal)	Offset (Hex)	Type	Name	Description
40	0x28	u64	pswpout	Pages that were swapped out
48	0x30	u64	sharedram	Shared RAM in KB, set to 0
56	0x38	u64	totalram	Total usable main memory size in KB
64	0x40	u64	freeram	Available memory size in KB
72	0x48	u64	totalhigh	Total high memory size in KB
80	0x50	u64	freehigh	Available high memory size in KB
88	0x58	u64	bufferram	Memory that was reserved for raw disk blocks, corresponding to "Buffers" from /proc/meminfo, in KB
96	0x60	u64	cached	Size of used cache, including "Cached" and "SwapCached" from /proc/meminfo, in KB
104	0x68	u64	totalswap	Total swap space size in KB
112	0x70	u64	freeswap	Free swap space in KB
120	0x78	u64	pgalloc	Page allocations
128	0x80	u64	pgfault	Page faults (major+minor)
136	0x88	u64	pgmajfault	Page faults (major only)

Table 49. APPLDATA\_OS\_DATA record (Record ID 0x02)

Offset (Decimal)	Offset (Hex)	Type (size)	Name	Description
0	0x0	u64	timestamp	TOD time stamp that is generated on the Linux side after record update
8	0x8	u32	sync_count_1	After z/VM collected the record data, sync_count_1 and sync_count_2 must be the same. Otherwise, the record was updated on the Linux side while z/VM was collecting the data. As a result, the data might be inconsistent.
12	0xC	u32	sync_count_2	See sync_count_1.
16	0x10	u32	nr_cpus	Number of virtual CPUs.
20	0x14	u32	per_cpu_size	Size of the per_cpu_data for each CPU (= 36).
24	0x18	u32	cpu_offset	Offset of the first per_cpu_data (= 52).
28	0x1C	u32	nr_running	Number of runnable threads.
32	0x20	u32	nr_threads	Number of threads.
36	0x24	3 × u32	avenrun[3]	Average number of running processes during the last 1 (1st value), 5 (2nd value) and 15 (3rd value) minutes. These values are "fake fix-point", each value is composed of a 10-bit integer and an 11-bit fractional part. See note "1" on page 365 at the end of this table.



Table 49. APPLDATA\_OS\_DATA record (Record ID 0x02) (continued)

Offset (Decimal)	Offset (Hex)	Type (size)	Name	Description
48	0x30	u32	nr_iowait	Number of blocked threads (waiting for I/O).
52	0x34	See note “2” on page 365.	per_cpu_data	Time that is spent in user, kernel, idle, nice, etc for every CPU. See note “3” on page 365 at the end of this table.
52	0x34	u32	per_cpu_user	Timer ticks that were spent in user mode.
56	0x38	u32	per_cpu_nice	Timer ticks that were spent with modified priority.
60	0x3C	u32	per_cpu_system	Timer ticks that were spent in kernel mode.
64	0x40	u32	per_cpu_idle	Timer ticks that were spent in idle mode.
68	0x44	u32	per_cpu_irq	Timer ticks that were spent in interrupts.
72	0x48	u32	per_cpu_softirq	Timer ticks that were spent in softirqs.
76	0x4C	u32	per_cpu_iowait	Timer ticks that were spent while waiting for I/O.
80	0x50	u32	per_cpu_steal	Timer ticks "stolen" by hypervisor.
84	0x54	u32	cpu_id	The number of this CPU.

**Note:**

1. The following C-Macros are used inside Linux to transform these into values with two decimal places:

```
#define LOAD_INT(x) ((x) >> 11)
#define LOAD_FRAC(x) LOAD_INT(((x) & ((1 << 11) - 1)) * 100)
```

2. nr\_cpus \* per\_cpu\_size
3. per\_cpu\_user through cpu\_id are repeated for each CPU

Table 50. APPLDATA\_NET\_SUM\_DATA record (Record ID 0x03)

Offset (Decimal)	Offset (Hex)	Type	Name	Description
0	0x0	u64	timestamp	TOD time stamp that is generated on the Linux side after record update
8	0x8	u32	sync_count_1	After z/VM collected the record data, sync_count_1 and sync_count_2 must be the same. Otherwise, the record was updated on the Linux side while z/VM was collecting the data. As a result, the data might be inconsistent.
12	0xC	u32	sync_count_2	See sync_count_1.
16	0x10	u32	nr_interfaces	Number of interfaces being monitored
20	0x14	u32	padding	Unused. The next value is 64-bit aligned, so these 4 byte would be padded out by compiler
24	0x18	u64	rx_packets	Total packets that were received
32	0x20	u64	tx_packets	Total packets that were transmitted

Table 50. APPLDATA\_NET\_SUM\_DATA record (Record ID 0x03) (continued)

Offset (Decimal)	Offset (Hex)	Type	Name	Description
40	0x28	u64	rx_bytes	Total bytes that were received
48	0x30	u64	tx_bytes	Total bytes that were transmitted
56	0x38	u64	rx_errors	Number of bad packets that were received
64	0x40	u64	tx_errors	Number of packet transmit problems
72	0x48	u64	rx_dropped	Number of incoming packets that were dropped because of insufficient space in Linux buffers
80	0x50	u64	tx_dropped	Number of outgoing packets that were dropped because of insufficient space in Linux buffers
88	0x58	u64	collisions	Number of collisions while transmitting

## Programming interfaces

The monitor stream support base module exports two functions.

**Application programmers:** This information is intended for those who want to program against the monitor stream.

- `appldata_register_ops()` to register data-gathering modules
- `appldata_unregister_ops()` to undo the registration of data-gathering modules

Both functions receive a pointer to a struct `appldata_ops` as parameter. Additional data-gathering modules that want to plug into the base module must provide this data structure. You can find the definition of the structure and the functions in `arch/s390/appldata/appldata.h` in the Linux source tree.

See “APPLDATA monitor record layout” on page 363 for an example of APPLDATA data records that are to be sent to z/VM.

**Tip:** Include the timestamp, `sync_count_1`, and `sync_count_2` fields at the beginning of the record as shown for the existing APPLDATA record formats.

## Chapter 35. Writing z/VM monitor records

**z/VM only:** z/VM monitor records apply to Linux on z/VM only.

Applications can use the monitor stream application device driver to write z/VM monitor APPLDATA records to the z/VM \*MONITOR stream.

For an overview of performance monitoring support, see [“Performance monitoring for z/VM guest virtual machines”](#) on page 357.

The monitor stream application device driver interacts with the z/VM monitor APPLDATA facilities for performance monitoring. A better understanding of these z/VM facilities might help when you are using this device driver. See *z/VM: Performance*, SC24-6301 for information about monitor APPLDATA.

The monitor stream application device driver provides the following functions:

- An interface to the z/VM monitor stream.
- A means of writing z/VM monitor APPLDATA records.


### Setting up the z/VM \*MONITOR record writer device driver

You must load the monwriter module on Linux and set up your guest virtual machine for monitor records on z/VM.

#### Module parameters

You can configure the monitor stream application device driver when you are loading the device driver module, monwriter.

#### Monitor stream application device driver module parameter syntax



where *<numbufs>* is the maximum number of monitor sample and configuration data buffers that can exist in the Linux guest at one time. The default is 255.

#### Example

To load the monwriter module and set the maximum number of buffers to 400, use the following command:

```
# modprobe monwriter max_bufs=400
```

### Setting up the z/VM guest virtual machine

You must enable your z/VM guest virtual machine to write monitor records and configure the z/VM system to collect these records.

#### Procedure

Perform these steps:

1. Set this option in the z/VM user directory entry of the virtual machine in which the application that uses this device driver is to run:

- OPTION APPLMON

2. Issue the following CP commands to have CP collect the respective types of monitor data:

- MONITOR SAMPLE ENABLE APPLDATA ALL
- MONITOR EVENT ENABLE APPLDATA ALL

You can log in to the z/VM console to issue the CP commands. These commands must be preceded with #CP. Alternatively, you can use the **vmcp** command for issuing CP commands from your Linux instance.

See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the CP MONITOR command.

## Working with the z/VM \*MONITOR record writer

The monitor stream application device driver uses the z/VM CP instruction DIAG X'DC' to write to the z/VM monitor stream. Monitor data must be preceded by a data structure, `monwrite_hdr`.

See *z/VM: CP Programming Services*, SC24-6272 for more information about the DIAG X'DC' instruction and the different monitor record types (sample, config, event).

The application writes monitor data by passing a `monwrite_hdr` structure that is followed by monitor data. The only exception is the STOP function, which requires no monitor data. The `monwrite_hdr` structure, as described in `monwriter.h`, is filled in by the application. The structure includes the DIAG X'DC' function to be performed, the product identifier, the header length, and the data length.

All records that are written to the z/VM monitor stream begin with a product identifier. This device driver uses the product ID. The product ID is a 16-byte structure of the form `pppppppffnvvrrmm`, where:

**pppppppp**

is a fixed ASCII string, for example, LNXAPPL.

**ff**

is the application number (hexadecimal number). This number can be chosen by the application. You can reduce the chance of conflicts with other applications, by requesting an application number from the IBM z/VM Performance team at

[www.ibm.com/vm/perf](http://www.ibm.com/vm/perf)

**n**

is the record number as specified by the application

**vv, rr, and mm**

can also be specified by the application. A possible use is to specify version, release, and modification level information, allowing changes to a certain record number when the layout is changed, without changing the record number itself.

The first 7 bytes of the structure (LNXAPPL) are filled in by the device driver when it writes the monitor data record to the CP buffer. The last 9 bytes contain information that is supplied by the application on the `write()` call when writing the data.

The `monwrite_hdr` structure that must be written before any monitor record data is defined as follows:

```
/* the header the app uses in its write() data */
struct monwrite_hdr {
    unsigned char mon_function;
    unsigned short applid;
    unsigned char record_num;
    unsigned short version;
    unsigned short release;
    unsigned short mod_level;
    unsigned short datalen;
    unsigned char hdrlen;
} __attribute__((packed));
```

The following function code values are defined:

```
/* mon_function values */
#define MONWRITE_START_INTERVAL 0x00 /* start interval recording */
#define MONWRITE_STOP_INTERVAL 0x01 /* stop interval or config recording */
#define MONWRITE_GEN_EVENT 0x02 /* generate event record */
#define MONWRITE_START_CONFIG 0x03 /* start configuration recording */
```

## Writing data and stopping data writing

Applications use the `open()`, `write()`, and `close()` calls to work with the z/VM monitor stream.

Before an application can write monitor records, it must issue `open()` to open the device driver. Then, the application must issue `write()` calls to start or stop the collection of monitor data and to write any monitor records to buffers that CP can access.

When the application has finished writing monitor data, it must issue `close()` to close the device driver.

## Using the `monwrite_hdr` structure

The structure `monwrite_hdr` is used to pass DIAG x'DC' functions and the application-defined product information to the device driver on `write()` calls.

When the application calls `write()`, the data it is writing consists of one or more `monwrite_hdr` structures. Each structure is followed by monitor data. The only exception is the STOP function, which is not followed by data.

The application can write to one or more monitor buffers. A new buffer is created by the device driver for each record with a unique product identifier. To write new data to an existing buffer, an identical `monwrite_hdr` structure must precede the new data on the `write()` call.

The `monwrite_hdr` structure also includes a field for the header length, which is useful for calculating the data offset from the beginning of the header. There is also a field for the data length, which is the length of any monitor data that follows. See `/usr/include/asm/monwriter.h` for the definition of the `monwrite_hdr` structure.



---

## Chapter 36. Reading z/VM monitor records

**z/VM only:** z/VM monitor records apply to Linux on z/VM only.

Monitoring software on Linux can access z/VM guest data through the z/VM \*MONITOR record reader device driver.

z/VM uses the z/VM monitor system service (\*MONITOR) to collect monitor records from agents on its guests. z/VM writes the records to a discontinuous saved segment (DCSS). See *z/VM: Saved Segments Planning and Administration*, SC24-6322 for general information about DCSSs.

The z/VM \*MONITOR record reader device driver uses IUCV to connect to \*MONITOR and accesses the DCSS as a character device.

For an overview of performance monitoring support, see [“Performance monitoring for z/VM guest virtual machines”](#) on page 357.

The z/VM \*MONITOR record reader device driver supports the following devices and functions:

- Read access to the z/VM \*MONITOR DCSS.
- Reading \*MONITOR records for z/VM.
- Access to \*MONITOR records as described on

[www.ibm.com/vm/pubs/ctlblk.html](http://www.ibm.com/vm/pubs/ctlblk.html)

- Access to the kernel APPLDATA records from the Linux monitor stream (see [Chapter 34, “Writing kernel APPLDATA records,”](#) on page 361).

---

### What you should know about the z/VM \*MONITOR record reader device driver

The data that is collected by \*MONITOR depends on the setup of the monitor stream service.

The z/VM \*MONITOR record reader device driver only reads data from the monitor DCSS; it does not control the system service.

z/VM supports only one monitor DCSS. All monitoring software that requires monitor records from z/VM uses the same DCSS to read \*MONITOR data. Usually, a DCSS called MONDCSS is already defined and used by existing monitoring software.

If a monitor DCSS is already defined, you must use it. To find out whether a monitor DCSS exists, issue the following CP command from a z/VM guest virtual machine with privilege class E:

```
q monitor
```

The command output also shows the name of the DCSS.

#### Device node

Red Hat Enterprise Linux 8.1 creates a device node for you using udev. The device node is called `/dev/monreader` and is a miscellaneous character device that you can use to access the monitor DCSS.

#### Further information

- See *z/VM: Saved Segments Planning and Administration*, SC24-6322 for general information about DCSSs.
- See *z/VM: Performance*, SC24-6301 for information about creating a monitor DCSS.

- See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the CP commands that are used in the context of DCSSs and for controlling the z/VM monitor system service.
- For the layout of the monitor records, go to [www.ibm.com/vm/pubs/ctlblk.html](http://www.ibm.com/vm/pubs/ctlblk.html) and click the link to the monitor record format for your z/VM version. Also, see [Chapter 34, “Writing kernel APPLDATA records,”](#) on page 361.

## Setting up the z/VM \*MONITOR record reader device driver

You must set up Linux and the z/VM guest virtual machine for accessing an existing monitor DCSS with the z/VM \*MONITOR record reader device driver.

### Before you begin

Some of the CP commands you use for setting up the z/VM \*MONITOR record reader device driver require class E authorization.

Setting up the monitor system service and the monitor DCSS on z/VM is beyond the scope of this information. See *z/VM: Performance*, SC24-6301 for information about creating a monitor DCSS.

## Providing the required user directory entries for your z/VM guest

The z/VM guest where your Linux instance is to run must be permitted to establish an IUCV connection to the z/VM \*MONITOR system service.

### About this task

See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the CP commands that are used in the context of DCSSs and for controlling the z/VM monitor system service.

### Procedure

Ensure that the guest entry in the user directory includes the following statement:

```
IUCV *MONITOR
```

If the DCSS is restricted, you also need this statement:

```
NAMESAVE <dcss>
```

where <dcss> is the name of the DCSS that is used for the monitor records. You can find out the name of an existing monitor DCSS by issuing the following CP command from a z/VM guest virtual machine with privilege class E:

```
q monitor
```

## Assuring that the DCSS is addressable for your Linux instance

The DCSS address range must not overlap with the storage of your z/VM guest virtual machine.

### Procedure

To find out the start and end address of the DCSS, issue the following CP command from a z/VM guest virtual machine with privilege class E:

```
q nss map
```

The output gives you the start and end addresses of all defined DCSSs in units of 4-kilobyte pages. For example:



00:	FILE	FILENAME	FILETYPE	MINSIZE	BEGPAG	ENDPAG	TYPE	CL	#USERS	PARAMREGS	VMGROUP
00:	0011	MONDCSS	CPDCSS	N/A	09000	097FF	SC	R	00003	N/A	N/A

## What to do next

If the DCSS overlaps with the guest storage, follow the procedure in [“Avoiding overlaps with your guest storage”](#) on page 387.


## Specifying the monitor DCSS name

Specify the DCSS name as a module parameter when you load the module.

## About this task

By default, the z/VM \*MONITOR record reader device driver assumes that the monitor DCSS on z/VM is called MONDCSS. If you want to use a different DCSS name, you must specify it.

Load the monitor read support module with **modprobe** to assure that any other required modules are also loaded. You need IUCV support if you want to use the monitor read support.

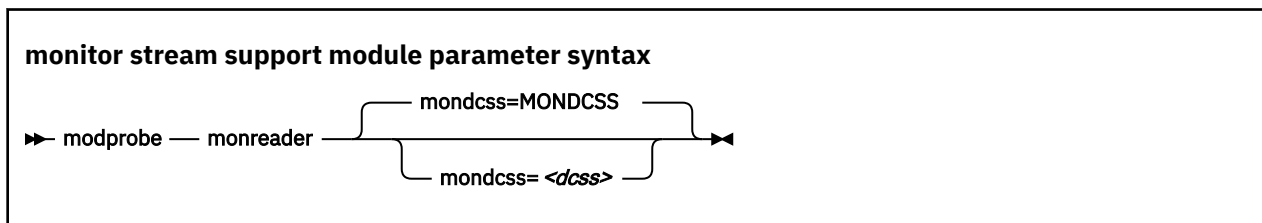

where <dcss> is the name of the DCSS that z/VM uses for the monitor records.

### Example

To load the monitor read support module and specify MYDCSS as the DCSS issue:

```
modprobe monreader mondcss=mydcss
```

## Working with the z/VM \*MONITOR record reader

You can open the z/VM \*MONITOR record character device to read records from it.

This section describes how to work with the monitor read support.

- [“Opening and closing the character device” on page 373](#)
- [“Reading monitor records” on page 374](#)

## Opening and closing the character device

Only one user can open the character device at any one time. Once you have opened the device, you must close it to make it accessible to other users.

### About this task

The open function can fail (return a negative value) with one of the following values for errno:

**EBUSY**

The device has already been opened by another user.

**EIO**

No IUCV connection to the z/VM MONITOR system service could be established. An error message with an IPUSER SEVER code is printed into syslog. See *z/VM: Performance*, SC24-6301 for details about the codes.

Once the device is opened, incoming messages are accepted and account for the message limit. If you keep the device open indefinitely, expect to eventually reach the message limit (with error code EOVERFLOW).

## Reading monitor records

You can either read in non-blocking mode with polling, or you can read in blocking mode without polling.

### About this task

Reading from the device provides a 12-byte monitor control element (MCE), followed by a set of one or more contiguous monitor records (similar to the output of the CMS utility MONWRITE without the 4 K control blocks). The MCE contains information about:

- The type of the following record set (sample/event data)
- The monitor domains contained within it
- The start and end address of the record set in the monitor DCSS

The start and end address can be used to determine the size of the record set. The end address is the address of the last byte of data. The start address is needed to handle "end-of-frame" records correctly (domain 1, record 13), that is, it can be used to determine the record start offset relative to a 4 K page (frame) boundary.

See "Appendix A: \*MONITOR" in *z/VM: Performance*, SC24-6301 for a description of the monitor control element layout. For the layout of the monitor records go to [www.ibm.com/vm/pubs/ctlblk.html](http://www.ibm.com/vm/pubs/ctlblk.html) and click the link to the monitor record format for your z/VM version. Also see [Chapter 34, "Writing kernel APPLDATA records,"](#) on page 361.

The layout of the data stream that is provided by the monreader device is as follows:

```
...
<0 byte read>
<first MCE>          \
<first set of records> |...      | - data set
...                  |
<last MCE>           /
<last set of records> /
<0 byte read>
...
```

There might be more than one combination of MCE and a corresponding record set within one data set. The end of each data set is indicated by a successful read with a return value of 0 (0 byte read). Received data is not to be considered valid unless a complete record set is read successfully, including the closing 0-Byte read. You are advised to always read the complete set into a user space buffer before processing the data.

When designing a buffer, allow for record sizes up to the size of the entire monitor DCSS, or use dynamic memory allocation. The size of the monitor DCSS will be printed into syslog after loading the module. You can also use the (Class E privileged) CP command Q **NSS MAP** to list all available segments and information about them (see ["Assuring that the DCSS is addressable for your Linux instance"](#) on page 372).

Error conditions are indicated by returning a negative value for the number of bytes read. For an error condition, the errno variable can be:

### EIO

Reply failed. All data that was read since the last successful read with 0 size is not valid. Data is missing. The application must decide whether to continue reading subsequent data or to exit.

### EFAULT

Copy to user failed. All data that was read since the last successful read with 0 size is not valid. Data is missing. The application must decide whether to continue reading subsequent data or to exit.

**EAGAIN**

Occurs on a non-blocking read if there is no data available at the moment. No data is missing or damaged. Retry or use polling for non-blocking reads.

**EOverflow**

The message limit is reached. The data that was read since the last successful read with 0 size is valid, but subsequent records might be missing. The application must decide whether to continue reading subsequent data or to exit.



# Chapter 37. z/VM recording device driver

- z/VM only:** The z/VM recording device driver applies to Linux on z/VM only.
- The z/VM recording device driver enables Linux on z/VM to read from the CP recording services and, thus, act as a z/VM wide control point.
- The z/VM recording device driver uses the z/VM CP RECORDING command to collect records and IUCV to transmit them to the Linux instance.
- For general information about CP recording system services, see *z/VM: CP Programming Services*, SC24-6272.

## Features

- With the z/VM recording device driver, you can read from several CP services and collect records.
- In particular, the z/VM recording device driver supports:
- Reading records from the CP error logging service, \*LOGREC.
  - Reading records from the CP accounting service, \*ACCOUNT.
  - Reading records from the CP diagnostic service, \*SYMPTOM.
  - Automatic and explicit record collection (see [“Starting and stopping record collection”](#) on page 378).

## What you should know about the z/VM recording device driver

- You can read records from different recording services, one record at a time.
- The z/VM recording device driver is a character device driver that is grouped under the IUCV category of device drivers (see [“Device categories”](#) on page 7). There is one device for each recording service. The devices are created for you when the z/VM recording device driver module is loaded.

### z/VM recording device nodes

- Each recording service has a name that corresponds to the name of the service.
- [Table 51 on page 377](#) summarizes the names:

Table 51. z/VM recording device names	
z/VM recording service	Standard device name
*LOGREC	logrec
*ACCOUNT	account
*SYMPTOM	symptom

### About records

- Records for different services are different in details, but follow the same overall structure.
- The read function returns one record at a time. If there is no record, the read function waits until a record becomes available.
- Each record begins with a 4-byte field that contains the length of the remaining record. The remaining record contains the binary z/VM data followed by the four bytes X'454f5200' to mark the end of the record. These bytes build the zero-terminated ASCII string "EOR", which is useful as an eye catcher.

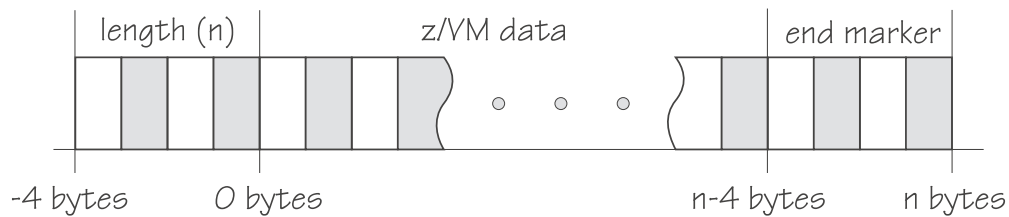


Figure 80. Record structure

Figure 80 on page 378 illustrates the structure of a complete record as returned by the device. If the buffer assigned to the read function is smaller than the overall record size, multiple reads are required to obtain the complete record.

The format of the z/VM data (\*LOGREC) depends on the record type that is described in the common header for error records HDRREC.

For more information about the z/VM record layout, see the *CMS and CP Data Areas and Control Blocks* documentation at

[www.ibm.com/vm/pubs/ctlblk.html](http://www.ibm.com/vm/pubs/ctlblk.html)

## Setting up the z/VM recording device driver

Before you can collect records, you must authorize your z/VM guest virtual machine and load the device driver module.

### Procedure

1. Authorize the z/VM guest virtual machine on which your Linux instance runs to:
  - Use the z/VM CP RECORDING command.
  - Connect to the IUCV services to be used: one or more of \*LOGREC, \*ACCOUNT, and \*SYMPTOM.
2. Load the z/VM recording device driver.

You must load the z/VM recording device driver module before you can work with z/VM recording devices. Load the `vmlogdr` module with the **modprobe** command to ensure that any other required modules are loaded in the correct order:

```
# modprobe vmlogdr
```

There are no module parameters for the z/VM recording device driver.

## Working with z/VM recording devices

Typical tasks that you perform with z/VM recording devices include starting and stopping record collection, purging records, and opening and closing devices.

- [“Starting and stopping record collection” on page 378](#)
- [“Purging existing records” on page 379](#)
- [“Querying the z/VM recording status” on page 380](#)
- [“Opening and closing devices” on page 381](#)

### Starting and stopping record collection

By default, record collection for a particular z/VM recording service begins when the corresponding device is opened and stops when the device is closed.

## About this task

You can use a device's autorecording attribute to be able to open and close a device without also starting or stopping record collection. You can use a device's recording attribute to start and stop record collection regardless of whether the device is opened or not.

You cannot start record collection if a device is open and records already exist. Before you can start record collection for an open device, you must read or purge any existing records for this device (see [“Purging existing records”](#) on page 379).

## Procedure

To be able to open a device without starting record collection and to close a device without stopping record collection, write 0 to the device's autorecording attribute.

To restore the automatic starting and stopping of record collection, write 1 to the device's autorecording attribute. Issue a command of this form:

```
# echo <flag> > /sys/bus/iucv/drivers/vmlogrdr/<device>/autorecording
```

where <flag> is either 0 or 1, and <device> is one of: logrec, symptom, or account.

To explicitly turn on record collection write 1 to the device's recording attribute. To explicitly turn off record collection write 0 to the device's recording attribute. Issue a command of this form:

```
# echo <flag> > /sys/bus/iucv/drivers/vmlogrdr/<device>/recording
```

where <flag> is either 0 or 1, and <device> is one of: logrec, symptom, or account.

You can read both the autorecording and the recording attribute to find the current settings.

## Examples

- In this example, first the current setting of the autorecording attribute of the logrec device is checked, then automatic recording is turned off:

```
# cat /sys/bus/iucv/drivers/vmlogrdr/logrec/autorecording
1
# echo 0 > /sys/bus/iucv/drivers/vmlogrdr/logrec/autorecording
```

- In this example record collection is started explicitly and later stopped for the account device:

```
# echo 1 > /sys/bus/iucv/drivers/vmlogrdr/account/recording
...
# echo 0 > /sys/bus/iucv/drivers/vmlogrdr/account/recording
```

To confirm whether recording is on or off, read the recording\_status attribute as described in [“Querying the z/VM recording status”](#) on page 380.

## Purging existing records

By default, existing records for a particular z/VM recording service are purged automatically when the corresponding device is opened or closed.

## About this task

You can use a device's autopurge attribute to prevent records from being purged when a device is opened or closed. You can use a device's purge attribute to purge records for a particular device at any time without having to open or close the device.

## Procedure

To be able to open or close a device without purging existing records write 0 to the device's autopurge attribute. To restore automatic purging of existing records, write 1 to the device's autopurge attribute. You can read the autopurge attribute to find the current setting. Issue a command of this form:

```
# echo <flag> > /sys/bus/iucv/drivers/vmlogrdr/<device>/autopurge
```

where <flag> is either 0 or 1, and <device> is one of: logrec, symptom, or account.

To purge existing records for a particular device without opening or closing the device, write 1 to the device's purge attribute. Issue a command of this form:

```
# echo 1 > /sys/bus/iucv/drivers/vmlogrdr/<device>/purge
```

where <device> is one of: logrec, symptom, or account.

## Examples

- In this example, the setting of the autopurge attribute for the logrec device is checked first, then automatic purging is switched off:

```
# cat /sys/bus/iucv/drivers/vmlogrdr/logrec/autopurge
1
# echo 0 > /sys/bus/iucv/drivers/vmlogrdr/logrec/autopurge
```

- In this example, the existing records for the symptom device are purged:

```
# echo 1 > /sys/bus/iucv/drivers/vmlogrdr/symptom/purge
```

## Querying the z/VM recording status

Use the `recording_status` attribute of the z/VM recording device driver representation in sysfs to query the z/VM recording status.

### Example

This example runs the z/VM CP command `QUERY RECORDING` and returns the complete output of that command. This list does not necessarily have an entry for all three services and there might also be entries for other guests.

```
# cat /sys/bus/iucv/drivers/vmlogrdr/recording_status
```

This command results in output similar to the following example:

RECORDING	COUNT	LMT	USERID	COMMUNICATION
EREP ON	00000000	002	EREP	ACTIVE
ACCOUNT ON	00001774	020	DISKACNT	INACTIVE
SYMPTOM ON	00000000	002	OPERSYMP	ACTIVE
ACCOUNT OFF	00000000	020	LINUX31	INACTIVE

where the lines represent:

- The service
- The recording status
- The number of queued records
- The number of records that result in a message to the operator
- The guest that is or was connected to that service and the status of that connection

A detailed description of the `QUERY RECORDING` command can be found in the *z/VM: CP Commands and Utilities Reference*, SC24-6268.



## Opening and closing devices

You can open, read, and release the device. You cannot open the device multiple times. Each time the device is opened it must be released before it can be opened again.

### About this task

You can use a device's autorecord attribute (see [“Starting and stopping record collection” on page 378](#)) to enable automatic record collection while a device is open.

You can use a device's autopurge attribute (see [“Purging existing records” on page 379](#)) to enable automatic purging of existing records when a device is opened and closed.

## Scenario: Connecting to the \*ACCOUNT service

A typical sequence of tasks is autorecording, turning autorecording off, purging records, and starting recording.

### Procedure

1. Query the status of z/VM recording. As root, issue the following command:

```
# cat /sys/bus/iucv/drivers/vmlogrd/r/recording_status
```

The results depend on the system, and look similar to the following example:

RECORDING	COUNT	LMT	USERID	COMMUNICATION
EREP ON	00000000	002	EREP	ACTIVE
ACCOUNT ON	00001812	020	DISKACNT	INACTIVE
SYMPTOM ON	00000000	002	OPERSYMP	ACTIVE
ACCOUNT OFF	00000000	020	LINUX31	INACTIVE

2. Open /dev/account with an appropriate application.

This action connects the guest to the \*ACCOUNT service and starts recording. The entry for \*ACCOUNT on guest LINUX31 changes to ACTIVE and ON:

```
# cat /sys/bus/iucv/drivers/vmlogrd/r/recording_status
```

RECORDING	COUNT	LMT	USERID	COMMUNICATION
EREP ON	00000000	002	EREP	ACTIVE
ACCOUNT ON	00001812	020	DISKACNT	INACTIVE
SYMPTOM ON	00000000	002	OPERSYMP	ACTIVE
ACCOUNT ON	00000000	020	LINUX31	ACTIVE

3. Switch autopurge and autorecord off:

```
# echo 0 > /sys/bus/iucv/drivers/vmlogrd/r/account/autopurge
```

```
# echo 0 > /sys/bus/iucv/drivers/vmlogrd/r/account/autorecording
```

4. Close the device by ending the application that reads from it and check the recording status.

While the connection is INACTIVE, RECORDING is still ON:

```
# cat /sys/bus/iucv/drivers/vmlogrd/r/recording_status
```

RECORDING	COUNT	LMT	USERID	COMMUNICATION
EREP ON	00000000	002	EREP	ACTIVE
ACCOUNT ON	00001812	020	DISKACNT	INACTIVE
SYMPTOM ON	00000000	002	OPERSYMP	ACTIVE
ACCOUNT ON	00000000	020	LINUX31	INACTIVE

5. The next status check shows that some event created records on the \*ACCOUNT queue:

```
# cat /sys/bus/iucv/drivers/vmlogrdr/recording_status
RECORDING      COUNT      LMT      USERID      COMMUNICATION
EREK ON        00000000  002      EREP        ACTIVE
ACCOUNT ON     00001821  020      DISKACNT    INACTIVE
SYMPTOM ON     00000000  002      OPERSYMP    ACTIVE
ACCOUNT ON     00000009  020      LINUX31     INACTIVE
```

6. Switch recording off:

```
# echo 0 > /sys/bus/iucv/drivers/vmlogrdr/account/recording
```

```
# cat /sys/bus/iucv/drivers/vmlogrdr/recording_status
RECORDING      COUNT      LMT      USERID      COMMUNICATION
EREK ON        00000000  002      EREP        ACTIVE
ACCOUNT ON     00001821  020      DISKACNT    INACTIVE
SYMPTOM ON     00000000  002      OPERSYMP    ACTIVE
ACCOUNT OFF    00000009  020      LINUX31     INACTIVE
```

7. Try to switch it on again, and check whether it worked by checking the recording status:

```
# echo 1 > /sys/bus/iucv/drivers/vmlogrdr/account/recording
```

```
# cat /sys/bus/iucv/drivers/vmlogrdr/recording_status
RECORDING      COUNT      LMT      USERID      COMMUNICATION
EREK ON        00000000  002      EREP        ACTIVE
ACCOUNT ON     00001821  020      DISKACNT    INACTIVE
SYMPTOM ON     00000000  002      OPERSYMP    ACTIVE
ACCOUNT OFF    00000009  020      LINUX31     INACTIVE
```

Recording did not start, in the message logs you might find a message:

```
vmlogrdr: recording response: HCPCRC8087I Records are queued for user LINUX31 on the
*ACCOUNT recording queue and must be purged or retrieved before recording can be turned on.
```

This kernel message has priority 'debug' so it might not be written to any of your log files.

8. Now remove all the records on your \*ACCOUNT queue either by starting an application that reads them from /dev/account or by explicitly purging them:

```
# echo 1 > /sys/bus/iucv/drivers/vmlogrdr/account/purge
```

```
# cat /sys/bus/iucv/drivers/vmlogrdr/recording_status
RECORDING      COUNT      LMT      USERID      COMMUNICATION
EREK ON        00000000  002      EREP        ACTIVE
ACCOUNT ON     00001821  020      DISKACNT    INACTIVE
SYMPTOM ON     00000000  002      OPERSYMP    ACTIVE
ACCOUNT OFF    00000000  020      LINUX31     INACTIVE
```

9. Now start recording and check status again:

```
# echo 1 > /sys/bus/iucv/drivers/vmlogrdr/account/recording
```

```
# cat /sys/bus/iucv/drivers/vmlogrdr/recording_status
RECORDING      COUNT      LMT      USERID      COMMUNICATION
EREK ON        00000000  002      EREP        ACTIVE
ACCOUNT ON     00001821  020      DISKACNT    INACTIVE
SYMPTOM ON     00000000  002      OPERSYMP    ACTIVE
ACCOUNT ON     00000000  020      LINUX31     INACTIVE
```

---

## Chapter 38. z/VM unit record device driver

**z/VM only:** The z/VM unit record device driver applies to Linux on z/VM only.

The z/VM unit record device driver provides Linux on z/VM with access to virtual unit record devices. Unit record devices comprise punch card readers, card punches, and line printers.

Linux access is limited to virtual unit record devices with default device types (2540 for reader and punch, 1403 for printer).

To write Linux files to the virtual punch or printer (that is, to the corresponding spool file queues) or to receive z/VM reader files (for example CONSOLE files) to Linux files, use the **vmur** command that is part of the s390utils RPM (see [“vmur - Work with z/VM spool file queues”](#) on page 653).

---

### What you should know about the z/VM unit record device driver

The z/VM unit record device driver is compiled as a separate module, vmur.

To load the vmur module automatically at boot time, see the section on persistent module loading in *Configuring basic system settings on Red Hat Enterprise Linux 8.1*

When the vmur module is loaded, it registers a character device. The following device nodes are created for a unit record device when it is set online:

- Reader: /dev/vmrdx-0.0.<device\_number>
- Punch: /dev/vmpun-0.0.<device\_number>
- Printer: /dev/vmprt-0.0.<device\_number>

---

### Working with z/VM unit record devices

After loading the vmur module, the required virtual unit record devices must be set online.

#### Procedure

Set the virtual unit record devices online.

For example, to set the devices with device bus-IDs 0.0.000c, 0.0.000d, and 0.0.000e online, issue:

```
# chzdev -e -a 0.0.000c-0.0.000e
```

Alternatively, use **chccwdev**:

```
# chccwdev -e 0.0.000c-0.0.000e
```

#### What to do next

You can now use the **vmur** command to work with the devices ([“vmur - Work with z/VM spool file queues”](#) on page 653).

If you want to unload the vmur module, close all unit record device nodes. Attempting to unload the module while a device node is open results in error message `Module vmur is in use`. You can unload the vmur module, for example, by issuing `modprobe -r`.

Serialization is implemented per device; only one process can open a particular device node at any one time.



---

## Chapter 39. z/VM DCSS device driver

**z/VM only:** The z/VM DCSS device driver applies to Linux on z/VM only.

The z/VM discontinuous saved segments (DCSS) device driver provides disk-like fixed block access to z/VM discontinuous saved segments.

In particular, the DCSS device driver facilitates implementing a read-write RAM disk that can be shared among multiple Linux instances that run as guests of the same z/VM system. For example, such a RAM disk can provide a shared file system.

For information about DCSS, see *z/VM: Saved Segments Planning and Administration*, SC24-6322

---

### What you should know about DCSS

The DCSS device names and nodes adhere to a naming scheme. There are different modes and options for mounting a DCSS.

**Important:** DCSSs occupy spool space. Be sure that you have enough spool space available (multiple times the DCSS size).

#### DCSS naming scheme

The standard device names are of the form `dcssblk<n>`, where `<n>` is the corresponding minor number.

The first DCSS device that is added is assigned the name `dcssblk0`, the second `dcssblk1`, and so on. When a DCSS device is removed, its device name and corresponding minor number are free and can be reassigned. A DCSS device that is added always receives the lowest free minor number.

#### DCSS device nodes

User space programs access DCSS devices by device nodes. Red Hat Enterprise Linux 8.1 creates standard DCSS device nodes for you.

Standard DCSS device nodes have the form `/dev/<device_name>`, for example:

```
/dev/dcssblk0
/dev/dcssblk1
...
```

#### Accessing a DCSS in exclusive-writable mode

You must access a DCSS in exclusive-writable mode, for example, to create or update the DCSS.

To access a DCSS in exclusive-writable mode at least one of the following conditions must apply:

- The DCSS fits below the maximum definable address space size of the z/VM guest virtual machine.

For large read-only DCSS, you can use suitable guest sizes to restrict exclusive-writable access to a specific z/VM guest virtual machine with a sufficient maximum definable address space size.

- The z/VM user directory entry for the z/VM guest virtual machine includes a NAMESAVE statement for the DCSS. See *z/VM: CP Planning and Administration*, SC24-6271 for more information about the NAMESAVE statement.
- The DCSS has been defined with the LOADNSHR operand.

See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the LOADNSHR operand.

See “[DCSS options](#)” on page 386 about saving DCSSs with the LOADNSHR operand or with other optional properties.

## DCSS options

The z/VM DCSS device driver always saves DCSSs with default properties. Any previously defined options are removed.

For example, a DCSS that was defined with the LOADNSHR operand loses this property when it is saved with the z/VM DCSS device driver.


To save a DCSS with optional properties, you must unmount the DCSS device, then use the CP DEFSEG and SAVESEG commands to save the DCSS. See [“Workaround for saving DCSSs with optional properties” on page 391](#) for an example.

See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about DCSS options.

## Setting up the DCSS device driver

Before you can load and use DCSSs, you must load the DCSS block device driver. Use the `segments` module parameter to load one or more DCSSs when the DCSS device driver is loaded.

### DCSS module parameter syntax

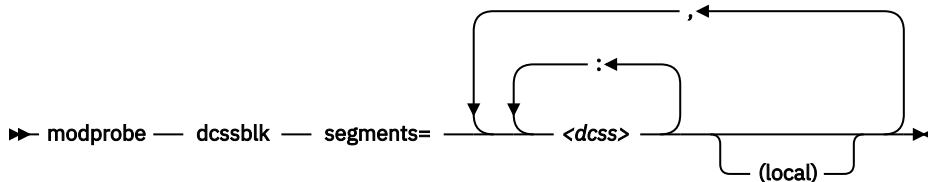

#### **<dcss>**

specifies the name of a DCSS as defined on the z/VM hypervisor. The specification for `<dcss>` is converted from ASCII to uppercase EBCDIC.

:

the colon (:) separates DCSSs within a set of DCSSs to be mapped to a single DCSS device. You can map a set of DCSSs to a single DCSS device if the DCSSs in the set form a contiguous memory space.

You can specify the DCSSs in any order. The name of the first DCSS you specify is used to represent the device under `/sys/devices/dcssblk`.

#### **(local)**

sets the access mode to exclusive-writable after the DCSS or set of DCSSs are loaded.

,

the comma (,) separates DCSS devices.

## Examples

The following command loads the DCSS device driver and three DCSSs: DCSS1, DCSS2, and DCSS3. DCSS2 is accessed in exclusive-writable mode.

```
# modprobe dcssblk segments="dcss1,dcss2(local),dcss3"
```

The following command loads the DCSS device driver and four DCSSs: DCSS4, DCSS5, DCSS6, and DCSS7. The device driver creates two DCSS devices. One device maps to DCSS4 and the other maps to the combined storage space of DCSS5, DCSS6, and DCSS7 as a single device.

```
# modprobe dcssblk segments="dcss4,dcss5:dcss6:dcss7"
```

## Avoiding overlaps with your guest storage

Ensure that your DCSSs do not overlap with the memory of your z/VM guest virtual machine (guest storage).

### About this task

To find the start and end addresses of the DCSSs, enter the following CP command; this command requires privilege class E:

```
#cp q nss map
```

the output gives you the start and end addresses of all defined DCSSs in units of 4-kilobyte pages:

```
00: FILE FILENAME FILETYPE MINSIZE BEGPAG ENDPAG TYPE CL #USERS PARMREGS VMGROUP
... 00: 0011 MONDCSS CPDCSS N/A 09000 097FF SC R 00003 N/A N/A
...
```

If all DCSSs that you intend to access are located above the guest storage, you do not need to take any action.

### Procedure

If any DCSS that you intend to access with your guest machine overlaps with the guest storage, redefine the guest storage. Define two or more discontinuous storage extents such that the storage gap with the lowest address range covers the address ranges of all your DCSSs.

#### Note:

- You cannot place a DCSS into a storage gap other than the storage gap with the lowest address range.
- A z/VM guest that was defined with one or more storage gaps cannot access a DCSS above the guest storage.

From a CMS session, use the DEF STORE command to define your guest storage as discontinuous storage extents. Ensure that the storage gap between the extents covers all your DCSSs' address ranges. Issue a command of this form:

```
DEF STOR CONFIG 0.<storage_gap_begin> <storage_gap_end>.<storage above gap>
```

where:

#### **<storage\_gap\_begin>**

is the lower limit of the storage gap. This limit must be at or below the lowest address of the DCSS with the lowest address range.

Because the lower address ranges are needed for memory management functions, make the lower limit at least 128 MB. The lower limit for the DCSS increases with the total memory size. Although 128 MB is not an exact value, it is an approximation that is sufficient for most cases.

#### **<storage\_gap\_end>**

is the upper limit of the storage gap. The upper limit must be above the upper limit of the DCSS with the highest address range.

#### **<storage above gap>**

is the amount of storage above the storage gap. The total guest storage is <storage\_gap\_begin> + <storage above gap>.

All values can be suffixed with M to provide the values in megabyte. See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for more information about the DEF STORE command.

## Example

To make a DCSS that starts at 144 MB and ends at 152 MB accessible to a z/VM guest with 512 MB guest storage:

```
DEF STORE CONFIG 0.140M 160M.372M
```

This specification is one example of how a suitable storage gap can be defined. In this example, the storage gap covers 140 - 160 MB and, thus, the entire DCSS range. The total guest storage is 140 MB + 372 MB = 512 MB.

## Working with DCSS devices

Typical tasks for working with DCSS devices include mapping DCSS representations in z/VM and Linux, adding and removing DCSSs, and accessing and updating DCSS contents.

- [“Adding a DCSS device” on page 388](#)
- [“Listing the DCSSs that map to a particular device” on page 389](#)
- [“Finding the minor number for a DCSS device” on page 389](#)
- [“Setting the access mode” on page 390](#)
- [“Saving updates to a DCSS or set of DCSSs” on page 390](#)
- [“Workaround for saving DCSSs with optional properties” on page 391](#)
- [“Removing a DCSS device” on page 392](#)

## Adding a DCSS device

Storage gaps or overlapping storage ranges can prevent you from adding a DCSS.

### Before you begin

- You must have set up one or more DCSSs on z/VM and know their names on z/VM.
- If you use the watchdog device driver, turn off the watchdog before adding a DCSS device. Adding a DCSS device can result in a watchdog timeout if the watchdog is active.
- You cannot concurrently access overlapping DCSSs.
- You cannot access a DCSS that overlaps with your z/VM guest virtual storage (see [“Avoiding overlaps with your guest storage” on page 387](#)).
- On z/VM guest virtual machines with one or more storage gaps, you cannot add a DCSS that is above the guest storage.
- On z/VM guest virtual machines with multiple storage gaps, you cannot add a DCSS unless it fits in the storage gap with the lowest address range.

### Procedure

To add a DCSS device, enter a command of this form:

```
# echo <dcss-list> > /sys/devices/dcscblk/add
```

#### <dcss-list>

the name, as defined on z/VM, of a single DCSS or a colon (:) separated list of names of DCSSs to be mapped to a single DCSS device. You can map a set of DCSSs to a single DCSS device if the DCSSs in the set form a contiguous memory space. You can specify the DCSSs in any order. The name of the first DCSS you specify is used to represent the device under /sys/devices/dcscblk.



## Examples

To add a DCSS called "MYDCSS" enter:

```
# echo MYDCSS > /sys/devices/dcscblk/add
```

To add three contiguous DCSSs "MYDCSS1", "MYDCSS2", and "MYDCSS3" as a single device, enter:

```
# echo MYDCSS2:MYDCSS1:MYDCSS3 > /sys/devices/dcscblk/add
```

In sysfs, the resulting device is represented as `/sys/devices/dcscblk/MYDCSS2`.

## Listing the DCSSs that map to a particular device

Read the `seglist` sysfs attribute to find out how DCSS devices in Linux map to DCSSs as defined in z/VM.

### Procedure

To list the DCSSs that map to a DCSS device, issue a command of this form:

```
# cat /sys/devices/dcscblk/<dcsc-name>/seglist
```

where `<dcsc-name>` is the DCSS name that represents the DCSS device.

## Examples

In this example, DCSS device MYDCSS maps to a single DCSS, "MYDCSS".

```
# cat /sys/devices/dcscblk/MYDCSS/seglist
MYDCSS
```

In this example, DCSS device MYDCSS2 maps to three contiguous DCSSs, "MYDCSS1", "MYDCSS2", and "MYDCSS3".

```
# cat /sys/devices/dcscblk/MYDCSS2/seglist
MYDCSS2
MYDCSS1
MYDCSS3
```

## Finding the minor number for a DCSS device

When you add a DCSS device, a minor number is assigned to it.

### About this task

Unless you use dynamically created device nodes as provided by udev, you might need to know the minor device number that was assigned to the DCSS (see [“DCSS naming scheme” on page 385](#)).

When you add a DCSS device, a directory of this form is created in sysfs:

```
/sys/devices/dcscblk/<dcsc-name>
```

where `<dcsc-name>` is the DCSS name that represents the DCSS device.

This directory contains a symbolic link, `block`, that helps you to find out the device name and minor number. The link is of the form `../../../block/dcscblk<n>`, where `dcscblk<n>` is the device name and `<n>` is the minor number.

### Example

To find out the minor number that is assigned to a DCSS device that is represented by the directory `/sys/devices/dcscblk/MYDCSS` issue:

```
# readlink /sys/devices/dcssblk/MYDCSS/block  
../../../../block/dcssblk0
```

In the example, the assigned minor number is 0.

## Setting the access mode

You might want to access the DCSS device with write access to change the content of the DCSS or set of DCSSs that map to the device.

### About this task

There are two possible write access modes to the DCSS device:

#### shared

In the shared mode, changes to DCSSs are immediately visible to all z/VM guests that access them. Shared is the default.

**Note:** Writing to a shared DCSS device bears the same risks as writing to a shared disk.

#### exclusive-writable

In the exclusive-writable mode you write to private copies of DCSSs. A private copy is writable, even if the original DCSS is read-only. Changes that you make to a private copy are invisible to other guests until you save the changes (see [“Saving updates to a DCSS or set of DCSSs”](#) on page 390).

After saving the changes to a DCSS, all guests that open the DCSS access the changed copy. z/VM retains a copy of the original DCSS for those guests that continue accessing it, until the last guest stops using it.

To access a DCSS in the exclusive-writable mode the maximum definable storage size of your z/VM virtual machine must be above the upper limit of the DCSS. Alternatively, suitable authorizations must be in place (see [“Accessing a DCSS in exclusive-writable mode”](#) on page 385).

For either access mode the changes are volatile until they are saved (see [“Saving updates to a DCSS or set of DCSSs”](#) on page 390).

### Procedure

Issue a command of this form:

```
# echo <flag> > /sys/devices/dcssblk/<dcss-name>/shared
```

where *<dcss-name>* is the DCSS name that represents the DCSS device.

You can read the shared attribute to find out the current access mode.

### Example

To find out the current access mode of a DCSS device represented by the DCSS name "MYDCSS":

```
# cat /sys/devices/dcssblk/MYDCSS/shared  
1
```

1 means that the current access mode is shared. To set the access mode to exclusive-writable issue:

```
# echo 0 > /sys/devices/dcssblk/MYDCSS/shared
```

## Saving updates to a DCSS or set of DCSSs

Use the save sysfs attribute to save DCSSs that were defined without optional properties.

## Before you begin

- Saving a DCSS as described in this section results in a default DCSS, without optional properties. For DCSSs that were defined with options (see “DCSS options” on page 386), see “Workaround for saving DCSSs with optional properties” on page 391.
- If you use the watchdog device driver, turn off the watchdog before saving updates to DCSSs. Saving updates to DCSSs can result in a watchdog timeout if the watchdog is active.
- Do not place save requests before you have accessed the DCSS device.

## Procedure

Issue a command of this form:

```
# echo 1 > /sys/devices/dcssblk/<dcss-name>/save
```

where <dcss-name> is the DCSS name that represents the DCSS device.

Saving is delayed until you close the device.

You can check if a save request is waiting to be performed by reading the contents of the save attribute.

You can cancel a save request by writing 0 to the save attribute.

## Example

To check if a save request exists for a DCSS device that is represented by the DCSS name "MYDCSS":

```
# cat /sys/devices/dcssblk/MYDCSS/save
0
```

The 0 means that no save request exists. To place a save request issue:

```
# echo 1 > /sys/devices/dcssblk/MYDCSS/save
```

To purge an existing save request issue:

```
# echo 0 > /sys/devices/dcssblk/MYDCSS/save
```

## Workaround for saving DCSSs with optional properties

If you need a DCSS that is defined with special options, you must use a workaround to save the DCSSs.

## Before you begin

**Important:** This section applies to DCSSs with special options only. The workaround in this section is error-prone and requires utmost care. Erroneous parameter values for the described CP commands can render a DCSS unusable. Use this workaround only if you really need a DCSS with special options.

## Procedure

Perform the following steps to save a DCSS with optional properties:

1. Unmount the DCSS.

**Example:** Enter this command to unmount a DCSS with the device node /dev/dcssblk0:

```
# umount /dev/dcssblk0
```

2. Use the CP DEFSEG command to newly define the DCSS with the required properties.

**Example:** Enter this command to newly define a DCSS, mydcss, with the range 80000-9ffff, segment type sr, and the loadnshr operand:

```
# vmcp defseg mydcss 80000-9ffff sr loadnshr
```

**Note:** If your DCSS device maps to multiple DCSSs as defined to z/VM, you must perform this step for each DCSS. Be sure to specify the command correctly with the correct address ranges and segment types. Incorrect specifications can render the DCSS unusable.

3. Use the CP SAVESEG command to save the DCSS.

**Example:** Enter this command to save a DCSS mydcss:

```
# vmcp saveseg mydcss
```

**Note:** If your DCSS device maps to multiple DCSSs as defined to z/VM, you must perform this step for each DCSS. Omitting this step for individual DCSSs can render the DCSS device unusable.

## Reference

See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for details about the DEFSEG and SAVESEG CP commands.

## Removing a DCSS device

Use the `remove sysfs` attribute to remove a DCSS from Linux.

### Before you begin

A DCSS device can only be removed when it is not in use.

### Procedure

You can remove the DCSS or set of DCSSs that are represented by a DCSS device from your Linux system by issuing a command of this form:

```
# echo <dcss-name> > /sys/devices/dcscblk/remove
```

where `<dcss-name>` is the DCSS name that represents the DCSS device.

### Example

To remove a DCSS device that is represented by the DCSS name "MYDCSS" issue:

```
# echo MYDCSS > /sys/devices/dcscblk/remove
```

### What to do next

If you have created your own device nodes, you can keep the nodes for reuse. Be aware that the major number of the device might change when you unload and reload the DCSS device driver. When the major number of your device has changed, existing nodes become unusable.

## Scenario: Changing the contents of a DCSS

Before you can change the contents of a DCSS, you must add the DCSS to Linux, access it in a writable mode, and mount the file system on it.

### About this task

The scenario that follows is based on these assumptions:

- The Linux instance runs as a z/VM guest with class E user privileges.
- A DCSS is set up and can be accessed in exclusive-writable mode by the Linux instance.

- The DCSS does not overlap with the guest's main storage.
- There is only a single DCSS named "MYDCSS".
- The DCSS block device driver is set up and ready to be used.

The description in this scenario can readily be extended to changing the content of a set of DCSSs that form a contiguous memory space. The only change to the procedure would be mapping the DCSSs in the set to a single DCSS device in step [“1” on page 393](#). The assumptions about the set of DCSSs would be:

- The contiguous memory space that is formed by the set does not overlap with the guest storage.
- Only the DCSSs in the set are added to the Linux instance.

## Procedure

Perform the following steps to change the contents of a DCSS:

1. Add the DCSS to the block device driver.

```
# echo MYDCSS > /sys/devices/dcsslk/add
```

2. Ensure that there is a device node for the DCSS block device.

If it is not created for you, for example by udev, create it yourself.

- a) Find out the major number that is used for DCSS block devices. Read `/proc/devices`:

```
# cat /proc/devices
...
Block devices
...
254 dcsslk
...
```

The major number in the example is 254.

- b) Find out the minor number that is used for MYDCSS.

If MYDCSS is the first DCSS to be added, the minor number is 0. To be sure, you can read a symbolic link that is created when the DCSS is added.

```
# readlink /sys/devices/dcsslk/MYDCSS/block
../../../../block/dcsslk0
```

The trailing 0 in the standard device name `dcsslk0` indicates that the minor number is, indeed, 0.

- c) Create the node with the **mknod** command:

```
# mknod /dev/dcsslk0 b 254 0
```

3. Set the access mode to exclusive-write.

```
# echo 0 > /sys/devices/dcsslk/MYDCSS/shared
```

4. Mount the file system in the DCSS on a spare mount point.

```
# mount /dev/dcsslk0 /mnt
```

5. Update the data in the DCSS.

6. Create a save request to save the changes.

```
# echo 1 > /sys/devices/dcsslk/MYDCSS/save
```

7. Unmount the file system.

```
# umount /mnt
```

The changes to the DCSS are now saved. When the last z/VM guest stops accessing the old version of the DCSS, the old version is discarded. Each guest that opens the DCSS accesses the updated copy.

8. Remove the device.

```
# echo MYDCSS > /sys/devices/dcscblk/remove
```

9. Optional: If you have created your own device node, you can clean it up.

```
# rm -f /dev/dcscblk0
```

---

## Chapter 40. z/VM CP interface device driver

**z/VM only:** The z/VM CP interface device driver applies to Linux on z/VM only.

Using the z/VM CP interface device driver (vmcp), you can send control program (CP) commands to the z/VM hypervisor and display the response.

The vmcp device driver works only for Linux on z/VM.

---

### What you should know about the z/VM CP interface

The z/VM CP interface driver (vmcp) uses the CP diagnose X'08' to send commands to CP and to receive responses. The behavior is similar but not identical to #CP on a 3270 or 3215 console.

#### Using the z/VM CP interface

There are two ways of using the z/VM CP interface device driver:

- Through the `/dev/vmcp` device node
- Through a user space tool (see [“vmcp - Send CP commands to the z/VM hypervisor”](#) on page 651)

You must load the vmcp module before you can use vmcp. If your Linux guest runs under z/VM, you can configure the startup scripts to load the vmcp kernel module automatically during boot. See the section on persistent module loading in *Configuring basic system settings on Red Hat Enterprise Linux 8.1* for information about how to do this.

The vmcp device driver works only for Linux on z/VM and cannot be loaded if the Linux system runs in an LPAR.

#### Differences between vmcp and a 3270 or 3215 console

Most CP commands behave identically with vmcp and on a 3270 or 3215 console. However, some commands show a different behavior:

- Diagnose X'08' (see *z/VM: CP Programming Services*, SC24-6272) requires you to specify a response buffer with the command. Because the response size is not known in advance, the default response buffer of vmcp might be too small and the response truncated.
- On a 3270 or 3215 console, the CP command is executed on virtual CPU 0. The vmcp device driver uses the CPU that is scheduled by the Linux kernel. For CP commands that depend on the CPU number (like trace), specify the CPU, for example: `cpu 3 trace count`.
- Some CP commands do not return specific error or status messages through diagnose X'08'. These messages are only returned on a 3270 or 3215 console. For example, the command `vmcp link user1 1234 123 mw` might return the message `DASD 123 LINKED R/W` in a 3270 or 3215 console. This message is not displayed if the CP command is issued with vmcp. For details, see the z/VM help system or *z/VM: CP Commands and Utilities Reference*, SC24-6268.

---

### Using the device node

You can send a command to z/VM CP by writing to the vmcp device node.

Observe the following rules for writing to the device node:

- Omit the newline character at the end of the command string. For example, use `echo -n` if you are writing directly from a terminal session.
- Write the command in the same case as required on z/VM.
- Escape characters that need escaping in the environment where you issue the command.

## Example

The following command attaches a device to your z/VM guest virtual machine. The asterisk (\*) is escaped to prevent the command shell from interpreting it.

```
# echo -n ATTACH 1234 \* > /dev/vmcp
```

## Application programmers

You can also use the vmcp device node directly from an application by using open, write (to issue the command), read (to get the response), ioctl (to get and set status), and close. The following ioctls are supported:

Table 52. The vmcp ioctls		
Name	Code definition	Description
VMCP_GETCODE	_IOR (0x10, 1, int)	Queries the return code of z/VM.
VMCP_SETBUF	_IOW(0x10, 2, int)	Sets the buffer size (the device driver has a default of 4 KB; vmcp calls this ioctl to set it to 8 KB instead).
VMCP_GETSIZE	_IOR(0x10, 3, int)	Queries the size of the response.



## Chapter 41. z/VM special messages uevent support

**z/VM only:** The z/VM CP special messages uevent support applies to Linux on z/VM only.

The `smsgiucv_app` kernel device driver receives z/VM CP special messages (SMSG) and delivers these messages to user space as udev events (uevents).

The device driver receives only messages that start with APP. The generated uevents contain the message sender and content as environment variables (see [Figure 81 on page 397](#)).

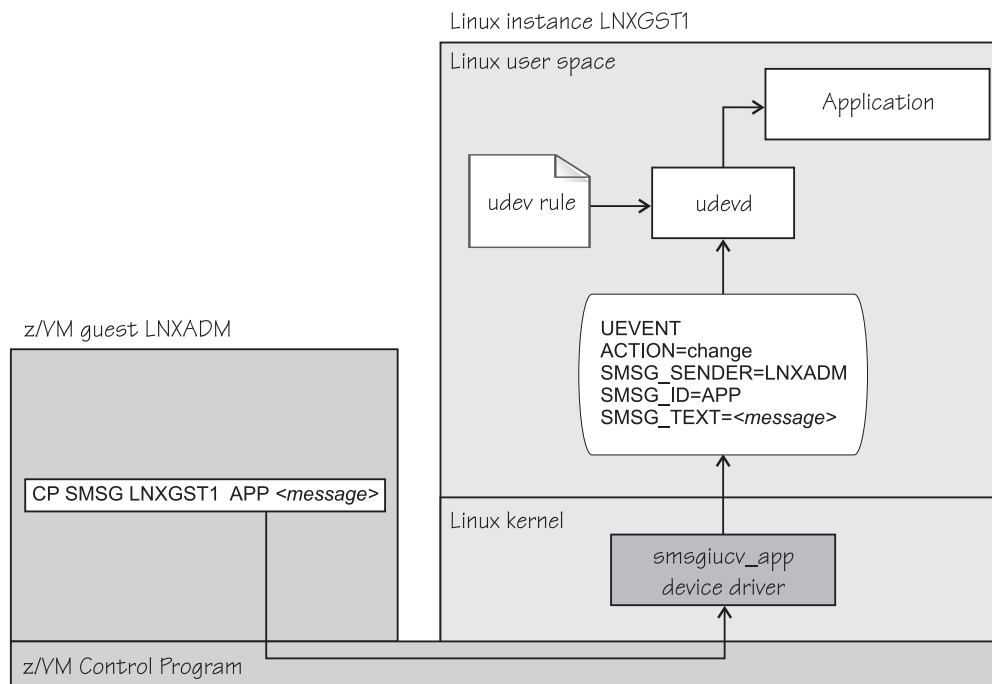


Figure 81. CP special messages as uevents in user space

You can restrict the received special messages to a particular z/VM user ID. CP special messages are discarded if the specified sender does not match the sender of the CP special message.

### Setting up the CP special message device driver

Configure the CP special message device driver when you load the device driver module.

The z/VM user ID does not require special authorizations to receive CP special messages. CP special messages can be issued from the local z/VM guest virtual machine or from other guest virtual machines. You can issue special messages from Linux or from a CMS or CP session.

Load the device driver module with the **modprobe** command.

#### **smsgiucv\_app syntax**

```
modprobe — smsgiucv_app — sender= <user_ID>
```

Where:

**sender = <user\_ID>**

permits CP special messages from the specified z/VM user ID only. CP special messages are discarded if the specified sender does not match the sender of the CP special message. If the **sender=** option is empty or not set, CP special messages are accepted from any z/VM user ID.

Lowercase characters are converted to uppercase.

To receive messages from several user IDs leave the sender= parameter empty, or do not specify it, and then filter with udev rules (see [“Example udev rule”](#) on page 399).

To load the smsgiucv\_app module automatically at boot time, see the section on persistent module loading in *Configuring basic system settings on Red Hat Enterprise Linux 8.1*.

## Working with CP special messages

---

You might have to send, access, or respond to CP special messages.

- [“Sending CP special messages”](#) on page 398
- [“Accessing CP special messages through uevent environment variables”](#) on page 398
- [“Writing udev rules for handling CP special messages”](#) on page 398

### Sending CP special messages

Issue a CP SMSG command from a CP or CMS session or from Linux to send a CP special message.

#### Procedure

To send a CP special message to LXGUEST1 from Linux, enter a command of the following form:

```
# vmcp SMSG LXGUEST1 APP "<message text>"
```

To send a CP special message to LXGUEST1, enter the following command from a CP or CMS session:

```
#CP SMSG LXGUEST1 APP <message text>
```

The special messages cause uevents to be generated. See [“Writing udev rules for handling CP special messages”](#) on page 398 for information about handling the uevents.

### Accessing CP special messages through uevent environment variables

A uevent for a CP special message contains environment variables that you can use to access the message.

#### SMSG\_ID

Specifies the message prefix. The SMSG\_ID environment variable is always set to APP, which is the prefix that is assigned to the smsgiucv\_app device driver.

#### SMSG\_SENDER

Specifies the z/VM user ID that sent the CP special message.

Use SMSG\_SENDER in udev rules for filtering the z/VM user ID if you want to accept CP special messages from different senders. All alphabetic characters in the z/VM user ID are uppercase characters.

#### SMSG\_TEXT

Contains the message text of the CP special message. The APP prefix and leading white spaces are removed.

### Writing udev rules for handling CP special messages

When using the CP special messages device driver, CP special messages trigger uevents.

## change events

The smsgiucv\_app device driver generates change uevents for each CP special message that is received.

For example, the special message:

```
#CP SMSG LXGUEST1 APP THIS IS A TEST MESSAGE
```

might trigger the following uevent:

```
UEVENT[1263487666.708881] change /devices/iucv/smsgiucv_app (iucv)
ACTION=change
DEVPATH=/devices/iucv/smsgiucv_app
SUBSYSTEM=iucv
MSG_SENDER=MAINT
MSG_ID=APP
MSG_TEXT=THIS IS A TEST MESSAGE
DRIVER=MSGIUCV
SEQNUM=1493
```

## add and remove events

In addition to the change event for received CP special messages, generic add and remove events are generated when the module is loaded or unloaded, for example:

```
UEVENT[1263487583.511146] add /module/smsgiucv_app (module)
ACTION=add
DEVPATH=/module/smsgiucv_app
SUBSYSTEM=module
SEQNUM=1487

UEVENT[1263487583.514622] add /devices/iucv/smsgiucv_app (iucv)
ACTION=add
DEVPATH=/devices/iucv/smsgiucv_app
SUBSYSTEM=iucv
DRIVER=MSGIUCV
SEQNUM=1488

UEVENT[1263487628.955149] remove /devices/iucv/smsgiucv_app (iucv)
ACTION=remove
DEVPATH=/devices/iucv/smsgiucv_app
SUBSYSTEM=iucv
SEQNUM=1489

UEVENT[1263487628.957082] remove /module/smsgiucv_app (module)
ACTION=remove
DEVPATH=/module/smsgiucv_app
SUBSYSTEM=module
SEQNUM=1490
```

With the information from the uevents, you can create custom udev rules to trigger actions that depend on the settings of the `MSG_*` environment variables (see [“Accessing CP special messages through uevent environment variables” on page 398](#)).

For your udev rules, use the add and remove uevents to initialize and clean up resources. To handle CP special messages, write udev rules that match change uevents. For more information about writing udev rules, see the udev man page.

## Example udev rule

The udev rules that process CP special messages identify particular messages and define one or more specific actions as a response.

The following example shows how to process CP special messages by using udev rules. The example contains rules for actions, one for all senders and one for the MAINT, OPERATOR, and LNXADM senders only.

The rules are contained in a block that matches uevents from the smsgiucv\_app device driver. If there is no match, processing ends:

---

```
#
# Sample udev rules for processing CP special messages.
#
#
DEVPATH!="*/smsgiucv_app", GOTO="smsgiucv_app_end"

# ----- Rules for CP messages go here -----

LABEL="smsgiucv_app_end"
```

---

The example first uses the **vmur** command to load the vmur kernel module. Then the z/VM virtual punch device, 000d, is activated.

---

```
# --- Initialization ---

# load vmur and set the virtual punch device online
SUBSYSTEM=="module", ACTION=="add", RUN+="/sbin/modprobe --quiet vmur"
SUBSYSTEM=="module", ACTION=="add", RUN+="/sbin/chccwdev -e 000d"
```

---

The following rule accepts messages from all senders. The message text must match the string UNAME. If it does, the output of the **uname** command (the node name and kernel version of the Linux instance) is sent back to the sender.

---

```
# --- Rules for all senders ----

# UNAME: tell the sender which kernel is running
ACTION=="change", ENV{SMMSG_TEXT}=="UNAME", \
    PROGRAM=="/bin/uname -n -r", \
    RUN+="/sbin/vmcp msg $env{SMMSG_SENDER} '$result'"
```

---

In the following example block rules are defined to accept messages from certain senders only. If no sender matches, processing ends. The message text must match the string DMESG. If it does, the environment variable PATH is set and the output of the **dmesg** command is sent into the z/VM reader of the sender. The name of the spool file is LINUX DMESG.

---

```
# --- Special rules available for particular z/VM user IDs ---

ENV{SMMSG_SENDER}!="MAINT|OPERATOR|LNXADM", GOTO="smsgiucv_app_end"

# DMESG: punch dmesg output to sender
ACTION=="change", ENV{SMMSG_TEXT}=="DMESG", \
    ENV{PATH}="/bin:/sbin:/usr/bin:/usr/sbin", \
    RUN+="/bin/sh -c 'dmesg |fold -s -w 74 |vmur punch -r -t -N LINUX.DMESG -u $env{SMMSG_SENDER}'"
```

---

## Chapter 42. Cooperative memory management

**z/VM only:** Cooperative memory management applies to Linux on z/VM only.

Cooperative memory management (CMM, or "cmm1") can reduce the memory that is available to an instance of Linux on z/VM.

CMM allocates pages to page pools that are not available to Linux. A diagnose code indicates to z/VM that the pages in the page pools are out of use. z/VM can then immediately reuse these pages for other z/VM guests.

To set up CMM, you must perform these tasks:

1. Load the cmm module.
2. Set up a resource management tool that controls the page pool. This tool can be the z/VM resource monitor (VMRM) or a third-party systems management tool.

This chapter describes how to set up CMM. For background information about CMM, see [“Cooperative memory management background”](#) on page 358.

You can also use the **cpuplugd** command to define rules for cmm behavior, see [“Basic configuration file for memory control”](#) on page 534.


For information about setting up the external resource manager, see the chapter on VMRM in z/VM: *Performance*, SC24-6301.

### Setting up cooperative memory management

Set up Linux on z/VM to participate in the cooperative memory management by loading the cooperative memory management support module, cmm.

Use the **modprobe** command to load the module. See the **modprobe** man page for command details.

#### cooperative memory management module parameter syntax



where `<user_ID>` specifies the z/VM guest virtual machine that is permitted to send messages to the module through the special messages interface. The default z/VM user ID is VMRMSVM, which is the default for the VMRM service machine.

To load the cmm module automatically at boot time, see the section on persistent module loading in *Configuring basic system settings on Red Hat Enterprise Linux 8.1*.

#### Example

To load the cooperative memory management module and allow the z/VM guest virtual machine TESTID to send messages:

```
# modprobe cmm sender=TESTID
```

## Working with cooperative memory management

---

After it has been set up, CMM works through the resource manager. No further actions are necessary. You might want to read the sizes of the page pools for diagnostic purposes.

To reduce the Linux memory size, CMM allocates pages to page pools that make the pages unusable to Linux. There are two such page pools, a static pool and a timed pool. You can use the `procfs` interface to read the sizes of the page pools.

### Reading the size of the static page pool

You can read the current size of the static page pool from `procfs`.

#### Procedure

Issue this command:

```
# cat /proc/sys/vm/cmm_pages
```

### Reading the size of the timed page pool

You can read the current size of the timed page pool from `procfs`.

#### Procedure

Issue this command:

```
# cat /proc/sys/vm/cmm_timed_pages
```

---

## Part 7. KVM virtual server integration

**KVM and LPAR:** This part describes both Linux as a KVM guest and Linux as a KVM host.

These device drivers and features help you to effectively run and manage a KVM-based virtual Linux server farm.

Depending on your KVM host and on your virtual server configuration, a particular KVM guest might not provide all of the described features.

### **Newest version**

You can find the newest version of this book at

[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)





## Chapter 43. KVM virtualization on IBM Z

**KVM only:** This chapter applies to Linux on KVM only.

Red Hat Enterprise Linux 8.1 can run in the mainframe environment as virtualized by the KVM hypervisor.

Figure 82 on page 405 illustrates how the KVM hypervisor virtualizes the IBM Z resources for Linux on KVM.

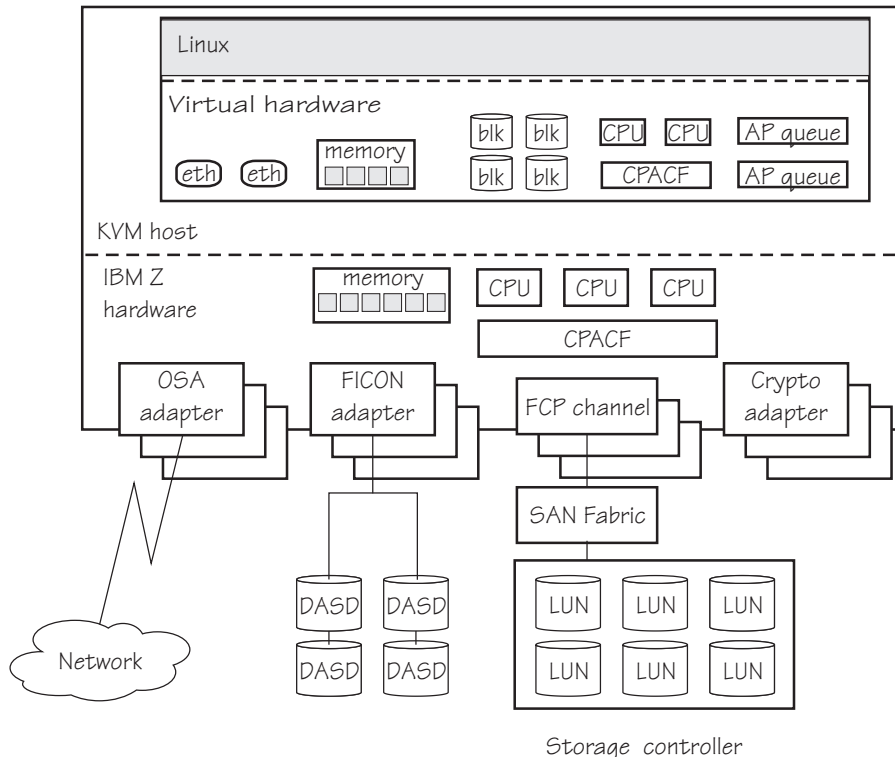


Figure 82. KVM virtualization

The KVM hypervisor defines the CPUs, memory, and virtual devices that are available to an instance of Linux on KVM when it is booted. It also specifies the host resources that back up these guest resources.

The device virtualization hides most of the physical device aspects from the guest. A virtio-net network device could be backed on the host, for example, by a physical OSA device or an Open vSwitch configuration. Disk devices are represented as virtio-blk devices.

Both virtio-blk and virtio-net devices use the virtio framework. The virtio CCW transport device driver provides the interface to this framework and uses channel command words (CCW) to establish the virtio infrastructure.

Figure 83 on page 406 illustrates the virtio stack for Linux as a KVM guest on Z.

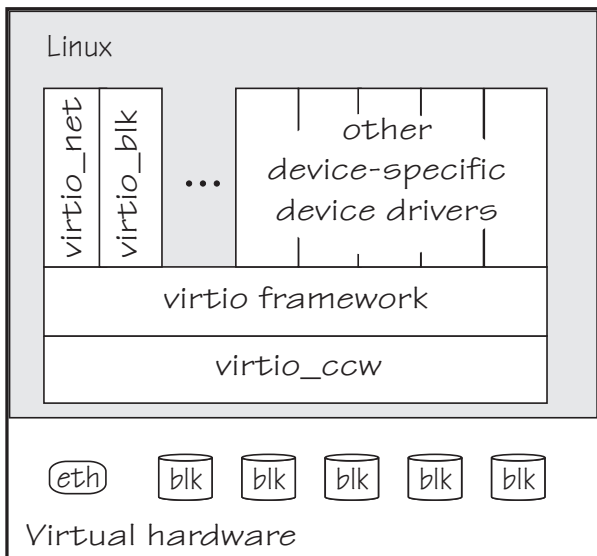


Figure 83. virtio stack

The hypervisor can dynamically add or remove devices. These changes result in hotplug events on the guest.

## Linux on KVM versus Linux on z/VM or Linux in LPAR mode

If you are familiar with Linux on z/VM or with Linux in LPAR mode, you will observe some differences when working with Linux on Z as a KVM guest.

### Starting and stopping Linux

The KVM hypervisor is the control point for IPL and for suspending and resuming Linux on KVM. You can initiate a reIPL from a running instance of Linux on KVM.

### System dump

As for Linux in LPAR mode and for Linux on z/VM, you can use `kdump` as a dump tool.

Alternatively, you can initiate a dump on the host. These hypervisor-driven dumps are analogous to using `VMDUMP` for Linux on z/VM.

You cannot use the stand-alone dump tools to create a dump for Linux on KVM.

For more details, see [“Creating a kernel dump of a KVM guest” on page 497](#).

### Responsibilities

Some of the administrative powers and responsibilities for the hardware that backs devices or provides access to devices are offloaded from the guest to the host.

### Virtual channel subsystem

The KVM hypervisor provides a virtualized channel subsystem with virtual channel paths to its guests. CHPID 00 on this virtual channel subsystem is shared by all virtio-ccw devices, including virtio-net and virtio-blk devices. See [Chapter 44, “The virtual channel subsystem,” on page 409](#).

### Storage devices

Expect to find generic block devices, which can be backed on the KVM host by SCSI disks, DASD, or even files in the host file system.

For these generic block devices, you cannot and need not configure any adapter hardware or physical disk devices. This preparation is done for you by the host.

There are no storage-class memory increments.

### **Network devices**

Instead of groups of subchannels for various types of network devices, there are virtio-net devices for Ethernet interfaces.

You cannot and need not group subchannels into CCW group devices, configure network devices, or configure any adapter hardware. This setup is done for you by the host.

## **Linux as a KVM guest on Z versus distributed systems**

---

If you are familiar with Linux as KVM guests on workstations, you will observe some differences when working with Linux as a KVM guest on Z.

### **Device drivers and the channel subsystem**

All I/O to storage and network devices is handled by a virtual IBM Z channel subsystem and the virtio CCW transport device driver. Do not expect to find all device types that are common on workstations. For example, you will not find USB devices.

### **Cryptographic support**

Linux as a KVM guest on Z can use the IBM Z CP Assist for Cryptographic Function (CPACF). If configured for your KVM virtual server, you can also use IBM Z cryptographic adapters (see [Part 8, “Security,” on page 431](#)).

## **Live guest migration**

---

In a live guest migration, the system programmer relocates a KVM virtual server with a running Linux instance from one KVM host to another without significantly disrupting operations.

Live guest migrations can help, for example, to avoid downtime during maintenance activities. A live guest migration can succeed only if both KVM hosts have access to equivalent resources. The hosts can but need not run on the same mainframe. The system programmer, who also initiates the migration, ensures that all preconditions are met.

If live migration is used at your installation, be sure not to block the migration. In particular:

- The virtual server configuration must not include any vfio-ap devices, which provide access to AP queues on cryptographic adapters.
- PCI passthrough devices must be detached before live migration.
- All tape device nodes must be closed and online tape drives must be unloaded.
- No program must be in a prolonged uninterruptible sleep state. Programs can assume this state while waiting for an outstanding I/O request to complete. Most I/O requests complete fast and do not compromise live guest migration. An example of an I/O request that can take too long to complete is rewinding a tape.



## Chapter 44. The virtual channel subsystem

**KVM only:** The virtual channel subsystem is specific to Linux on KVM.

The KVM hypervisor provides a virtual channel subsystem with a subchannel, CHPID 00, for paravirtualized CCW devices.

This virtual channel subsystem connects paravirtualized CCW devices to the virtual server. In the virtual channel subsystem:

- All paravirtualized CCW devices have control unit type 3832/<nn>, where <nn> is a two-digit hexadecimal number that indicates the device type.
- All paravirtualized CCW devices use a single virtual channel path with CHPID 00. The availability of all paravirtualized CCW devices depends on this channel path being operational.

For general information about the channel subsystem, see *z/Architecture Principles of Operation*, SA22-7832.

### Listing devices with lscss

The particulars of the channel subsystem view of a guest become visible when you list devices with **lscss**.

#### Example

```
# lscss
Device    Subchan. DevType CU Type Use PIM PAM POM CHPIDs
-----
0.0.0042  0.0.0000 0000/00 3832/01 yes 80  80  ff  00000000 00000000
0.0.0815  0.0.0001 0000/00 3832/02 yes 80  80  ff  00000000 00000000
0.0.9999  0.0.0002 0000/00 3832/03 yes 80  80  ff  00000000 00000000
0.1.abcd  0.1.0000 0000/00 3832/05 yes 80  80  ff  00000000 00000000
...
```

As illustrated in the example, the output, typically, shows numerous paravirtualized CCW devices. The output columns DevType, PIM, PAM, POM, and CHPIDs show identical values for these devices. These values result from the virtualization and carry no information that is characteristic for a particular device.

The following columns contain meaningful device information for paravirtualized CCW devices:

#### Device

is the device bus-ID that uniquely identifies a device to the guest and to the KVM hypervisor.

Use device bus-IDs to identify devices to the KVM hypervisor administrator. The KVM hypervisor defines these bus-IDs with prefix fe instead of 0. For example, 0.0.0042 on the guest is specified as fe.0.0042 in the virtual server configuration on the KVM hypervisor.

Device bus-IDs are persistent across reboots and change only if the device definitions are changed in the KVM hypervisor.

#### Subchan.

shows the current assignment of a subchannel to the device.

In contrast to the persistent device bus-IDs, subchannel assignments to devices might change across reboots or as a result of hotplug events.

#### CU Type

has a two-digit suffix that identifies the device type.

For example, 01 in 3832/01 identifies a network device and 02 in 3832/02 identifies a block device. For more information, see [“Types of paravirtualized CCW devices” on page 410](#).

## Use

indicates whether the device is online.

## Types of paravirtualized CCW devices

For Linux as a KVM guest on Z, paravirtualized CCW devices can represent various real and virtual devices, including block devices, network devices, and devices that are attached through a virtual SCSI HBA.

Table 53 on page 410 explains the values that are shown in the CU Type column of the **lscss** command. Which of these devices are present on a particular KVM guest depends on the virtual server configuration on the KVM hypervisor.

Table 53. Types of CCW devices	
CU Type/Model	Explanation
3832/01	<p>Network device</p> <p>The corresponding device bus-ID represents a network interface on the guest. The details of the interface are hidden by the KVM hypervisor. On the KVM hypervisor, this interface might be based on a MacVTap interface or a virtual switch.</p> <p>Network devices are handled by the <code>virtio_net</code> device driver module. See <a href="#">“Virtual network devices”</a> on page 416 for details.</p>
3832/02	<p>Block device</p> <p>The corresponding device bus-ID represents a persistent storage space to the guest. The details of the block device are hidden by the KVM hypervisor. To the KVM hypervisor, this storage space might be a SCSI LUN or a DASD, but it might also be a file in the file system of the host or any other block device.</p> <p>Block devices are handled by the <code>virtio_blk</code> device driver module. See <a href="#">“Virtual block devices”</a> on page 414 for details.</p>
3832/03	<p>Character device for console output. See <a href="#">“Using virsh on a KVM host”</a> on page 38.</p>
3832/04	<p>Random number generator device</p> <p>Depending on the configuration of your virtual server by the KVM hypervisor, this device might be backed by IBM Z cryptographic hardware.</p> <p>This device provides sufficient random numbers of good quality only if the random device of KVM host does so. In particular, this devices provides true random numbers only if it is backed by a true random number generator on the KVM host.</p>
3832/05	<p>Balloon device for memory management.</p> <p>The preferred memory management technology is Collaborative Memory Management Assist (CMMA). See <a href="#">“cmma - Reduce hypervisor paging I/O overhead”</a> on page 686.</p>

Table 53. Types of CCW devices (continued)

CU Type/Model	Explanation
3832/08	<p>Virtual SCSI HBA</p> <p>SCSI devices can be attached through a virtual SCSI host bus adapter (HBA) and are then handled by the <code>virtio_scsi</code> device driver module. For example, the following devices are attached through a virtual SCSI HBA:</p> <ul style="list-style-type: none"> <li>• SCSI tapes (see “Virtual SCSI-attached tape devices” on page 416)</li> <li>• Virtual CD/DVD drives (see “Virtual SCSI-attached CD/DVD drives” on page 418)</li> </ul> <p>Host devices need not necessarily be attached through a virtual SCSI HBA. For example, SCSI-attached disks are usually virtualized as block devices and handled by the <code>virtio_blk</code> device driver module.</p>

## Listing channel paths with `lschp`

Linux as a KVM guest on Z includes a channel path, with CHPID 00, for paravirtualized CCW devices.

The virtual channel subsystem always provides the same single channel path for all paravirtualized CCW devices to the guest. The following sample output for **`lschp`** shows this channel path:

```
# lschp
CHPID Vary Cfg. Type Cmg Shared PCHID
=====
0.00 1 - 32 - 0 -
```



**Attention:** Setting this channel path logically offline would make all paravirtualized CCW devices inaccessible to the guest. As a consequence, the system is likely to crash.

Depending on the presence of passthrough CCW devices, there can also be output lines for other devices.





## Chapter 45. The virtio CCW transport device driver

**KVM only:** The virtio CCW transport device driver applies to Linux on KVM only.

The virtio CCW transport device driver handles the virtual channel command word (CCW) devices that are provided by the KVM hypervisor.

Virtual CCW devices are accessed through a virtual channel subsystem, see [Chapter 44, “The virtual channel subsystem,”](#) on page 409.

The virtio CCW transport device driver is part of a module stack that also includes device drivers for handling particular device types. Distributions can handle these modules differently:

- The modules might be compiled into the kernel image of the distribution.
- The distribution might include separately compiled modules that are usually loaded automatically as they are required.

If the distribution includes a separate module that is not loaded automatically, you must load it before you can work with the corresponding devices. Loading a supporting module with the **modprobe** command automatically loads the base module if needed.

### Virtio devices

The KVM hypervisor hides some of the specifics of the devices it virtualizes. For example, the hypervisor can virtualize both disk devices and plain files in the host file system as block devices. The KVM guest cannot differentiate block devices according to their nature on the host.

As a user of Linux on KVM, you must work with the virtual devices at the abstraction level with which they are presented. You cannot perform all actions against virtual devices that you can perform against real devices.

## Setting CCW devices offline or online

By default, all virtio CCW devices are online after an instance of Linux as a KVM guest on Z is booted.

### About this task

If the KVM hypervisor defines unnecessary devices to your Linux instance, you can set them offline.

**Tip:** You can also use the `cio_ignore=` kernel parameter to prevent unnecessary devices from being sensed in the first place (see [“cio\\_ignore - List devices to be ignored”](#) on page 682).

### Procedure

Use the **chccwdev** command to set block devices offline or online.

For example, to set a block device with bus ID `0.0.0815` offline, issue:

```
# chccwdev -d 0.0.0815
```

To set this device back online, issue:

```
# chccwdev -e 0.0.0815
```

Alternatively, you can write `0` (offline) or `1` (online) to the `online sysfs` attribute of the device.

**Example:** To set the device offline, issue:

```
# echo 0 > /sys/bus/ccw/drivers/virtio_ccw/0.0.0815/online
```

## Virtual block devices

On Linux as a KVM guest on Z, you can use generic virtual block devices, for example, paravirtualized DASDs or SCSI LUNs.

These virtual block devices are handled by the `virtio_blk` device driver module. This module is loaded automatically during the boot process.

A virtual block device might be backed by a disk device, but it might also be backed by a file on the hypervisor. Do not perform operations that require knowledge of the specific hardware that backs a virtual block device. For example, do not attempt to run a low-level formatting operation on a virtual block device.

### Block device naming-scheme

Applications access block devices through device nodes. The `virtio-blk` device driver uses 16 device nodes for each block device: one for the block device itself and 15 for partitions.

The standard device nodes are of the form:

- `/dev/vd<x>` for the block device
- `/dev/vd<x><n>` for partitions

where

**<x>**

represents one or more alphabetic characters; `vd<x>` matches the device name that is used by the `virtio-blk` device driver.

**<n>**

is an integer in the range 1-15.

All of these nodes use the same major number. You can find the major number by issuing the following command:

```
# cat /proc/devices | grep virtblk
```

Table 54. Naming scheme for virtio block devices

Name that is used by the device driver	Standard device node	Minor number	Description
vda vda1 vda2 ... vda15	/dev/vda /dev/vda1 /dev/vda2 ... /dev/vda15	0 1 2 ... 15	First block device and up to 15 partitions
vdb vdb1 vdb2 ... vdb15	/dev/vdb /dev/vdb1 /dev/vdb2 ... /dev/vdb15	16 17 18 ... 31	Second block device and up to 15 partitions
vd<x> vd<x>1 vd<x>2 ... vd<x>15	/dev/vd<x> /dev/vd<x>1 /dev/vd<x>2 ... /dev/vd<x>15	(<m>-1)×16 (<m>-1)×16+1 (<m>-1)×16+2 ... (<m>-1)×16+15	<m>-th block device with up to 15 partitions

With 1,048,576 (20-bit) available minor numbers, the `virtio-blk` device driver can address 65,536 block devices and their partitions. For the first 26 devices, `<x>` is one alphabetic character (`vda-vdz`). The next devices use first two (`vdaa-vdzz`) and then more alphabetic characters.

The mapping of standard device nodes to bus-IDs can change when Linux is rebooted or when hotplug events occur. Your distribution might provide udev rules that create other nodes to attain a persistent mapping between device nodes and bus-IDs.

## Mapping block devices to CCW devices

For each virtual block device, there is a corresponding online CCW device.

To list the device nodes for your block devices, issue:

```
# ls /sys/block
```

The command output is a list of symbolic links that match the device names of the block devices.

### Example:

```
# ls /sys/block
vda      vdb      vdc
```

These links contain several attributes, including another symbolic link, device. To find the bus ID for a particular block device, issue a command according to the following example:

### Example:

```
# ls -l /sys/block/vdb/device/../../ | head -1
0.0.1111
```

**Tip:** For an overview of the mapping, issue this command:

```
# ls -d /sys/devices/css0/*/virtio*/block/*
```

### Example:

```
# ls -d /sys/devices/css0/*/virtio*/block/*
/sys/devices/css0/0.0.0000/0.0.10b1/virtio3/block/vda
/sys/devices/css0/0.0.0001/0.0.1111/virtio4/block/vdb
/sys/devices/css0/0.0.0002/0.0.11ab/virtio5/block/vdc
```

You can pipe the output to **awk** to obtain a more compact view:

```
# ls -d /sys/devices/css0/*/virtio*/block/* | awk -F "/" '{print $9 "\t" $6}'
vda      0.0.10b1
vdb      0.0.1111
vdc      0.0.11ab
```

## Partitioning virtual block devices

How to partition a block device depends on how the device is backed on the host, DASD or other.

**Before you begin:** Virtual block devices must be partitioned from the KVM host. From the guest, you cannot find out how a block device is backed on the host.

### DASD backed block devices

Use the **fdasd** command to create up to 3 partitions. For details, see [“fdasd – Partition a DASD” on page 557](#) or the **fdasd** man page

### All other block devices

Use the common code **fdisk** command to create up to 15 partitions. For details, see the **fdisk** man page.

Alternatively, you can use the **parted** command to create partitions. The **parted** command can handle both DASD-backed and other block devices. For details, see the **parted** man page.

The partitions of a block device are represented as subdirectories of the device representation in `/sys/block`. For example, you can list the existing partitions of a block device `/sys/block/vda` by issuing:

```
# ls /sys/block/vda
```

## Virtual network devices

On Linux as a KVM guest on Z, you use generic network devices and predictable interface names for Ethernet interfaces.

Read `/sys/class/net` to obtain a list of interfaces. Each list item corresponds to an online CCW network device.

### Example:

```
# ls /sys/class/net
encf500      enced0
```

According to convention, the device bus IDs of the associated CCW devices are 0.0.f500 and 0.0.0ed0 (see “Predictable network device names” on page 4).

Use **ip** or an equivalent command to activate an interface.

### Example:

```
# ip addr 192.0.2.5 dev encf500 peer 192.0.2.6
```

## Virtual SCSI-attached tape devices

The representation of virtual SCSI-attached tape and medium changer devices on Linux as a KVM guest on Z depends on your device driver.

### st

The `st` device driver for SCSI tape drives is included in the Linux kernel source from kernel.org. Red Hat Enterprise Linux supplies it as a separate module.

For each device, `st` provides device nodes of the form `/dev/st<i><x>` and `/dev/nst<i><x>` where the latter is for non-rewinding devices, where

**<x>**

is an alphabetic character that specifies a tape property, for example, compression or encryption.

**<i>**

identifies an individual device.

The identifier, `<i>`, is assigned when Linux is booted or when a device is set online. As a result, there is no fixed mapping between a physical tape device and the tape device nodes. For details, see the `st` man page.

### ch

The `ch` device driver for SCSI medium changers is included in the Linux kernel source from kernel.org. Red Hat Enterprise Linux supplies it as a separate module.

For each device, `ch` provides device nodes of the form `/dev/sch<i>` where `<i>` identifies an individual device.

The identifier, `<i>`, is assigned when Linux is booted or when a device is set online. As a result, there is no fixed mapping between physical media changer devices and the media changer device nodes. For details, see `Documentation/scsi/scsi-changer.txt` in the Linux source code.

### lin\_tape

The `lin_tape` device driver is available from the IBM Fix Central site at [www.ibm.com/support/fixcentral](http://www.ibm.com/support/fixcentral). For details about downloading the device driver, see Technote 1428656.

The device nodes that it provides include characteristics of the physical tape drive or medium changer and are persistent across reboots and after setting a tape device offline and back online. For details, see *IBM Tape Device Drivers Installation and User's Guide*, GC27-2130.

### Listing your tape devices

Use the **lsscsi** command with the **-v** option to list all your SCSI-attached devices, including SCSI-attached tape and medium changer devices. You can also use the **lstape** command to list tape and medium changer devices.

#### Example:

```
# lsscsi -v
[0:0:0:0] tape IBM ULT3580-TD6 H990 /dev/st0
dir: /sys/bus/scsi/devices/0:0:0:0 \
[/sys/devices/css0/0.0.0000/0.0.0003/virtio2/host0/target0:0:0/0:0:0:0]
[0:0:0:1] mediumx IBM 3573-TL E.80 /dev/sch0
dir: /sys/bus/scsi/devices/0:0:0:1 \
[/sys/devices/css0/0.0.0000/0.0.0003/virtio2/host0/target0:0:0/0:0:0:1]
[0:0:1:0] tape IBM ULT3580-TD6 H990 /dev/st1
dir: /sys/bus/scsi/devices/0:0:1:0 \
[/sys/devices/css0/0.0.0000/0.0.0003/virtio2/host0/target0:0:1/0:0:1:0]
[0:0:1:1] mediumx IBM 3573-TL E.80 /dev/sch1
dir: /sys/bus/scsi/devices/0:0:1:1 \
[/sys/devices/css0/0.0.0000/0.0.0003/virtio2/host0/target0:0:1/0:0:1:1]
[1:0:0:0] tape IBM ULT3580-TD6 H990 /dev/st3
dir: /sys/bus/scsi/devices/1:0:0:0 \
[/sys/devices/css0/0.0.0001/0.0.0004/virtio5/host1/target1:0:0/1:0:0:0]
[1:0:0:1] mediumx IBM 3573-TL E.80 /dev/sch3
dir: /sys/bus/scsi/devices/1:0:0:1 \
[/sys/devices/css0/0.0.0001/0.0.0004/virtio5/host1/target1:0:0/1:0:0:1]
[1:0:1:0] tape IBM ULT3580-TD6 H990 /dev/st2
dir: /sys/bus/scsi/devices/1:0:1:0 \
[/sys/devices/css0/0.0.0001/0.0.0004/virtio5/host1/target1:0:1/1:0:1:0]
[1:0:1:1] mediumx IBM 3573-TL E.80 /dev/sch2
dir: /sys/bus/scsi/devices/1:0:1:1 \
[/sys/devices/css0/0.0.0001/0.0.0004/virtio5/host1/target1:0:1/1:0:1:1]
```

The output includes the device node as used by the **st** or **ch** device driver and the SCSI device name of the form **<scsi\_host\_no>:<scsi\_id>:<scsi\_lun>**, **0:0:0:0** for **/dev/st0** in the example.

If the devices are handled by **lin\_tape** instead of **st** or **ch**, **lsscsi** cannot determine the device node name and displays **"-"** instead.

The sysfs path in the output includes two bus IDs:

- The first bus ID, from left to right, applies to the subchannel
- The second bus ID applies to the virtual SCSI host bus adapter (HBA)

The two bus IDs can but do not need to be the same. In the example, the HBA device bus-ID for **/dev/st0** is **0.0.0003**.

The following **lstape** output for the same device setup assumes that the devices are managed by the **lin\_tape** device driver instead of **st** and **ch**. The **lstape** output also shows the generic device name, **sg<x>**, that is assigned by the SCSI generic device driver, **sg**.

```
# lstape --verbose
FICON/ESCON tapes (found 0):
TapeNo BusID CuType/Model DevType/Model BlkSize State Op MedState
SCSI tape devices (found 8):
Generic Device Target Vendor Model Type State
HBA WWP Serial
sg0 IBMtape0 0:0:0:0 IBM ULT3580-TD6 tapedrv running
0.0.0003 N/A 10WT037733
sg1 IBMchanger0 0:0:0:1 IBM 3573-TL changer running
0.0.0003 N/A 00L4U78W6497_LL0
sg3 IBMtape1 0:0:1:0 IBM ULT3580-TD6 tapedrv running
0.0.0003 N/A 10WT037701
sg2 IBMchanger1 0:0:1:1 IBM 3573-TL changer running
0.0.0003 N/A 00L4U78W6497_LL0
sg6 IBMtape3 1:0:0:0 IBM ULT3580-TD6 tapedrv running
0.0.0004 N/A 10WT037733
sg7 IBMchanger3 1:0:0:1 IBM 3573-TL changer running
0.0.0004 N/A 00L4U78W6497_LL0
sg4 IBMtape2 1:0:1:0 IBM ULT3580-TD6 tapedrv running
0.0.0004 N/A 10WT037701
sg5 IBMchanger2 1:0:1:1 IBM 3573-TL changer running
0.0.0004 N/A 00L4U78W6497_LL0
```

Use the SCSI device name and the device bus-ID to communicate about the devices with the hypervisor administrator.

## Virtual SCSI-attached CD/DVD drives

The KVM hypervisor might provide virtual SCSI-attached CD/DVD drives to your KVM guest.

Virtual SCSI-attached CD/DVD drives have device nodes of the form `/dev/sr<n>`, where `<n>` is an integer that identifies an individual device. The node for the first drive is `/dev/sr0`.

Issue the following command to list all device nodes for CD/DVD drives:

```
# ls /dev/sr*
```

You can also use the **lsscsi** command to list all your SCSI-attached devices, including SCSI-attached CD/DVD drives.

```
# lsscsi
[0:0:0:0] cd/dvd QEMU QEMU CD-ROM 2.3. /dev/sr0
```

You can use the **isoinfo** command with the `-i` option to find out if a drive contains media.

### Example:

```
# isoinfo -i /dev/sr0
```

This command returns an error if no media is present.

You can use the **mount** command to mount the content of media in the drive on the file system.

### Example:

```
# mount /dev/sr0 /mnt/media
```

Your distribution might provide a udev rule to mount the media content for you.

Unmount the content of the media to release it.

### Example:

```
# umount /dev/sr0
```

■ You depend on the KVM hypervisor to eject and insert media.





## Chapter 46. Setting up Red Hat Enterprise Linux 8.1 as a KVM host

**LPAR or KVM:** KVM hosts can run in LPAR mode or they can be nested hosts that run as KVM guests.

A KVM host has kernel and user space requirements.

### Kernel

The kernel must have the Start Interpretive Execution (SIE) capability (see [“Check whether the Linux instance can be a hypervisor”](#) on page 495).


### User space

You must install the packages for QEMU and libvirt.

### Module parameters

Configure the KVM host support with module parameters.

#### kvm module parameter syntax

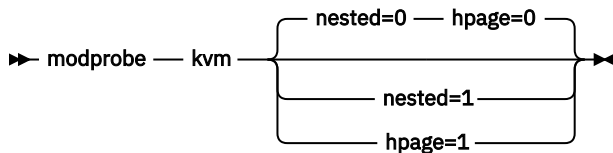

#### nested=

If set to "1", passes the SIE capability on to its guests. Thus, the guests can be hosts for higher-level guests.

Nested KVM hosts are intended for test environments and not for production systems.

#### hpage=

If set to "1", supports guest-configurations with huge-page memory backing.

Enough 1 MB huge pages must be set up to satisfy the needs of the guests. For details about setting up huge pages, see [Chapter 26, “Huge-page support,”](#) on page 325.

Nested hosts cannot back their guests with huge pages. You cannot set both nested= and hpage= to 1.



## Chapter 47. Setting up a KVM host for VFIO pass-through

**LPAR or KVM:** KVM hosts can run in LPAR mode or they can be nested hosts that run as KVM guests.

KVM hosts can use the virtual function I/O (VFIO) framework and the VFIO mediated device framework to pass host devices with their attributes through to their KVM guests.

For general information about VFIO and VFIO mediated devices, see `Documentation/vfio.txt` and `Documentation/vfio-mediated-device.txt` in the Linux kernel source.

### What you should know about VFIO

Depending on the device type, Linux handles devices with specific device drivers.

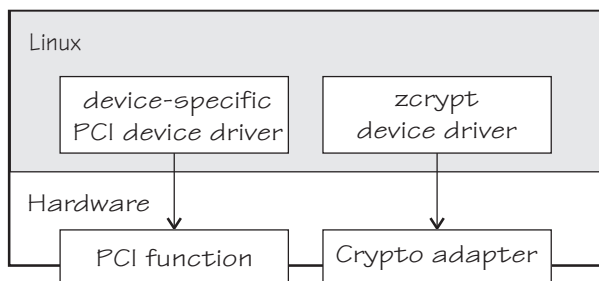


Figure 84. Device drivers on Linux

For Linux on KVM, QEMU provides virtual VFIO pass-through devices that preserve the host-device attributes. Therefore, Linux on KVM access a pass-through device with the same device driver that the host would use to access the corresponding host resource. For example, Linux in LPAR mode uses the zcrypt device driver to access cryptographic adapters. Correspondingly, Linux on KVM uses the zcrypt device driver to access virtual crypto adapters.

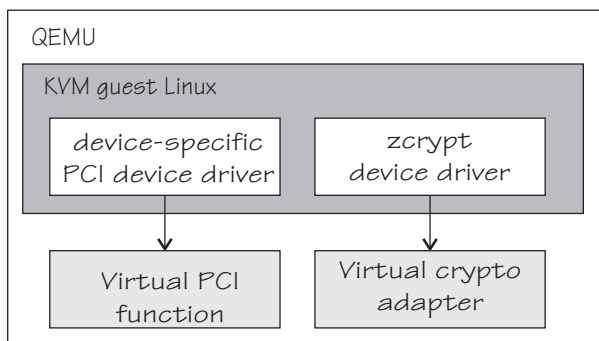


Figure 85. Device drivers for VFIO pass-through devices

To avoid contention, a KVM host must relinquish direct control of the host resource that backs a VFIO pass-through device. For these host resources, the VFIO framework substitutes the default device drivers on the KVM host with device-specific VFIO device drivers. These substitute device drivers reserve host resources for guest use and provide access to these resources on behalf of the guest.

Red Hat Enterprise Linux 8.1 as a KVM host on Z supports the following types of pass-through devices:

- PCIe
- Cryptographic adapter resources (AP queues)

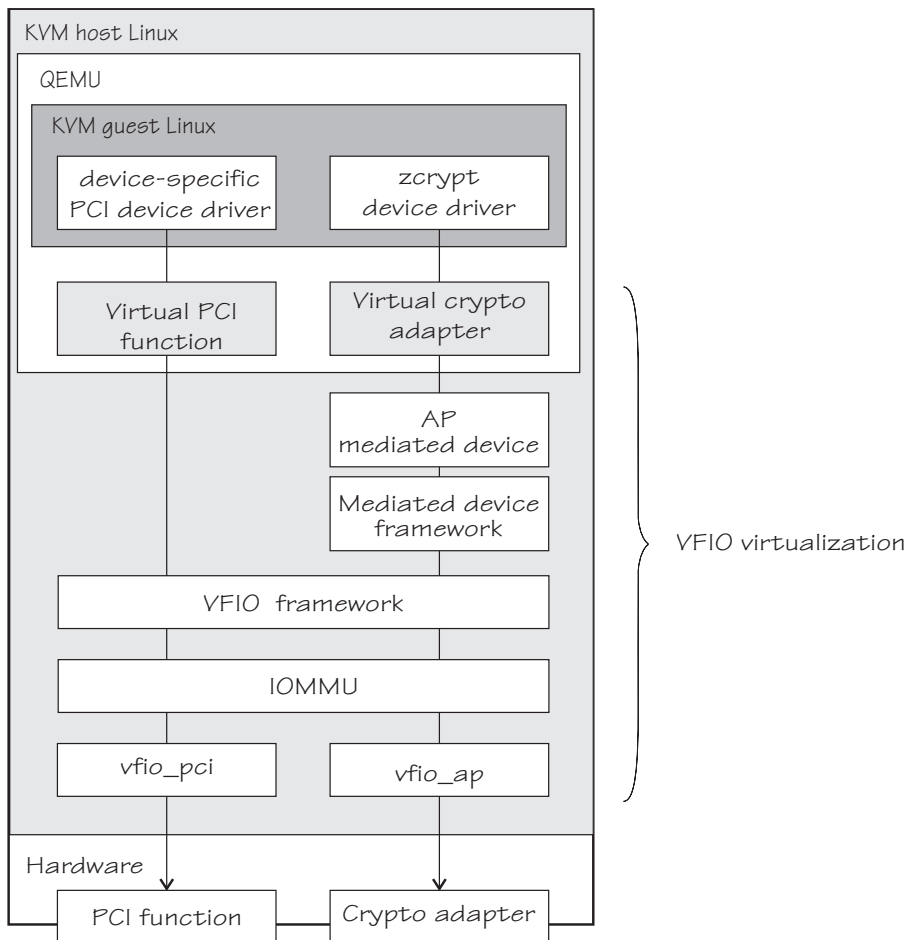


Figure 86. VFIO virtualization

On the host, you must define the resources that back a VFIO pass-through device and associate these resources with the applicable VFIO device driver. The necessary configuration steps depend on the device type. For pass-through cryptographic adapter resources, you must create specific VFIO mediated devices. The KVM hypervisor then uses VFIO mediated devices as a source for pass-through devices.

For configuration details, see [“Host setup for VFIO pass-through devices” on page 424](#).

## Host setup for VFIO pass-through devices

You must ensure that a VFIO device driver controls the resource on the host.

### About this task

The VFIO device driver reserves the pass-through device for KVM guests and accesses the corresponding host resource on behalf of the guest.

### Procedure

Although the details differ considerably by device type, the following main steps apply to all VFIO pass-through devices:

1. Free the resource from control of the default device driver ([“Freeing host resources from the default device drivers” on page 425](#)).
2. Associate the resource with the corresponding VFIO device driver. See:
  - [“Assigning PCI devices to vfio\\_pci” on page 425](#)

- [“Assigning cryptographic adapter resources to vfio\\_ap” on page 426](#)

### What to do next

After completing the host setup for a VFIO pass-through device, you can configure the device for a KVM guest (see *KVM Virtual Server Management*, SC34-2752).

## Freeing host resources from the default device drivers

Proceed according to your type of pass-through device.

### PCIe devices

**Before you begin:** PCI devices can be configured for automatic management by libvirt (see the information about configuring VFIO pass-through devices in *KVM Virtual Server Management*, SC34-2752). This management includes a dynamic host preparation. Perform the steps that follow only for devices that are not managed by libvirt.

Write the function address of the PCIe device to the `unbind` attribute of its device driver.

```
# echo <function_address> > /sys/bus/pci/drivers/<pci_device_driver>/unbind
```

**Tip:** Issue `lspci -v` to find out which device driver controls the device of interest.

### Example:

```
~]# lspci -v
0001:00:00.0 Ethernet controller: Mellanox Technologies MT27500 Family [ConnectX-3]
Subsystem: Mellanox Technologies Device 048d
Physical Slot: 00000015
...
Kernel driver in use: mlx4_core
Kernel modules: mlx4_core
# echo 0001:00:00.0 > /sys/bus/pci/drivers/mlx4_core/unbind
```

For more information about PCIe, see [Chapter 32, “PCI Express support,” on page 351](#).

### Cryptographic adapter resources

Cryptographic adapter resources are managed as AP queues (see “Cryptographic domains” on page 436). Two 256-bit masks, one for adapters and the other for domains, rule which AP queues are controlled by the `zcrypt` device driver. Setting an adapter bit or a domain bit or both to 0 frees the AP queue from the `zcrypt` device driver on the host.

The following commands set all bits in both masks to zero and so free all AP queues that are available to the host.

```
# echo 0x0 > /sys/bus/ap/apmask
# echo 0x0 > /sys/bus/ap/aqmask
```

If you need a less stringent approach to setting the masks, for example because your host needs some of the AP queues, see [“Kernel parameters” on page 438](#) and [“Freeing AP queues for KVM guests” on page 447](#).

## Assigning PCI devices to vfio\_pci

Set up the `vfio_pci` device driver to control a particular PCIe card type by specifying the card's vendor code and device code.


After setting up the `vfio_pci` device driver for one or more PCIe card types, all eligible cards of these types get associated with the `vfio_pci` device driver ([“Freeing host resources from the default device drivers” on page 425](#)). Free a card from control of its card-specific default device driver to make it eligible for the `vfio_pci` device driver.

**Tip:** Issue `lspci -n` to display the vendor and device codes for your PCIe devices in the format `<vendor_code>:<device_code>`.

### Module parameter

You can use the `ids=` module parameter to specify the PCIe card types.

#### ids= module parameter



**Example:** In this example, a PCIe device with function address `0001:000:000:0`, vendor code `15b3`, and device code `1003` is available on the host. The specification for the `ids=` module parameter makes the card type eligible for the `vfiopci` device driver.

```
# lspci -n
0001:000:000:0 15b3:1003
# modprobe vfiopci ids=15b3:1003
```

### sysfs interface

On a running host, you can use the `/sys/bus/pci/drivers/vfio-pci/new_id` sysfs attribute to enable the `vfiopci` device driver to control a particular PCIe card type. Write the vendor code and device code, separated by a blank, to the attribute.

**Example:** This example, makes cards with vendor code `15b3` and device code `1003` eligible for the `vfiopci` device driver.

```
# echo 15b3 1003 > /sys/bus/pci/drivers/vfio-pci/new_id
```

## Assigning cryptographic adapter resources to vfio\_ap

Create a VFIO AP mediated device and assign cryptographic adapter resources to the device.

Cryptographic adapter resources are managed as AP queues (see [“Cryptographic domains” on page 436](#)). An AP queue corresponds to a specific cryptographic domain on a specific cryptographic adapter. AP queues are assigned indirectly through assignments of domains and adapters. As a consequence, AP queues are not assigned independently, but in the form of a matrix of queues. A queue is in the matrix if both its adapter and its domain are specified.

### Load the modules

Ensure that the `vfio_ap` and `vfio_mdev` device drivers are loaded.

```
# modprobe vfio_ap
# modprobe vfio_mdev
```

### Create a mediated device

Associate a new VFIO mediated device with the `vfio_ap` device driver by writing a universally unique identifier (UUID) to `/sys/devices/vfio_ap/matrix/mdev_supported_types/vfio_ap-passthrough/create`.

**Tip:** Use the `uuidgen` command to generate a UUID.

**Example:** This example creates a VFIO AP mediated device.

```
# uuidgen
4b0518fd-9237-493f-93c8-c5597f8006a3
# echo 4b0518fd-9237-493f-93c8-c5597f8006a3 \
> /sys/devices/vfio_ap/matrix/mdev_supported_types/vfio_ap-passthrough/create
```

## Configure the mediated device

The sysfs representations of VFIO AP mediated devices are subdirectories of `/sys/devices/vfio_ap/matrix`. The directory names match the UUIDs that identify the mediated devices. Use the attributes in a device directory to configure the device and to obtain information about the device.

Table 55. sysfs attributes of VFIO mediated devices for cryptographic adapter resources	
Attribute	Explanation
assign_adapter	<p>Write adapter IDs to this attribute to add AP queues on this adapter to the mediated device. Specify the adapter IDs in decimal or hexadecimal notation. For hexadecimal notation, use the prefix "0x".</p> <p>Example:</p> <pre># echo 0x0a &gt; assign_adapter</pre>
assign_control_domain	<p>Write domain IDs to this attribute to assign control domains to the mediated device. Assign a control domain for each domain that you assign to the mediated device, so that you can manage your domains from the guest that uses the mediated device. Specify the domain IDs in decimal or hexadecimal notation. For hexadecimal notation, use the prefix "0x".</p> <p>Example:</p> <pre># echo 0x001b &gt; assign_control_domain</pre>
assign_domain	<p>Write domain IDs to this attribute to assign domains to the mediated device. Specify the domain IDs in decimal or hexadecimal notation. For hexadecimal notation, use the prefix "0x".</p> <p>Example:</p> <pre># echo 0x001b &gt; assign_domain</pre>
control_domains	<p>Read this attribute to list the assigned control domains.</p> <p>Example:</p> <pre># cat control_domains 001b</pre>
matrix	<p>Read this attribute to list the assigned AP queues that result from the adapter and domain assignments.</p> <p>Example:</p> <pre># cat matrix 0a.001b</pre>
mdev_type	Symbolic link that points to the <code>vfio_ap-passthrough</code> directory.

Table 55. sysfs attributes of VFIO mediated devices for cryptographic adapter resources (continued)

Attribute	Explanation
remove	Write 1 to this attribute to remove the mediated device. Example: <pre># echo 1 &gt; remove</pre>
subsystem	Symbolic link that points to the vfio_mdev device driver.
unassign_adapter	Write adapter IDs to this attribute to remove AP queues on this adapter from the mediated device. Specify the adapter IDs in decimal or hexadecimal notation. For hexadecimal notation, use the prefix "0x". Example: <pre># echo 0x0a &gt; unassign_adapter</pre>
unassign_control_domain	Write domain IDs to this attribute to remove control domains from the mediated device. Specify the domain IDs in decimal or hexadecimal notation. For hexadecimal notation, use the prefix "0x". Example: <pre># echo 0x001b &gt; unassign_control_domain</pre>
unassign_domain	Write domain IDs to this attribute to remove AP queues for these domains from the mediated device. Specify the domain IDs in decimal or hexadecimal notation. For hexadecimal notation, use the prefix "0x". Example: <pre># echo 0x001b &gt; unassign_domain</pre>

## Scenario

1. Load the required modules.

```
# modprobe vfio_ap
# modprobe vfio_mdev
```

2. List the eligible AP queues.

```
# lszcrypt -V | grep vfio
00.0001 CEX6A Accelerator online 0 0 12 08 -MC-A-NF- vfio_ap
00.0002 CEX6A Accelerator online 0 0 12 08 -MC-A-NF- vfio_ap
00.0004 CEX6A Accelerator online 0 0 12 08 -MC-A-NF- vfio_ap
00.001b CEX6A Accelerator online 0 0 12 08 -MC-A-NF- vfio_ap
0a.0001 CEX6P EP11-Coproc online 0 0 12 08 ----XNF- vfio_ap
0a.0002 CEX6P EP11-Coproc online 0 0 12 08 ----XNF- vfio_ap
0a.0004 CEX6P EP11-Coproc online 0 0 12 08 ----XNF- vfio_ap
0a.001b CEX6P EP11-Coproc online 0 0 12 08 ----XNF- vfio_ap
```

The output shows that 8 AP queues are eligible. The eight queues correspond to a matrix of two adapters, 0x00 and 0x0a and four domains, 0x0001, 0x0002, 0x0004, and 0x001b.

3. Create a mediated device.



```
# uuidgen
4b0518fd-9237-493f-93c8-c5597f8006a3
# echo 4b0518fd-9237-493f-93c8-c5597f8006a3 \
> /sys/devices/vfio_ap/matrix/mdev_supported_types/vfio_ap-passthrough/create
```

4. Add adapters 0x00 and 0x0a to the device.

```
# echo 0x00 > /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/assign_adapter
# echo 0x0a > /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/assign_adapter
# cat /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/matrix
```

Reading the `matrix` attribute does not yield any AP queues. To assign AP queues both adapters and domains must be added.

5. Add domain 0x001b.

```
# echo 0x001b > /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/assign_domain
# cat /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/matrix
00.001b
0a.001b
# cat /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/control_domains
```

The content of the `matrix` attribute shows that two AP queues are assigned to the mediated device. The two queues correspond to a matrix of two adapters, 0x00 and 0x0a and one domain, 0x001b. Reading the `control_domains` attribute shows that no control domain is configured.

6. Add domain 0x001b to the control domains.

```
# echo 0x001b > /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/
assign_control_domain
# cat /sys/devices/vfio_ap/matrix/4b0518fd-9237-493f-93c8-c5597f8006a3/control_domains
001b
```



---

## Part 8. Security

These device drivers and features support security aspects of Red Hat Enterprise Linux 8.1 for Z.

### **Newest version**

You can find the newest version of this book at

[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)



---

## Chapter 48. Generic cryptographic device driver

The generic cryptographic device driver (zcrypt) supports cryptographic coprocessor and accelerator hardware. Cryptographic coprocessors provide secure key cryptographic operations for the IBM Common Cryptographic Architecture (CCA). Cryptographic coprocessors also support Enterprise PKCS #11 (EP11).

Some cryptographic processing in Linux can be offloaded from the CPU and performed by dedicated CCA or EP 11 coprocessors or accelerators. Several of these CCA or EP 11 coprocessors and accelerators are available offering a range of features. The generic cryptographic device driver (zcrypt) is required to use any available cryptographic hardware for processor offload.

---

### Features

The generic cryptographic device driver supports a range of hardware and software functions.

#### Supported cryptographic adapters

The cryptographic hardware feature might contain one or two cryptographic adapters. Each adapter can be configured either as a CCA coprocessor or as an accelerator. The CEX6 and CEX5 cryptographic adapters can also be configured as EP11 coprocessors.

The following types of cryptographic adapters are supported:

- Crypto Express7S (EP11) Coprocessor (CEX7P)
- Crypto Express7S (CCA) Coprocessor (CEX7C)
- Crypto Express7S Accelerator (CEX7A)
- Crypto Express6S (EP11) Coprocessor (CEX6P)
- Crypto Express6S (CCA) Coprocessor (CEX6C)
- Crypto Express6S Accelerator (CEX6A)
- Crypto Express5S (EP11) Coprocessor (CEX5P)
- Crypto Express5S Accelerator (CEX5A)
- Crypto Express5S (CCA) Coprocessor (CEX5C)

**Note:** You can use CEX7A, CEX7C, and CEX7P with the same functions that are provided by earlier cryptographic accelerators or cryptographic coprocessors. New functions of CEX7A, CEX7C, and CEX7P are not supported, and the adapters are displayed as CEX6A, CEX6C, and CEX6P, respectively.

For information about setting up your cryptographic environment on Linux under z/VM, see *z/VM: Secure Configuration Guide*, SG24-6323 and *Security for Linux on System z*, SG24-7728.

#### Supported facilities

The cryptographic device driver supports several cryptographic accelerators as well as CCA and EP11 coprocessors.

Cryptographic accelerators support clear key cryptographic algorithms. In particular, they provide fast RSA encryption and decryption for key sizes 1024 - 4096-bit.

Cryptographic coprocessors act as a hardware security module (HSM) and provide secure key cryptographic operations for the IBM Common Cryptographic Architecture (CCA) and the Enterprise PKCS#11 feature (EP11).

For more information about CCA, see *Secure Key Solution with the Common Cryptographic Architecture Application Programmer's Guide*, SC33-8294. You can obtain this book at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_cca.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_cca.html).

For more information about EP11, see *Exploiting Enterprise PKCS #11 using openCryptoki*, SC34-2713. You can obtain this publication at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/sec\\_hw\\_supp.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/sec_hw_supp.html).

Cryptographic coprocessors also provide clear key RSA operations for 1024-bit, 2048-bit, and 4096-bit keys, and a true random number generator for /dev/hwrng. The EP11 coprocessor supports only secure key operations.

## Hardware and software prerequisites

Support for the Crypto Express features depends on the IBM Z hardware model.

Table 56 on page 434 lists the support for the cryptographic adapters.

Table 56. Support for cryptographic adapters by mainframe model	
Cryptographic adapters	Mainframe support
CEX7A, CEX7C, and CEX7P	z15 (shown as a CEX6 adapter)
CEX6A, CEX6C, and CEX6P	z14 and z14 ZR1
CEX5A, CEX5C, and CEX5P	z14, z13, and z13s

Table 57 on page 434 lists the required software by function.

Table 57. Required software	
Software required	Function that is supported by the software
The CCA library	For the secure key cryptographic functions on CCA coprocessors.  For information about cryptographic CCA coprocessors, coexistence of adapter versions, and how to use CCA functions, see <i>Secure Key Solution with the Common Cryptographic Architecture Application Programmer's Guide</i> , SC33-8294. You can obtain this publication at <a href="http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_cca.html">www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_cca.html</a> .
The EP11 library	For the secure key cryptographic functions on EP11 coprocessors. See <i>Exploiting Enterprise PKCS #11 using openCryptoki</i> , SC34-2713. You can obtain this publication at <a href="https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_ep.html">https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_ep.html</a> .
The libica library	For the clear key cryptographic functions. See <i>libica Programmer's Reference</i> , SC34-2602. You can obtain this publication at <a href="https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_ci.html">https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_ci.html</a> .
APAR VM65942	To support z14 hardware and the CEX6S adapter for Linux on z/VM.  To support ECC with a shared cryptographic adapter in coprocessor mode for Linux on z/VM 6.4.

You can download the CCA library and the EP11 library from the IBM cryptographic coprocessor web page at

[www.ibm.com/security/cryptocards](http://www.ibm.com/security/cryptocards)

**Note:** The CCA library works with 64-bit applications only.

## What you should know about the cryptographic device driver

---

Your use of the cryptographic device driver and the cryptographic hardware might require additional software. There are special considerations for Linux on z/VM, for performance, and for specific cryptographic operations.

## Functions provided by the cryptographic device driver

---

The functions that are provided by the cryptographic device driver depend on whether the device driver finds a cryptographic accelerator, a CCA coprocessor, or an EP11 coprocessor.

For both accelerators and CCA coprocessors, the device driver provides Rivest-Shamir-Adleman (RSA) encryption and RSA decryption functions using clear keys. RSA operations are supported in both the modulus-exponent and the Chinese-Remainder Theorem (CRT) variants for any key size in the range 57 - 4096 bit.

For CCA coprocessors, the device driver also provides a function to pass CCA requests to the cryptographic coprocessor and an access to the true random number generator of the CCA coprocessor.

For EP11 coprocessors, the device driver provides functionality to pass EP11 requests to the cryptographic coprocessor.

## Adapter discovery

---

The cryptographic device driver provides two misc device nodes, one for cryptographic requests, and one for a device from which random numbers can be read.

Cryptographic adapters are detected automatically when the module is loaded. They are reprobbed periodically, and following any hardware problem.

Upon detection of a cryptographic adapter, the device driver presents a Linux misc device, `z90crypt`, to user space. A user space process can open the misc device to submit cryptographic requests to the adapter through IOCTLs.

If at least one of the detected cryptographic adapters is a coprocessor, an additional misc device, `hwrng`, is created from which random numbers can be read.

You can set cryptographic adapters online or offline in the device driver. The cryptographic device driver ignores adapters that are configured offline even if the hardware is detected. The online or offline configuration is independent of the hardware configuration.

## Request processing

---

Cryptographic adapters process requests asynchronously.

The device driver detects request completion either by standard polling, a special high-frequency polling thread, or by hardware interrupts. Hardware interrupt support is only available for Linux instances that run in an LPAR. If hardware interrupt support is available, the device driver does not use polling to detect request completion.

All requests to either of the two misc devices are routed to a cryptographic adapter using a crypto request scheduling function that, for each adapter, takes into account:

- The supported functions
- The number of pending requests
- A speed rating

The cryptographic device driver supports multiple cryptographic domains simultaneously, see [“Cryptographic domains”](#) on page 436.

The device driver uses at least one domain for all adapters. If none is given, the kernel selects a default domain. Alternatively, you can select the default domain using a kernel parameter (see [“Kernel parameters”](#) on page 438).


## Cryptographic domains

Crypto Express hardware adapters, coprocessors or accelerators, are divided into multiple domains, also called *cryptographic domains* or *AP domains*.

Each domain acts as an independent cryptographic device with its own state, including its own master key. Two domains in the same Crypto Express adapter are completely isolated and cannot access each other's states. The maximum number of domains depends on the mainframe model and is the same for all Crypto Express adapters in that mainframe. For example, a z13 supports up to 85 domains (with hexadecimal domain IDs 0000 to 0054).

### Cryptographic devices on LPARs

When you assign adapters and domains to an LPAR on the HMC or SE, you indirectly assign virtual cryptographic devices.

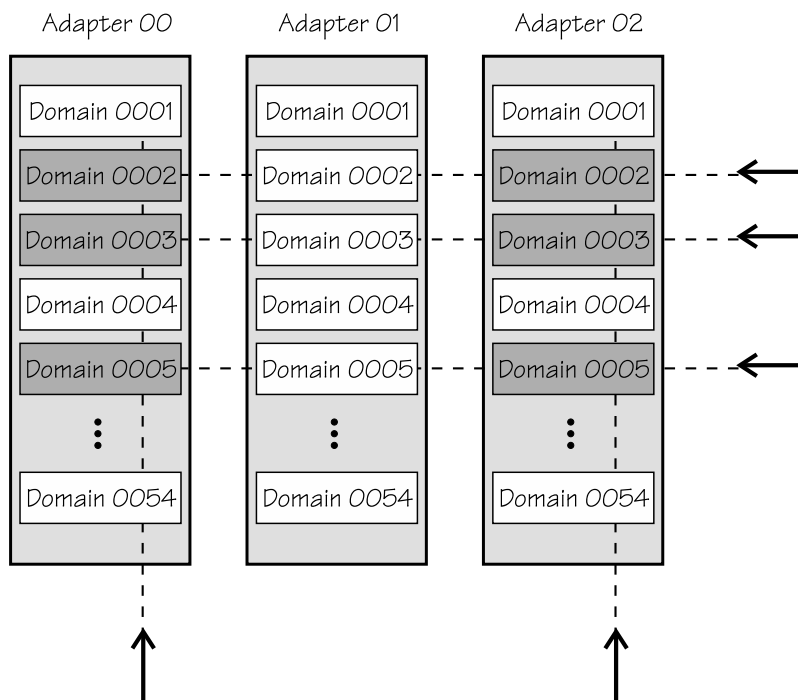

For example, assigning adapter ID 00 and 02 as well as domains 0002, 0003, and 0005 to an LPAR implicitly assigns six virtual cryptographic devices to the LPAR: (00,0002), (00,0003), (00,0005), (02,0002), (02,0003), and (02,0005).

You can choose between two types of access to a cryptographic domain:

#### To use cryptographic functions.

A domain that is assigned to an LPAR for usage access is called a *usage domain* of that LPAR on the HMC or SE.

#### To manage or control the domain, including the management of the master keys.

A domain that is assigned to an LPAR for management (control) access is called a *control domain* of that LPAR on the HMC or SE.

Every usage domain of an LPAR must also be a control domain of that LPAR.



The list of usage domains and the list of adapter IDs define the list of virtual cryptographic devices that are assigned to an LPAR. For example, if 00 is an adapter ID and 0002 is a usage domain ID, then the virtual cryptographic device (00,0002) is assigned to the LPAR.

### Cryptographic devices on z/VM

In z/VM, the virtual cryptographic devices available to a guest are defined by using the CRYPTO directory statement:

- The CRYPTO APDEDICATE statement assigns domain IDs and adapter IDs to the guest. This assignment implicitly defines a list of dedicated virtual cryptographic devices. All virtual cryptographic devices that are determined by an ID from the adapter list of that guest and an ID from the domain list of that guest are assigned to the guest.
- The CRYPTO APVIRT statement assigns one virtual cryptographic device that can be shared among multiple guests with a guest-specific virtualized adapter ID and a virtualized domain ID.

Virtual cryptographic devices in z/VM can be either shared or dedicated, but not both.

Linux on z/VM with access to a shared cryptographic accelerator can either observe an accelerator or a CCA coprocessor.

For shared cryptographic CCA coprocessors, the following functions are available to the Linux instance:

- Random number functions
- Clear-key RSA functions
- If APAR VM65942 has been installed: Clear-key ECC functions

Other requests are rejected by z/VM. For more information about supported functions, see the z/VM publications.

### Cryptographic devices on Linux

In Linux, virtual cryptographic devices are called *AP queues*. The name of an AP queue consists of two parts, the adapter ID and the domain ID, both in hexadecimal notation. For example, if cryptographic adapters with the IDs 00 and 02 are selected, and the domains IDs 0002, 0003 and 0005 have been configured on the cryptographic adapter, then the following AP queues are defined to Linux:

```
/sys/devices/ap/card00/00.0002
/sys/devices/ap/card00/00.0003
/sys/devices/ap/card00/00.0005
/sys/devices/ap/card02/02.0002
/sys/devices/ap/card02/02.0003
/sys/devices/ap/card02/02.0005
```

## Setting up the cryptographic device driver

Configure the cryptographic device driver through the `ap.domain=` and the `ap.poll_thread=` kernel parameters. You might also have to set up libraries.

The cryptographic device driver consists of multiple, separate modules:

#### **zcrypt**

Cryptographic Coprocessor interface, Cryptographic Coprocessor message type 6, Cryptographic Coprocessor message type 50. Support for message type 6 includes secure key and RNG requests. Support for message type 50 includes RSA requests for both modulus-exponent and Chinese-Remainder Theorem variants.

#### **zcrypt\_cex4**

device driver for CEX6, CEX5, and CEX4 adapters.

#### **zcrypt\_cex2a**

device driver for CEX3A adapters.


## zcrypt\_pcixcc

device driver for CEX3C adapters.

For information about setting up cryptographic hardware on your mainframe, see *zSeries Crypto Guide Update*, SG24-6870.

## Kernel parameters

You can configure the cryptographic device driver by adding parameters to the kernel parameter line.

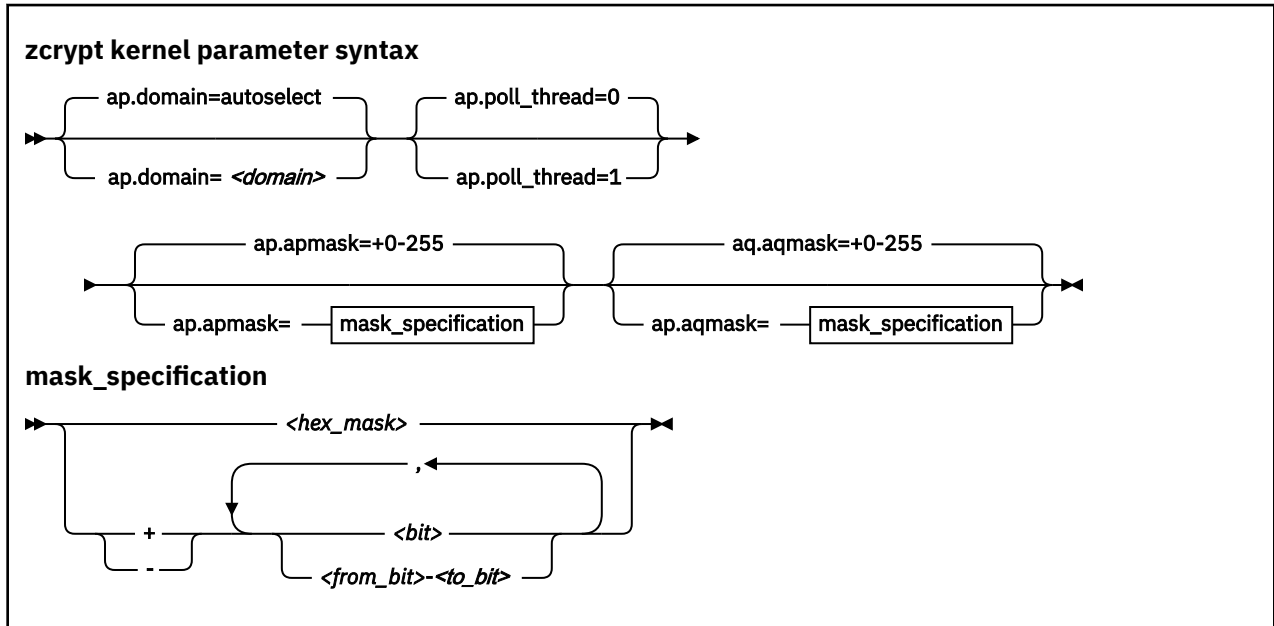

where

### <domain>

is an integer that identifies the default cryptographic domain for the Linux instance. You define cryptographic domains in the LPAR activation profile on the HMC or SE.

The default value (**ap.domain=autoselect**) causes the device driver to choose one of the available domains automatically.

**Important:** Be sure to enter an existing domain. The Trusted Key Entry (TKE) workstation does not find the cryptographic adapters if a non-existing domain is entered here. All CCA applications use the default domain, and do not work correctly if the specified domain does not exist.

### <poll\_thread>

is an integer argument and enables a polling thread to tune cryptographic performance. Valid values are 1 (enabled) or 0 (disabled, this value is the default). For details, see [“Setting the polling thread” on page 444](#).

**Note:** If you are running Linux in an LPAR, AP interrupts are used instead of the polling thread. The polling thread is disabled when AP interrupts are available. See [“Using AP adapter interrupts” on page 444](#).

### ap.apmask= and ap.aqmask=

are two 256-bit masks that specify which AP queues are controlled by the zcrypt device driver and which are available to alternative device drivers, like vfio-ap.

If your Linux instance is a KVM host, the vfio-ap device driver controls AP queues on behalf of KVM guests. While vfio-ap is the only eligible alternative device driver, freeing an AP queue from zcrypt makes it available to vfio-ap. For more information, see [“Freeing host resources from the default device drivers” on page 425](#).

Each bit of the ap.apmask= mask addresses a cryptographic adapter. The leftmost bit corresponds to the adapter with ID 0x00. Generally, the bit number in the mask corresponds to the decimal value

of the adapter ID. If an adapter bit is set to 0, all AP queues for this adapter are available to alternative device drivers, across all domains.

Each bit of the `ap.aqmask=` mask addresses a cryptographic domain. The leftmost bit corresponds to domain 0x0000. Generally, the bit number in the mask corresponds to the decimal value of the domain ID. If a domain bit is set to 0, all AP queues with this domain are available to alternative device drivers, across all adapters.

AP queues are controlled by the `zcrypt` device driver if both the bit for its adapter and for its domain are set to 1. AP queues are available to alternative device drivers if the bit for its adapter, or its domain, or both are set to 0.

By default, all bits in both masks are 1. Therefore, `zcrypt` is the default device driver for all AP queues.

**<hex\_mask>**

specifies a replacement for the default mask. Valid values are 0x followed by 1 - 64 hexadecimal digits. If fewer than 64 digits are specified, the specification is padded with 0s on the right. The value is big-endian. The hexadecimal representation is mapped to the 256-digit binary mask.

**<bit>**

specifies an individual bit number. 0 specifies the leftmost bit. With the plus sign (+) prefix, the bit is set to 1. With the minus sign (-) prefix, the bit is set to 0.

**<from\_bit>-<to\_bit>**

specifies the range of bits from bit number *<from\_bit>* to bit number *<to\_bit>*. With the plus sign (+) prefix, all bits in the range are set to 1. With the minus sign (-) prefix, all bits in the range are set to 0.

Bit numbers can be in decimal or hexadecimal notation. Hexadecimal numbers must be prefixed with 0x. You can specify a comma-separated list of bits and ranges. Such lists are processed left to right.

The hexadecimal representations of the masks are available in `sysfs`. Using `sysfs`, you can change the masks on a running Linux instance, see [“Freeing AP queues for KVM guests” on page 447](#).

## Examples

- The following kernel parameter line specification makes the `zcrypt` device driver operate within the default cryptographic domain "7" with `ap.poll_thread=` enabled:

```
ap.domain=7 ap.poll_thread=1
```

- The following specification makes all AP queues on adapter 0x00 and any adapters with IDs greater than 0x07 and all AP queues with domain ID, 0x0007, 0x0008, 0x0009, 0x000a, and 0x000b available to the `vfio-ap` device driver.

```
ap.apmask=0x7F ap.aqmask=-7-11
```

The following specification with hexadecimal notation for the queue range is equivalent:

```
ap.apmask=0x7F ap.aqmask=-0x7-0xb
```

## Accessing cryptographic devices

The cryptographic device driver registers as a misc device and provides a default device node to user space.

In Red Hat Enterprise Linux 8.1, `udev` creates the device node `/dev/z90crypt` for you. The device node is assigned to the miscellaneous devices.

The `/dev/z90crypt` device node provides unrestricted user space access to a device that represents all AP queues that are available to the Linux instance.

You can create customized device nodes that represent subsets of AP queues and functions, see [“Creating customized device nodes” on page 440](#).

## Creating customized device nodes

The cryptographic device driver can provide and maintain multiple zcrypt device nodes. These nodes can be restricted in terms of cryptographic adapters, domains, and available IOCTLs.

### About this task

You can create device nodes with access to a subset of the AP queues that are available to the Linux instance and that can perform a subset of the functions. Such a device node can be used for access control to cryptographic resources:

- Selective assignment of device nodes to containers, for example, in a Docker setup.
- Linux file permissions for the device nodes can be used to restrict the accessibility for user and group.

### Procedure

1. Create a new device node by issuing a **zcryptctl** command of this form:

```
# zcryptctl create <name>
```

where *<name>* is a unique device name. A device node `/dev/<name>` and a device directory `/sys/devices/virtual/zcrypt/<name>` are created in sysfs.

For more information about **zcryptctl**, see [“zcryptctl - Control access to AP queues and functions” on page 673](#).

#### Example:

```
# zcryptctl create node_1
```

The example creates a device node `/dev/node_1` and a device directory `/sys/devices/virtual/zcrypt/node_1` in sysfs.

2. Set the adapters for the new device node. Issue a **zcryptctl** command of this form:

```
# zcryptctl addap <name> <adapter_id_1>,<adapter_id_2>,<adapter_id_3>,...
```

where *<adapter\_id\_n>* specifies an adapter to which you want this node to have access. You can use the hexadecimal adapter IDs or their equivalent decimal values. Hexadecimal specifications must be prefixed with `0x`.

#### Example:

```
# zcryptctl addap node_1 0x05,0x06,0x07,0x0a
```

Using decimal notation this command would be:

```
# zcryptctl addap node_1 5,6,7,10
```

3. Set the domains for the new device node. Issue a **zcryptctl** command of this form:

```
# zcryptctl adddom <name> <dom_1>,<dom_2>,<dom_3>,...
```

where *<dom\_n>* is a domain to which you want this node to have access. You can use the hexadecimal domain IDs or their equivalent decimal values. Hexadecimal specifications must be prefixed with `0x`.

#### Example:

```
# zcryptctl adddom node_1 0x0006
```

4. Set the IOCTLs for the new device node. Issue a **zcryptctl** command of this form:

```
# zcryptctl addioctl <name> <ioctl_1>,<ioctl_2>,<ioctl_3>,...
```

The available IOCTLs are listed in `arch/s390/include/uapi/asm/zcrypt.h` in the Linux source tree.

### Example:

```
# zcryptctl addioctl node_1 ZSESENDCPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK
```

5. Optional: Set file access permissions on the device node.

## Results

Changes to the masks are instantly applied and affect all applications with an open file descriptor for this zcrypt node immediately.

### Example

To create and define a zcrypt device node for CCA requests on adapters 0x05, 0x06, 0x07, 0x0a and domain 0x0006 using the **zcryptctl** command:

```
# zcryptctl create node_1
# zcryptctl addap node_1 0x05,0x06,0x07,0x0a
# zcryptctl adddom node_1 0x0006
# zcryptctl adiectl node_1 ZSESENDCPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK
```

It is equivalent to using the **zcryptctl config** command with the following configuration file entry:

```
# node 1 for CCA requests on domain 6 - hexadecimal notation
node = node_1
aps = 0x05,0x06,0x07,0x0a
doms = 0x0006
ioctls = ZSESENDCPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK
```

The following equivalent configuration file uses decimal notation for adapters and domains:

```
# node 1 for CCA requests on domain 6 - decimal notation
node = node_1
aps = 5,6,7,10
doms = 6
ioctls = ZSESENDCPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK
```

Alternatively, you can use sysfs attributes to obtain the same results:

```
# echo node_1 > /sys/class/zcrypt/create
# echo +0x05,+0x06,+0x07,+0x0a > /sys/devices/virtual/zcrypt/node_1/apmask
# echo +0x0006 > /sys/devices/virtual/zcrypt/node_1/aqmask
# echo +0x81,+0x5f,+0x58 > /dev/node_1/ioctlmask
```

The apmask and aqmask attributes in the node directory follow the same syntax as the apmask and aqmask attributes at `/sys/bus/ap` (see [“Freeing AP queues for KVM guests”](#) on page 447). Relative values require a plus (+) or minus (-) prefix, can use decimal or hexadecimal notation, and can address individual bits or ranges. You can also specify the complete hexadecimal mask as an absolute value. The sysfs interface requires numeric values for the IOCTLs as listed in `arch/s390/include/uapi/asm/zcrypt.h`.

### What to do next

You can delete the device node with `zcryptctl destroy <name>`.

# Working with cryptographic devices

Typically, cryptographic devices are not directly accessed by users but through user programs. Some tasks can be performed through the sysfs interface.

- [“Displaying information about cryptographic devices” on page 442](#)
- [“Setting devices online or offline” on page 443](#)
- [“Setting the polling thread” on page 444](#)
- [“Using AP adapter interrupts” on page 444](#)
- [“Setting the polling interval” on page 445](#)
- [“Dynamically adding and removing cryptographic adapters” on page 445](#)
- [“Displaying information about the AP bus” on page 450](#)

## Displaying information about cryptographic devices

Use the **lszcrypt** command to display status information about your cryptographic devices; alternatively, you can use sysfs.

### About this task

For information about **lszcrypt**, see [“lszcrypt - Display cryptographic devices” on page 600](#).

Each cryptographic adapter is represented in a sysfs directory of the form

```
/sys/bus/ap/devices/card<XX>
```

where <XX> is the two-digit device index for each device. For example, device 0x1a can be found under `/sys/bus/ap/devices/card1a`. The sysfs directory contains a number of attributes with information about the cryptographic adapter.

Table 58. Cryptographic adapter attributes

Attribute	Explanation
ap_functions	Read-only attribute that represents the function facilities that are installed on this device.
depth	Read-only attribute that represents the input queue length for this device.
hwtype	<p>Read-only attribute that represents the numeric hardware type for this device. The following values are defined:</p> <p><b>11</b> CEX5A, CEX5C, or CEX5P adapters.</p> <p><b>12</b> CEX6A, CEX6C, CEX6P, CEX7A, CEX7C, or CEX7P adapters.</p> <p>The hwtype attribute shows the hardware type as interpreted by the device driver. For example, any cryptographic adapter later than CEX6 might be shown as a CEX6 adapter (type 12). See also the raw_hwtype attribute.</p>
raw_hwtype	Read-only attribute that represents the original hardware type of the cryptographic adapter.
modalias	Read-only attribute that represents an internally used device bus-ID.
online	Read-write attribute that shows whether the device is online (1) or offline (0).

Table 58. Cryptographic adapter attributes (continued)

Attribute	Explanation
pendingq_count	Read-only attribute that represents the number of requests in the hardware queue.
request_count	Read-only attribute that represents the number of requests that are already processed by this device.
requestq_count	Read-only attribute that represents the number of outstanding requests (not including the requests in the hardware queue).
type	Read-only attribute with a name for the device type. The following types are defined: <ul style="list-style-type: none"><li>• CEX5A, CEX5C, CEX5P</li><li>• CEX6A, CEX6C, CEX6P</li></ul>

## Setting devices online or offline

Use the **chzcrypt** command to set cryptographic devices online or offline.

### Procedure

- Preferably, use the **chzcrypt** command with the **-e** option to set cryptographic devices online, or use the **-d** option to set devices offline.

### Examples:

- To set cryptographic devices (in decimal notation) 0, 1, 4, 5, and 12 online issue:

```
# chzcrypt -e 0 1 4 5 12
```

- To set all available cryptographic devices offline issue:

```
# chzcrypt -d -a
```

For more information about **chzcrypt**, see [“chzcrypt - Modify the cryptographic configuration” on page 513](#).

- Alternatively, write 1 to the online sysfs attribute of a cryptographic device to set the device online, or write 0 to set the device offline.

### Examples:

- To set a cryptographic device with device ID 0x3e online issue:

```
# echo 1 > /sys/bus/ap/devices/card3e/online
```

- To set a cryptographic device with device ID 0x3e offline issue:

```
# echo 0 > /sys/bus/ap/devices/card3e/online
```

- To check the online status of the cryptographic device with device ID 0x3e issue:

```
# cat /sys/bus/ap/devices/card3e/online
```

The value is 1 if the device is online or 0 otherwise.

## Setting the polling thread

---

For Linux on z/VM, enabling the polling thread can improve cryptographic performance.

### About this task

Linux in LPAR mode supports interrupts that indicate the completion of cryptographic requests. See [“Using AP adapter interrupts” on page 444](#). If AP interrupts are available, it is not possible to activate the polling thread.

Depending on the workload, enabling the polling thread can increase cryptographic performance. For Linux on z/VM, the polling thread is deactivated by default.

The cryptographic device driver can run with or without the polling thread. When it runs with the polling thread, one processor constantly polls the cryptographic cards for finished cryptographic requests while requests are being processed. The polling thread sleeps when no cryptographic requests are being processed. This mode uses the cryptographic cards as much as possible, at the cost of blocking one processor during cryptographic operations.

Without the polling thread, the cryptographic cards are polled at a much lower rate. The lower rate results in higher latency, and reduced throughput for cryptographic requests, but without a noticeable processor load.

### Procedure

- Use the **chzcrypt** command to set the polling thread.

#### Examples:

- To activate the polling thread issue:

```
# chzcrypt -p
```

- To deactivate the polling thread issue:

```
# chzcrypt -n
```

For more information about **chzcrypt**, see [“chzcrypt - Modify the cryptographic configuration” on page 513](#).

- Alternatively, you can set the polling thread through the `poll_thread` sysfs attribute. This read-write attribute can be found at the AP bus level.

#### Examples:

- To activate a polling thread for a device 0x3e issue:

```
echo 1 > /sys/bus/ap/devices/card3e/poll_thread
```

- To deactivate a polling thread for a cryptographic device with bus device-ID 0x3e issue:

```
echo 0 > /sys/bus/ap/devices/card3e/poll_thread
```

## Using AP adapter interrupts

---

To improve cryptographic performance for Linux instances that run in LPAR mode, use AP interrupts.



## About this task

Using AP interrupts instead of the polling thread frees one processor while cryptographic requests are processed.

During initialization, the `zcrypt` device driver checks whether AP adapter interrupts are supported by the hardware. If so, polling is disabled and the interrupt mechanism is automatically used.

To query whether AP adapter interrupts are used, read the `sysfs` attribute `interrupt` of the device. Another interrupt attribute at the AP bus level, `/sys/bus/ap/ap_interrupts`, indicates that the AP bus is able to handle interrupts.

## Example

To read the interrupt attribute for a device `0x3e` with domain `0xf`, issue:

```
# cat /sys/bus/ap/devices/card3e/3e.000f/interrupt
```

If interrupts are used, the attribute shows "Interrupts enabled", otherwise "Interrupts disabled".

## Setting the polling interval

---

Request polling is supported at nanosecond intervals.

### Procedure

- Use the **lszcrypt** and **chzcrypt** commands to read and set the polling time.

#### Examples:

- To find out the current polling time, issue:

```
# lszcrypt -b
...
poll_timeout=250000 (nanoseconds)
```

- To set the polling time to 1 microsecond, issue:

```
# chzcrypt -t 1000
```

For more information about **lszcrypt** and **chzcrypt**, see [“lszcrypt - Display cryptographic devices”](#) on page 600 and [“chzcrypt - Modify the cryptographic configuration”](#) on page 513.

- Alternatively, you can set the polling time through the `poll_timeout` `sysfs` attribute. This read-write attribute can be found at the AP bus level.

#### Examples:

- To read the `poll_timeout` attribute for the ap bus issue:

```
# cat /sys/bus/ap/poll_timeout
```

- To set the `poll_timeout` attribute for the ap bus to poll, for example, every microsecond, issue:

```
# echo 1000 > /sys/bus/ap/poll_timeout
```

## Dynamically adding and removing cryptographic adapters

---

On an LPAR, you can add or remove cryptographic adapters without the need to reactivate the LPAR after a configuration change.

## About this task

z/VM does not support dynamically adding or removing cryptographic adapters.

Linux attempts to detect new cryptographic adapters and set them online every time a configuration timer expires. Read or modify the expiration time with the **lszcrypt** and **chzcrypt** commands.

For more information about **lszcrypt** and **chzcrypt**, see “[lszcrypt - Display cryptographic devices](#)” on page 600 and “[chzcrypt - Modify the cryptographic configuration](#)” on page 513.

Adding or removing of cryptographic adapters to or from an LPAR is transparent to applications that use clear key functions. If a cryptographic adapter is removed while cryptographic requests are being processed, the device driver automatically resubmits lost requests to the remaining adapters. Special handling is required for secure key.

Secure key requests are submitted to a dedicated cryptographic coprocessor. If this coprocessor is removed or lost, new requests cannot be submitted to a different coprocessor. Therefore, dynamically adding and removing adapters with a secure key application requires support within the application. For more information about secure key cryptography, see *Secure Key Solution with the Common Cryptographic Architecture Application Programmer's Guide*, SC33-8294. You can obtain this publication at

[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_cca.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_cca.html)

Alternatively, you can read or set the configuration timer through the `config_time` sysfs attribute. This read-write attribute can be found at the AP bus level. Valid values for the `config_time` sysfs attribute are in the range 5 - 120 seconds.

For the secure key cryptographic functions on EP11 coprocessors, see *Exploiting Enterprise PKCS #11 using openCryptoki*, SC34-2713. You can obtain it at [https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_ep.html](https://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_ep.html)

## Procedure

You can work with cryptographic adapters in the following ways:

- Add or remove cryptographic adapters by using the SE or HMC.  
After the configuration timer expires, the cryptographic adapter is added to or removed from Linux, and the corresponding sysfs entries are created or deleted.
- Enable or disable a cryptographic adapter by using the **chzcrypt** command.  
The cryptographic adapter is only set online or offline in sysfs. The sysfs entries for the cryptographic adapter are retained. Use the **lszcrypt** command to check the results of the **chzcrypt** command.

## Examples

- To use the **lszcrypt** and **chzcrypt** commands to find out the current configuration timer setting, issue:

```
# lszcrypt -b
...
config_time=30 (seconds)
...
```

In the example, the timer is set to 30 seconds.

- To set the configuration timer to 60 seconds, issue:

```
# chzcrypt -c 60
```

To use sysfs to find out the current configuration timer setting, issue:

- To read the configuration timer setting, issue:

```
# cat /sys/bus/ap/config_time
```

- To set the configuration timer to 60 seconds, issue:

```
# echo 60 > /sys/bus/ap/config_time
```

## Freeing AP queues for KVM guests

By default, the `zcrypt` device driver controls all AP queues on a Linux instance. Free AP queues from `zcrypt` to make them available to alternative device drivers, such as `vfio-ap`. The `vfio-ap` device driver controls AP queues on behalf of KVM guests. While `vfio-ap` is the only eligible alternative device driver, freeing an AP queue from `zcrypt` makes it available to `vfio-ap`.

### Before you begin

Free AP queues only if your Linux instance is a KVM host that needs to provide these AP queues to its KVM guests.



#### Attention:

Do not change the settings for adapters or domains that are in use or reserved for another exploiter. In particular, do not mark adapters or queues for the `zcrypt` device driver while they are assigned to a KVM guest.

### About this task

Two masks rule which AP queues are controlled by the `zcrypt` device driver and which are available to alternative device drivers, such as `vfio-ap`.

#### Adapter mask

The adapter mask is a 256-bit value, each bit representing a cryptographic adapter. The leftmost bit represents the adapter with ID `0x00`. In `sysfs`, the mask is available as the value of attribute `/sys/bus/ap/apmask`. If an adapter bit is set to 0, all AP queues on this adapter are available for alternative device drivers.

#### Domain mask

The domain mask is a 256-bit value, each bit representing a cryptographic domain. The leftmost bit represents the domain with ID `0x0000`. In `sysfs`, the mask is available as the value of attribute `/sys/bus/ap/aqmask`. If a domain bit is set to 0, all AP queues with this domain are available for alternative device drivers, across adapters.

The `sysfs` representation of both masks is a big-endian, 64-bit, hexadecimal value. For example:

- For an adapter mask `0x8000 . . .`, the bit for adapter `0x00` is 1 and all others are 0.
- For a adapter mask `0xFF00 . . .`, bits for adapters `0x00` to `0x07` are 1 and all others are 0.

`zcrypt` handles all AP queues for which both the adapter bit and the domain bit are set to 1. The default for both masks is 1 for all bits. Hence, the default value for both masks in `sysfs` is `0xff` and `zcrypt` is the default device driver for all AP queues. To free an AP queue for alternative device drivers, the corresponding adapter bit, or the corresponding domain bit, or both must be set to 0.

You can use module parameters (see [“Kernel parameters” on page 438](#)) to set the mask.

### Procedure

Use the following methods to change a mask on a running Linux instance.

- Write a new mask value to the `sysfs` attribute.

You can write a 1 - 64-digit hexadecimal number to the respective `sysfs` attribute to replace the mask. If fewer than 64 digits are specified, the number is padded with 0s on the right.

#### Examples:

- To set the bit for the adapters with ID 0x00 and 0x01 to 0 and all other bits to 1, issue the following command:

```
# echo 0x3fffffffffffffffffffffffffffffffffffffffff > /sys/bus/ap/apmask
```

- To set the bit for the domains with ID 0x0000 and 0x0001 to 1 and all other bits to 0, issue the following command:

```
# echo 0xc > /sys/bus/ap/aqmask
```

- Set an individual bit value.

You can set an individual bit by specifying the bit-number, counting from the left, with one of the following prefixes:

-

The minus sign (-) sets the bit to 0.

+

The plus sign (+) sets the bit to 1.

Bit numbers can be in decimal or hexadecimal notation. Hexadecimal numbers must be prefixed with 0x.

#### Examples:

- To set the bit for the adapter with ID 0x01 to 0, issue the following command:

```
# echo -1 > /sys/bus/ap/apmask
```

- To set the bit for the domain with ID 0x000a to 1, issue the following command:

```
# echo +10 > /sys/bus/ap/aqmask
```

The following equivalent command uses hexadecimal notation:

```
# echo +0xa > /sys/bus/ap/aqmask
```

**Note:** Do not omit the prefix. Plain numbers that can be interpreted as hexadecimal values replace the entire mask, even if they are specified without the 0x prefix.

- Set a range of bit values.

Using the same prefixes as for individual bits, you can specify a range of bit-numbers to set all bits in the range to the same value. Specify a range by specifying the bit numbers of the first and last bit in the range, separated by a hyphen (-).

#### Examples:

- To set the bit for the adapters with IDs 0x00, 0x01, 0x02, and 0x03 to 0, issue the following command:

```
# echo -0-3 > /sys/bus/ap/apmask
```

- To set the bit for the domains with ID 0x0008, 0x0009, 0x000a, 0x000b, and 0x000c to 1, issue the following command:

```
# echo +8-12 > /sys/bus/ap/aqmask
```

The following equivalent command uses hexadecimal notation:

```
# echo +0x8-0xc > /sys/bus/ap/aqmask
```

- To set all domains to 0 issue:



## Displaying information about the AP bus

Use the **lszcrypt -b** command to display status information about the AP bus; alternatively, you can use `sysfs`.

### About this task

For information about **lszcrypt -b**, see [“lszcrypt - Display cryptographic devices” on page 600](#).

The AP bus is represented in `sysfs` as a directory of the form

```
/sys/bus/ap
```

The `sysfs` directory contains a number of attributes with information about the AP bus.

Table 59. AP bus attributes

Attribute	Explanation
<code>ap_domain</code>	Read-write attribute that represents the default domain selected by the kernel. Alternatively, you can select the domain using a kernel parameter, or a module parameter during module load. See <a href="#">“Kernel parameters” on page 438</a> .
<code>ap_max_domain_id</code>	Read-only attribute that represents the largest possible domain ID. Domain IDs can range from 0 to this number, which depends on the mainframe model.
<code>ap_control_domain_mask</code>	Read-only attribute that represents the installed control domain facilities as a 32-byte field in hexadecimal notation. A maximum number of 256 domains can be addressed. Each bit position represents a dedicated control domain.
<code>ap_usage_domain_mask</code>	Read-only attribute that represents the installed usage domain facilities as a 32-byte field in hexadecimal notation. A maximum number of 256 domains can be addressed. Each bit position represents a usage domain.
<code>ap_interrupts</code>	Read-only attribute that indicates whether interrupt handling for the AP bus is enabled.
<code>apmask</code>	Read-write attribute that represents up to 256 cryptographic adapters. The attribute is a 64-digit hexadecimal representation of the 256-digit binary mask. In combination with the <code>aqmask</code> attribute, it marks a set of AP queues that are reserved for device drivers other than <code>zcrypt</code> . See <a href="#">“Freeing AP queues for KVM guests” on page 447</a> .
<code>aqmask</code>	Read-write attribute that represents 256 cryptographic domains. The attribute is a 64-digit hexadecimal representation of the 256-digit binary mask. In combination with the <code>apmask</code> attribute, it marks a set of AP queues that are reserved for device drivers other than <code>zcrypt</code> . See <a href="#">“Freeing AP queues for KVM guests” on page 447</a> .
<code>config_time</code>	Read-write attribute that represents a time interval in seconds used to detect new crypto devices.
<code>poll_thread</code>	Read-write attribute that indicates whether polling for the AP bus is enabled.
<code>poll_timeout</code>	Read-write attribute that represents the time interval of the poll thread in nanoseconds.

## Example

```
# lszcrypt -b
ap_domain=0x6
ap_max_domain_id=0x54
ap_interrupts are enabled
config_time=30 (seconds)
poll_thread is disabled
poll_timeout=250000 (nanoseconds)
```

## External programming interfaces

---

Applications can directly access the cryptographic device driver through an API.

**Programmers:** This information is intended for those who want to program against the cryptographic device driver or against the available cryptographic libraries.

For information about the library APIs, see the following files in the Linux source tree:

- The libica library `/usr/include/ica_api.h`
- The openCryptoki library `/usr/include/opencryptoki/pkcs11.h`
- The CCA library `/opt/IBM/CCA/include/csulinc1.h`
- The EP11 library `/usr/include/ep11-host-devel/ep11.h` and `ep11adm.h`

`ep11.h` and `ep11adm.h` are included in the EP11 devel package. `pkcs11.h` is included in the openCryptoki devel package. `ica_api.h` is provided by the libica-devel package. `csulinc1.h` is present after the csulcca package is installed. Install the libica-devel-*<version>* RPM. You can obtain the openCryptoki package from sourceforge at: [sourceforge.net/projects/opencryptoki](http://sourceforge.net/projects/opencryptoki)

### Clear key cryptographic functions

The libica library provides a C API to clear-key cryptographic functions that are supported by IBM Z hardware. You can configure both openCryptoki (by using the icatoken) and openssl (by using the ibmca engine) to use IBM Z clear-key cryptographic hardware support through libica. See *libica Programmer's Reference*, SC34-2602 for details about the libica functions.

If you must circumvent libica and access the cryptographic device driver directly, your user space program must open the `zcrypt` device node, and submit the cryptographic request with an IOCTL. The IOCTL subfunction ICARSAMODEXPO performs RSA modular exponent encryption and decryption. The IOCTL ICARSACRT performs RSA CRT decryption. See the cryptographic device driver header file in the Linux source tree:

`/usr/include/asm/zcrypt.h`

### Secure key cryptographic functions

To use secure key cryptographic functions in your user space program, see *Secure Key Solution with the Common Cryptographic Architecture Application Programmer's Guide*, SC33-8294. You can obtain this publication at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_cca.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_cca.html).

To use secure key cryptographic functions in your user space program by accessing an EP11 coprocessor adapter, see *Exploiting Enterprise PKCS #11 using openCryptoki*, SC34-2713. You can obtain it at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/sec\\_hw\\_supp.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/sec_hw_supp.html)

### Reading true random numbers

To read true random numbers, a user space program must open the `hwrng` device and read as many bytes as needed from the device.

**Tip:** Using the output of the `hwrng` device to periodically reseed a pseudo-random number generator might be an efficient use of the random numbers.





# Chapter 49. Pseudorandom number generator device driver

The pseudorandom number generator (PRNG) device driver provides user-space applications with pseudorandom numbers generated by the IBM Z CP Assist for Cryptographic Function (CPACF).

The PRNG device driver supports the Deterministic Random Bit Generator (DRBG) requirements that are defined in NIST Special Publication 800-90/90A. The device driver uses the SHA-512 based DRBG mechanism.

To use the SHA-512 based DRBG, the device driver requires version 5 of the Message Security Assist (MSA), which is available as of the zEC12 and zBC12 with the latest firmware level. During initialization of the prng kernel module the device driver checks for the prerequisite.

If the prerequisites for the SHA-512 based DRBG are not fulfilled, the device driver uses the Triple Data Encryption Standard (TDES) algorithm instead. In TDES mode, the PRNG device driver uses a DRBG in compliance with ANSI X9.17 based on the TDES cipher algorithm. You can force the fallback to TDES mode by using the `mode=1` module parameter.


Terminology hint: Various abbreviations are commonly used for Triple Data Encryption Standard, for example: TDES, triple DES, 3DES, and TDEA.

## Setting up the pseudo-random number device driver

In Red Hat Enterprise Linux, the pseudo-random number device driver is compiled as a module. To use it, you must load the device driver module, and optionally make it available to non-root users.

### Module parameters

You can load and configure the PRNG device driver if it was compiled as a separate module.

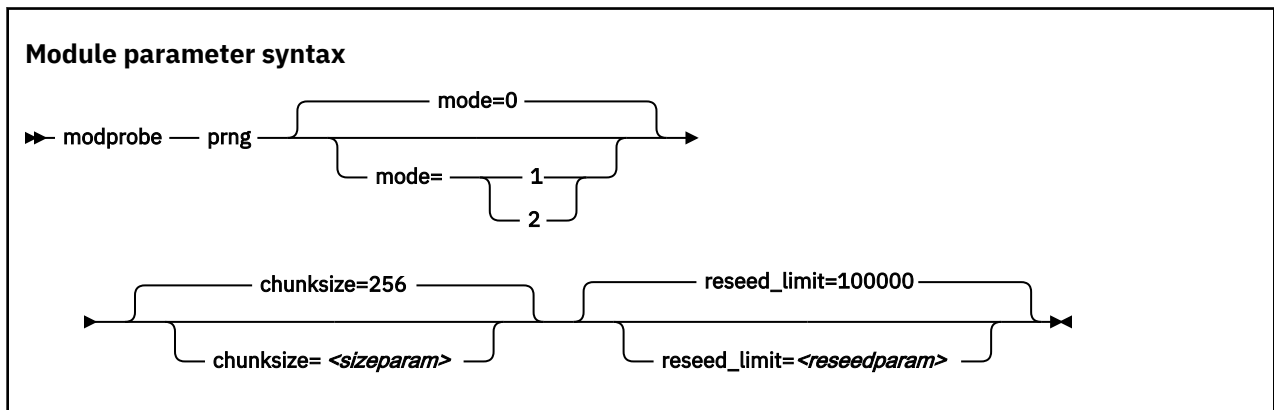

where:

#### **mode=**

specifies the mode in which the device driver runs:

#### **0**

Default. In this mode, the device driver automatically detects the MSA extension level and feature enablement. The device driver runs in SHA512 mode if the requirements are fulfilled, otherwise it falls back to TDES mode.

#### **1**

forces the device driver to run in TDES mode. The device driver starts only if the requirements for TDES mode are fulfilled.

2

forces the device driver to run in SHA512 mode. The device driver starts only if the requirements for SHA512 mode are fulfilled. The device driver does not fall back to TDES mode.

**<sizeparam>**

adjusts the random-buffer block size that the device driver uses to generate new random bytes. In TDES mode, this value can be in the range 8 - 65536, for SHA512 mode, the range is 64 - 65536. The default is 256 bytes.

**<reseedparam>**

adjusts the reseed limit in SHA512 mode. Multiply this value with the chunksize to obtain the reseed boundary in bytes. The value can be in the range 10000 - 100000. The default is 100000. In TDES mode, the reseed limit is a constant value of 4096 bytes.

## Controlling access to the device node

Red Hat Enterprise Linux by default assigns access mode 0644 to /dev/prandom.

To restrict access to the device node to root users, add the following udev rule. It prevents non-root users from reading random numbers from /dev/prandom.

```
KERNEL=="prandom", MODE="0600", OPTIONS="last_rule"
```

If access to the device is restricted to root, add the following udev rule. It automatically extends access to the device to other users.

```
KERNEL=="prandom", MODE="0644", OPTIONS="last_rule"
```

## Working with the PRNG device driver

Read random numbers and control the settings of the PRNG device driver.

Tasks include:

- [“Reading pseudo-random numbers” on page 454](#)
- [“Displaying PRNG information” on page 454](#)
- [“Reseeding the PRNG” on page 456](#)
- [“Setting the reseed limit” on page 455](#)

## Reading pseudo-random numbers

The pseudo-random number device is read-only. Use the read function, cat program, or dd program to obtain random numbers.

### Example

In this example bs specifies the block size in bytes for transfer, and count specifies the number of records with block size. The bytes are written to the output file.

```
dd if=/dev/prandom of=<output file name> bs=<xxxx> count=<nnnn>
```

## Displaying PRNG information

Read the attributes of the prandom device in sysfs.

### About this task

The sysfs representation of a PRNG device is a directory: /sys/devices/virtual/misc/prandom. This sysfs directory contains a number of attributes with information about the device.

Table 60. Attributes with PRNG information

Attribute	Explanation
chunksize	The size, in bytes, of the random-data bytes buffer that is used to generate new random numbers. The value can be in the range 64 bytes - 64 KB. The default is 256 bytes. It is rounded up to the next 64-byte boundary and can be adjusted as a module parameter when you start the module.
byte_counter	The number of random bytes generated since the PRNG device driver was started. You can reset this value only by removing and reloading the kernel module, or rebooting Linux (if PRNG was compiled into the kernel). This attribute is read-only.
errorflag	SHA512 mode only: 0 if the PRNG device driver is instantiated and running well. Any other value indicates a problem. If there is an error indication other than 0: <ul style="list-style-type: none"> <li>• The DRBG does not provide random data bytes to user space</li> <li>• The <code>read()</code> function fails</li> <li>• The error code <code>errno</code> is set to <code>EPIPE</code> (broken pipe)</li> </ul> This attribute is read-only.
mode	SHA512 if the PRNG device driver runs in SHA512 mode, TDES if the PRNG device driver runs in TDES mode. This attribute is read-only.
reseed	SHA512 mode only: An integer, writable only by root. Write any integer to this attribute to trigger an immediate reseed of the PRNG. See “Reseeding the PRNG” on page 456.
reseed_limit	SHA512 mode only: An integer, writable only by root to query or set the reseed counter limit. Valid values are in the range 10000 - 100000. The default is 100000. See “Setting the reseed limit” on page 455.
strength	SHA512 mode only: A read-only integer that shows the security strength according to NIST SP800-57. Returns the integer value of 256 in SHA512 mode.

### Procedure

Issue a command of this form to read an attribute:

```
# cat /sys/devices/virtual/misc/prandom/<attribute>
```

where *<attribute>* is one of the attributes of [Table 60 on page 455](#).

### Example

This example shows a prandom device that is running in SHA512 mode, set to reseed after 2.56 MB:

```
# cat /sys/devices/virtual/misc/prandom/chunksize
256
# cat /sys/devices/virtual/misc/prandom/mode
2
# cat /sys/devices/virtual/misc/prandom/reseed_limit
100000
```

## Setting the reseed limit

The PRNG reseeds after `chunksize × reseed_limit` bytes are read. By default,  $100000 \times 256 \approx 25.6$  MB can be read before an automatic reseed occurs.

### Procedure

To set the number of times a `chunksize` amount of random data can be read from the PRNG before reseeding, write the number to the `reseed_limit` attribute.

For example:

```
# echo 10000 > /sys/devices/virtual/misc/prandom/reseed_limit
```

The `reseed_limit` value must be in the range 10000 - 100000.

## Reseeding the PRNG

You can force a reseed by writing to the `reseed` attribute.

### Procedure

To reseed the PRNG, write an integer to its `reseed` attribute:

```
# echo 1 > /sys/devices/virtual/misc/prandom/reseed
```

Writing any integer value to this attribute triggers an immediate reseed of the PRNG instance.

---

## Chapter 50. True random-number generator device driver

The true random number generator (TRNG) device driver provides user-space applications with random data generated from the IBM Z hardware CPACF true random source.

### Setting up the TRNG device driver

---

The true random-number generator can be built into the kernel or compiled as a separate module.

The true random-number generator requires Message-Security-Assist Extension 7 (MSA 7), which is available as of the IBM z14. During initialization of the TRNG kernel module, or, if TRNG is compiled into the kernel, during kernel startup, the device driver checks for the prerequisite. If the prerequisite is not fulfilled, the device driver silently exits.

The TRNG device driver module registers itself to the CPU feature MSA. The device driver is then loaded automatically. However, you can activate the TRNG device driver manually with the command:

```
modprobe s390-trng
```

There are no kernel or module parameters for the TRNG device driver.

#### Device nodes for random data

The true random-number generator device driver provides two interfaces to user space applications: the device node `/dev/trng` for direct access, and the generic device node `/dev/hwrng`.

The `/dev/hwrng` node appears when the TRNG or another source of random data registers with the hwrng device driver. If both the TRNG and a CCA coprocessor are registered, the TRNG takes precedence.

As of the z14, the kernel random device driver also uses the CPACF TRNG true random source through the `arch_get_random_seed_*` functions. The kernel random device driver provides two device nodes, `/dev/random` and `/dev/urandom`. The `arch_get_random_seed_*` functions require the CPACF TRNG.

### Working with the TRNG device driver

---

Read random numbers and retrieve the counters of the TRNG device driver.

Tasks include:

- [“Reading random numbers” on page 457](#)
- [“Displaying TRNG information” on page 458](#)

#### Reading random numbers

The TRNG device is read-only. Use the read function, cat program, or dd program to obtain random numbers.

##### Example

In this example `bs` specifies the block size in bytes for transfer, and `count` specifies the number of records with block size. The bytes are written to the output file.

```
dd if=/dev/trng of=<output file name> bs=<xxxx> count=<nnnn>
```

## Displaying TRNG information

Read the `byte_counter` attribute of the TRNG device in sysfs.

### About this task

The sysfs representation of a TRNG device is a directory: `/sys/devices/virtual/misc/trng`. This sysfs directory contains an attribute, `byte_counter`, with statistical data.

### Procedure

Issue this command to read the `byte_counter` attribute:

```
# cat /sys/devices/virtual/misc/trng/byte_counter
```

### Example

To see statistics of a TRNG device, issue:

```
# cat /sys/devices/virtual/misc/trng/byte_counter
trng: 6187
hwrng: 528
arch: 1319696
total: 1326411
```

Where:

#### **trng**

shows the number of bytes delivered through the `/dev/trng` device node.

#### **hwrng**

shows the bytes retrieved from the generic `hw_rng` device driver and contributed to `/dev/hwrng`.

#### **arch**

shows the amount of data that is supplied by the arch random implementation and delivered to the random device driver device nodes `/dev/random` and `/dev/urandom`.

#### **total**

shows the sum of all bytes.

---

## Chapter 51. Protected key device driver

The protected key device driver provides functions for generating and verifying protected keys.

Protected keys are encrypted with wrapping keys that, for Linux in LPAR mode, are specific to the LPAR. For guests of z/VM or KVM, the wrapping key is specific to the guest. Both the wrapping keys and the clear key values of protected keys are invisible to the operating system. Protected keys are designed for accelerated encryption and decryption with CPACF. For more information, see the chapter about protected keys in *z/Architecture Principles of Operation*, SA22-7832.

### Functions

The device driver provides the following functions to cryptographic applications.

The following secure key functions require a Crypto Express adapter:

- Generate a secure key from random data, then generate a protected key from the secure key.

The secure key must be available to create a new version of the protected key whenever the current protected key is invalidated.

- Generate a secure key from a clear key, then generate a protected key from the secure key.

The clear key must be in memory when the protected key is generated. Thereafter, the clear key can be deleted.

The secure key must be available to create a new version of the protected key whenever the current protected key is invalidated.

The following functions do not require a Crypto Express adapter:

- Generate a protected key from a clear key. The clear key must be in memory when the protected key is generated.

The clear key must also be available to create a new protected key if the existing protected key is invalidated.

- Generate a protected AES key from random data.

The effective clear key is never exposed in memory.

**Important:** The key is volatile and cannot be recreated if lost, for example during a reboot. Use a protected key generated from random data only to protect transient data.

The device driver also provides an in-kernel interface to generate protected keys. This interface is used, for example, by the `paes_s390` module.

### Prerequisites

The protected key device driver requires the message-security-assist-extension 3 facility (MSA level 3), which was introduced with z196.

The protected key device driver requires permission for the AES key import functions. To grant this permission, go to the security settings within the profile of the applicable LPAR on the HMC. In the **CPACF Key Management Operations** section, select the **Permit AES Key import functions** option. For z/VM and KVM guests, the LPAR in which the hypervisor runs requires this option.

Secure keys are encoded with a master key that is held in an AP queue. Functions that involve secure keys require an IBM Crypto Express adapter in CCA coprocessor mode with a valid master key. For Linux on z/VM, the adapter must be dedicated to the z/VM guest virtual machine.

## Loading the device driver module

---

The protected key device driver is compiled as a separate module, `pkey`. This module is required for working with protected keys.

Load the `pkey` module with the **`modprobe`** command. The `pkey` module has no module parameters.

```
# modprobe pkey
```

## Generating volatile protected keys by using the pkey device driver

---

You can generate protected keys from random data by reading the binary `sysfs` `pkey` attributes.

### About this task

You do not need a Crypto Express adapter to generate a protected key from random data.

The `/sys/devices/virtual/misc/pkey/protkey` directory contains an attribute for each available key type. Read an attribute to obtain a protected key token.

### Procedure

Go to the `protkey` subdirectory. The following attributes are available:

- `protkey_aes_128`
- `protkey_aes_192`
- `protkey_aes_256`
- `protkey_aes_128_xts`
- `protkey_aes_256_xts`

When reading from an attribute, you receive exactly one protected-key token. That is, for non-XTS keys, you get 80 bytes. For attributes related to the XTS cipher mode, you get two concatenated protected-key tokens, that is, you get 160 bytes.

**Important:** Do not use protected keys that are generated from random data to encrypt persistent data.

Alternatively to `sysfs`, you can use the `ioctl` calls, see [“External programming interfaces ” on page 462](#).

For secure key tokens, see [“Generating secure keys using the pkey device driver” on page 460](#)

## Generating secure keys using the pkey device driver

---

A secure key generated by `pkey` obtains a secure key based on random data from an AP queue. Such keys can be used for example, for swap disks where you might want a new key to be generated at every boot. Secure keys for this and other purposes can be read from secure key `sysfs` attributes.

### About this task

The `/sys/devices/virtual/misc/pkey/ccadata` directory contains an attribute for each available key type. Read an attribute to obtain a secure key token.

### Procedure

Go to the `ccadata` subdirectory. The following attributes are available:

- `ccadata_aes_128`
- `ccadata_aes_192`



- ccadata\_aes\_256
- ccadata\_aes\_128\_xts
- ccadata\_aes\_256\_xts

Alternatively to sysfs, you can use the ioctl calls, see [“External programming interfaces ” on page 462.](#)

## Setting up an encrypted swap disk

You can use a volatile protected key generated by the pkey device driver to encrypt a swap disk.

### About this task

Because swap disks are discarded on reboot, volatile encryption keys are an option. You can generate volatile protected keys or secure keys from random data.

**Important:** Use a protected key based on random data for cases where the key is not needed after a reboot. In particular, do not use such a key with:

- KVM guest migration
- z/VM live guest relocation in a single system image (SSI)
- Suspend and resume

### Procedure

1. Add an entry to `/etc/crypttab`. To encrypt the swap device using a protected key, the entry must point to one of the sysfs attributes within the `protkey` directory. Use the attribute for the required key type (see [“Generating volatile protected keys by using the pkey device driver” on page 460](#)). For example:

```
# <name>    <device>    <password>    <options>
swap        /dev/dasdx    /sys/devices/virtual/misc/pkey/protkey/protkey_aes_256_xts    swap,\
                                                    cipher=paes-xts-plain64,size=1280
```

The swap option causes an **mkswap** to be performed after the dm-crypt device is set up.

**Tip:** Consider adding the `sector-size=4096` option to increase the performance of dm-crypt encrypted disks with large block sizes.

2. Add an entry to `/etc/fstab` to use the device-mapper device swap as swap device: For example:

```
<filesystem>  <dir>    <type>    <options>    <dump>    <pass>
/dev/mapper/swap  none     swap      defaults     0          0
```

3. Ensure that the pkey kernel module is loaded during system startup before `/etc/crypttab` is evaluated.

Check that a configuration file called `s390-pkey.conf` is in the `/usr/lib/modules-load.d/` directory. The configuration file must contain:

```
pkey
```

The `modules-load.d` directory causes the modules to be loaded early during startup, before the swap disk is initiated.

### Results

During system startup, `/etc/crypttab` is evaluated, and a dm-crypt device is set up in plain mode as a swap device, using protected key AES in XTS cipher mode. The random protected AES key is read from `/sys/devices/virtual/misc/pkey/protkey/protkey_aes_256_xts`. Its size is 2x80 bytes, which is 1280 bits.

Linux now runs with a swap device that is encrypted with a protected key.

## External programming interfaces

Applications can use the protected key device driver through ioctls or corresponding kernel APIs.

**Programmers:** This information is intended for programmers of cryptographic applications who want to use protected keys for accelerated cryptographic operations with CPACF.

Issue ioctls on the misc character device `/dev/pkey` to generate and handle protected keys. The ioctl interface, including the required defines and structure definitions, is described in `arch/s390/include/uapi/asm/pkey.h`. Each ioctl has a matching kernel API that is also described in this file.

Table 61. ioctls of the protected key device driver		
Name	Structure passed	Description
PKEY_GENSECK	struct pkey_genseck	Obtain a random secure key from an AP queue. The secure key is encrypted with the master key of the AP queue.
PKEY_CLR2SECK	struct pkey_clr2seck	Obtain a secure key from an AP queue. The secure key is generated from a specified clear key and encrypted with the master key of the AP queue.
PKEY_SEC2PROTK	struct pkey_sec2protk	Obtain a protected key from an AP queue. The protected key is generated from a specified secure key.
PKEY_CLR2PROTK	struct pkey_clr2protk	Obtain a protected key. The protected key is generated from a specified clear key.
PKEY_FINDCARD	struct pkey_findcard	Find an AP queue that holds the applicable master key for a specified secure key.
PKEY_SKEY2PKEY	struct pkey_skey2pkey	Find an AP queue that holds the applicable master key for a specified secure key. Then use that AP queue to obtain a protected key that is generated from the secure key. This ioctl call combines PKEY_FINDCARD and PKEY_SEC2PROTK.
PKEY_GENPROTK	struct pkey_genprotk	Generates a volatile protected key using pkey.
PKEY_VERIFYPROTK	struct pkey_verifyprotk	Verifies an AES protected key.
PKEY_KEYBLOB2PKEY	struct pkey_kblob2pkey	Transforms a key blob of any type into a protected key.

# Chapter 52. Hardware-accelerated in-kernel cryptography

The Linux kernel implements cryptographic operations for kernel subsystems like dm-crypt and IPSec. Applications can use these operations through the kernel cryptographic API.

In-kernel cryptographic and checksum operations can be performed by platform-specific implementations instead of the generic implementations within the Linux kernel. On IBM Z, hardware-accelerated processing is available for some of these operations.

## Hardware dependencies and restrictions

The cryptographic operations that can be accelerated by hardware implementations depend on your IBM Z hardware features and mode of operating Red Hat Enterprise Linux 8.1.

The following table provides an overview of the supported cryptographic standards and the earliest mainframe with hardware-acceleration for the associated operations:

Table 62. Hardware prerequisites	
Algorithms for	Hardware-acceleration available as of
SHA-1	z990
SHA-256	z9 <sup>®</sup>
SHA-512	z10
DES and TDES	z990 for the ECB and CBC modes z196 for the CTR mode
AES	z9 for the ECB and CBC modes with 128-bit keys z10 for the ECB and CBC modes for all AES key sizes z196 for the CTR mode for all AES key sizes z196 for XTS mode for 256-bit and 512-bit keys z14 for GCM for 128-bit, 192-bit, and 256-bit keys
GHASH	z196
PAES	z196 (AES with protected key)
CRC32	z13 for CRC-32 (IEEE 802.3 Ethernet) and CRC-32C (Castagnoli)

### CPACF dependencies

Hardware-acceleration for DES, TDES, AES, GHASH, and PAES requires the Central Processor Assist for Cryptographic Function (CPACF). Read the features line from `/proc/cpuinfo` to find out whether the CPACF feature is enabled on your hardware.

### Example:

```
# grep features /proc/cpuinfo
features          : esan3 zarch stfle msa ldisp eimm dfp edat etf3eh highgprs te vx sie
```

In the output line, `msa` indicates that the CPACF feature is enabled. For information about enabling CPACF, see the documentation for your IBM Z hardware.

## Vector Extension Facility dependencies

Hardware-acceleration for CRC32 algorithms requires the Vector Extension Facility. Read the features line from `/proc/cpuinfo` to find out whether this facility is available on your hardware.

### Example:

```
# grep features /proc/cpuinfo
features      : esan3 zarch stfle msa ldisp eimm dfp edat etf3eh highgprs te vx sie
```

In the output line, vx indicates that the Vector Extension Facility is available.

## FIPS restrictions of the hardware capabilities

If the kernel runs in Federal Information Processing Standard (FIPS) mode, only FIPS 140-2 approved algorithms are available. DES, for example, is not approved by FIPS 140-2.

Read `/proc/sys/crypto/fips_enabled` to find out whether your kernel runs in FIPS mode.

### Example:

```
# cat /proc/sys/crypto/fips_enabled
0
```

The kernel of the example does not run in FIPS mode. For kernels that run in FIPS mode, the output of the command is 1.

You control the FIPS mode with the fips kernel parameter, see [“fips - Run Linux in FIPS mode” on page 687](#).

For more information about FIPS, see [csrc.nist.gov/publications/detail/fips/140/2/final](https://csrc.nist.gov/publications/detail/fips/140/2/final).

## Loading the support modules

Load support modules to enable hardware-acceleration for specific cryptographic operations. None of these modules have module parameters.

### sha512\_s390

enables hardware-acceleration for SHA-384 and SHA-512 operations. sha512\_s390 requires the sha\_common module.

### ghash\_s390

enables hardware-acceleration for Galois hashes.

### aes\_s390

enables hardware-acceleration for AES encryption and decryption for the following modes of operation:

- ECB, CBC, and CTR for key lengths 128, 192, and 256 bits
- XTS for key lengths 128 and 256 bits

### des\_s390

enables hardware-acceleration for DES and TDES for the following modes of operation: ECB, CBC, and CTR.

### crc32-vx\_s390

enables hardware-acceleration for CRC-32 (IEEE 802.3 Ethernet) and CRC-32C (Castagnoli).

### paes\_s390

enables protected key AES encryption and decryption for the following modes of operation:

- ECB, CBC, and CTR for key lengths 128, 192, and 256 bits
- XTS for key lengths 128 and 256 bits

The `paes_s390` module requires the `pkey` device driver, see [Chapter 51, “Protected key device driver,”](#) on page 459. The `paes_s390` module accepts key tokens of different types as key material, as produced by the `pkey` driver:

- Secure key tokens. For secure key tokens, the module needs a CCA cryptographic adapter. For more information about secure key tokens, see [“Generating secure keys using the pkey device driver”](#) on page 460
- Protected key tokens from random data. No cryptographic adapter is needed. For more information about protected key tokens from random data, see [“Generating volatile protected keys by using the pkey device driver”](#) on page 460.

Modules for SHA-1 and SHA-256 operations are built into the kernel.

**Mainframe hardware prior to z14:** To use CPACF for AES-GCM operations, you must load both the `aes_s390` and `ghash_s390` module.

**Tip:** Load the modules with `modprobe`. `modprobe` handles dependencies on other modules for you.

**Example:**

```
# modprobe sha512_s390
```

## Confirming hardware support for cryptographic operations

Read `/proc/crypto` to confirm that cryptographic operations are performed with hardware support.

### Procedure

Read the driver lines from the content of `/proc/crypto`.

**Example:**

```
# cat /proc/crypto | grep driver
driver      : sha512-s390
driver      : sha224-s390
driver      : sha256-s390
driver      : sha1-s390
driver      : ghash-s390
...
driver      : crc32c-vx
driver      : crc32be-vx
driver      : crc32-vx
```

Each line that ends in `-s390` indicates hardware-acceleration for a corresponding algorithm or mode. Lines that end in `-vx` indicate hardware-acceleration for CRC32 checksums.



## Chapter 53. Instruction execution protection

The instruction execution protection feature on IBM mainframes protects against data execution, similar to the NX feature on other architectures.


Instruction execution protection prevents stack-overflow exploits and generally makes a system insensitive to buffer-overflow attacks.

Data instruction protection is available on IBM mainframe hardware with the IEP feature. For Linux as a guest of a hypervisor, the hypervisor must support and use the instruction execution protection feature. For example, Linux as a guest of KVM must run on a KVM host with kernel 4.11 or later, and with the IEP feature enabled.

### Setting up instruction execution protection

By default, Linux uses the instruction execution protection feature if it is available. You can use the `noexec` kernel parameter to disable the feature in Linux.

#### Kernel parameter for instruction execution protection



If set to on, `noexec` enables instruction execution protection, this is the default. If set to off, `noexec` disables instruction execution protection.

### Controlling stack execution protection

To prevent stack-overflow exploits, the stack of a binary or shared library must be marked as not executable.

#### About this task

Use the **`execstack`** command to set, clear, or query the executable stack flag of ELF binaries and shared libraries (GNU\_STACK). The `execstack` command is available from the prelink package. For details about **`execstack`**, see the man page.

#### Example

- Set and query the executable stack flag.

```
# execstack -s /usr/bin/find
# execstack -q /usr/bin/find
X /usr/bin/find
```

The leading X at the beginning of the query output line indicates that the stack is executable.

**Hint:** You can also use the **`readelf`** command to confirm that the stack can be executed.

```
# readelf -a /usr/bin/find | grep GNU_STACK -A 1
GNU_STACK 0x0000000000000000 0x0000000000000000 0x0000000000000000
0x0000000000000000 0x0000000000000000 RWE 8
```

The RWE towards the end of the output line means read/write/execute. You can obtain the **`readelf`** command as part of the `binutils` package. For command details, see the man page.

- Clear and query the executable stack flag.

```
# execstack -c /usr/bin/find
# execstack -q /usr/bin/find
- /usr/bin/find
```

The leading - at the beginning of the query output line indicates that the stack is not executable.

**Hint:** You can also use the **readelf** command to confirm that the stack cannot be executed.

```
# readelf -a /usr/bin/find | grep GNU_STACK -A 1
GNU_STACK 0x0000000000000000 0x0000000000000000 0x0000000000000000
0x0000000000000000 0x0000000000000000 RW 8
```

The RW towards the end of the output line means read/write, but not execute.



---

## Part 9. Performance measurement using hardware facilities

The Z hardware provides performance data that can be accessed by Linux.

Gathering performance data constitutes an additional load on the Linux instance on which the application to be analyzed runs. Hardware support for data gathering can reduce the extra load and can yield more accurate data.

For the performance measurement facilities of z/VM, see [“Performance monitoring for z/VM guest virtual machines”](#) on page 357.

Other performance relevant information is provided in the context of the respective device driver or feature. For example, see [“Working with DASD statistics in debugfs”](#) on page 135 for DASD performance and [“Starting and stopping collection of QETH performance statistics”](#) on page 240 for qeth group devices.

### **Newest version**

You can find the newest version of this book at [www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)



## Chapter 54. Channel measurement facility

**LPAR and z/VM:** The channel measurement facility is supported for Linux in LPAR mode and for Linux on z/VM.

The IBM Z architecture provides a channel measurement facility to collect statistical data about I/O on the channel subsystem.

Data collection can be enabled for all CCW devices. User space applications can access this data through the sysfs.


The channel measurement facility provides the following features:

- Basic channel measurement format for concurrently collecting data on up to 4096 devices. (Specifying 4096 or more channels causes high memory consumption, and enabling data collection might not succeed.)
- Extended channel measurement format for concurrently collecting data on an unlimited number of devices.
- Data collection for all channel-attached devices, except those using QDIO (that is, except qeth and SCSI-over-Fibre channel attached devices)

### Setting up the channel measurement facility

Configure the channel measurement facility by adding parameters to the kernel parameter file.

#### Channel measurement facility kernel parameters

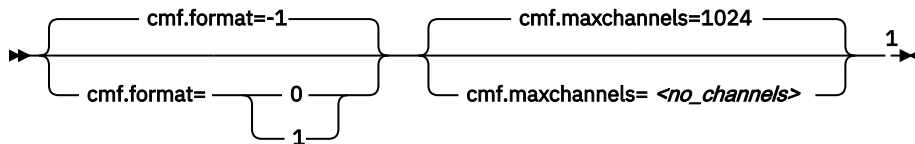

Notes:

<sup>1</sup> If you specify both parameter=value pairs, separate them with a blank.

where:

#### **cmf.format**

defines the format, 0 for basic and 1 for extended, of the channel measurement blocks. The default, -1, uses the extended format.

#### **cmf.maxchannels=<no\_channels>**

limits the number of devices for which data measurement can be enabled concurrently with the basic format. The maximum for <no\_channels> is 4096. A warning is printed if more than 4096 channels are specified. The channel measurement facility might still work; however, specifying more than 4096 channels causes a high memory consumption.

For the extended format, there is no limit and any value you specify is ignored.

### Working with the channel measurement facility

Typical tasks that you need to perform when you work with the channel measurement facility is controlling data collection and reading data.

## Enabling, resetting, and switching off data collection

Control data collection through the `cmb_enable` sysfs attribute of the device.

### Procedure

Use a device's `cmb_enable` attribute to enable, reset, or switch off data collection.

- To enable data collection, write 1 to the `cmb_enable` attribute. If data collection was already enabled, writing 1 to the attribute resets all collected data to zero.

Issue a command of this form:

```
# echo 1 > /sys/bus/ccw/devices/<device_bus_id>/cmb_enable
```

where `/sys/bus/ccw/devices/<device_bus_id>` represents the device in sysfs.

When data collection is enabled for a device, a subdirectory `/sys/bus/ccw/devices/<device_bus_id>/cmf` is created that contains several attributes. These attributes contain the collected data (see “Reading data” on page 472).

- To switch off data collection issue a command of this form:

```
# echo 0 > /sys/bus/ccw/devices/<device_bus_id>/cmb_enable
```

When data collection for a device is switched off, the subdirectory `/sys/bus/ccw/devices/<device_bus_id>/cmf` and its content are deleted.

### Example

In this example, data collection for a device `/sys/bus/ccw/devices/0.0.b100` is already active and reset:

```
# cat /sys/bus/ccw/devices/0.0.b100/cmb_enable
1
# echo 1 > /sys/bus/ccw/devices/0.0.b100/cmb_enable
```

## Reading data

Read the sysfs attributes with collected I/O data, for example with the **cat** command.

### Procedure

To read one of the attributes, issue a command of this form:

```
# cat /sys/bus/ccw/devices/<device_bus_id>/cmf/<attribute>
```

where `/sys/bus/ccw/devices/<device_bus_id>` is the directory that represents the device, and `<attribute>` the attribute to be read. [Table 63 on page 472](#) summarizes the available attributes.

Table 63. Attributes with collected I/O data

Attribute	Value
<code>ssch_rsch_count</code>	An integer that represents the <code>ssch rsch</code> count value.
<code>sample_count</code>	An integer that represents the sample count value.
<code>avg_device_connect_time</code>	An integer that represents the average device connect time, in nanoseconds, per sample.
<code>avg_function_pending_time</code>	An integer that represents the average function pending time, in nanoseconds, per sample.

Table 63. Attributes with collected I/O data (continued)

Attribute	Value
avg_device_disconnect_time	An integer that represents the average device disconnect time, in nanoseconds, per sample.
avg_control_unit_queuing_time	An integer that represents the average control unit queuing time, in nanoseconds, per sample.
avg_initial_command_response_time	An integer that represents the average initial command response time, in nanoseconds, per sample.
avg_device_active_only_time	An integer that represents the average device active only time, in nanoseconds, per sample.
avg_device_busy_time	An integer that represents the average value device busy time, in nanoseconds, per sample.
avg_utilization	A percent value that represents the fraction of time that was spent in device connect time, plus function pending time, plus device disconnect time during the measurement period.
avg_sample_interval	An integer that represents the average time, in nanoseconds, between two samples during the measurement period. Can be "-1" if no measurement data was collected.
avg_initial_command_response_time	An integer that represents the average time in nanoseconds between the first command of a channel program being sent to the device and the command being accepted. Available in extended format only.
avg_device_busy_time	An integer that represents the average time in nanoseconds of the subchannel being in the "device busy" state when initiating a start or resume function. Available in extended format only.

### Example

To read the avg\_device\_busy\_time attribute for a device /sys/bus/ccw/devices/0.0.b100:

```
# cat /sys/bus/ccw/devices/0.0.b100/cmf/avg_device_busy_time
21
```



---

## Chapter 55. Using the CPU-measurement facilities

**LPAR only:** The CPU-measurement facilities apply to Linux in LPAR mode only.

Use the CPU-measurement counter facility and sampling facility to obtain performance data for Linux in LPAR mode.

### Counter facility

The hardware counters are grouped into the following counter sets:

- Basic counter set
- Problem-state counter set
- Crypto-activity counter set
- Extended counter set
- MT-diagnostic counter set

A further common counter set, the Coprocessor group counter set, cannot be accessed from Linux on Z.

### Sampling facility

The sampling facility includes the following sampling modes:

- Basic-sampling mode
- Diagnostic-sampling mode

The diagnostic-sampling mode is intended for use by IBM support only.

The number and type of individual counters and the details of the sampling facility depend on your Z hardware model. Use the **lscpumf** command to find out what is available for your hardware (see “[lscpumf - Display information about the CPU-measurement facilities](#)” on page 579). For details, see *IBM The CPU-Measurement Facility Extended Counters Definition for z10, z196/z114, zEC12/zBC12, z13/z13s, and z14*, SA23-2261.

You can use the **perf** tool on Linux to access the hardware counters and sample data of the CPU-measurement facilities. To use the **perf** tool, you need to install the perf tool package, `perf-<version>.s390x.rpm`, provided with Red Hat Enterprise Linux.

If you want to write your own application for analyzing counter or sample data, you can use the `libpfm4` library. This library is available on sourceforge at [perfmon2.sourceforge.net](http://perfmon2.sourceforge.net).

---

## Working with the CPU-measurement counter facility

You can use the perf tool to work with the CPU-measurement counter facility for authorized LPARs.

- “[Authorizing an LPAR for CPU-measurement counter sets](#)” on page 475
- “[Reading CPU-measurement counters for an application](#)” on page 476
- “[Collecting CPU-measurement sample data](#)” on page 477
- “[Setting limits for the sampling facility buffer](#)” on page 477
- “[Obtaining details about the CPU-measurement facilities](#)” on page 478

### Authorizing an LPAR for CPU-measurement counter sets

The LPAR within which the Linux instance runs must be authorized to use the CPU-measurement counter sets. Use the HMC or SE to authorize the LPAR for the counter sets you need.

## Procedure

Perform these steps on the HMC or SE to grant authorization:

1. Navigate to the LPAR for which you want to grant authorization for the counter sets.
2. Within the LPAR profile, select the **Security** page.
3. Within the counter facility options, select each counter set you want to use. The coprocessor group counter set is not supported by Linux on Z.
4. Click **Save**.

## What to do next

Deactivate, activate, and IPL the LPAR to make the authorization take effect. For more information, see the *Support Element Operations Guide* for your mainframe system.

## Reading CPU-measurement counters for an application

Use the `perf` tool to read CPU-measurement counters with the scope of an application.

### Before you begin

You must know the hexadecimal value of the counter number. You can find the decimal values in *z/Architecture The Load-Program-Parameter and the CPU-Measurement Facilities*, SA23-2260 and in *IBM The CPU-Measurement Facility Extended Counters Definition for z10, z196/z114, zEC12/zBC12, z13/z13s, z14, and z15*, SA23-2261.

## Procedure

Issue a command of this form to read a counter:

```
# perf stat -e r<hex_counter_number> -- <path_to_app>
```

Where:

### -e r<hex\_counter\_number>

specifies the hexadecimal value for the counter number as a raw event.

**Tip:** You can read multiple counters by specifying a comma-separated list of raw events, for example, `-e r20,r21`.

### <path\_to\_app>

specifies the path to the application to be evaluated. The counters are incremented for all threads that belong to the specified application.

For more information about the **perf** command, see the **perf** or **perf-stat** man page.

## Example

To read the counters with hexadecimal values 20 (problem-state cycle count) and 21 (problem-state instruction count) for an application `/bin/df`:

```
# perf stat -e r20,r21 -- /bin/df
Filesystem            1K-blocks      Used Available Use% Mounted on
/dev/dasda1           7188660    2521760   4306296   37% /
none                  923428         88    923340    1% /dev/shm
/dev/dasdb1           7098728    2631972   4106152   40% /root

Performance counter stats for '/bin/df':

    1185753 raw 0x20
    257509 raw 0x21

0.002507687 seconds time elapsed
```



## Collecting CPU-measurement sample data

Use the `perf` tool to read CPU-measurement sample data.

### Procedure

Issue a command of this form to read sample data:

```
# perf record -e cpum_sf/event=SF_CYCLES_BASIC/ -- <path_to_app>
```

Where `<path_to_app>` is the path to the application for which you want to collect sample data. If you specify `-a` instead of the double hyphen and path, system-wide sample data is collected.

Instead of the symbolic name, you can also specify the raw event name `IB00000`.

### Example

```
# perf record -e cpum_sf/event=SF_CYCLES_BASIC/ -- /bin/df
Filesystem      1K-blocks      Used Available Use% Mounted on
/dev/dasda1      6967656      3360508    3230160   51% /
none             942956         88     942868    1% /dev/shm
/dev/dasdb1      6967656      4132924    2474128   63% /root
[ perf record: Woken up 1 times to write data ]
[ perf record: Captured and wrote 0.001 MB perf.data (~29 samples) ]
```

### What to do next

You can now display the sample data by issuing the following command:

```
# perf report
```

For more information about collecting and displaying sample data with the **perf** command, see the **perf-record** and the **perf-report** man pages.

**Hint:** You can use the **perf record -F** option to collect sample data at a high frequency or the **perf record -c** option to collect sample data for corresponding short sampling intervals. Specified values must be supported by both the CPU-measurement sampling facility and `perf`. Issue **lscpumf -i** to find out the maximum and minimum values for the CPU-measurement sampling facility. If `perf` fails at a high sampling frequency, you might have to adjust the `kernel.perf_event_max_sample_rate` system control to override default `perf` limitations.

## Setting limits for the sampling facility buffer

Use the **chcpumf** command to set the minimum and maximum buffer size for the CPU-measurement sampling facility. See [“chcpumf - Set limits for the CPU measurement sampling facility buffer” on page 506](#).

### Before you begin

For each CPU, the CPU-measurement sampling facility has a buffer for writing sample data. The required buffer size depends on the sampling function and the sampling interval that is used by the `perf` tool. The sampling facility starts with an initial buffer size that depends on the expected requirements, your IBM Z hardware, and the available hardware resources. During the sampling process, the sampling facility increases the buffer size if required.

The sampling facility is designed for autonomous buffer management, and you do not usually need to intervene. You might want to change the minimum or maximum buffer size, for example, for one of the following reasons:

- There are considerable resource constraints on your system that cause `perf` sampling to malfunction and sample data to be lost.
- As an expert user of `perf` and the sampling facility, you want to explore results with particular buffer settings.

## Procedure

Use the **chcpumf** command to set the minimum and maximum buffer sizes.

1. Optional: Specify the **lscpumf** command with the **-i** parameter to display the current limits for the buffer size (see [“lscpumf - Display information about the CPU-measurement facilities”](#) on page 579).
2. Optional: Specify the **chcpumf** command with the **-m** parameter to set the minimum buffer size.

### Example:

```
# chcpumf -m 500
```

The value that you specify with **-m** is the minimum buffer size in multiples of sample-data-blocks. A sample-data-block occupies approximately 4 KB. The specified minimum value is compared with the initial buffer size that is calculated by the sampling facility. The greater value is then used as the initial size when the sampling facility is started.

3. Optional: Specify the **chcpumf** command with the **-x** parameter to set the maximum buffer size.

### Example:

```
# chcpumf -x 1000
```

The value that you specify with **-x** is the maximum buffer size in multiples of sample-data-blocks. A sample-data-block occupies approximately 4 KB. The specified maximum is the upper limit to which the sampling facility can adjust the buffer.

## Example

### Tips:

- You can specify both, the minimum and the maximum buffer size with a single command.
- Use the **-V** parameter to display the minimum and maximum buffer settings that apply as a result of the command.

**Example:** To change the minimum buffer size to 500 times the size of a sample-data-block and the maximum buffer size to 1000 times the size of a sample-data-block, issue:

```
# chcpumf -V -m 500 -x 1000
Sampling buffer sizes:
  Minimum:    500 sample-data-blocks
  Maximum:   1000 sample-data-blocks
```

## Obtaining details about the CPU-measurement facilities

You can obtain version information for the CPU-measurement counter and sampling facility and check which counter sets are authorized on your LPAR.

## Procedure

1. Issue the **lscpumf** command with the **-i** parameter to display detailed information and debug data about the CPU-measurement facilities.

### Example:

```
# lscpumf -i
CPU-measurement counter facility
-----
Version: 1.2

Authorized counter sets:
  Basic counter set
  Problem-State counter set

Linux perf event support: Yes (PMU: cpum_cf)

CPU-measurement sampling facility
-----
Sampling Interval:
  Minimum:      18228 cycles (approx.   285714 Hz)
  Maximum:    170650536 cycles (approx.    30 Hz)

Authorized sampling modes:
  basic        (sample size: 32 bytes)

Linux perf event support: Yes (PMU: cpum_sf)

Current sampling buffer settings for cpum_sf:
  Basic-sampling mode
    Minimum:      15 sample-data-blocks ( 64KB)
    Maximum:     8176 sample-data-blocks ( 32MB)
```

2. Optional: For more detailed information, including debug information, use the magic sysrequest function with character p. This function triggers kernel messages.

For example, trigger the messages from procfs:

```
# echo p > /proc/sysrq-trigger
```

**Note:** If you call magic sysrequest functions with a method other than through the procfs, you might need to activate them first. For more information about the magic sysrequest functions, see [“Using the magic sysrequest feature”](#) on page 49.

Find the messages by issuing the **dmesg** command and looking for output lines that include CPUM\_CF or CPUM\_SF.

**More information:** For details about the information in the messages, see *z/Architecture The Load-Program-Parameter and the CPU-Measurement Facilities*, SA23-2260, and the perf section in *Kernel Messages*, SC34-2599.



---

## Part 10. Diagnostics and troubleshooting

These resources are useful when diagnosing and solving problems for Red Hat Enterprise Linux 8.1.

### **Newest version**

You can find the newest version of this book at  
[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at  
[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

When reporting a problem to IBM support, you might be asked to supply a kernel dump. See *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 for information about how to create dumps.



# Chapter 56. Logging I/O subchannel status information

When investigating I/O subchannels, support specialists might request operation status information for the subchannel.

## About this task

The channel subsystem offers a logging facility that creates a set of log entries with such information. From Linux in LPAR mode, you can trigger this logging facility through sysfs.

The log entries are available through the SE Console Actions Work Area with the View Console Logs function. The entries differ dependent on the device and model that is connected to the subchannel. On the SE, the entries are listed with a prefix that identifies the model. The content of the entries is intended for support specialists.

## Procedure

To create a log entry, issue a command of this form:

```
# echo 1 > /sys/devices/css0/<subchannel-bus-id>/logging
```

where *<subchannel-bus-id>* is the bus ID of the I/O subchannel that corresponds to the I/O device for which you want to create a log entry.

To find out how your I/O devices map to subchannels you can use, for example, the **lscss** command.

## Example

In this example, first the subchannel for an I/O device with bus ID 0.0.3d07 is identified, then logging is initiated.

```
# lscss -d 0.0.3d07
Device   Subchan.  DevType CU Type Use  PIM PAM POM  CHPIDs
-----
0.0.3d07 0.0.000c 1732/01 1731/01    80 80 ff  05000000 00000000
# echo 1 > /sys/devices/css0/0.0.000c/logging
```





---

## Chapter 57. Control program identification

For Linux in LPAR mode, you can provide data about the Linux instance to the control program identification (CPI) feature.

The data is used, for example, to represent the Linux instance on the HMC or SE.

You provide data to the CPI feature in two steps:

1. Write values for one or more of the following items to specific sysfs attributes. Use the sysfs attributes in `/sys/firmware/cpi` for testing purposes. Use the sysfs attributes in `/etc/sysconfig/cpi` to make the changes persistent across reboots::

- The system name
- The sysplex name (if applicable)
- The operating system type
- The operating system level

2. Transfer the data to the SE, see [“Sending system data to the SE” on page 487](#).

Red Hat Enterprise Linux 8.1 provides a systemd service unit, `cpi`, to set the attributes automatically during reboot. To automatically set the attributes during reboot, issue a command as follows:

```
# systemctl enable cpi
```

---

### Specifying a system name

Use the `system_name` attribute in the `/etc/sysconfig/cpi` directory in sysfs to specify a system name for your Linux instance.

#### About this task

The system name is a string that consists of up to eight characters of the following set: A-Z, 0-9, \$, @, #, and blank.

#### Example

```
# echo LPAR12 > /etc/sysconfig/cpi/system_name
```

To make a change to the currently running system, use:

```
# echo LPAR12 > /sys/firmware/cpi/system_name
```

#### What to do next

To make the setting take effect, transfer the data from `/sys/firmware/cpi/system_name` to the SE (see [“Sending system data to the SE” on page 487](#)).

---

### Specifying a sysplex name

Use the `sysplex_name` attribute in the `/etc/sysconfig/cpi` directory in sysfs to specify a sysplex name.

### About this task

The sysplex name is a string that consists of up to eight characters of the following set: A-Z, 0-9, \$, @, #, and blank.

### Example

```
# echo SYSPLEX1 > /etc/sysconfig/cpi/sysplex_name
```

To make a change to the currently running system, use:

```
# echo LPAR12 > /sys/firmware/cpi/sysplex_name
```

### What to do next

To make the setting take effect, transfer the data from `/sys/firmware/cpi/system_name` to the SE (see [“Sending system data to the SE”](#) on page 487).

## Specifying a system type

---

Linux uses the `/sys/firmware/cpi/system_type` sysfs attribute to identify itself as a Linux instance.

### About this task

Unless your distribution sets this value for you, write LINUX to the attribute.

### Example

```
# cat /sys/firmware/cpi/system_type
""
# echo LINUX > /sys/firmware/cpi/system_type
```

### What to do next

To make the setting take effect, transfer the data to the SE (see [“Sending system data to the SE”](#) on page 487).

## Specifying the system level

---

Linux uses the `/sys/firmware/cpi/system_level` sysfs attribute for the kernel version.

### About this task

The value has this format:

```
0x000000000000<aa><bb><cc>
```

where:

**<aa>**

are two digits for the major version of the kernel.

**<bb>**

are two digits for the minor version of the kernel.

**<cc>**

are two digits for the stable version of the kernel.

### Example

Linux kernel 4.18 displays as

```
# cat /sys/firmware/cpi/system_level  
0x00000000000041200
```

### What to do next

To make the setting take effect, transfer the data to the SE (see [“Sending system data to the SE”](#) on page 487).

## Sending system data to the SE

---

Use the set attribute in the /sys/firmware/cpi directory in sysfs to send data to the Support Element (SE).

### About this task

To send the data in attributes sysplex\_name, system\_level, system\_name, and system\_type to the SE, write an arbitrary string to the set attribute.

### Example

```
# echo 1 > /sys/firmware/cpi/set
```



---

## Chapter 58. Avoiding common pitfalls

Common problems and how to avoid them.

---

### Ensuring correct channel path status

---

Ensure that you have varied the path offline before you perform a planned task on it.

#### Before you begin

Do not vary channel paths offline that provide access to vital resources, such as the root file system.

**KVM:** A KVM guest might have only one channel path through which all CCW devices are accessed.

Tasks that require the channel path to be offline include:

- Pulling out or plugging in a cable on a path.
- Configuring a path off or on at the SE.

To vary the path offline, issue a command of the form:

```
# chchp -v 0 <chpid>
```

where <chpid> is the channel path ID.

After the operation completed and the path is available again, vary the path online by using a command of the form:

```
# chchp -v 1 <chpid>
```

Alternatively, you can write on or off to the channel path status attribute in sysfs to vary the path online or offline.

```
# echo on|off > /sys/devices/css0/chp0.<chpid>/status
```

An unplanned change in path availability can occur due to, for example, unplanned cable pulls or a temporary path malfunction. Then, the PIM/PAM/POM values (as obtained through **lscss**) might not be as expected. To update the PIM/PAM/POM values, vary one of the paths that lead to the affected devices.

#### Example:

```
# chchp -v 0 0.12  
# chchp -v 1 0.12
```

**Rationale:** Linux does not always receive a notification (machine check) when the status of a path changes (especially for a path that comes online again). To make sure Linux has up-to-date information about the usable paths, path verification is triggered through the Linux vary operation.

---

### Determining channel path usage on LPAR

---

To determine the usage of a specific channel path on LPAR, for example, to check whether traffic is distributed evenly over all channel paths, use the channel path measurement facility.

See [“Channel path measurement” on page 14](#) for details.

## Ignore unnecessary I/O devices

A Linux LPAR should contain only those I/O devices that it uses.

A mainframe environment often includes numerous I/O devices. Especially for Linux in LPAR mode, more of these I/O devices might be available to a particular instance of Linux on Z than needed. Limit the I/O devices by:

- Adding only the needed devices to the applicable LPAR in the IOCDs.

**LPAR:** For Linux in LPAR mode, also see [Chapter 3, “Device auto-configuration for Linux in LPAR mode,”](#) on page 19.

**z/VM and KVM:** Making only needed devices available to guests.

- Using the `cio_ignore=` kernel parameter to ignore all devices that are not currently in use by this instance of Linux on Z.

If more devices are needed later, they can be dynamically removed from the list of devices to be ignored. Use the `cio_ignore` kernel parameter or the `/proc/cio_ignore` dynamic control to remove devices, see [“cio\\_ignore - List devices to be ignored”](#) on page 682 and [“Changing the exclusion list”](#) on page 683.

**Rationale:** Numerous unused devices can cause:

- Unnecessary high memory usage due to allocation of device structures.
- Unnecessary high load on status changes because hot-plug handling must be done for every device found.
- Prolonged boot and shutdown time.

## Using cio\_ignore

With `cio_ignore`, essential devices might be hidden.

For example, Linux might not boot because the device with the root file system is ignored.

If Linux does not boot under z/VM and does not show any message except:

```
HCPGIR450W CP entered; disabled wait PSW 00020001 80000000 00000000 00144D7A
```

Check if `cio_ignore` is used and verify that the console device, which is typically device number 0.0.0009, is not ignored.

## Excessive z/VM guest swapping

Avoid excessive guest swapping by using the timed page pool size and the static page pool size attributes.

An instance of Linux on z/VM might be swapping and stalling. Setting the timed page pool size and the static page pool size to zero might solve the problem:

```
# echo 0 > /proc/sys/vm/cmm_timed_pages
# echo 0 > /proc/sys/vm/cmm_pages
```

If you see a temporary relief, the guest does not have enough memory. Try increasing the guest memory.

If the problem persists, z/VM might be out of memory.

If you are using cooperative memory management (CMM), unload the cooperative memory management module:

```
# modprobe -r cmm
```

See Chapter 42, “Cooperative memory management,” on page 401 for more details about CMM.

## Including service levels of the hardware and the hypervisor

The service levels of the different hardware cards, the LPAR level, and the z/VM service level are valuable information for problem analysis.

If possible, include this information with any problem you report to IBM Support.

A `/proc` interface that provides a list of service levels is available. To see the service levels issue:

```
# cat /proc/service_levels
```

Example for a z/VM system with a QETH adapter:

```
# cat /proc/service_levels
VM: z/VM Version 5 Release 2.0, service level 0801 (64-bit)
qeth: 0.0.f5f0 firmware level 087d
zfcp: 0.0.190a microcode level 16500125
```

## Booting stops with disabled wait state

An automatic processor type check might stop the boot process with a disabled wait PSW.

On Red Hat Enterprise Linux 8.1, a processor type check is automatically run at every kernel startup. If the check determines that Red Hat Enterprise Linux 8.1 is not compatible with the hardware, it stops the boot process with a disabled wait PSW with an address of zero.

If this problem occurs, ensure that you are running Red Hat Enterprise Linux 8.1 on supported hardware. See the Red Hat Enterprise Linux 8.1 release notes at [https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

## Auto-configuration overrides persistent configuration

After upgrading Linux, persistent device configurations that were specified with **chzdev** are overridden with the auto-configuration.

Ensure that your device is configured with the `zdev:early=1` attribute. See “Activating a device early during the boot process” on page 520.

For zfcp devices that were configured with a **chzdev** version earlier than 2.5, you must also perform a one-time migration of udev rules. To migrate the rules, issue the following command:

```
# chzdev zfcp-lun --configured --enable --persistent --force
```

For more information about auto-configuration data, see Chapter 3, “Device auto-configuration for Linux in LPAR mode,” on page 19.

## Preparing for dump-on-panic

You might want to consider setting up your system to automatically create a memory dump after a kernel panic.

**Before you begin:** If you set up kdump, a kernel panic or PSW restart automatically triggers a dump. For a KVM guest, kdump is the only option for an automatic dump-on-panic.

Configuring and using dump-on-panic has the following advantages:

- You have a memory dump disk that is prepared ahead of time.

- You do not have to reproduce the problem since a memory dump will be triggered automatically immediately after the failure.

See [Chapter 9, “Shutdown actions,”](#) on page 103 for details.

## Multipath failover causes kernel panic

---

In a multipath setup where SCSI disks are attached over multiple paths, failover might trigger a kernel panic.

For zfcplib-attached SCSI disks, `fast_io_fail_tmo` should always be configured to 5 seconds and `dev_loss_tmo` should be disabled with value "infinity". This can be configured in the file `/etc/multipath.conf`.

## Function unavailable or degraded in Linux on z/VM

---

For some functions, Linux on z/VM issues diagnose instructions to the z/VM hypervisor.

Which diagnose codes are available to your Linux instance depends on the z/VM version and configuration. The z/VM administrator can enable, disable, or customize diagnose instructions. For details, see *z/VM: CP Commands and Utilities Reference*, SC24-6268.

Linux on z/VM can fail, or one or more functions might be unavailable or degraded if required diagnose instructions are modified or unavailable.

Read and compare `/sys/kernel/debug/diag_stat` to obtain a list of calls and a counter for each call (see also [Chapter 63, “Linux diagnose code use,”](#) on page 701). The counts include failed calls. Thus, comparing the counts with and without running the affected workload provides an indication of the calls that the workload uses or tries to use. Assure that these calls are not restricted by the z/VM configuration.



## Chapter 59. Displaying system information

You can display information about the resources, and capabilities of your Linux instance and about the hardware and hypervisor on which your Linux instance runs.

### Displaying hardware and hypervisor information

You can display information about the physical and virtual hardware on which your Linux instance runs.

#### Procedure

Issue the following command:

```
# cat /proc/sysinfo
```

The output of the command is divided into several blocks.

- The first two blocks provide information about the mainframe hardware.
- The third block provides information about the LPAR on which the Linux instance runs, either in LPAR mode or as a guest of a hypervisor.
- Further blocks are present only if the Linux instance runs as a guest of a hypervisor. The field names in these sections have a prefix, VM<nn>, where <nn> is the hypervisor level.

If the hypervisor runs in LPAR mode, there is only one such block, with prefix VM00. If the hypervisor runs as a guest of another hypervisor, there are multiple such blocks with prefixes VM00, VM01, and so on. VM00 always describes the hypervisor that is closest to the Linux instance on which /proc/sysinfo was read.

You can use the information from /proc/sysinfo, for example, to verify that a guest relocation has taken place.

The following example shows the command output for an instance of Linux as a KVM guest.

#### Example:

```
# cat /proc/sysinfo
Manufacturer:      IBM
...
LPAR Number:      9
...
LPAR Name:         LP4KVM09
...
LPAR Extended Name: Partition 9 KVM Host
LPAR UUID:         93724168-fda3-429b-8b28-a5d245dcb3ff
...
VM00 Name:         Linux in
VM00 Control Program: KVM/Linux
VM00 Adjustment:   1000
VM00 CPUs Total:   4
VM00 CPUs Configured: 4
VM00 CPUs Standby: 0
VM00 CPUs Reserved: 0
VM00 Extended Name: Linux instance 42
VM00 UUID:         82038f2a-1344-aaf7-1a85-2a7250be2076
```

The fields with prefix LPAR include information that identifies and labels the partition:

#### Number

shows a number that identifies the partition within the mainframe.

#### Name

shows a partition name of up to 8 characters, as assigned on the HMC.

**Extended Name**

depending on your hardware, this field can contain an extended partition name, it can be empty, or it might be omitted.

**UUID**

shows the universally unique identifier (UUID) of the partition.

This field is present only if a UUID is assigned to the partition. On hardware that does not support UUIDs for partitions, this field is always omitted.

The fields with prefix VM<nn> show the following information:

**Name**

Depends on your hypervisor, z/VM or KVM:

**z/VM**

shows the name of the z/VM guest virtual machine according to the z/VM directory.

**KVM**

shows the name of the virtual server according to the domain XML on the KVM host. Long names are truncated to 8 characters. The full name is always shown in the **Extended Name** field (see [“Extended Name \(KVM only\)” on page 494](#)).

**Control Program**

shows hypervisor information.

**Adjustment**

does not show useful information for Linux on Z.

**CPUs Total**

shows the number of virtual CPUs that the hypervisor provides to its guest.

**CPUs Configured**

shows the number of virtual CPUs that are online to Linux.

**CPUs Standby**

for Linux on z/VM, shows the number of virtual CPUs that are available to Linux but offline.

**CPUs Reserved**

for Linux on z/VM, shows the number of extra virtual CPUs that z/VM could make available to Linux. This is the difference between the maximum number of CPUs in the z/VM directory entry for the guest virtual machine and the number of CPUs that are currently available to Linux.

For Linux on KVM, this number is always 0.

**Extended Name (KVM only)**

shows the name of the virtual server as specified in the domain XML on the KVM host. See also [“Name” on page 494](#).

**UUID (KVM only)**

shows the universally unique identifier (UUID) according to the domain XML on the KVM host. If you do not specify an identifier, libvirt generates a UUID when creating a virtual server definition.

## Retrieving STHYI data

---

Store Hypervisor Information (STHYI) includes information about the IBM Z hardware, LPAR and, if applicable, the hypervisor host system on which your Linux instance runs.

STHYI includes, but is not limited to, the following information:

- The CPU count, by type (CP or IFL)
- Limitations for shared CPUs
- CEC and LPAR identifiers

The methods that you can use to retrieve this information differ between Linux in LPAR mode and Linux as a guest operating system of z/VM or of KVM.

Table 64. Available methods by environment

Method	Linux in LPAR mode	Linux as a z/VM or KVM guest
STHYI instruction with the GCC inline assembly  For an example, see <code>arch/s390/kernel/sthyi.c</code> in the Linux source tree.	No	Yes
<code>qclib</code>  See the readme file of the <code>qclib</code> package for details.	Yes	Yes
<code>s390_sthyi()</code> system call  See the man page for details.	Yes	No

The return data for both the STHYI instruction and the `s390_sthyi()` system call matches the content of the STHYI response buffer as described in *z/VM: CP Programming Services*, SC24-6272. The `qclib` library provides an API for querying the information. See the readme file of the `qclib` package about obtaining the API description.

You can find the `qclib` package and more information about `qclib` on developerWorks at [www.ibm.com/developerworks/linux/linux390/qclib.html](http://www.ibm.com/developerworks/linux/linux390/qclib.html).

## Check whether the Linux instance can be a hypervisor

An instance of Linux on Z must have the SIE (Start Interpretive Execution) capability to be able to act as a hypervisor, such as a KVM host.

### Procedure

1. Issue the following command to find out whether you can operate your Linux instance as a hypervisor.

```
# cat /proc/cpuinfo
vendor_id : IBM/S390
# processors : 1
bogomips per cpu: 14367.00
features : esan3 zarch stfle msa ldisp eimm dfp edat etf3eh
highgprs sie
cache0 : level=1 type=Data scope=Private size=128K
...
```

2. Examine the features line in the command output. If the list of features includes `sie`, the Linux instance can be a hypervisor.

The Linux instance of the example can be a hypervisor.



---

## Chapter 60. Creating a kernel dump

When reporting a problem to IBM Support, you might be asked to supply a kernel dump. The dump tools you can use depend on your hypervisor environment.

---

### Creating a kernel dump of Linux in LPAR mode or of a z/VM guest

The dump tools for Linux in LPAR mode and Linux as a z/VM guest include stand-alone dump tools, `kdump`, and **`zgetdump`**.

With `kdump` in place, a dump is triggered automatically by a kernel panic. Use the **`zgetdump`** command for a live-system dump.

For Linux as a z/VM guest you can also use `VMDUMP`.

For details about the dump tools, see *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718.

---

### Creating a kernel dump of a KVM guest

A dump of a KVM guest can be driven by the host or by the guest.

#### Guest-driven dumps

You can set up `kdump` to create a kernel dump for an instance of Linux as a KVM guest on Z. With `kdump` in place, a dump is triggered automatically by a kernel panic.

Alternatively, you can use the `zgetdump` command to create a live-system dump.

See the `kdump` information in *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718.

#### Host-driven dumps

The KVM virtual server administrator can initiate dumps of KVM guests. See the section about dumping KVM guests in *KVM Virtual Server Management*, SC34-2752.



---

## Part 11. Reference

Use these commands, kernel parameters, kernel options to configure Linux on Z. Be aware of the z/VM DIAG calls required by Red Hat Enterprise Linux 8.1.

### **Newest version**

You can find the newest version of this book at  
[www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_distlibs.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_distlibs.html)

### **Restrictions**

For prerequisites and restrictions see the IBM Z architecture specific information in the Red Hat Enterprise Linux 8.1 release notes at  
[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)





# Chapter 61. Commands for Linux on Z

You can use z/Architecture specific commands to configure and work with the Red Hat Enterprise Linux 8.1 for Z device drivers and features.

Some commands come with an init script or a configuration file or both. Init scripts are installed in `/etc/init.d/`. You can extract any missing files from the `etc` subdirectory in the `s390utils` RPM.

### Commands described elsewhere

- For the **zipl** command, see [Chapter 6, “Initial program loader for IBM Z - zipl,”](#) on page 55.
- For commands and tools that are related to creating and analyzing system dumps, see *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718.
- For commands related to terminal access over IUCV connections, see *How to Set up a Terminal Server Environment on z/VM*, SC34-2596.
- The **icainfo** and **icastats** commands are provided with the `libica` package and described in *libica Programmer's Reference*, SC34-2602.

## Generic command options

For simplicity, common command options are omitted from some of the syntax diagrams.


### **-h or --help**

to display help information for the command.

### **--version**

to display version information for the command.

The syntax for these options is:

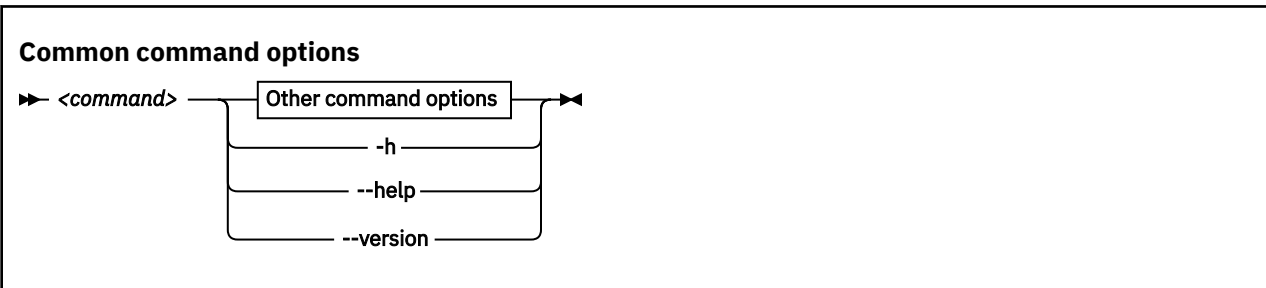

where *command* can be any of the Linux on Z commands.

See [Appendix B, “Understanding syntax diagrams,”](#) on page 705 for general information about reading syntax diagrams.


## chccwdev - Set CCW device attributes

Use the **chccwdev** command to set attributes for CCW devices and to set CCW devices online or offline.

Use [“znetconf - List and configure network devices”](#) on page 669 to work with CCW\_GROUP devices. For more information about CCW devices and CCW group devices, see [“Device categories”](#) on page 7.

The **chccwdev** command uses `cio_settle` before it changes anything, to ensure that `sysfs` reflects the latest device status information, and includes newly available devices.

### chccwdev syntax

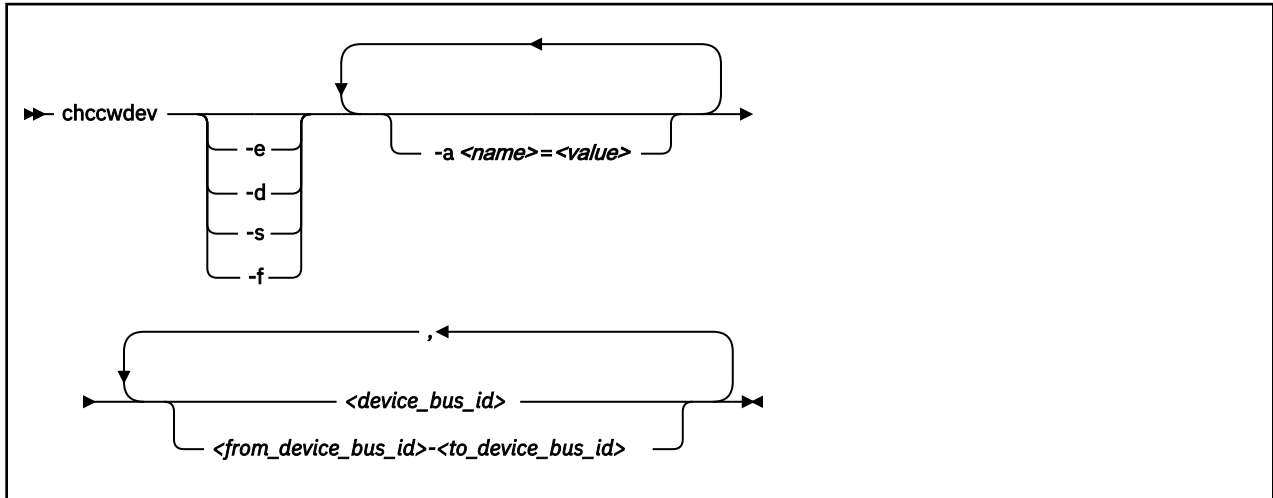

Where:

**-e or --online**

sets the device online.

**-d or --offline**

sets the device offline.

**-s or --safeoffline**

waits until all outstanding I/O requests complete, and then tries to set the device offline. Valid for DASDs only.

**-f or --forceonline**

forces a boxed device online, if this action is supported by the device driver.

**-a <name>=<value> or --attribute <name>=<value>**

sets the <name> attribute to <value>.

The available attributes depend on the device type. See the chapter for your device for details about the applicable attributes and values.

Setting the online attribute has the same effect as using the **-e** or **-d** options.

**<device\_bus\_id>**

identifies a device. Device bus-IDs are of the form `0.<n>.<devno>`, where <n> is a subchannel set ID and <devno> is a device number. Input is converted to lowercase.

**<from\_device\_bus\_id>-<to\_device\_bus\_id>**

identifies a range of devices. If not all devices in the range exist, the command is limited to the existing ones. If you specify a range with no existing devices, you get an error message.

**-h or --help**

displays help information for the command. To view the man page, enter **man chccwdev**.

**-v or --version**

displays version information for the command.

**Examples**

- To set a CCW device 0.0.b100 online issue:

```
# chccwdev -e 0.0.b100
```

- Alternatively, use **-a** to set a CCW device 0.0.b100 online. Issue:

```
# chccwdev -a online=1 0.0.b100
```

- To set all CCW devices in the range 0.0.b200 through 0.0.b2ff online, issue:

```
# chccwdev -e 0.0.b200-0.0.b2ff
```

- To set a CCW device 0.0.b100 and all CCW devices in the range 0.0.b200 through 0.0.b2ff offline, issue:

```
# chccwdev -d 0.0.b100,0.0.b200-0.0.b2ff
```

- To set several CCW devices in different ranges and different subchannel sets offline, issue:

```
# chccwdev -a online=0 0.0.1000-0.0.1100,0.1.7000-0.1.7010,0.0.1234,0.1.4321
```

- To set devices with bus ID 0.0.0192, and 0.0.0195 through 0.0.0198 offline after completing all outstanding I/O requests:

```
# chccwdev -s 0.0.0192,0.0.0195-0.0.0198
```

If an outstanding I/O request is blocked, the command might wait forever. Reasons for blocked I/O requests include reserved devices that can be released or disconnected devices that can be reconnected.

1. Try to resolve the problem that blocks the I/O request and wait for the command to complete.
  2. If you cannot resolve the problem, issue **chccwdev -d** to cancel the outstanding I/O requests. The data is lost.
- To set an ECKD DASD 0.0.b100 online and to enable extended error reporting and logging issue:

```
# chccwdev -e -a eer_enabled=1 -a explog=1 0.0.b100
```

## chchp - Change channel path status


Use the **chchp** command to set channel paths online or offline.

The actions are equivalent to performing a Configure Channel Path Off or Configure Channel Path On operation on the Hardware Management Console.

The channel path status that results from a configure operation is persistent across IPLs.

**Note:** Changing the configuration state of an I/O channel path might affect the availability of I/O devices. It can also trigger associated functions (such as channel-path verification or device scanning) which in turn can result in a temporary increase in processor, memory, and I/O load.

### chchp syntax

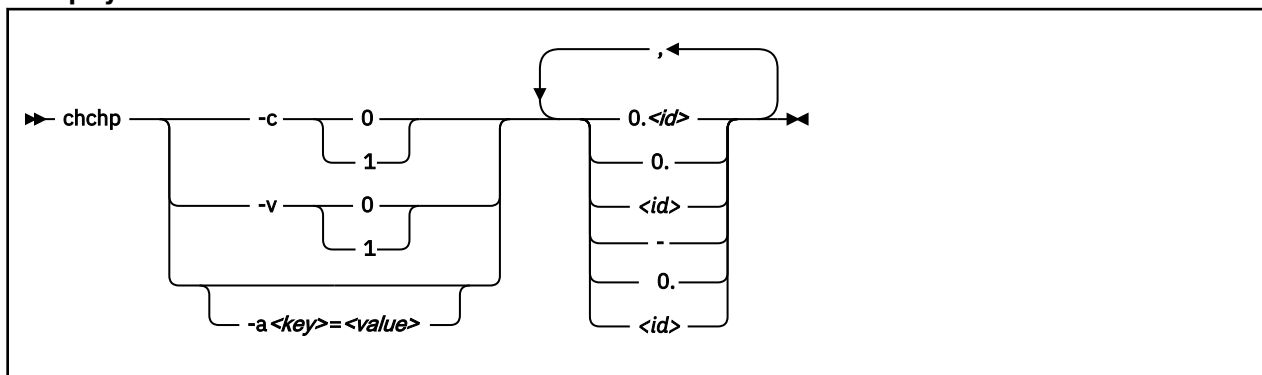

Where:

**-c <value> or --configure <value>**

sets the device to configured (1) or standby (0).

**Note:** Setting the configured state to standby can stop running I/O operations.

**-v <value> or --vary <value>**

changes the logical channel-path state to online (1) or offline (0).

**Note:** Setting the logical state to offline can stop running I/O operations.

**-a <key> = <value> or --attribute <key> = <value>**

changes the channel-path sysfs attribute <key> to <value>. The <key> can be the name of any available channel-path sysfs attribute (that is, configure or status). <value> can take any valid value that can be written to the attribute (for example, 0 or offline). Using -a is a generic way of writing to the corresponding sysfs attribute. It is intended for cases where sysfs attributes or attribute values are available in the kernel but not in **chchp**.

**0.<id> and 0.<id> - 0.<id>**

where <id> is a hexadecimal, two-digit, lowercase identifier for the channel path. An operation can be performed on more than one channel path by specifying multiple identifiers as a comma-separated list, or a range, or a combination of both.

**--version**

displays the version number of **chchp** and exits.

**-h or --help**

displays a short help text, then exits.

### Examples

- To set channel path 0.19 into standby state issue:

```
# chchp -a configure=0 0.19
```

- To set the channel path with the channel path ID 0.40 to the standby state, write 0 to the configure file with the **chchp** command:

```
# chchp --configure 0 0.40  
Configure standby 0.40... done.
```

- To set a channel-path to the configured state, write 1 to the configure file with the **chchp** command:

```
# chchp --configure 1 0.40  
Configure online 0.40... done.
```

- To set channel-paths 0.65 to 0.6f to the configured state issue:

```
# chchp -c 1 0.65-0.6f
```

- To set channel-paths 0.12, 0.7f and 0.17 to 0.20 to the logical offline state issue:

```
# chchp -v 0 0.12,0.7f,0.17-0.20
```


## chcpumf - Set limits for the CPU measurement sampling facility buffer

Use the **chcpumf** command to set limits for the CPU measurement sampling facility buffer.

The sampling facility is designed for autonomous buffer management, and you do not usually need to intervene. However, you might want to change the minimum or maximum size, for example, for one of the following reasons:

- There are considerable resource constraints on your system, and the sampling facility stops because it tries to allocate more buffer space than is available.
- As an expert user of perf and the sampling facility, you want to explore results with particular buffer settings.

### chcpumf syntax

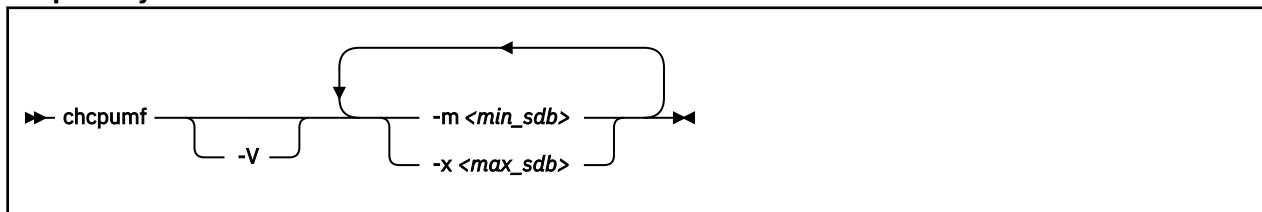

where:

**-m <min\_sdb> or --min <min\_sdb>**

specifies the minimum sampling facility buffer size in sample-data-blocks. A sample-data-block occupies approximately 4 KB. The sampling facility starts with this buffer size if it exceeds the initial buffer size that is calculated by the sampling facility.

**-x <max\_sdb> or --max <max\_sdb>**

specifies the maximum sampling facility buffer size in sample-data-blocks. A sample-data-block occupies approximately 4 KB. While it is running, the sampling facility dynamically adjusts the buffer size to a suitable value, but cannot exceed this limit.

**-V or --verbose**

displays the buffer size settings after the changes.

**-v or --version**

displays the version number of **chcpumf** and exits.

**-h or --help**

displays out a short help text, then exits. To view the man page, enter **man chcpumf**.

### Example

To change the minimum buffer size to 500 times the size of a sample-data-block and the maximum buffer size to 1000 times the size of a sample-data-block, issue:


```
# chcpumf -V -m 500 -x 1000
Sampling buffer sizes:
  Minimum:    500 sample-data-blocks
  Maximum:   1000 sample-data-blocks
```

## chreipl - Modify the re-IPL configuration

Use the **chreipl** tool to modify the re-IPL configuration for Linux on Z.

You can configure a particular device as the reboot device. For **zipl** boot menu configurations, you can set the boot menu entry to be used for the next reboot. You can also specify additional kernel parameters for the next reboot.

### chreipl syntax

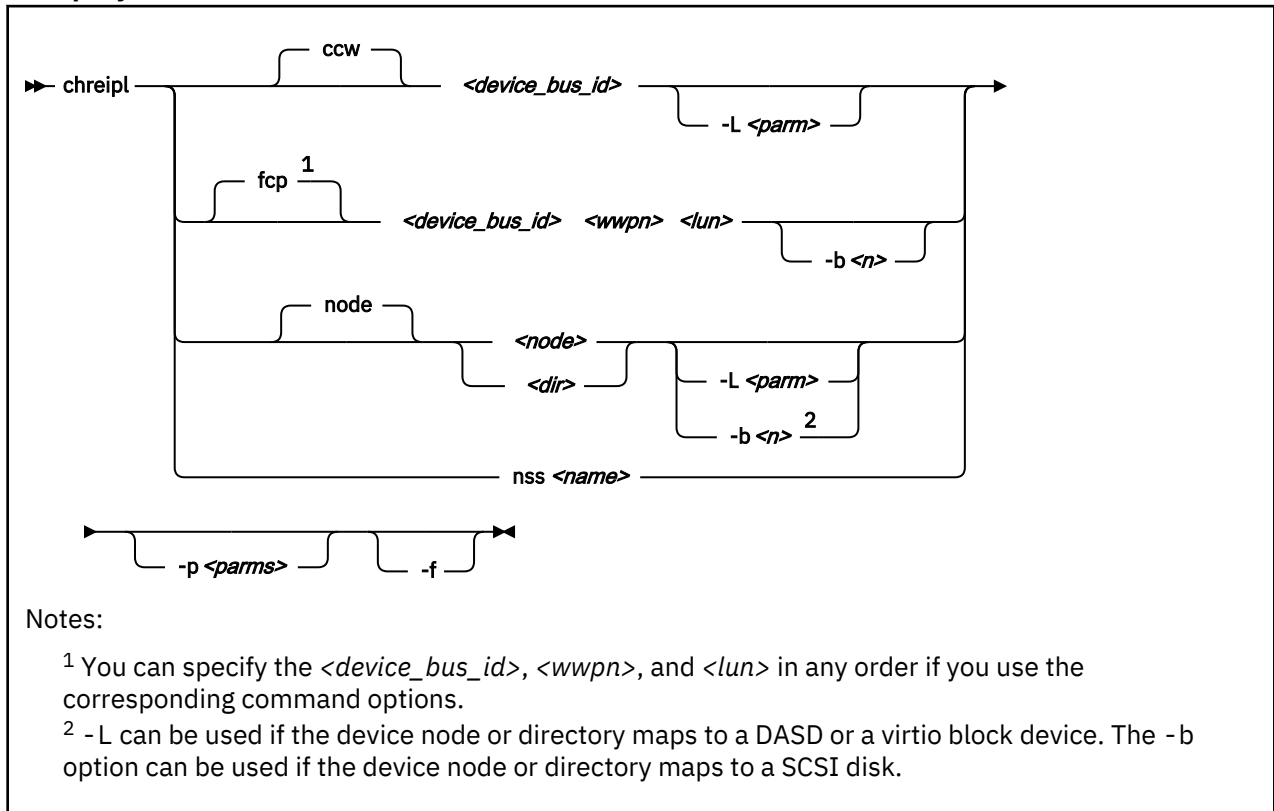

Where:

**<device\_bus\_id> or -d <device\_bus\_id> or --device <device\_bus\_id>**

specifies the device bus-ID of a CCW re-IPL device or of the FCP device through with a SCSI re-IPL device is attached.

**<wwpn> or -w <wwpn> or --wwpn <wwpn>**

specifies the worldwide port name (WWPN) of a SCSI re-IPL device.

**<lun> or -l <lun> or --lun <lun>**

specifies the logical unit number (LUN) of a SCSI re-IPL device.

**<node>**

specifies a device node of a DASD, SCSI, or logical device mapper re-IPL device. For more information about logical boot devices, see [“Preparing a logical device as a boot device”](#) on page 61.

**<dir>**

specifies a directory in the Linux file system on the re-IPL device.

**nss**

declares that the following parameters refer to a z/VM named saved system (NSS).

**<name> or -n <name> or --name <name>**

specifies the name of an NSS as defined on the z/VM system.

**-l <parameter> or --loadparm <parameter>**

specifies the entry in the boot menu to be used for the next reboot. This parameter applies to DASDs or virtio block devices with a **zipl** boot menu configuration.

Omitting this parameter eliminates an existing selection in the boot configuration. Depending on your boot menu configuration, a **zipl** interactive boot menu might be displayed during the re-IPL process or the default configuration is used. See [“Example for a DASD menu configuration on z/VM” on page 89](#), [“Example for a DASD menu configuration \(LPAR\)” on page 82](#), and [“Menu configurations” on page 72](#) for details.

**-b <n> or --bootprog <n>**

specifies the entry in the boot menu to be used for the next reboot. This parameter applies only if the re-IPL device is a SCSI disk with a **zipl** boot menu configuration.

Omitting this parameter eliminates an existing selection in the boot configuration and the default boot configuration is used.

**-p or --bootparms**

specifies boot parameters for the next reboot. The boot parameters, which typically are kernel parameters, are appended to the kernel parameter line in the boot configuration. The number of characters you can specify depends on your environment and re-IPL device as shown in [Table 65 on page 508](#).

*Table 65. Maximum characters for additional kernel parameters*

Virtual hardware where Linux runs	DASD re-IPL device	SCSI re-IPL device	NSS re-IPL device
z/VM guest virtual machine	64	3452	56
LPAR	none	3452	n/a

If you omit this parameter, the existing boot parameters in the next boot configuration are used without any changes.

**-f or --force**

With this option, you can force the re-IPL from a target device even if the target cannot be verified by the system. This is the case, for example, if the device is on the `cio_ignore` exclusion list (blacklist).

**Note:** Use this option with great care. Specifying a non-existing device causes the re-IPL to fail.

**-h or --help**

displays help information for the command. To view the man page, enter **man chreipl**.

**-v or --version**

displays version information.

For disk-type re-IPL devices, the command accepts but does not require an initial statement:

**ccw**

declares that the following parameters refer to a DASD or a virtio block re-IPL device.

**fcp**

declares that the following parameters refer to a SCSI re-IPL device.

**node**

declares that the following parameters refer to a disk re-IPL device that is identified by a device node or by a directory in the Linux file system on that device. The disk device can be a DASD or a SCSI disk.

**Examples**

These examples illustrate common uses for **chreipl**.

- The following commands all configure the same DASD as the re-IPL device, assuming that the device bus-ID of the DASD is `0.0.7e78`, that the standard device node is `/dev/dasdc`, that `udev` creates an



alternative device node `/dev/disk/by-path/ccw-0.0.7e78`, that `/mnt/boot` is located on the Linux file system in a partition of the DASD.

- Using the bus ID:

```
# chreipl 0.0.7e78
```

- Using the bus ID and the optional `ccw` statement:

```
# chreipl ccw 0.0.7e78
```

- Using the bus ID, the optional statement and the optional **--device** keyword:

```
# chreipl ccw --device 0.0.7e78
```

- Using the standard device node:

```
# chreipl /dev/dasdc
```

- Using the udev-created device node:

```
# chreipl /dev/disk/by-path/ccw-0.0.7e78
```

- Using a directory within the file system on the DASD:

```
# chreipl /mnt/boot
```

- The following commands all configure the same SCSI disk as the re-IPL device, assuming that the device bus-ID of the FCP device through which the device is attached is `0.0.1700`, the WWPN of the storage server is `0x500507630300c562`, and the LUN is `0x401040b300000000`. Further it is assumed that the standard device node is `/dev/sdb`, that udev creates an alternative device node `/dev/disk/by-id/scsi-36005076303ffc562000000000000010b4`, and that `/mnt/fcpboot` is located on the Linux file system in a partition of the SCSI disk.

- Using bus ID, WWPN, and LUN:

```
# chreipl 0.0.1700 0x500507630300c562 0x401040b300000000
```

- Using bus ID, WWPN, and LUN with the optional `fcp` statement:

```
# chreipl fcp 0.0.1700 0x500507630300c562 0x401040b300000000
```

- Using bus ID, WWPN, LUN, the optional statement, and keywords for the parameters. When you use the keywords, the parameters can be specified in any order:

```
# chreipl fcp --wwpn 0x500507630300c562 -d 0.0.1700 --lun 0x401040b300000000
```

- Using the standard device node:

```
# chreipl /dev/sdb
```

- Using the udev-created device node:

```
# chreipl /dev/disk/by-id/scsi-36005076303ffc562000000000000010b4
```

- Using a directory within the file system on the SCSI disk:

```
# chreipl /mnt/fcpboot
```

- To configure a DASD with bus ID 0.0.7e78 as the re-IPL device, using the first entry of the **zipl** boot menu:

```
# chreipl 0.0.7e78 -L 1
Re-IPL type:  ccw
Device:       0.0.7e78
Loadparm:     "1"
Bootparms:    ""
```

- The following examples configures a DASD with bus ID 0.0.7e78 as the re-IPL device. To also display all kernel messages on the console, add `ignore_loglevel` to the existing kernel parameters in the boot configuration:

```
# chreipl 0.0.7e78 -p "ignore_loglevel"
Re-IPL type:  ccw
Device:       0.0.7e78
Loadparm:     ""
Bootparms:    "ignore_loglevel"
```

## chshut - Control the system shutdown actions

Use the **chshut** command to change the shutdown actions for specific shutdown triggers.


The shutdown triggers are:

- halt
- poff
- reboot

The shutdown triggers `restart` and `panic` are handled by the `dumpconf` service script, see *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 for details.

Linux on Z performs shutdown actions according to sysfs attribute settings within the `/sys/firmware` directory structure. The **chshut** command sets a shutdown action for a shutdown trigger by changing the corresponding sysfs attribute setting. For more information about the sysfs attributes and the shutdown actions, see Chapter 9, “Shutdown actions,” on page 103.

### chshut syntax

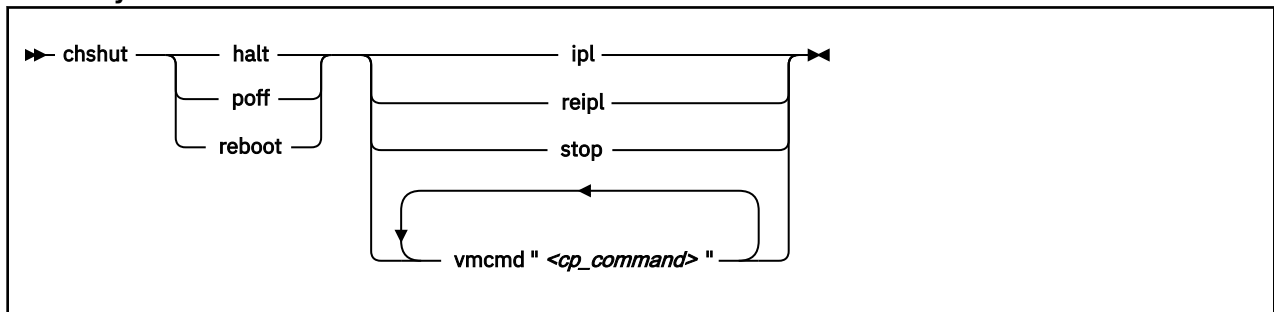

Where:

#### halt

sets an action for the `halt` shutdown trigger.

Red Hat Enterprise Linux by default maps `halt` to `poff`. You can undo this mapping by editing the file `/etc/sysconfig/shutdown` and replacing `HALT="auto"` with `HALT="halt"`.

#### poff

sets an action for the `poff` shutdown trigger.

#### reboot

sets an action for the `reboot` shutdown trigger.

#### ipl

sets IPL as the action to be taken.

#### reipl

sets re-IPL as the action to be taken.

#### stop

sets "stop" as the action to be taken.

#### vmcmd "<cp\_command>"

sets the action to be taken to issuing a z/VM CP command. The command must be specified in uppercase characters and enclosed in quotation marks. To issue multiple commands, repeat the `vmcmd` attribute with each command.

#### -h or --help

displays help information for the command. To view the man page, enter **man chshut**.

#### -v or --version

displays version information.

### Examples

These examples illustrate common uses for **chshut**.

- To make the system start again after a power off:

```
# chshut poff ipl
```

- To log off the z/VM guest virtual machine if the Linux **poweroff** command was run successfully:

```
# chshut poff vmcmd LOGOFF
```

- To send a message to z/VM user ID OPERATOR and automatically log off the z/VM guest virtual machine if the Linux **poweroff** command is run:

```
# chshut poff vmcmd "MSG OPERATOR Going down" vmcmd "LOGOFF"
```

## chzcrypt - Modify the cryptographic configuration

Use the **chzcrypt** command to configure cryptographic adapters that are managed by zcrypt and modify zcrypt's AP bus attributes.


In sysfs, AP queues are listed as children of a cryptographic device with a name of the form: `card<adapter_id>`. For example, if cryptographic devices with the adapter IDs 00 and 02 are selected, and the domain IDs 0002, 0003 and 000e have been configured, then the following cryptographic devices and AP queues are defined to Linux:

```
/sys/devices/ap/card00
/sys/devices/ap/card00/00.0002
/sys/devices/ap/card00/00.0003
/sys/devices/ap/card00/00.000e
/sys/devices/ap/card02
/sys/devices/ap/card02/02.0002
/sys/devices/ap/card02/02.0003
/sys/devices/ap/card02/02.000e
```

Setting a cryptographic device online or offline with **chzcrypt** affects its AP queues.

To display the attributes, use [“lszcrypt - Display cryptographic devices” on page 600](#).

### chzcrypt syntax

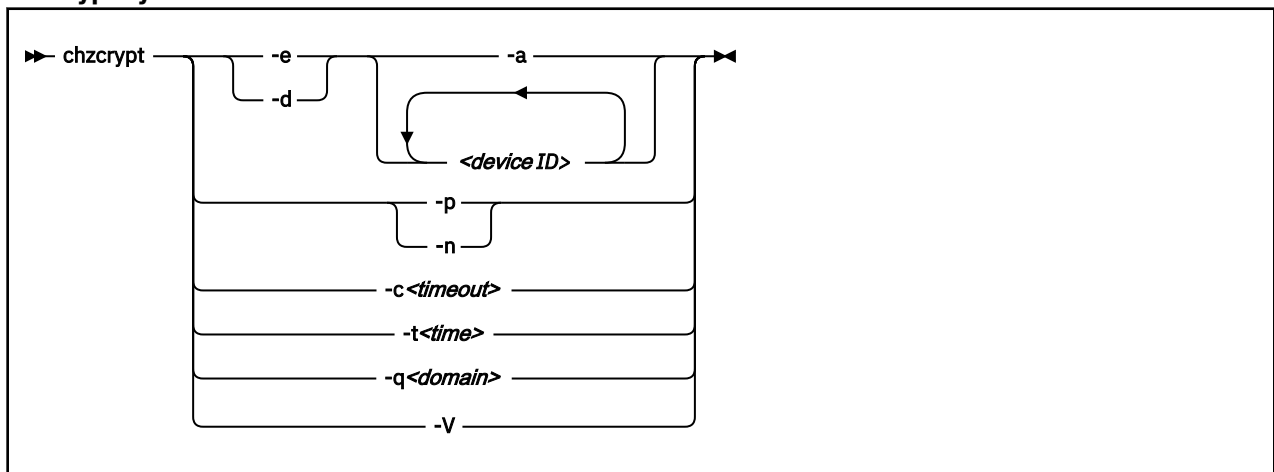

Where:

**-e or --enable**

sets the given cryptographic devices and AP queues online.

**-d or --disable**

sets the given cryptographic devices and AP queues offline.

**-a or --all**

sets all available cryptographic adapters online or offline.

**<device ID>**

specifies a cryptographic adapter that is to be set online or offline. A cryptographic adapter can be specified either in decimal notation or hexadecimal notation with a '0x' prefix.

**-p or --poll-thread-enable**

enables zcrypt's poll thread.

**-n or --poll-thread-disable**

disables zcrypt's poll thread.

**-c <timeout> or --config-time <timeout>**

sets configuration timer for rescanning the AP bus to *<timeout>* seconds.

**-t <time> or --poll-timeout=<time>**

sets the high-resolution polling timer to <time> nanoseconds. To display the value, use **lszcrypt -b**.

**-q <domain> or --default-domain <domain>**

changes the default domain. Specify the domain as either a hexadecimal or decimal value.

**Important:** Be sure to enter an existing domain. The Trusted Key Entry (TKE) workstation does not find the cryptographic adapters if a non-existing domain is entered here. All CCA applications use the default domain, and do not work correctly if the specified domain does not exist.

**-V or --verbose**

displays verbose messages.

**-h or --help**

displays short information about command usage.

**-v or --version**

displays version information.

**Examples**

These examples illustrate common uses for **chzcrypt**.

- To set the cryptographic devices with the adapter IDs 0, 1, 4, 5, and 12 and their associated AP queues online (in decimal notation):

```
chzcrypt -e 0 1 4 5 12
```

Or, in hexadecimal notation:

```
chzcrypt -e 0x00 0x01 0x04 0x05 0x0C
```

- To set the cryptographic adapters 0, 1, 4, 5, and 12 online (in decimal notation):

```
chzcrypt -e 0 1 4 5 12
```

- To set all available cryptographic adapters including all AP queues, offline:

```
chzcrypt -d -a
```

- To set the AP queue defined by adapter ID 00 and domain 77 (0x4d) offline:

```
chzcrypt -d 00.004d
```

- To set the configuration timer for rescanning the AP bus to 60 seconds and disable zcrypt's poll thread:

```
chzcrypt -c 60
chzcrypt -n
```

- To change the default domain to 77 (0x4d):

```
chzcrypt -q 0x4d
```

or

```
chzcrypt -q 77
```

## chzdev - Configure IBM Z devices

Use the **chzdev** command to configure devices and device drivers on IBM Z. Supported devices include storage devices (DASD and zFCP) and networking devices (QETH, CTC, and LCS).

You can apply configuration changes to the active configuration of the currently running system, or to the persistent configuration stored in configuration files:


- Changes to the active configuration are effective immediately. They are lost on reboot, when a device driver is unloaded, or when a device becomes unavailable.
- Changes to the persistent configuration are applied when the system boots, when a device driver is loaded, or when a device becomes available.

By default, **chzdev** applies changes to the active and the persistent configuration.

You can also temporarily remove existing auto-configuration data, see [“Managing auto-configuration data” on page 20](#).

**chzdev** supports enabling and disabling devices, exporting and importing configuration data to and from a file, and displaying a list of available device types and attributes.


### chzdev actions and options

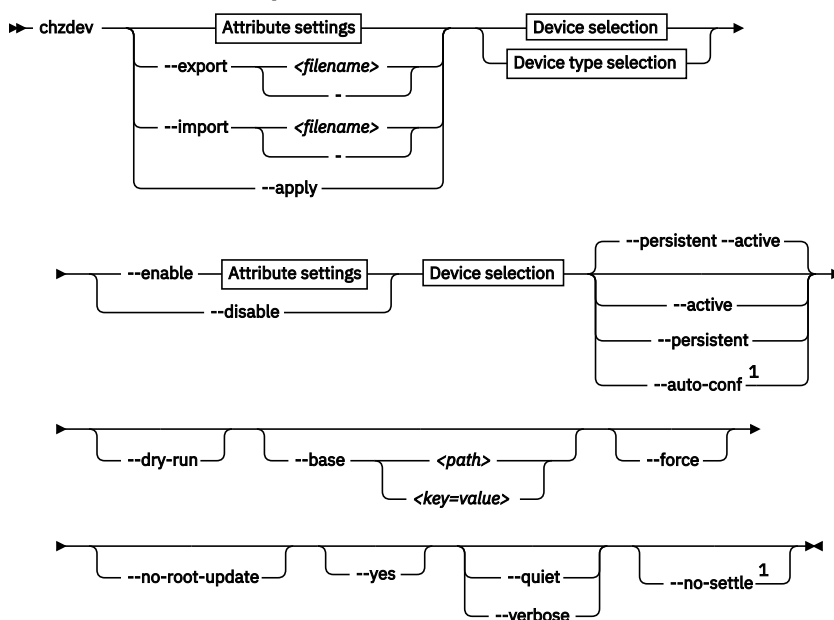


Notes:

<sup>1</sup> This option is intended for utilities that run early in the boot process.

### Device selection

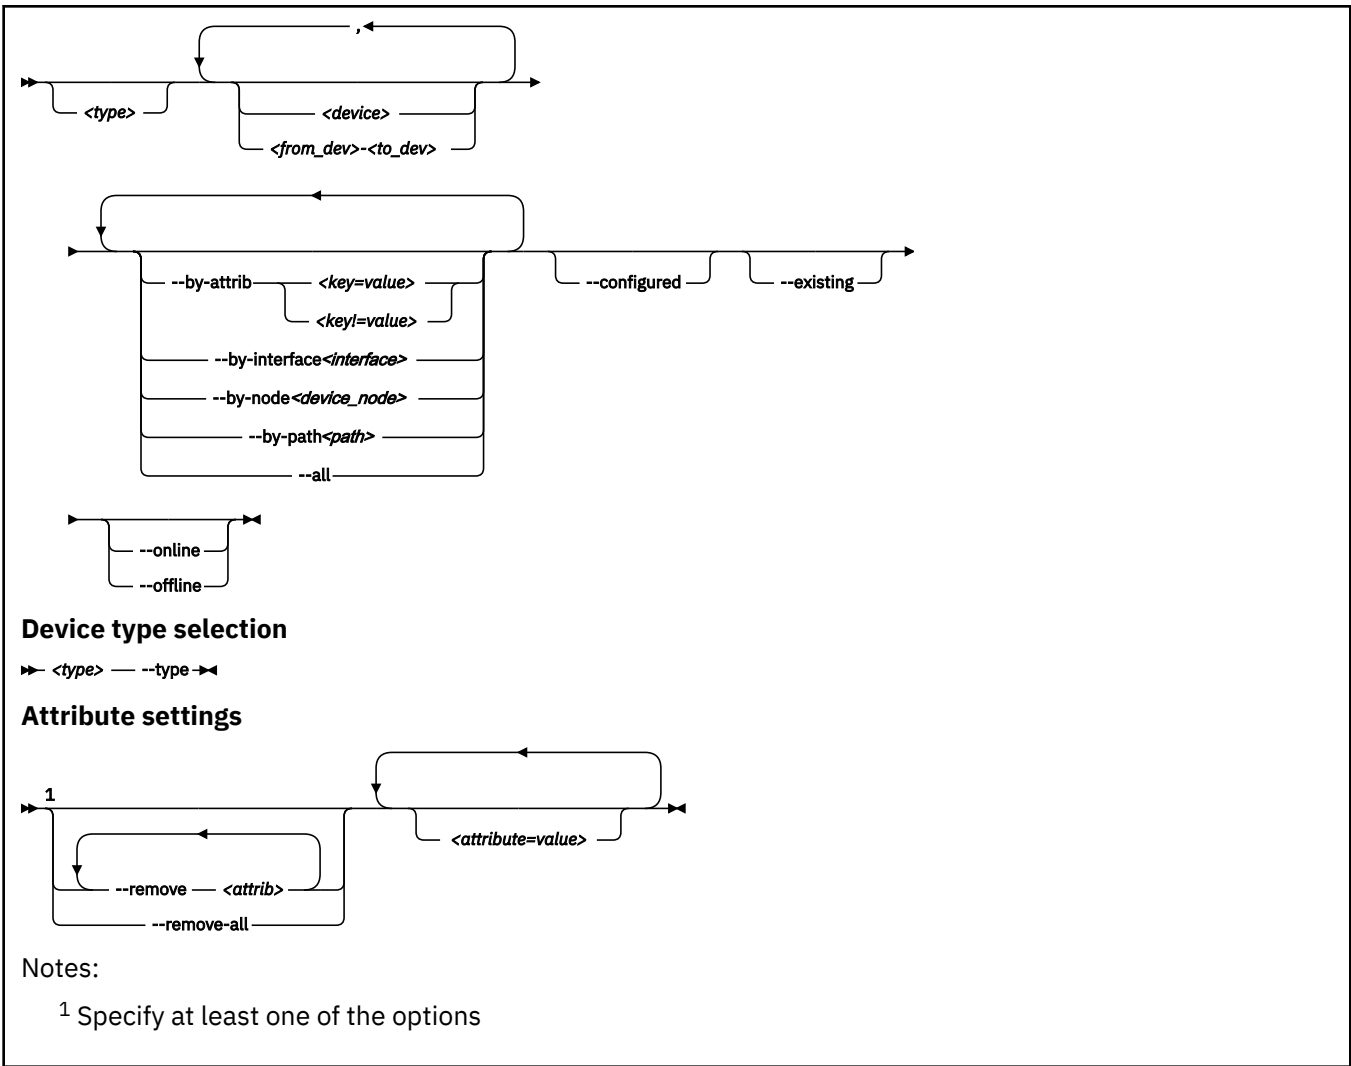

**chzdev help functions**

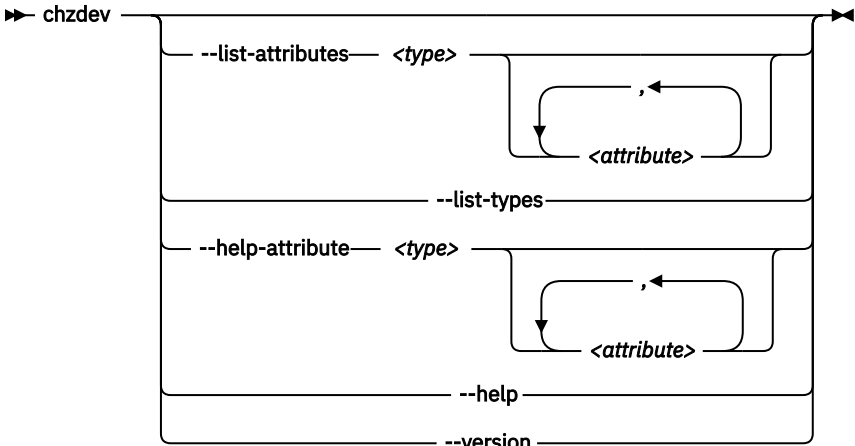

where:

**<type>**

restricts the scope of an action to the specified device type:

- Specify a device type and optionally a device ID to work on devices with matching type and ID only.



- Specify a device type together with the `--type` option to manage the configuration of the device type itself.

**Note:**

As a precaution, use the most specific device type when you configure a device by ID. Otherwise, the same device ID might accidentally match other devices of a different subtype. To get a list of supported device types, use the `--list-types` option.

**<device>**

selects a single device or a range of devices by device ID. Separate multiple IDs or ranges with a comma (,). To select a range of devices, specify the ID of the first and the last device in the range separated by a hyphen (-).

**-t or --type <device\_type>**

selects a device type as target for a configuration or query action.

**<attribute=value>**

specifies a device attribute and its value. To specify multiple attributes, separate attribute-value pairs with a blank.

You can use the `--list-attributes` option to display a list of available attributes and the `--help-attribute` to get more detailed information about a specific attribute.

**Tip:** To specify an attribute that is not known to **chzdev**, use the `--force` option.

**-r or --remove <attrib>**

removes the setting for attribute *<attrib>*.

**Active configuration**

For attributes that maintain a list of values, clears all values for that list.

**Persistent configuration**

Removes any setting for the specified attribute. When the device or device driver is configured again, the attribute is set to its default value.

Some attributes cannot be removed.

**-R or --remove-all**

removes the settings for all attributes of the selected device or device driver.

**Active configuration**

For attributes that maintain a list of values, clears all values for that list.

**Persistent configuration**

Removes all attribute settings that can be removed. When the device or device driver is configured again, the attribute is set to its default value.

Some attributes cannot be removed.

**--by-attr <attrib=value> | <attrib!=value>**

selects devices with a specific attribute, *<attrib>* that has a value of *<value>*. When specified as *<attrib>!=<value>*, selects all devices that do not provide an attribute named *<attrib>* with a value of *<value>*.

**Tip:** You can use the `--list-attributes` option to display a list of available attributes and the `--help-attribute` to get more detailed information about a specific attribute.

**--by-interface <interface>**

selects devices by network interface, for example, *encf5a0*. *<interface>* must be the name of an existing networking interface.

**--by-node <device\_node>**

selects devices by device node, for example, */dev/sda*. *<device\_node>* must be the path to the device node for a block device or character device.

**Note:** If *<device\_node>* is the device node for a logical device (such as a device mapper device), **lszdev** tries to resolve the corresponding physical device nodes. The **lsblk** tool must be available for this resolution to work.

**--by-path <path>**

selects devices by file-system path, for example, /usr. The <path> parameter can be the mount point of a mounted file system, or a path on that file system.

**Note:** If the file system that provides <path> is stored on multiple physical devices (such as supported by btrfs), **lszdev** tries to resolve the corresponding physical device nodes. The **lsblk** tool must be available and the file system must provide a valid UUID for this resolution to work.

**--all**

selects all existing and configured devices.

**--configured**

narrows the selection to those devices for which a persistent configuration exists.

**--existing**

narrows the selection to all devices that are present in the active configuration.

**--configured --existing**

specifying both --configured and --existing narrows the selection to devices that are present in both configurations, persistent and active.

**--online**

narrows the selection to devices that are enabled in the active configuration.

**--offline**

narrows the selection to devices that are disabled in the active configuration.

**-a or --active**

applies changes to the active configuration only. The persistent configuration is not changed unless you also specify --persistent.

**Note:** Changes to the active configuration are effective immediately. They are lost on reboot, when a device driver is unloaded, or when a device becomes unavailable.

**-p or --persistent**

applies changes to the persistent configuration only. The persistent configuration takes effect when the system boots, when a device driver is loaded, or when a device becomes available.

**--auto-config**

applies changes to the auto-configuration. Changes to the auto-configuration take effect when a device becomes available, but do not persist across reboots. This option is primarily intended for use by the boot process. For details about auto-configuration data, see [Chapter 3, “Device auto-configuration for Linux in LPAR mode,”](#) on page 19.

**--export <filename>|-**

writes configuration data to a text file called <filename>. If a single hyphen (-) is specified instead of a file name, data is written to the standard output stream. The output format of this option can be used with the --import option. To reduce the scope of exported configuration data, you can select specific devices, a device type, or define whether to export only data for the active or persistent configuration.

**--import <filename>|-**

reads configuration data from <filename> and applies it. If a single hyphen (-) is specified instead of a file name, data is read from the standard input stream. The input format must be the same as the format produced by the --export option.

By default, all configuration data that is read is also applied. To reduce the scope of imported configuration data, you can select specific devices, a device type, or define whether to import only data for the active or persistent configuration.

**-a or --apply**

applies the persistent configuration of all selected devices and device types to the active configuration.

**-e or --enable**

enables the selected devices. Any steps necessary for the devices to function are taken, for example: create a CCW group device, remove a device from the CIO exclusion list, or set a CCW device online.

**Active configuration**

Performs all setup steps required for a device to become operational, for example, as a block device or as a network interface.

**Persistent configuration**

Creates configuration files and settings associated with the selected devices.

**-d or --disable**

disables the selected devices.

**Active configuration**

Disables the selected devices by reverting the configuration steps necessary to enable them.

**Persistent configuration**

Removes configuration files and settings associated with the selected devices.

**--dry-run**

processes the actions and displays command output without changing the configuration of any devices or device types. Combine with `--verbose` to display details about skipped configuration steps.

**--base <path> | <key=value>**

changes file system paths that are used to access files. If *<path>* is specified without an equal sign (=), it is used as base path for accessing files in the active and persistent configuration. If the specified parameter is in *<key=value>* format, only those paths that begin with *<key>* are modified. For these paths, the initial *<key>* portion is replaced with *<value>*.

Example: `lszdev --active --base /etc=/mnt/etc`

**-f or --force**

overrides safety checks and confirmation questions, including:

- More than 256 devices selected
- Configuring unknown attributes
- Combining apparently inconsistent settings

**--no-root-update**

skips any additional steps that are required to change the root device configuration persistently. Typically such steps include rebuilding the initial RAM disk, or modifying the kernel command line.

**-y or --yes**

answers all confirmation questions with "yes".

**-q or --quiet**

prints only minimal run-time information.

**-l or --list-attributes**

lists all supported device or device type attributes, including a short description. Use the `--help-attribute` option to get more detailed information about an attribute.

**-L or --list-types**

lists the name and a short description for all device types supported by **chzdev**.

**--no-settle**

continue without waiting for udev processing to complete. This option is intended for utilities that run during the early initial RAM disc stage of the boot process, when udev is not fully functional.

**-V or --verbose**

prints additional run-time information.

**-v or --version**

displays the version number of **chzdev**, then exits.

**-h or --help**

displays help information for the command.

**-H or --help-attribute**

displays help information for the command.

## Examples

- To enable an FCP device with device number 0.0.198d, WWPN 0x50050763070bc5e3, and LUN 0x4006404600000000 in the currently active configuration, issue:

```
# chzdev --enable --active zfcplun 0.0.198d:0x50050763070bc5e3:0x4006404600000000
```

- To export configuration data for all FCP devices to a file called `config.txt`, issue:

```
# chzdev zfcplun --all --export config.txt
```

- To enable a QETH device in the currently active configuration, issue:

```
# chzdev --enable --active qeth 0.0.a000:0.0.a001:0.0.a002
```

- To get help for the QETH-device attribute `layer2`, issue:

```
# chzdev qeth --help-attribute layer2
```

- To enable a device that provides networking interface `encf500`, issue:

```
# chzdev --by-interface encf500 --active
```

- To enable DASD 0.0.8000 in the currently active configuration, issue:

```
# chzdev -e -a dasd 8000
```

- To enable DASDs 0.0.1000 and 0.0.2000 through 0.0.2010 in the currently active configuration, issue:

```
# chzdev dasd 1000,200-2010 -e -a
```

- To change the dasd device type parameter `eer_pages` to 14 in the currently active configuration, issue:

```
# chzdev dasd --type eer_pages=14 -a
```

See the man page for information about the command exit codes.

## Activating a device early during the boot process

Use the `zdev:early` device attribute to activate a device early during the boot process and to override any existing auto-configuration with a persistent device configuration.

### **zdev:early=1**

The device is activated during the initial RAM disc phase according to the persistent configuration.

### **zdev:early=0**

The device is activated as usual during the boot process. This is the default. If auto-configuration data is present, the device is activated during the initial RAM disc phase according to the auto-configuration.

**Example:** To assure that the qeth device with bus-ID 0.0.f5f0 is enabled early in the boot process in layer 2 mode, issue:

```
# chzdev -e qeth 0.0.f5f0:0.0.f5f1:0.0.f5f2 layer2=1 zdev:early=1
```

See also [Chapter 3, “Device auto-configuration for Linux in LPAR mode,”](#) on page 19.

## Files used

The **chzdev** command uses these files:

**/etc/udev/rules.d/**

**chzdev** creates udev rules to store the persistent configuration of devices.

**/etc/modprobe.d/**

**chzdev** creates modprobe configuration files to store the persistent configuration of certain device types.

**/run**

holds udev rules that represent auto-configuration data. **chzdev** can remove entries so the auto-configuration settings do not apply as devices appear on the running Linux instance.


## cio\_ignore - Manage the I/O exclusion list

Use the **cio\_ignore** command to specify I/O devices that are to be ignored by Linux.

When an instance of Linux on Z boots, it senses and analyzes all available I/O devices. You can use the `cio_ignore` kernel parameter (see “[cio\\_ignore - List devices to be ignored](#)” on page 682) to specify devices that are to be ignored. This exclusion list can cover all possible devices, even devices that do not actually exist.

The **cio\_ignore** command manages this exclusion list on a running Linux instance. You can change the exclusion list and display it in different formats.

### cio\_ignore syntax

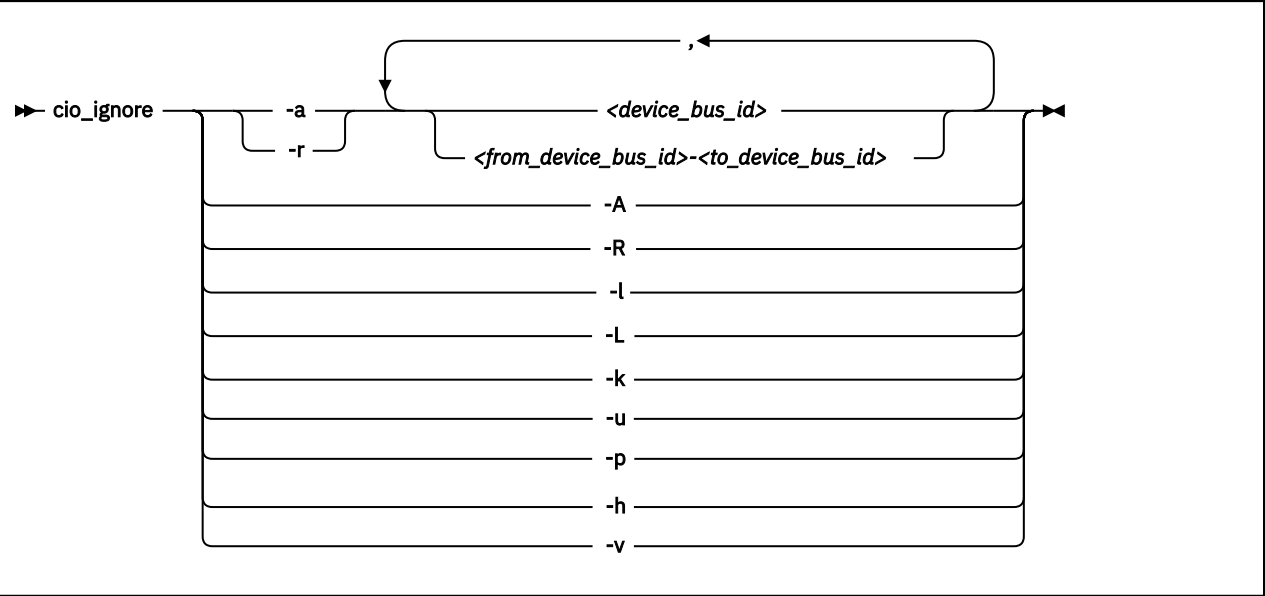

Where:

#### **-a or --add**

adds one or more device specifications to the exclusion list.

When you add specifications for a device that is already sensed and analyzed, there is no immediate effect of adding it to the exclusion list. For example, the device still appears in the output of the **lscss** command and can be set online. However, if the device subsequently becomes unavailable, it is ignored when it reappears. For example, if the device is detached in z/VM, it is ignored when it is attached again.

See the [-p option](#) about how to make devices that are already sensed and analyzed unavailable to Linux.

#### **-r or --remove**

removes one or more device specifications from the exclusion list.

When you remove device specifications from the exclusion list, the corresponding devices are sensed and analyzed if they exist. Where possible, the corresponding device driver is informed, and the devices become available to Linux.

#### **<device\_bus\_id>**

identifies a device to be added or removed.

Device bus-IDs are of the form `0.<n>.<devno>`, where `<n>` is a subchannel set ID and `<devno>` is a device number. If the subchannel set ID is 0, you can abbreviate the specification to the device number, with or without a leading 0x.

**Example:** The specifications 0.0.0190, 190, 0190, and 0x190 are all equivalent. There is no short form of 0.1.0190.

**<from\_device\_bus\_id>-<to\_device\_bus\_id>**

identifies a range of devices. <from\_device\_bus\_id> and <to\_device\_bus\_id> have the same format as <device\_bus\_id>.

**-A or --add-all**

adds the entire range of possible devices to the exclusion list.

When you add specifications for a device that is already sensed and analyzed, there is no immediate effect of adding it to the exclusion list. For example, the device still appears in the output of the **lscss** command and can be set online. However, if the device subsequently becomes unavailable, it is ignored when it reappears. For example, if the device is detached in z/VM, it is ignored when it is attached again.

See the **-p** option about making devices that are already sensed and analyzed unavailable to Linux.

**-R or --remove-all**

removes all devices from the exclusion list.

When you remove device specifications from the exclusion list, the corresponding devices are sensed and analyzed if they exist. Where possible, the corresponding device driver is informed, and the devices become available to Linux.

**-l or --list**

displays the current exclusion list.

**-L or --list-not-blacklisted**

displays specifications for all devices that are not in the current exclusion list.

**-k or --kernel-param**

returns the current exclusion list in kernel parameter format.

You can make the current exclusion list persistent across rebooting Linux by using the output of the **cio\_ignore** command with the **-k** option as part of the Linux kernel parameter. See [Chapter 4, “Kernel and module parameters,”](#) on page 23.

**-u or --unused**

discards the current exclusion list and replaces it with a specification for all devices that are not online. This includes specification for possible devices that do not actually exist.

**-p or --purge**

makes all devices that are in the exclusion list and that are currently offline unavailable to Linux. This option does not make devices unavailable if they are online.

**-h or --help**

displays help information for the command. To view the man page, enter **man cio\_ignore**.

**-v or --version**

displays version information.

## Examples

These examples illustrate common uses for **cio\_ignore**.

- The following command shows the current exclusion list:

```
# cio_ignore -l
Ignored devices:
=====
0.0.0000-0.0.7e8e
0.0.7e94-0.0.f4ff
0.0.f503-0.0.ffff
0.1.0000-0.1.ffff
0.2.0000-0.2.ffff
0.3.0000-0.3.ffff
```

- The following command shows specifications for the devices that are not on the exclusion list:

## cio\_ignore

```
# cio_ignore -L
Accessible devices:
=====
0.0.7e8f-0.0.7e93
0.0.f500-0.0.f502
```

- The following command adds a device specification, 0.0.7e8f, to the exclusion list:

```
# cio_ignore -a 0.0.7e8f
```

The previous example then becomes:

```
# cio_ignore -L
Accessible devices:
=====
0.0.7e90-0.0.7e93
0.0.f500-0.0.f502
```

- The following command shows the current exclusion list in kernel parameter format:

```
# cio_ignore -k
cio_ignore=all,!7e90-7e93,!f500-f502
```



## cmsfs-fuse - Mount a z/VM CMS file system

Use the **cmsfs-fuse** command to mount the enhanced disk format (EDF) file system on a z/VM minidisk.

In Linux, the minidisk is represented as a DASD and the file system is mounted as a **cmsfs-fuse** file system. The **cmsfs-fuse** file system translates the record-based file system on the minidisk into Linux semantics.

Through the **cmsfs-fuse** file system, the files on the minidisk become available to applications on Linux. Applications can read from and write to files on minidisks. Optionally, the **cmsfs-fuse** file system converts text files between EBCDIC on the minidisk and ASCII within Linux.



**Attention:** You can inadvertently damage files and lose data when directly writing to files within the **cmsfs-fuse** file system. To avoid problems when you write, multiple restrictions must be observed, especially regarding linefeeds (see [restrictions for write](#)).


**Tip:** If you are unsure about how to safely write to a file on the **cmsfs-fuse** file system, copy the file to a location outside the **cmsfs-fuse** file system, edit the file, and then copy it back to its original location.

Use **fusermount** to unmount file systems that you mounted with **cmsfs-fuse**. See the **fusermount** man page for details.

### Before you begin:

- The fuse module must be loaded, for example, with **modprobe fuse**.
- The FUSE library must be installed on your system. Install the fuse-libs RPM delivered with Red Hat Enterprise Linux 8.1.
- The DASD must be online.
- Depending whether you intend to read, write, or both, you must have the appropriate permissions for the device node.

### cmsfs-fuse syntax

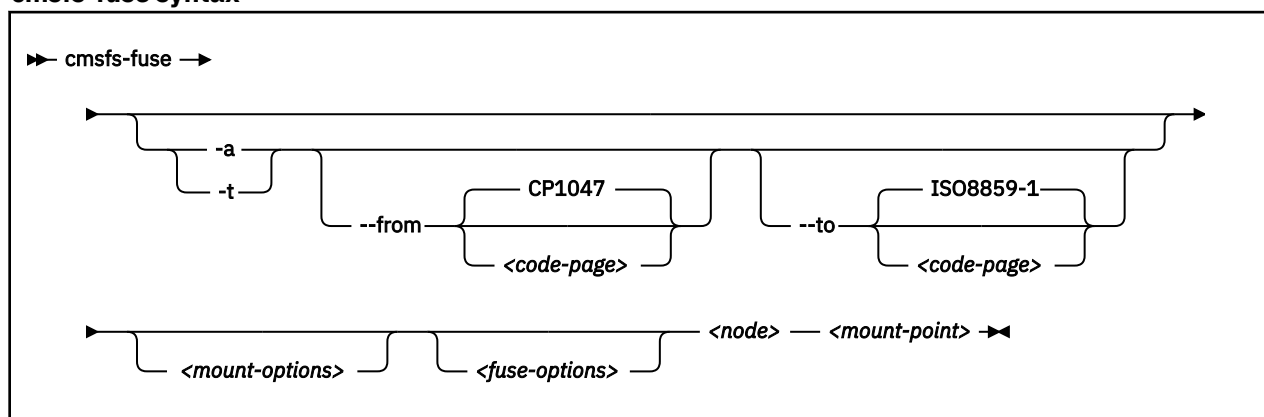

Where:

#### -a or --ascii

treats all files on the minidisk as text files and converts them from EBCDIC to ASCII.

#### -t or --filetype

treats files with extensions as listed in the **cmsfs-fuse** configuration file as text files and converts them from EBCDIC to ASCII.

The **cmsfs-fuse** command uses `~/.cmsfs-fuse/filetypes.conf` as the configuration file. If this file within the user's home directory does not exist, the default configuration file `/etc/cmsfs-fuse/filetypes.conf` is used.

The `filetypes.conf` file lists one file type per line. Lines that start with a number sign (#) followed by a space are treated as comments and are ignored.

**--from <code-page>**

specifies the encoding of the files on the z/VM minidisk. If this option is not specified, code page CP1047 is used. Enter **iconv --list** to display a list of all available code pages.

**--to <code-page>**

specifies the encoding to which the files on the z/VM minidisk are converted in Linux. If this option is not specified, code page ISO-8859-1 is used. Enter **iconv --list** to display a list of all available code pages.

**<mount-options>**

options as available for the **mount** command. See the **mount** man page for details.

**<fuse-options>**

options for FUSE. The following options are supported by the **cmsfs-fuse** command. To use an option, it must also be supported by the version of FUSE that you have.

**-d or -o debug**

enables debug output (implies **-f**).

**-f**

runs the command as a foreground operation.

**-o allow\_other**

allows access to other users.

**-o allow\_root**

allows access to root.

**-o nonempty**

allows mounts over files and non-empty directories.

**-o default\_permissions**

enables permission checking by the kernel.

**-o max\_read=<n>**

sets maximum size of read requests.

**-o kernel\_cache**

caches files in the kernel.

**-o [no]auto\_cache**

enables or disables caching based on modification times.

**-o umask=<mask>**

sets file permissions (octal).

**-o uid=<n>**

sets the file owner.

**-o gid=<n>**

sets the file group.

**-o max\_write=<n>**

sets the maximum size of write requests.

**-o max\_readahead=<n>**

sets the maximum readahead value.

**-o async\_read**

performs reads asynchronously (default).

**-o sync\_read**

performs reads synchronously.

**-o big\_writes**

enables write operations with more than 4 KB.

**<node>**

the device node for the DASD that represents the minidisk in Linux.

**<mount-point>**

the mount point in the Linux file system where you want to mount the CMS file system.

**-h or --help**

displays help information for the command. To view the man page, enter **man cmsfs-fuse**.

**-v or --version**

displays version information for the command.

You can use the following extended attributes to handle the CMS characteristics of a file:

**user.record\_format**

specifies the format of the file. The format is F for fixed record length files and V for variable record length files. This attribute can be set only for empty files. The default file format for new files is V.

**user.record\_lrecl**

specifies the record length of the file. This attribute can be set only for an empty fixed record length file. A valid record length is an integer in the range 1-65535.

**user.file\_mode**

specifies the CMS file mode of the file. The file mode consists of a mode letter from A-Z and mode number in the range 0 - 6. The default file mode for new files is A1.

You can use the following system calls to work with extended attributes:

**listxattr**

to list the current values of all extended attributes.

**getxattr**

to read the current value of a particular extended attribute.

**setxattr**

to set a particular extended attribute.

You can use these system calls through the **getfattr** and **setfattr** commands, available from the attr RPM. For more information, see the man pages of these commands and of the listxattr, getxattr, and setxattr system calls.

**Restrictions**

When you work with files in the cmsfs-fuse file system, restrictions apply for the following system calls:

**write**

Be aware of the following restrictions when you write to a file on the cmsfs-fuse file system:

**Write location**

Writing is supported only at the end of a file.

**Padding**

For fixed-length record files, the last record is padded to make up a full record length. The padding character is zero in binary mode and the space character in ASCII mode.

**Sparse files**

Sparse files are not supported. To prevent the **cp** tool from writing in sparse mode specify **-sparse=never**.

**Records and linefeeds with ASCII conversion (-a and -t)**

In the ASCII representation of an EBCDIC file, a linefeed character determines the end of a record. Follow these rules about linefeed characters requirements when you write to EBCDIC files in ASCII mode:

**For fixed record length files**

Use linefeed characters to separate character strings of the fixed record length.

**For variable record length files**

Use linefeed characters to separate character strings. The character strings must not exceed the maximum record length.

The CMS file system does not support empty records. cmsfs-fuse adds a space to records that consist of a linefeed character only.

**rename and creat**

Uppercase file names are enforced.

**truncate**

Only shrinking of a file is supported. For fixed-length record files, the new file size must be a multiple of the record length.

**Examples**

- To mount the CMS file system on the minidisk represented by the file node `/dev/dasde` at `/mnt`:

```
# cmsfs-fuse /dev/dasde /mnt
```

- To mount the CMS file system on the minidisk represented by the file node `/dev/dasde` at `/mnt` and enable EBCDIC to ASCII conversion for text files with extensions as specified in `~/ .cmsfs-fuse/filetypes.conf` or `/etc/cmsfs-fuse/filetypes.conf` if the former does not exist:

```
# cmsfs-fuse -t /dev/dasde /mnt
```

- To mount the CMS file system on the minidisk represented by the file node `/dev/dasde` at `/mnt` and allow root to access the mounted file system:

```
# cmsfs-fuse -o allow_root /dev/dasde /mnt
```

- To unmount the CMS file system that was mounted at `/mnt`:

```
# fusermount -u /mnt
```

- To show the record format of a file, `PROFILE.EXEC`, on a z/VM minidisk that is mounted on `/mnt`:

```
# getfattr -n user.record_format /mnt/PROFILE.EXEC
F
```

- To set record length 80 for an empty fixed record format file, `PROFILE.EXEC`, on a z/VM minidisk that is mounted on `/mnt`:

```
# setfattr -n user.record_lrecl -v 80 /mnt/PROFILE.EXEC
```

## cpacfstats - Monitor CPACF cryptographic activity

Use the **cpacfstats** command to display the number of cryptographic operations that are performed by the Central Processor Assist for Cryptographic Function (CPACF). You can display and enable, disable, or reset specific hardware counters for AES, DES, TDES, SHA, and pseudo random functions.

CPACF performance counters are available on LPARs only.

All counters are initially disabled and must be enabled in the LPAR activation profile on the SE or HMC to measure CPACF activities. There is a slight performance penalty with CPACF counters enabled.

### Prerequisites

- libpfm version 4 or later of is required. Red Hat Enterprise Linux provides the libpfm package.
- On the HMC or SE, authorize the LPAR for each counter set you want to use. Customize the LPAR activation profile and modify the Counter Facility Security Options. You need to activate the "Crypto activity counter set authorization control" checkbox.
- The cpacfstatsd daemon must be running. Check the syslog for the message: cpacfstatsd: Running. To start the daemon, issue:

```
# cpacfstatd
```

The daemon requires root privileges to open and work with the perf kernel API functions. Issue **man cpacfstatd** for more information about the daemon.

**Note:** The counter value is increased once per API call and also for every additional 4096 bytes of data.

### Setting up the cpacfstats group

Only root and members of the group cpacfstats are allowed to communicate with the daemon process. You must create the group and add users to it.

1. Create the group cpacfstats:

```
# groupadd cpacfstats
```

2. Add all users who are allowed to run the cpacfstats client application to the group:

```
usermod -a -G cpacfstats <user>
```

All users in the cpacfstats group are also able to modify the CPACF counter states (enable, disable, reset).

### cpacfstats syntax



Where:

#### **-e or --enable <counter>**

enables one or all CPACF performance counters. The optional counter argument can be one of:

**des**

counts all DES- and 3DES-related cipher message CPACF instructions.

**aes**

counts all AES-related cipher message CPACF instructions.

**sha**

counts all message digest (that is, SHA-1 through SHA-512) related CPACF instructions.

**rng**

counts all pseudo-random related CPACF instructions.

**all**

counts all CPACF instructions.

If you omit the counter, all performance counters are enabled. Enabling a counter does not reset it. New events are added to the current counter value.

**-d or --disable <counter>**

disables one or all CPACF performance counters. If you omit the counter, all performance counters are disabled. Disabling a counter does not reset it. The counter value is preserved when a counter is disabled, and counting resumes with the preserved value when the counter is re-enabled.

**-r or --reset <counter>**

resets one or all CPACF performance counters. If you omit the counter, all performance counters are reset to 0.

**-p or --print <counter>**

displays the value of one or all CPACF performance counters. If you omit the counter, all performance counters are displayed.

**-h or --help**

displays help information for the command. To view the command man page, enter **man cpacfstats**.

**-v or --version**

displays version information for **cpacfstats**.

If no option is specified, the command prints out all the counters (as if **--print all** were specified).

**Examples**

- To print status and values of all CPACF performance counters:

```
# cpacfstats
des counter: disabled
aes counter: disabled
sha counter: disabled
rng counter: disabled
```

- To enable the AES CPACF performance counter:

```
# cpacfstats --enable aes
aes counter: 0
```

- To enable all CPACF performance counters:

```
# cpacfstats -e
des counter: 0
aes counter: 192
sha counter: 0
rng counter: 0
```

For the already enabled aes counter, the value is not reset.

## cpuplugd - Control CPUs and memory

Use the **cpuplugd** command and a set of rules in a configuration file to dynamically enable or disable CPUs. For Linux on z/VM, you can also dynamically add or remove memory.

Rules that are tailored to a particular system environment and the associated workload can increase performance. The rules can include various system load variables.

**Note:** Do not use **cpuplugd** with NUMA emulation. **cpuplugd** can distort the balance of CPU assignments to NUMA nodes. See Chapter 24, “NUMA emulation,” on page 317.


You can start cpuplugd from the command line in two ways:

- With the service utility
- Through a command-line interface

**Note:** Do not run multiple instances of cpuplugd simultaneously.

### cpuplugd service utility syntax

If you run the **cpuplugd** daemon through the service utility, you configure the daemon through specifications in the `/etc/cpuplugd.conf` configuration file.

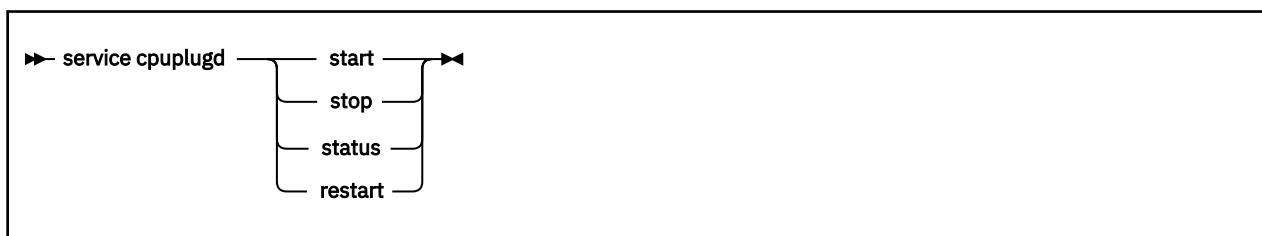

Where:

#### start

starts the cpuplugd daemon with the configuration in `/etc/cpuplugd.conf`. Do not run multiple instances of cpuplugd simultaneously. Check the cpuplugd status before starting a new instance.

#### stop

stops the cpuplugd daemon.

#### status

shows current status of cpuplugd.

#### restart

stops and restarts the cpuplugd daemon. Useful to re-read the configuration file when it was changed.

### Examples

- To stop a running instance of cpuplugd:

```
# service cpuplugd stop
```

- To display the status:

```
# service cpuplugd status
... Active: active (running) ...
```

### cpuplugd command-line syntax

You can start cpuplugd through a command interface.

**Before you begin:** Do not run multiple instances of cpuplugd simultaneously. Check the cpuplugd status through the service utility before you issue the **cpuplugd** command (see “[cpuplugd service utility syntax](#)” on page 531).

### cpuplugd syntax

```
➤ cpuplugd -f -V -c <config file> ➤
```

Where:

**-c <config file> or --config <config file>**

specifies the path to the configuration file with the rules (see “[Configuration file structure](#)” on page 532).

After you install cpuplugd for the first time, you can find a sample configuration file at `/etc/cpuplugd.conf`. If you are upgrading from a prior version of cpuplugd, see “[Migrating old configuration files](#)” on page 533.

**-f or --foreground**

runs in foreground.

**-V or --verbose**

displays verbose messages.

**-h or --help**

displays help information for the command. To view the command man page, enter **man cpuplugd**. To view the man page for the configuration file, enter **man cpuplugd.conf**

**-v or --version**

displays version information.

### Examples

- To start cpuplugd in daemon mode with a configuration file `/etc/cpuplugd.conf`:

```
# cpuplugd -c /etc/cpuplugd
```

- To run cpuplugd in the foreground with verbose messages and with a configuration file `/etc/cpuplugd.conf`:

```
# cpuplugd -V -f -c /etc/cpuplugd
```

### Configuration file structure

The cpuplugd configuration file can specify rules for controlling the number of active CPUs and for Linux on z/VM, for controlling the amount of memory.

The configuration file contains:

- `<variable>=<value>` pairs

These pairs must be specified within one line. The maximum valid line length is 2048 characters. The values can be decimal numbers or algebraic or Boolean expressions.

- Comments

Any part of a line that follows a number sign (`#`) is treated as a comment. There can be full comment lines with the number sign at the beginning of the line or comments can begin in mid-line.

- Empty lines





**Attention:** These configuration file samples illustrate the syntax of the configuration file. Do not use the sample rules on production systems. Useful rules differ considerably, depending on the workload, resources, and requirements of the system for which they are designed.

### Migrating old configuration files

With Red Hat Enterprise Linux 6.2, an enhanced version of **cpuplugd** was introduced.

This enhanced version includes extensions to the configuration file and a new sample configuration file, `/etc/sysconfig/cpuplugd`.

If a configuration file from a prior version of **cpuplugd** already exists at `/etc/sysconfig/cpuplugd`, this file is not replaced but complemented with new variables. The new sample configuration file is then copied to `/var/adm/fillup-templates/sysconfig.cpuplugd`.

The new sample file contains comments that describe the enhanced file layout. View the file to see this information. Consider merging the existing configuration file with a copy of the new sample file to obtain a configuration file with the existing rules, the new variables, and the new descriptions.

### Basic configuration file for CPU control

A configuration file for dynamically enabling or disabling CPUs has several required specifications.

The configuration file sample of [Figure 87 on page 533](#) has been reduced to the specifications that are required for dynamically enabling or disabling CPUs.

```
UPDATE="10"
CPU_MIN="2"
CPU_MAX="10"

HOTPLUG = "idle < 10.0"
HOTUNPLUG = "idle > 100"
```

*Figure 87. Simplified configuration file with CPU hotplug rules*

In the configuration file:

#### UPDATE

specifies the time interval, in seconds, at which **cpuplugd** evaluates the rules and, if a rule is met, enables or disables CPUs. This variable is also required for controlling memory (see [“Basic configuration file for memory control” on page 534](#)).

In the example, the rules are evaluated every 10 seconds.

#### CPU\_MIN

specifies the minimum number of CPUs. Even if the rule for disabling CPUs is met, **cpuplugd** does not reduce the number of CPUs to less than this number.

In the example, the number of CPUs cannot become less than 2.

#### CPU\_MAX

specifies the maximum number of CPUs. Even if the rule for enabling CPUs is met, **cpuplugd** does not increase the number of CPUs to more than this number. If 0 is specified, the maximum number of CPUs is the number of CPUs available on the system.

In the example, the number of CPUs cannot become more than 10.

#### HOTPLUG

specifies the rule for dynamically enabling CPUs. The rule resolves to a boolean true or false. Each time this rule is true, **cpuplugd** enables one CPU, unless the number of CPUs has already reached the maximum specified with `CPU_MAX`.

Setting `HOTPLUG` to 0 disables dynamically adding CPUs.

In the example, a CPU is enabled when the idle times of all active CPUs sum up to less than 10.0%. See [“Keywords for CPU hotplug rules” on page 535](#) for information about available keywords.

**HOTUNPLUG**

specifies the rule for dynamically disabling CPUs. The rule resolves to a boolean true or false. Each time this rule is true, cpuplugd disables one CPU, unless the number of CPUs has already reached the minimum specified with CPU\_MIN.

Setting HOTUNPLUG to 0 disables dynamically removing CPUs.

In the example, a CPU is disabled when the idle times of all active CPUs sum up to more than 100%. See [“Keywords for CPU hotplug rules”](#) on page 535 for information about available keywords.

If one of these variables is set more than once, only the last occurrence is used. These variables are not case sensitive.

If both the HOTPLUG and HOTUNPLUG rule are met simultaneously, HOTUNPLUG is ignored.

**Basic configuration file for memory control**

For Linux on z/VM, you can also use cpuplugd to dynamically add or take away memory. There are several required specifications for memory control.

The configuration file sample of [Figure 88 on page 534](#) was reduced to the specifications that are required for dynamic memory control.

```
UPDATE="10"
CMM_MIN="0"
CMM_MAX="131072"    # 512 MB
CMM_INC="10240"     # 40 MB

MEMPLUG = "swaprte > 250"
MEMUNPLUG = "swaprte < 10"
```

*Figure 88. Simplified configuration file with memory hotplug rules*

In the configuration file:

**UPDATE**

specifies the time interval, in seconds, at which cpuplugd evaluates the rules and, if a rule is met, adds or removes memory. This variable is also required for controlling CPUs (see [“Basic configuration file for CPU control”](#) on page 533).

In the example, the rules are evaluated every 10 seconds.

**CMM\_MIN**

specifies the minimum amount of memory, in 4 KB pages, that Linux surrenders to the CMM static page pool (see [“Cooperative memory management background”](#) on page 358). Even if the MEMPLUG rule for taking memory from the CMM static page pool and adding it to Linux is met, cpuplugd does not decrease this amount.

In the example, the amount of memory that is surrendered to the static page pool can be reduced to 0.

**CMM\_MAX**

specifies the maximum amount of memory, in 4 KB pages, that Linux surrenders to the CMM static page pool (see [“Cooperative memory management background”](#) on page 358). Even if the MEMUNPLUG rule for removing memory from Linux and adding it to the CMM static page pool is met, cpuplugd does not increase this amount.

In the example, the amount of memory that is surrendered to the static page pool cannot become more than 131072 pages of 4 KB (512 MB).

**CMM\_INC**

specifies the amount of memory, in 4 KB pages, that is removed from Linux when the MEMUNPLUG rule is met. Removing memory from Linux increases the amount that is surrendered to the CMM static page pool.

In the example, the amount of memory that is removed from Linux is 10240 pages of 4 KB (40 MB) at a time.

### **CMM\_DEC**

Optional: specifies the amount of memory, in 4 KB pages, that is added to Linux when the MEMPLUG rule is met. Adding memory to Linux decreases the amount that is surrendered to the CMM static page pool.

If this variable is omitted, the amount of memory that is specified for CMM\_INC is used.

In the example, CMM\_DEC is omitted and the amount of memory added to Linux is 10240 pages of 4 KB (40 MB) at a time, as specified with CMM\_INC.

### **MEMPLUG**

specifies the rule for dynamically adding memory to Linux. The rule resolves to a boolean true or false. Each time this rule is true, cpuplugd adds the number of pages that are specified by CMM\_DEC, unless the CMM static page pool already reached the minimum that is specified with CMM\_MIN.

Setting MEMPLUG to 0 disables dynamically adding memory to Linux.

In the example, memory is added to Linux if there are more than 250 swap operations per second. See [“Keywords for memory hotplug rules” on page 536](#) for information about available keywords.

### **MEMUNPLUG**

specifies the rule for dynamically removing memory from Linux. The rule resolves to a boolean true or false. Each time this rule is true, cpuplugd removes the number of pages that are specified by CMM\_INC, unless the CMM static page pool already reached the maximum that is specified with CMM\_MAX.

Setting MEMUNPLUG to 0 disables dynamically removing memory from Linux.

In the example, memory is removed from Linux when there are less than 10 swap operations per second. See [“Keywords for memory hotplug rules” on page 536](#) for information about available keywords.

If any of these variables are set more than once, only the last occurrence is used. These variables are not case-sensitive.

If both the MEMPLUG and MEMUNPLUG rule are met simultaneously, MEMUNPLUG is ignored.

CMM\_DEC and CMM\_INC can be set to a decimal number or to a mathematical expression that uses the same algebraic operators and variables as the MEMPLUG and MEMUNPLUG hotplug rules (see [“Keywords for memory hotplug rules” on page 536](#) and [“Writing more complex rules” on page 537](#)).

### **Predefined keywords**

There is a set of predefined keywords that you can use for CPU hotplug rules and a set of keywords that you can use for memory hotplug rules. All predefined keywords are case sensitive.

#### ***Keywords for CPU hotplug rules***

Use the predefined keywords in the CPU hotplug rules, HOTPLUG and HOTUNPLUG.

#### **loadavg**

is the current load average.

#### **onumcpus**

is the current number of online CPUs.

#### **runnable\_proc**

is the current number of runnable processes.

#### **user**

is the current CPU user percentage.

#### **nice**

is the current CPU nice percentage.

**system**

is the current CPU system percentage.

**idle**

is the current CPU idle percentage.

**iowait**

is the current CPU iowait percentage.

**irq**

is the current CPU irq percentage.

**softirq**

is the current CPU softirq percentage.

**steal**

is the current CPU steal percentage.

**guest**

is the current CPU guest percentage for a z/VM or KVM guest.

**guest\_nice**

is the current CPU guest\_nice percentage for a z/VM or KVM guest.

**cpustat.<name>**

is data from `/proc/stat` and `/proc/loadavg`. In the keyword, `<name>` can be any of the previously listed keywords, for example, `cpustat.idle`. See the `proc` man page for more details about the data that is represented by these keywords.

With this notation, the keywords resolve to raw timer ticks since system start, not to current percentages. For example, `idle` resolves to the current idle percentage and `cpustat.idle` resolves to the total timer ticks spent idle. See [“Using historical data” on page 537](#) about how to obtain average and percentage values.

`loadavg`, `onumcpus`, and `runnable_proc` are not percentages and resolve to the same values as `cpustat.loadavg`, `cpustat.onumcpus`, and `cpustat.runnable_proc`.

**cpustat.total\_ticks**

is the total number of timer ticks since system start.

**time**

is the UNIX epoch time in the format "seconds.microseconds".

Percentage values are accumulated for all online CPUs. Hence, the values for the percentages range from 0 to  $100 \times (\text{number of online CPUs})$ . To get the average percentage per CPU device, divide the accumulated value by the number of CPUs. For example, `idle / onumcpus` yields the average idle percentage per CPU.

**Keywords for memory hotplug rules**

Use the predefined keywords in the memory hotplug rules, MEMPLUG and MEMUNPLUG.

**apcr**

is the number of page cache operations, `pgpin + pgpout`, from `/proc/vmstat` in 512-byte blocks per second.

**freemem**

is the amount of free memory in MB.

**swaprte**

is the number of swap operations, `pswpin + pswpout`, from `/proc/vmstat` in 4 KB pages per second.

**meminfo.<name>**

is the value for the symbol `<name>` as shown in the output of `cat /proc/meminfo`. The values are plain numbers but refer to the same units as those used in `/proc/meminfo`.

**vmstat.<name>**

is the value for the symbol `<name>` as shown in the output of `cat /proc/vmstat`.

**Using historical data**

Historical data is available for the keyword `time` and the sets of keywords `cpustat.<name>`, `meminfo.<name>`, and `vmstat.<name>`.

See [“Keywords for CPU hotplug rules” on page 535](#) and [“Keywords for memory hotplug rules” on page 536](#) for details about these keywords.

Use the suffixes [`<n>`] to retrieve the data of `<n>` intervals in the past, where `<n>` can be in the range 0 - 100.

**Examples****cpustat.idle**

yields the current value for the counted idle ticks.

**cpustat.idle[1]**

yields the idle ticks as counted one interval ago.

**cpustat.idle[5]**

yields the idle ticks as counted five intervals ago.

**cpustat.idle - cpustat.idle[5]**

yields the idle ticks during the past five intervals.

**time - time[1]**

yields the length of an update interval in seconds.

**cpustat.total\_ticks - cpustat.total\_ticks[5]**

yields the total number of ticks during the past five intervals.

**(cpustat.idle - cpustat.idle[5]) / (cpustat.total\_ticks - cpustat.total\_ticks[5])**

yields the average ratio of idle ticks to total ticks during the past five intervals.

Multiplying this ratio with 100 yields the percentage of idle ticks during the last five intervals.

Multiplying this ratio with `100 * onumcpus` yields the accumulated percentage of idle ticks for all processors during the last five intervals.

**Writing more complex rules**

In addition to numbers and keywords, you can use mathematical and Boolean operators, and you can use user-defined variables to specify rules.

- The keywords of [“Predefined keywords” on page 535](#)
- Decimal numbers
- The mathematical operators
  - +**  
addition
  - subtraction
  - \***  
multiplication
  - /**  
division
  - <**  
less than
  - >**  
greater than
- Parentheses ( and ) to group mathematical expressions
- The Boolean operators
  - &**  
and

```

|
or
!
not

```

- User-defined variables

You can specify complex calculations as user-defined variables, which can then be used in expressions. User-defined variables are case-sensitive and must not match a pre-defined variable or keyword. In the configuration file, definitions for user-defined variables must precede their use in expressions.

Variable names consist of alphanumeric characters and the underscore (\_) character. An individual variable name must not exceed 128 characters. All user-defined variable names and values, in total, must not exceed 4096 characters.

### Examples

- `HOTPLUG = "loadavg > onumcpus + 0.75"`
- `HOTPLUG = "(loadavg > onumcpus + 0.75) & (idle < 10.0)"`
- ```
my_idle_rate = "(cpustat.idle - cpustat.idle[5]) / (cpustat.total_ticks -
cpustat.total_ticks[5])"
my_idle_percent_total = "my_idle_rate * 100 * onumcpus"
...
HOTPLUG = "(loadavg > onumcpus + 0.75) & (my_idle_percent_total < 10.0)"
```

### Sample configuration file

A typical configuration file includes multiple user-defined variables and values from `procfs`, for example, to calculate the page scan rate or the cache size.

```
# Required static variables

CPU_MIN="1"
CPU_MAX="0"
UPDATE="1"
CMM_MIN="0"
CMM_MAX="131072"    # 512 MB

# User-defined variables

pgscan_d="vmstat.pgscan_direct_dma[0] + vmstat.pgscan_direct_normal[0] +
vmstat.pgscan_direct_movable[0]"
pgscan_d1="vmstat.pgscan_direct_dma[1] + vmstat.pgscan_direct_normal[1] +
vmstat.pgscan_direct_movable[1]"
# page scan rate in pages / timer tick
pgscanrate="(pgscan_d - pgscan_d1) / (cpustat.total_ticks[0] - cpustat.total_ticks[1])"
# cache usage in kilobytes
avail_cache="meminfo.Cached - meminfo.Shmem"

user_0="(cpustat.user[0] - cpustat.user[1])"
nice_0="(cpustat.nice[0] - cpustat.nice[1])"
system_0="(cpustat.system[0] - cpustat.system[1])"
user_2="(cpustat.user[2] - cpustat.user[3])"
nice_2="(cpustat.nice[2] - cpustat.nice[3])"
system_2="(cpustat.system[2] - cpustat.system[3])"
CP_Active0="(user_0 + nice_0 + system_0) / (cpustat.total_ticks[0] - cpustat.total_ticks[1])"
CP_Active2="(user_2 + nice_2 + system_2) / (cpustat.total_ticks[2] - cpustat.total_ticks[3])"
CP_ActiveAVG="(CP_Active0+CP_Active2) / 2"

idle_0="(cpustat.idle[0] - cpustat.idle[1])"
iowait_0="(cpustat.iowait[0] - cpustat.iowait[1])"
idle_2="(cpustat.idle[2] - cpustat.idle[3])"
iowait_2="(cpustat.iowait[2] - cpustat.iowait[3])"
CP_idle0="(idle_0 + iowait_0) / (cpustat.total_ticks[0] - cpustat.total_ticks[1])"
CP_idle2="(idle_2 + iowait_2) / (cpustat.total_ticks[2] - cpustat.total_ticks[3])"
CP_idleAVG="(CP_idle0 + CP_idle2) / 2"

# More required variables

# cmm_inc: 10% of free memory, in 4K pages
CMM_INC="meminfo.MemFree / 40"
# cmm_dec: 10% of total memory, in 4K pages
CMM_DEC="meminfo.MemTotal / 40"

# Hotplug rules
HOTPLUG="((1 - CP_ActiveAVG) * onumcpus) < 0.08"
HOTUNPLUG="(CP_idleAVG * onumcpus) > 1.15"
MEMPLUG="pgscanrate > 20"
MEMUNPLUG="(meminfo.MemFree + avail_cache) > (meminfo.MemTotal / 10)"
```

**Figure 89.** Sample configuration file for Linux on z/VM with CPU and memory hotplug



**Attention:** The sample file of [Figure 89 on page 539](#) illustrates the syntax of the configuration file. Useful rules might differ considerably, depending on the workload, resources, and requirements of the system for which they are designed.

After you install cpupluggd with the s390utils RPM, a commented sample configuration file is available at /etc/cpupluggd. This file is used by the cpupluggd service.

## dasdfmt - Format a DASD

Use the **dasdfmt** command to low-level format ECKD-type direct access storage devices (DASD).

**dasdfmt** uses an ioctl call to the DASD driver to format tracks. A block size (hard sector size) can be specified. The formatting process can take quite a long time (hours for large DASD).


### Tips:

- For DASDs that have previously been formatted with **dasdfmt**, use the **dasdfmt** quick format mode.
- Use the **-p** option to monitor the progress.



**CAUTION:** As on any platform, formatting irreversibly destroys data on the target disk. Be sure not to format a disk with vital data unintentionally.

### dasdfmt syntax

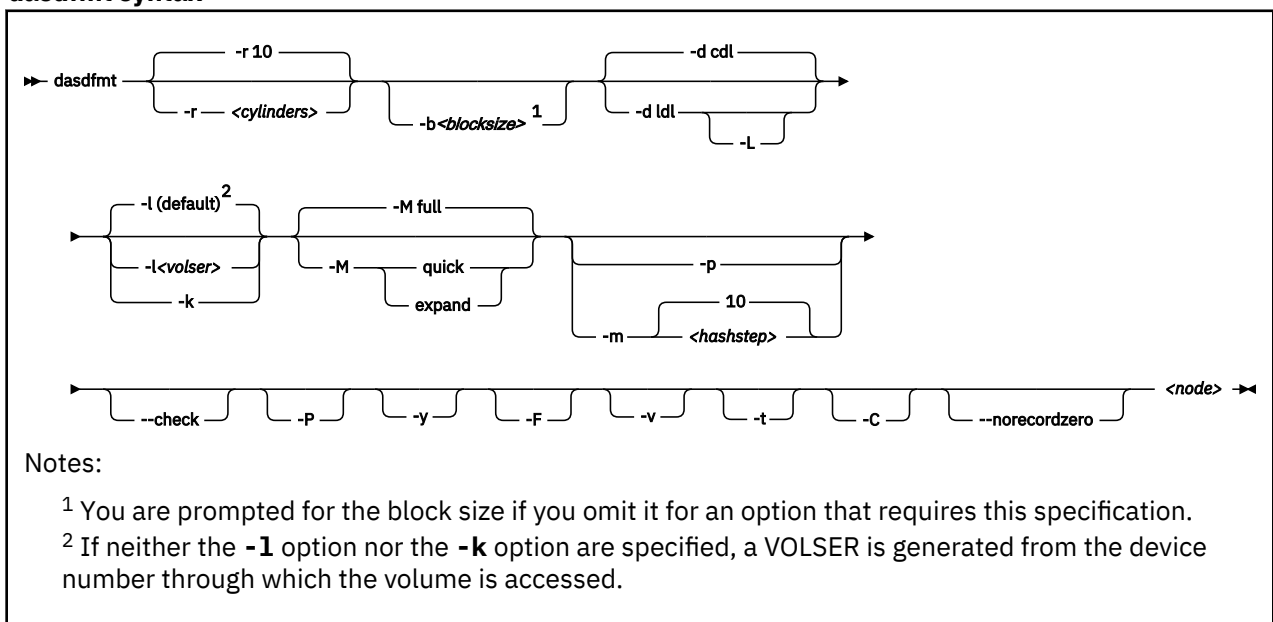

Where:

#### **-r <cylinders> or --requestsize=<cylinders>**

specifies the number of cylinders to be processed in one formatting step. The value must be an integer in the range 1 - 255. The default is 10 cylinders. This parameter exploits any available PAV devices. Ideally, the number of cylinders matches the number of associated devices, counting the base device and all alias devices.

#### **-b <block\_size> or --blocksize=<block\_size>**

specifies one of the following block sizes in bytes: 512, 1024, 2048, or 4096.

For the **quick** and **expand** modes and for the **--check** option, you can omit the block size.

Otherwise, you are prompted if you do not specify a value for the block size. You can then press Enter to accept 4096 or specify a different value.

**Tip:** Set **<block\_size>** as large as possible (ideally 4096); the net capacity of an ECKD DASD decreases for smaller block sizes. For example, a DASD formatted with a block size of 512 byte has only half of the net capacity of the same DASD formatted with a block size of 4096 byte.

#### **<node>**

specifies the device node of the device to be formatted, for example, **/dev/dasdzzz**. See [“DASD naming scheme”](#) on page 120 for more details about device nodes).



**-d <disklayout> or --disk\_layout=<disklayout>**

formats the device with the compatible disk layout (cd1) or the Linux disk layout (ld1). If the parameter is not specified, the default (cd1) is used.

**-L or --no\_label**

valid for -d ld1 only, where it suppresses the default LNX1 label.

**-l <volser> or --label=<volser>**

specifies the volume serial number (see [VOLSER](#)) to be written to the disk. If the VOLSER contains special characters, it must be enclosed in single quotation marks. In addition, any '\$' character in the VOLSER must be preceded by a backslash ('\').

**-k or --keep\_volser**

keeps the volume serial number when writing the volume label (see [VOLSER](#)). Keeping the volume serial number is useful, for example, if the volume serial number was written with a z/VM tool and should not be overwritten.

**-M or --mode=<mode>**

specifies the mode to be used for formatting the device. Valid modes are:

**full**

Format the entire disk with the specified block size. This is the default mode.

**quick**

formats the first two tracks and writes label and partition information. Only use this option if you are sure that the target DASD already contains a regular format with the specified block size.

**expand**

format all unformatted tracks at the end of the target DASD. This mode assumes that tracks at the beginning of the DASD volume have already been correctly formatted, while a consecutive set of tracks at the end are unformatted. You can use this mode to make added space available for Linux use after dynamically increasing the size of a DASD volume.

For the **quick** and **expand** modes, omit the block size specification (**-b** option) to use the existing block size. If you specify a block size, **dasdfmt** checks that the specification matches the existing block size before formatting.

**-p or --progressbar**

displays a progress bar. Do not use this option if you are using a line-mode terminal console driver. For example, if you are using a 3215 terminal device driver or a line-mode hardware console device driver.

**-P or --percentage**

displays one line for each formatted cylinder. The line shows the number of the cylinder and percentage of formatting process. Intended for use by higher level interfaces.

**-m <hashstep> or --hashmarks=<hashstep>**

displays a number sign (#) after every <hashstep> cylinders are formatted. <hashstep> must be in the range 1 - 1000. The default is 10.

The **-m** option is useful where the console device driver is not suitable for the progress bar (**-p** option).

**--check**

performs a complete format check on a DASD volume.

Omit the block size specification (**-b** option) to check for a consistent format for any valid block size. Specify a block size to confirm that the DASD has been formatted consistently with that particular block size.

**-y**

starts formatting immediately without prompting for confirmation.

**-F or --force**

formats the device without checking whether it is mounted.

**-v**

displays extra information messages (verbose).

**-t or --test**

runs the command in test mode. Analyzes parameters and displays what would happen, but does not modify the disk.

**-C or --check\_host\_count**

checks the host-access open count to ensure that the device is not online to another operating system instance. Use this option to ensure that the operation is safe, and cancel it if other operating system instances are accessing the volume.

**--norecordzero**

prevents a format write of record zero. This option is intended for experts: Subsystems in DASD drivers are by default granted permission to modify or add a standard record zero to each track when needed. Before you revoke the permission with this option, you must ensure that the device contains standard record zeros on all tracks.

**-V or --version**

displays the version number of **dasdfmt** and exits.

**-h or --help**

displays an overview of the syntax. Any other parameters are ignored. To view the man page, enter **man dasdfmt**.

**Examples**

- To format a 100 cylinder z/VM minidisk with the standard Linux disk layout and a 4 KB blocksize with device node `/dev/dasdc`:

```
# dasdfmt -b 4096 -d ldl -p /dev/dasdc
Drive Geometry: 100 Cylinders * 15 Heads = 1500 Tracks

I am going to format the device /dev/dasdc in the following way:
  Device number of device : 0x192
  Labelling device       : yes
  Disk label             : LNX1
  Disk identifier        : 0X0192
  Extent start (trk no)  : 0
  Extent end (trk no)    : 1499
  Compatible Disk Layout : no
  Blocksize              : 4096
  Mode                   : Full

--->> ATTENTION! <<---
All data of that device will be lost.
Type yes to continue, no will leave the disk untouched: yes
Formatting the device. This may take a while (get yourself a coffee).

cyl   100 of   100 |#####|100% [1s]

Finished formatting the device.
Rereading the partition table... ok
#
```

- To format the same disk with the compatible disk layout (accepting the default value of the **-d** option).

```
# dasdfmt -b 4096 -p /dev/dasdc
Drive Geometry: 100 Cylinders * 15 Heads = 1500 Tracks

I am going to format the device /dev/dasdc in the following way:
  Device number of device : 0x192
  Labelling device       : yes
  Disk label             : VOL1
  Disk identifier        : 0X0192
  Extent start (trk no)  : 0
  Extent end (trk no)    : 1499
  Compatible Disk Layout : yes
  Blocksize              : 4096

--->> ATTENTION! <---
All data of that device will be lost.
Type yes to continue, no will leave the disk untouched: yes
Formatting the device. This may take a while (get yourself a coffee).

cyl   100 of   100 |#####|
#####
#####| 100%

Finished formatting the device.
Rereading the partition table... ok
#
```

- To format using the **-P** option:

```
# dasdfmt -P /dev/dasde

cyl    1 of   500 |    0%
cyl    2 of   500 |    0%
cyl    3 of   500 |    0%
cyl    4 of   500 |    0%
cyl    5 of   500 |    1%

...
cyl   496 of   500 |   99%
cyl   497 of   500 |   99%
cyl   498 of   500 |   99%
cyl   499 of   500 |   99%
cyl   500 of   500 |  100%
```

- To make best use of PAV when formatting a DASD that has one base device and four alias devices, specify five cylinders:

```
# dasdfmt /dev/dasdd -y -b 4096 -d cdl -r 5
Finished formatting the device.
Rereading the partition table... ok
```

- To format a previously formatted DASD in quick format mode.

```
# dasdfmt -b 4096 -p --mode=quick /dev/dasdf
```

- To format tracks that have been added at the end of an already formatted DASD.

```
# dasdfmt -b 4096 -p --mode=expand /dev/dasdg
```

- To check whether a DASD has been correctly formatted with a block size of 4096 bytes.

```
# dasdfmt -b 4096 -p --check /dev/dasdg
Checking format of the entire disk...
cyl   1113 of   1113 |#####|100% [19s]
Done. Disk is fine.
```

- To ensure that the DASD is not online to an operating system instance in a different LPAR when you start formatting the DASD:

```
# dasdfmt -b 4096 -p -C /dev/dasdh
```

## **dasdfmt**

**dasdfmt** always checks the host-access open count. If the count indicates access by another operating system instance, the response depends on the **-C** option. With this option, the command is canceled. Otherwise, a warning is displayed before you are prompted to confirm that you want to proceed.


## dasdstat - Display DASD performance statistics

Use the **dasdstat** command to display DASD performance statistics, including statistics about Parallel Access Volume (PAV) and High Performance Ficon.

This command includes and extends the performance statistics that is also available through the **tunedasd** command.

**Before you begin:** debugfs must be mounted, see “[debugfs](#)” on page xi.

### dasdstat syntax

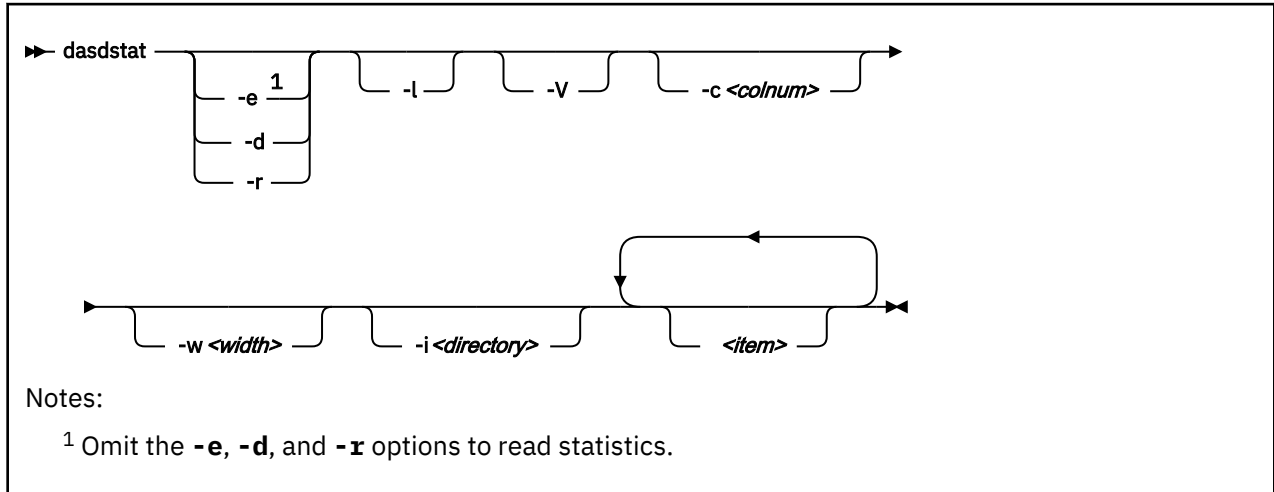

Where:

**-e or --enable**

starts statistics data collection.

**-d or --disable**

stops statistics data collection.

**-r or --reset**

sets the statistics counters to zero.

**-l or --long**

displays more detailed statistics information, for example, differentiates between read and write requests.

**-V or --verbose**

displays more verbose command information.

**-c <colnum> or --columns <colnum>**

formats the command output in a table with the specified number of columns. The default is 16. Each row gets wrapped after the specified number of lines.

**-w <width> or --column-width <width>**

sets the minimum width, in characters, of a column in the output table.

**-i <directory> or --directory <directory>**

specifies the directory that contains the statistics. The default is *<mountpoint>/dasd*, where *<mountpoint>* is the mount point of debugfs. You need to specify this parameter if the **dasdstat** command cannot determine this mount point or if the statistics are copied to another location.

**<item>**

limits the command to the specified items. For *<item>* you can specify:

- **global** for summary statistics for all available DASDs.
- The block device name by which a DASD is known to the DASD device driver.

- The bus ID by which a DASD is known as a CCW device. DASDs that are set up for PAV or HyperPAV have a CCW base device and, at any one time, can have one or more CCW alias devices for the same block device. Alias devices are not permanently associated with the same block device. Statistics that are based on bus ID, therefore, show additional detail for PAV and HyperPAV setups.

If you do not specify any individual item, the command applies to all DASD block devices, CCW devices, and to the summary.

#### **-v or --version**

displays the version number of **dasdstat**, then exits.

#### **-h or --help**

displays help information for the command.

### **Examples**

- This command starts data collection for dasda, 0.0.b301, and for a summary of all available DASDs.

```
# dasdstat -e dasda 0.0.b301 0.0.b302 global
```

- This command resets the statistics counters for dasda.

```
# dasdstat -r dasda
```

- This command reads the summary statistics:

```
statistics data for statistic: global
start time of data collection: Wed Aug 17 09:52:47 CEST 2011

3508 dasd I/O requests
with 67616 sectors(512B each)
0 requests used a PAV alias device
3458 requests used HPF
Histogram of sizes (512B secs)
  <4   8  16  32  64 128 256 512 1k 2k 4k 8k 16k 32k 64k 128k
256 512 1M 2M 4M 8M 16M 32M 64M 128M 256M 512M 1G 2G 4G >4G
0 0 2456 603 304 107 18 9 3 8 0 0 0 0 0 0
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Histogram of I/O times (microseconds)
0 0 0 0 0 0 100 1738 813 725 30 39 47 15 1 0
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Histogram of I/O time till ssch
0 0 901 558 765 25 28 288 748 161 17 16 1 0 0 0
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Histogram of I/O time between ssch and irq
0 0 0 0 0 0 0 316 2798 283 13 19 22 41 15 1 0
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Histogram of I/O time between irq and end
0 3023 460 8 4 9 4 0 0 0 0 0 0 0 0 0
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
# of req in chanq at enqueueing (0..31)
0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31
0 2295 319 247 647 0 0 0 0 0 0 0 0 0 0 0
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
```

For details about the data items, see [“Interpreting the data rows” on page 137](#).

## dasdview - Display DASD structure

Use the **dasdview** command to display DASD information.

**dasdview** displays:

- The volume label.
- VTOC details (general information, and the DSCBs of format 1, format 3, format 4, format 5, format 7, format 8, and format 9).
- The content of the DASD, by specifying:
  - Starting point
  - Size


You can display these values in hexadecimal, EBCDIC, and ASCII format.

- Whether the data on the DASD is encrypted.
- Whether the disk is a solid-state device.

If you specify a start point and size, you can also display the contents of a disk dump.

For more information about partitioning, see [“The IBM label partitioning scheme”](#) on page 116.

### dasdview syntax

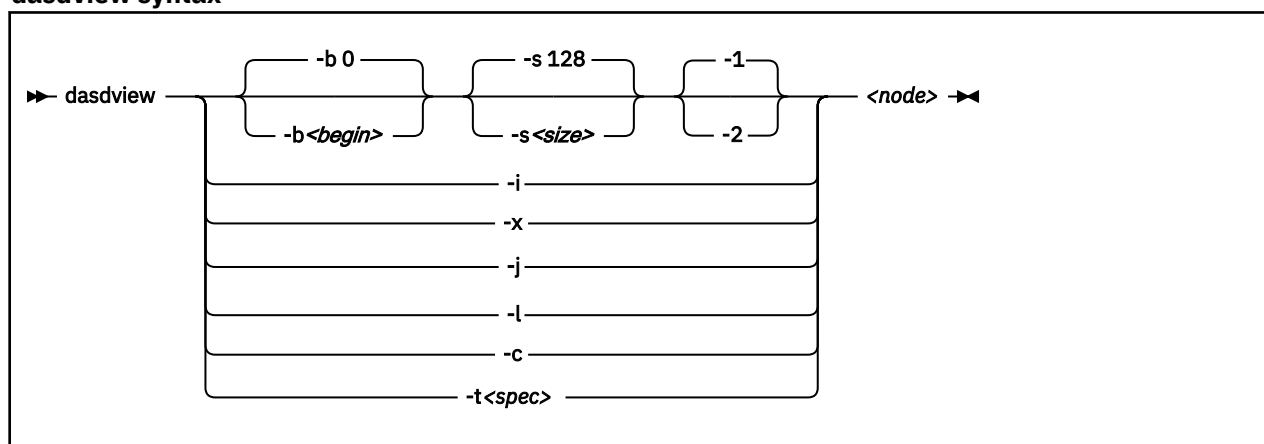

Where:

#### **-b <begin> or --begin=<begin>**

displays disk content on the console, starting from *<begin>*. The contents of the disk are displayed as hexadecimal numbers, ASCII text, and EBCDIC text. If *<size>* is not specified, **dasdview** takes the default size (128 bytes). You can specify the variable *<begin>* as:

```
<begin>[k|m|b|t|c]
```

If the disk is in raw-track access mode, you can specify only track (t) or cylinder (c) entities.

The default for *<begin>* is 0.

**dasdview** displays a disk dump on the console with the DASD driver. The DASD driver might suppress parts of the disk, or add information that is not relevant. This discrepancy might occur, for example, when **dasdview** displays the first two tracks of a disk that was formatted with compatible disk layout option (-d cd1). In this situation, the DASD driver pads shorter blocks with zeros to maintain a constant blocksize. All Linux applications (including **dasdview**) process according to this rule.

Here are some examples of how this option can be used:

```
-b 32    (start printing at Byte 32)
-b 32k   (start printing at kByte 32)
-b 32m   (start printing at MByte 32)
-b 32b   (start printing at block 32)
-b 32t   (start printing at track 32)
-b 32c   (start printing at cylinder 32)
```

**-s <size> or --size=<size>**

displays a disk dump on the console, starting at *<begin>*, and continuing for *size=<size>*. The contents of the dump are displayed as hexadecimal numbers, ASCII text, and EBCDIC text. If a start value, *<begin>*, is not specified, **dasdview** takes the default. You can specify the variable *<size>* as:

```
size[k|m|b|t|c]
```

If the disk is in raw-track access mode, you can specify only track (t) or cylinder (c) entities.

The default for *<size>* is 128 bytes.

Here are some examples of how this option can be used:

```
-s 16    (use a 16 Byte size)
-s 16k   (use a 16 kByte size)
-s 16m   (use a 16 MByte size)
-s 16b   (use a 16 block size)
-s 16t   (use a 16 track size)
-s 16c   (use a 16 cylinder size)
```

**-1**

displays the disk dump with format 1 (as 16 Bytes per line in hexadecimal, ASCII and EBCDIC). A line number is not displayed. You can use option **-1** only together with **-b** or **-s**.

Option **-1** is the default.

**-2**

displays the disk dump with format 2 (as 8 Bytes per line in hexadecimal, ASCII and EBCDIC). A decimal and hexadecimal byte count are also displayed. You can use option **-2** only together with **-b** or **-s**.

**-i or --info**

displays basic information such as device node, device bus-ID, device type, or geometry data.

**-x or --extended**

displays the information that is obtained by using **-i** option, but also open count, subchannel identifier, and so on.

**-j or --volser**

prints volume serial number (volume identifier).

**-l or --label**

displays the volume label.

**-c or --characteristics**

displays model-dependent device characteristics, for example disk encryption status or whether the disk is a solid-state device.

**-t <spec> or --vtoc=<spec>**

displays the VTOC's table-of-contents, or a single VTOC entry, on the console. The variable *<spec>* can take these values:

**info**

displays overview information about the VTOC, such as a list of the data set names and their sizes.

**f1**

displays the contents of all *format 1* data set control blocks (DSCBs).

**f3**

displays the contents of all (z/OS-specific) *format 3* DSCBs.

**f4**

displays the contents of all *format 4* DSCBs.



- f5**  
displays the contents of all *format 5* DSCBs.
- f7**  
displays the contents of all *format 7* DSCBs.
- f8**  
displays the contents of all *format 8* DSCBs.
- f9**  
displays the contents of all *format 9* DSCBs.
- all**  
displays the contents of *all* DSCBs.

**<node>**

specifies the device node of the device for which you want to display information, for example, `/dev/dasdzzz`. See [“DASD naming scheme” on page 120](#) for more details about device nodes).

**-h or --help**

displays short usage text on console. To view the man page, enter **man dasdview**.

**-v or --version**

displays version number on console, and exit.

**Examples**

- To display basic information about a DASD:

```
# dasdview -i /dev/dasdzzz
```

This example displays:

```
--- general DASD information -----
device node      : /dev/dasdzzz
busid            : 0.0.0193
type             : ECKD
device type      : hex 3390          dec 13200

--- DASD geometry -----
number of cylinders : hex 64          dec 100
tracks per cylinder : hex f           dec 15
blocks per track    : hex c           dec 12
blocksize          : hex 1000         dec 4096
#
```

- To display device characteristics:

```
# dasdview -c /dev/dasda
```

This example displays:

```
encrypted disk    : no
solid state device : no
```

- To include extended information:

```
# dasdview -x /dev/dasdzzz
```

This example displays:

```

--- general DASD information -----
device node      : /dev/dasdzzz
busid            : 0.0.0193
type            : ECKD
device type      : hex 3390          dec 13200

--- DASD geometry -----
number of cylinders : hex 64          dec 100
tracks per cylinder : hex f           dec 15
blocks per track    : hex c           dec 12
blocksize          : hex 1000         dec 4096

--- extended DASD information -----
real device number : hex 452bc08      dec 72530952
subchannel identifier : hex e         dec 14
CU type (SenseID)   : hex 3990        dec 14736
CU model (SenseID)   : hex e9         dec 233
device type (SenseID) : hex 3390      dec 13200
device model (SenseID) : hex a         dec 10
open count          : hex 1           dec 1
req_queue_len       : hex 0           dec 0
chanq_len           : hex 0           dec 0
status              : hex 5           dec 5
label_block         : hex 2           dec 2
FBA_layout          : hex 0           dec 0
characteristics_size : hex 40          dec 64
confdata_size       : hex 100         dec 256

characteristics      : 3990e933 900a5f80 dff72024 0064000f
                     : e000e5a2 05940222 13090674 00000000
                     : 00000000 00000000 24241502 dfee0001
                     : 0677080f 007f4a00 1b350000 00000000

configuration_data   : dc010100 4040f2f1 f0f54040 40c9c2d4
                     : f1f3f0f0 f0f0f0f0 f0c6c3f1 f1f30509
                     : dc000000 4040f2f1 f0f54040 40c9c2d4
                     : f1f3f0f0 f0f0f0f0 f0c6c3f1 f1f30500
                     : d4020000 4040f2f1 f0f5c5f2 f0c9c2d4
                     : f1f3f0f0 f0f0f0f0 f0c6c3f1 f1f3050a
                     : f0000001 4040f2f1 f0f54040 40c9c2d4
                     : f1f3f0f0 f0f0f0f0 f0c6c3f1 f1f30500
                     : 00000000 00000000 00000000 00000000
                     : 00000000 00000000 00000000 00000000
                     : 00000000 00000000 00000000 00000000
                     : 00000000 00000000 00000000 00000000
                     : 00000000 00000000 00000000 00000000
                     : 00000000 00000000 00000000 00000000
                     : 800000a1 00001e00 51400009 0909a188
                     : 0140c009 7cb7efb7 00000000 00000800

#

```

- To display volume label information:

```
# dasdview -l /dev/dasdzzz
```

This displays:

```

--- volume label -----
volume label key      : ascii  'äöñ'
                      : ebcdic 'VOL1'
                      : hex    e5d6d3f1

volume label identifier : ascii  'äöñ'
                      : ebcdic 'VOL1'
                      : hex    e5d6d3f1

volume identifier     : ascii  'ðçðñùó'
                      : ebcdic '0X0193'
                      : hex    f0e7f0f1f9f3

security byte         : hex    40

VTOC pointer          : hex    0000000101
                      (cyl 0, trk 1, blk 1)

reserved              : ascii  '@@@@'
                      : ebcdic '    '
                      : hex    4040404040

CI size for FBA        : ascii  '@@@@'
                      : ebcdic '    '
                      : hex    40404040

blocks per CI (FBA)    : ascii  '@@@@'
                      : ebcdic '    '
                      : hex    40404040

labels per CI (FBA)    : ascii  '@@@@'
                      : ebcdic '    '
                      : hex    40404040

reserved              : ascii  '@@@@'
                      : ebcdic '    '
                      : hex    40404040

owner code for VTOC    : ascii  '@@@@@@@@@@@@@@@@'
                      : ebcdic '    '
                      : hex    40404040 40404040 40404040 4040

reserved              : ascii  '@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@'
                      : ebcdic '    '
                      : hex    40404040 40404040 40404040 40404040
                      : hex    40404040 40404040 40404040 40

#

```

- To display partition information:

```
# dasdview -t info /dev/dasdzzz
```

This example displays:

```

--- VTOC info -----
The VTOC contains:
 3 format 1 label(s)
 1 format 4 label(s)
 1 format 5 label(s)
 0 format 7 label(s)
 0 format 8 label(s)
 0 format 9 label(s)
Other S/390 and zSeries operating systems would see the following data sets:
+-----+-----+-----+
| data set                               | start   | end     |
+-----+-----+-----+
LINUX.V0X0193.PART0001.NATIVE		
data set serial number : '0X0193'		
system code           : 'IBM LINUX'		
creation date         : year 2001, day 317		
+-----+-----+-----+		
LINUX.V0X0193.PART0002.NATIVE		
data set serial number : '0X0193'		
system code           : 'IBM LINUX'		
creation date         : year 2001, day 317		
+-----+-----+-----+		
LINUX.V0X0193.PART0003.NATIVE		
data set serial number : '0X0193'		
system code           : 'IBM LINUX'		
creation date         : year 2001, day 317		
+-----+-----+-----+
#

```

- To display VTOC information:

```
# dasdview -t f4 /dev/dasdzzz
```

This example displays:

```

--- VTOC format 4 label -----
DS4KEYCD   : 04...
DS4IDFMT   : dec 244, hex f4
DS4HPCHR   : 0000000105 (cyl 0, trk 1, blk 5)
DS4DSREC   : dec 7, hex 0007
DS4HCCHH   : 00000000 (cyl 0, trk 0)
DS4NOATK   : dec 0, hex 0000
DS4VT0CI   : dec 0, hex 00
DS4NOEXT   : dec 1, hex 01
DS4SMSFG   : dec 0, hex 00
DS4DEVAC   : dec 0, hex 00
DS4DSCYL   : dec 100, hex 0064
DS4DSTRK   : dec 15, hex 000f
DS4DEVTK   : dec 58786, hex e5a2
DS4DEVI    : dec 0, hex 00
DS4DEVL    : dec 0, hex 00
DS4DEVK    : dec 0, hex 00
DS4DEVFG   : dec 48, hex 30
DS4DEVTL   : dec 0, hex 0000
DS4DEVDT   : dec 12, hex 0c
DS4DEVDB   : dec 0, hex 00
DS4AMTIM   : hex 0000000000000000
DS4AMCAT   : hex 000000
DS4R2TIM   : hex 0000000000000000
res1       : hex 0000000000
DS4F6PTR   : hex 0000000000
DS4VT0CE   : hex 01000000000100000001
              typeind   : dec 1, hex 01
              seqno     : dec 0, hex 00
              llimit    : hex 00000001 (cyl 0, trk 1)
              ulimit    : hex 00000001 (cyl 0, trk 1)
res2       : hex 000000000000000000000000
DS4EFLVL   : dec 0, hex 00
DS4EFPTR   : hex 0000000000 (cyl 0, trk 0, blk 0)
res3       : hex 000000000000000000000000
#

```

- To print the contents of a disk to the console starting at block 2 (volume label):

```
# dasdview -b 2b -s 128 /dev/dasdzzz
```

This example displays:

| HEXADECIMAL |          |          |          | EBCDIC           | ASCII            |
|-------------|----------|----------|----------|------------------|------------------|
| 01....04    | 05....08 | 09....12 | 13....16 | 1.....16         | 1.....16         |
| E5D6D3F1    | E5D6D3F1 | F0E7F0F1 | F9F34000 | VOL1VOL10X0193?  | ?????????????@.  |
| 00000101    | 40404040 | 40404040 | 40404040 | .....            | .....            |
| 40404040    | 40404040 | 40404040 | 40404040 | ???????????????? | @@@@@@@@@@@@@@@@ |
| 40404040    | 40404040 | 40404040 | 40404040 | ???????????????? | @@@@@@@@@@@@@@@@ |
| 40404040    | 40404040 | 40404040 | 40404040 | ???????????????? | @@@@@@@@@@@@@@@@ |
| 40404040    | 88001000 | 10000000 | 00808000 | ?????h.....      | @@@?.....        |
| 00000000    | 00000000 | 00010000 | 00000200 | .....            | .....            |
| 21000500    | 00000000 | 00000000 | 00000000 | ?.....           | !.....           |

#

- To display the contents of a disk on the console starting at block 14 (first FMT1 DSCB) with format 2:

```
# dasdview -b 14b -s 128 -2 /dev/dasdzzz
```

This example displays:

| BYTE<br>DECIMAL |  | BYTE<br>HEXADECIMAL |  | HEXADECIMAL<br>1 2 3 4    5 6 7 8 |  |  |  |          |  |  |  | EBCDIC<br>12345678 |  |  |  |  |  |  |  | ASCII<br>12345678 |  |  |  |  |  |  |  |
|-----------------|--|---------------------|--|-----------------------------------|--|--|--|----------|--|--|--|--------------------|--|--|--|--|--|--|--|-------------------|--|--|--|--|--|--|--|
| 57344           |  | E000                |  | D3C9D5E4                          |  |  |  | E74BE5F0 |  |  |  | LINUX.V0           |  |  |  |  |  |  |  | ?????K??          |  |  |  |  |  |  |  |
| 57352           |  | E008                |  | E7F0F1F9                          |  |  |  | F34BD7C1 |  |  |  | X0193.PA           |  |  |  |  |  |  |  | ?????K??          |  |  |  |  |  |  |  |
| 57360           |  | E010                |  | D9E3F0F0                          |  |  |  | F0F14BD5 |  |  |  | RT0001.N           |  |  |  |  |  |  |  | ?????K??          |  |  |  |  |  |  |  |
| 57368           |  | E018                |  | C1E3C9E5                          |  |  |  | C5404040 |  |  |  | ATIVE???           |  |  |  |  |  |  |  | ?????@??          |  |  |  |  |  |  |  |
| 57376           |  | E020                |  | 40404040                          |  |  |  | 40404040 |  |  |  | ????????           |  |  |  |  |  |  |  | @@@@@@@@          |  |  |  |  |  |  |  |
| 57384           |  | E028                |  | 40404040                          |  |  |  | F1F0E7F0 |  |  |  | ?????10X0          |  |  |  |  |  |  |  | @@@@????          |  |  |  |  |  |  |  |
| 57392           |  | E030                |  | F1F9F300                          |  |  |  | 0165013D |  |  |  | 193.????           |  |  |  |  |  |  |  | ????.?e=?         |  |  |  |  |  |  |  |
| 57400           |  | E038                |  | 63016D01                          |  |  |  | 0000C9C2 |  |  |  | ??_?.IB            |  |  |  |  |  |  |  | c?m?..??          |  |  |  |  |  |  |  |
| 57408           |  | E040                |  | D440D3C9                          |  |  |  | D5E4E740 |  |  |  | M?LINUX?           |  |  |  |  |  |  |  | ?@?????@          |  |  |  |  |  |  |  |
| 57416           |  | E048                |  | 40404065                          |  |  |  | 013D0000 |  |  |  | ???????..          |  |  |  |  |  |  |  | @@e?=-..          |  |  |  |  |  |  |  |
| 57424           |  | E050                |  | 00000000                          |  |  |  | 88001000 |  |  |  | ....h.?            |  |  |  |  |  |  |  | ....?..?          |  |  |  |  |  |  |  |
| 57432           |  | E058                |  | 10000000                          |  |  |  | 00808000 |  |  |  | ?....??.           |  |  |  |  |  |  |  | ?....??.          |  |  |  |  |  |  |  |
| 57440           |  | E060                |  | 00000000                          |  |  |  | 00000000 |  |  |  | .....              |  |  |  |  |  |  |  | .....             |  |  |  |  |  |  |  |
| 57448           |  | E068                |  | 00010000                          |  |  |  | 00000200 |  |  |  | .?....?            |  |  |  |  |  |  |  | .?....?           |  |  |  |  |  |  |  |
| 57456           |  | E070                |  | 21000500                          |  |  |  | 00000000 |  |  |  | ?.?.....           |  |  |  |  |  |  |  | !.?.....          |  |  |  |  |  |  |  |
| 57464           |  | E078                |  | 00000000                          |  |  |  | 00000000 |  |  |  | .....              |  |  |  |  |  |  |  | .....             |  |  |  |  |  |  |  |

#

- To see what is at block 1234 (in this example there is nothing there):

```
# dasdview -b 1234b -s 128 /dev/dasdzzz
```

This example displays:

| HEXADECIMAL |          |          |          | EBCDIC   | ASCII    |
|-------------|----------|----------|----------|----------|----------|
| 01....04    | 05....08 | 09....12 | 13....16 | 1.....16 | 1.....16 |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |
| 00000000    | 00000000 | 00000000 | 00000000 | .....    | .....    |

#

- To try byte 0 instead:

```
# dasdview -b 0 -s 64 /dev/dasdzzz
```

This example displays:

| HEXADECIMAL                         |          |          |          | EBCDIC       | ASCII        |
|-------------------------------------|----------|----------|----------|--------------|--------------|
| 01....04 05....08 09....12 13....16 |          |          |          | 1.....16     | 1.....16     |
| C9D7D3F1                            | 000A0000 | 0000000F | 03000000 | IPL1.....    | ???.         |
| 00000001                            | 00000000 | 00000000 | 40404040 | .....        | .....        |
| 40404040                            | 40404040 | 40404040 | 40404040 | ???????????? | @@@@@@@@@@@@ |
| 40404040                            | 40404040 | 40404040 | 40404040 | ???????????? | @@@@@@@@@@@@ |

- To display the contents of a disk on the console starting at cylinder 2 and printing one track of data:

```
# dasdview -b 2c -s 1t /dev/dasdk
```

This example displays:

| HEXADECIMAL                         |          |          |          | EBCDIC           | ASCII             |
|-------------------------------------|----------|----------|----------|------------------|-------------------|
| 01....04 05....08 09....12 13....16 |          |          |          | 1.....16         | 1.....16          |
| 52B7DBEE                            | D6B9530B | 0179F420 | CB6EA95E | ???0????4??>z;   | R????S??y???n?^   |
| EF49C03C                            | 513542E7 | D8F17D9D | 06DC44F7 | ??{????XQ1'????7 | ?I?<Q5B????}???D? |
| ...                                 |          |          |          |                  |                   |
| 92963D5B                            | 0200B0FA | 53745C12 | C3B45125 | ko?\$?.....      | ??=[?.....        |
| 0D6040C2                            | F933381E | 7A4C4797 | F40FEDAB | ?-?B9???:<?p4??? | ??@??38?zLG?????  |
| ...                                 |          |          |          |                  |                   |

- To display the full record information of the same disk when it in raw-track access mode:

```
# dasdview -b 2c -s 1t /dev/dasdk
```

This example displays:

```

cylinder 2, head 0, record 0
+-----+
| count area:                                     |
|   hex: 0002000000000008                       |
|   cylinder: 2                                   |
|   head: 0                                       |
|   record: 0                                    |
|   key length: 0                               |
|   data length: 8                              |
+-----+
| key area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+
| data area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+
| 00000000 00000000 | ..... | ..... |
+-----+

cylinder 2, head 0, record 1
+-----+
| count area:                                     |
|   hex: 0002000001000200                       |
|   cylinder: 2                                   |
|   head: 0                                       |
|   record: 1                                    |
|   key length: 0                               |
|   data length: 512                             |
+-----+
| key area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+
| data area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+
| 52B7DBEE D6B9530B 0179F420 CB6EA95E | ???0????4??>z; | R????S?y???n?^ |
| EF49C03C 513542E7 D8F17D9D 06DC44F7 | ??{????XQ1'????? | ?I?<Q5B?????D? |
| ...   |
+-----+

cylinder 2, head 0, record 2
+-----+
| count area:                                     |
|   hex: 0002000002000200                       |
|   cylinder: 2                                   |
|   head: 0                                       |
|   record: 2                                    |
|   key length: 0                               |
|   data length: 512                             |
+-----+
| key area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+
| data area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+
| 92963D5B 0200B0FA 53745C12 C3B45125 | ko?${?^????*?C??? | ??=[?.??St\???Q% |
| 0D6040C2 F933381E 7A4C4797 F40FEDAB | ?-?B9????:<?p4??? | ??@??38?zLG????? |
| ...   |
+-----+

```

- To display the contents of a disk, which is in raw-access mode, printing one track of data from the start of the disk:

```
# dasdview -s 1t /dev/dasdk
```

This example displays:

```
cylinder 0, head 0, record 0
+-----+
| count area:                                     |
|   hex: 000000000000000008                     |
|   cylinder: 0                                  |
|   head: 0                                      |
|   record: 0                                    |
|   key length: 0                               |
|   data length: 8                             |
+-----+
| key area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+-----+-----+
| data area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+-----+-----+
| 00000000 00000000 | ..... | ..... |
+-----+-----+-----+

cylinder 0, head 0, record 1
+-----+
| count area:                                     |
|   hex: 0000000001040018                     |
|   cylinder: 0                                  |
|   head: 0                                      |
|   record: 1                                    |
|   key length: 4                               |
|   data length: 24                             |
+-----+
| key area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+-----+-----+
| C9D7D3F1 | IPL1..... | ????. |
+-----+-----+-----+
| data area:                                       |
| HEXADECIMAL                                EBCDIC ASCII |
| 01....04 05....08 09....12 13....16 | 1.....16 | 1.....16 |
+-----+-----+-----+
| 000A0000 0000000F 03000000 00000001 | .?.....??.....? | .?.....??.....? |
| 00000000 00000000 | ..... | ..... |
+-----+-----+-----+
...

```



## fdasd – Partition a DASD

Use the **fdasd** command to manage partitions on ECKD-type DASD that were formatted with the compatible disk layout.

See [“dasdfmt - Format a DASD” on page 540](#) for information about formatting a DASD. With **fdasd** you can create, change, and delete partitions, and also change the volume serial number.

**fdasd** checks that the volume has a valid volume label and VTOC. If either is missing or incorrect, **fdasd** re-creates it. See [“IBM Z compatible disk layout” on page 117](#) for details about the volume label and VTOC.

Calling **fdasd** with a node, but without options, enters interactive mode. In interactive mode, you are given a menu through which you can display DASD information, add or remove partitions, or change the volume identifier. Your changes are not written to disk until you type the **write** option on the menu. You can quit without altering the disk at any time before this.

For more information about partitions, see [“The IBM label partitioning scheme” on page 116](#).


### Before you begin:

- To partition a SCSI disk, use **fdisk** rather than **fdasd**.
- The disk must be formatted with **dasdfmt**, using the compatible disk layout.



**Attention:** Careless use of **fdasd** can result in loss of data.

### fdasd syntax

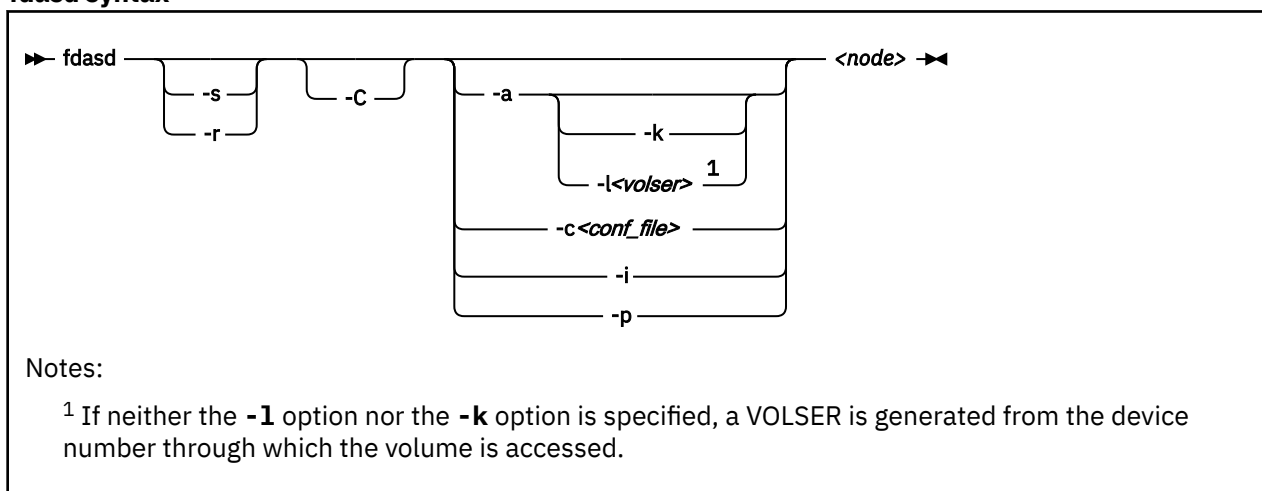

Where:

#### **-h or --help**

displays help on command line arguments.

#### **-v or --version**

displays the version of **fdasd**.

#### **-s or --silent**

suppresses messages.

#### **-r or --verbose**

displays additional messages that are normally suppressed.

#### **-a or --auto**

auto-creates one partition using the whole disk in non-interactive mode.

**-k or --keep\_volser**

keeps the volume serial number when writing the volume label (see [VOLSER](#)). Keeping the serial number is useful, for example, if the volume serial number was written with a z/VM tool and should not be overwritten.

**-l <volser> or --label <volser>**

specifies the volume serial number (see [VOLSER](#)).

A volume serial consists of one through six alphanumeric characters or the following special characters:

\$ # @ %

All other characters are ignored. Avoid using special characters in the volume serial. Special characters can cause problems when accessing a disk by VOLSER. If you must use special characters, enclose the VOLSER in single quotation marks. In addition, any '\$' character in the VOLSER must be preceded by a backslash ('\').

For example, specify:

```
-l 'a@b\ $c#'
```

to get:

```
A@B$C#
```

VOLSER is interpreted as an ASCII string and is automatically converted to uppercase, padded with blanks and finally converted to EBCDIC before it is written to disk.

Do not use the following reserved volume serials:

- SCRTCH
- PRIVAT
- MIGRAT
- Lnnnnn (L followed by a five-digit number)

These volume serials are used as keywords by other operating systems (z/OS).

Omitting this parameter causes **fdasd** to prompt for it, if it is needed.

**-c <conf\_file> or --config <conf\_file>**

creates several partitions in non-interactive mode, according to specifications in the plain-text configuration file <conf\_file>.

For each partition you want to create, add one line of the following format to <conf\_file>:

```
[<first_track>,<last_track>,<type>]
```

<first\_track> and <last\_track> are required and specify the first and last track of the partition. You can use the keyword `first` for the first possible track on disk and, correspondingly, the keyword `last` for the last possible track on disk.

<type> describes the partition type and is one of:

**native**

for partitions to be used for Linux file systems.

**gpfs**

for partitions to be used as part of an Elastic Storage file system setup.

**swap**

for partitions to be used as swap devices.

**raid**

for partitions to be used as part of a RAID setup.

**lvm**

for partitions to be used as part of a logical volume group.

The type specification is optional. If the type is omitted, `native` is used.

The type describes the intended use of a partition to tools or other operating systems. For example, swap partitions could be skipped by backup programs. How Linux actually uses the partition depends on how the partition is formatted and set up. For example, a partition of type `native` can still be used in an LVM logical volume or in a RAID configuration.

**Example:** With the following sample configuration file you can create three partitions:

```
[first,1000,raid]
[1001,2000,swap]
[2001,last]
```

**-i or --volser**

displays the volume serial number and exits.

**-p or --table**

displays the partition table and exits.

**<node>**

specifies the device node of the DASD you want to partition, for example, `/dev/dasdzzz`. See “[DASD naming scheme](#)” on page 120 for more details about device nodes.

**-C or --check\_host\_count**

checks the host-access open count to ensure that the device is not online to another operating system instance. The operation is canceled if another operating system instance is accessing the device.

**fdasd menu**

If you call **fdasd** in the interactive mode (that is, with just a node), a menu is displayed.

```
Command action
m print this menu
p print the partition table
n add a new partition
d delete a partition
v change volume serial
t change partition type
r re-create VTOC and delete all partitions
u re-create VTOC re-using existing partition sizes
s show mapping (partition number - data set name)
q quit without saving changes
w write table to disk and exit
```

Command (m for help):

**Menu commands**

Use the **fdasd** menu commands to modify or view information about DASDs

**m**

re-displays the **fdasd** command menu.

**p**

displays information about the DASD and any partitions on the DASD.

**DASD information:**

- Number of cylinders
- Number of tracks per cylinder
- Number of blocks per track
- Block size
- Volume label

- Volume identifier
- Number of partitions defined

**Partition information:**

- Linux node
- Start track
- End track
- Number of tracks
- Partition ID
- Partition type

There is also information about the free disk space that is not used for a partition.

**n**

adds a partition to the DASD. You are asked to give the start track and the length or end track of the new partition.

**d**

deletes a partition from the DASD. You are asked which partition to delete.

**v**

changes the volume identifier. You are asked to enter a new volume identifier. See [VOLSER](#) for the format.

**t**

changes the partition type. You are asked to identify the partition to be changed. You are then asked for the new partition type (Linux native or swap). This type is a guideline; the actual use Linux makes of the partition depends on how it is defined with the **mkswap** or **mkxfs** tools. The main function of the partition type is to describe the partition to other operating systems. Then, for example, swap partitions can be skipped by backup programs.

**r**

re-creates the VTOC and deletes all partitions.

**u**

re-creates all VTOC labels without removing all partitions. Existing partition sizes are reused. This option is useful to repair damaged labels or migrate partitions that are created with older versions of **fdasd**.

**s**

displays the mapping of partition numbers to data set names. For example:

```
Command (m for help): s
device .....: /dev/dasdzzz
volume label ...: VOL1
volume serial ..: 0X0193

WARNING: This mapping may be NOT up-to-date,
         if you have NOT saved your last changes!

/dev/dasdzzz1 - LINUX.V0X0193.PART0001.NATIVE
/dev/dasdzzz2 - LINUX.V0X0193.PART0002.NATIVE
/dev/dasdzzz3 - LINUX.V0X0193.PART0003.NATIVE
```

**q**

quits **fdasd** without updating the disk. Any changes that you made (in this session) are discarded.

**w**

writes your changes to disk and exits. After the data is written, Linux rereads the partition table.

## Example using the menu

This example shows how to use **fdasd** to create two partitions on a z/VM minidisk, change the type of one of the partitions, save the changes, and check the results.

This example shows you how to format a z/VM minidisk with the compatible disk layout. The minidisk has device number 193.

1. Call **fdasd**, specifying the minidisk:

```
# fdasd /dev/dasdzzz
```

**fdasd** reads the existing data and displays the menu:

```
reading volume label: VOL1
reading vtoc : ok

Command action
  m print this menu
  p print the partition table
  n add a new partition
  d delete a partition
  v change volume serial
  t change partition type
  r re-create VTOC and delete all partitions
  u re-create VTOC re-using existing partition sizes
  s show mapping (partition number - data set name)
  q quit without saving changes
  w write table to disk and exit
Command (m for help):
```

2. Use the p option to verify that no partitions are created yet on this DASD:

```
Command (m for help): p

Disk /dev/dasdzzz:
 cylinders .....: 100
 tracks per cylinder ..: 15
 blocks per track .....: 12
 bytes per block .....: 4096
 volume label .....: VOL1
 volume serial .....: 0X0193
 max partitions .....: 3

----- tracks -----
Device      start    end    length  Id  System
              2    1499    1498
              unused
```

3. Define two partitions, one by specifying an end track and the other by specifying a length. (In both cases the default start tracks are used):

```
Command (m for help): n
First track (1 track = 48 KByte) ([2]-1499):
Using default value 2
Last track or +size[c|k|M] (2-[1499]): 700
You have selected track 700
```

```
Command (m for help): n
First track (1 track = 48 KByte) ([701]-1499):
Using default value 701
Last track or +size[c|k|M] (701-[1499]): +400
You have selected track 1100
```

4. Check the results by using the p option:

Command (m for help): **p**

```
Disk /dev/dasdzzz:
cylinders .....: 100
tracks per cylinder ..: 15
blocks per track .....: 12
bytes per block .....: 4096
volume label .....: VOL1
volume serial .....: 0X0193
max partitions .....: 3
```

|               | start | end  | length | Id | System       |
|---------------|-------|------|--------|----|--------------|
| /dev/dasdzzz1 | 2     | 700  | 699    | 1  | Linux native |
| /dev/dasdzzz2 | 701   | 1100 | 400    | 2  | Linux native |
|               | 1101  | 1499 | 399    |    | unused       |

#### 5. Change the type of a partition:

Command (m for help): **t**

```
Disk /dev/dasdzzz:
cylinders .....: 100
tracks per cylinder ..: 15
blocks per track .....: 12
bytes per block .....: 4096
volume label .....: VOL1
volume serial .....: 0X0193
max partitions .....: 3
```

|               | start | end  | length | Id | System       |
|---------------|-------|------|--------|----|--------------|
| /dev/dasdzzz1 | 2     | 700  | 699    | 1  | Linux native |
| /dev/dasdzzz2 | 701   | 1100 | 400    | 2  | Linux native |
|               | 1101  | 1499 | 399    |    | unused       |

change partition type  
partition id (use 0 to exit):

Enter the ID of the partition you want to change; in this example partition 2:

partition id (use 0 to exit): **2**

#### 6. Enter the new partition type; in this example type 2 for swap:

current partition type is: Linux native

```
1 Linux native
2 Linux swap
```

new partition type: **2**

#### 7. Check the result:

Command (m for help): **p**

```
Disk /dev/dasdzzz:
cylinders .....: 100
tracks per cylinder ..: 15
blocks per track .....: 12
bytes per block .....: 4096
volume label .....: VOL1
volume serial .....: 0X0193
max partitions .....: 3
```

|               | start | end  | length | Id | System       |
|---------------|-------|------|--------|----|--------------|
| /dev/dasdzzz1 | 2     | 700  | 699    | 1  | Linux native |
| /dev/dasdzzz2 | 701   | 1100 | 400    | 2  | Linux swap   |
|               | 1101  | 1499 | 399    |    | unused       |

#### 8. Write the results to disk with the w option:

```
Command (m for help): w
writing VTOC...
rereading partition table...
#
```

## Example using options

You can partition a DASD by using the **-a** or **-c** option without entering the menu mode.

This method is useful for partitioning by using scripts, for example, if you need to partition several hundred DASDs.

With the **-a** option you can create one large partition on a DASD:

```
# fdasd -a /dev/dasdzzz
auto-creating one partition for the whole disk...
writing volume label...
writing VTOC...
rereading partition table...
#
```

This example creates a partition as follows:

| Device        | start | end  | length | Id | System       |
|---------------|-------|------|--------|----|--------------|
| /dev/dasdzzz1 | 2     | 1499 | 1498   | 1  | Linux native |

Using a configuration file that you can create several partitions. For example, the following configuration file, `config`, creates three partitions:

```
[first,500]
[501,1100]
[1101,last]
```

Submitting the command with the **-c** option creates the partitions:

```
# fdasd -c config /dev/dasdzzz
parsing config file 'config'...
writing volume label...
writing VTOC...
rereading partition table...
#
```

This example creates partitions as follows:

| Device        | start | end  | length | Id | System       |
|---------------|-------|------|--------|----|--------------|
| /dev/dasdzzz1 | 2     | 500  | 499    | 1  | Linux native |
| /dev/dasdzzz2 | 501   | 1100 | 600    | 2  | Linux native |
| /dev/dasdzzz3 | 1101  | 1499 | 399    | 3  | Linux native |

## hmcdrvfs - Mount a FUSE file system for remote access to media in the HMC media drive

Use the **hmcdrvfs** command for read-only access to contents in a DVD, CD, or USB-attached storage in the media drive of an HMC.


## Before you begin:

- The fuse.hmcdrvfs file system needs access to device node `/dev/hmcdrv`. This node is created automatically when the hmcdrv kernel module is loaded, see [Chapter 30, “HMC media device driver,”](#) on page 339.
- On the HMC, the media must be assigned to the associated system image (use menu Access Removable Media).
- In a z/VM environment, the z/VM guest virtual machine must have at least privilege class B. The media must be assigned to the LPAR where the z/VM hypervisor runs.
- For Linux in LPAR mode, the LPAR activation profile must allow issuing SCLP requests.

With the media assigned to your Linux instance, this command creates a `fuse.hmcdrvfs` file system with the media content at the specified mount point.

To unmount file systems that you mounted with **hmcdrvf**s, you can use **fusermount**, whether root or non-root user. See the **fusermount** man page for details.

## hmcdrvfs syntax

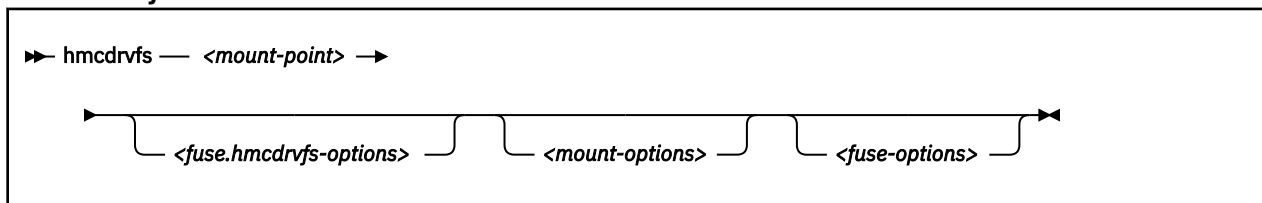

Where:

**-o or --opt**

FUSE or mount command options; for the FUSE options see the following lists, for mount options see the **mount** man page.

**<fuse.hmcdrvfs-options>**

options specific to the `fuse.hmcdrvfs` file system:

**-o hmclang=<language>**

specifies the language setting on the HMC; for valid values, see the **locale** man page.

**-o hmctz=<time zone>**

specifies the time zone setting on the HMC; for valid values, see the **tzset** man page.

**<mount-options>**

options as available for the **mount** command. See the **mount** man page for details.

**<fuse-options>**

options for FUSE. The following options are supported by the **cmsfs-fuse** command. To use an option, it must also be supported by the version of FUSE that you have.

**-d or -o debug**

enables debug output (implies **-f**).

**-f**

runs the command as a foreground operation.

**-S**

disables multi-threaded operation.



- o allow\_other**  
allows access to the file system by other users.
- o allow\_root**  
allows access to the file system by root.
- o nonempty**  
allows mounts over files and non-empty directories.
- o default\_permissions**  
enables permission checking by the kernel.
- o fsname=<name>**  
sets the file system name.
- o subtype=<type>**  
sets the file system type.
- o max\_read=<n>**  
sets maximum size of read requests.
- o direct\_io**  
uses direct I/O.
- o kernel\_cache**  
caches files in the kernel.
- o [no]auto\_cache**  
enables or disables caching based on modification times.
- o umask=<mask>**  
sets file permissions (octal).
- o uid=<n>**  
sets the file owner.
- o gid=<n>**  
sets the file group.
- o entry\_timeout=<secs>**  
sets the cache timeout for names. The default is 1.0 second.
- o attr\_timeout=<secs>**  
sets the cache timeout for attributes. The default is 1.0 second.
- o ac\_attr\_timeout=<secs>**  
sets the auto cache timeout for attributes. The default is the attr\_timeout value.
- o max\_readahead=<n>**  
sets the maximum read ahead value.
- o async\_read**  
performs reads asynchronously (default).
- o sync\_read**  
performs reads synchronously.
- o no\_remote\_lock**  
disables remote file locking.
- o intr**  
allows requests to be interrupted
- o intr\_signal=<num>**  
specifies the signal to send on interrupt.
- v or --version**  
displays version information for the command.
- h or --help**  
displays a short help text, then exits. To view the man page, enter **man hmcdrvfs**.

The following options for mount policy can be set in the file `/etc/fuse.conf` file:

**mount\_max=<number>**

sets the maximum number of FUSE mounts allowed for non-root users. The default is 1000.

**user\_allow\_other**

allows non-root users to specify the `allow_other` or `allow_root` mount options.

**Examples**

- To mount the contents of the HMC media drive at `/mnt/hmc` without any special options, use:

```
# hmcdrvfs /mnt/hmc
```

- If the `hmcdrv` kernel module is not loaded, load it before you issue the **hmcdrvfs** command:

```
# modprobe hmcdrv  
# hmcdrvfs /mnt/hmc
```

- To translate the UID and GID of files on the HMC media drive to your system users and groups along with overriding the permissions, issue, for example:

```
# hmcdrvfs /mnt/hmc -o uid=500 -o gid=1000 -o umask=0337
```

- To speed up transfer rates to frequently accessed directories, use the cache timeout option:

```
# hmcdrvfs /mnt/hmc -o entry_timeout=60
```

- If the HMC is in a different timezone and is configured for a different language use, for example:

```
# hmcdrvfs /mnt/hmc -o hmclang=de_DE -o hmctz=Europe/Berlin
```

- To also disregard any Daylight Saving Time, specifying hours west of the Prime Meridian (Coordinated Universal Time):

```
# hmcdrvfs /mnt/hmc -o hmclang=de_DE -o hmctz="GMT-1"
```

- To unmount the HMC media drive contents mounted on `/mnt/hmc`, issue:

```
# fusermount -u /mnt/hmc
```

## hyptop - Display hypervisor performance data

---

Use the **hyptop** command to obtain a dynamic real-time view of a hypervisor environment on IBM Z.

It works with both the z/VM and the LPAR PR/SM hypervisor. Depending on the available data, it shows, for example, CPU and memory information about LPARs or z/VM guest virtual machines.

System names provided by hyptop are either LPAR names as shown on the SE or HMC, or z/VM guest IDs that identify z/VM guest virtual machines.

The **hyptop** command provides two main windows:


- A list of systems that the hypervisor is currently running (sys\_list).
- One system in more detail (sys).

You can run **hyptop** in interactive mode (default) or in batch mode with the **-b** option.

### Before you begin:

- The debugfs file system must be mounted, see [“debugfs” on page xi](#).
- The Linux kernel must have the required support to provide the performance data. Check that `<debugfs mount point>/s390_hypfs` is available after you mount debugfs.
- The hyptop user must have read permission for the required debugfs files:
  - z/VM: `<debugfs mount point>/s390_hypfs/diag_2fc`
  - z/VM: `<debugfs mount point>/s390_hypfs/diag_0c`  
(Required only for management time data, identifiers m and M. See [“z/VM fields” on page 571](#) )
  - LPAR: `<debugfs mount point>/s390_hypfs/diag_204`
- You can always monitor the guest operating system where **hyptop** is running. To monitor any other operating system instances running on the same hypervisor as **hyptop**, you will need additional permissions:
  - For z/VM: The guest virtual machine must be assigned privilege class B.
  - For LPAR: On the HMC or SE security menu of the LPAR activation profile, select the **Global performance data control** check box.

## hyptop syntax

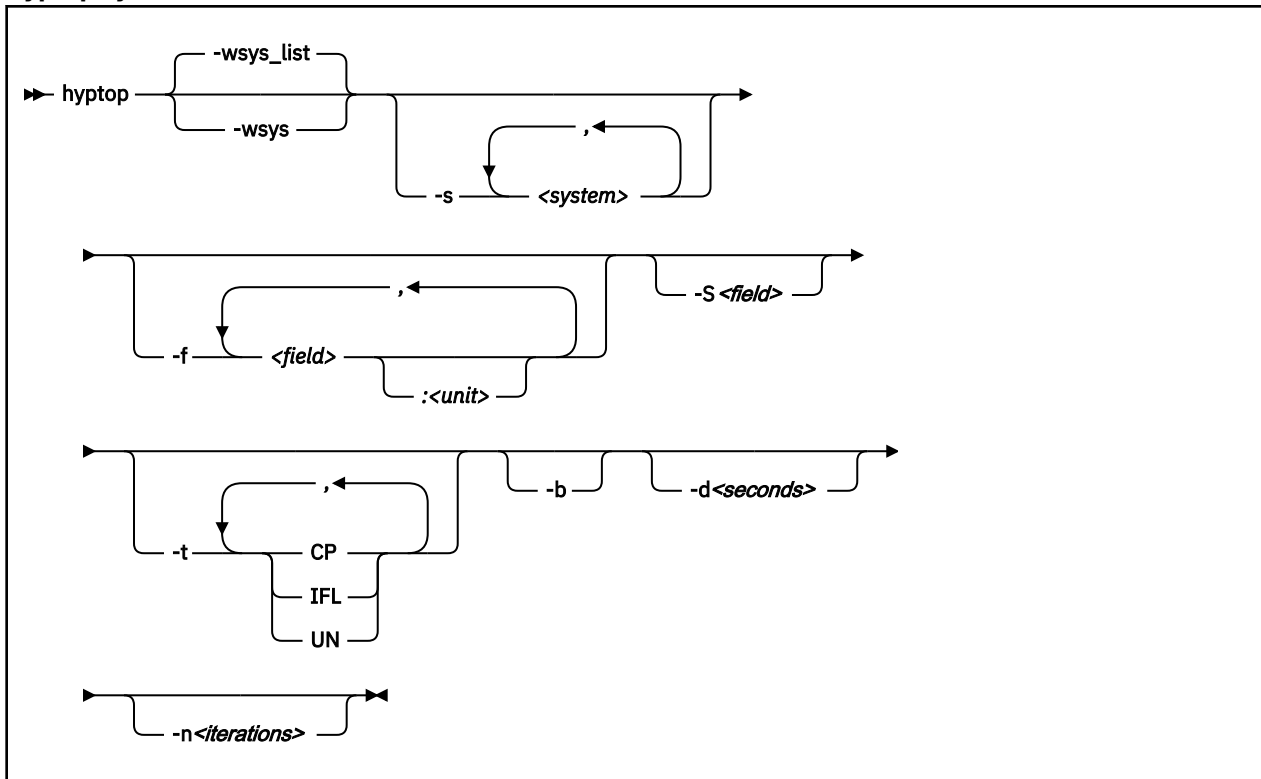

Where:

**-w <window name> or --window=<window name>**

selects the window to display, either `sys` or `sys_list`. Use the options **--sys**, **--fields**, and **--sort** to modify the current window. The last window that is specified with the **--window** option is used as the start window. The default window is `sys_list`.

**-s <system> or --sys=<system>**

selects systems for the current window. If you specify this option, only the selected systems are shown in the window. For the `sys` window, you can specify only one system. `<system>` can be an LPAR name as shown on the SE or HMC, or it can be a z/VM guest ID that identifies a z/VM guest virtual machine. Enter **hyptop** without any options to display the names of all available systems.

**-f <field>[:<unit>] or --fields=<field>[:<unit>]**

selects fields and units in the current window. The `<field>` variable is a one letter unique identifier for a field (for example "c" for CPU time). The `<unit>` variable specifies the unit that is used for the field (for example "us" for microseconds). See ["Available fields and units"](#) on page 570 for definitions. If the **--fields** option is specified, only the selected fields are shown.

**Note:** If your field specification includes the number sign (#), enclose the specification in double quotation marks. Otherwise, the command shell might interpret the number sign and all characters that follow as a comment.

**-S <field> or --sort=<field>**

selects the field that is used to sort the data in the current window. To reverse the sort order, specify the option twice. See ["Available fields and units"](#) on page 570 for definitions.

**-t <type> or --cpu\_types=<type>**

selects CPU types that are used for dispatch time calculations. See ["CPU types"](#) on page 572 for definitions.

**-b or --batch\_mode**

uses batch mode. Batch mode can be useful for sending output from hyptop to another program, a file, or a line mode terminal. In this mode, no user input is accepted.

**-d <seconds> or --delay=<seconds>**

specifies the delay between screen updates.

**-n <iterations> or --iterations=<iterations>**

specifies the maximum number of screen updates before the program ends.

**-h or --help**

prints usage information, then exits. To view the man page, enter **man hyptop**.

**-v or --version**

displays the version of **hyptop**, then exits.

## Navigating between windows

Use letter or arrow keys to navigate between the windows.

When you start the **hyptop** command, the `sys_list` window opens in normal mode. Data is updated at regular intervals, and sorted by dispatch time. You can navigate between the windows as shown in [Figure 90 on page 569](#).

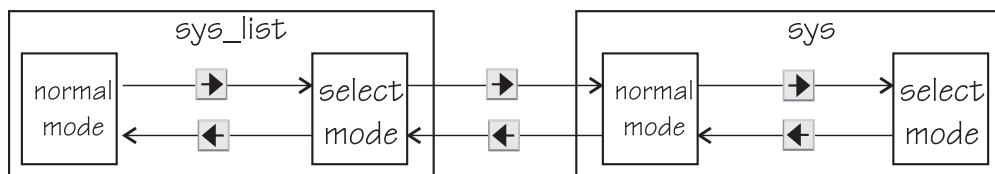


Figure 90. *hyptop* window navigation overview

To navigate between the windows, use the and arrow keys. The windows have two modes, normal mode and select mode.

You can get online help for every window by pressing the key. Press in the `sys_list` window to exit **hyptop**.

Instead of using the arrow keys, you can use letter keys (equivalent to the vi editor navigation) in all windows as listed in [Table 66 on page 569](#).






| Table 66. Using letter keys instead of arrow keys |                       |
|---------------------------------------------------|-----------------------|
| Arrow key                                         | Letter key equivalent |
|                                                   |                       |
|                                                   |                       |
|                                                   |                       |
|                                                   |                       |

## Selecting data

You can scroll windows and select data rows.



To enter select mode press the key. The display is frozen so that you can select rows. Select rows by pressing the and keys and mark the rows with the Spacebar. Marked rows are displayed in bold font. Leave the select mode by pressing the key.

To see the details of one system, enter select mode in the `sys_list` window, then navigate to the row for the system you want to look at, and press the key. The `sys` window for the system opens. The key always returns you to the previous window.

To scroll any window, press the  and  keys or the Page Up and Page Down keys. Jump to the end of a window by pressing the  +  keys and to the beginning by pressing the  key.

Sorting data

You can sort data according to column.

The sys window or sys\_list window table is sorted according to the values in the selected column. Select a column by pressing the hot key of the column. This key is underlined in the heading. If you press the hot key again, the sort order is reversed. Alternatively, you can select columns with the  and  keys.

Filtering data

You can filter the displayed data by CPU types and by data fields.

From the sys or sys\_list window you can access the fields selection window and the CPU-type selection window as shown in [Figure 91 on page 570](#).

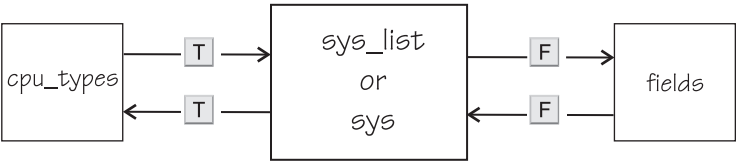





Figure 91. Accessing the fields and CPU-type selection windows

Use the  key to toggle between the CPU-type selection window and the main window. Use the  key to toggle between the fields selection window and the main window. You can also use the  key to return to the main window from the CPU types and fields windows.

In the fields and CPU-type selection windows, press the field or CPU type identifier key (see “LPAR fields” on page 570, “z/VM fields” on page 571, and “CPU types” on page 572) to select or de-select. Selected rows are bold and de-selected rows are grey. When you return to the main window, the data is filtered according to your field and CPU type selections.

Available fields and units

Different fields are supported depending whether your hypervisor is LPAR PR/SM or z/VM.

The fields might also be different depending on machine type, z/VM version, and kernel version. Each field has a unique one letter identifier that can be used in interactive mode to enable the field in the field selection window. Also, use it to select the sort field in the sys or sys\_list window. You can also select fields and sort data using the **--fields** and **--sort** command line options.

LPAR fields

Some fields for Linux in LPAR mode are available in both the sys\_list and sys windows others are available only in the sys\_list window or only in the sys window.

The following fields are available under LPAR in both the sys\_list and sys windows:

| Identifier | Column label | Explanation                   |
|------------|--------------|-------------------------------|
| c          | core         | Core dispatch time per second |
| e          | the          | Thread time per second        |
| m          | mgm          | Management time per second    |
| C          | Core+        | Total core dispatch time      |
| E          | thE+         | Total thread time             |
| M          | Mgm+         | Total management time         |

| Identifier | Column label | Explanation |
|------------|--------------|-------------|
| o          | online       | Online time |

If multithreading is not available or not enabled, the values for core and for thread are identical.

In the sys\_list window only:

| Identifier | Column label | Explanation                                     |
|------------|--------------|-------------------------------------------------|
| y          | system       | Name of the LPAR (always shown)                 |
| #          | #cpu         | Number of CPUs                                  |
| T          | #The         | Number of threads (sum of initial and reserved) |

In the sys window only:

| Identifier | Column label | Explanation                                           |
|------------|--------------|-------------------------------------------------------|
| i          | coreid       | Core identifier (always shown)                        |
| p          | type         | CPU type. See <a href="#">“CPU types” on page 572</a> |
| v          | visual       | Visualization of core dispatch time per second        |

### z/VM fields

Some fields for Linux on z/VM are available in both the sys\_list and sys windows. Others are available only in the sys\_list window or only in the sys window.

In the sys\_list and sys windows:

| Identifier | Column label | Explanation                |
|------------|--------------|----------------------------|
| c          | cpu          | CPU time per second        |
| m          | mgm          | Management time per second |
| C          | Cpu+         | Total CPU time             |
| M          | Mgm+         | Total management time      |
| o          | online       | Online time                |

In the sys\_list window only:

| Identifier | Column label | Explanation                                           |
|------------|--------------|-------------------------------------------------------|
| y          | system       | Name of the z/VM guest virtual machine (always shown) |
| #          | #cpu         | Number of CPUs                                        |
| O          | #cpuop       | Number of operating CPUs                              |
| u          | memuse       | Used memory                                           |
| a          | memmax       | Maximum memory                                        |
| r          | wcur         | Current weight                                        |
| x          | wmax         | Maximum weight                                        |

In the sys window only:

| Identifier | Column label | Explanation                   |
|------------|--------------|-------------------------------|
| i          | cpuid        | CPU identifier (always shown) |

| Identifier | Column label | Explanation                          |
|------------|--------------|--------------------------------------|
| v          | visual       | Visualization of CPU time per second |

### Units

Depending on the field type, the values can be displayed in different units.

In the sys\_list and sys windows, the units are displayed under the column headings in parenthesis. Each unit can be specified through the **--fields** command line option. Units can also be selected interactively. To change a unit, enter select mode in the fields window. Then, select the field where you want to change the unit, and press the "+" or "-" keys to go through the available units. The following units are supported:

Units of time:

| Unit | Explanation                                          |
|------|------------------------------------------------------|
| us   | Microseconds ( $10^{-6}$ seconds)                    |
| ms   | Milliseconds ( $10^{-3}$ seconds)                    |
| %    | Hundreds of a second ( $10^{-2}$ seconds) or percent |
| s    | Seconds                                              |
| m    | Minutes                                              |
| hm   | Hours and minutes                                    |
| dhm  | Days, hours, and minutes                             |

Units of memory:

| Unit | Explanation                     |
|------|---------------------------------|
| KiB  | Kibibytes (1 024 bytes)         |
| MiB  | Mebibytes (1 048 576 bytes)     |
| GiB  | Gibibytes (1 073 741 824 bytes) |

Other units:

| Unit | Explanation     |
|------|-----------------|
| str  | String          |
| #    | Count or number |
| vis  | Visualization   |

## CPU types

Enable or disable CPU types in interactive mode in the cpu\_types window.

The CPU types can also be specified with the **--cpu\_types** command line option.

The calculation of the CPU data uses CPUs of the specified types only. For example, if you want to see how much CPU time is consumed by your Linux systems, enable CPU type IFL.

On z/VM the processor type is always UN and you cannot select the type.

In an LPAR the following CPU types can be selected either interactively or with the **--cpu\_types** command line option:



| Identifier | Column label | Explanation                                                                  |
|------------|--------------|------------------------------------------------------------------------------|
| i          | IFL          | Integrated Facility for Linux. On older machines IFLs might be shown as CPs. |
| p          | CP           | CP processor type.                                                           |
| u          | UN           | Unspecified processor type (other than CP or IFL).                           |

## Examples

These examples show typical uses of **hyptop**.

- To start **hyptop** with the sys\_list window in interactive mode, enter:

```
# hyptop
```

- If your Linux instance is running in an LPAR that has permission to see the other LPARs, the output looks like the following example:

```
12:30:48 | cpu-t: IFL(18) CP(3) UN(3)                                     ?=help
system  #core   core    mgm    Core+   Mgm+    online
(str)   (#)    (%)    (%)    (hm)    (hm)    (dhm)
S05LP30  10   461.14  10.18  1547:41  8:15  11:05:59
S05LP33  4    133.73  7.57   220:53  6:12  11:05:54
S05LP50  4    99.26   0.01   146:24  0:12  10:04:24
S05LP02  1    99.09   0.00   269:57  0:00  11:05:58
TRX2CFA  1     2.14   0.03    3:24   0:04  11:06:01
S05LP13  6     1.36   0.34    4:23   0:54  11:05:56
TRX1     19     1.22   0.14   13:57   0:22  11:06:01
TRX2     20     1.16   0.11   26:05   0:25  11:06:00
S05LP55  2     0.00   0.00    0:22   0:00  11:05:52
S05LP56  3     0.00   0.00    0:00   0:00  11:05:52
         413  823.39  23.86  3159:57 38:08  11:06:01
```

- If your Linux instance runs in a z/VM guest virtual machine that has permission to see the other z/VM guest virtual machines, the output looks like the following example:

```
12:32:21 | CPU-T: UN(16)   ?=help
system  #cpu    cpu    Cpu+    online  memuse  memmax  wcur
(str)   (#)    (%)    (hm)    (dhm)   (GiB)   (GiB)   (#)
T6360004 6   100.31  959:47  53:05:20  1.56   2.00   100
DTCVSW1  1     0.00   0:00   53:16:42  0.01   0.03   100
T6360002 6     0.00  166:26  40:19:18  1.87   2.00   100
OPERATOR 1     0.00   0:00   53:16:42  0.00   0.03   100
T6360008 2     0.00   0:37   30:22:55  0.32   0.75   100
T6360003 6     0.00  3700:57  53:03:09  4.00   4.00   100
NSLCF1   1     0.00   0:02   53:16:41  0.03   0.25   500
PERFSVM  1     0.00   0:53   2:21:12   0.04   0.06    0
TCP/IP   1     0.00   0:01   53:16:42  0.01   0.12  3000
DIRMAINT 1     0.00   0:04   53:16:42  0.01   0.03   100
DTCVSW2  1     0.00   0:00   53:16:42  0.01   0.03   100
RACFVM   1     0.00   0:00   53:16:42  0.01   0.02   100
         75   101.57 5239:47  53:16:42 15.46  22.50  3000
```

At the top, the sys and sys\_list windows show a list of the CPU types that are used for the current CPU and core dispatch time calculation.

- To start **hyptop** with the sys window showing performance data for LPAR MYLPAR, enter:

```
# hyptop -w sys -s mylpar
```

The result looks like the following example:

```

11:18:50 MYLPAR cpu-t: IFL(0) CP(24) UN(2)                                     ?=help
coreid type      core mgm visual
(#)(str)  (%) (%) (vis)
0         CP      50.78 0.28 |#####|
1         CP      62.76 0.17 |#####|
2         CP      71.11 0.48 |#####|
3         CP      32.38 0.24 |#####|
4         CP      64.35 0.32 |#####|
5         CP      67.61 0.40 |#####|
6         CP      70.95 0.35 |#####|
7         CP      62.16 0.41 |#####|
8         CP      70.48 0.25 |#####|
9         CP      56.43 0.20 |#####|
10        CP       0.00 0.00 |
11        CP       0.00 0.00 |
12        CP       0.00 0.00 |
13        CP       0.00 0.00 |
=:V:N      609.02 3.10

```

- To start **hyptop** with the sys\_list window in batch mode, enter:

```
# hyptop -b
```

- To start **hyptop** with the sys\_list window in interactive mode, with the fields dispatch time (in milliseconds), and online time (unit default), and sort the output according to online time, enter:

```
# hyptop -f c:ms,o -S o
```

- To start **hyptop** with the sys\_list window in batch mode with update delay 5 seconds and 10 iterations, enter:

```
# hyptop -b -d 5 -n 10
```

- To start **hyptop** with the sys\_list window and use only CPU types IFL and CP for dispatch time calculation, enter:

```
# hyptop -t ifl,cp
```

- To start **hyptop** on Linux in LPAR mode with the sys\_list window and display all LPAR fields, including the thread information, enter:

```
# hyptop -f "#,T,c,e,m,C,E,M,o"
```

The result looks like the following example:

```

13:47:42 cpu-t: IFL(0) CP(38) UN(0)                                     ?=help
system  #core #The   core    the  mgm   Core+   thE+   Mgm+   online
(str)   (#)  (#)    (%)    (%) (%)    (hm)   (hm)   (hm)   (dhm)
S35LP41   12   24  101.28  170.28 0.28 1056:10 1756:11 8:45 158:04:04
S35LP42   16   32   35.07   40.07 0.44 5194:52 6193:52 12:45 158:04:04
S35LP64    3    3   1.20    1.20 0.00   0:31   0:31  0:00  12:03:54
...

```

In the example, the Linux instances in LPARs S35LP41 and S35LP43 run with 2 threads per core. The thread time, as the sum of the two threads, exceeds the core dispatch time.

The Linux instance in LPAR S35LP64 does not use simultaneous multithreading.

- To start **hyptop** on Linux on z/VM with the sys\_list window and display a selection of z/VM fields, including the management time, enter:

```
# hyptop -f "#,c,m,C,M,o"
```

The result looks like the following example:

```

17:52:56 cpu-t: IFL(0) UN(2)                                     ?=help
system    #cpu    cpu    mgm    Cpu+    Mgm+    online
(str)     (#)     (%)    (%)    (hm)    (hm)    (dhm)
G3545010  3    0.55  0.05  0:05    0:02    0:03:14
G3545021  3    0.04  -      0:00    -      0:02:43
G3545025  2    0.01  -      0:00    -      0:04:08
...
G3545099  1    0.00  -      0:00    -      0:09:06
          52    0.61  0.05  0:27    0:02    0:09:06

```

In the example, hyptop runs on a Linux instance in z/VM guest virtual machine G3545010. In the sys\_list window, this is the only guest virtual machine for which management data is displayed.




## Scenario

Perform the steps described in this scenario to start **hyptop** with the sys window with system MYLPAR with the fields dispatch time (unit milliseconds) and total dispatch time (unit default), sort the output according to the total dispatch time, and then reverse the sort order.

### Procedure

1. Start hyptop.

```
# hyptop
```

2. Go to select mode by pressing the  key. The display will freeze.
3. Navigate to the row for the system you want to look (in the example MYLPAR) at using the  and  keys.

```

12:15:00 | CPU-T: IFL(18) CP(3) UN(3)                             ?=help
system    #core    core    mgm    Core+    Mgm+    online
(str)     (#)     (%)    (%)    (hm)    (hm)    (dhm)
MYLPAR    4    199.69  0.04  547:41  8:15  11:05:59
S05LP33   4    133.73  7.57  220:53  6:12  11:05:54
S05LP50   4    99.26   0.01  146:24  0:12  10:04:24
S05LP02   1    99.09   0.00  269:57  0:00  11:05:58
...
S05LP56   3    0.00   0.00   0:00   0:00  11:05:52
          413   823.39  23.86 3159:57 38:08 11:06:01


```

4. Open the sys window for MYLPAR by pressing the  key.

```

12:15:51 MYLPAR CPU-T: IFL(18) CP(3) UN(2)                       ?=help
coreid type    core mgm visual
(#)(str)  (%) (%) (vis)
0      IFL  99.84 0.02 |#####
1      IFL  99.85 0.02 |#####
2      IFL   0.00 0.00 |
3      IFL   0.00 0.00 |
=:V:N      199.69 0.04

```

5. Press the  key to go to the fields selection window:

```

Select Fields and Units   ?=help
K S ID    UNIT AGG DESCRIPTION
p * type  str  none CPU type
c * core  %    sum Core dispatch time per second
e the    %    sum Thread time per second
m * mgm   %    sum Management time per second
C core+  hm    sum Total core dispatch time
E thE+   %    sum Total thread time
M mgm+   hm    sum Total management time
o online dhm max Online time
v * visual vis none Visualization of CPU time per second

```

Ensure that dispatch time per second and total dispatch time are selected and for dispatch time microseconds are used as unit:

- Press the **P** key, the **M** key, and the **V** key to disable CPU type, Management time per second, and Visualization.
- Press the **C** key to enable Total core dispatch time.
- Then select the Core dispatch time per second row by pressing the **→** and **↓** keys.
- Press the minus key (-) to switch from the percentage (%) unit to the microseconds (ms) unit.

```
Select Fields and Units ?=help
K S ID      UNIT AGG  DESCRIPTION
p  type    str  none CPU type
c * core   ms   sum  Core dispatch time per second
e  the     %    sum  Thread time per second
m  mgm     %    sum  Management time per second
C * core+  hm   sum  Total core dispatch time
E  thE+    %    sum  Total thread time
M  mgm+    hm   sum  Total management time
o  online  dhm  max  Online time
v  visual  vis  none Visualization of CPU time per second
```

Press the **←** key twice to return to the sys window.

- To sort by Total core dispatch time and list the values from low to high, press the **Shift + C** keys twice:

```
13:44:41 MYLPAR cpu-t: IFL(18) CP(3) UN(2)           ?=help
coreid  core  Core+
(#)     (ms)  (hm)
2       0.00  0:00
3       0.00  0:00
1       37.48 492:55
0       23.84 548:52
=:^:N   61.33 1041:47
```

## Results

You can do all of these steps in one by entering the command:

```
# hyptop -w sys -s mylpar -f c:ms,C -S C -S C
```

## lschp - List channel paths

Use the **lschp** command to display information about channel paths.

### lschp syntax



Where:

#### **-v or --version**

displays the version number of **lschp** and exits.

#### **-h or --help**

displays a short help text, then exits.

Output column description:

#### **CHPID**

Channel-path identifier.

#### **Vary**

Logical channel-path state:

- 0 = channel-path is not used for I/O.
- 1 = channel-path is used for I/O.

#### **Cfg.**

Channel-path configure state:

- 0 = stand-by
- 1 = configured
- 2 = reserved
- 3 = not recognized

#### **Type**

Channel-path type identifier.

#### **Cmg**

Channel measurement group identifier.

#### **Shared**

Indicates whether a channel-path is shared between LPARs:

- 0 = channel-path is not shared
- 1 = channel-path is shared

#### **PCHID**

Physical channel path identifier, or, if enclosed in brackets, internal channel identifier. The mapping might not be available to Linux when running as a z/VM guest. If so, use the CP command:

```
QUERY CHPID <num> PCHID
```

A column value of '-' indicates that a facility associated with the corresponding channel-path attribute is not available.

Examples

- To query the configuration status of channel path ID 0.40 issue:


```
# lschp
CHPID Vary Cfg. Type Cmg Shared  PCHID
=====
...
0.40  1    1    1b   2    1      0580
...
...
```

The value under **Cfg.** shows that the channel path is configured (1).

## lscpumf - Display information about the CPU-measurement facilities

Use the **lscpumf** command to display information about information about the CPU-measurement facilities.

### lscpumf syntax

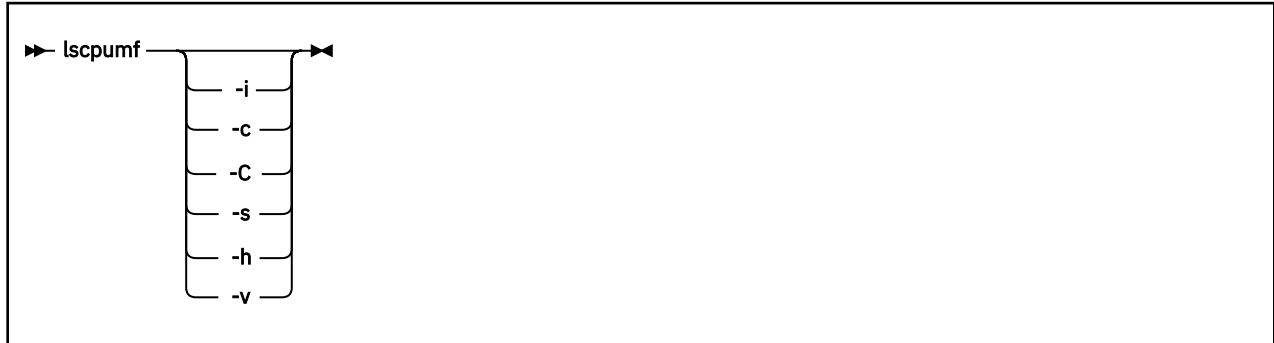

where:

#### **-i or --info**

displays detailed information about available and supported CPU measurement facilities.

#### **-c or --list-counters**

lists counters that are provided by the CPU-measurement facility, omitting counters for which the LPAR is not authorized. For counter measurements with the perf program, the raw event identifier and symbolic counter name are displayed.

#### **-C or --list-all-counters**

lists all counters that are provided by the CPU-measurement counter facility, regardless of LPAR authorization. To list only those counters for which the LPAR is authorized, use the **-c** option. For counter measurements with the perf program, the raw event identifier and symbolic counter name are displayed.

#### **-s or --list-sampling-events**

lists perf raw events that activate the sampling facility.

#### **-v or --version**

displays the version number of **lscpumf** and exits.

#### **-h or --help**

displays out a short help text, then exits. To view the man page, enter **man lscpumf**.

### Examples

- To display the supported facilities, issue:

```
# lscpumf
CPU-measurement Counter Facility
CPU-measurement Sampling Facility
```

- To display details about the facilities, issue:

```
# lscpumf -i
CPU-measurement counter facility
-----
Version: 1.2

Authorized counter sets:
  Basic counter set
  Problem-State counter set

Linux perf event support: Yes (PMU: cpum_cf)

CPU-measurement sampling facility
-----
Sampling Interval:
  Minimum:      18228 cycles (approx.   285714 Hz)
  Maximum: 170650536 cycles (approx.    30 Hz)

Authorized sampling modes:
  basic      (sample size: 32 bytes)

Linux perf event support: Yes (PMU: cpum_sf)

Current sampling buffer settings for cpum_sf:
  Basic-sampling mode
    Minimum:      15 sample-data-blocks ( 64KB)
    Maximum:   8176 sample-data-blocks ( 32MB)
```

- To display perf event information for authorized sampling functions, issue:

```
# lscpumf -s
Perf events for activating the sampling facility
=====

Raw
event  Name      Description
-----
rb0000  SF_CYCLES_BASIC

          Sample CPU cycles using basic-sampling mode.
          This event is not associated with a counter set.
```

- To list all counters that are provided by your IBM Z hardware, issue:



```
# lscpumf -C
Perf event counter list for IBM z13
=====

Raw
event  Name      Description
-----
r0      CPU_CYCLES
        Cycle Count.
        Counter 0 / Basic Counter Set.

r1      INSTRUCTIONS
        Instruction Count.
        Counter 1 / Basic Counter Set.

r2      L1I_DIR_WRITES
        Level-1 I-Cache Directory Write Count.
        Counter 2 / Basic Counter Set.

r3      L1I_PENALTY_CYCLES
        Level-1 I-Cache Penalty Cycle Count.
        Counter 3 / Basic Counter Set.

r4      L1D_DIR_WRITES
        Level-1 D-Cache Directory Write Count.
        Counter 4 / Basic Counter Set.

r5      L1D_PENALTY_CYCLES
        Level-1 D-Cache Penalty Cycle Count.
        Counter 5 / Basic Counter Set.

r20     PROBLEM_STATE_CPU_CYCLES
        Problem-State Cycle Count.
        Counter 32 / Problem-State Counter Set.


r21     PROBLEM_STATE_INSTRUCTIONS
        Problem-State Instruction Count.
        Counter 33 / Problem-State Counter Set.

...
```

## lscss - List subchannels

Use the **lscss** command to gather subchannel information from sysfs and display it in a summary format.

### lscss syntax

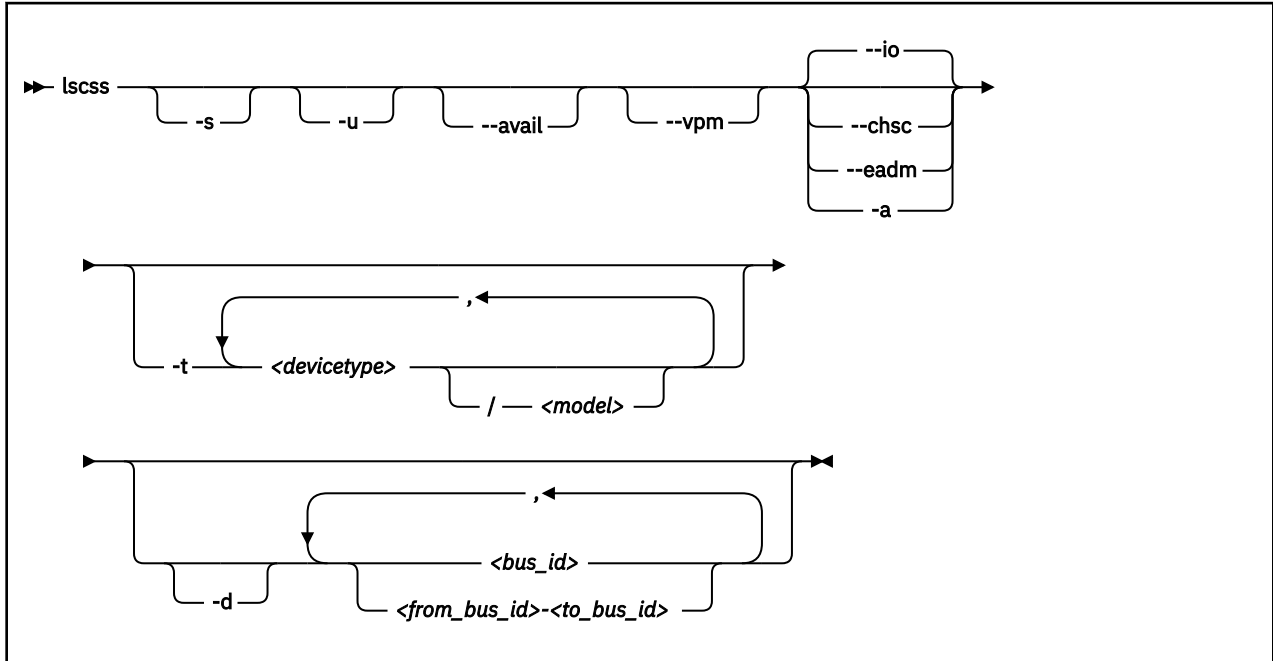

Where:

#### **-s or --short**

strips the bus ID in the command output down to the four-digit device number.

#### **-u or --uppercase**

displays the output with uppercase letters. The default is lowercase.

**Changed default:** Earlier versions of **lscss** printed the command output in uppercase. Specify this option to obtain the former output style.

#### **--avail**

includes the availability attribute of I/O devices.

#### **--vpm**

shows verified paths in a mask. Channel paths listed in this mask are available to Linux device drivers for I/O. Reasons for a channel path being unavailable include:

- The corresponding bit is not set in at least one of the PIM, PAM, or POM masks.
- The channel path is varied offline.
- Linux received no interrupt to I/O using this channel path.

#### **--io**

limits the output to I/O subchannels and corresponding devices. This option is the default.

#### **--chsc**

limits the output to CHSC subchannels.

#### **--eadm**

limits the output to EADM subchannels.

#### **-a or --all**

does not limit the output.

**-t or --devtype**

limits the output to information about the specified device types and, if provided, the specified model.

**<devicetype>**

specifies a device type.

**<model>**

is a specific model of the specified device type.

**-d or --devrange**

interprets bus IDs as specifications of devices. By default, bus IDs are interpreted as specifications of subchannels.

**<bus\_id>**

specifies an individual subchannel; if used with -d specifies an individual device. If you omit the leading 0.<subchannel set ID>., 0.0. is assumed.

If you specify subchannels or devices, the command output is limited to these subchannels or devices.

**<from\_bus\_id>-<to\_bus\_id>**

specifies a range of subchannels; if used with -d specifies a range of devices. If you omit the leading 0.<subchannel set ID>., 0.0. is assumed.

If you specify subchannels or devices, the command output is limited to these subchannels or devices.

**-v or --version**

displays the version number of **lscss** and exits.

**-h or --help**

displays a short help text, then exits. To view the man page enter **man lscss**.

**Examples**

- This command lists all subchannels, including subchannels that do not correspond to I/O devices:

```
# lscss -a
IO Subchannels and Devices:
Device    Subchan.  DevType CU Type Use  PIM PAM POM  CHPIDs
-----
0.0.f500 0.0.05cf  1732/01 1731/01 yes  80  80  ff  76000000 00000000
0.0.f501 0.0.05d0  1732/01 1731/01 yes  80  80  ff  76000000 00000000
0.0.f502 0.0.05d1  1732/01 1731/01 yes  80  80  ff  76000000 00000000
0.0.6194 0.0.36e0  3390/0c 3990/e9 yes  fc  fc  ff  32333435 40410000
0.0.6195 0.0.36e1  3390/0c 3990/e9 yes  fc  fc  ff  32333435 40410000
0.0.6196 0.0.36e2  3390/0c 3990/e9 yes  fc  fc  ff  32333435 40410000

CHSC Subchannels:
Device    Subchan.
-----
n/a       0.0.ff40

EADM Subchannels:
Device    Subchan.
-----
n/a       0.0.ff00
n/a       0.0.ff01
n/a       0.0.ff02
n/a       0.0.ff03
n/a       0.0.ff04
n/a       0.0.ff05
n/a       0.0.ff06
n/a       0.0.ff07
```

- This command lists subchannels with an attached 3480 model 04 or 3590 tape device and strips the bus ID and the subchannel ID in the command output down to the four-digit IDs:

```
# lscss -s -t 3480/04,3590
Device Subchan. DevType CU Type Use PIM PAM POM CHPIDs
-----
0480 000e 3480/04 3480/01 80 80 ff 10000000 00000000
0a38 000f 3590/11 3590/50 80 80 ff 10000000 00000000
```

- This command limits the output to subchannels with attached DASD model 3390 type 0a:

```
# lscss -t 3390/0a
Device Subchan. DevType CU Type Use PIM PAM POM CHPIDs
-----
0.0.2f08 0.0.0a78 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000
0.0.2fe5 0.0.0b55 3390/0a 3990/e9 c0 c0 bf 34400000 00000000
0.0.2fe6 0.0.0b56 3390/0a 3990/e9 c0 c0 bf 34400000 00000000
0.0.2fe7 0.0.0b57 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000
```

- This command limits the output to the subchannel range 0.0.0b00-0.0.0bff:

```
# lscss 0.0.0b00-0.0.0bff
Device Subchan. DevType CU Type Use PIM PAM POM CHPIDs
-----
0.0.2fe5 0.0.0b55 3390/0a 3990/e9 c0 c0 bf 34400000 00000000
0.0.2fe6 0.0.0b56 3390/0a 3990/e9 c0 c0 bf 34400000 00000000
0.0.2fe7 0.0.0b57 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000
```

- This command limits the output to subchannels 0.0.0a78 and 0.0.0b57 and shows the availability:

```
# lscss --avail 0a78,0b57
Device Subchan. DevType CU Type Use PIM PAM POM CHPIDs Avail.
-----
0.0.2f08 0.0.0a78 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000 good
0.0.2fe7 0.0.0b57 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000 good
```

- This command limits the output to subchannel 0.0.0a78 and displays uppercase output:

```
# lscss -u 0a78
Device Subchan. DevType CU Type Use PIM PAM POM CHPIDs
-----
0.0.2F08 0.0.0A78 3390/0A 3990/E9 YES C0 C0 FF 34400000 00000000
```

- This command limits the output to subchannels that correspond to I/O device 0.0.7e10 and the device range 0.0.2f00-0.0.2fff:

```
# lscss -d 2f00-2fff,0.0.7e10
Device Subchan. DevType CU Type Use PIM PAM POM CHPIDs
-----
0.0.2f08 0.0.0a78 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000
0.0.2fe5 0.0.0b55 3390/0a 3990/e9 c0 c0 bf 34400000 00000000
0.0.2fe6 0.0.0b56 3390/0a 3990/e9 c0 c0 bf 34400000 00000000
0.0.2fe7 0.0.0b57 3390/0a 3990/e9 yes c0 c0 ff 34400000 00000000
0.0.7e10 0.0.1828 3390/0c 3990/e9 yes f0 f0 ef 34403541 00000000
```


- This example shows a CHPID with PIM, PAM, and POM masks that are OK, but the entry in the VPM column indicates that one of the paths, 0x41, is not usable for I/O.

```
# lscss --vpm
Device Subchan. DevType CU Type Use PIM PAM POM VPM CHPIDs
-----
0.0.f500 0.0.05cf 1732/01 1731/01 yes 80 80 ff 80 76000000 00000000
0.0.f501 0.0.05d0 1732/01 1731/01 yes 80 80 ff 80 76000000 00000000
0.0.f502 0.0.05d1 1732/01 1731/01 yes 80 80 ff 80 76000000 00000000
0.0.6194 0.0.3700 3390/0c 3990/e9 yes fc fc ff f8 32333435 40410000
0.0.6195 0.0.3701 3390/0c 3990/e9 yes fc fc ff f8 32333435 40410000
0.0.6196 0.0.3702 3390/0c 3990/e9 yes fc fc ff f8 32333435 40410000
0.0.6197 0.0.3703 3390/0c 3990/e9 fc fc ff 00 32333435 40410000
0.2.5600 0.2.0040 1732/03 1731/03 80 80 ff 00 5d000000 00000000
```

## lsdasd - List DASD devices

Use the **lsdasd** command to gather information about DASD devices from sysfs and display it in a summary format.

### lsdasd syntax

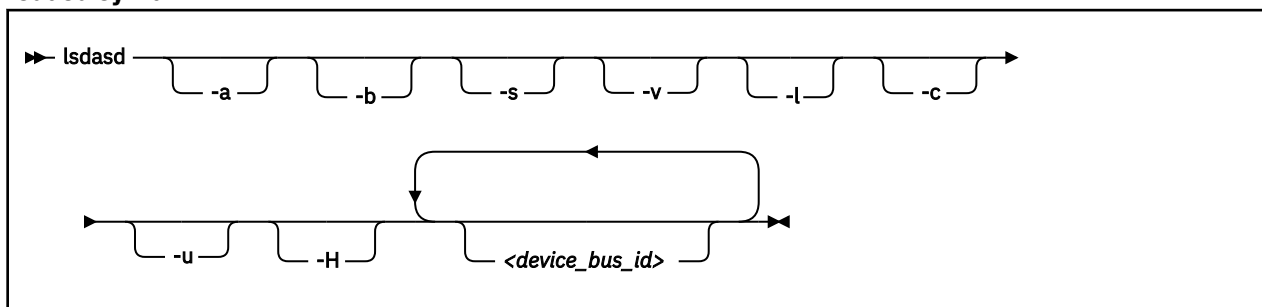

Where:

**-a or --offline**

includes devices that are currently offline.

**-b or --base**

omits PAV alias devices. Lists only base devices.

**-s or --short**

strips the bus ID in the command output down to the four-digit device number.

**-v or --verbose**

Obsolete. This option has no effect on the output.

**-l or --long**

extends the output to include attributes, the UID and path information.

**-c or --compat**

creates output of this command as with versions earlier than 1.7.0.

**-u or --uid**

includes and sorts output by UID.

**-H or --host\_access\_list**

shows information about all operating system instances that use this device.

**--version**

displays the version of the command.

**<device\_bus\_id>**

limits the output to information about the specified devices only.

**-h or --help**

displays a short help text, then exits.

### Examples

- The following command lists all DASD (including offline DASDs):

```
# lsdasd -a
Bus-ID      Status      Name      Device      Type      BlkSz      Size      Blocks
=====
0.0.0190    offline
0.0.0191    offline
0.0.019d    offline
0.0.019e    offline
0.0.0592    offline
0.0.4711    offline
0.0.4712    offline
0.0.4f2c    offline
0.0.4d80    active      dasda     94:0        ECKD      4096      4695MB    1202040
0.0.4f19    active      dasdb     94:4        ECKD      4096      23034MB   5896800
0.0.4d81    active      dasdc     94:8        ECKD      4096      4695MB    1202040
0.0.4d82    active      dasdd     94:12       ECKD      4096      4695MB    1202040
0.0.4d83    active      dasde     94:16       ECKD      4096      4695MB    1202040
```

- The following command shows information only for the DAsD with device number 0x4d80 and strips the bus ID in the command output down to the device number:

```
# lsdasd -s 0.0.4d80
Bus-ID      Status      Name      Device      Type      BlkSz      Size      Blocks
=====
4d80        active      dasda     94:0        ECKD      4096      4695MB    1202040
```

- The following command shows only online DAsDs in the format of **lsdasd** versions earlier than 1.7.0:

```
# lsdasd -c
0.0.4d80(ECKD) at ( 94: 0) is dasda : active at blocksize 4096, 1202040 blocks, 4695 MB
0.0.4f19(ECKD) at ( 94: 4) is dasdb : active at blocksize 4096, 5896800 blocks, 23034 MB
0.0.4d81(ECKD) at ( 94: 8) is dasdc : active at blocksize 4096, 1202040 blocks, 4695 MB
0.0.4d82(ECKD) at ( 94: 12) is dasdd : active at blocksize 4096, 1202040 blocks, 4695 MB
0.0.4d83(ECKD) at ( 94: 16) is dasde : active at blocksize 4096, 1202040 blocks, 4695 MB
```

- The following command shows the device geometry, UID, path information, and some of the settings for the DAsD with device bus-ID 0.0.4d82:

```
lsdasd -l 0.0.4d82
0.0.4d82/dasdd/94:12
status:          active
type:            ECKD
blksz:           4096
size:            4695MB
blocks:          1202040
use_diag:        0
readonly:        0
eer_enabled:     0
explog:          0
hpf:             1
uid:             IBM.75000000010671.4d82.16
paths_installed: 30 31 32 33 3c 3d
paths_in_use:    31 32 33
paths_non_preferred:
paths_invalid_cabling: 3c
paths_cuir_quiesced: 30
paths_invalid_hpf_characteristics: 3d
paths_error_threshold_exceeded:
```

In the example, three of the installed paths are unused for different reasons:

- The path with CHPID 3c is not used because of a cabling error to the storage system. This channel path does not connect to the same physical disk space as the other channel path for this device.
- The path with CHPID 30 is not used because of a control-unit initiated reconfiguration (CUIR).
- The path with CHPID 3d is not used because its High Performance FICON characteristics do not match with the paths currently in use.
- The following command shows whether other operating system instances access device 0.0.bf45:

```
# lsdasd -H bf45
Host information for 0.0.bf45
Path-Group-ID      LPAR  CPU   FL   Status  Sysplex      Max_Cyls      Time
=====
88000d29e72964ce8570b8 0d    29e7  50  ON      TRX1LNX1    268434453      0
88000e29e72964ce8570c3 0e    29e7  50  ON      TRX1LNX1    268434453      0
88000f29e72964ce8570d1 0f    29e7  50  ON      TRX1LNX1    268434453      0
88011d29e72964ce8570d4 1d    29e7  50  ON      TRX1LNX1    268434453      0
88011e29e72964ce8570d9 1e    29e7  50  ON      TRX1LNX1    268434453      0
88011f29e72964ce8570e3 1f    29e7  50  ON      TRX1LNX1    268434453      0
88022d29e72964ce8570e6 2d    29e7  50  ON      TRX1LNX1    268434453      0
88022e29e72964ce8570ea 2e    29e7  50  ON      TRX1LNX1    268434453      0
88022f29e72964ce8570f1 2f    29e7  50  ON      TRX1LNX1    268434453      0
88033d29e72964ce8570f7 3d    29e7  50  ON      TRX1LNX1    268434453      0
88033e29e72964ce8570fe 3e    29e7  50  ON      TRX1LNX1    268434453      0
88033f29e72964ce85710e 3f    29e7  50  ON      TRX1LNX1    268434453      0
80004229e72964ce7dce74 42    29e7  00  OFF      TRX1LNX1    65520          0
80004a29e72964ce7db60d 4a    29e7  00  OFF      TRX1LNX1    65520          0
80003c29e72964ce8481a6 3c    29e7  00  OFF      TRX1LNX1    65520          0
80004629e72964ce7f1c13 46    29e7  70  ON-RSV   TRX1LNX1    65520  1424174863
```

Status values are:

**ON**

The device is online.

**OFF**

The device is offline.

**ON-RSV**

The device is online and reserved.

**OFF-RSV**

The device is offline and reserved by an operating system instance in another LPAR.

The meaning of the columns is as follows:

**Path-group-ID**

A 22-digit hexadecimal number assigned by the operating system when setting the DASD online.  
This ID uniquely identifies the operating system to the storage server.

**LPAR**

A 2 digit LPAR ID.

**CPU**

A 4 digit CPU ID, as it is defined in the HMC or can be read from `/proc/cpuinfo`.

**FL**

A 2 digit hexadecimal flag. 0x20 means reserved, 0x50 means online.

**Sysplex**

The 8-character EBCDIC name of the SYSPLEX.

**MAX\_CYLS**

The maximum number of cylinders per volume that are supported by the host.

**TIME**


Time the device has been reserved in seconds since July 1, 1970.

## lshmc - List media contents in the HMC media drive

Use the **lshmc** command to display the contents of the media in the HMC media drive.

**Before you begin:** To be able to use this command, you need the **hmcdrv** module (see [Chapter 30, “HMC media device driver,”](#) on page 339).

### lshmc syntax

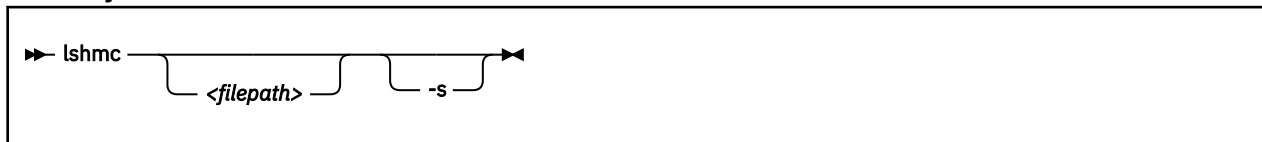

Where:

#### <filepath>

specifies a directory or path to a file to be listed. Path specifications are relative to the root of the file system on the media. You can use the asterisk (\*) and question mark (?) as wildcards. If this specification is omitted, the contents of the root directory are listed.

#### -s or --short

limits the output to regular files in a short listing format. Omits directories, symbolic links, and device nodes and other special files.

#### -v or --version

displays version information for the command.

#### -h or --help

displays a short help text, then exits. To view the man page, enter **man lshmc**.

### Examples

- To list the files in the root directory of the media in the HMC's media drive, issue:

```
# lshmc
```

- If the **hmcdrv** kernel module is not loaded, load it before you issue the **lshmc** command:

```
# modprobe hmcdrv
# lshmc
```

- To list all HTML files in subdirectory **www**, issue:

```
# lshmc /www/*.html
```



## lsluns - Discover LUNs, or show encryption state of attached LUNs

Use the **lsluns** command to list logical unit numbers (LUNs) discovered in the Fibre Channel storage area networks (SAN), or to show the encryption state of zfc-attached LUNs.

**lsluns** is designed for environments where all SCSI devices are attached through the zfc device driver. Expect error messages in mixed environments such as with iSCSI.

**lsluns** lists all LUNs discovered in the Fibre Channel SAN. See [“Discover LUNs in the Fibre Channel storage area network \(SAN\)”](#) on page 589.

**lsluns -a** shows the encryption state of the attached LUNs. See [“Show the encryption state of zfc-attached LUNs”](#) on page 590.

For all other uses, such as listing attached LUNs or properties other than encryption, use other tools such as:

- **lszfc -D** See [“lszfc - List zfc devices”](#) on page 610
- **lszdev zfc-lun -ii** See [“lszdev - Display IBM Z device configurations”](#) on page 605
- **lsscsi -tvxx** See the man page for more details.

### Discover LUNs in the Fibre Channel storage area network (SAN)

Discovering LUNs only makes sense for NPIV-enabled FCP devices without zfc automatic LUN scan. zfc automatic LUN scan is available as of kernel version 2.6.37, if not disabled with `zfc.allow_lun_scan=0`. See [“Setting up the zfc device driver”](#) on page 156.

**Note:** Discovering LUNs causes extra SAN traffic for each target port WWPN.

#### Temporary LUN Attachment


If not attached already, **lsluns** temporarily attaches LUN 0 (or if this fails, the WLUN 0xc101000000000000) during runtime. Do not terminate **lsluns** with a signal. Signals interfere with the removal of temporarily attached LUNs.

#### Storage Products

Some storage products return a peripheral device type of 31==0x1f with peripheral qualifier 0 in a SCSI standard INQUIRY command for an unmapped FCP LUN 0. Examples are: IBM Storwize products, including IBM V7000, IBM V840, IBM V9000, and IBM SAN Volume Controller. For **lsluns** to work with such storage products, you must have a host mapping on the storage side, which maps some volume to exported FCP LUN 0x0000000000000000 (Storwize host map property "SCSI ID" 0) for each used FCP-device initiator WWPN. The volume can be a minimum-sized thin-provisioned shared stand-in volume.

#### lsluns syntax

Filter the listing by specifying one or more FCP device bus-IDs, target port WWPNs, or both.

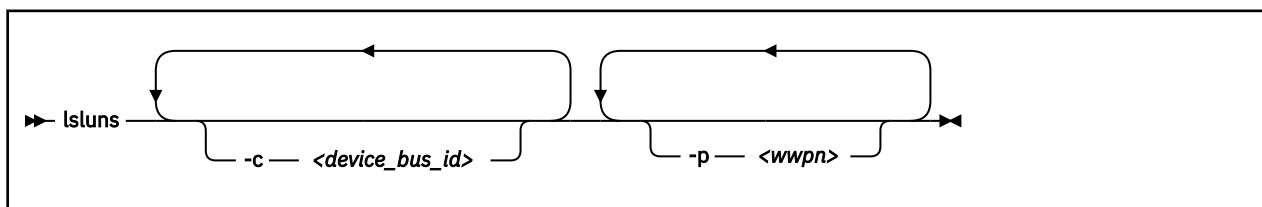

Where:

**-c <device\_bus\_id> or --ccw <device\_bus\_id>**

filters LUNs by one or more adapters with the specified FCP device-bus IDs. When used in conjunction with `-p`, only those LUNs are listed that also satisfy at least one of the `-p` constraints.

**-p <wwpn> or --port <wwpn>**

filters LUNs by one or more target ports with the specified WWPNs. When used in conjunction with `-c`, only those LUNs are listed that also satisfy at least one of the `-c` constraints.

**-v or --version**

displays version information and exits.

**-h or --help**

displays an overview of the syntax. To view the man page, enter **man lsluns**.

**Examples**

- This example lists all LUNs discovered in the FC SAN on adapter 0.0.3922:

```
# lsluns -c 0.0.3922
```

- This example shows all LUNs discovered in the FC SAN on target port 0x500507630300c562:

```
# lsluns -p 0x500507630300c562
Scanning for LUNs on adapter 0.0.5922
  at port 0x500507630300c562:
    0x4010400000000000
    0x4010400100000000
    0x4010400200000000
    0x4010400300000000
    0x4010400400000000
    0x4010400500000000
```

- This example shows all LUNs discovered in the FC SAN on:

- Adapter 0.0.3922 and port 0x5005123456789000
- Adapter 0.0.3922 and port 0x5005abcdefabc000
- Adapter 0.0.fc00 and port 0x5005123456789000
- Adapter 0.0.fc00 and port 0x5005abcdefabc000

```
# lsluns -c 0.0.3922 -c 0.0.fc00 -p 0x5005123456789000 -p 0x5005abcdefabc000
```


**Show the encryption state of zfcP-attached LUNs**

**lsluns -a** shows the encryption state of the attached LUNs.

**Note:** Running **lsluns -a** causes extra SAN traffic for each attached LUN.

**lsluns syntax**

Filter the listing by specifying one or more FCP device bus-IDs, target port WWPNs, or both.

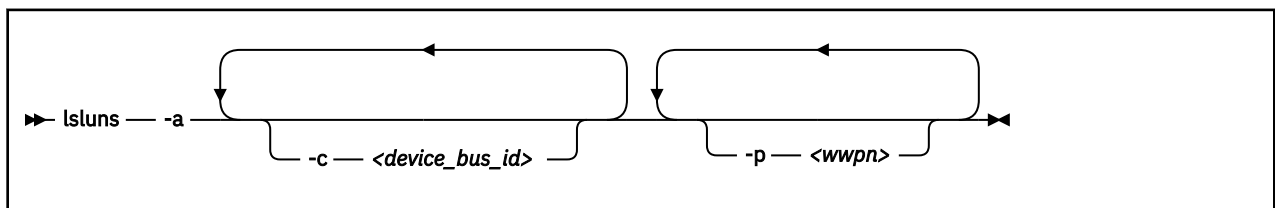

Where:

**-a or --active**

shows the encryption state of the attached LUNs. Encrypted devices are indicated with a bracketed X immediately after the LUN number.

**-c <device\_bus\_id> or --ccw=<device\_bus\_id>**

filters LUNs by one or more adapters with the specified FCP device-bus IDs. When used in conjunction with `-p`, only those LUNs are listed that also satisfy at least one of the `-p` constraints.

**-p <wwpn> or --port=<wwpn>**

filters LUNs by one or more target ports with the specified WWPNs. When used in conjunction with `-c`, only those LUNs are listed that also satisfy at least one of the `-c` constraints.

**-v or --version**

displays version information and exits.

**-h or --help**

displays an overview of the syntax. To view the man page, enter **man lsluns**.

**Examples**

- This example shows the encryption status of attached LUNs:

```
# lsluns -a
adapter = 0.0.3c02
  port = 0x500507630300c562
    lun = 0x401040a200000000(X) /dev/sg0   Disk   IBM:2107900
    lun = 0x401040a300000000      /dev/sg1   Disk   IBM:2107900
    ...
  port = 0x500507630303c562
    ...
adapter = 0.0.593a
  ...
```

The (X) after the LUN number indicates that the device is encrypted.

lsqeth - List qeth-based network devices

Use the **lsqeth** command to display a summary of information about qeth-based network devices.

**Before you begin:** To be able to use this command, you must also install **qethconf** (see “qethconf - Configure qeth devices” on page 625). You install **qethconf** and **lsqeth** with the s390utils RPM.

lsqeth syntax



Where:

- p or --proc**  
displays the interface information in the former /proc/qeth format. This option can generate input to tools that expect this particular format.
- <interface>**  
limits the output to information about the specified interface only.
- h or --help**  
displays a short help text, then exits.

Examples

- The following command lists information about interface encf5a0 in the default format:

```
# lsqeth encf5a0
Device name          : encf5a0
-----
card_type            : OSD_1000
cdev0                 : 0.0.f5a0
cdev1                 : 0.0.f5a3
cdev2                 : 0.0.f5a4
chpid                 : B5
online                : 1
portname              : OSAPORT
portno                : 0
route4                : no
route6                : no
checksumming          : hw checksumming
state                 : UP (LAN ONLINE)
priority_queueing     : always queue 2
fake_broadcast        : 0
buffer_count          : 64
layer2                : 0
large_send            : no
isolation              : none
sniffer               : 0
```

- The following command lists information about all qeth-based interfaces in the former /proc/qeth format:

```
# lsqeth -p
devices              CHPID interface      cardtype      port  chksum prio-q'ing rtr4  rtr6 lay'2 cnt
-----
0.0.833c/0.0.8340/0.0.8341 xFE  enc833c  HiperSockets  0    sw    always_q_2 no   no   0    128
0.0.f5a0/0.0.f5a3/0.0.f5a4 xB5  encf5a0  OSD_1000      0    hw    always_q_2 no   no   0    64
0.0.fba2/0.0.fba3/0.0.fba4 xB0  encfba2  OSD_1000      0    sw    always_q_2 no   no   1    64
```

## lsreipl - List IPL and re-IPL settings

Use the **lsreipl** command to find out which boot device and which options are used if you issue the reboot command.

You can also display information about the current boot device.

### lsreipl syntax

```
lsreipl [-i] [-v] [-h]
```

Where:

#### **-i or --ipl**

displays the IPL setting.

#### **-v or --version**

displays the version number of **lsreipl** and exits.

#### **-h or --help**

displays an overview of the syntax. Any other parameters are ignored.

By default the re-IPL device is set to the current IPL device. Use the chreipl command to change the re-IPL settings.

### Examples

- This example shows the current re-IPL settings:

```
# lsreipl
Re-IPL type:      fcp
WWPN:             0x500507630300c562
LUN:              0x401040b300000000
Device:           0.0.1700
bootprog:         0
br_lba:           0
Loadparm:         ""
Bootparms:        ""
```

# lsscm - List storage-class memory increments

Use the **lsscm** command to list status and other information about available storage-class memory increments.

## lsscm syntax



Where:

**-h or --help**

displays help information for the command. To view the man page, enter **man lsscm**.

**-v or --version**

displays version information for the command.

In the output table, the columns have the following meaning:

**SCM Increment**

Starting address of the storage-class memory increment.

**Size**

Size of the block device that represents the storage-class memory increment.

**Name**

Name of the block device that represents the storage-class memory increment.

**Rank**

A quality ranking in the form of a number in the range 1 - 15 where a lower number means better ranking.

**D\_state**

Data state of the storage-class memory increment. A number that indicates whether there is data on the increment. The data state can be:

**1**

The increment contains zeros only.

**2**

Data was written to the increment.

**3**

No data was written to the increment since the increment was attached.

**O\_state**

Operation state of the storage-class memory increment.

**Pers**

Persistence attribute.

**ResID**

Resource identifier.

## Examples

- This command lists all increments:

```
# lsscm
SCM Increment      Size      Name  Rank D_state O_state Pers ResID
-----
0000000000000000 16384MB scma   1     2     1     2     1
0000000040000000 16384MB scmb   1     2     1     2     1
```

## lsshut - List the current system shutdown actions

Use the **lsshut** command to see how the Linux instance is configured for the halt, poff, reboot, restart, and panic system shutdown triggers.

For more information about the shutdown triggers and possible shutdown actions, see [Chapter 9, “Shutdown actions,”](#) on page 103.

If the action is kdump, a second action might be listed. This second action is the backup action that is taken if kdump fails. See *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718 for details about using kdump.

### lsshut syntax



Where:

- h or --help**  
displays a short help text, then exits.
- v or --version**  
displays the version number of **lsshut** and exits.

### Examples

- To query the configuration issue:

```
# lsshut
Trigger      Action
=====
Halt         stop
Power off    vmcmd (LOGOFF)
Reboot       reipl
Restart      kdump,dump_reipl
Panic        kdump,dump_reipl
```



## lstape - List tape devices

Use the **lstape** command to gather information about tape devices and display it in a summary format.


It gathers information about CCW-attached tape devices and tape devices that are attached to the SCSI bus from sysfs (see [“Displaying tape information”](#) on page 200).

For information about SCSI tape devices, the command uses the following sources for the information displayed:

- The IBMTape or the open source lin\_tape driver.
- The sg\_inq command from the scsi/sg3\_utils package.
- The st (SCSI tape) device driver in the Linux kernel.

If you use the IBMTape or lin\_tape driver, the sg\_inq utility is required. If sg\_inq is missing, certain information about the IBMTape or lin\_tape driver cannot be displayed.

### lstape syntax

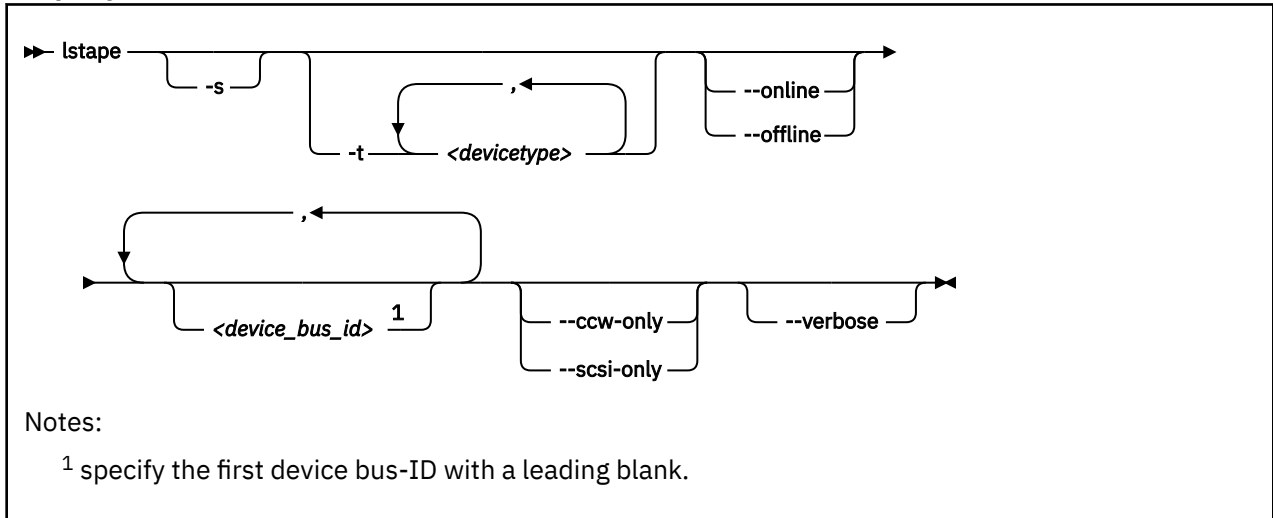

Where:

**-s or --shortid**

strips the "0.<n>." from the device bus-IDs in the command output. For CCW-attached devices only.

**-t or --type**

limits the output to information about the specified type or types of CCW-attached devices only.

**--ccw-only**

limits the output to information about CCW-attached devices only.

**--scsi-only**

limits the output to information about tape devices that are attached to the SCSI bus.

**--online | --offline**

limits the output to information about online or offline CCW-attached tape devices only.

**<device\_bus\_id>**

limits the output to information about the specified tape device or devices only.

**--verbose**

For tape devices attached to the SCSI bus only. Prints the serial of the tape and information about the FCP connection as an additional text line after each SCSI tape in the list.

**-h or --help**

displays a short help text.

**--version**

displays the version of the command.

**Examples**

- This command displays information about all tapes that are found, here one CCW-attached tape and one tape and changer device that is configured for zFCP:

```
#> lstape
FICON/ESCON tapes (found 1):
TapeNo  BusID      CuType/Model  DevType/Model  BlkSize  State  Op   MedState
0        0.0.0480    3480/01       3480/04        auto    UNUSED ---   UNLOADED

SCSI tape devices (found 2):
Generic Device      Target      Vendor      Model      Type      State
sg4      IBMchanger0  0:0:0:0     IBM        03590H11   changer   running
sg5      IBMtape0     0:0:0:1     IBM        03590H11   tapedrv    running
```

If only the st tape device driver and the ch changer device driver are loaded, the output lists those names in the device section:

```
#> lstape
FICON/ESCON tapes (found 1):
TapeNo  BusID      CuType/Model  DevType/Model  BlkSize  State  Op   MedState
0        0.0.0480    3480/01       3480/04        auto    UNUSED ---   UNLOADED

SCSI tape devices (found 2):
Generic Device      Target      Vendor      Model      Type      State
sg0      sch0        0:0:0:0     IBM        03590H11   changer   running
sg1      st0         0:0:0:1     IBM        03590H11   tapedrv    running
```

- This command displays information about all available CCW-attached tapes.

```
# lstape --ccw-only
TapeNo  BusID      CuType/Model  DevType/DevMod  BlkSize  State  Op   MedState
0        0.0.0132    3590/50       3590/11         auto    IN_USE ---   LOADED
1        0.0.0110    3490/10       3490/40         auto    UNUSED ---   UNLOADED
2        0.0.0133    3590/50       3590/11         auto    IN_USE ---   LOADED
3        0.0.012a    3480/01       3480/04         auto    UNUSED ---   UNLOADED
N/A      0.0.01f8    3480/01       3480/04         N/A     OFFLINE ---   N/A
```

- This command limits the output to tapes of type 3480 and 3490.

```
# lstape -t 3480,3490
TapeNo  BusID      CuType/Model  DevType/DevMod  BlkSize  State  Op   MedState
1        0.0.0110    3490/10       3490/40         auto    UNUSED ---   UNLOADED
3        0.0.012a    3480/01       3480/04         auto    UNUSED ---   UNLOADED
N/A      0.0.01f8    3480/01       3480/04         N/A     OFFLINE ---   N/A
```

- This command limits the output to those tapes of type 3480 and 3490 that are currently online.

```
# lstape -t 3480,3490 --online
TapeNo  BusID      CuType/Model  DevType/DevMod  BlkSize  State  Op   MedState
1        0.0.0110    3490/10       3490/40         auto    UNUSED ---   UNLOADED
3        0.0.012a    3480/01       3480/04         auto    UNUSED ---   UNLOADED
```

- This command limits the output to the tape with device bus-ID 0.0.012a and strips the "0.<n>." from the device bus-ID in the output.

```
# lstape -s 0.0.012a
TapeNo  BusID      CuType/Model  DevType/DevMod  BlkSize  State  Op   MedState
3        012a       3480/01       3480/04         auto    UNUSED ---   UNLOADED
```

- This command limits the output to SCSI devices but gives more details. The serial numbers are only displayed if the **sg\_inq** command is found on the system.

```
#> lstape --scsi-only --verbose
Generic Device Target Vendor Model Type State
HBA WWPN
sg0 st0 0:0:0:1 IBM 03590H11 tapedrv running
0.0.1708 0x500507630040727b NO/INQ
sg1 sch0 0:0:0:2 IBM 03590H11 changer running
0.0.1708 0x500507630040727b NO/INQ
```

## Data fields for SCSI tape devices

There are specific data fields for SCSI tape devices.

Table 67. *lstape* data fields for SCSI tape devices

| Attribute | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Generic   | SCSI generic device file for the tape drive (for example /dev/sg0). This attribute is empty if the <b>sg_inq</b> command is not available.                                                                                                                                                                                                                                                                                                                                                                                       |
| Device    | Main device file for accessing the tape drive, for example: <ul style="list-style-type: none"> <li>• /dev/st0 for a tape drive that is attached through the Linux st device driver</li> <li>• /dev/sch0 for a medium changer device that is attached through the Linux changer device driver</li> <li>• /dev/IBMchanger0 for a medium changer that is attached through the IBMtape or lin_tape device driver</li> <li>• /dev/IBMtape0 for a tape drive that is attached through the IBMtape or lin_tape device driver</li> </ul> |
| Target    | The ID in Linux used to identify the SCSI device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Vendor    | The vendor field from the tape drive.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Model     | The model field from the tape drive.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Type      | "Tapedrv" for a tape driver or "changer" for a medium changer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| State     | The state of the SCSI device in Linux. This state is an internal state of the Linux kernel, any state other than "running" can indicate problems.                                                                                                                                                                                                                                                                                                                                                                                |
| HBA       | The FCP device to which the tape drive is attached.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| WWPN      | The WWPN (worldwide port name) of the tape drive in the SAN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Serial    | The serial number field from the tape drive.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## lszcrypt - Display cryptographic devices

Use the **lszcrypt** command to display information about cryptographic adapters that are managed by the cryptographic device driver and its AP bus attributes.

To set the attributes, use [“chzcrypt - Modify the cryptographic configuration”](#) on page 513. The following information can be displayed for each cryptographic adapter:


- The card type
- The online status
- The hardware card type
- The card capability
- The hardware queue depth
- The request count
- The zcrypt submodule or alternative device driver that handles the device

For information about alternative device drivers, see [“Freeing AP queues for KVM guests”](#) on page 447.

The following AP bus attributes can be displayed:

- The default AP domain
- The configuration timer
- The poll thread status
- The poll timeout
- The AP interrupt status

### lszcrypt syntax

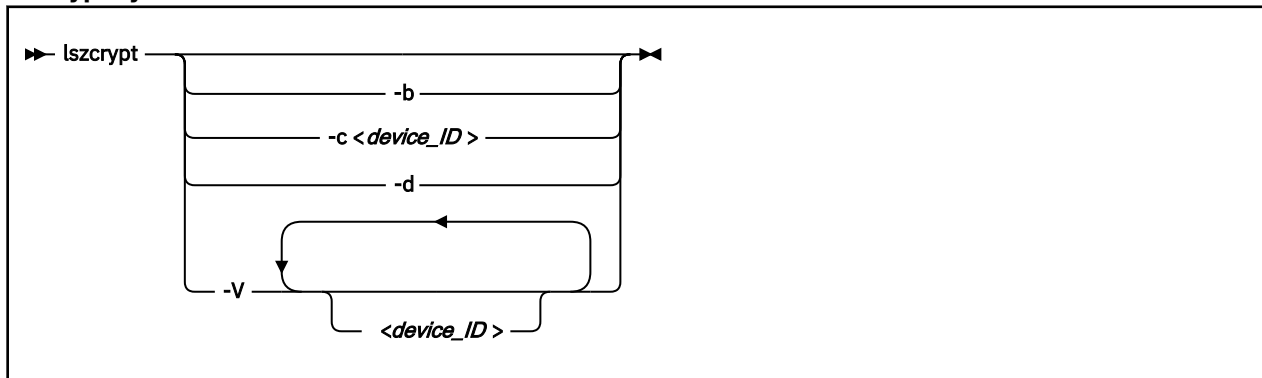

Where:

#### <device ID>

specifies a cryptographic adapter to display. A cryptographic device can be either an adapter ID or an AP queue device. If no devices are specified, information about all available devices is displayed. Both the adapter ID representation and the AP queue device representation are hexadecimal.

#### -b or --bus

displays the AP bus attributes.

#### -c <device ID> or --capability <device ID>

shows the capabilities of a cryptographic adapter as of Crypto Express2 (CEX2). The capabilities of a cryptographic adapter depend on the card type and the installed function facilities. A cryptographic adapter can provide one or more of the following capabilities:

- RSA 2K Clear Key
- RSA 4K Clear Key

- CCA Secure Key (full function set)
- CCA Secure Key (restricted function set)
- EP11 Secure Key
- Long RNG

The restricted function set for CCA Secure Key applies to shared adapters for z/VM guests (see [“Cryptographic devices on z/VM”](#) on page 437).

#### **-d or --domains**

shows the usage and control domains of the cryptographic device. The displayed domains of the cryptographic device depends on the initial cryptographic configuration.

- "C" indicates a control domain
- "U" indicates a usage domain
- "B" indicates both (control and usage domain)

#### **-V or --verbose**

enables the verbose level for cryptographic device information. It displays card type, online status, hardware card type, hardware queue depth, request count, pending request queue count, outstanding request queue count, and installed function facilities.

The installed functions are shown, as a sequence of letters, in the FUNCTION column of the verbose output mode, with the following meaning:

##### **S**

APSC facility available

##### **M and C**

RSA 4096 bit support

##### **D**

CCA Coprocessor function available

##### **A**

Accelerator function available

##### **X**

EP11 Coprocessor function available

##### **N**

APXA facility available

##### **F**

Full function set available

##### **R**

Restricted function set.

Depending on the hypervisor configuration, the hypervisor might filter cryptographic requests to allow only a subset of functions within the virtual runtime environment. For example, a shared CCA Coprocessor can be restricted by the hypervisor to allow only clear-key operations within the guests.

#### **-h or --help**

displays short information about command usage.

#### **-v or --version**

displays version information.

### **Examples**

These examples illustrate common uses for **lszcrypt**.

- To display information about all available cryptographic devices and AP queues:

```
# lszcrypt
```

This command lists all devices grouped by cryptographic device, similar to the following example. The domain IDs are hexadecimal values.

| CARD.DOMAIN | TYPE  | MODE        | STATUS | REQUEST_CNT |
|-------------|-------|-------------|--------|-------------|
| 00          | CEX5A | Accelerator | online | 0           |
| 00.0005     | CEX5A | Accelerator | online | 0           |
| 00.001f     | CEX5A | Accelerator | online | 0           |
| 00.004d     | CEX5A | Accelerator | online | 0           |
| 01          | CEX5C | CCA-Coproc  | online | 26          |
| 01.0005     | CEX5C | CCA-Coproc  | online | 10          |
| 01.001f     | CEX5C | CCA-Coproc  | online | 7           |
| 01.004d     | CEX5C | CCA-Coproc  | online | 9           |
| 05          | CEX5P | EP11-Coproc | online | 0           |
| 05.0005     | CEX5P | EP11-Coproc | online | 0           |
| 05.001f     | CEX5P | EP11-Coproc | online | 0           |
| 05.004d     | CEX5P | EP11-Coproc | online | 0           |

- To display AP bus information:

```
# lszcrypt -b
```

This command displays output similar to the following example:

```
ap_domain=0x6
ap_max_domain_id=0x54
ap_interrupts are enabled
config_time=30 (seconds)
poll_thread is disabled
poll_timeout=250000 (nanoseconds)
```

- To display the capabilities for the cryptographic device with adapter ID 0x0b:

```
# lszcrypt -c 0x0b
```

This command displays output similar to the following example:

```
Coprocessor card0b provides capability for:
CCA Secure Key
RSA 4K Clear Key
Long RNG
```

- To list the usage and control domains of the cryptographic devices:

```
# lszcrypt -d
```

This command displays a table that lists all domains (in hex notation) similar to the following example:

| DOMAIN | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0a | 0b | 0c | 0d | 0e | 0f |
|--------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 00     | .  | .  | .  | .  | .  | .  | B  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 10     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 20     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 30     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 40     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 50     | .  | B  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 60     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 70     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 80     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| 90     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| a0     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| b0     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| c0     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| d0     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| e0     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |
| f0     | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  | .  |

C: Control domain  
U: Usage domain  
B: Both (Control + Usage domain)

- To display detailed information of all available cryptographic devices:

```
# lszcrypt -V
```

This example shows two CEX5S cryptographic devices, one in accelerator mode and the other in CCA coprocessor mode (IDs 0x00, 0x01). It also shows a CEX6P device in EP11 coprocessor mode (ID 0x05). The configured domains are 5 (0x05), 31 (0x1f), and 77 (0x4d). Adapter IDs and domain IDs are hexadecimal values.

```
lszcrypt -V
CARD.DOMAIN TYPE MODE STATUS REQUESTS PENDING HWTYPE QDEPTH FUNCTIONS DRIVER
-----
00          CEX5A Accelerator online 159433 19 11 08 -MC-A-NF- cex4card
00.0005    CEX5A Accelerator online 53078 5 11 08 -MC-A-NF- cex4queue
00.001f    CEX5A Accelerator online 53157 5 11 08 -MC-A-NF- cex4queue
00.004d    CEX5A Accelerator - 0 0 11 08 -MC-A-NF- -no-driver-
01          CEX5C CCA-Coproc online 0 0 11 08 S--D--NF- cex4card
01.0005    CEX5C CCA-Coproc - 0 0 11 08 S--D--NF- -no-driver-
01.001f    CEX5C CCA-Coproc - 0 0 11 08 S--D--NF- -no-driver-
01.004d    CEX5C CCA-Coproc - 0 0 11 08 S--D--NF- -no-driver-
05          CEX6P EP11-Coproc online 240073 13 12 08 ----XNF- cex4card
05.0005    CEX6P EP11-Coproc online 80060 3 12 08 ----XNF- cex4queue
05.001f    CEX6P EP11-Coproc online 79984 3 12 08 ----XNF- cex4queue
05.004d    CEX6P EP11-Coproc - 0 0 12 08 ----XNF- -no-driver-
...
```

"-no-driver-" in the DRIVER column means that the AP queue has freed for use by alternative device drivers (see [“Freeing AP queues for KVM guests”](#) on page 447), but no such device driver is available. In the example, the vfi0-ap device driver is not loaded otherwise "vfi0\_ap" would be displayed instead of "-no-driver-".

In the example, all domains for adapter 0x01 and domain 0x004d on all adapters have been freed from control by zcrypt. AP queues that are not handled by the zcrypt device driver are omitted from the non-verbose listing.

```
lszcrypt
CARD.DOMAIN TYPE MODE STATUS REQUESTS
-----
00          CEX5A Accelerator online 159433
00.0005    CEX5A Accelerator online 53078
00.001f    CEX5A Accelerator online 53157
01          CEX5C CCA-Coproc online 0
05          CEX6P EP11-Coproc online 240073
05.0005    CEX6P EP11-Coproc - 80060
05.001f    CEX6P EP11-Coproc - 79984
...
```

- To display the device ID and the installed function facility in hexadecimal notation as well as card type, online status, hardware card type, hardware queue depth, request count, pending request queue count, outstanding request queue count, and installed function facilities:

```
# lszcrypt -V 0x00 0x03 0x0b
```

This command displays output similar to the following example:

| CARD.DOMAIN | TYPE  | MODE        | STATUS | REQUESTS | PENDING | HWTYPE | QDEPTH | FUNCTIONS | DRIVER    |
|-------------|-------|-------------|--------|----------|---------|--------|--------|-----------|-----------|
| 00          | CEX5A | Accelerator | online | 2        | 0       | 11     | 08     | -MC-A-NF- | cex4card  |
| 00.0041     | CEX5A | Accelerator | online | 2        | 0       | 11     | 08     | -MC-A-NF- | cex4queue |
| 03          | CEX5C | CCA-Coproc  | online | 1631     | 0       | 11     | 08     | S--D--NF- | cex4card  |
| 03.0041     | CEX5C | CCA-Coproc  | online | 1631     | 0       | 11     | 08     | S--D--NF- | cex4queue |
| 0b          | CEX5P | EP11-Coproc | online | 3088     | 0       | 11     | 08     | -----XNF- | cex4card  |
| 0b.0041     | CEX5P | EP11-Coproc | online | 3088     | 0       | 11     | 08     | -----XNF- | cex4queue |

**Tip:** In the device specification you can also use one-digit hexadecimal or decimal notation. The following specifications are all equivalent:

- 0x0 0x2 0xb
- 0x00 0x02 0x0b
- 0 2 11



## lszdev - Display IBM Z device configurations


Use the **lszdev** command to display the configuration of devices and device drivers that are specific to IBM Z. Supported device types include storage devices (DASD and zFCP) and networking devices (QETH, CTC, and LCS).

Configuration information is taken from three sources: the active configuration of the currently running system, the persistent configuration stored in configuration files, and the auto-configuration from the Support Element (SE). By default, **lszdev** displays information from all available sources. If no auto-configuration data is displayed, the mainframe model does not support such data, or none has been specified. For details about the auto-configuration, see [Chapter 3, “Device auto-configuration for Linux in LPAR mode,”](#) on page 19.


The **lszdev** command supports two different views:

- The list view provides overview information for selected devices in list form with configurable columns (default)
- The details view provides detailed per-device information

### lszdev main syntax

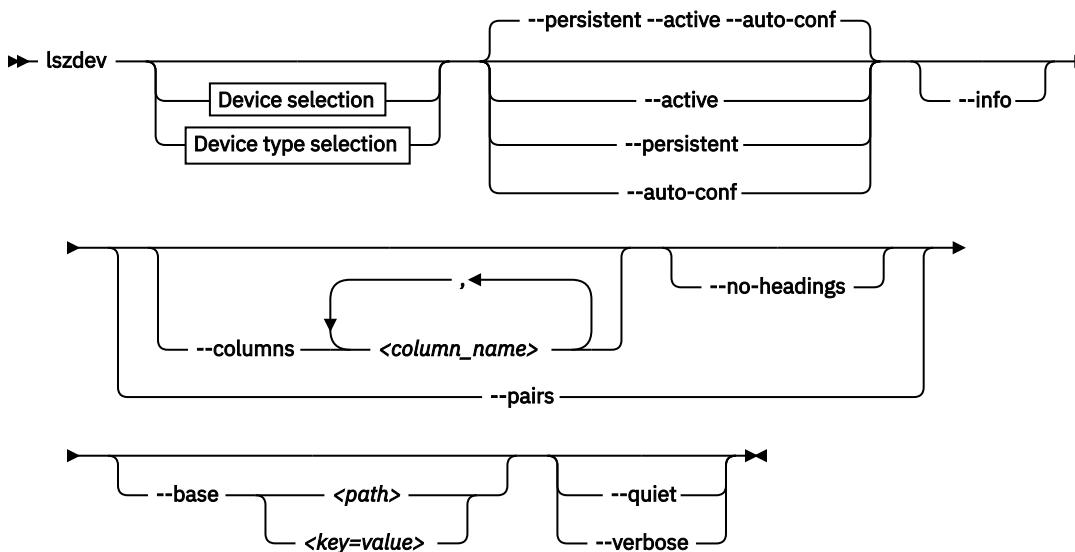

### Device selection

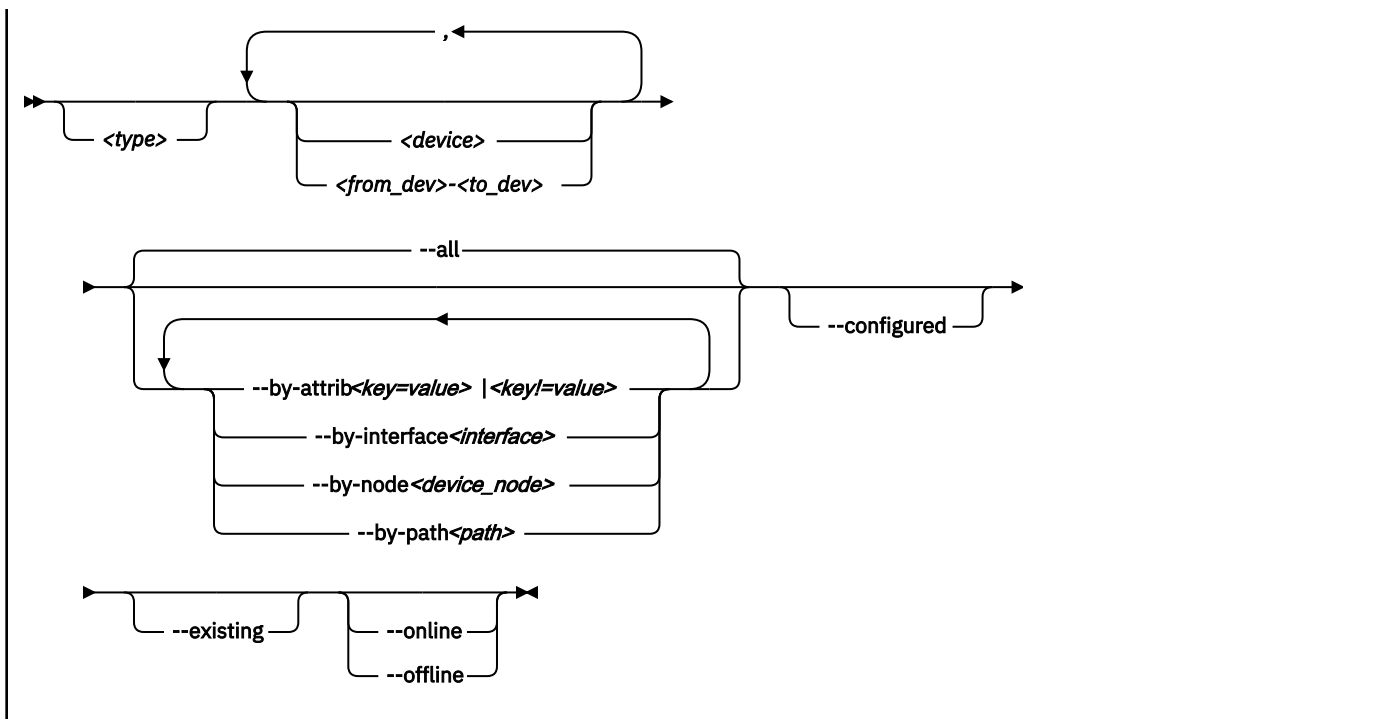

### Device type selection

» **<type>** — **--type** ◀

### lszdev help functions

» **lszdev** — **--list-types** ◀  
**--list-columns**  
**--help**  
**--version**

Where:

#### <type>

restricts the output to the specified device type. A device type typically corresponds to a device driver. Multiple device types are sometimes provided for the same driver, for example, both "dasd-eckd" and "dasd-fba" are related to the DASD device driver. You can work with types in the following ways:

- To display data for devices with matching type and ID only, specify a device type and a device ID, for example:

```
# lszdev dasd 0.0.8000
```

- To display the configuration of the device type itself, specify a device type together with the **--type** option, for example:

```
# lszdev dasd --type
```

To get a list of supported device types, use the **--list-types** option.

**<device>**

limits the output to information about a single device or a range of devices by device ID. To select a range of devices, specify the ID of the first and the last device in the range separated by a hyphen (-). Specify multiple IDs or ID ranges by separating IDs with a comma (,).

**--all**

lists all existing and configured devices. This option is the default.

**--by-attrib <key=value> | <key!=value>**

selects devices with a specified attribute, <key> that has a value of <value>. When specified as <key!=value>, lists all devices that do not provide an attribute named <key> with a value of <value>.

**Tip:** You can use the `--list-attributes` option to display a list of available attributes and the `--help-attribute` to get more detailed information about a specific attribute.

**--by-interface <interface>**

selects devices by network interface, for example, `encl5a0`. The <interface> parameter must be the name of an existing networking interface.

**--by-node <node>**

selects devices by device node, for example, `/dev/sda`. The <node> must be the path to a block device or character device special file.

**Note:** If <node> is the device node for a logical device (such as a device mapper device), **lszdev** tries to resolve the corresponding physical device nodes. The **lsblk** tool must be available for this resolution to work.

**--by-path <path>**

selects devices by file-system path, for example, `/usr`. The <path> parameter can be the mount point of a mounted file system, or a path on that file system.

**Note:** If the file system that provides <path> is stored on multiple physical devices (such as supported by btrfs), **lszdev** tries to resolve the corresponding physical device nodes. The **lsblk** tool must be available and the file system must provide a valid UUID for this resolution to work.

**--configured**

narrows the selection to those devices for which a persistent configuration exists.

**--existing**

narrows the selection to devices that are present in the active configuration.

**--online**

narrows the selection to devices that are enabled in the active configuration.

**--offline**

narrows the selection to devices that are disabled in the active configuration.

**-a or --active**

lists information obtained from the active configuration, that is, information from the running system.

**-p or --persistent**

lists information from the persistent configuration.

**--auto-conf**

lists information from the auto-configuration, see [Chapter 3, “Device auto-configuration for Linux in LPAR mode,”](#) on page 19.

**-i or --info**

displays detailed information about the configuration of the selected device or device type.

**-c or --columns <columns>**

specifies a comma-separated list of columns to display.

Example:

```
# lszdev --columns TYPE,ID
```

**Tip:** To get a list of supported column names, use the `--list-columns` option.

**-n or --no-headings**

suppresses column headings for list output.

**--pairs**

produces output in `<key="value">` format. Use this option to generate output in a format more suitable for processing by other programs. In this format, column values are prefixed with the name of the corresponding column. Values are enclosed in double quotation marks. The **lszdev** command automatically escapes quotation marks and slashes that are part of the value string.

**--base <path> | <key=value>**

changes file system paths that are used to access files. If `<path>` is specified without an equal sign (=), it is used as base path for accessing files in the active and persistent configuration. If the specified parameter is in `<key=value>` format, only those paths that begin with `<key>` are modified. For these paths, the initial `<key>` portion is replaced with `<value>`.

Example:

```
# lszdev --active --base /etc=/mnt/etc
```

**-t or --type <device\_type>**

lists information about a device type. Use this option to display configuration information of a device type instead of a device.

**-q or --quiet**

prints only minimal run-time information.

**-V or --verbose**

prints additional run-time information.

**-L or --list-types**

lists all available device types that you can use with the `--type` option.

**-l or --list-columns**

lists all available columns that you can use with the `--columns` option.

**-h or --help**

displays help information for the command.

**-v or --version**

displays the version number of **lszdev**, then exits.

**Input files**

The **lszdev** command uses these input files:

**/etc/udev/rules.d/**

**lszdev** reads udev rules that represent the persistent configuration of devices from this directory. The udev rules are named `41-<device subtype>-<id>.rules`.

**/etc/modprobe.d/**

**lszdev** reads modprobe configuration files that represent the persistent configuration of certain device types from this directory. File names start with `s390x-`.

**/usr**

**lszdev** reads udev rules that represent the auto-configuration of devices from this directory.

**Examples**

- To display a list of all devices in the currently active configuration:

```
# lszdev --active
```


- To return type and ID of root device in machine-readable format in the currently active configuration:

```
# lszdev --active --columns TYPE,ID --by-path /
```

- To display DASD driver settings in the currently active configuration:

```
# lszdev --active --type dasd
```

## lszfcg syntax

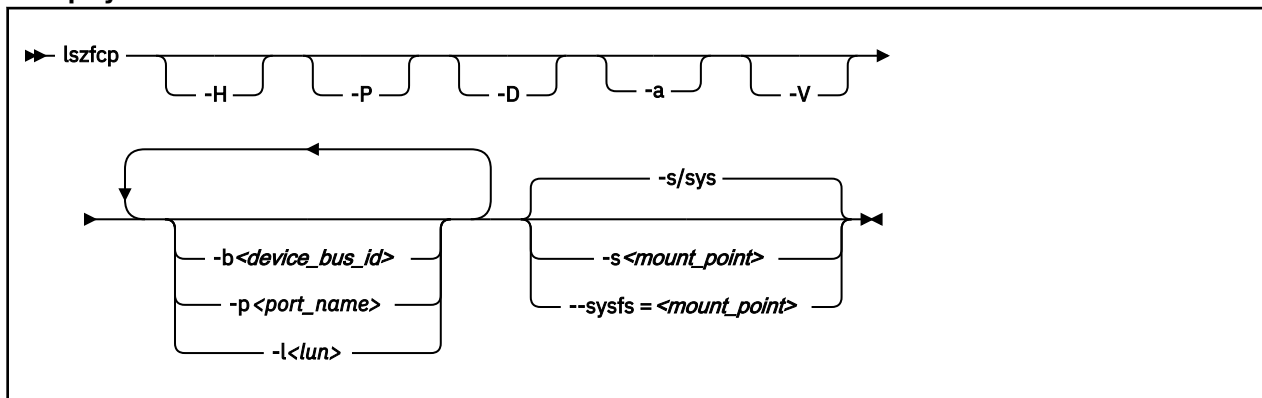

displays a short help text.

- This command displays information about all available hosts, ports, and SCSI devices.

```
# lszfcp -H -D -P
0.0.3d0c host0
0.0.500c host1
...
0.0.3c0c host5
0.0.3d0c/0x500507630300c562 rport-0:0-0
0.0.3d0c/0x50050763030bc562 rport-0:0-1
0.0.3d0c/0x500507630303c562 rport-0:0-2
0.0.500c/0x50050763030bc562 rport-1:0-0
...
0.0.3c0c/0x500507630303c562 rport-5:0-2
0.0.3d0c/0x500507630300c562/0x4010403200000000 0:0:0:0
0.0.3d0c/0x500507630300c562/0x4010403300000000 0:0:0:1
0.0.3d0c/0x50050763030bc562/0x4010403200000000 0:0:1:0
0.0.3d0c/0x500507630303c562/0x4010403200000000 0:0:2:0
0.0.500c/0x50050763030bc562/0x4010403200000000 1:0:0:0
...
0.0.3c0c/0x500507630303c562/0x4010403200000000 5:0:2:0
```

- This command shows SCSI devices and limits the output to the devices that are attached through the FCP device with bus ID 0.0.3d0c:

```
# lszfcp -D -b 0.0.3d0c
0.0.3d0c/0x500507630300c562/0x4010403200000000 0:0:0:0
0.0.3d0c/0x500507630300c562/0x4010403300000000 0:0:0:1
0.0.3d0c/0x50050763030bc562/0x4010403200000000 0:0:1:0
0.0.3d0c/0x500507630303c562/0x4010403200000000 0:0:2:0
```

# mon\_fsstatd – Monitor z/VM guest file system size

The **mon\_fsstatd** command is a user space daemon that collects physical file system size data from Linux on z/VM.

The daemon periodically writes the data as defined records to the z/VM monitor stream using the monwriter character device driver.

You can start the daemon with the systemd service unit mon\_fsstatd. When the daemon is started as a service unit, it reads the configuration file /etc/sysconfig/mon\_fsstatd.

**Before you begin:**

- Install the monwriter device driver and set up z/VM to start the collection of monitor sample data. See [Chapter 35, “Writing z/VM monitor records,” on page 367](#) for information about the setup for and usage of the monwriter device driver.
- Customize the configuration file /etc/sysconfig/mon\_fsstatd if you plan to call it as a systemd service.

The following publications provide general information about DCSSs, DIAG x'DC', CP commands, and APPLDATA:

- See *z/VM: Saved Segments Planning and Administration*, SC24-6322 for general information about DCSSs.
- See *z/VM: CP Programming Services*, SC24-6272 for information about the DIAG x'DC' instruction.
- See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the CP commands.
- See *z/VM: Performance*, SC24-6301 for information about monitor APPLDATA.

You can run the **mon\_fsstatd** command in two ways:

- Calling mon\_fsstatd as a systemd service. This method reads the configuration file /etc/sysconfig/mon\_fsstatd.
- Calling mon\_fsstatd from a command line.

## mon\_fsstatd systemd service syntax

If you run the **mon\_fsstatd** daemon as a systemd service unit, you configure the daemon through specifications in a configuration file.



Where:

**start**

starts monitoring of guest file system size, using the configuration in /etc/sysconfig/mon\_fsstatd.

**stop**

stops monitoring of guest file system size.



**status**

shows current status of guest file system size monitoring.

**restart**

stops and restarts monitoring.

**reload**

reloads the configuration. Use **reload** to re-read the configuration file when it was changed.

**enable**

starts the service automatically at boot time.

**disable**

disables automatic start of the service at boot time.

**Configuration file keywords****FSSTAT\_INTERVAL="*<n>*"**

specifies the wanted sampling interval in seconds.

**Examples of systemd service unit use**

This example configuration file for `mon_fsstatd` (`/etc/sysconfig/mon_fsstatd`) sets the sampling interval to 30 seconds:

```
FSSTAT_INTERVAL="30"
```

Example of `mon_fsstatd` use. Note that your output can look different and include messages for other daemons, such as `mon_procd`:

- To start guest file system size monitoring:

```
# systemctl start mon_fsstatd
```

- To display the status:

```
# systemctl status mon_fsstatd
| mon_fsstatd.service - Monitor z/VM guest file system size
...
Active: active (running) since Wed 2018-02-21 14:52:11 CET; 4s ago
```

- To stop guest file system size monitoring:

```
# systemctl stop mon_fsstatd
```

- To display the status again and check that monitoring is now stopped:


```
# systemctl status mon_fsstatd
| mon_fsstatd.service - Monitor z/VM guest file system size
...
Active: inactive (dead)
...
```

- To restart the daemon and re-read the configuration file:

```
# systemctl restart mon_fsstatd
```

**mon\_fsstatd command-line syntax**

If you call the **mon\_fsstatd** daemon from the command line, you configure the daemon through command parameters.

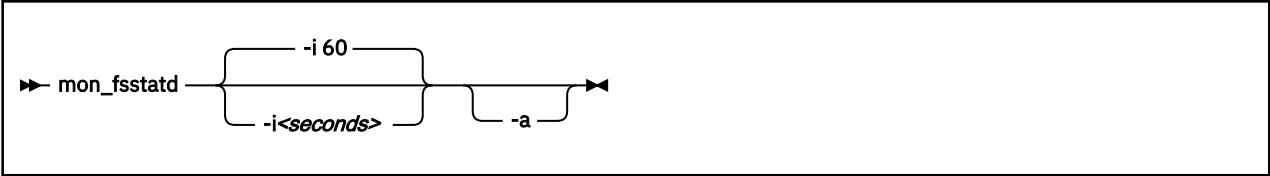

Where:

- i or --interval <seconds>**  
specifies the wanted sampling interval in seconds.
- a or --attach**  
runs the daemon in the foreground.
- h or --help**  
displays help information for the command.
- v or --version**  
displays version information for the command.

Examples of command-line use

- To start `mon_fsstatd` with default setting:

```
> mon_fsstatd
```

- To start `mon_fsstatd` with a sampling interval of 30 seconds:

```
> mon_fsstatd -i 30
```

- To start `mon_fsstatd` and have it run in the foreground:

```
> mon_fsstatd -a
```

- To start `mon_fsstatd` with a sampling interval of 45 seconds and have it run in the foreground:

```
> mon_fsstatd -a -i 45
```

Processing monitor data

The `mon_fsstatd` daemon writes physical file system size data for Linux on z/VM to the z/VM monitor stream.

The following is the format of the file system size data that is passed to the z/VM monitor stream. One sample monitor record is written for each physical file system that is mounted at the time of the sample interval. The monitor data in each record contains a header consisting of a time stamp, the length of the data, and an offset. The header is followed by the file system data (as obtained from `statvfs`). The file system data fields begin with "fs\_".

| Table 68. File system size data format |             |                                                                                                            |
|----------------------------------------|-------------|------------------------------------------------------------------------------------------------------------|
| Type                                   | Name        | Description                                                                                                |
| __u64                                  | time_stamp  | Time at which the file system data was sampled.                                                            |
| __u16                                  | data_len    | Length of data that follows the header.                                                                    |
| __u16                                  | data_offset | Offset from start of the header to start of file system data (that is, to the fields that begin with fs_). |

Table 68. File system size data format (continued)

| Type               | Name        | Description                                                                                                                                                                                       |
|--------------------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| __u16              | fs_name_len | Length of the file system name. The file system name can be too long to fit in the monitor record. If so, this length is the portion of the name that is contained in the monitor record.         |
| char [fs_name_len] | fs_name     | The file system name. If the name is too long to fit in the monitor record, the name is truncated to the length in the fs_name_len field.                                                         |
| __u16              | fs_dir_len  | Length of the mount directory name. The mount directory name can be too long to fit in the monitor record. If so, this length is the portion of the name that is contained in the monitor record. |
| char[fs_dir_len]   | fs_dir      | The mount directory name. If the name is too long to fit in the monitor record, the name is truncated to the length in the fs_dir_len field.                                                      |
| __u16              | fs_type_len | Length of the mount type. The mount type can be too long to fit in the monitor record. If so, this length is the portion that is contained in the monitor record.                                 |
| char[fs_type_len]  | fs_type     | The mount type (as returned by getmntent). If the type is too long to fit in the monitor record, the type is truncated to the length in the fs_type_len field.                                    |
| __u64              | fs_bsize    | File system block size.                                                                                                                                                                           |
| __u64              | fs_fsize    | Fragment size.                                                                                                                                                                                    |
| __u64              | fs_blocks   | Total data blocks in file system.                                                                                                                                                                 |
| __u64              | fs_bfree    | Free blocks in fs.                                                                                                                                                                                |
| __u64              | fs_bavail   | Free blocks avail to non-superuser.                                                                                                                                                               |
| __u64              | fs_files    | Total file nodes in file system.                                                                                                                                                                  |
| __u64              | fs_ffree    | Free file nodes in fs.                                                                                                                                                                            |
| __u64              | fs_favail   | Free file nodes available to non-superuser.                                                                                                                                                       |
| __u64              | fs_flag     | Mount flags.                                                                                                                                                                                      |

Use the time\_stamp to correlate all file systems that were sampled in a given interval.

## Reading the monitor data

All records that are written to the z/VM monitor stream begin with a product identifier.

The product ID is a 16-byte structure of the form pppppppffnnvrrmm, where for records that are written by mon\_fsstatd, these values are:

### ppppppp

is a fixed ASCII string LNXAPPL.

### ff

is the application number for mon\_fsstatd = x'0001'.

### n

is the record number = x'00'.

## mon\_procd

### vv

is the version number = x'0000'.

### rr

is reserved for future use and should be ignored.

### mm

is reserved for mon\_fsstatd and should be ignored.

**Note:** Though the mod\_level field (mm) of the product ID varies, there is no relationship between any particular mod\_level and file system. The mod\_level field should be ignored by the reader of this monitor data.

There are many tools available to read z/VM monitor data. One such tool is the Linux monreader character device driver. For more information about monreader, see [Chapter 36, “Reading z/VM monitor records,”](#) on page 371.

## mon\_procd – Monitor Linux on z/VM

---

The **mon\_procd** command is a user space daemon that gathers system summary information and information about up to 100 concurrent processes on Linux on z/VM.

The daemon writes this data to the z/VM monitor stream using the monwriter character device driver. You can start the daemon as a systemd service mon\_procd or call it manually. When it is called as a systemd service unit, it reads the configuration file /etc/sysconfig/mon\_procd.

### Before you begin:

- Install the monwriter device driver and set up z/VM to start the collection of monitor sample data. See [Chapter 35, “Writing z/VM monitor records,”](#) on page 367 for information about the setup for and usage of the monwriter device driver.
- Customize the configuration file /etc/sysconfig/mon\_procd if you plan to call it as a systemd service unit.
- The Linux instance on which the mon\_procd daemon runs requires a z/VM guest virtual machine with the OPTION APPLMON statement in the CP directory entry.

The following books provide general information about DCSSs, CP commands, and APPLDATA:


- See *z/VM: Saved Segments Planning and Administration*, SC24-6322 for general information about DCSSs.
- See *z/VM: CP Commands and Utilities Reference*, SC24-6268 for information about the CP commands.
- See *z/VM: Performance*, SC24-6301 for information about monitor APPLDATA.

You can run the **mon\_procd** command in two ways:

- Calling **mon\_procd** as a systemd service. This method reads the configuration file /etc/sysconfig/mon\_procd.
- Calling **mon\_procd** manually from a command line.

### mon\_procd systemd service syntax

If you run the **mon\_procd** daemon as a systemd service unit, you configure the daemon through specifications in a configuration file.

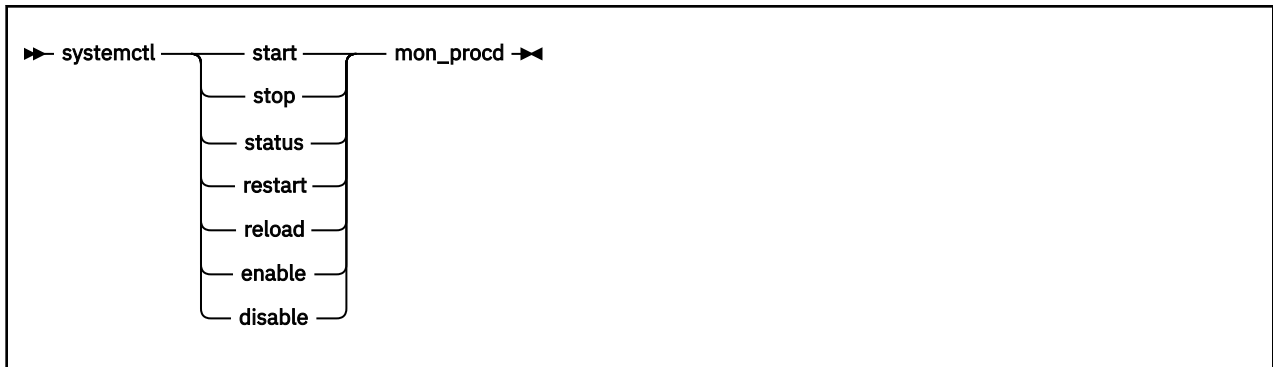

Where:

#### **start**

starts monitoring of guest process data, using the configuration in `/etc/sysconfig/mon_procd`.

#### **stop**

stops monitoring of guest process data.

#### **status**

shows current status of guest process data monitoring.

#### **restart**

stops and restarts guest process data monitoring.

#### **reload**

reloads the configuration. Use **reload** to re-read the configuration file when it was changed.

#### **enable**

starts the service automatically at boot time.

#### **disable**

disables automatic start of the service at boot time.

### **Configuration file keywords**

#### **PROC\_INTERVAL="*<n>*"**

specifies the wanted sampling interval in seconds.

#### **PROC="yes | no"**

specifies whether to enable the `mon_procd` daemon. Set to "yes" to enable the daemon. Anything other than "yes" is interpreted as "no".

### **Examples of systemd service unit use**

This example configuration file for `mon_procd` (`/etc/sysconfig/mon_procd`) sets the process monitoring interval to 60 seconds:

```
PROC_INTERVAL=60
```

Examples of `mon_procd` use:

- To start guest process data monitoring:

```
# systemctl start mon_procd
```

- To display the status:

```
# systemctl status mon_procd
| mon_procd.service - Monitor Linux on z/VM
...
Active: active (running) since Mon 2018-02-26 12:16:00 CET; 4s ago
```

- To stop guest process data monitoring:

## mon\_procd

```
# systemctl stop mon_procd
```

- To display the status again and check that monitoring is now stopped:


```
# systemctl status mon_procd
| mon_procd.service - Monitor Linux on z/VM
...
Active: inactive (dead)
...
```

- To restart the daemon and re-read the configuration file:

```
# systemctl restart mon_procd
```

## mon\_procd command-line syntax

If you call the **mon\_procd** daemon from the command line, you configure the daemon through command parameters.

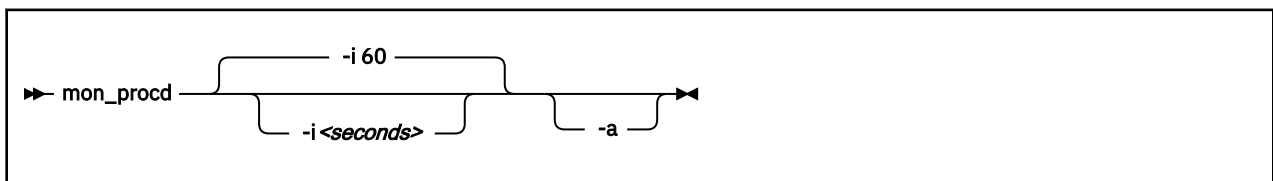

Where:

- i <seconds> or --interval <seconds>**  
specifies the wanted sampling interval in seconds.
- a or --attach**  
runs the daemon in the foreground.
- h or --help**  
displays help information for the command.
- v or --version**  
displays version information for the command.

## Examples of command-line use

- To start **mon\_procd** with default setting:

```
> mon_procd
```

- To start **mon\_procd** with a sampling interval of 30 seconds:

```
> mon_procd -i 30
```

- To start **mon\_procd** and have it run in the foreground:

```
> mon_procd -a
```

- To start **mon\_procd** with a sampling interval of 45 seconds and have it run in the foreground:

```
> mon_procd -a -i 45
```

## Processing monitor data

The **mon\_procd** daemon writes process data to the z/VM monitor stream.

The data includes system summary information and information of each process for up to 100 processes currently being managed by an instance of Linux on z/VM to the z/VM monitor stream. At the time of the

sample interval, one sample monitor record is written for system summary data. Then, one sample monitor record is written for each process for up to 100 processes currently being managed by the Linux instance. If more than 100 processes exist in a Linux instance at a given time, processes are sorted by the sum of CPU and memory usage percentage values. Only the top 100 processes' data is written to the z/VM monitor stream.

The monitor data in each record begins with a header (a time stamp, the length of the data, and the offset). The data after the header depends on the field "record number" of the 16-bit product ID and can be summary data or process data. See [“Reading the monitor data”](#) on page 621 for details. The following is the format of system summary data that is passed to the z/VM monitor stream.

| <i>Table 69. System summary data format</i> |               |                                                                                                                 |
|---------------------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------|
| Type                                        | Name          | Description                                                                                                     |
| __u64                                       | time_stamp    | Time at which the process data was sampled.                                                                     |
| __u16                                       | data_len      | Length of data that follows the header.                                                                         |
| __u16                                       | data_offset   | Offset from start of the header to the start of the process data.                                               |
| __u64                                       | uptime        | Uptime of the Linux instance.                                                                                   |
| __u32                                       | users         | Number of users on the Linux instance.                                                                          |
| char[6]                                     | loadavg_1     | Load average over the last 1 minute.                                                                            |
| char[6]                                     | loadavg_5     | Load average over the last 5 minutes.                                                                           |
| char[6]                                     | loadavg_15    | Load average over the last 15 minutes.                                                                          |
| __u32                                       | task_total    | total number of tasks on the Linux instance.                                                                    |
| __u32                                       | task_running  | Number of running tasks.                                                                                        |
| __u32                                       | task_sleeping | Number of sleeping tasks.                                                                                       |
| __u32                                       | task_stopped  | Number of stopped tasks.                                                                                        |
| __u32                                       | task_zombie   | Number of zombie tasks.                                                                                         |
| __u32                                       | num_cpus      | Number of CPUs.                                                                                                 |
| __u16                                       | puser         | A number that represents (100 * percentage of total CPU time used for normal processes executing in user mode). |
| __u16                                       | pnice         | A number that represents (100 * percentage of total CPU time used for niced processes executing in user mode).  |
| __u16                                       | psystem       | A number that represents (100 * percentage of total CPU time used for processes executing in kernel mode).      |
| __u16                                       | pidle         | A number that represents (100 * percentage of total CPU idle time).                                             |
| __u16                                       | piowait       | A number that represents (100 * percentage of total CPU time used for I/O wait).                                |
| __u16                                       | pirq          | A number that represents (100 * percentage of total CPU time used for interrupts).                              |
| __u16                                       | psoftirq      | A number that represents (100 * percentage of total CPU time used for softirqs).                                |
| __u16                                       | psteal        | A number that represents (100 * percentage of total CPU time spent in stealing).                                |

Table 69. System summary data format (continued)

| Type  | Name         | Description                         |
|-------|--------------|-------------------------------------|
| __u64 | mem_total    | Total memory in KB.                 |
| __u64 | mem_used     | Used memory in KB.                  |
| __u64 | mem_free     | Free memory in KB.                  |
| __u64 | mem_buffers  | Memory in buffer cache in KB.       |
| __u64 | mem_pgpgin   | Data that is read from disk in KB.  |
| __u64 | mem_pgpgout  | Data that is written to disk in KB. |
| __u64 | swap_total   | Total swap memory in KB.            |
| __u64 | swap_used    | Used swap memory in KB.             |
| __u64 | swap_free    | Free swap memory in KB.             |
| __u64 | swap_cached  | Cached swap memory in KB.           |
| __u64 | swap_pswpin  | Pages that are swapped in.          |
| __u64 | swap_pswpout | Pages that are swapped out.         |

The following is the format of a process information data that is passed to the z/VM monitor stream.

Table 70. Process data format

| Type  | Name        | Description                                                                                                  |
|-------|-------------|--------------------------------------------------------------------------------------------------------------|
| __u64 | time_stamp  | Time at which the process data was sampled.                                                                  |
| __u16 | data_len    | Length of data following the header.                                                                         |
| __u16 | data_offset | Offset from start of the header to the start of the process data.                                            |
| __u32 | pid         | ID of the process.                                                                                           |
| __u32 | ppid        | ID of the process parent.                                                                                    |
| __u32 | euid        | Effective user ID of the process owner.                                                                      |
| __u16 | tty         | Device number of the controlling terminal or 0.                                                              |
| __s16 | priority    | Priority of the process                                                                                      |
| __s16 | nice        | Nice value of the process.                                                                                   |
| __u32 | processor   | Last used processor.                                                                                         |
| __u16 | pcpu        | A number that represents (100 * percentage of the elapsed cpu time used by the process since last sampling). |
| __u16 | pmem        | A number that represents (100 * percentage of physical memory used by the process).                          |
| __u64 | total_time  | Total cpu time the process used.                                                                             |
| __u64 | ctotal_time | Total cpu time the process and its dead child processes used.                                                |
| __u64 | size        | Total virtual memory that is used by the task in KB.                                                         |
| __u64 | swap        | Swapped out portion of the virtual memory in KB.                                                             |
| __u64 | resident    | Non-swapped physical memory that is used by the task in KB.                                                  |



Table 70. Process data format (continued)

| Type               | Name         | Description                                                                                                                       |
|--------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------|
| __u64              | trs          | Physical memory that is devoted to executable code in KB.                                                                         |
| __u64              | drs          | Physical memory that is devoted to other than executable code in KB.                                                              |
| __u64              | share        | Shared memory that is used by the task in KB.                                                                                     |
| __u64              | dt           | Dirty page count.                                                                                                                 |
| __u64              | majflt       | Number of major page faults occurred for the process.                                                                             |
| char               | state        | Status of the process.                                                                                                            |
| __u32              | flags        | The process current scheduling flags.                                                                                             |
| __u16              | ruser_len    | Length of real user name of the process owner and should not be larger than 64.                                                   |
| char[ruser_len]    | ruser        | Real user name of the process owner. If the name is longer than 64, the name is truncated to the length 64.                       |
| __u16              | euser_len    | Length of effective user name of the process owner and should not be larger than 64.                                              |
| char[euser_len]    | euser        | Effective user name of the process owner. If the name is longer than 64, the name is truncated to the length 64.                  |
| __u16              | egroup_len   | Length of effective group name of the process owner and should not be larger than 64.                                             |
| char[egroup_len]   | egroup       | Effective group name of the process owner. If the name is longer than 64, the name is truncated to the length 64.                 |
| __u16              | wchan_len    | Length of sleeping in function's name and should not be larger than 64.                                                           |
| char[wchan_len]    | wchan_name   | Name of sleeping in function or '-'. If the name is longer than 64, the name is truncated to the length 64.                       |
| __u16              | cmd_len      | Length of command name or program name that is used to start the process and should not be larger than 64.                        |
| char[cmd_len]      | cmd          | Command or program name that is used to start the process. If the name is longer than 64, the name is truncated to the length 64. |
| __u16              | cmd_line_len | Length of command line that is used to start the process and should not be larger than 1024.                                      |
| char[cmd_line_len] | cmd_line     | Command line that is used to start the process. If the name is longer than 1024, the name is truncated to the length 1024.        |

Use the time\_stamp to correlate all process information that were sampled in a given interval.

## Reading the monitor data

All records written to the z/VM monitor stream begin with a product identifier.

The product ID is a 16-byte structure of the form pppppppffnvvrrmm, where for records that are written by mon\_procd, these values are:

**ppppppp**

is a fixed ASCII string LNXAPPL.

## mon\_procd

### ff

is the application number for mon\_procd = x'0002'.

### n

is the record number as follows:

- x'00' indicates summary data.
- x'01' indicates process data.

### vv

is the version number = x'0000'.

### rr

is the release number, which can be used to mark different versions of process APPLDATA records.

### mm

is reserved for mon\_procd and should be ignored.

**Note:** Though the mod\_level field (mm) of the product ID varies, there is no relationship between any particular mod\_level and process. The mod\_level field should be ignored by the reader of this monitor data.

This item uses at most 101 monitor buffer records from the monwriter device driver. A maximum number of buffers is set when a monwriter module is loaded. Because of this, the maximum number of buffers must not be less than the sum of buffer records that are used by all monwriter applications.

There are many tools available to read z/VM monitor data. One such tool is the Linux monreader character device driver. For more information about monreader, see [Chapter 36, “Reading z/VM monitor records,” on page 371](#).


## qetharp - Query and purge OSA and HiperSockets ARP data

Use the **qetharp** command to query and purge address data such as MAC and IP addresses from the ARP cache of the OSA and HiperSockets hardware.

### Before you begin:

- The **qetharp** command applies only to devices in layer 3 mode (see “Layer 2 and layer 3” on page 212).
- The **qetharp** command supports IPv6 only for real HiperSockets and z/VM guest LAN HiperSockets.
- For HiperSockets, z/VM guest LAN and VSWITCH interfaces, the **qetharp** command supports only the **--query** option.

### qetharp syntax

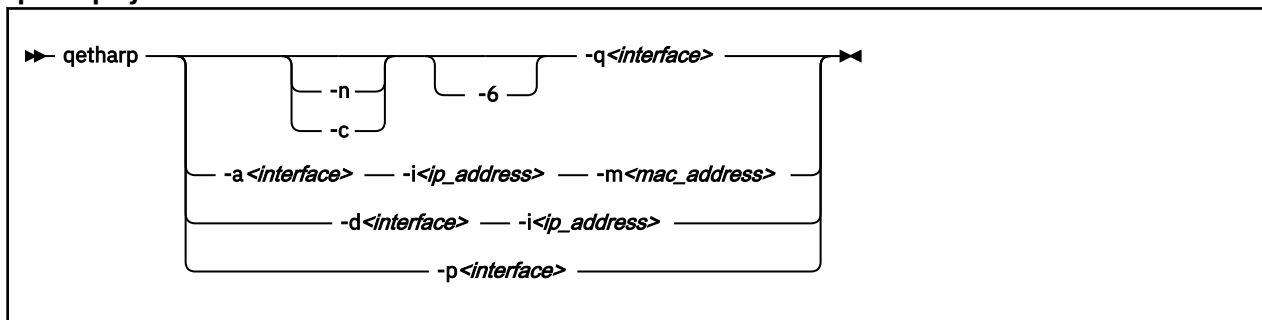

Where:

#### -q or --query

shows the address resolution protocol (ARP) information about the specified network interface. Depending on the device that the interface was assigned to, this information is obtained from an OSA feature's ARP cache or a HiperSockets ARP cache.

The default command output shows symbolic host names and includes only numerical addresses for host names that cannot be resolved. Use the **-n** option to show numerical addresses instead of host names.

By default, **qetharp** omits IPv6 related information. Use the **-6** option to include IPv6 information for HiperSockets.

#### -n or --numeric

shows numeric addresses instead of trying to determine symbolic host names. This option can be used only with the **-q** option.

#### -c or --compact

limits the output to numeric addresses only. This option can be used only with the **-q** option.

#### -6 or --ipv6

includes IPv6 information for HiperSockets. For real HiperSockets, shows the IPv6 addresses. For guest LAN HiperSockets, shows the IPv6 to MAC address mappings. This option can be used only with the **-q** option.

#### <interface>

specifies the qeth interface to which the command applies.

#### -a or --add

adds a static ARP entry to the OSA adapter. Static entries can be deleted with **-d**.

#### -d or --delete

deletes a static ARP entry from the OSA adapter. Static entries are created with **-a**.

**-p or --purge**

flushes the ARP cache of the OSA. The cache contains dynamic ARP entries, which the OSA adapter creates through ARP queries. After flushing the cache, the OSA adapter creates new dynamic entries. This option works only with OSA devices. qetharp returns immediately.

**-i <ip\_address> or --ip <ip\_address>**

specifies the IP address to be added to or removed from the OSA adapter.

**-m <mac\_address> or --mac <mac\_address>**

specifies the MAC address to be added to the OSA adapter.

**-v or --version**

shows version information and exits

**-h or --help**

displays usage information and exits. To view the man page, enter **man qetharp**.

**Examples**

- Show all ARP entries of the OSA defined as encf500:

```
# qetharp -q encf500
```

- Show all ARP entries of the HiperSockets interface that is defined as enca1c0 including IPv6 entries:

```
qetharp -6q enca1c0
```

- Show all ARP entries of the OSA defined as encf500, without resolving host names:

```
# qetharp -nq encf500
```

- Show all ARP entries, including IPv6 entries, of the HiperSockets interface that is defined as enca1c0 without resolving host names:

```
qetharp -n6q enca1c0
```

- Flush the OSA ARP cache for encf500:

```
# qetharp -p encf500
```

- Add a static entry for encf500 and IP address 1.2.3.4 to the OSA ARP cache, with MAC address aa:bb:cc:dd:ee:ff:

```
# qetharp -a encf500 -i 1.2.3.4 -m aa:bb:cc:dd:ee:ff
```

- Delete the static entry for encf500 and IP address 1.2.3.4 from the OSA ARP cache.

```
# qetharp -d encf500 -i 1.2.3.4
```

## qethconf - Configure qeth devices

Use the **qethconf** command to configure IP address takeover, virtual IP address (VIPA), and proxy ARP for layer3 qeth devices.


See [Chapter 15, “qeth device driver for OSA-Express \(QDIO\) and HiperSockets,” on page 207](#) for details about the following concepts:

- IP address takeover
- VIPA (virtual IP address)
- Proxy ARP

You cannot use this command with the layer2 option.

From the arguments that are specified, **qethconf** assembles the function command and redirects it to the corresponding sysfs attributes. You can also use **qethconf** to list the already defined entries.

### qethconf syntax

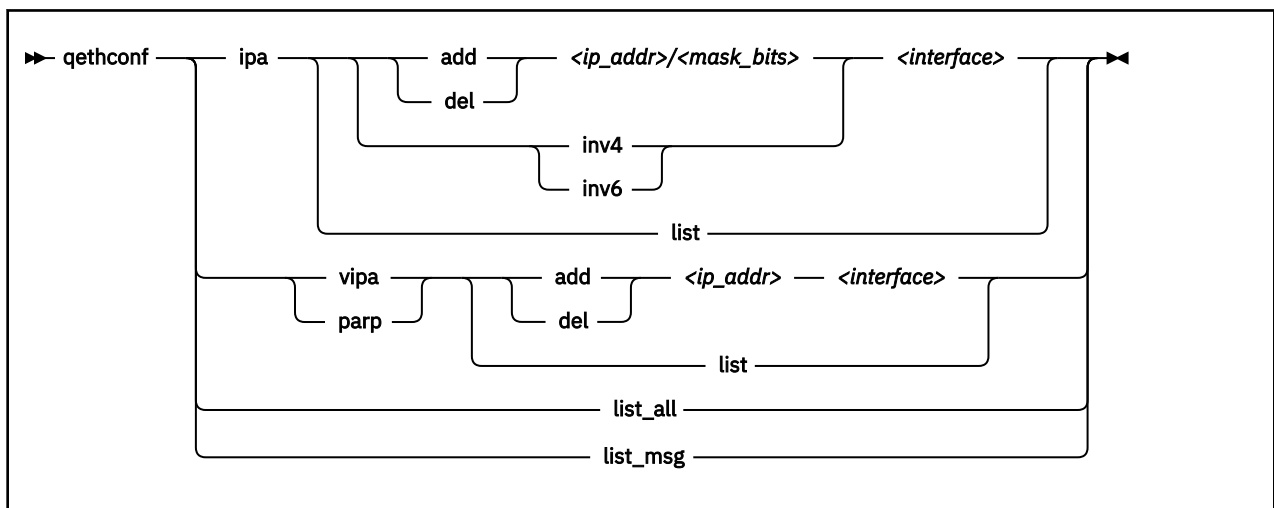

The **qethconf** command has these function keywords:

**ipa**  
configures qeth for IP address takeover (IPA).

**vipa**  
configures qeth for virtual IP address (VIPA).

**parp or rxip**  
configures qeth for proxy ARP.

The **qethconf** command has these action keywords:

**add**  
adds an IP address or address range.

**del**  
deletes an IP address or address range.

**inv4**  
inverts the selection of address ranges for IPv4 address takeover. This inversion makes the list of IP addresses that was specified with **qethconf add** and **qethconf del** an exclusion list.

**inv6**  
inverts the selection of address ranges for IPv6 address takeover. This inversion makes the list of IP addresses that was specified with **qethconf add** and **qethconf del** an exclusion list.

**list**

lists existing definitions for specified qeth function.

**list\_all**

lists existing definitions for IPA, VIPA, and proxy ARP.

**<ip\_addr>**

IP address. Can be specified in one of these formats:

- IP version 4 format, for example, 192.168.10.38
- IP version 6 format, for example, FE80::1:800:23e7:f5db
- 8- or 32-character hexadecimals prefixed with -x, for example, -xc0a80a26

**<mask\_bits>**

specifies the number of bits that are set in the network mask. Enables you to specify an address range.

**Example:** A <mask\_bits> of 24 corresponds to a network mask of 255.255.255.0.

**<interface>**

specifies the name of the interface that is associated with the specified address or address range.

**list\_msg**

lists **qethconf** messages and explanations.

**-h or --help**

displays help information.

**-v or --version**

displays version information.

**Examples**

- List existing proxy ARP definitions:

```
# qethconf parp list
parp add 1.2.3.4 encf500
```

- Assume responsibility for packages that are destined for 1.2.3.5:

```
# qethconf parp add 1.2.3.5 encf500
qethconf: Added 1.2.3.5 to /sys/class/net/encf500/device/rxip/add4.
qethconf: Use "qethconf parp list" to check for the result
```

Confirm the new proxy ARP definitions:

```
# qethconf parp list
parp add 1.2.3.4 encf500
parp add 1.2.3.5 encf500
```

- Configure encf500 for IP address takeover for all addresses that start with 192.168.10:

```
# qethconf ipa add 192.168.10.0/24 encf500
qethconf: Added 192.168.10.0/24 to /sys/class/net/encf500/device/ipa_takeover/add4
qethconf: Use "qethconf ipa list" to check for the result
```

Display the new IP address takeover definitions:

```
# qethconf ipa list
ipa add 192.168.10.0/24 encf500
```

- Configure VIPA for ence400:

```
# qethconf vipa add 10.99.3.3 ence400
qethconf: Added 10.99.3.3 to /sys/class/net/ence400/device/vipa/add4.
qethconf: Use "qethconf vipa list" to check for the result
```

Display the new VIPA definitions:

```
# qethconf vipa list
vipa add 10.99.3.3 ence400
```

- List all existing IPA, VIPA, and proxy ARP definitions.


```
# qethconf list_all
parp add 1.2.3.4 encf500
parp add 1.2.3.5 encf500
ipa add 192.168.10.0/24 encf500
vipa add 10.99.3.3 ence400
```

## qethqoat - Query OSA address table

### Purpose

Use the **qethqoat** command to query the OSA address table and display physical and logical device information.

### qethqoat syntax

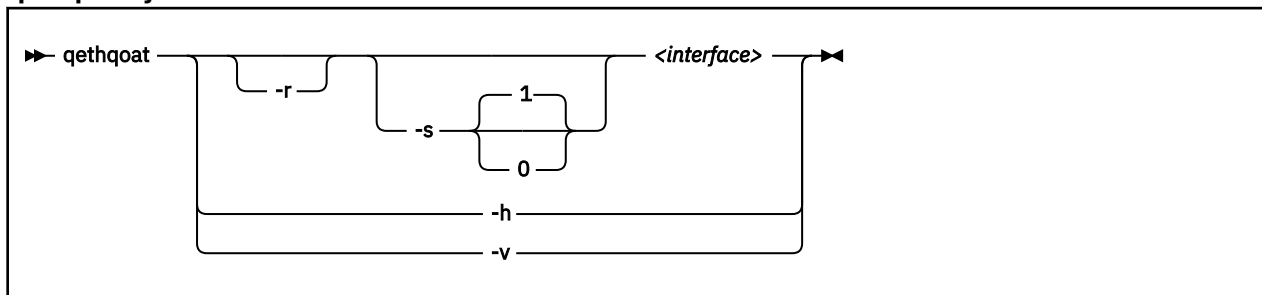

where:

#### **-r or --raw**

writes raw data to stdout.

#### **-s or --scope**

defines the scope of the query. The following values are valid:

**0**

queries the level of the OSA address table

**1**

interface (this is the default)

#### **<interface>**

specifies the interface for which you want to display information.

#### **-h or --help**

displays help information. To view the man page, enter **man qethqoat**.

#### **-v or --version**

displays version information.

### Examples

To display physical and logical device information for interface encf500, issue:



```

# qethqoat encf500
PCHID: 0x0310
CHPID: 0xa9
Manufacturer MAC address: 6c:ae:8b:48:0b:68
Configured MAC address: 00:00:00:00:00:00
Data device sub-channel address: 0xf402
CULA: 0x00
Unit address: 0x02
Physical port number: 0
Number of output queues: 1
Number of input queues: 1
Number of active input queues: 0
CHPID Type: OSD
Interface flags: 0x0a000000
OSA Generation: OSA-Express7S
Port speed/mode: 25 Gb/s / full duplex

Port media type: multi mode (SR/SX)
Jumbo frames: yes
Firmware: 0x00000c9a

IPv4 router: no
IPv6 router: no
IPv4 vmac router: no
IPv6 vmac router: no
Connection isolation: not active
Connection isolation VEPA: no
IPv4 assists enabled: 0x00111c77
IPv6 assists enabled: 0x00f15c60
IPv4 outbound checksum enabled: 0x0000003a
IPv6 outbound checksum enabled: 0x00000000
IPv4 inbound checksum enabled: 0x0000003a
IPv6 inbound checksum enabled: 0x00000000

IPv4 Multicast Address:      MAC Address:
-----
224.0.0.1                  01:00:5e:00:00:01

IPv6 Address:                IPA Flags:
-----
fe80::6cae:8b00:748:b68    0x00000000

IPv6 Multicast Address:      MAC Address:
-----
ff01::1                    33:33:00:00:00:01
ff02::1                    33:33:00:00:00:01
ff02::1:ff48:b68          33:33:ff:48:0b:68
ff02::1:3                  33:33:00:01:00:03

```

This example uses scope 0 to query the supported OAT level and descriptor header types.

```

# qethqoat -s 0 encf500
Supported Scope mask: 0x00000001
Supported Descriptor hdr types: 0x0001070f

```

This example shows how the binary output from **qethqoat** can be processed in another tool. Here it is displayed in a hexdump viewer:


```
# qethqoat -r encf500 | hexdump
00000000 0158 0000 0008 0000 0000 0101 0000 0000
00000010 0000 0001 0000 0000 0000 0000 0000 0000
00000020 0004 0050 0001 0000 0000 0000 d7c8 4040
00000030 0120 0094 001a 643b 8a22 0000 0000 0000
00000040 e102 0002 0000 0004 0001 0000 0800 0000
00000050 0100 0480 0000 0766 0000 0000 0000 0000
00000060 0000 0000 0000 0000 0000 0000 0000 0000
00000070 0008 0060 0001 0000 0000 0000 d3c8 4040
00000080 0000 0000 0000 0000 0000 0000 0000 0000
00000090 0000 0000 0000 0000 0000 0000 0011 1c77
000000a0 0021 5c60 0000 001a 0000 0000 0000 001a
000000b0 0000 0000 0000 0000 0000 0000 0000 0000
000000c0 0002 0000 0000 0000 0000 0000 0000 0000
000000d0 0010 0030 0001 0000 0000 0000 c4c8 f4d4
000000e0 0000 0002 0000 0000 0000 0001 0000 0010
000000f0 0001 0001 0000 0000 0000 0000 0000 0000
00001000 e000 0001 0100 5e00 0001 0000 0000 0000
00001100 0010 0030 0001 0000 0000 0000 c4c8 f6d4
00001200 0000 0008 0000 0000 0000 0001 0000 0018
00001300 0001 0001 0000 0000 0000 0000 0000 0000
00001400 ff02 0000 0000 0000 0000 0000 0000 0001
00001500 3333 0000 0001 0000
0000158
```

## scsi\_logging\_level - Set and get the SCSI logging level

Use the **scsi\_logging\_level** command to create, set, or get the SCSI logging level.

The SCSI logging feature is controlled by a 32-bit value – the SCSI logging level. This value is divided into 3-bit fields that describe the log level of a specific log area. Due to the 3-bit subdivision, setting levels or interpreting the meaning of current levels of the SCSI logging feature is not trivial. The `scsi_logging_level` script helps with both tasks.

### scsi\_logging\_level syntax

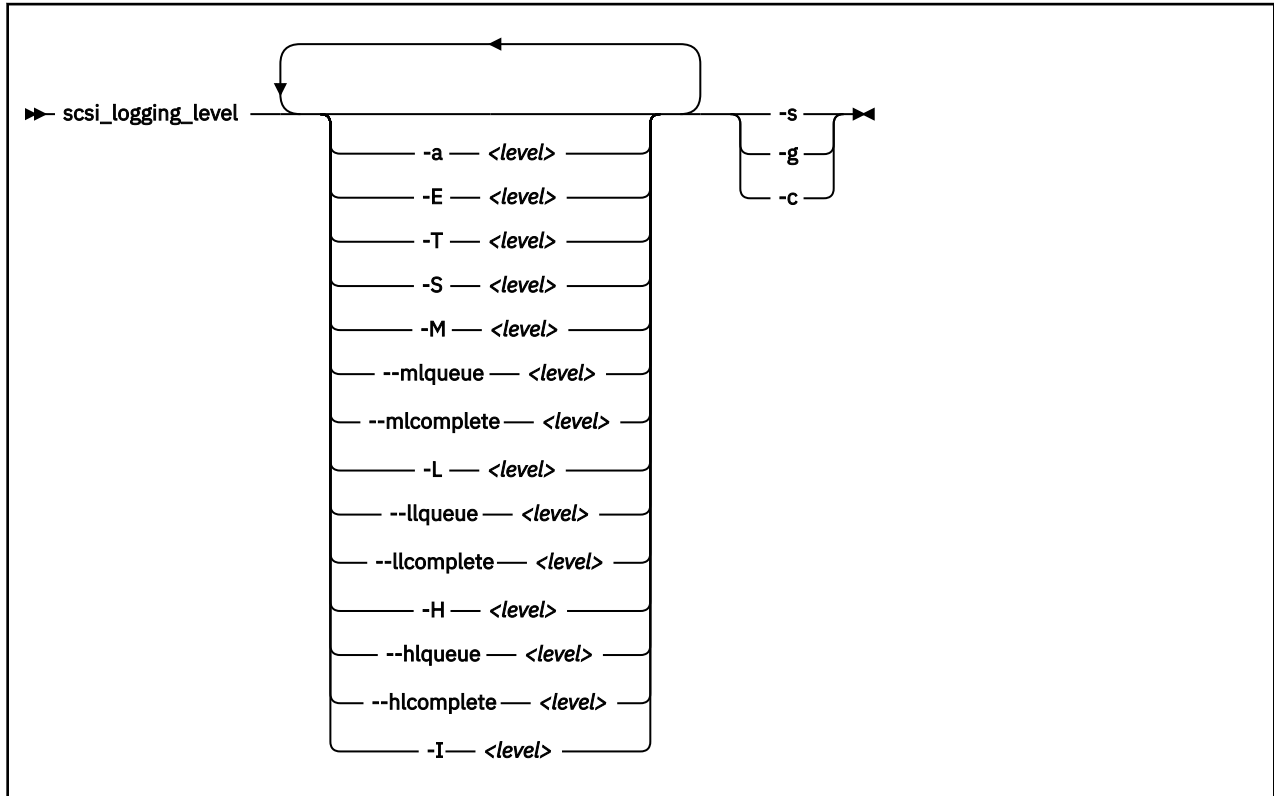

Where:

- a <level> or --all <level>**  
specifies value for all SCSI\_LOG fields.
- E <level> or --error <level>**  
specifies SCSI\_LOG\_ERROR.
- T <level> or --timeout <level>**  
specifies SCSI\_LOG\_TIMEOUT.
- S <level> or --scan <level>**  
specifies SCSI\_LOG\_SCAN.
- M <level> or --midlevel <level>**  
specifies SCSI\_LOG\_MLQUEUE and SCSI\_LOG\_MLCOMPLETE.
- mlqueue <level>**  
specifies SCSI\_LOG\_MLQUEUE.
- mlcomplete <level>**  
specifies SCSI\_LOG\_MLCOMPLETE.
- L <level> or --lowlevel <level>**  
specifies SCSI\_LOG\_LLQUEUE and SCSI\_LOG\_LLCOMPLETE.

## scsi\_logging\_level

- llqueue <level>**  
specifies SCSI\_LOG\_LLQUEUE.
- llcomplete <level>**  
specifies SCSI\_LOG\_LLCOMPLETE.
- H or --highlevel <level>**  
specifies SCSI\_LOG\_HLQUEUE and SCSI\_LOG\_HLCOMPLETE.
- hlqueue <level>**  
specifies SCSI\_LOG\_HLQUEUE.
- hlcomplete <level>**  
specifies SCSI\_LOG\_HLCOMPLETE.
- I <level> or --ioctl <level>**  
specifies SCSI\_LOG\_IOCTL.
- v or --version**  
displays version information.
- h or --help**  
displays help text.
- s or --set**  
creates and sets the logging level as specified on the command line.
- g or --get**  
gets the current logging level.
- c or --create**  
creates the logging level as specified on the command line.

You can specify several SCSI\_LOG fields by using several options. When multiple options specify the same SCSI\_LOG field, the most specific option has precedence.

### Examples

- This command prints the logging word of the SCSI logging feature and each logging level.

```
#> scsi_logging_level -g
Current scsi logging level:
dev.scsi.logging_level = 0
SCSI_LOG_ERROR=0
SCSI_LOG_TIMEOUT=0
SCSI_LOG_SCAN=0
SCSI_LOG_MLQUEUE=0
SCSI_LOG_MLCOMPLETE=0
SCSI_LOG_LLQUEUE=0
SCSI_LOG_LLCOMPLETE=0
SCSI_LOG_HLQUEUE=0
SCSI_LOG_HLCOMPLETE=0
SCSI_LOG_IOCTL=0
```

- This command is useful to find issues with LUN discovery and SCSI error handling (recovery), such as caused by dirty fibre optics, and has only negligible impact on regular I/O:

```
#> scsi_logging_level -s --mlcomplete 1 -T 7 -E 5 -S 7 -I 0 -a 0
New scsi logging level:
dev.scsi.logging_level = 4605
SCSI_LOG_ERROR=5
SCSI_LOG_TIMEOUT=7
SCSI_LOG_SCAN=7
SCSI_LOG_MLQUEUE=0
SCSI_LOG_MLCOMPLETE=1
SCSI_LOG_LLQUEUE=0
SCSI_LOG_LLCOMPLETE=0
SCSI_LOG_HLQUEUE=0
SCSI_LOG_HLCOMPLETE=0
SCSI_LOG_IOCTL=0
```

- This command sets all logging levels to 3:

```
#> scsi_logging_level -s -a 3
New scsi logging level:
dev.scsi.logging_level = 460175067
SCSI_LOG_ERROR=3
SCSI_LOG_TIMEOUT=3
SCSI_LOG_SCAN=3
SCSI_LOG_MLQUEUE=3
SCSI_LOG_MLCOMPLETE=3
SCSI_LOG_LLQUEUE=3
SCSI_LOG_LLCOMPLETE=3
SCSI_LOG_HLQUEUE=3
SCSI_LOG_HLCOMPLETE=3
SCSI_LOG_IOCTL=3
```

- This command sets SCSI\_LOG\_HLQUEUE=3, SCSI\_LOG\_HLCOMPLETE=2 and assigns all other SCSI\_LOG fields the value 1.

```
# scsi_logging_level --hlqueue 3 --highlevel 2 --all 1 -s
New scsi logging level:
dev.scsi.logging_level = 174363209
SCSI_LOG_ERROR=1
SCSI_LOG_TIMEOUT=1
SCSI_LOG_SCAN=1
SCSI_LOG_MLQUEUE=1
SCSI_LOG_MLCOMPLETE=1
SCSI_LOG_LLQUEUE=1
SCSI_LOG_LLCOMPLETE=1
SCSI_LOG_HLQUEUE=3
SCSI_LOG_HLCOMPLETE=2
SCSI_LOG_IOCTL=1
```

## smc\_pnet - Create network mapping table


Use the **smc\_pnet** command to map a RoCE adapter port to an Ethernet interface.

The SMC-R protocol requires grouping of standard Ethernet and RoCE networks. Such groups are called physical networks (PNETs). Within the same Converged Ethernet fabric, any available Ethernet interface can be combined with an available RDMA-capable network interface card.

**Note:** The mapping of a RoCE adapter port to a standard Ethernet interface can be defined in the IOCDS or it can be defined as an entry in a PNET table. Only use the **smc\_pnet** command if the IOCDS does not contain the required PNET IDs. IOCDS specifications override PNET table entries that are created with **smc\_pnet**.

### smc\_pnet syntax

►► smc\_pnet ►►

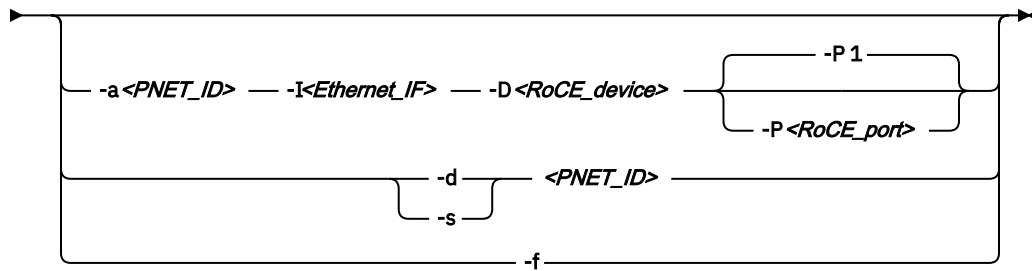

Enter **smc\_pnet** without parameters to display all entries in the PNET table.

**-a <PNET\_ID> or --add <PNET\_ID>**

creates a new entry in the PNET table and allocates the specified ID, if it does not already exist. Only one entry can be defined for a specific Ethernet interface and a specific Infiniband device port. A PNET ID consists of up to 16 alphanumeric uppercase characters without blanks.

**-I <Ethernet\_IF> or --interface <Ethernet\_IF>**

specifies the name of the Ethernet interface for a new PNET.

**-D <RoCE\_device> or --ibdevice <RoCE\_device>**

specifies the name of the RoCE device for a new PNET.

**-P <RoCE\_port> or --ibport <RoCE\_port>**

Optional: specifies the port number of the RoCE device port. Valid values are 1 or 2. The default value is 1.

**-s <PNET\_ID> or --show <PNET\_ID>**

displays the PNET table entry with the specified ID.

**-d <PNET\_ID> or --delete <PNET\_ID>**

deletes the PNET table entry with the specified ID.

**-f or --flush**

removes all entries from the PNET table.

**-h or --help**

displays help information for the command.

**-v or --version**

displays the version number of **smc\_pnet**.

## Examples

- To create a PNET with ID ABC, Ethernet interface name encf500, Infiniband device name mlx4\_0, and port number 2:

```
# smc_pnet -a ABC -I encf500 -D mlx4_0 -P 2
```

- To delete a PNET table entry with PNET ID ABC:

```
# smc_pnet -d ABC
```

- To show the mapping of Ethernet interface name and Infiniband device port for PNET ID ABC:

```
# smc_pnet -s ABC  
ABC encf500 mlx4_0 2
```

- To delete all entries in the PNET table:

```
# smc_pnet -f
```

For command return codes, see the man page.

## smc\_run - Run a TCP socket program with the SMC protocol using a preloaded library

Use the **smc\_run** command to start a TCP socket program that uses SMC as the networking protocol.

### smc\_run syntax

```
► smc_run — -d — <program> — <program parameters> ➤
```

Where:

### **smc\_run** <program> <program\_parameters>

Starts the specified TCP socket program with the specified parameters, using the SMC protocol.

### **-d**

Optional: Display diagnostic messages while the program is running.

### Examples

- To start a program called iperf3 with parameters "-s -p 12345":

```
# smc_run iperf3 -s -p 12345
-----
Server listening on 12345
-----
...
```

- To start a program called iperf3 with parameters "-s -p 12345" and diagnostic messages:

```
# smc_run -d iperf3 -s -p 12345
```


For command return codes, see the man page.



## smcss - Display information about the AF\_SMC sockets and link groups

Use the **smcss** command to display information about the AF\_SMC sockets and link groups.

### smcss syntax



Entering **smcss** without any parameters displays a list of connecting, closing, or connected SMC sockets.

#### **-a or --all**

lists all SMC sockets: listening, opening, closing, and connected.

#### **-d or --debug**

displays debug information, such as the shutdown state.

#### **-D or --smcd**

lists SMC-D sockets only. Displays additional SMC-D specific information.

#### **-R or --smcr**

lists SMC-R sockets only. Displays additional SMC-R specific information.

#### **-l or --listening**

lists listening sockets only. These are omitted in the default listing.

#### **-w or --wide**

prevents truncation of IP addresses.

#### **-h or --help**

displays help information for the command.

#### **-v or --version**

displays the version number of **smcss**.

### Meaning of the output fields

| Entry | Values and meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| State | <p><b>INIT</b><br/>The SMC socket is being initialized. It is not connected nor listening yet.</p> <p><b>CLOSED</b><br/>The SMC socket is closed. It is not connected nor listening anymore.</p> <p><b>LISTEN</b><br/>The SMC socket is a listening socket, waiting for incoming connection requests.</p> <p><b>ACTIVE</b><br/>The SMC socket has an established connection. In this state, the TCP connection is fully established, rendezvous processing has been completed, and SMC peers can exchange data via RDMA.</p> <p><b>PEERCLW1</b><br/>No further data will be sent to the peer.</p> <p><b>PEERCLW2</b><br/>No further data will be sent to or received from the peer.</p> <p><b>APPLCLW1</b><br/>No further data will be received from the peer.</p> |

| Entry         | Values and meaning                                                                                                                                                                                                                                                                                                                                                              |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               | <p><b>APPLCLW2</b><br/>No further data will be received from or sent to the peer.</p> <p><b>APPLFINCLW</b><br/>The peer has closed the socket.</p> <p><b>PEERFINCLW</b><br/>The socket is closed locally.</p> <p><b>PEERABORTW</b><br/>The socket was abnormally closed locally.</p> <p><b>PROCESSABORT</b><br/>The peer has closed the socket abnormally.</p>                  |
| Inode         | denotes the inode of the SMC socket.                                                                                                                                                                                                                                                                                                                                            |
| UID           | denotes the unique ID of the SMC socket.                                                                                                                                                                                                                                                                                                                                        |
| Local Address | denotes address and port number of the local end of the SMC socket. Trailing dots indicate a truncated address. Use the -w option to display full addresses.                                                                                                                                                                                                                    |
| Peer Address  | denotes address and port number of the remote end of the socket.                                                                                                                                                                                                                                                                                                                |
| Intf          | denotes that if the socket is explicitly bound with <b>setsockopt</b> option SO_BINDTODEVICE, "Intf" shows the interface number of the Ethernet device to which the socket is bound.                                                                                                                                                                                            |
| Mode          | <p>can have the following values:</p> <p><b>SMCD</b><br/>The SMC socket uses SMC-D for data exchange.</p> <p><b>SMCR</b><br/>The SMC socket uses SMC-R for data exchange.</p> <p><b>TCP</b><br/>An SMC connection could not be established. The SMC socket uses the TCP protocol for data exchange.</p>                                                                         |
| ShutD         | <p>(shutdown) can take the following values:</p> <p><b>&lt;-&gt;</b><br/>The SMC socket has not been shut down.</p> <p><b>R-&gt;</b><br/>The SMC socket is shut down one-way and cannot receive data.</p> <p><b>&lt;-W</b><br/>The SMC socket is shut down one-way and cannot send data.</p> <p><b>R-W</b><br/>The SMC socket is shut down and cannot receive or send data.</p> |
| Token         | is a unique ID of the SMC socket connection.                                                                                                                                                                                                                                                                                                                                    |
| Sndbuf        | denotes the size of the to-be-sent window of the SMC socket connection.                                                                                                                                                                                                                                                                                                         |
| Rcvbuf        | denotes the size of the receiving window of the SMC socket connection (filled by peer).                                                                                                                                                                                                                                                                                         |
| Peerbuf       | denotes the size of the peer receiving window of the SMC socket connection (to fill during data-transfer).                                                                                                                                                                                                                                                                      |
| rxprod-Cursor | Describes the current cursor location of the Rcvbuf for data to be received from the peer.                                                                                                                                                                                                                                                                                      |

| Entry         | Values and meaning                                                                                                                                                                                          |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| rxcons-Cursor | Describes the current cursor location of the Peerbuf for data sent to peer and confirmed by the peer.                                                                                                       |
| rxFlags       | SMC socket connection flags set by and received from the peer.                                                                                                                                              |
| txprod-Cursor | Describes the current cursor location of the Peerbuf for data sent to peer.                                                                                                                                 |
| txcons-Cursor | Describes the current cursor location of the Rcvbuf for data received from the peer and confirmed to the peer.                                                                                              |
| txFlags       | SMC socket connection flags set locally and sent to the peer.                                                                                                                                               |
| txprep-Cursor | Describes the current cursor location of the Sndbuf for data to be sent. The data is to be moved to the Peerbuf.                                                                                            |
| txsent-Cursor | Describes the current cursor location of the Sndbuf for data sent. The data was moved to the Peerbuf.                                                                                                       |
| txfin-Cursor  | Describes the current cursor location of the Sndbuf for data sent and send completion confirmed. The data was moved to the Peerbuf and completion was confirmed.                                            |
| Role          | "Role" can take the following values:<br><b>CLNT</b><br>The link group of the SMC socket is used for client connections.<br><b>SERV</b><br>The link group of the SMC socket is used for server connections. |
| IB-Device     | Name of the RoCE device used by the link group to which the SMC socket belongs.                                                                                                                             |
| Port          | Port of the RoCE device used by the link group to which the SMC socket belongs.                                                                                                                             |
| Linkid        | unique link ID of the link within the link group to which the SMC socket belongs.                                                                                                                           |
| GID           | Group identifier of the RoCE port used by the link group to which the SMC socket belongs.                                                                                                                   |
| Peer-GID      | GID of the foreign RoCE port used by the link group to which the SMC socket belongs.                                                                                                                        |

### Examples

- To display information about all SMC sockets on the server:

```
[root@myserver]# smcss -a
State      UID      Inode    Local Address      Peer Address      Intf Mode
INIT       00000    00000000
ACTIVE     00000    0060177  ::ffff:10.100.80...:6668  ::ffff:10.100.8...:40812 0000 SMCD
ACTIVE     00000    0060173  ::ffff:10.100.80...:6668  ::ffff:10.100.8...:40804 0000 SMCD
LISTEN     00000    0059058  :::6668
```

- To list listening sockets on the server:

```
root@myserver># smcss -l
State      UID      Inode    Local Address      Peer Address      Intf Mode
LISTEN     00000    0059058  :::6668
```

- To display debug information about all SMC sockets on the server:

## smcss

```
[root@myserver]# smcss -d
State      UID      Inode    Local Address      Peer Address      Intf Mode Shuld Token ...
ACTIVE     000000  0060177 ::ffff:10.100.80...:6668 ::ffff:10.100.8...:40812 0000 SMCD <-> 00...
ACTIVE     000000  0060173 ::ffff:10.100.80...:6668 ::ffff:10.100.8...:40804 0000 SMCD <-> 00...
...
```

For command return codes, see the man page.

## tape390\_crypt - Manage tape encryption

Use the **tape390\_crypt** command to enable and disable tape encryption for a channel attached tape device. You can also specify key encrypting keys (KEK) by using labels or hashes.

For 3592 tape devices, it is possible to write data in an encrypted format. The encryption keys are stored on an encryption key manager (EKM) server, which can run on any machine with TCP/IP and Java support. The EKM communicates with the tape drive over the tape control unit by using TCP/IP. The control unit acts as a proxy and forwards the traffic between the tape drive and the EKM. This type of setup is called out-of-band control-unit based encryption.

The EKM creates a data key that encrypts data. The data key itself is encrypted with KEKs and is stored in so called external encrypted data keys (EEDKs) on the tape medium.

You can store up to two EEDKs on the tape medium. With two EEDKs, one can contain a locally available KEK and the other can contain the public KEK of the location or company to where the tape is to be transferred. Then, the tape medium can be read in both locations.

When the tape device is mounted, the tape drive sends the EEDKs to the EKM. The EKM tries to unwrap one of the two EEDKs and sends back the extracted data key to the tape drive.

Linux can address KEKs by specifying either hashes or labels. Hashes and labels are stored in the EEDKs.


**Note:** If a tape is encrypted, it cannot be used for IPL.

### Before you begin:

To use tape encryption, you need:

- A 3592 crypto-enabled tape device and control unit that is configured as system-managed encryption.
- A crypto-enabled 3590 channel-attached tape device driver. See [Chapter 14, “Channel-attached tape device driver,”](#) on page 195.
- A key manager. See *Encryption Key Manager Component for the Java(TM) Platform Introduction, Planning, and User's Guide*, GA76-0418 for more information.

### tape390\_crypt syntax

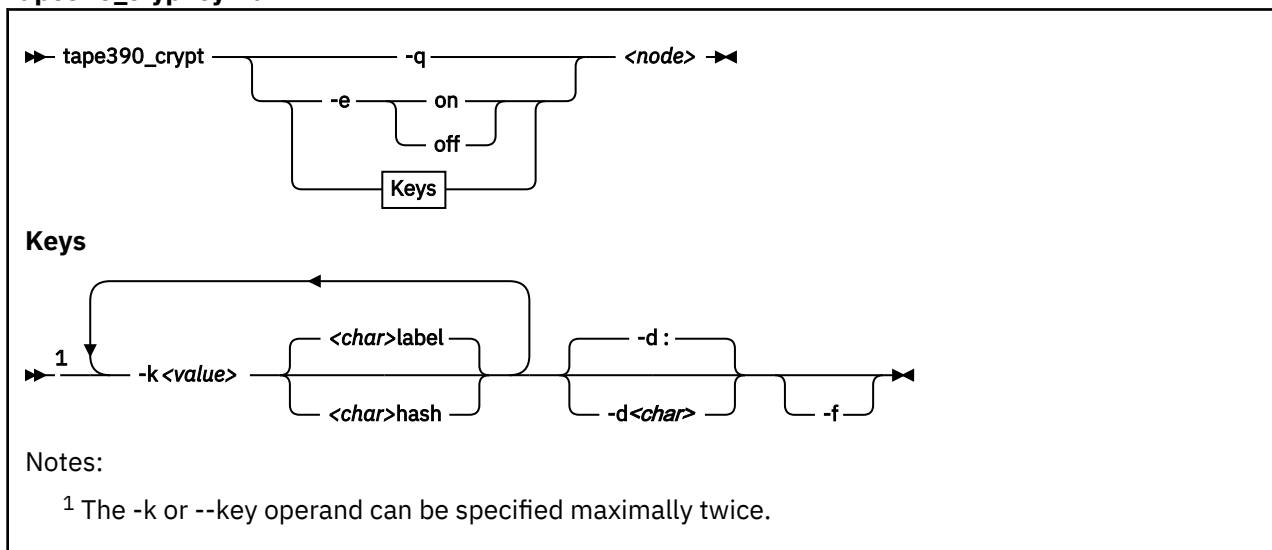

Where:

**-q or --query**

displays information about the tape's encryption status. If encryption is active and the medium is encrypted, additional information about the encryption keys is displayed.

**-e or --encryption**

sets tape encryption on or off.

**-k or --key**

sets tape encryption keys. You can only specify the -k option if the tape medium is loaded and rewound. While processing the -k option, the tape medium is initialized and all previous data contained on the tape medium is lost.

You can specify the -k option twice because the tape medium can store two EEDKs. If you specify the -k option once, two identical EEDKs are stored.

**<value>**

specifies the key encrypting key (KEK), which can be up to 64 characters long. The keywords `label` or `hash` specify how the KEK in `<value>` is to be stored on the tape medium. The default store type is `label`.

**-d or --delimiter**

specifies the character that separates the KEK in `<value>` from the store type (`label` or `hash`). The default delimiter is ":" (colon).

**<char>**

is a character that separates the KEK in `<value>` from the store type (`label` or `hash`).

**-f or --force**

specifies that no prompt message is to be issued before writing the KEK information and initializing the tape medium.

**<node>**

specifies the device node of the tape device.

**-h or --help**

displays help text. For more information, enter the command `man tape390_crypt`.

**-v or --version**

displays information about the version.

## Examples

The following scenarios illustrate the most common use of tape encryption. In all examples `/dev/ntibm0` is used as the tape device.

### Querying a tape device before and after encryption is turned on

This example shows a query of tape device `/dev/ntibm0`. Initially, encryption for this device is off. Encryption is then turned on, and the status is queried again.

```
tape390_crypt -q /dev/ntibm0
ENCRYPTION: OFF
MEDIUM: NOT ENCRYPTED

tape390_crypt -e on /dev/ntibm0

tape390_crypt -q /dev/ntibm0
ENCRYPTION: ON
MEDIUM: NOT ENCRYPTED
```

Then, two keys are set, one in label format and one in hash format. The status is queried and there is now additional output for the keys.

```
tape390_crypt -k my_first_key:label -k my_second_key:hash /dev/ntibm0
--->> ATTENTION! <---
All data on tape /dev/ntibm0 will be lost.
Type "yes" to continue: yes
SUCCESS: key information set.

tape390_crypt -q /dev/ntibm0
ENCRYPTION: ON
MEDIUM: ENCRYPTED
KEY1:
  value:    my_first_key
  type:     label
  ontape:   label
KEY2:
  value:    my_second_key
  type:     label
  ontape:   hash
```

### Using default keys for encryption

1. Load the cartridge. If the cartridge is already loaded:

- Switch off encryption:

```
tape390_crypt -e off /dev/ntibm0
```

- Rewind:

```
mt -f /dev/ntibm0 rewind
```

2. Switch encryption on:

```
tape390_crypt -e on /dev/ntibm0
```

3. Write data.

### Using specific keys for encryption

1. Load the cartridge. If the cartridge is already loaded, rewind:

```
mt -f /dev/ntibm0 rewind
```

2. Switch encryption on:

```
tape390_crypt -e on /dev/ntibm0
```

3. Set new keys:

```
tape390_crypt -k key1 -k key2 /dev/ntibm0
```

4. Write data.

### Writing unencrypted data

1. Load the cartridge. If the cartridge is already loaded, rewind:

```
mt -f /dev/ntibm0 rewind
```

2. If encryption is on, switch off encryption:

```
tape390_crypt -e off /dev/ntibm0
```

3. Write data.

### Appending new files to an encrypted cartridge

1. Load the cartridge

## tape390\_crypt

2. Switch encryption on:

```
tape390_crypt -e on /dev/ntibm0
```

3. Position the tape.
4. Write data.

### Reading an encrypted tape

1. Load the cartridge
2. Switch encryption on:

```
tape390_crypt -e on /dev/ntibm0
```


3. Read data.



## tape390\_display - Display messages on tape devices and load tapes

Use the **tape390\_display** command to show messages on the display unit of a physical tape device, optionally in conjunction with loading a tape.

### tape390\_display syntax

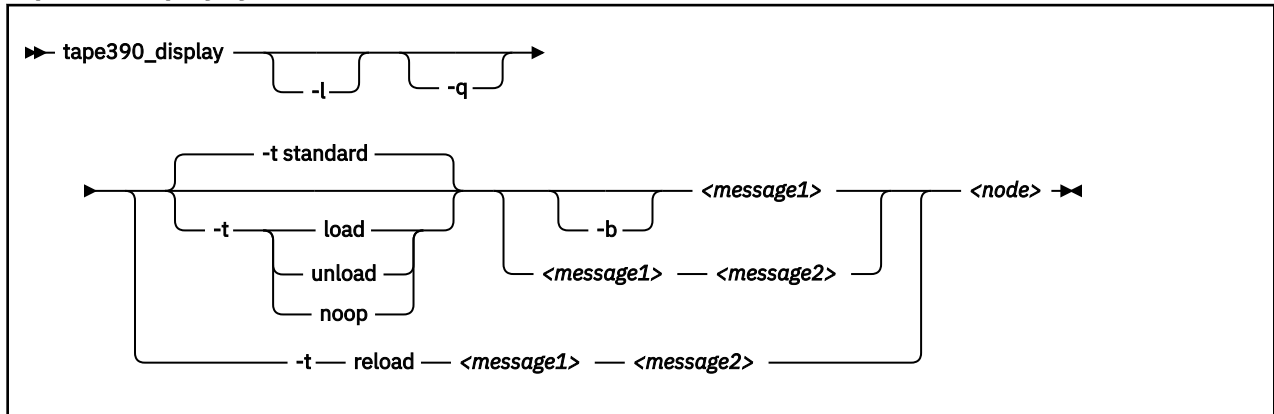

Where:

#### -l or --load

instructs the tape unit to load the next indexed tape from the automatic tape loader (if installed). Ignored if no loader is installed or if the loader is not in "system" mode. The loader "system" mode allows the operating system to handle tape loads.

#### -t or --type

The possible values have the following meanings:

##### standard

displays the message or messages until the physical tape device processes the next tape movement command.

##### load

displays the message or messages until a tape is loaded; if a tape is already loaded, the message is ignored.

##### unload

displays the message or messages while a tape is loaded; if no tape is loaded, the message is ignored.

##### reload

displays the first message while a tape is loaded and the second message when the tape is removed. If no tape is loaded, the first message is ignored and the second message is displayed immediately. The second message is displayed until the next tape is loaded.

##### noop

is intended for test purposes only. It accesses the tape device but does not display the message or messages.

#### -b or --blink

causes <message1> to be displayed repeatedly for 2 seconds with a half-second pause in between.

#### <message1>

is the first or only message to be displayed. The message can be up to 8 byte.

#### <message2>

is a second message to be displayed alternately with the first, at 2-second intervals. The message can be up to 8 byte.

**<node>**

is a device node of the target tape device.

**-q or --quiet**

suppresses all error messages.

**-h or --help**

displays help text.

**-v or --version**

displays information about the version.

**Note:**

1. Symbols that can be displayed include:

**Alphabetic characters:**

A through Z (uppercase only) and spaces. Lowercase letters are converted to uppercase.

**Numeric characters:**

0 1 2 3 4 5 6 7 8 9

**Special characters:**

@ \$ # , . / ' ( ) \* & + - = % : \_ < > ? ;

The following are included in the 3490 hardware reference but might not display on all devices: | ¢

2. If only one message is defined, it remains displayed until the tape device driver next starts to move or the message is updated.
3. If the messages contain spaces or shell-sensitive characters, they must be enclosed in quotation marks.

**Examples**

The following examples assume that you are using standard devices nodes and not device nodes that are created by udev:

- Alternately display "BACKUP" and "COMPLETE" at 2-second intervals until device /dev/ntibm0 processes the next tape movement command:

```
tape390_display BACKUP COMPLETE /dev/ntibm0
```

- Display the message "REM TAPE" while a tape is in the physical tape device followed by the message "NEW TAPE" until a new tape is loaded:

```
tape390_display --type reload "REM TAPE" "NEW TAPE" /dev/ntibm0
```

- Attempts to unload the tape and load a new tape automatically, the messages are the same as in the previous example:

```
tape390_display -l -t reload "REM TAPE" "NEW TAPE" /dev/ntibm0
```

## tunedasd - Adjust low-level DASD settings


Use the **tunedasd** command to adjust performance relevant settings and other low-level DASD device settings.

In particular, you can perform these tasks:

- Query and set a DASD's cache mode
- Display and reset DASD performance statistics
- Reserve and release DASD
- Break the lock of an online DASD (to learn how to access a boxed DASD that is not yet online, see [“Accessing DASD by force”](#) on page 129)

**Before you begin:** For the performance statistics, data gathering must be turned on by writing "on" to `/proc/dasd/statistics`.

### tunedasd syntax

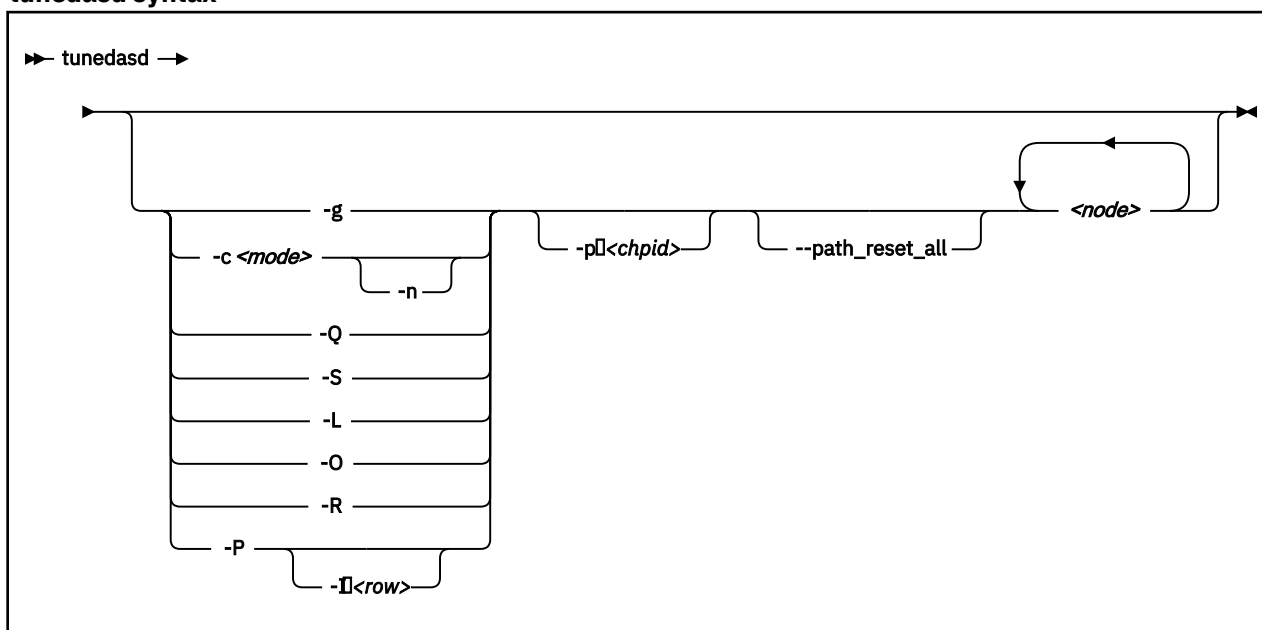

Where:

#### <node>

specifies a device node for the DASD to which the command is to be applied.

#### -g or --get\_cache

gets the current caching mode of the storage controller. This option applies to ECKD only.

#### -c <mode> or --cache <mode>

sets the caching mode on the storage controller to `<mode>`. This option applies to ECKD only.

Today's ECKD devices support the following behaviors:

#### normal

for normal cache replacement.

#### bypass

to bypass cache.

#### inhibit

to inhibit cache.

**sequential**

for sequential access.

**prestage**

for sequential prestage.

**record**

for record access.

For details, see *IBM TotalStorage Enterprise Storage Server® System/390® Command Reference 2105 Models E10, E20, F10, and F20, SC26-7295*.

**-n <cylinders> or --no\_cyl <cylinders>**

specifies the number of cylinders to be cached. This option applies to ECKD only.

**-Q or --query\_reserve**

queries the reserve status of the device. The status can be:

**none**

the device is not reserved.

**implicit**

the device is not reserved, but there is a contingent or implicit allegiance to this Linux instance.

**other**

the device is reserved to another operating system instance.

**reserved**

the device is reserved to this Linux instance.

For details, see the "Storage Control Reference" of the attached storage server.

This option applies to ECKD only.

**-S or --reserve**

reserves the device. This option applies to ECKD only.

**-L or --release**

releases the device. This option applies to ECKD only.

**-O or --slock**

reserves the device unconditionally. This option applies to ECKD only.

**Note:** This option is to be used with care as it breaks any existing reserve by another operating system.

**-R or --reset\_prof**

resets the profile information of the device.

**-P or --profile**

displays a usage profile of the device.

**-I <row> or --prof\_item <row>**

prints the usage profile item that is specified by <row>. <row> can be one of:

**reqs**

number of DASD I/O requests.

**sects**

number of 512-byte sectors.

**sizes**

histogram of sizes.

**total**

histogram of I/O times.

**totsect**

histogram of I/O times per sector.

**start**

histogram of I/O time until ssch.

**irq**

histogram of I/O time between ssch and irq.

**irqsect**

histogram of I/O time between ssch and irq per sector.

**end**

histogram of I/O time between irq and end.

**queue**

number of requests in the DASD internal request queue at enqueueing.

**-p <chpid> or --path\_reset <chpid>**

resets a channel path <chpid> of a selected device. A channel path might be suspended due to high IFCC error rates or a High Performance FICON failure. Use this option to resume considering the channel path for I/O.

**--path\_reset\_all**

resets all channel paths of a selected device. The channel paths might be suspended due to high IFCC error rates or a High Performance FICON failure. Use this option to resume considering all defined channel paths for I/O.

**-v or --version**

displays version information.

**-h or --help**

displays help information.

**Examples**

- The following sequence of commands first checks the reservation status of a DASD and then reserves it:

```
# tunedasd -Q /dev/dasdzzz
none
# tunedasd -S /dev/dasdzzz
Reserving device </dev/dasdzzz>...
Done.
# tunedasd -Q /dev/dasdzzz
reserved
```

- This example first queries the current setting for the cache mode of a DASD with device node /dev/dasdzzz and then sets it to one cylinder "prestage".

```
# tunedasd -g /dev/dasdzzz
normal (0 cyl)
# tunedasd -c prestage -n 2 /dev/dasdzzz
Setting cache mode for device </dev/dasdzzz>...
Done.
# tunedasd -g /dev/dasdzzz
prestage (2 cyl)
```

- In this example two device nodes are specified. The output is printed for each node in the order in which the nodes were specified.

```
# tunedasd -g /dev/dasdzzz /dev/dasdzy
prestage (2 cyl)
normal (0 cyl)
```

- The following command prints the usage profile of a DASD.

```
# tunedasd -P /dev/dasdzzz

19617 dasd I/O requests
with 4841336 sectors(512B each)

  __<4   __8   __16   __32   __64   _128   _256   _512   _1k   _2k   _4k   _8k   _16k   _32k   _64k   128k
  _256   _512   _1M   _2M   _4M   _8M   _16M   _32M   _64M   128M   256M   512M   1G   2G   4G   >4G
Histogram of sizes (512B secs)
0      0      441     77     78     87    188   18746    0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
Histogram of I/O times (microseconds)
0      0      0      0      0      0      0      0      235    150    297   18683    241     3      4      4
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
Histogram of I/O times per sector
0      0      0      18736   333    278    94     78    97     1      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
Histogram of I/O time till ssch
19234   40    32     2      0      0      3     40    53    128    85      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
Histogram of I/O time between ssch and irq
0      0      0      0      0      0      0      0      387   208    250   18538    223     3      4      4
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
Histogram of I/O time between ssch and irq per sector
0      0      0      18803   326   398    70    19     1      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
Histogram of I/O time between irq and end
18520   735    246    68    43     4      1      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
# of req in chanq at enqueueing (1..32)
0      19308   123    30    25    130     0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0      0      0      0      0
```

- The following command prints a row of the usage profile of a DASD. The output is on a single line as indicated by the (cont...) (... cont) in the illustration:

```
# tunedasd -P -I irq /dev/dasdzzz
0|      0|      0|      0|      0|      503|      271|(cont...)
(... cont) 267|    18544|    224|    3|    4|    4|      0|      0|(cont...)
(... cont) 0|      0|      0|      0|      0|      0|      0|(cont...)
(... cont) 0|      0|      0|      0|      0|      0|      0|(cont...)
```

- The following command resets a failed channel path with CHPID 45:

```
# tunedasd -p 45 /dev/dasdc
```

## vmcp - Send CP commands to the z/VM hypervisor


Use the **vmcp** command to send control program (CP) commands to the z/VM hypervisor and display the response from z/VM.

The **vmcp** command expects the command line as a parameter and returns the response to stdout. Error messages are written to stderr.

You can issue **vmcp** commands using the `/dev/vmcp` device node (see [Chapter 40, “z/VM CP interface device driver,”](#) on page 395) or from a command prompt in a terminal session. In both cases, you must load the vmcp module.

**Before you begin:** Ensure that vmcp is loaded by issuing: **modprobe vmcp**.

### vmcp syntax

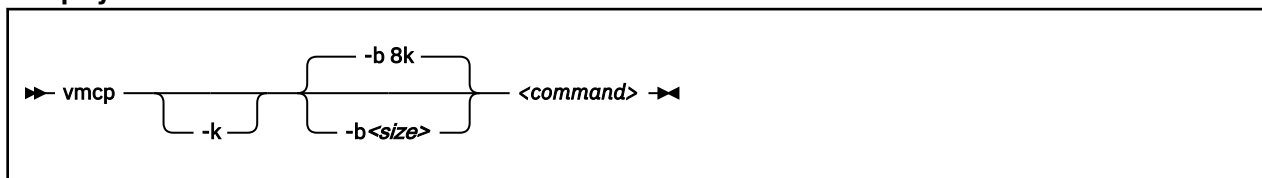

Where:

#### **-k or --keepcase**

preserves the case of the characters in the specified command string. By default, the command string is converted to uppercase characters.

#### **-b <size> or --buffer=<size>**

specifies the buffer size in bytes for the response from z/VM CP. Valid values are from 4096 (or 4k) up to 1048756 (or 1M). By default, **vmcp** allocates an 8192 byte (8k) buffer. You can use k and M to specify kilo- and megabytes. The suffixes are not case sensitive, so k is equivalent to K and m is equivalent to M.

#### **<command>**

specifies the command that you want to send to CP.

#### **-h or --help**

displays help information.

#### **-v or --version**

displays version information.

If the command completes successfully, **vmcp** returns 0. Otherwise, **vmcp** returns one of the following values:

1. CP returned a non-zero response code.
2. The specified buffer was not large enough to hold CP's response. The command was run, but the response was truncated. You can use the **--buffer** option to increase the response buffer.
3. Linux reported an error to **vmcp**. See the error message for details.
4. The options that are passed to **vmcp** were erroneous. See the error messages for details.

### Examples

- To get your user ID issue:

```
# vmcp query userid
```

- To attach the device 1234 to your guest, issue:

## vmcp

```
# vmcp attach 1234 \*
```

- If you add the following line to `/etc/sudoers`:

```
ALL ALL=NOPASSWD:/sbin/vmcp indicate
```

every user on the system can run the **indicate** command by using:

```
# sudo vmcp indicate
```

- If you need a larger response buffer, use the `--buffer` option:

```
# vmcp --buffer=128k q 1-ffff
```



## vmur - Work with z/VM spool file queues

---

Use the **vmur** command to work with z/VM spool file queues.

The **vmur** command provides these main functions:

### Receive

Read data from the z/VM reader file queue. The command performs the following steps:

- Places the reader queue file to be received at the top of the queue.
- Changes the reader queue file attribute to NOHOLD.
- Closes the z/VM reader after the file is received.

The **vmur** command detects z/VM reader queue files in:

- VMDUMP format as created by CP VMDUMP.
- NETDATA format as created by CMS SENDFILE or TSO XMIT.

### Punch or print

Write data to the z/VM punch or printer file queue and transfer it to another user's virtual reader, optionally on a remote z/VM node. The data is sliced up into 80-byte or 132-byte chunks (called *records*) and written to the punch or printer device. If the data length is not an integer multiple of 80 or 132, the last record is padded.

### List

Display detailed information about one or all files on the specified spool file queue.

### Purge

Remove one or all files on a spool file queue.

### Order

Position a file at the top of a spool file queue.

**Before you begin:** To use the receive, punch, and print functions, the vmur device driver must be loaded and the corresponding unit record devices must be set online.

### Serialization

The **vmur** command provides strict serialization of all its functions other than list, which does not affect a file queue's contents or sequence. Thus concurrent access to spool file queues is blocked to prevent unpredictable results or destructive conflicts.

For example, this serialization prevents a process from issuing **vmur purge -f** while another process is running **vmur receive 1234**. However, **vmur** is not serialized against concurrent CP commands that are issued through **vmcp**: if one process is running **vmur receive 1234** and another process issues **vmcp purge rdr 1234**, then the received file might be incomplete. To avoid such unwanted effects, always use **vmur** to work with z/VM spool file queues.


### Spooling options

With the **vmur** command, you can temporarily override the z/VM settings for the CLASS, DEST, FORM, and DIST spooling options for virtual unit record devices. The **vmur** command restores the original settings before it returns control.


For details about the spooling options, see the z/VM product information. In particular, see the sections about the z/VM CP SPOOL, QUERY VIRTUAL RDR, QUERY VIRTUAL PUN, and QUERY VIRTUAL PRT commands in *z/VM: CP Commands and Utilities Reference*, SC24-6268.

## vmur syntax


» vmur →

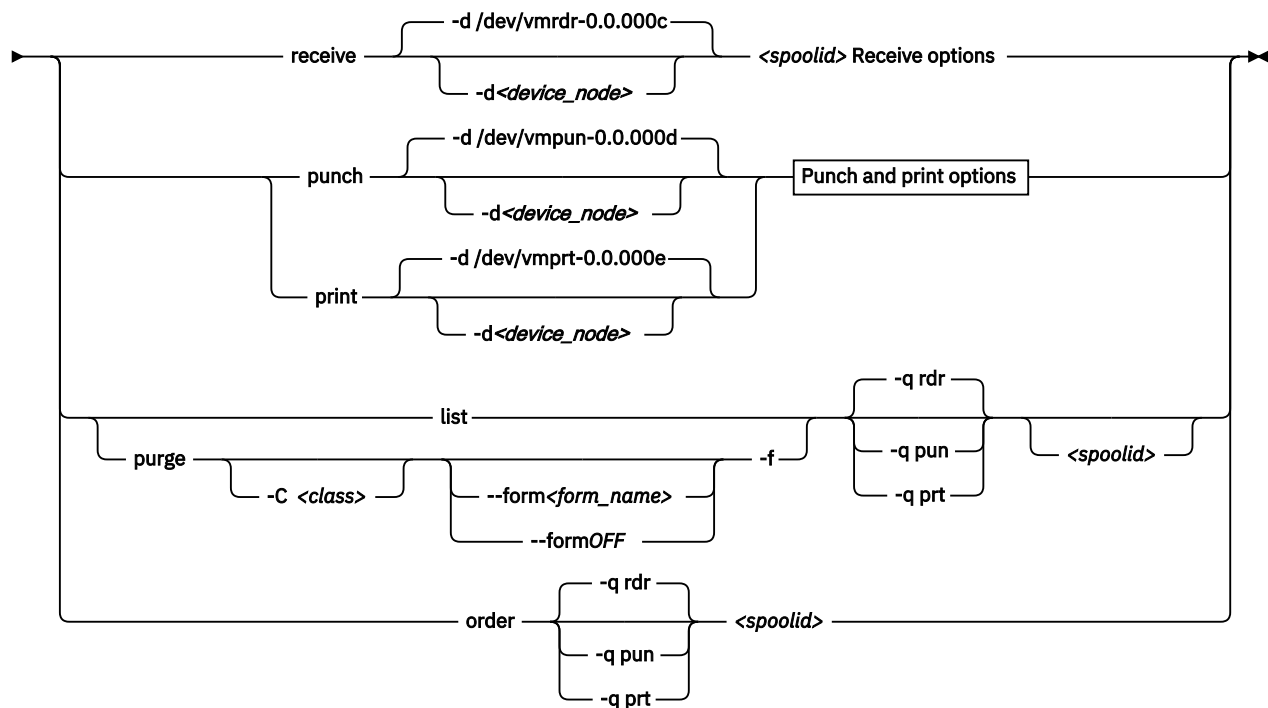

## Receive options

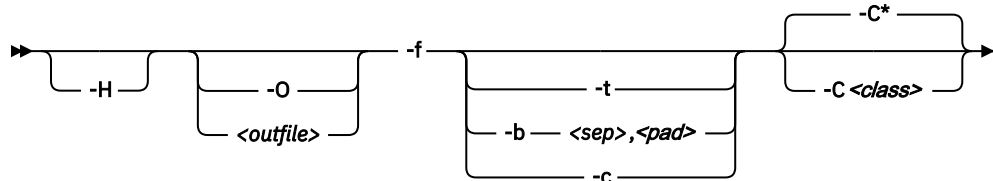

## Punch and print options

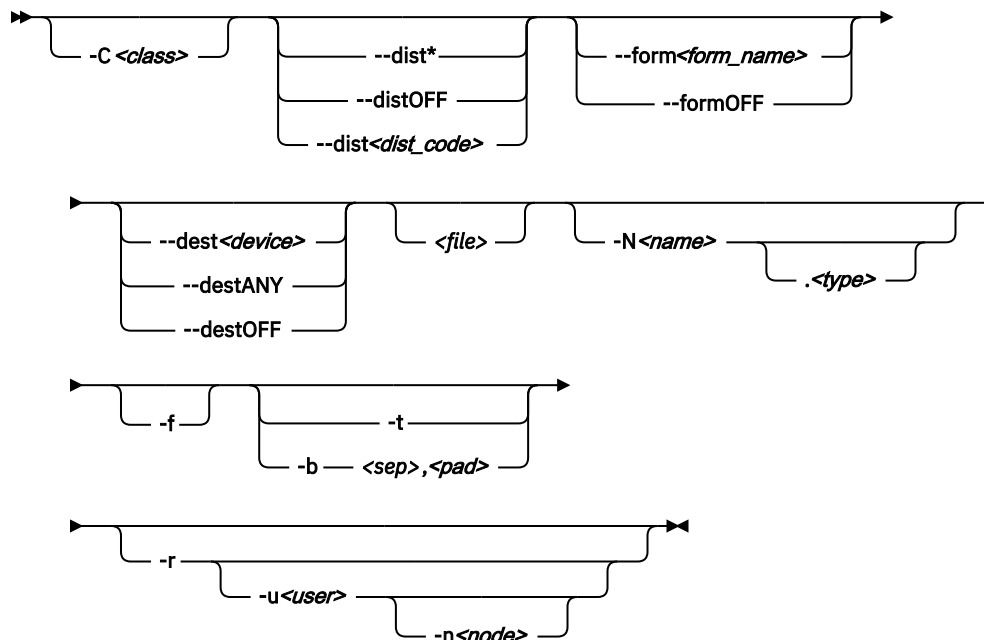

Where these are the main command options:

**re or receive**

receives a file from the z/VM reader queue.

**pun or punch**

writes to the z/VM punch queue.

**pr or print**

writes to the z/VM printer queue.

**li or list**

lists information about one or all files on a z/VM spool file queue.

**pur or purge**

purges one or all files from a z/VM spool file queue.

**or or order**

places a file on a z/VM spool file queue at the top of the queue.

**Note:** The short forms that are given for receive, punch, print, list, purge, and order are the shortest possible abbreviations. In keeping with z/VM style, you can abbreviate commands by dropping any number of letters from the end of the full keywords until you reach the short form. For example, **vmur re**, **vmur rec**, or **vmur rece** are all equivalent.

The remaining specifications are listed alphabetically by switch. Variable specifications that do not require a switch are listed first.

**<file>**

specifies a file, in the Linux file system, with data to be punched or printed. If this specification is omitted, the data is read from standard input.

**<outfile>**

specifies a file, in the Linux file system, to receive data from the reader spool file. If neither a file name nor **--stdout** are specified, the name and type of the spool file to be received (see the NAME and TYPE columns in **vmur list** output) are used to build an output file name of the form **<name>.<type>**. If the spool file to be received is an unnamed file, an error message is issued.

Use the **--force** option to overwrite existing files without a confirmation prompt.

**<spoolid>**

specifies the spool ID of a file on the z/VM reader, punch, or printer queue. Spool IDs are decimal numbers in the range 0-9999.

For the list or purge function: omitting the spool ID lists or purges all files in the queue.

**-b <sep>, <pad> or --blocked <sep>, <pad>**

receives or writes a file in blocked mode, where **<sep>** specifies the separator and **<pad>** specifies the padding character in hexadecimal notation. Example: **<sep>**

```
--blocked 0xSS,0xPP
```

Use this option to use character sets other than IBM037 and ISO-8859-1 for conversion.

- For the receive function: All trailing padding characters are removed from the end of each record that is read from the virtual reader and the separator character is inserted afterward. The receive function's output can be piped to **iconv** by using the appropriate character sets. Example:

```
# vmur rec 7 -b 0x25,0x40 -0 | iconv -f EBCDIC-US -t ISO-8859-1 > myfile
```

- For the punch or print function: The separator is used to identify the line end character of the file to punch or print. If a line has fewer characters than the record length of the used unit record device, the residual of the record is filled up with the specified padding byte. If a line exceeds the record size, an error is printed. Example:

```
# iconv test.txt -f ISO-8859-1 -t EBCDIC-US | vmur pun -b 0x25,0x40 -N test
```

**-c or --convert**

converts a VMDUMP spool file into a format appropriate for further analysis with crash.

**-C <class> or --class <class>**

specifies a spool class.

- For the receive function: The file is received only if it matches the specified class.
- For the purge function: Only files with the specified class are purged.
- For the punch or printer function: Sets the spool class for the virtual reader or virtual punch device. Output files inherit the spool class of the device.

The class is designated by a single alphanumeric character. For receive, it can also be an asterisk (\*) to match all classes. Lowercase alphabetic characters are converted to uppercase.

See also [“Spooling options” on page 653](#).

**--dest <device>**

sets the destination device for spool files that are created on the virtual punch or printer device. The value can be ANY, OFF, or it must be a valid device as defined on z/VM.

See also [“Spooling options” on page 653](#).

**-d or --device**

specifies the device node of the virtual unit record device.

- If omitted in the receive function, /dev/vmidx-0.0.000c is assumed.
- If omitted in the punch function, /dev/vmpun-0.0.000d is assumed.
- If omitted in the print function, /dev/vmprt-0.0.000e is assumed.

**--dist <distcode>**

sets the distribution code for spool files that are created on the virtual punch or printer device. The value can be an asterisk (\*), OFF, or it must be a valid distribution code as defined on z/VM.

OFF and \* are equivalent. Both specifications reset the distribution code to the value that is set in the user directory.

See also [“Spooling options” on page 653](#).

**-f or --force**

suppresses confirmation messages.

- For the receive function: overwrites an existing output file without prompting for a confirmation.
- For the punch or print option: automatically converts the Linux input file name to a valid spool file name without any error message.
- For the purge function: purges the specified spool files without prompting for a confirmation.

**--form <form\_name>**

sets the form name for spool files that are created on the virtual punch or printer device. The value can be OFF, to use the system default, or it must be a valid z/VM form name.

See also [“Spooling options” on page 653](#).

**-h or --help**

displays help information for the command. To view the man page, enter **man vmur**.

**-H or --hold**

keeps the spool file to be received in the reader queue. If omitted, the spool file is purged after it is received.

**-n <node> or --node <node>**

specifies the node name of the z/VM system to which the data is to be transferred. Remote Spooling Communications Subsystem (RSCS) must be installed on the z/VM systems and the specified node must be defined in the RSCS machine's configuration file.

The default node is the local z/VM system. The node option is valid only with the -u option.

**-N <name>.<type> or --name <name>.<type>**

specifies a name and, optionally, a type for the z/VM spool file to be created by the punch or print option. To specify a type after the file name, enter a period followed by the type. For example:

```
# vmur pun -r /boot/parmfile -N myname.mytype
```

Both the name and the type must comply with z/VM file name rules, for example, they must be 1 - 8 characters long.

If omitted, a spool file name is generated from the Linux input file name, if applicable.

Use the **--force** option to suppress warning messages about automatically generated file names or about specified file names that do not adhere to the z/VM file naming rules.

**-O or --stdout**

writes the reader file content to standard output.

**-q or --queue**

specifies the z/VM spool file queue to be listed, purged, or ordered. If omitted, the reader file queue is assumed.

**-r or --rdr**

transfers a punch or print file to a reader.

**-t or --text**

converts the encoding between EBCDIC and ASCII according to character sets IBM037 and ISO-8859-1.

- For the receive function: receives the reader file as text file. That is, it converts EBCDIC to ASCII and inserts an ASCII line feed character (0x0a) for each input record that is read from the z/VM reader. Trailing EBCDIC blanks (0x40) in the input records are stripped.
- For the punch or print function: punches or prints the input file as text file. That is, converts ASCII to EBCDIC and pads each input line with trailing blanks to fill up the record. The record length is 80 for a punch and 132 for a printer. If an input line length exceeds 80 for punch or 132 for print, an error message is issued.

The **--text** and the **--blocked** attributes are mutually exclusive.

**-u <user> or --user <user>**

specifies the z/VM user ID to whose reader the data is to be transferred. If omitted, the data is transferred to your own machine's reader. The user option is valid only with the **-r** option.

**-v or --version**

displays version information.

## Examples

These examples illustrate common scenarios for unit record devices.

In all examples the following device nodes are used:

- /dev/vmrd1-0.0.000c as virtual reader.
- /dev/vmpun-0.0.000d as virtual punch.

The vmur commands access the reader device, which has to be online. To set it online, it needs to be freed from cio\_ignore. Example:

```
# cio_ignore -r c
# chccwdev -e c
Setting device 0.0.000c online
Done
```

Besides the vmur device driver and the **vmur** command, these scenarios require that the **vmcp** and **vmconvert** commands from the s390utils package are available.

### Creating and reading a guest memory dump

You can use the **vmur** command to read a guest memory dump that was created, for example, with the **vmcp** command.

#### Procedure

1. Produce a memory dump of the z/VM guest virtual machine memory:

```
# vmcp vmdump
```

Depending on the memory size this command might take some time to complete.

2. List the spool files for the reader to find the spool ID of the dump file, VMDUMP.

In the example, the spool ID of VMDUMP is 463.

```
# vmur li
```

```
ORIGINID FILE CLASS RECORDS CPY HOLD DATE TIME NAME TYPE DIST
T6360025 0463 V DMP 00020222 001 NONE 06/11 15:07:42 VMDUMP FILE T6360025
```

3. Read and convert the VMDUMP spool file to a file in the current working directory of the Linux file system:

```
# vmur rec 463 -c linux_dump
```

### Using FTP to receive and convert a dump file

Use the **--convert** option together with the **--stdout** option to receive a VMDUMP spool file straight from the z/VM reader queue, convert it, and send it to another host with FTP.

#### Procedure

1. Establish an FTP session with the target host and log in.
2. Enter the FTP command binary.
3. Enter the FTP command:

```
put |"vmur re <spoolid> -c -O" <filename_on_target_host>
```

### Log and read the z/VM guest virtual machine console

You can use the **vmur** command to read a console transcript that has been spooled; for example, with the **vmcp** command.

#### Procedure

1. Begin console spooling:

```
# vmcp sp cons start
```

2. Produce output to the z/VM console (for example, with CP TRACE).
3. Stop console spooling, close the file with the console output, and transfer the file to the reader queue. In the resulting CP message, the spool ID follows the FILE keyword. In the example, the spool ID is 398:

```
# vmcp sp cons stop close \* rdr
```

```
RDR FILE 0398 SENT FROM T6360025 CON WAS 0398 RECS 1872 CPY 001 T NOHOLD NOKEEP
```

4. Read the file with the console output into a file in the current working directory on the Linux file system:

```
# vmur re -t 398 linux_cons
```

### Preparing the z/VM reader as an IPL device for Linux

You can use the **vmur** command to transfer all files for booting Linux to the z/VM reader. You can also arrange the files such that the reader can be used as an IPL device.

#### Procedure

1. Send the kernel parameter file, `parmfile`, to the z/VM punch device and transfer the file to the reader queue.

The resulting message shows the spool ID of the parameter file.

```
# vmur pun -r /boot/parmfile
Reader file with spoolid 0465 created.
```

2. Send the kernel image file to the z/VM punch device and transfer the file to the reader queue.

The resulting message shows the spool ID of the kernel image file.

```
# vmur pun -r /boot/vmlinuz -N image
Reader file with spoolid 0466 created.
```

3. Optional: Check the spool IDs of `image` and `parmfile` in the reader queue. In this example, the spool ID of `parmfile` is 465 and the spool ID of `image` is 466.

```
# vmur li
```

| ORIGINID | FILE | CLASS | RECORDS | CPY      | HOLD | DATE | TIME           | NAME     | TYPE | DIST     |
|----------|------|-------|---------|----------|------|------|----------------|----------|------|----------|
| T6360025 | 0463 | V     | DMP     | 00020222 | 001  | NONE | 06/11 15:07:42 | VMDUMP   | FILE | T6360025 |
| T6360025 | 0465 | A     | PUN     | 00000002 | 001  | NONE | 06/11 15:30:31 | parmfile |      | T6360025 |
| T6360025 | 0466 | A     | PUN     | 00065200 | 001  | NONE | 06/11 15:30:52 | image    |      | T6360025 |

4. Move `image` to the first and `parmfile` to the second position in the reader queue:

```
# vmur or 465
# vmur or 466
```

5. Configure the z/VM reader as the re-IPL device:

```
# echo 0.0.000c > /sys/firmware/reipl/ccw/device
```

6. Boot Linux from the z/VM reader:

```
# reboot
```

### Sending a file to different z/VM guest virtual machines

You can use the **vmur** command to send files to other z/VM guest virtual machines.

#### About this task

This scenario describes how to send a file called `lnxprofile.exec` from the file system of an instance of Linux on z/VM to other z/VM guest virtual machines. For example, `lnxprofile.exec` could contain the content of a PROFILE EXEC file with CP and CMS commands to customize z/VM guest virtual machines for running Linux.

#### Procedure

1. Send `lnxprofile.exec` to two z/VM guest virtual machines:  
z/VM user ID `t2930020` at node `boet2930` and z/VM user ID `t6360025` at node `boet6360`.

```
vmur pun lnxprofile.exec -t -r -u t2930020 -n boet2930 -N PROFILE
vmur pun lnxprofile.exec -t -r -u t6360025 -n boet6360 -N PROFILE
```

2. Log on to t2930020 at boet2930, IPL CMS, and issue the CP command:

```
QUERY RDR ALL
```

The command output shows the spool ID of PROFILE in the FILE column.

3. Issue the CMS command:

```
RECEIVE <spoolid> PROFILE EXEC A (REPL
```

In the command, <spoolid> is the spool ID of PROFILE found in step “2” on [page 660](#).

4. Repeat steps “2” on [page 660](#) and “3” on [page 660](#) for t6360025 at boet6360.

### **Sending a file to a z/VSE instance**

You can use the **vmur** command to send files to a z/VSE instance.

### **Procedure**

To send `lserv.job` to user ID `vseuser` at node `vse01sys`, issue:

```
vmur pun lserv.job -t -r -u vseuser -n vse01sys -N LSERV
```



## zdsfs - Mount a z/OS DASD

Use the **zdsfs** command to mount z/OS DASDs as a Linux file system.

The zdsfs file system translates the z/OS data sets, which are stored on the DASDs in records of arbitrary or even variable size, into Linux semantics.

Through the zdsfs file system, applications on Linux can read z/OS physical sequential data sets (PS) and partitioned data sets (PDS) on the DASD. In the Linux file system, physical sequential data sets are represented as files. Partitioned data sets are represented as directories that contain the PDS members as files. Other z/OS data set formats, such as extended format data sets or VSAM data sets, are not supported. zdsfs is optimized for sequential read access.

The zdsfs file system requires the FUSE library. Red Hat Enterprise Linux automatically installs this library. The zdsfs command is available from the s390utils-zdsfs RPM.



### Attention:

- To avoid data inconsistencies, set the DASDs offline in z/OS before you mount them in Linux.
- Through the zdsfs file system, the whole DASDs are accessible to Linux, but the access is not controlled by z/OS auditing mechanisms.

To avoid security problems, you might want to dedicate the z/OS DASDs only for providing data for Linux.

Per default, only the Linux user who mounts the zdsfs file system has access to it.

**Tip:** If you want to grant a user group access to the zdsfs file system, mount it with the fuse options `default_permissions`, `allow_other`, and `gid`.

To unmount file systems that you mounted with **zdsfs**, you can use **fusermount**, whether root or non-root user. See the **fusermount** man page for details.

See *z/OS DFSMS Using Data Sets*, SC26-7410 for more information about z/OS data sets.

### Before you begin:

- The raw-track access mode of the DASD must be enabled.

Make sure that the DASD is set offline when you enable the raw-track access mode.

See [“Accessing full ECKD tracks” on page 139](#) for details.


- The DASD must be online.

**Tip:** You can use the **chccwdev** command to enable the raw-track access mode and set the device online afterward in one step.

Set the DASD offline in z/OS before you set it online in Linux.

- You must have the appropriate read permissions for the device node.

### zdsfs syntax

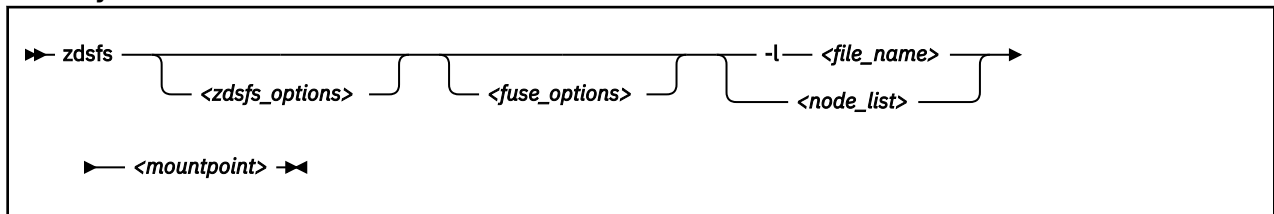

where:

**<zdsfs\_options>**

zdsfs-specific options.

**-o ignore\_incomplete**

represents all complete data sets in the file system, even if there are incomplete data sets. Incomplete data sets are not represented.

In z/OS, data sets might be distributed over different DASDs. For each incomplete data set, a warning message is issued to the standard error stream. If there are incomplete data sets and this option is not specified, the **zdsfs** command returns with an error.

**-o rdw**

keeps record descriptor words (RDWs) of data sets that are stored by using the z/OS concept of variable record lengths.

**-o tracks=<n>**

specifies the track buffer size in tracks. The default is 128 tracks.

zdsfs allocates a track buffer of <n>\*120 KB for each open file to store and extract the user data. Increasing the track buffer size might improve your system performance.

**-o seekbuffer=<s>**

sets the maximum seek history buffer size in bytes. The default is 1,048,576 B.

zdsfs saves offset information about a data set in the seek history buffer to speed up the performance of a seek operation.

**-o check\_host\_count**

checks the host-access open count to ensure that the device is not online to another operating system instance. The operation is canceled if another operating system instance is accessing the volume.

**<fuse\_options>**

options for FUSE. The following options are supported by the **zdsfs** command. To use an option, it must also be supported by the version of FUSE that is installed.

**-d or -o debug**

enables debug output (implies **-f**).

**-f**

runs the command as a foreground operation.

**-o allow\_other**

allows access to other users.

**-o allow\_root**

allows access to root.

**-o nonempty**

allows mounts over files and non-empty directories.

**-o default\_permissions**

enables permission checking by the kernel.

**-o max\_read=<n>**

sets maximum size of read requests.

**-o kernel\_cache**

caches files in the kernel.

**-o [no]auto\_cache**

enables or disables caching based on modification times.

**-o umask=<mask>**

sets file permissions (octal).

**-o uid=<n>**

sets the file owner.

**-o gid=<n>**

sets the file group.

- o max\_write=<n>**  
sets the maximum size of write requests.
- o max\_readahead=<n>**  
sets the maximum readahead value.
- o async\_read**  
performs reads asynchronously (default).
- o sync\_read**  
performs reads synchronously.
- <node\_list>**  
one or more device nodes for the DASDs, separated by blanks.
- <file\_name>**  
a file that contains a node list.
- <mountpoint>**  
the mount point in the Linux file system where you want to mount the z/OS data sets.
- h or --help**  
displays help information for the command. To view the man page, enter **man zdsfs**.
- v or --version**  
displays version information for the command.

### File characteristics

There are two ways to handle the z/OS characteristics of a file:

- The file `metadata.txt`:

The `metadata.txt` file is in the root directory of the mount point. It contains one row for each file or directory, where:

#### **dsn**

specifies

- the name of the file in the form `<file_name>` for z/OS physical sequential data sets.
- the name of the directory in the form `<directory_name>`, and the name of a file in that directory in the form `<directory_name>(<file_name>)` for z/OS partitioned data sets.

#### **dsorg**

specifies the organization of the file. The organization is PO for a directory, and PS for a file.

#### **lrecl**

specifies the record length of the file.

#### **recfm**

specifies the z/OS record format of the file. Supported record formats are: V, F, U, B, S, A, and M.

#### **Example:**

```
dsn=F00BAR.TESTF.TXT,recfm=FB,lrecl=80,dsorg=PS
dsn=F00BAR.TESTVB.TXT,recfm=VB,lrecl=100,dsorg=PS
dsn=F00BAR.PDSF.DAT,recfm=F,lrecl=80,dsorg=PO
dsn=F00BAR.PDSF.DAT(TEST1),recfm=F,lrecl=80,dsorg=PS
dsn=F00BAR.PDSF.DAT(TEST2),recfm=F,lrecl=80,dsorg=PS
dsn=F00BAR.PDSF.DAT(TEXT3),recfm=F,lrecl=80,dsorg=PS
```

- Extended attributes:

#### **user.dsorg**

specifies the organization of the file.

#### **user.lrecl**

specifies the record length of the file.

#### **user.recfm**

specifies the z/OS record format of the file.

You can use the following system calls to work with extended attributes:

### **listxattr**

to list the current values of all extended attributes.

### **getxattr**

to read the current value of a particular extended attribute.

You can use these system calls through the **getfattr** command. For more information, see the man pages of these commands and of the **listxattr** and **getxattr** system calls.

## **Examples**

- Enable the raw-track access mode of DASD device 0.0.7000 and set the device online afterward:

```
# chccwdev -a raw_track_access=1 -e 0.0.7000
```

- Mount the partitioned data set on the DASDs represented by the file nodes `/dev/dasde` and `/dev/dasdf` at `/mnt`:

```
# zdsfs /dev/dasde /dev/dasdf /mnt
```

- As user "myuser", mount the partitioned data set on the DASD represented by the file node `/dev/dasde` at `/home/myuser/mntzos`:

– Access the mounted file system exclusively:

```
# zdsfs /dev/dasde /home/myuser/mntzos
```

– Allow the root user to access the mounted file system:

```
# zdsfs -o allow_root /dev/dasde /home/myuser/mntzos
```

The **ls** command does not reflect these permissions. In both cases, it shows:

```
# ls -al /home/myuser/mntzos
total 121284
dr-xr-x--- 2 root root          0 Dec  3 15:54 .
drwx----- 3 myuser myuser    4096 Dec  3 15:51 ..
-r--r----- 1 root root 2833200 Jun 27 2012 EXPORT.BIN1.DAT
-r--r----- 1 root root 2833200 Jun 27 2012 EXPORT.BIN2.DAT
-r--r----- 1 root root 2833200 Jun 27 2012 EXPORT.BIN3.DAT
-r--r----- 1 root root 2833200 Feb 14 2013 EXPORT.BIN4.DAT
dr-xr-x--- 2 root root 13599360 Aug  9 2012 EXPORT.PDS1.DAT
dr-xr-x--- 2 root root 13599360 Aug  9 2012 EXPORT.PDS2.DAT
dr-xr-x--- 2 root root 13599360 Aug  9 2012 EXPORT.PDS3.DAT
dr-xr-x--- 2 root root 55247400 Aug  9 2012 EXPORT.PDS4.DAT
-r--r----- 1 root root      981 Dec  3 15:54 metadata.txt

$ ls -al /dev/dasde
brw-rw---- 1 root disk 94, 16 Dec  3 13:58 /dev/dasde
```

- As root user, mount the partitioned data set on the DASD represented by the file node `/dev/dasde` at `/mnt` on behalf of the user ID "myuser" (UID=1002), and permit the members of the group ID "zosimport" (GID=1002) file access:

```
# zdsfs /dev/dasde /mnt -o uid=1002,gid=1002,allow_other,default_permissions
```

The **ls** command indicates the owner "myuser" and the access right for group "zosimport":

```
$ ls -al /mnt
total 121284
dr-xr-x--- 2 myuser zosimport      0 Dec  3 14:22 .
drwxr-xr-x 23 root    root        4096 Dec  3 13:59 ..
-r--r----- 1 myuser zosimport      981 Dec  3 14:22 metadata.txt
-r--r----- 1 myuser zosimport 2833200 Jun 27 2012 EXPORT.BIN1.DAT
-r--r----- 1 myuser zosimport 2833200 Jun 27 2012 EXPORT.BIN2.DAT
-r--r----- 1 myuser zosimport 2833200 Feb 14 2013 EXPORT.BIN3.DAT
-r--r----- 1 myuser zosimport 2833200 Jun 27 2012 EXPORT.BIN4.DAT
dr-xr-x--- 2 myuser zosimport 13599360 Aug  9 2012 EXPORT.PDS1.DAT
dr-xr-x--- 2 myuser zosimport 13599360 Aug  9 2012 EXPORT.PDS2.DAT
dr-xr-x--- 2 myuser zosimport 55247400 Aug  9 2012 EXPORT.PDS3.DAT
dr-xr-x--- 2 myuser zosimport 13599360 Aug  9 2012 EXPORT.PDS4.DAT
```

- Unmount the partitioned data set that is mounted at /mnt:

```
# fusermount -u /mnt
```

- Show the extended attributes of a file, FB.XMP.TXT, on a z/OS DASD that is mounted on /mnt:

```
# getfattr -d /mnt/FB.XMP.TXT
```

- Show the extended attributes of all files on a z/OS DASD that is mounted on /mnt:

```
# cat /mnt/metadata.txt
```

## zkey - Generate, validate, and re-encipher secure AES keys

Use the **zkey** command to generate, validate, and re-encipher secure AES keys for Crypto Express CCA co-processors.

The **zkey** command is used in the context of a cryptographic domain of a Crypto Express adapter in CCA co-processor mode. At least one domain must have an AES master key configured. Such a domain of a cryptographic adapter maintains three registers for master keys: The OLD, the NEW, and the CURRENT. In the following description, OLD, NEW, and CURRENT refer to the master key registers of the applicable domain.


**Note:** If multiple domains on potentially multiple CCA co-processors are available, the **zkey** command might use any of those domains, and hence, adapters.

### Prerequisites

- The **zkey** command requires access to a cryptographic domain that has a configured AES master key.
- The **zkey** command requires the pkey kernel module, see [Chapter 51, “Protected key device driver,”](#) on page 459.
- The **reencipher** command requires the IBM CCA Host Library (libcsulcca.so). The IBM CCA host library is part to the CCA software package, which you can obtain from

[www.ibm.com/security/cryptocards/pciecc2/lonzsoftware.shtml](http://www.ibm.com/security/cryptocards/pciecc2/lonzsoftware.shtml)

### Syntax

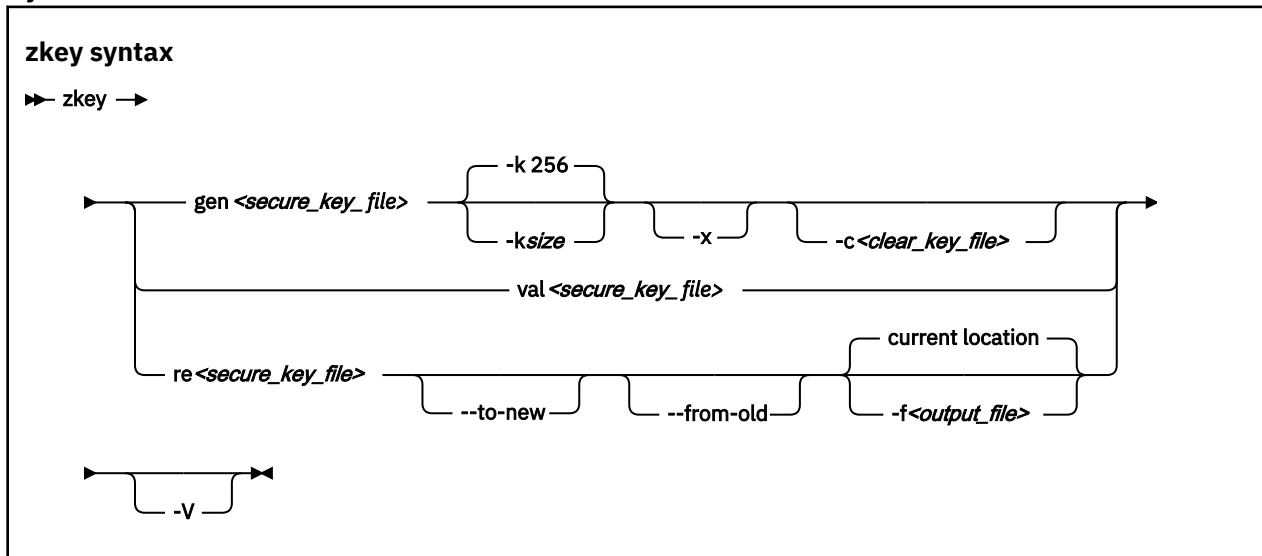

Where:

#### **gen <secure\_key\_file> or generate <secure\_key\_file>**

generates a new secure AES key either randomly within the CCA cryptographic adapter, or from a clear AES key specified as input.

#### **-k or --keybits**

specifies the size of the AES key to be generated in bits. Valid sizes are 128, 192, and 256 bits. Secure keys for use with the XTS cipher mode can only use keys of 128 or 256 bits. The default is 256 bits.

#### **-x or --xts**

generates a secure AES key for the XTS cipher mode. A secure AES key for the XTS cipher mode consist of two concatenated secure keys.

**-c <clear\_key\_file> or --clearkey <clear\_key\_file>**

specifies a file path that contains the clear AES key in binary form. If the `--keybits` option is omitted, the size of the specified file determines the size of the AES key. If the `--keybits` option is specified, the size of the specified file must match the specified key size. Valid file sizes are 16, 24, or 32 bytes, and for the XTS cipher mode 32 or 64 bytes.

**val <secure\_key\_file> or validate <secure\_key\_file>**

checks whether the specified file contains a valid secure key. It also displays the attributes of the secure key, such as key size, whether it is a secure key that can be used for the XTS cipher mode, and the master key register with which the secure key is enciphered.

**re <secure\_key\_file> or reencipher <secure\_key\_file>**

re-enciphers an existing secure key with a new master key. A secure key must be re-enciphered when the master key of the CCA cryptographic adapter changes.

**-n or --to-new**

re-enciphers a secure key that is currently enciphered with the master key in the CURRENT register with the master key in the NEW register.

**-o or --from-old**

re-enciphers a secure key that is currently enciphered with the master key in the OLD register with the master key in the CURRENT register.

If both options are specified, a secure key that is currently enciphered with the master key in the OLD register is re-enciphered with the master key in the NEW register.

If both options are omitted, **zkey** automatically detects whether the secure key is currently enciphered with the master key in the OLD register or with the master key in the CURRENT register.

If currently enciphered with the master key in the OLD register, it is re-enciphered with the master key in the CURRENT register. If it is currently enciphered with the master key in the CURRENT register, it is re-enciphered with the master key in the NEW register.

**-f <output\_file> or --output <output\_file>**

specifies the name of the output file to which the re-enciphered secure key is written. If this option is omitted, the re-enciphered secure key is replaced in the file that currently contains the secure key.

**-V or --verbose**

displays additional information during processing.

**-h or --help**

displays help information for the command.

**-v or --version**

displays the version number of **zkey**.

**Examples**

- To generate a 256-bit secure AES key and store it in `seckey.bin`:

```
zkey generate seckey.bin
```

- To generate a 128-bit secure AES key for the XTS cipher mode and store it in `seckey.bin`:

```
zkey generate seckey.bin --keybits 128 --xts
```

- To generate a secure AES key from the clear key in file `clearkey.bin` and store it in `seckey.bin`:

```
zkey generate seckey.bin --clearkey clearkey.bin
```

- To re-encipher the secure key in `seckey.bin`, which is currently enciphered with the master key in the OLD register with the master key in the CURRENT register, and replace the secure key in `seckey.bin` with the re-enciphered key:

```
zkey generate seckey.bin --from-old
```

- To re-encipher the secure key in `seckey.bin`, which is currently enciphered with the master key in the CURRENT register, with the master key in the NEW register, and save the re-enciphered secure key to `seckey2.bin`:

```
zkey reencipher seckey.bin --to-new --output seckey2.bin
```

- To validate the secure key in `seckey.bin` and display its attributes:

```
zkey validate seckey.bin
```

For more details about command usage, see the man page.



## znetconf - List and configure network devices

Use the **znetconf** command to list, configure, add, and remove network devices.

The **znetconf** command:

- Lists potential network devices.
- Lists configured network devices.
- Automatically configures and adds network devices.
- Removes network devices.

For automatic configuration, **znetconf** first builds a channel command word (CCW) group device from sensed CCW devices. It then configures any specified option through the sensed network device driver and sets the new network device online.


During automatic removal, **znetconf** sets the device offline and removes it.



**Attention:** Removing all network devices might lead to complete loss of network connectivity. Unless you can access your Linux instance from a terminal server on z/VM (see *How to Set up a Terminal Server Environment on z/VM*, SC34-2596), you might require the HMC or a 3270 terminal session to restore the connectivity.

**Before you begin:** The qeth, ctcn, or lcs device drivers must be loaded. If needed, the **znetconf** command attempts to load the particular device driver.

### znetconf syntax

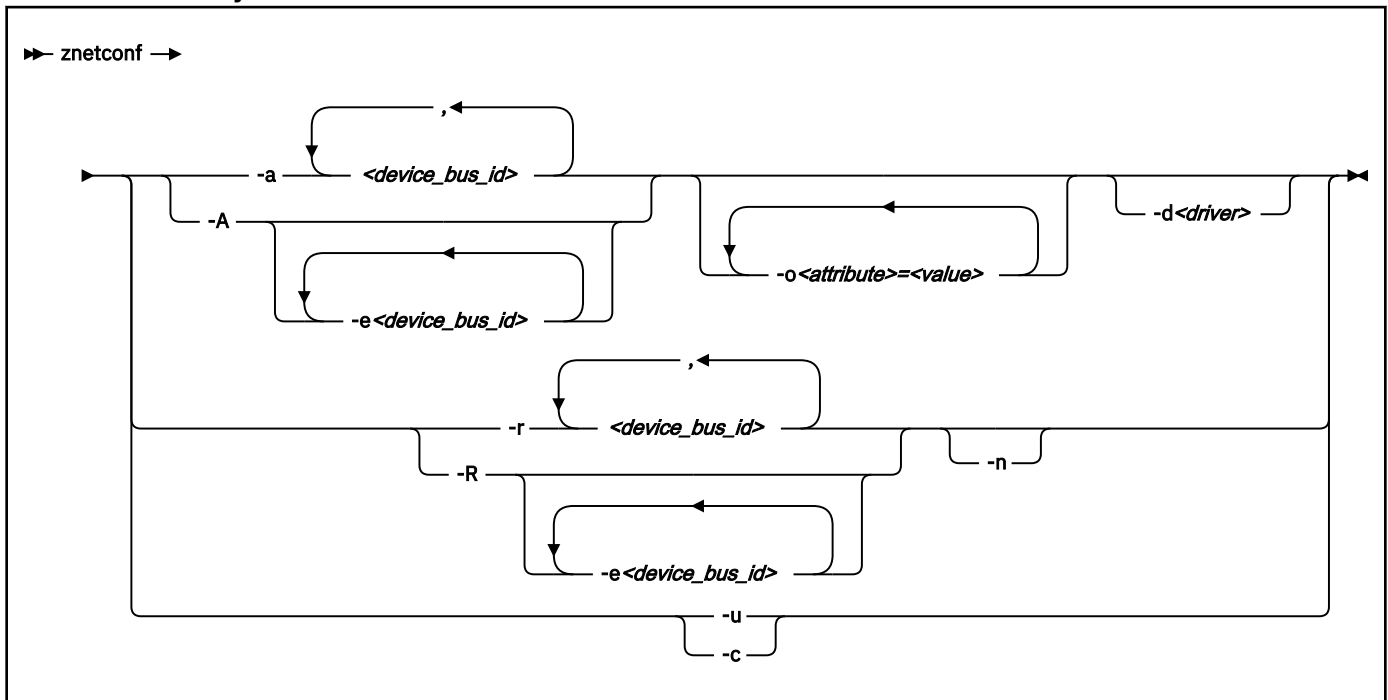

Where:

#### **-a or --add**

configures the network device with the specified device bus-ID. If you specify only one bus ID, the command automatically identifies the remaining bus IDs of the group device. You can enter a list of device bus-IDs that are separated by commas. The **znetconf** command does not check the validity of the combination of device bus-IDs.

**<device\_bus\_id>**

specifies the device bus-ID of the CCW devices that constitute the network device. If a device bus-ID begins with "0.0.", you can abbreviate it to the final hexadecimal digits. For example, you can abbreviate 0.0.f503 to f503.

**-A or --add-all**

configures all potential network devices. After you run **znetconf -A**, enter **znetconf -c** to see which devices were configured. You can also enter **znetconf -u** to display devices that were not configured.

**-e or --except**

omits the specified devices when configuring all potential network devices or removing all configured network devices.

**-o <attribute>=<value> or --option <attribute>=<value>**

configures devices with the specified sysfs option.

**-d <driver name> or --driver <driver name>**

configures devices with the specified device driver. Valid values are qeth, lcs, etc, or ctcn.

**-n or --non-interactive**

answers all confirmation questions with "Yes".

**-r or --remove**

removes the network device with the specified device bus-ID. You can enter a list of device bus-IDs that are separated by a comma. You can remove only configured devices as listed by **znetconf -c**.

**-R or --remove-all**

removes all configured network devices. After successfully running this command, all devices that are listed by **znetconf -c** become potential devices that are listed by **znetconf -u**.

**-u or --unconfigured**

lists all network devices that are not yet configured.

**-c or --configured**

lists all configured network devices.

**-h or --help**

displays short information about command usage. To view the man page, enter **man znetconf**.

**-v or --version**

displays version information.

If the command completes successfully, **znetconf** returns 0. Otherwise, 1 is returned.

**Examples**

- To list all potential network devices:

```
# znetconf -u
Device IDs              Type      Card Type  CHPID Drv.
-----
0.0.f500,0.0.f501,0.0.f502 1731/01  OSA (QDIO) 00    qeth
0.0.f503,0.0.f504,0.0.f505 1731/01  OSA (QDIO) 01    qeth
```

- To configure device 0.0.f503:

```
znetconf -a 0.0.f503
```

or

```
znetconf -a f503
```

- To configure the potential network device 0.0.f500 with the layer2 option with the value 0:

```
znetconf -a f500 -o layer2=0
```

- To list configured network devices:

```
znetconf -c
Device IDs          Type      Card Type      CHPID Drv. Name      State
-----
0.0.f500,0.0.f501,0.0.f502 1731/01 Virt.NIC QDIO 00    qeth encf500 online
0.0.f503,0.0.f504,0.0.f505 1731/01 Virt.NIC QDIO 01    qeth encf503 online
0.0.f5f0,0.0.f5f1,0.0.f5f2 1731/01 OSD_1000    76    qeth encf5f0 online
```

- To remove network device 0.0.f503:

```
znetconf -r 0.0.f503
```

or

```
znetconf -r f503
```

- To remove all configured network devices except the devices with bus IDs 0.0.f500 and 0.0.f5f0:

```
znetconf -R -e 0.0.f500 -e 0.0.f5f0
```

- To configure all potential network devices except the device with bus ID 0.0.f503:

```
znetconf -A -e 0.0.f503
```

## zpcictl - Manage defective PCIe devices

Use the **zpcictl** to manage PCI devices on Linux in LPAR mode and Linux on z/VM. In particular, use this command to report defective PCI devices to the support element (SE).

**Note:** With the `smartmontools` package installed, diagnostic data might be collected and sent with the recovery action. Whether diagnostic data is collected and which data is available depends on the PCI device type.

### zpcictl syntax

```

>> zpcictl { --reset | --deconfigure | --report-error } <function_address> <<

```

Where:

#### **--reset**

resets the device.

#### **--deconfigure**

deconfigures the device to prepare for any repair action.

#### **--report-error**

reports the device error to the SE.

#### **<function\_address>**

the PCI function address of the device, for example, 0000:00:00.0.

#### **-h or --help**

displays help information for the command. To view the man page, enter **man zpcictl**.

#### **-v or --version**

displays version information.

### Example

In this example, an error is reported for a PCI device with slot ID 0000:00:00.0.


```
# zpcictl --report-error 0000:00:00.0
```

## zcryptctl - Control access to AP queues and functions

Use the **zcryptctl** command to control access to AP queues and functions.

For more information about cryptographic device nodes, see [“Creating customized device nodes”](#) on page 440.

### zcryptctl syntax

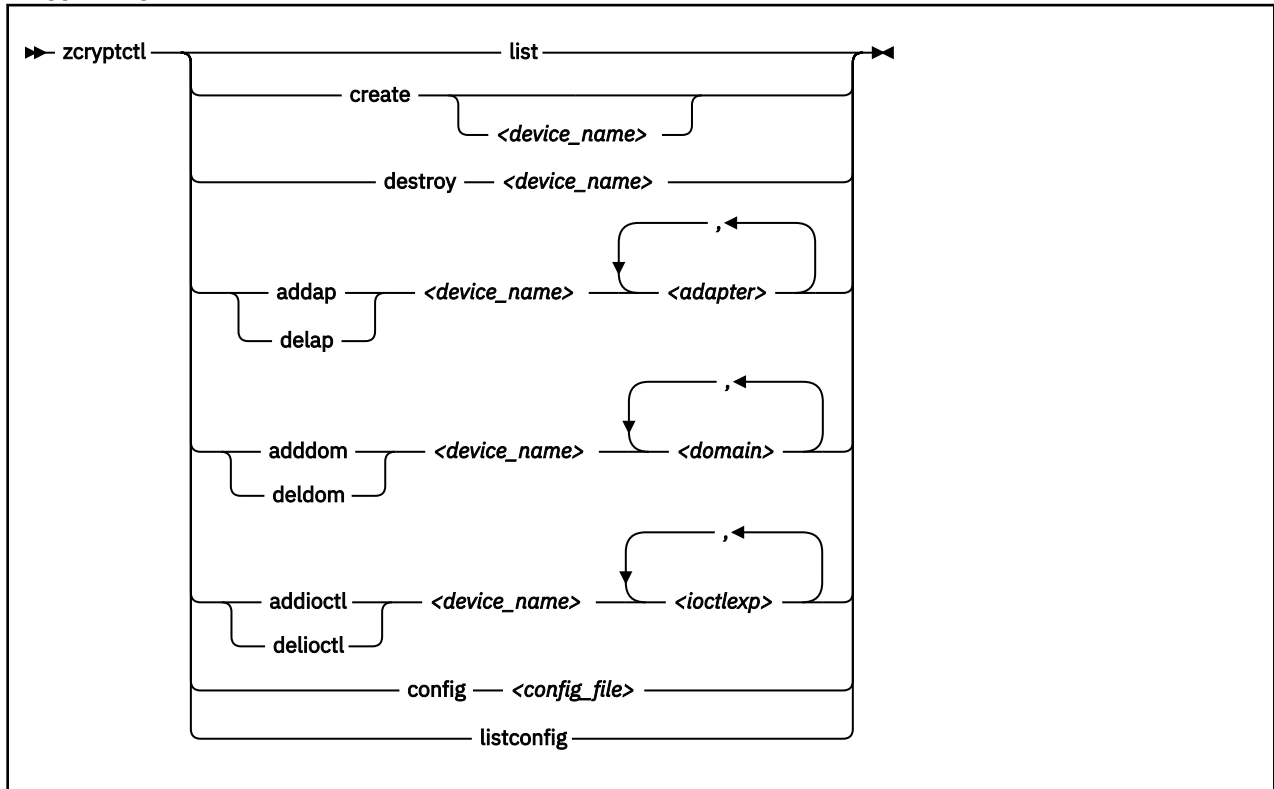

Where:

#### list

lists all zcrypt device nodes.

#### create <node\_name>

creates a new zcrypt device node. The <device\_name> is optional and must be unique. If no node name is provided, the zcrypt device driver creates one with a name of the form: zcrypt\_<n>, where <n> is the next free number. By default no adapter, domain, or IOCTL is allowed on the new device.

By default the device node file is created with permissions 0600 and might need adjustments to be usable by non-root users.

#### destroy <device\_name>

destroys a zcrypt device. Marks the given zcrypt device as disposable. The device is removed when the use counter is zero.

#### addap <device\_name> <adapter>

adds a cryptographic adapter to be accessible through this device. The adapter argument is a number in the range 0 - 255. Specify ALL to enable all adapters.

#### delap <device\_name> <adapter>

removes the adapter from the allowed adapters list. The adapter argument is a number in the range 0 - 255. Specify ALL to remove all adapters.

**adddom <device\_name> <domain\_nr>**

adds a domain to be accessible through the specified device. The domain argument is a number in the range 0 - 255. Specify ALL to enable all domains.

**deldom <device\_name> <domain\_nr>**

deletes a domain from the specified device. Specify ALL to delete all domains.

**addioctl<device\_name> <ioclt\_exp>**

adds an IOCTL. Specify the IOCTL as a symbolic string or the corresponding numeric value in the range 0 - 255. Specify ALL to include all IOCTLs. The IOCTLs and their numbers are listed in `arch/s390/include/uapi/asm/zcrypt.h`.

**delioctl <device\_name> <ioclt\_exp>**

deletes the specified IOCTL. Specify the IOCTL as a symbolic string or a numeric value in the range 0 - 255. Specify ALL to delete all IOCTLs.

**config <config\_file>**

processes a configuration file.

**listconfig**

lists the current configuration in a format suitable for the config command.

**Tip:** Use **listconfig** to generate a configuration file that can be used as input to the **config** command.

**Examples**

These examples illustrate common uses for **zcryptctl**.

- To list the currently defined devices and their attributes:

```
zcryptctl list
zcdn node name: zcrypt_2
  device node: /dev/zcrypt_2
  major:minor: 250:2
  ioctls: ICARSAMODEXPO,ICARSACRT
  adapter: 4,8,9
  domains: 6,11,81
zcdn node name: zcrypt_0
  device node: /dev/zcrypt_0
  major:minor: 250:0
  ioctls: ZCRYPT_STATUS_MASK,ZCRYPT_DEVICE_STATUS,ZSESEND CPRB
  adapter: 7,10
  domains: 81
zcdn node name: zcrypt_1
  device node: /dev/zcrypt_1
  major:minor: 250:1
  ioctls: ZSEND EP11 CPRB,ZCRYPT_STATUS_MASK,ZCRYPT_DEVICE_STATUS
  adapter: 6,11
  domains: 11
```

**Creating a configuration file**

The given configuration file is read line by line and the actions are executed. The syntax is as follows:

- A `node=<node_name>` line creates a new device node with the given name. The subsequent actions act on this node until another `node=` line encountered. For example, to create a device node called `zcdn_node_1`:

```
node = zcdn_node_1
```

- The `aps=<list_of_ap_numbers>` action adds allowed adapters to the node configuration. The adapters must be separated by space, tab, or commas. For example, to add adapters 1,2,5, and 7:

```
aps = 1, 2, 5, 7
```

- The `doms=<list_of_domain_numbers>` action adds allowed domains to the node configuration. The domains must be separated by space, tab, or commas. For example, to allow domain 6:

```
doms = 6
```

- The `ioctls=<list_of_ioctl_as_number_or_symbolic number>` adds allowed IOCTLs to the node configuration. The IOCTLs must be separated by space, tab, or commas. For example, to specify that a node can send requests, update status, and show the status:

```
ioctls = ZSESEND CPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK
```

The symbol ALL is also recognized for the `aps`, `doms` and `ioctls` actions.

Empty lines are ignored and the number sign (#) marks the rest of the line as a comment. Each action must fit on one line, multiple lines is not supported. You can use more than one `aps`, `doms`, or `ioctls` line to customize the same node.

### Example configuration file

```
#####
# Sample zcrypt device node configuration
#####
# node 1 for CCA requests on domain 6
node = zcdn_node_1
aps = 1, 2, 5, 7
doms = 6
ioctls = ZSESEND CPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK

# node 2 for CCA requests on domain 11
node = zcdn_node_2
aps = 1, 2, 5, 7
doms = 11
ioctls = ZSESEND CPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK

# node 3 for EP11 on domain 6 and 11
node = zcdn_node_3
aps = 3, 6, 11
doms = 6, 11
ioctls = ZSEND EP11 CPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK

# node 4 for clear key on everything
node = zcdn_node_4
aps = ALL
doms = ALL
ioctls = ICARSAMODEXPO, ICARSACRT, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK

# node 5 special EP11 on adapter 10, any domain
node = zcdn_node_5
aps = 0x0a
doms = ALL
ioctls = ZSEND EP11 CPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK


# node 6 special CCA only on adapter 7, domain 81
node = zcdn_node_6
aps = 7
doms = 0x51
ioctls = ZSESEND CPRB, ZCRYPT_DEVICE_STATUS, ZCRYPT_STATUS_MASK
```

## zcryptstats - Display crypto statistics

Use the **zcryptstats** command to report cryptographic performance measurement data for cryptographic devices at specified intervals.

Device node `/dev/chsc` must exist. Load the `chsh_sch` kernel module with **modprobe chsc\_sch** to make device node `/dev/chsc` available.

### zcryptstats syntax

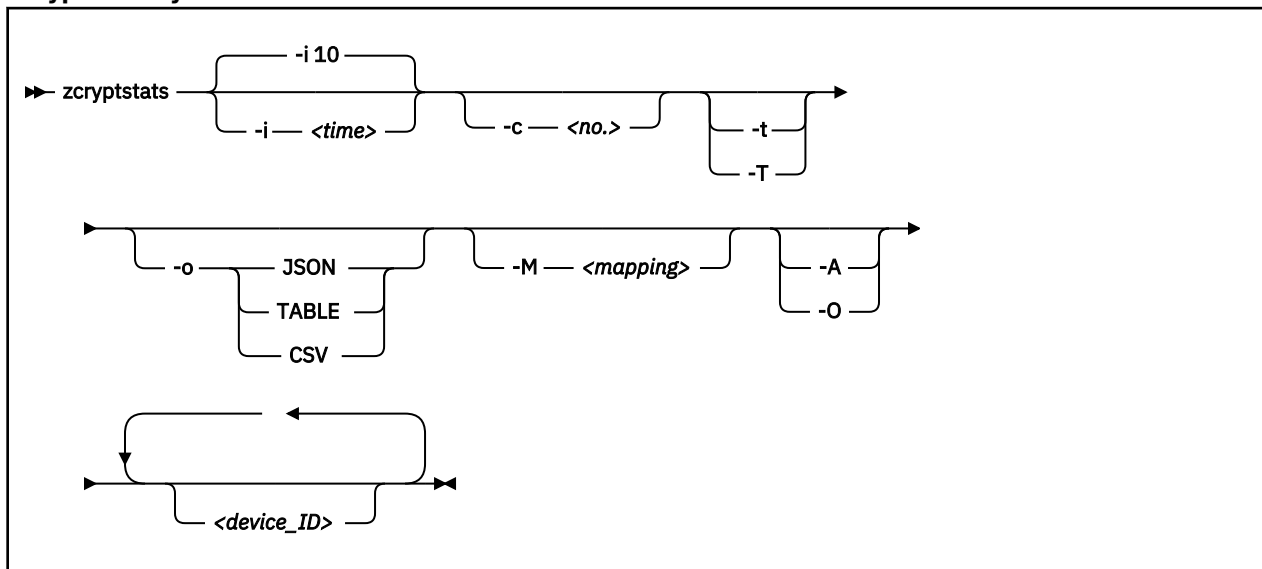

Where:

**-i or --interval <time>**

specifies the time interval between reports in seconds. The default is 10 seconds.

**-c or --count <no.>**

specifies the number of reports to be generated. By default the **zcryptstats** command keeps generating reports until it is stopped with Ctrl+C.

**-o or --output JSON|TABLE|CSV**

displays the statistics in the specified format. By default, a comprehensive report is displayed in a human readable format. Supported output formats are: JSON, TABLE, or CSV.

With TABLE and CSV, only the totals are displayed, that is, TABLE and CSV formats imply the `--only-totals` option.

With JSON or the default display, you can optionally specify one of the `--only-totals` or `--no-totals` options.

**-t or --no-totals**

omits the totals of all counters of a cryptographic adapter (CARD) or queue device (APQN). This option cannot be specified together with the `--only-totals` option or the `--output TABLE | CSV` option.

**-T or --only-totals**

omits the individual counters of a cryptographic adapter or a queue device. This option is implied with the `--output TABLE | CSV` option.

**-a or --no-apqn**

displays only the counters of the cryptographic adapter, but omits the counters of the queue device. This option is implied for mainframes before the October 2018 upgrade of IBM z14.



**-M or --map-type <mapping>**

maps unknown cryptographic device types and modes to known types and modes. Use this option only when new, unknown cryptographic devices are found. You can map unknown devices to known devices and modes, if the new device reports the same counters as the known device. Specify the mapping as a comma-separated list of FROM-TYPE:FROM-MODE=TO-TYPE:TO-MODE specifications. The type and mode values must be specified in decimal notation.

**-A or --all**

displays all adapter devices and queue devices, not only those devices that are available to the LPAR in which Linux runs. Using this option, additional cryptographic devices that are available in the CEC are also monitored. This option cannot be specified together with the `--only-online` option.

**-O or --only-online**

displays only online cryptographic adapters and queue devices. This option cannot be specified together with the `--all` option.

**-V or --verbose**

displays additional information messages during processing.

**-h or --help**

displays help information for the command. To view the man page, enter `man zpcryptstats`.

**-v or --version**

displays version information for the command.

**<device\_ID>**

List of cryptographic device IDs, separated by blanks, for which statistics are displayed. Device IDs can either be cryptographic adapter IDs or queue device IDs (<adapter\_ID>.<domain\_ID>). To filter all devices according to a dedicated domain, provide "<domain\_ID>". If no IDs are given, all available devices are displayed.

**Examples**

- To display statistics for the cryptographic adapter with ID 0x02.

```
# zpcryptstats 02
```

- Display statistics for domain 0x0005 on adapter 0x02 (APQN 02.0005).

```
# zpcryptstats 02.0005
```

- Example of output from an idling system in default display format:

```
Linux <version> <system> 16/08/19 s390x
*****
TIME: 16/08/19 10:26:38 INTERVAL: 1
```

| DEVICE       | TYPE                     | TIMESTAMP         |             |              |  |
|--------------|--------------------------|-------------------|-------------|--------------|--|
| 08           | CARD CEX6A (Accelerator) | 16/08/19 10:07:36 |             |              |  |
| COUNTER      | OPS                      | RATE              | UTILIZATION | AVG.DURATION |  |
| RSA 1024 ME  | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 2048 ME  | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 1024 CRT | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 2048 CRT | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 4096 ME  | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 4096 CTR | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |
| Total        | 0                        | 0.00              | 0.00 %      | 0.000 usec   |  |

| DEVICE       | TYPE                | TIMESTAMP         |             |              |  |
|--------------|---------------------|-------------------|-------------|--------------|--|
| 08.0006 APQN | CEX6A (Accelerator) | 16/08/19 10:07:36 |             |              |  |
| COUNTER      | OPS                 | RATE              | UTILIZATION | AVG.DURATION |  |
| RSA 1024 ME  | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 2048 ME  | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 1024 CRT | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 2048 CRT | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 4096 ME  | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |
| RSA 4096 CTR | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |
| Total        | 0                   | 0.00              | 0.00 %      | 0.000 usec   |  |

| DEVICE       | TYPE                     | TIMESTAMP         |  |  |  |
|--------------|--------------------------|-------------------|--|--|--|
| 0a.0006 APQN | CEX6C (CCA co-processor) | 16/08/19 10:07:36 |  |  |  |
| ...          |                          |                   |  |  |  |

- Example of the same output in TABLE format:

```
Linux <version> <system> 16/08/19 s390x
TIMESTAMP      DEVICE      OPS      RATE      UTILIZATION  AVG.DURATION
-----
16/08/19 10:11:47 08          0         0.00      0.00 %      0.000 usec
16/08/19 10:11:47 08.0006     0         0.00      0.00 %      0.000 usec
16/08/19 10:11:47 0a          0         0.00      0.00 %      0.000 usec
16/08/19 10:11:47 0a.0006     0         0.00      0.00 %      0.000 usec
16/08/19 10:11:47 0b          0         0.00      0.00 %      0.000 usec
16/08/19 10:11:47 0b.0006     0         0.00      0.00 %      0.000 usec
....
```

- Example of the same output in CSV format:

```
TIMESTAMP,DEVICE,OPS,RATE,UTILIZATION,AVG.DURATION
16/08/19 10:12:50,08,0,0.00,0.00 %,0.000000000
16/08/19 10:12:50,08.0006,0,0.00,0.00 %,0.000000000
16/08/19 10:12:50,0a,0,0.00,0.00 %,0.000000000
16/08/19 10:12:50,0a.0006,0,0.00,0.00 %,0.000000000
16/08/19 10:12:50,0b,0,0.00,0.00 %,0.000000000
16/08/19 10:12:50,0b.0006,0,0.00,0.00 %,0.000000000
....
```

- Example of the same output in JSON format:

```

{"zcryptstats": {
  "host": {
    "nodename": "m35lp70",
    "sysname": "Linux",
    "release": "4.19.0-rc8",
    "machine": "s390x",
    "date": "16/08/19",
    "statistics": [
      {
        "interval": 1, "timestamp": "16/08/19 10:15:46", "devices": [
          {
            "device": "08", "type": "CEX6A (Accelerator)",
            "counters": [
              {
                "counter": "RSA 1024 ME", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000},
              {
                "counter": "RSA 2048 ME", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000},
              {
                "counter": "RSA 1024 CRT", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000},
              {
                "counter": "RSA 2048 CRT", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000},
              {
                "counter": "RSA 4096 ME", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000},
              {
                "counter": "RSA 4096 CTR", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000},
              {
                "counter": "Total", "ops": 0, "rate": 0.00,
                "utilization": 0.00, "duration": 0.000000000}
            ]},
          {
            "device": "08.0006", "type": "CEX6A (Accelerator)",
            "counters": [

```

....



---

## Chapter 62. Selected kernel parameters

You can use kernel parameters that are beyond the scope of an individual device driver or feature to configure Linux in general.

Device driver-specific kernel parameters are described in the setting up section of the respective device driver.

See [Chapter 4, “Kernel and module parameters,” on page 23](#) for information about specifying kernel parameters.

## cio\_ignore - List devices to be ignored


Use the `cio_ignore=` kernel parameter to list specifications for I/O devices that are to be ignored.

When an instance of Linux on Z boots, it senses and analyzes all available I/O devices. The following applies to ignored devices:

- Ignored devices are not sensed and analyzed. The device cannot be used until it is analyzed.
- Ignored devices are not represented in `sysfs`.
- Ignored devices do not occupy storage in the kernel.
- The subchannel to which an ignored device is attached is treated as if no device were attached.
- For Linux on z/VM, `cio_ignore` might hide essential devices such as the console. The console is typically device number 0.0.0009.

See also [“Changing the exclusion list”](#) on page 683.

### Format

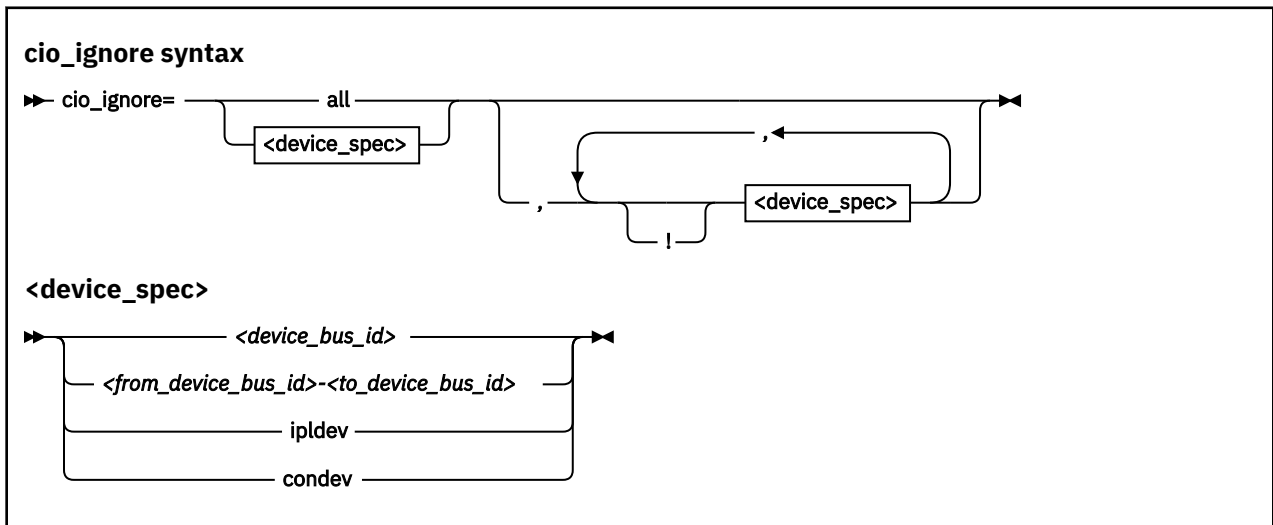

Where:

#### **all**

states that all devices are to be ignored.

#### **<device\_bus\_id>**

specifies a device. Device bus-IDs are of the form 0.<n>.<devno>, where <n> is a subchannel set ID and <devno> is a device number.

#### **<from\_device\_bus\_id>-<to\_device\_bus\_id>**

are two device bus-IDs that specify the first and the last device in a range of devices.

#### **ipldev**

specifies the IPL device. Use this keyword with the `!` operator to avoid ignoring the IPL device.

#### **condev**

specifies the CCW console. Use this keyword with the `!` operator to avoid ignoring the console device.

#### **!**

makes the following term an exclusion statement. This operator is used to exclude individual devices or ranges of devices from a preceding more general specification of devices.

## Examples

- This example specifies that all devices in the range 0.0.b100 through 0.0.b1ff, and the device 0.0.a100 are to be ignored.

```
cio_ignore=0.0.b100-0.0.b1ff,0.0.a100
```

- This example specifies that all devices are to be ignored.

```
cio_ignore=all
```

- This example specifies that all devices except the console are to be ignored.

```
cio_ignore=all,!condev
```

- This example specifies that all devices but the range 0.0.b100 through 0.0.b1ff, and the device 0.0.a100 are to be ignored.

```
cio_ignore=all,!0.0.b100-0.0.b1ff,!0.0.a100
```

- This example specifies that all devices in the range 0.0.1000 through 0.0.1500 are to be ignored, except for devices in the range 0.0.1100 through 0.0.1120.

```
cio_ignore=0.0.1000-0.0.1500,!0.0.1100-0.0.1120
```

This is equivalent to the following specification:

```
cio_ignore=0.0.1000-0.0.10ff,0.0.1121-0.0.1500
```

- This example specifies that all devices in range 0.0.1000 through 0.0.1100 and all devices in range 0.1.7000 through 0.1.7010, plus device 0.0.1234 and device 0.1.4321 are to be ignored.

```
cio_ignore=0.0.1000-0.0.1100, 0.1.7000-0.1.7010, 0.0.1234, 0.1.4321
```

## Changing the exclusion list

Use the **cio\_ignore** command or the procfs interface to view or change the list of I/O device specifications that are ignored.

When an instance of Linux on Z boots, it senses and analyzes all available I/O devices. You can use the **cio\_ignore** kernel parameter to list specifications for devices that are to be ignored.

On a running Linux instance, you can view and change the exclusion list through a procfs interface.

After booting Linux you can display the exclusion list by issuing:

```
# cat /proc/cio_ignore
```

To add device specifications to the exclusion list issue a command of this form:

```
# echo add <device_list> > /proc/cio_ignore
```

When you add specifications for a device that is already sensed and analyzed, there is no immediate effect of adding it to the exclusion list. For example, the device still appears in the output of the **lscss** command and can be set online. However, if the device later becomes unavailable, it is ignored when it reappears. For example, if the device is detached in z/VM it is ignored when it is attached again.

To make all devices that are in the exclusion list and that are currently offline unavailable to Linux issue a command of this form:

```
# echo purge > /proc/cio_ignore
```


This command does not make devices unavailable if they are online.

To remove device specifications from the exclusion list issue a command of this form:

```
# echo free <device_list> > /proc/cio_ignore
```

When you remove device specifications from the exclusion list, the corresponding devices are sensed and analyzed if they exist. Where possible, the respective device driver is informed, and the devices become available to Linux.

In these commands, <device\_list> follows this syntax:

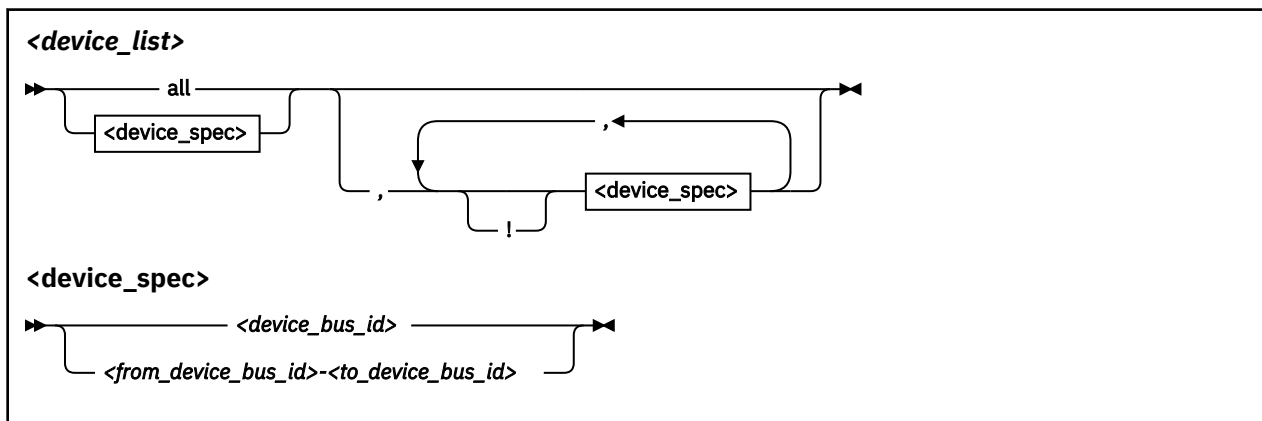

Where the keywords and variables have the same meaning as in [“Format” on page 682](#).

### Ensure device availability

After the echo command completes successfully, some time might elapse until the freed device becomes available to Linux. To confirm that a device has become available to Linux verify that the sysfs attribute `/sys/bus/ccw/devices/<device_bus_ID>/online` is present.

### Results

The dynamically changed exclusion list is only taken into account when a device in this list is newly made available to the system, for example after it is defined to the system. It does not have any effect on setting devices online or offline within Linux.

### Examples

- This command removes all devices from the exclusion list.

```
# echo free all > /proc/cio_ignore
```

- This command adds all devices in the range 0.0.b100 through 0.0.b1ff and device 0.0.a100 to the exclusion list.

```
# echo add 0.0.b100-0.0.b1ff,0.0.a100 > /proc/cio_ignore
```

- This command lists the ranges of devices that are ignored by common I/O.

```
# cat /proc/cio_ignore
0.0.0000-0.0.a0ff
0.0.a101-0.0.b0ff
0.0.b200-0.0.ffff
```

- This command removes all devices in the range 0.0.b100 through 0.0.b1ff and device 0.0.a100 from the exclusion list.

```
# echo free 0.0.b100-0.0.b1ff,0.0.a100 > /proc/cio_ignore
```



- This command removes the device with bus ID 0.0.c104 from the exclusion list.

```
# echo free 0.0.c104 > /proc/cio_ignore
```

- This command adds the device with bus ID 0.0.c104 to the exclusion list.

```
# echo add 0.0.c104 > /proc/cio_ignore
```

- This command makes all devices that are in the exclusion list and that are currently offline unavailable to Linux.

```
# echo purge > /proc/cio_ignore
```


## cmma - Reduce hypervisor paging I/O overhead

Use the `cmma=` kernel parameter to reduce hypervisor paging I/O overhead.

You can use Collaborative Memory Management Assist (CMMA, or "cmm2") on all IBM mainframe systems that Red Hat Enterprise Linux 8.1 supports. With this support, the z/VM control program and guest virtual machines can communicate attributes for specific 4K-byte blocks of guest memory. This exchange of information helps both the z/VM host and the guest virtual machines to optimize their use and management of memory.

### Format

#### cmma syntax

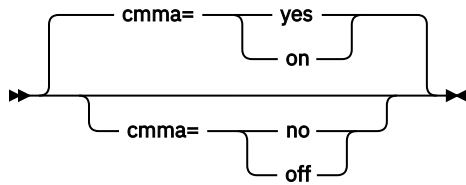

### Examples

This specification disables the CMMA support:

```
cmma=off
```

Alternatively, you can use the following specification to disable the CMMA support:

```
cmma=no
```

## fips - Run Linux in FIPS mode

In Federal Information Processing Standard (FIPS) mode, the kernel enforces FIPS 140-2 security standards. For example, in FIPS mode only FIPS 140-2 approved encryption algorithms can be used (see “FIPS restrictions of the hardware capabilities” on page 464).


**Note:** Enabling FIPS mode is not sufficient to make your kernel certified according to FIPS 140-2.

FIPS 140-2 certification is specific to a particular hardware platform and kernel build. Typically, running in FIPS mode is required, but not sufficient to be FIPS 140-2 certified. Check with your distributor to find out whether your kernel is certified according to FIPS 140-2.

For more information about FIPS 140-2, go to [csrc.nist.gov/publications/detail/fips/140/2/final](https://csrc.nist.gov/publications/detail/fips/140/2/final).

### Format

#### fips syntax



1 enables the FIPS mode. 0, the default, disables the FIPS mode.

### Example

```
fips=1
```

## maxcpus - Limit the number of CPUs Linux can use at IPL

---

Use the maxcpus= kernel parameter to limit the number of CPUs that Linux can use at IPL and that are online after IPL.

If the real or virtual hardware provides more than the specified number of CPUs, these surplus CPUs are initially offline. For example, if five CPUs are available, maxcpus=2 results in two online CPUs and three offline CPUs after IPL.

Offline CPUs can be set online dynamically unless the possible\_cpus= parameter is set and specifies a maximum number of online CPUs that is already reached. The possible\_cpus= parameter sets an absolute limit for the number of CPUs that can be online at any one time (see [possible\\_cpus](#)). If both maxcpus= and possible\_cpus= are set, a lower value for possible\_cpus= overrides maxcpus= and makes it ineffective.

### Format

#### maxcpus syntax

► maxcpus= <number> ◄

### Examples

```
maxcpus=2
```

## nosmt - Disable simultaneous multithreading

---

By default, Linux in LPAR mode uses simultaneous multithreading if it is supported by the hardware. Specify the `nosmt` kernel parameter to disable simultaneous multithreading. See also [“smt - Reduce the number of threads per core”](#) on page 694.

For more information about simultaneous multithreading, see [“Simultaneous multithreading”](#) on page 311.

### Format

#### **nosmt syntax**

►► nosmt ◄◄

## possible\_cpus - Limit the number of CPUs Linux can use

---

Use the `possible_cpus=` parameter to set an absolute limit for the number of CPUs that can be online at any one time. If the real or virtual hardware provides more than the specified maximum, the surplus number of CPUs must be offline. Alternatively, you can use the common code kernel parameter `nr_cpus`.

Use the `maxcpus=` parameter to limit the number of CPUs that are online initially after IPL (see [maxcpus](#)).

### Format

#### possible\_cpus syntax

► possible\_cpus= *<number>* ◄

### Examples

```
possible_cpus=8
```

## ramdisk\_size - Specify the ramdisk size

---

Use the `ramdisk_size=` kernel parameter to specify the size of the ramdisk in kilobytes.

### Format

#### ramdisk\_size syntax

» ramdisk\_size= *<size>* «

### Examples

```
ramdisk_size=32000
```

## ro - Mount the root file system read-only

---

Use the `ro` kernel parameter to mount the root file system read-only.

### Format

**ro syntax**

➡ ro ➡



## root - Specify the root device

---

Use the `root=` kernel parameter to tell Linux what to use as the root when mounting the root file system.

### Format

#### root syntax

► `root=<rootdevice>` ◄

### Examples

This example makes Linux use `/dev/dasda1` when mounting the root file system:

```
root=/dev/dasda1
```

## smt - Reduce the number of threads per core


By default, Linux in LPAR mode uses the maximum number of threads per core that is supported by the hardware. Use the `smt=` kernel parameter to use fewer threads. The value can be any integer in the range 1 to the maximum number of threads that is supported by the hardware.

Specifying `smt=1` effectively disables simultaneous multithreading. See also [“nosmt - Disable simultaneous multithreading”](#) on page 689.

For more information about simultaneous multithreading, see [“Simultaneous multithreading”](#) on page 311.

### Format

#### smt syntax



where `<hwmax>` is the maximum number of threads per core that is supported by the hardware, and `<number>` is an integer in the range 1 - `<hwmax>`.

### Examples

```
smt=1
```

## vdso - Optimize system call performance

Use the `vdso=` kernel parameter to control the vdso support for the `gettimeofday`, `clock_gettime`, and `clock_gettime` system calls.

The virtual dynamic shared object (vdso) support is a shared library that the kernel maps to all dynamically linked programs. The glibc detects the presence of the vdso and uses the functions that are provided in the library.

Because the vdso library is mapped to all user-space processes, this change is visible in user space. In the unlikely event that a user-space program does not work with the vdso support, you can disable the support.

The default, which is to use vdso support, works well for most installations. Do not override this default, unless you observe problems.

The vdso support is included in the Linux kernel.

### Format



### Examples

This example disables the vdso support:

```
vdso=0
```

## vmhalt - Specify CP command to run after a system halt

---

Use the `vmhalt=` kernel parameter to specify a command to be issued to CP after a system halt.

This command applies only to Linux on z/VM.

### Format

#### vmhalt syntax

► vmhalt= <COMMAND> ◄

### Examples

This example specifies that an initial program load of CMS is to follow the Linux **halt** command:

```
vmhalt="CPU 00 CMD I CMS"
```

**Note:** The command must be entered in uppercase.

## vmpanic - Specify CP command to run after a kernel panic

---

Use the `vmpanic=` kernel parameter to specify a command to be issued to CP after a kernel panic.

This command applies only to Linux on z/VM.

**Note:** Ensure that the **dumpconf** service is disabled when you use this kernel parameter. Otherwise, **dumpconf** will override the setting.

### Format

#### vmpanic syntax

► vmpanic= <COMMAND> ◄

### Examples

This example specifies that a VMDUMP is to follow a kernel panic:

```
vmpanic="VMDUMP"
```

**Note:** The command must be entered in uppercase.

## **vmpoff - Specify CP command to run after a power off**

---

Use the `vmpoff=` kernel parameter to specify a command to be issued to CP after a system power off.

### **Format**

#### **vmpoff syntax**

➤ `vmpoff= <COMMAND>` ➤

### **Examples**

This example specifies that CP is to clear the guest virtual machine after the Linux **power off** or **halt -p** command:

```
vmpoff="SYSTEM CLEAR"
```

**Note:** The command must be entered in uppercase.

## vmreboot - Specify CP command to run on reboot

---

Use the `vmreboot=` kernel parameter to specify a command to be issued to CP on reboot.

This command applies only to Linux on z/VM.

### Format

#### vmreboot syntax

► vmreboot= <COMMAND> ◄

### Examples

This example specifies a message to be sent to the z/VM guest virtual machine OPERATOR if a reboot occurs:

```
vmreboot="MSG OPERATOR Reboot system"
```

**Note:** The command must be entered in uppercase.





## Chapter 63. Linux diagnose code use

Red Hat Enterprise Linux 8.1 issues several diagnose instructions to the hypervisor (LPAR, z/VM, or KVM).

Read `/sys/kernel/debug/diag_stat` to find out which diagnose instructions are called how frequently on your Linux instance.

```
# cat /sys/kernel/debug/diag_stat
          CPU0      CPU1
diag 008:      7      7      Console Function
diag 00c:      0      0      Pseudo Timer
diag 010:      0      0      Release Pages
diag 014:      0      0      Spool File Services
diag 044:     616     962      Voluntary Timeslice End
diag 064:      0      0      NSS Manipulation
diag 09c:    7772    6606      Relinquish Timeslice
diag 0dc:      0      0      Appldata Control
diag 204:      2      0      Logical-CPU Utilization
diag 210:      3      6      Device Information
diag 224:      0      0      EBCDIC-Name Table
diag 250:      0      0      Block I/O
diag 258:      1      1      Page-Reference Services
diag 26c:      2      0      Certain System Information
diag 288:      0      0      Time Bomb
diag 2c4:      0      0      FTP Services
diag 2fc:      2      0      Guest Performance Data
diag 304:      0      0      Partition-Resource Service
diag 308:      1      1      List-Directed IPL
diag 500:      0      0      Virtio Service
```

The z/VM configuration can modify and restrict the diagnose calls that are available to its guests (see [“Function unavailable or degraded in Linux on z/VM” on page 492](#)).



---

## Appendix A. Accessibility

Accessibility features help users who have a disability, such as restricted mobility or limited vision, to use information technology products successfully.

### **Documentation accessibility**

The Linux on Z and LinuxONE publications are in Adobe Portable Document Format (PDF) and should be compliant with accessibility standards. If you experience difficulties when you use the PDF file and want to request a Web-based format for this publication send an email to [eservdoc@de.ibm.com](mailto:eservdoc@de.ibm.com) or write to:

IBM Deutschland Research & Development GmbH  
Information Development  
Department 3282  
Schoenaicher Strasse 220  
71032 Boeblingen  
Germany

In the request, be sure to include the publication number and title.

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

### **IBM and accessibility**

See the IBM Human Ability and Accessibility Center for more information about the commitment that IBM has to accessibility at

[www.ibm.com/able](http://www.ibm.com/able)



---

## Appendix B. Understanding syntax diagrams

This section describes how to read the syntax diagrams in this manual.

To read a syntax diagram follow the path of the line. Read from left to right and top to bottom.

- The **▶▶—** symbol indicates the beginning of a syntax diagram.
- The **—▶** symbol, at the end of a line, indicates that the syntax diagram continues on the next line.
- The **▶—** symbol, at the beginning of a line, indicates that a syntax diagram continues from the previous line.
- The **—▶◀** symbol indicates the end of a syntax diagram.

Syntax items (for example, a keyword or variable) may be:

- Directly on the line (required)
- Above the line (default)
- Below the line (optional)

If defaults are determined by your system status or settings, they are not shown in the diagram. Instead the rule is described together with the option, keyword, or variable in the list following the diagram.

### Case sensitivity

Unless otherwise noted, entries are case sensitive.

### Symbols

You **must** code these symbols exactly as they appear in the syntax diagram

|           |              |
|-----------|--------------|
| <b>*</b>  | Asterisk     |
| <b>:</b>  | Colon        |
| <b>,</b>  | Comma        |
| <b>=</b>  | Equal sign   |
| <b>-</b>  | Hyphen       |
| <b>//</b> | Double slash |
| <b>()</b> | Parentheses  |
| <b>.</b>  | Period       |
| <b>+</b>  | Add          |
| <b>\$</b> | Dollar sign  |

For example:

```
dasd=0.0.7000-0.0.7fff
```

### Variables

An *<italicized>* lowercase word enclosed in angled brackets indicates a variable that you must substitute with specific information. For example:

➡ -p — <interface> ➡


Here you must code **-p** as shown and supply a value for <interface>.

An italicized uppercase word in angled brackets indicates a variable that must appear in uppercase:


➡ vmhalt — = — <COMMAND> ➡

### Repetition

An arrow returning to the left means that the item can be repeated.




A character within the arrow means you must separate repeated items with that character.



### Defaults


Defaults are above the line. The system uses the default unless you override it. You can override the default by coding an option from the stack below the line. For example:

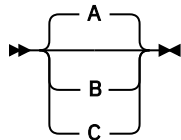

In this example, A is the default. You can override A by choosing B or C.

### Required Choices


When two or more items are in a stack and one of them is on the line, you **must** specify one item. For example:



Here you must enter either A or B or C.

### Optional Choice

When an item is below the line, the item is optional. Only one item **may** be chosen. For example:

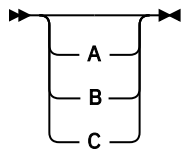

Here you may enter either A or B or C, or you may omit the field.

## Notices

---

This information was developed for products and services offered in the U.S.A. IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.

**The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:** INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The licensed program described in this information and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement, or any equivalent agreement between us.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

## Trademarks

---

IBM, the IBM logo, and [ibm.com](http://ibm.com) are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the Web at "Copyright and trademark information" at [www.ibm.com/legal/copytrade.shtml](http://www.ibm.com/legal/copytrade.shtml)

Adobe is either a registered trademark or trademark of Adobe Systems Incorporated in the United States, and/or other countries.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.



# Glossary

---

This glossary includes IBM product terminology as well as selected other terms and definitions.

Additional information can be obtained in:

- The American National Standard Dictionary for Information Systems , ANSI X3.172-1990, copyright 1990 by the American National Standards Institute (ANSI). Copies may be purchased from the American National Standards Institute, 11 West 42nd Street, New York, New York 10036.
- The ANSI/EIA Standard–440-A, Fiber Optic Terminology. Copies may be purchased from the Electronic Industries Association, 2001 Pennsylvania Avenue, N.W., Washington, DC 20006.
- The Information Technology Vocabulary developed by Subcommittee 1, Joint Technical Committee 1, of the International Organization for Standardization and the International Electrotechnical Commission (ISO/IEC JTC1/SC1).
- The IBM Dictionary of Computing , New York: McGraw-Hill, 1994.
- Internet Request for Comments: 1208, Glossary of Networking Terms
- Internet Request for Comments: 1392, Internet Users' Glossary
- The Object-Oriented Interface Design: IBM Common User Access Guidelines , Carmel, Indiana: Que, 1992.

## Numerics

---

### **10 Gigabit Ethernet**

An Ethernet network with a bandwidth of 10000-Mbps.

### **3215**

IBM console printer-keyboard.

### **3270**

IBM information display system.

### **3370, 3380 or 3390**

IBM direct access storage device (disk).

### **3480, 3490, 3590**

IBM magnetic tape subsystem.

### **3DES**

See Triple Data Encryption Standard.

### **9336 or 9345**

IBM direct access storage device (disk).

## A

---

### **address space**

The range of addresses available to a computer program or process. Address space can refer to physical storage, virtual storage, or both.

## auto-detection

Listing the addresses of devices attached to a card by issuing a query command to the card.

## C

---

### CEC

(Central Electronics Complex). A synonym for *CPC*.

### channel subsystem

The programmable input/output processors of the mainframe, which operate in parallel with the CPU.

### checksum

An error detection method using a check byte appended to message data

### CHPID

channel path identifier. In a channel subsystem, a value assigned to each installed channel path of the system that uniquely identifies that path to the system.

### compatible disk layout

A disk structure for Linux on Z which allows access from other mainframe operating systems. This replaces the older Linux disk layout.

### Console

In Linux, an output device for kernel messages.

### CPC

(Central Processor Complex). A physical collection of hardware that includes main storage, one or more central processors, timers, and channels. Also referred to as a *CEC*.

### CRC

cyclic redundancy check. A system of error checking performed at both the sending and receiving station after a block-check character has been accumulated.

### CSMA/CD

carrier sense multiple access with collision detection

### CTC

channel to channel. A method of connecting two computing devices.

### CUU

control unit and unit address. A form of addressing for mainframe devices using device numbers.

## D

---

### DASD

direct access storage device. A mass storage medium on which a computer stores data.

### device driver

- A file that contains the code needed to use an attached device.

- A program that enables a computer to communicate with a specific peripheral device; for example, a printer, a videodisc player, or a CD-ROM drive.
- A collection of subroutines that control the interface between I/O device adapters and the processor.

## DIAGNOSE

In z/VM, a set of instructions that programs running on z/VM guest virtual machines can call to request CP services.

## disconnected device

In Linux on Z, a device that is online, but to which Linux can no longer find a connection. Reasons include:

- The device was physically removed
- The device was logically removed, for example, with a CP DETACH command in z/VM
- The device was varied offline

## E

---

### ECKD

extended count-key-data device. A disk storage device that has a data transfer rate faster than some processors can utilize and that is connected to the processor through use of a speed matching buffer. A specialized channel program is needed to communicate with such a device.

### ESCON

enterprise systems connection. A set of IBM products and services that provide a dynamically connected environment within an enterprise.

### Ethernet

A 10-Mbps baseband local area network that allows multiple stations to access the transmission medium at will without prior coordination, avoids contention by using carrier sense and deference, and resolves contention by using collision detection and delayed retransmission. Ethernet uses CSMA/CD.

## F

---

### Fast Ethernet (FENET)

Ethernet network with a bandwidth of 100 Mbps

### FBA

fixed block architecture. An architecture for a virtual device that specifies the format of and access mechanisms for the virtual data units on the device. The virtual data unit is a block. All blocks on the device are the same size (fixed size). The system can access them independently.

### FDDI

fiber distributed data interface. An American National Standards Institute (ANSI) standard for a 100-Mbps LAN using optical fiber cables.

### fibre channel

A technology for transmitting data between computer devices. It is especially suited for attaching computer servers to shared storage devices and for interconnecting storage controllers and drives.

## **FTP**

file transfer protocol. In the Internet suite of protocols, an application layer protocol that uses TCP and Telnet services to transfer bulk-data files between machines or hosts.

## **G**

---

### **Gigabit Ethernet (GbE)**

An Ethernet network with a bandwidth of 1000-Mbps

## **H**

---

### **hardware console**

A service-call logical processor that is the communication feature between the main processor and the service processor.

### **Host Bus Adapter (HBA)**

An I/O controller that connects an external bus, such as a Fibre Channel, to the internal bus (channel subsystem).

In a Linux environment HBAs are normally virtual and are shown as an FCP device.

## **HMC**

hardware management console. A console used to monitor and control hardware such as the IBM Z microprocessors.

## **HFS**

hierarchical file system. A system of arranging files into a tree structure of directories.

## **I**

---

### **intraensemble data network (IEDN)**

A private 10 Gigabit Ethernet network for application data communications within an ensemble. Data communications for workloads can flow over the IEDN within and between nodes of an ensemble. All of the physical and logical resources of the IEDN are configured, provisioned, and managed by the Unified Resource Manager.

### **intranode management network (INMN)**

A private 1000BASE-T Ethernet network operating at 1 Gbps that is required for the Unified Resource Manager to manage the resources within a single zEnterprise node. The INMN connects the Support Element (SE) to the zEnterprise 196 (z196) or zEnterprise 114 (z114) and to any attached zEnterprise BladeCenter Extension (zBX).

### **ioctl system call**

Performs low-level input- and output-control operations and retrieves device status information. Typical operations include buffer manipulation and query of device mode or status.

## **IOCS**

input / output channel subsystem. See channel subsystem.

## **IP**

internet protocol. In the Internet suite of protocols, a connectionless protocol that routes data through a network or interconnected networks and acts as an intermediary between the higher protocol layers and the physical network.

## **IP address**

The unique 32-bit address that specifies the location of each device or workstation on the Internet. For example, 9.67.97.103 is an IP address.

## **IPIP**

IPv4 in IPv4 tunnel, used to transport IPv4 packets in other IPv4 packets.

## **IPL**

initial program load (or boot).

- The initialization procedure that causes an operating system to commence operation.
- The process by which a configuration image is loaded into storage at the beginning of a work day or after a system malfunction.
- The process of loading system programs and preparing a system to run jobs.

## **IPv6**

IP version 6. The next generation of the Internet Protocol.

## **IUCV**

inter-user communication vehicle. A z/VM facility for passing data between virtual machines and z/VM components.

# **K**

---

## **kernel**

The part of an operating system that performs basic functions such as allocating hardware resources.

## **kernel module**

A dynamically loadable part of the kernel, such as a device driver or a file system.

## **kernel image**

The kernel when loaded into memory.

# **L**

---

## **LCS**

LAN channel station. A protocol used by OSA.

## **LDP**

Linux Documentation Project. An attempt to provide a centralized location containing the source material for all open source Linux documentation. Includes user and reference guides, HOW TOs, and FAQs. The homepage of the Linux Documentation Project is

[www.linuxdocs.org](http://www.linuxdocs.org)

## Linux

a variant of UNIX which runs on a wide range of machines from wristwatches through personal and small business machines to enterprise systems.

## Linux disk layout

A basic disk structure for Linux on Z. Now replaced by compatible disk layout.

## Linux on Z

the port of Linux to the IBM mainframe architecture.

## LPAR

logical partition of a mainframe. Logical partitions are, in practice, equivalent to separate mainframes; each LPAR runs its own operating system.

## LVS (Linux virtual server)

Network sprayer software used to dispatch, for example, http requests to a set of web servers to balance system load.

## M

---

## MAC

medium access control. In a LAN this is the sub-layer of the data link control layer that supports medium-dependent functions and uses the services of the physical layer to provide services to the logical link control (LLC) sub-layer. The MAC sub-layer includes the method of determining when a device has access to the transmission medium.

## Mbps

million bits per second.

## MIB (Management Information Base)

- A collection of objects that can be accessed by means of a network management protocol.
- A definition for management information that specifies the information available from a host or gateway and the operations allowed.

## MTU

maximum transmission unit. The largest block which may be transmitted as a single unit.

## Multicast

A protocol for the simultaneous distribution of data to a number of recipients, for example live video transmissions.

## N

---

## NIC

network interface card. The physical interface between the IBM mainframe and the network.

## O

---

### **OSA-Express**

Abbreviation for Open Systems Adapter-Express networking features. These include 10 Gigabit Ethernet, Gigabit Ethernet, and Fast Ethernet.

### **OSM**

OSA-Express for Unified Resource Manager. A CHPID type that provides connectivity to the intranode management network (INMN) from z196 or z114 to Unified Resource Manager functions. Uses OSA-Express3 1000BASE-T Ethernet exclusively operating at 1 Gbps.

### **OSPF**

open shortest path first. A function used in route optimization in networks.

### **OSX**

OSA-Express for zBX. A CHPID type that provides connectivity and access control to the intraensemble data network (IEDN) from z196 or z114 to zBX.

## P

---

### **POR**

power-on reset

### **POSIX**

Portable Operating System Interface for Computer Environments. An IEEE operating system standard closely related to the UNIX system.

## R

---

### **router**

A device or process which allows messages to pass between different networks.

## S

---

### **SE**

support element.

- An internal control element of a processor that assists in many of the processor operational functions.
- A hardware unit that provides communications, monitoring, and diagnostic functions to a central processor complex.

### **SNA**

systems network architecture. The IBM architecture that defines the logical structure, formats, protocols, and operational sequences for transmitting information units through, and controlling the configuration and operation of, networks. The layered structure of SNA allows the ultimate origins and destinations of information (the users) to be independent of and unaffected by the specific SNA network services and facilities that are used for information exchange.

## SNMP (Simple Network Management Protocol)

In the Internet suite of protocols, a network management protocol that is used to monitor routers and attached networks. SNMP is an application layer protocol. Information about devices managed is defined and stored in the application's Management Information Base (MIB).

## Sysctl

system control programming manual control (frame). A means of dynamically changing certain Linux kernel parameters during operation.

## T

---

### TDEA

See Triple Data Encryption Standard.

### TDES

See Triple Data Encryption Standard.

## Telnet

A member of the Internet suite of protocols which provides a remote terminal connection service. It allows users of one host to log on to a remote host and interact as if they were using a terminal directly attached to that host.

## Terminal

A physical or emulated device, associated with a keyboard and display device, capable of sending and receiving information.

## Triple Data Encryption Standard

A block cipher algorithm that can be used to encrypt data transmitted between managed systems and the management server. Triple DES is a security enhancement of DES that employs three successive DES block operations.

## U

---

## UNIX

An operating system developed by Bell Laboratories that features multiprogramming in a multiuser environment. The UNIX operating system was originally developed for use on minicomputers but has been adapted for mainframes and microcomputers.

## V

---

### V=R

In z/VM, a guest whose real memory (virtual from a z/VM perspective) corresponds to the real memory of z/VM.

### V=V

In z/VM, a guest whose real memory (virtual from a z/VM perspective) corresponds to virtual memory of z/VM.



## Virtual LAN (VLAN)

A group of devices on one or more LANs that are configured (using management software) so that they can communicate as if they were attached to the same wire, when in fact they are located on a number of different LAN segments. Because VLANs are based on logical rather than physical connections, they are extremely flexible.

## volume

A data carrier that is usually mounted and demounted as a unit, for example a tape cartridge or a disk pack. If a storage unit has no demountable packs the volume is the portion available to a single read/write mechanism.

## Z

---

### **z114**

IBM zEnterprise 114

### **z13**

IBM z13

### **z14**

IBM z14.

### **z13s**

IBM z13s.

### **z196**

IBM zEnterprise 196

### **zBC12**

IBM zEnterprise BC12.

### **zBX**

IBM zEnterprise BladeCenter Extension

### **zEC12**

IBM zEnterprise EC 12.

### **zEnterprise**

IBM zEnterprise System. A heterogeneous hardware infrastructure that can consist of an IBM zEnterprise BC12, a zEnterprise EC12 (zEC12), a zEnterprise 114 (z114) or a zEnterprise 196 (z196) and an attached IBM zEnterprise BladeCenter Extension (zBX), managed as a single logical virtualized system by the Unified Resource Manager.

### **zSeries**

The family of IBM enterprise servers that demonstrate outstanding reliability, availability, scalability, security, and capacity in today's network computing environments.



# Bibliography

---

The publications listed here are considered useful for a more detailed study of the topics contained in this book.

## Linux on Z and LinuxONE publications

---

The Linux on Z and LinuxONE publications can be found on the IBM Knowledge Center website.

You can find the latest version of this publication at

[http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz\\_r\\_rh.html](http://www.ibm.com/support/knowledgecenter/linuxonibm/liaaf/lnz_r_rh.html).

- *Using the Dump Tools on Red Hat Enterprise Linux 8*, SC34-7718

For each of the following publications, the same web page points to the version that most closely reflects Red Hat Enterprise Linux 8.1:

- *How to Improve Performance with PAV*, SC33-8414
- *How to use FC-attached SCSI devices with Linux on z Systems*, SC33-8413
- *How to Set up a Terminal Server Environment on z/VM*, SC34-2596
- *Pervasive Encryption for Data Volumes*, SC34-2782
- *Getting started with pervasive disk encryption*, SC34-2783
- *Exploiting Enterprise PKCS #11 using openCryptoki*, SC34-2713
- *libica Programmer's Reference*, SC34-2602
- *Secure Key Solution with the Common Cryptographic Architecture Application Programmer's Guide*, SC33-8294
- *How to set an AES master key*, SC34-7712
- *Troubleshooting*, SC34-2612

## Red Hat Enterprise Linux 8.1 publications

---

The documentation for Red Hat Enterprise Linux 8.1 can be found on the Red Hat documentation website.

See

[https://access.redhat.com/site/documentation/en-US/Red\\_Hat\\_Enterprise\\_Linux](https://access.redhat.com/site/documentation/en-US/Red_Hat_Enterprise_Linux)

- *Installing and deploying Red Hat Enterprise Linux 8.1*
- *Configuring basic system settings on Red Hat Enterprise Linux 8.1*
- *Configuring and managing networking in Red Hat Enterprise Linux 8.1*

## z/VM publications

---

The publication numbers listed are for z/VM version 7.

For the complete library including other versions, see

[www.ibm.com/vm/library](http://www.ibm.com/vm/library)

- *z/VM: Connectivity*, SC24-6267
- *z/VM: CP Commands and Utilities Reference*, SC24-6268
- *z/VM: CP Planning and Administration*, SC24-6271

- *z/VM: CP Programming Services*, SC24-6272
- *z/VM: Getting Started with Linux on System z*, SC24-6287
- *z/VM: Performance*, SC24-6301
- *z/VM: Saved Segments Planning and Administration*, SC24-6322
- *z/VM: Systems Management Application Programming*, SC24-6327
- *z/VM: TCP/IP Planning and Customization*, SC24-6331
- *z/VM: Virtual Machine Operation*, SC24-6334
- *z/VM: REXX/VM Reference*, SC24-6314
- *z/VM: REXX/VM User's Guide*, SC24-6315

## IBM Redbooks publications

---

You can search for, view, or download Redbooks publications, Redpapers, Hints and Tips, draft publications and additional materials on the Redbooks website.

You can also order hardcopy Redbooks or CD-ROMs. See

[www.ibm.com/redbooks](http://www.ibm.com/redbooks)

- *IBM zEnterprise Unified Resource Manager*, SG24-7921
- *Building Linux Systems under IBM VM*, REDP-0120
- *FICON CTC Implementation*, REDP-0158
- *Networking Overview for Linux on zSeries*, REDP-3901
- *Linux on IBM eServer zSeries and S/390: TCP/IP Broadcast on z/VM Guest LAN*, REDP-3596
- *Linux on IBM eServer zSeries and S/390: VSWITCH and VLAN Features of z/VM 4.4*, REDP-3719
- *z/VM: Secure Configuration Guide*, SG24-6323
- *IBM Communication Controller Migration Guide*, SG24-6298
- *Problem Determination for Linux on System z*, SG24-7599
- *Fibre Channel Protocol for Linux and z/VM on IBM System z*, SG24-7266

## Other IBM Z publications

---

General Z publications that might be of interest in the context of Linux on Z.

- *System z Application Programming Interfaces*, SB10-7030
- *IBM DS8000 Series Command-Line Interface User's Guide*, GC27-4212
- *Processor Resource/Systems Manager Planning Guide*, SB10-7041
- *z/Architecture Principles of Operation*, SA22-7832
- *z/Architecture The Load-Program-Parameter and the CPU-Measurement Facilities*, SA23-2260
- *IBM The CPU-Measurement Facility Extended Counters Definition for z10, z196, z114 and zEC12*, SA23-2261
- *IBM The CPU-Measurement Facility Extended Counters Definition for z10, z196/z114, zEC12/zBC12, z13/z13s, and z14*, SA23-2261

### Networking publications

- *HiperSockets Implementation Guide*, SG24-6816
- *Open Systems Adapter-Express Customer's Guide and Reference*, SA22-7935
- *OSA-Express Implementation Guide*, SG24-5948

## Security related publications

- *zSeries Crypto Guide Update*, SG24-6870

## ibm.com resources

---

On the [ibm.com](http://ibm.com)® website you can find information about many aspects of Linux on Z and LinuxONE including z/VM, I/O connectivity, and cryptography.

- For CMS and CP Data Areas, Control Block information, and the layout of the z/VM monitor records see

[www.ibm.com/vm/pubs/ctlblk.html](http://www.ibm.com/vm/pubs/ctlblk.html)

- For I/O connectivity information, see

[www.ibm.com/systems/z/connectivity](http://www.ibm.com/systems/z/connectivity)

- For Communications server for Linux information, see

[www.ibm.com/software/network/commserver/linux](http://www.ibm.com/software/network/commserver/linux)

- For information about performance monitoring on z/VM, see

[www.ibm.com/vm/perf](http://www.ibm.com/vm/perf)

- For cryptographic coprocessor information, see

[www.ibm.com/security/cryptocards](http://www.ibm.com/security/cryptocards)

- (Requires registration.) For information for planning, installing, and maintaining IBM systems, see

[www.ibm.com/servers/resource link](http://www.ibm.com/servers/resource link)

- For information about STP, see

[www.ibm.com/systems/z/advantages/pso/stp.html](http://www.ibm.com/systems/z/advantages/pso/stp.html)



---

# Index

## Special Characters

\*ACCOUNT, z/VM record [377](#)  
\*LOGREC, z/VM record [377](#)  
\*SYMPTOM, z/VM record [377](#)  
/debug, mount point [xi](#)  
/proc, mount point [xi](#)  
/proc, sysinfo [493](#)  
/sys, mount point [xi](#)  
/sys/devices [7](#)  
/sys/kernel/debug, mount point [xi](#)

## Numerics

10 Gigabit Ethernet  
    SNMP [271](#)  
1000Base-T Ethernet  
    LAN channel station [279](#)  
    SNMP [271](#)  
1750, control unit [115](#)  
2105, control unit [115](#)  
2107, control unit [115](#)  
3088, control unit [279](#), [285](#)  
3270 emulation [45](#)  
3270 terminal device driver  
    switching the views of [47](#)  
3370, DASD [115](#)  
3380, DASD [115](#)  
3390, DASD [115](#)  
3480 tape drive [195](#)  
3490 tape drive [195](#)  
3590 tape drive [195](#)  
3592 tape drive [195](#)  
3880, control unit [115](#)  
3990, control unit [115](#)  
3DES [453](#)  
6310, control unit [115](#)  
9336, DASD [115](#)  
9343, control unit [115](#)  
9345, DASD [115](#)

## A

acceleration, in-kernel cryptography [463](#)  
access control  
    osasnmpd [273](#)  
access\_denied  
    zfcplib attribute (port) [168](#)  
    zfcplib attribute (SCSI device) [179](#)  
access\_shared  
    zfcplib attribute [179](#)  
accessibility [703](#)  
ACCOUNT, z/VM record [377](#)  
actions, shutdown [103](#)  
adapter outage [256](#)  
adapter virtualization [436](#)  
add, DCSS attribute [388](#)

adding and removing cryptographic adapters [445](#)  
Address Resolution Protocol, *See* ARP  
AES [463](#)  
aes\_s390, kernel module [464](#)  
AF\_IUCV  
    addressing sockets in applications [299](#)  
    set up devices for addressing [298](#)  
AF\_IUCV address family  
    features [297](#)  
    set up support for [297](#)  
af\_iucv, kernel module [298](#)  
AgentX protocol [271](#)  
alias  
    DASD attribute [146](#)  
AP  
    devices [7](#)  
AP bus  
    attributes [450](#)  
AP queue [437](#)  
ap\_functions  
    cryptographic adapter attribute [442](#)  
ap\_interrupt  
    cryptographic adapter attribute [444](#)  
ap.domain=  
    kernel parameter [438](#)  
ap.poll\_thread=  
    kernel parameter [438](#)  
API  
    cryptographic [451](#)  
    FC-HBA [155](#)  
    GenWQE zlib [350](#)  
    zfcplib HBA [188](#)  
apmask, cryptographic device driver attribute [447](#)  
apmask=  
    kernel parameter [438](#)  
APPLDATA monitor records  
    monitoring Linux instances [357](#)  
APPLDATA, monitor stream [361](#)  
applet  
    emulation of the HMC Operating System Messages [50](#)  
applications  
    addressing AF\_IUCV sockets in [299](#)  
aqmask, cryptographic device driver attribute [447](#)  
aqmask=  
    kernel parameter [438](#)  
arch  
    trng counter [458](#)  
ARP  
    proxy ARP [248](#)  
    query/purge OSA-Express ARP cache [623](#)  
attributes  
    device [9](#)  
    for CCW devices [9](#)  
    for subchannels [13](#)  
    qeth [221–224](#)  
    setting [10](#)  
authorization

- authorization (*continued*)
  - CPU-measurement counter facility [475](#)
- auto-configuration
  - managing [20](#)
  - override fails [491](#)
- auto-detection
  - DASD [124](#)
- autoconfiguration, IPv6 [214](#)
- autopurge, z/VM recording attribute [380](#)
- autorecording, z/VM recording attribute [379](#)
- availability
  - common CCW attribute [9](#)
  - DASD attribute [129](#)
- avg\_\*, cmf attributes [472](#), [473](#)
- avg\_control\_unit\_queueing\_time, cmf attribute [473](#)
- avg\_device\_active\_only\_time, cmf attribute [473](#)
- avg\_device\_busy\_time [473](#)
- avg\_device\_busy\_time, cmf attribute [473](#)
- avg\_device\_connect\_time, cmf attribute [472](#)
- avg\_device\_disconnect\_time, cmf attribute [473](#)
- avg\_function\_pending\_time, cmf attribute [472](#)
- avg\_initial\_command\_response\_time, cmf attribute [473](#)
- avg\_sample\_interval, cmf attribute [473](#)
- avg\_utilization, cmf attribute [473](#)

## B

- balloon device [410](#)
- base device
  - helper script [63](#)
- block devices
  - major and minor numbers [414](#)
  - naming [414](#)
- block\_size\_bytes, memory attribute [320](#)
- blocksize, tape attribute [200](#)
- book\_siblings
  - CPU sysfs attribute [314](#)
- boot configuration
  - module parameters [28](#)
- boot devices
  - logical [61](#)
  - preparing [55](#)
- boot loader code [79](#)
- boot menu
  - DASD, z/VM example [89](#)
  - zipl [67](#)
- booting Linux
  - troubleshooting [491](#)
- bridge\_hostnotify, qeth attribute [218](#)
- bridge\_invisible, qeth attribute [253](#)
- bridge\_role, qeth attribute [218](#), [251](#)
- bridge\_state, qeth attribute [218](#)
- broadcast forwarding [253](#)
- buffer\_count, qeth attribute [229](#)
- buffer-overflow protection [467](#)
- buffer, CPU-measurement sampling facility [477](#)
- buffer, CTCM attribute [290](#)
- bus ID [9](#)
- byte\_counter
  - prandom attribute [454](#)
  - trng attribute [458](#)

## C

- cachesize=, module parameters [340](#)
- capability change, CPU [312](#)
- card\_type, qeth attribute [230](#)
- card\_version, zfcpx attribute [160](#)
- case conversion [51](#)
- Castagnoli [463](#)
- CBC [463](#)
- CCA coprocessor [433](#)
- CCW
  - channel measurement facility [471](#)
  - common attributes [9](#)
  - devices [8](#)
  - group devices [8](#)
  - hotplug events [18](#)
  - setting attributes [502](#)
  - setting devices online/offline [502](#)
- CCW terminal device
  - switching on- or offline [48](#)
- CD-ROM, loading Linux [85](#)
- CD/DVD drive [418](#)
- Central Processor Assist for Cryptographic Function, *See* CPACF
- CEX5A (Crypto Express5S) [433](#)
- CEX5C (Crypto Express5S) [433](#)
- CEX5P (Crypto Express5S) [433](#)
- CEX6A (Crypto Express6S) [433](#)
- CEX6C (Crypto Express6S) [433](#)
- CEX6P (Crypto Express6S) [433](#)
- CEX7A (Crypto Express7S) [433](#)
- CEX7C (Crypto Express7S) [433](#)
- CEX7P (Crypto Express7S) [433](#)
- change, CPU capability [312](#)
- channel measurement facility
  - cmb\_enable attribute [472](#)
  - features [471](#)
  - kernel parameters [471](#)
  - read-only attributes [472](#)
- channel path
  - changing status [504](#)
  - determining usage [489](#)
  - ensuring correct status [489](#)
  - list [577](#)
- channel path availability
  - planned changes [489](#)
  - unplanned changes [489](#)
- channel path ID [15](#)
- channel path measurement [14](#)
- channel subsystem view [13](#)
- channel-attached tape [195](#)
- chccwdev [10](#)
- chccwdev, Linux command [502](#)
- chchp, Linux command [504](#)
- chcpu, Linux command [311](#)
- chcpumf, Linux command [506](#)
- checksum
  - inbound [235](#)
  - outbound [236](#)
  - receive [235](#)
  - transmit [236](#)
- checksum, in-kernel [463](#)
- CHID
  - mapping physical to virtual [17](#)



Chinese-Remainder Theorem [433](#)

chiucvallow, Linux command [43](#)

CHPID

in sysfs [15](#)

map to PCID [17](#)

online attribute [15](#), [16](#)

chpids, subchannel attribute [14](#)

chreipl, Linux command [507](#)

chshut, Linux command [511](#)

chunksize

prandom attribute [454](#)

chunksize=, module parameters [453](#)

chzcrypt, Linux command [513](#)

chzdev, Linux command [515](#)

cio\_ignore

disabled wait [490](#)

cio\_ignore, Linux command [522](#)

cio\_ignore, procfs interface [683](#)

cio\_ignore=, kernel parameter [682](#)

cio\_settle [10](#)

clock synchronization

enabling and disabling [335](#)

switching on and off [335](#)

cm\_enable

channel subsystem sysfs attribute [14](#)

cmb\_enable

cmf attribute [472](#)

common CCW attribute [9](#)

tape attribute [200](#)

cmd=, module parameters [110](#)

cmf.format=, kernel parameter [471](#)

cmf.maxchannels=, kernel parameter [471](#)

cmm

avoid swapping with [359](#)

background information [359](#)

CMM

unload module [490](#)

cmm, kernel module [401](#)

CMMA [686](#)

cmma=, kernel parameter [686](#)

CMS disk layout [119](#)

CMS1 labeled disk [119](#)

cmsfs-fuse, Linux command [525](#)

code page

for x3270 [45](#)

Collaborative Memory Management Assist [686](#)

collecting QETH performance statistics [240](#)

command

qetharp [623](#)

commands, Linux

chccwdev [502](#)

chchp [504](#)

chcpu [311](#)

chcpumf [506](#)

chiucvallow [43](#)

chreipl [507](#)

chshut [511](#)

chzcrypt [513](#)

cio\_ignore [522](#)

cmsfs-fuse [525](#)

cpacfstats [529](#)

cpuplugd [531](#)

dasdfmt [540](#)

dasdstat [545](#)

commands, Linux (*continued*)

dasdview [547](#)

dmesg [4](#)

dumpconf [104](#)

execstack [467](#)

fdasd [557](#)

genwqe\_echo [345](#)

genwqe\_gunzip [345](#)

genwqe\_gzip [345](#)

gunzip [347](#)

gzip [347](#)

hmcdrvfs [564](#)

hyptop [567](#)

icainfo [501](#)

icastats [501](#)

ip [3](#)

iucvconn [43](#)

iucvtty [43](#)

lschp [577](#)

lscpu [311](#)

lscpumf [579](#)

lscss [582](#)

lsdasd [585](#)

lshmc [588](#)

lsluns [589](#)

lsqeth [592](#)

lsreipl [593](#)

lsscm [594](#)

lsshut [596](#)

lstape [597](#)

lszcrypt [600](#)

lszfcip [610](#)

mon\_fsstatd [612](#)

mon\_procd [616](#)

qetharp [623](#)

qethconf [625](#)

qethcoat [628](#)

readelf [467](#)

readlink [4](#)

scsi\_logging\_level [631](#)

sg\_inq [597](#)

tape390\_crypt [641](#)

tape390\_display [645](#)

tar [347](#)

time [347](#)

tunedasd [647](#)

vmconvert [657](#)

vmcp [651](#)

vmur [653](#)

zcryptctl [673](#)

zcryptstats [676](#)

zdsfs [661](#)

zfcip\_ping [190](#)

zfcip\_show [190](#)

zipl [55](#)

znetconf [669](#)

zpcictl [672](#)

commands, z/VM

sending from Linux [651](#)

communication facility

Inter-User Communication Vehicle [297](#)

compatible disk layout [117](#)

compression

GenWQE [343](#)

- compression, tape [202](#)
- conceal=, module parameters [110](#)
- CONFIG\_FUSE\_FS [661](#)
- configuration file
  - CPU control [533](#)
  - cpuplugd [538](#)
  - memory control [534](#)
- configure LPAR I/O devices [490](#)
- configuring standby CPU [312](#)
- conmode=, kernel parameter [41](#)
- console
  - definition [34](#)
  - device names [35](#)
  - device nodes [35](#), [36](#)
  - mainframe versus Linux [34](#)
- console device driver
  - kernel parameter [42](#)
  - overriding default driver [41](#)
  - restricting access to HVC terminal devices [43](#)
  - SCLP line-mode buffer page reuse [42](#)
  - SCLP line-mode buffer pages [43](#)
  - specifying preferred console [42](#)
  - specifying the number of HVC terminal devices [43](#)
- console device drivers
  - device and console names [35](#)
  - features [34](#)
  - terminal modes [36](#)
- console=, kernel parameter [42](#)
- control characters [48](#)
- control program identification [485](#)
- control unit
  - 1750 [115](#)
  - 2105 [115](#)
  - 2107 [115](#)
  - 3880 [115](#)
  - 3990 [115](#)
  - 6310 [115](#)
  - 9343 [115](#)
- controlling automatic port scans [166](#)
- cooperative memory management
  - set up [401](#)
- coprocessor, cryptographic [433](#)
- core [311](#)
- core\_siblings
  - CPU sysfs attribute [314](#)
- CP Assist for Cryptographic Function [453](#)
- CP commands
  - send to z/VM hypervisor [651](#)
  - VINPUT [52](#)
- CP Error Logging System Service [377](#)
- CP VINPUT [52](#)
- CP1047 [526](#)
- CPACF
  - in-kernel cryptography [463](#)
  - protected key [459](#)
  - support modules, in-kernel cryptography [464](#)
- cpacstats, Linux command [529](#)
- cpc\_name attribute [337](#)
- CPI
  - set attribute [487](#)
  - sysplex\_name attribute [485](#)
  - system\_level attribute [486](#)
  - system\_name attribute [485](#)
  - system\_type attribute [486](#)
- CPI (control program identification) [485](#)
- CPU
  - managing [311](#)
  - capability change [312](#)
  - configuration [529](#), [531](#)
  - control
    - complex rules [537](#)
    - configuration file [533](#)
  - hotplug
    - sample configuration file [538](#)
  - hotplug rules [535](#)
  - sysfs attribute
    - book\_siblings [314](#)
    - core\_siblings [314](#)
    - dispatching [315](#)
    - drawer\_siblings [314](#)
    - online [313](#)
    - polarization [315](#)
    - thread\_siblings [314](#)
  - sysfs attributes
    - location of [311](#)
  - measurement counter facility [478](#)
  - measurement facilities
    - chcpumf command [506](#)
    - lscpumf command [579](#)
  - measurement sampling facility
    - buffer limits [477](#)
  - configuring standby [312](#)
  - state [312](#)
  - cpuplugd
    - complex rules [537](#)
    - configuration file [538](#)
    - service utility syntax [531](#)
  - Linux command [531](#)
  - cpustat
    - cpuplugd keywords
      - use with historical data [537](#)
- CRC32 [463](#)
- CRT [433](#)
- crypto
  - display statistics [676](#)
- Crypto Express5 [433](#)
- Crypto Express6S [433](#)
- Crypto Express7S [433](#)
- cryptographic
  - request processing [435](#)
- cryptographic adapter
  - attributes [442](#)
  - hardware status [443](#)
- cryptographic adapter sysfs attribute
  - online [443](#)
  - poll\_thread [444](#)
- cryptographic adapters
  - adding and removing dynamically [445](#)
  - detection [435](#)
- cryptographic coprocessor [433](#)
- cryptographic device
  - Linux [437](#)
  - LPAR [436](#)
  - z/VM [437](#)
- cryptographic device driver
  - API [451](#)
  - features [433](#)
  - hardware and software prerequisites [434](#)

cryptographic device driver (*continued*)

setup [437](#)

cryptographic device nodes [435](#)

cryptographic domain

control [436](#)

usage [436](#)

csulinkl.h [451](#)

CTC

activating an interface [291](#)

CTC interface

recovery [292](#)

CTC network connections [286](#)

CTCM

buffer attribute [290](#)

device driver [285](#)

group attribute [287](#)

online attribute [289](#)

protocol attribute [289](#)

subchannels [285](#)

type attribute [288](#)

ungroup attribute [288](#)

CTR [463](#)

cutype

common CCW attribute [9](#)

tape attribute [200](#)

## D

DASD

access by udev-created device nodes [123](#)

access by VOLSER [122](#)

alias attribute [146](#)

availability attribute [129](#)

boot menu, z/VM example [89](#)

booting from [80](#), [89](#)

boxed [129](#)

CMS disk layout [119](#)

compatible disk layout [117](#)

control unit attached devices [115](#)

device driver [115](#)

device names [120](#)

discipline attribute [146](#)

disk layout summary [120](#)

displaying information [547](#)

displaying overview [585](#)

eer\_enabled attribute [131](#)

erplog attribute [133](#)

expires attribute [134](#)

extended error reporting [115](#)

failfast attribute [134](#)

features [115](#)

forcing online [129](#)

formatting ECKD [540](#)

High Performance FICON [139](#)

host\_access\_count attribute [145](#)

hpf attribute [144](#)

last\_known\_reservation\_state attribute [142](#)

Linux disk layout [119](#)

module parameter [124](#)

online attribute [132](#), [133](#)

partitioning [557](#), [567](#)

partitions on [116](#)

path\_autodisable attribute [143](#)

path\_interval attribute [143](#)

DASD (*continued*)

path\_threshold attribute [143](#)

PAV [139](#)

performance statistics [545](#)

performance tuning [647](#)

raw\_track\_access attribute [139](#)

readonly attribute [147](#)

reservation\_policy attribute [141](#)

safe\_offline attribute [132](#)

statistics [135](#)

status attribute [148](#)

uid attribute [148](#)

use\_diag attribute [130](#), [148](#)

vendor attribute [148](#)

virtual [115](#)

volume label [117](#)

DASD device [64](#)

DASD information

displaying [146](#)

dasd=

module parameter [124](#)

dasdfmt, Linux command [540](#)

dasdstat, Linux command [545](#)

dasdview, Linux command [547](#)

data

compression [343](#)

data consistency checking, SCSI [186](#)

data integrity extension [186](#)

data integrity field [186](#)

datarouter=

zfcpx module parameter [156](#)

dbfsz=, zfcpx module parameters [156](#)

DCSS

access mode [390](#)

add attribute [388](#)

adding [388](#)

device driver [385](#)

device names [385](#)

device nodes [385](#)

exclusive-writable mode [385](#)

minor number [389](#)

performance monitoring using [358](#)

remove attribute [392](#)

save attribute [390](#)

saving with properties [391](#)

seglist attribute [389](#)

shared attribute [390](#)

with options [386](#)

dcssblk.segments=, module parameter [386](#)

deactivating a qeth interface [234](#)

debug feature [360](#)

decompression, GenWQE [343](#)

decryption [433](#)

default\_hugepagesz=, kernel parameters [325](#)

delete

zfcpx sysfs attribute [184](#)

delete, zfcpx attribute [185](#)

depth

cryptographic adapter attribute [442](#)

des\_s390, kernel module [464](#)

determine channel path usage [489](#)

device bus-ID

of a qeth interface [232](#)

device driver

- device driver (*continued*)
  - cryptographic [433](#)
  - CTCM [285](#)
  - DASD [115](#)
  - DCSS [385](#)
  - Generic Work Queue Engine [343](#)
  - HiperSockets [207](#)
  - HMC media [339](#)
  - internal shared memory [307](#)
  - LCS [279](#)
  - mlx4\_en [305](#)
  - monitor stream application [367](#)
  - network [205](#)
  - OSA-Express (QDIO) [207](#)
  - overview [8](#)
  - PCIe [351](#)
  - protected key [459](#)
  - pseudorandom number [453](#)
  - qeth [207](#)
  - SCSI-over-Fibre Channel [151](#)
  - smsgiucv\_app [397](#)
  - storage-class memory [191](#)
  - tape [195](#)
  - true random number [457](#)
  - virtio CCW transport [413](#)
  - vmcp [395](#)
  - vmur [383](#)
  - watchdog [109](#)
  - z/VM \*MONITOR record reader [371](#)
  - z/VM recording [377](#)
  - zcrypt [433](#)
- device drivers
  - support of the FCP environment [151](#)
- device names
  - block devices [414](#)
  - console [35](#)
  - DASD [120](#)
  - DCSS [385](#)
  - SCSI-attached tape [416](#)
  - storage class memory [191](#)
  - tape [195](#)
  - vmur [383](#)
  - z/VM \*MONITOR record [371](#)
  - z/VM recording [377](#)
- device node
  - prandom, non-root users [454](#)
  - z90crypt [439](#)
- device nodes
  - block devices [414](#)
  - CD/DVD drive [418](#)
  - console [35](#), [36](#)
  - DASD [121](#)
  - DCSS [385](#)
  - GenWQE [345](#)
  - SCSI [153](#)
  - storage class memory [191](#)
  - tape [197](#)
  - vmcp [395](#)
  - vmur [383](#)
  - watchdog [109](#)
  - z/VM \*MONITOR record [371](#)
  - z/VM recording [377](#)
  - zfc [153](#)
- device numbers [3](#)
- device special file, *See* device nodes
- device view
  - by category [12](#)
  - by device drivers [11](#)
- device\_blocked
  - zfc attribute (SCSI device) [179](#)
- devices
  - alias [146](#)
  - attributes [9](#)
  - balloon [410](#)
  - base [146](#)
  - CCW, types of [410](#)
  - corresponding interfaces [4](#)
  - ignoring [682](#)
  - in sysfs [9](#)
  - types of CCW [410](#)
  - working with newly available [10](#)
- devtype
  - common CCW attribute [9](#)
  - tape attribute [200](#)
- dhcp [268](#)
- DHCP
  - required options [267](#)
- DIAG
  - access method [130](#)
- DIAG access method
  - for ECKD [120](#)
  - for FBA [120](#)
- DIAG call [492](#), [701](#)
- diag288 watchdog
  - device driver [109](#)
- diag288\_wdt
  - kernel module [110](#)
- diagnose call [492](#), [701](#)
- DIF [186](#)
- dif=
  - zfc module parameter [156](#)
- Direct Access Storage Device, *See* DASD
- Direct SNMP [271](#)
- disabled wait
  - booting stops with [491](#)
  - cio\_ignore [490](#)
- discipline
  - DASD attribute [146](#)
- discontiguous saved segments, *See* DCSS
- disk layout
  - CMS [119](#)
  - LDL [119](#)
  - summary [120](#)
  - Z compatible [117](#)
- dispatching
  - CPU sysfs attribute [315](#)
- displaying
  - DASD information [146](#)
- displaying information
  - FCP channel and device [159](#)
- displaying IPL parameters [93](#)
- DIX [186](#)
- dmesg [4](#)
- Documentation directory [xi](#)
- documentation website
  - Red Hat Enterprise Linux [719](#)
- domain, cryptographic [436](#)
- DPM [19](#)

- dracut [28](#)
- drawer\_siblings
  - CPU sysfs attribute [314](#)
- drive, CD/DVD [418](#)
- drivers, *See* device driver
- dsn
  - metadata file attribute [661](#)
- dsorg
  - metadata file attribute [661](#)
- dump
  - creating automatically after kernel panic [491](#)
- dump device
  - DASD device, SCSI disk, or channel-attached tape [64](#)
  - ECKD DASD [65](#)
- dump file
  - receive and convert [658](#)
- dump, virtual server [497](#)
- dumpconf, Linux command [104](#)
- dumped\_frames, zfcpx attribute [161](#)
- DVD drive [418](#)
- DVD drive, HMC [339](#)
- DVD, loading Linux [85](#)
- Dynamic Host Configuration Protocol, *See* DHCP
- Dynamic Partitioning Manager [19](#)
- dynamic routing, and VIPA [256](#)

## E

- EADM subchannels
  - list [192](#)
- EBCDIC
  - conversion through cmsfs-fuse [525](#)
  - kernel parameters [79](#)
- ECB [463](#)
- ECKD
  - devices [115](#)
  - disk layout summary [120](#)
  - raw\_track\_access attribute [139](#)
- ECKD type DASD
  - preparing for use [127](#)
- edit characters, z/VM console [52](#)
- EEDK [641](#)
- eer\_enabled
  - DASD attribute [131](#)
- EKM [641](#)
- emu\_nodes=, kernel parameters [317](#)
- emu\_size=, kernel parameters [317](#)
- emulation of the HMC Operating System Messages applet [50](#)
- enable, qeth IP takeover attribute [246](#)
- encoding [526](#)
- encryption [433](#)
- encryption key manager [641](#)
- end-of-line character [52](#)
- end-to-end data consistency, SCSI [186](#)
- Enterprise PKCS#11 [433](#)
- Enterprise Storage Server [115](#)
- environment variable [398](#)
- environment variables
  - for CP special messages [398](#)
  - TERM [44](#)
  - ZIPLCONF [71](#)
  - ZLIB\_CARD [346](#)
  - ZLIB\_DEFLATE\_IMPL [346](#)
  - ZLIB\_INFLATE\_IMPL [346](#)

- environment variables (*continued*)
  - ZLIB\_TRACE [346](#)
- EP11 [433](#)
- EP11 coprocessor [433](#)
- ep11.h [451](#)
- erplug, DASD attribute [133](#)
- Error Logging System Service [377](#)
- error\_frames, zfcpx attribute [161](#)
- errorflag
  - prandom attribute [454](#)
- escape character
  - for terminals [52](#)
- ESS [115](#)
- Ethernet
  - interface name [214](#)
  - LAN channel station [279](#)
- exclusive-writable mode
  - DCSS access [385](#)
- execstack, Linux command [467](#)
- expires, DASD attribute [134](#)
- extended error reporting
  - DASD [131](#)
- extended error reporting, DASD [115](#)
- extended remote copy [335](#)
- external encrypted data key [641](#)

## F

- failed
  - zfcpx attribute (channel) [163](#)
  - zfcpx attribute (port) [170](#)
- failfast, DASD attribute [134](#)
- fake\_broadcast, qeth attribute [245](#)
- Fast Ethernet
  - LAN channel station [279](#)
- FBA
  - disk layout summary [120](#)
- FBA devices [115](#)
- FBA type DASD
  - preparing for use [128](#)
- FC-HBA [155](#)
- FC-HBA API functions [188](#)
- FCP
  - channel [151](#)
  - debugging [155](#)
  - device [151](#)
  - traces [155](#)
- FCP channel
  - displaying information [159](#)
- FCP device
  - displaying information [159](#)
- FCP devices
  - listing [187](#)
  - status information [165](#)
  - sysfs structure [152](#)
- FCP environment [151](#)
- fcpx\_control\_requests zfcpx attribute [161](#)
- fcpx\_input\_megabytes zfcpx attribute [161](#)
- fcpx\_input\_requests zfcpx attribute [161](#)
- fcpx\_output\_megabytes zfcpx attribute [161](#)
- fcpx\_output\_requests zfcpx attribute [161](#)
- fdasd
  - menu example [560](#)
  - options, example [563](#)

- fdasd menu [559](#)
- fdasd, Linux command [557](#)
- fdisk command [154](#)
- Federal Information Processing Standard [463](#), [687](#)
- Fibre Channel [151](#)
- Field Programmable Gate Array [343](#)
- file system
  - hugetlbfs [325](#)
- file systems
  - cmsfs-fuse for z/VM minidisk [525](#)
  - sysfs [7](#)
  - XFS [186](#)
  - zdsfs for z/OS DASD [661](#)
- FIPS [463](#)
- fips=, kernel parameter [687](#)
- Flash Express memory [191](#)
- flooding, qeth attribute [253](#)
- for performance measuring [469](#)
- formatting [127](#)
- FPGA [343](#)
- FTP server, loading Linux [85](#)
- full ECKD tracks [139](#)
- full-screen mode terminal [44](#)
- function\_handle
  - PCIe attribute [353](#)
- function\_id
  - PCIe attribute [353](#)

## G

- GB [xi](#)
- Generic Work Queue Engine, *See* GenWQE
- GenWQE
  - environment variables [346](#)
  - Java acceleration [343](#)
  - load distribution [345](#)
- genwqe\_echo, command [345](#)
- genwqe\_gunzip, command [345](#)
- genwqe\_gzip, command [345](#)
- genwqe-tools, RPM [345](#)
- genwqe-zlib, RPM [345](#)
- getxattr [527](#), [661](#)
- GHASH [463](#)
- ghash\_s390, kernel module [464](#)
- giga [xi](#)
- Gigabit Ethernet
  - SNMP [271](#)
- GNU\_STACK [467](#)
- group
  - CTCM attribute [287](#)
  - LCS attribute [280](#)
  - qeth attribute [224](#)
- group devices
  - CTCM [285](#)
  - LCS [279](#)
  - qeth [213](#)
- guest LAN sniffer [269](#)
- guest live migration [407](#)
- guest memory dump
  - vmur command [658](#)
- guest swapping [490](#)
- gunzip, command [347](#)
- gzip, command [347](#)

## H

- hardware
  - configuration [19](#)
  - random number [457](#)
  - service level [491](#)
- hardware counter
  - reading with perf tool [476](#)
- hardware facilities [469](#)
- hardware information [493](#), [494](#)
- Hardware Management Console, *See* HMC
- hardware status, cryptographic adapter
  - online [443](#)
- hardware\_version, zfcpl attribute [160](#)
- hardware-acceleration, in-kernel cryptography [463](#)
- HBA API
  - developing applications that use [188](#)
  - functions [188](#)
  - running applications that use [189](#)
- HBA API support
  - zfcpl [188](#)
- High Performance FICON [139](#)
- High Performance FICON, suppressing [125](#)
- high resolution polling timer [514](#)
- HiperSockets
  - bridge port [218](#)
  - device driver [207](#)
  - interface name [214](#)
  - network traffic analyzer [268](#)
- HiperSockets Network Concentrator [263](#)
- historical data
  - cpuplugd keywords [537](#)
- HMC
  - as terminal [46](#)
  - definition [35](#)
  - for booting Linux [78](#)
  - Integrated ASCII console applet [37](#)
  - Operating System Messages applet [37](#)
  - using in LPAR [37](#)
  - using on z/VM [37](#)
- HMC DVD drive [341](#)
- HMC media
  - list media contents [588](#)
  - mount media [564](#)
- HMC media, device driver [339](#)
- HMC Operating System Messages applet
  - emulation of the [50](#)
- HMC removable media
  - assign to LPAR [340](#)
- hmc\_network attribute [337](#)
- hmcdrv.cachesize=, kernel parameters [339](#)
- hmcdrvfs, kernel module [340](#)
- hmcdrvfs, Linux command [564](#)
- host
  - KVM, setup [421](#)
- host\_access\_count
  - DASD attribute [145](#)
- hotplug
  - CCW devices [18](#)
  - memory [319](#)
- hotplug memory
  - huge pages [326](#)
  - in sysfs [319](#)
  - reboot [320](#)

- hotplug rules
  - CPU [535](#)
  - memory [536](#)
- hpage=, module parameter [421](#)
- hpf
  - DASD attribute [144](#)
- hsuid, qeth attribute [250](#)
- huge page support
  - change number of [326](#)
  - display information about [326](#)
  - read current number of [326](#)
- huge page support attribute
  - nr\_hugepages [327](#)
- huge pages
  - hotplug memory [326](#)
- hugepages=, kernel parameters [325](#)
- hugetlbfs
  - virtual file system [325](#)
- HVC device driver [39](#)
- hvc\_iucv\_allow=, kernel parameter [43](#)
- hvc\_iucv=, kernel parameter [43](#)
- hw\_trap, qeth attribute [241](#)
- hwrng
  - cryptographic device node [435](#)
  - trng counter [458](#)
- hwtype
  - cryptographic adapter attribute [442](#)
- Hyper-Threading [311](#)
- HyperPAV [139](#)
- hypervisor
  - service level [491](#)
- hypervisor capability [495](#)
- hypervisor information [494](#)
- hypfs [329](#)
- hyptop
  - navigate between windows [569](#)
  - select data [569](#)
  - sort data [570](#)
  - units [572](#)
- hyptop command
  - z/VM fields [571](#)
- hyptop, Linux command [567](#)

## I

- IBM compatible disk layout [117](#)
- IBM Java [348](#)
- IBM label partitioning scheme [116](#)
- IBM TotalStorage Enterprise Storage Server [115](#)
- ica\_api.h [451](#)
- icainfo, Linux command [501](#)
- icastats, Linux command [501](#)
- IDRC compression [202](#)
- ids=, module parameter [425](#)
- IEEE 802.3 Ethernet [463](#)
- IEP [467](#)
- if names [4](#)
- if\_name, qeth attribute [231](#)
- IFCC [143](#)
- Improved Data Recording Capability compression [202](#)
- in\_recovery
  - zfcpx attribute (channel) [163](#)
  - zfcpx attribute (port) [168](#), [170](#)
  - zfcpx attribute (SCSI device) [179](#)
- in\_recovery, zfcpx attribute [160](#)
- in-kernel checksum [463](#)
- in-kernel cryptography [463](#)
- inbound checksum
  - offload operation [235](#)
- inbound checksum, qeth [235](#)
- Initial Program Load, *See* IPL
- initial RAM disk [79](#)
- initrd
  - module parameters [28](#)
- input/output configuration data set [19](#)
- instruction execution protection [467](#)
- Integrated ASCII console applet
  - on HMC [37](#)
- interface
  - MTIO [197](#)
  - network [3](#)
- interface control check [143](#)
- interface names
  - ctc [286](#)
  - mpc [286](#)
  - qeth [214](#), [231](#)
  - storage class memory [191](#)
  - versus devices [4](#)
  - vmur [383](#)
- interfaces
  - CTC [286](#)
  - FC-HBA [155](#)
- internal shared memory
  - device driver [307](#)
- interrupt
  - cryptographic device attribute [444](#)
- invalid\_crc\_count zfcpx attribute [161](#)
- invalid\_tx\_word\_count zfcpx attribute [161](#)
- IOCDs [19](#)
- iocounterbits
  - zfcpx attribute [179](#)
- ioctl
  - protected key device driver [462](#)
- iodone\_cnt
  - zfcpx attribute (SCSI device) [179](#)
- ioerr\_cnt
  - zfcpx attribute (SCSI device) [179](#)
- IOMMU [423](#)
- iorequest\_cnt
  - zfcpx attribute (SCSI device) [179](#)
- ip [3](#)
- IP address
  - confirming [233](#)
  - duplicate [234](#)
  - takeover [246](#)
  - virtual [249](#)
- IP address takeover, activating and deactivating [246](#)
- ip link
  - command [262](#)
- ipa\_takeover, qeth attributes [246](#)
- IPL
  - displaying current settings [593](#)
  - SCSI device
    - secure boot [56](#)
- IPL device
  - FCP
    - device, IPL parameter [93](#)
    - lun, IPL parameter [93](#)



- IPL device (*continued*)
  - FCP (*continued*)
    - wwpn, IPL parameter [93](#)
- IPL devices
  - for booting [78](#)
  - preparing [55](#)
- IPLipl\_type
  - device [93](#)
  - loadparm [93](#)
  - parameters, displaying [93](#)
  - secure [93](#)
- IPv6
  - source VIPA [258](#)
  - stateless autoconfiguration [214](#)
  - support for [214](#)
- ISM
  - device driver [307](#)
- ism module [307](#)
- ISO-8859-1 [526](#)
- isolation, qeth attribute [237](#)
- IUCV
  - accessing terminal devices over [46](#)
  - authorizations [298](#)
  - enablement [298](#)
  - maximum number of connections [298](#)
  - OPTION MAXCONN [298](#)
- iucvconn
  - set up a z/VM guest virtual machine for [43](#)
  - using on z/VM [39](#)
- iucvtty [44](#)
- iucvtty, Linux command [43](#)

## J

- Java, GenWQE [343](#)
- Java, GenWQE acceleration [348](#)

## K

- KB [xi](#)
- kdump [497](#)
- KEK [641](#)
- kernel cryptographic API [463](#)
- kernel image [79](#)
- kernel module
  - aes\_s390 [464](#)
  - af\_iucv [298](#)
  - appldata\_mem [361](#)
  - appldata\_net\_sum [361](#)
  - appldata\_os [361](#)
  - cmm [401](#)
  - ctcm [286](#)
  - dasd\_diag\_mod [125](#)
  - dasd\_eckd\_mod [125](#)
  - dasd\_fba\_mod [125](#)
  - dasd\_mod [124](#)
  - dcssblk [386](#)
  - des\_s390 [464](#)
  - diag288\_wdt [110](#)
  - ghash\_s390 [464](#)
  - hmcdrvfs [340](#)
  - lcs [279](#)
  - monreader [373](#)

- kernel module (*continued*)
  - monwriter [367](#)
  - paes\_s390 [464](#)
  - pkey [460](#)
  - qeth [220](#)
  - qeth\_l2 [220](#)
  - qeth\_l3 [220](#)
  - sha512 [464](#)
  - tape\_34xx [198](#)
  - tape\_3590 [198](#)
  - vfiopap [426](#)
  - vfiomdev [426](#)
  - vfiopci [425](#)
  - vmlogrdr [378](#)
  - vmur [383](#)
  - zfcps [156](#)
- kernel panic
  - creating dump automatically after [491](#)
- kernel parameter file
  - for z/VM reader [25](#)
- kernel parameter line
  - length limit for booting [25](#), [26](#)
  - module parameters [28](#)
- kernel parameters
  - and ziapl [60](#)
  - ap.domain= [438](#)
  - ap.poll\_thread= [438](#)
  - apmask= [438](#)
  - aqmask= [438](#)
  - channel measurement facility [471](#)
  - cio\_ignore= [682](#)
  - cmf.format= [471](#)
  - cmf.maxchannels= [471](#)
  - mma= [686](#)
  - conmode= [41](#)
  - console= [42](#)
  - default\_hugepagesz= [325](#)
  - emu\_nodes= [317](#)
  - emu\_size= [317](#)
  - encoding [23](#)
  - fips= [687](#)
  - general [681](#)
  - hmcdrv.cachesize= [339](#)
  - hugepages= [325](#)
  - hvc\_iucv\_allow= [43](#)
  - hvc\_iucv= [43](#)
  - maxcpus= [688](#)
  - no\_console\_suspend [99](#)
  - noexec= [467](#)
  - noresume [99](#)
  - nosmt [689](#)
  - numa\_balancing= [317](#)
  - numa\_debug [317](#)
  - numa= [317](#)
  - pci= [351](#)
  - possible\_cpus= [690](#)
  - ramdisk\_size= [691](#)
  - reboot [27](#)
  - resume= [99](#)
  - ro [692](#)
  - root= [693](#)
  - sched\_debug [317](#)
  - sclp\_con\_drop= [42](#)
  - sclp\_con\_pages= [43](#)



kernel parameters (*continued*)

- smt= [694](#)
- specifying [23](#)
- stp= [335](#)
- vdso= [695](#)
- vmhalt= [696](#)
- vmpanic= [697](#)
- vmpoff= [698](#)
- vmreboot= [699](#)
- zipl [23](#)

kernel source tree [xi](#)

key

- pkey-generated protected [460](#)

key encrypting key [641](#)

kilo [xi](#)

KVM

- host setup [421](#)
- nested hosts [421](#)
- VFIO [423](#)

KVM guest

- console access, virsh [38](#)

## L

LAN

- sniffer [268](#)
- z/VM guest LAN sniffer [269](#)

LAN channel station, *See* LCS

LAN, virtual [260](#)

lancmd\_timeout, LCS attribute [281](#)

large page support [325](#)

last\_known\_reservation\_state, DASD attribute [142](#)

layer 2

- qeth discipline [212](#)

layer 3

- qeth discipline [212](#)

layer2

- qeth attribute [225](#)

layer2, qeth attribute [215](#)

lcs

- recover attribute [283](#)

LCS

- activating an interface [282](#)
- device driver [279](#)
- group attribute [280](#)
- lancmd\_timeout attribute [281](#)
- online attribute [282](#)
- subchannels [279](#)
- ungroup attribute [281](#)

LCS device driver

- setup [279](#)

LDL disk layout [119](#)

learning\_timeout, qeth attribute [253](#)

learning, qeth attribute [253](#)

LGR [360](#)

libcard, GenWQE [343](#)

libfuse

- package [661](#)

libhbaapi-devel [188](#)

libica [434](#)

libvirt [421](#)

libzfcphbaapi [189](#)

libzfcphbaapi, package [189](#)

libzHW [343](#)

lic\_version, zfc attribute [160](#)

line edit characters, z/VM console [52](#)

line-mode terminal

- control characters [48](#)
- special characters [48](#)

link\_failure\_count, zfc attribute [161](#)

Linux

- as LAN sniffer [268](#)

- device categories [7](#)

Linux commands

- generic options [501](#)

Linux device special file, *See* device nodes

Linux guest relocation [360](#)

Linux in LPAR mode, booting [80](#)

Linux on KVM, booting [92](#)

Linux on z/VM

- booting [88](#)

- reducing memory of [359](#)

lip\_count, zfc attribute [161](#)

list media contents [341](#)

listxattr [527](#), [661](#)

live migration, virtual server [407](#)

LNx1 labeled disk [119](#)

load balancing and VIPA [258](#)

LOADDEV [90](#)

LOADNSHR operand

- DCSS [385](#)

log file, osasnmpr [276](#)

log information

- FCP devices [165](#)

logging

- I/O subchannel status [483](#)

logical boot device

- base parameters [62](#)

- helper script [63](#)

LOGREC, z/VM record [377](#)

loss\_of\_signal\_count, zfc attribute [161](#)

loss\_of\_sync\_count, zfc attribute [161](#)

lost DASD reservation [141](#)

LPAR

- configuration

  - device pre-configuration [19](#)

  - storage-class memory [191](#)

- DPM mode [19](#)

- hardware counters [475](#)

- I/O devices, configuring [490](#)

LPAR configuration [191](#)

LPAR Linux, booting [80](#)

lrecl

- metadata file attribute [661](#)

lschp, Linux command [577](#)

lscpu, Linux command [311](#)

lscpumf, Linux command [579](#)

lscss, Linux command [192](#), [582](#)

lsdasd, Linux command [585](#)

lshmc, Linux command [588](#)

lsluns, Linux command [589](#)

lsqeth

- command [231](#)

lsqeth, Linux command [592](#)

lsreipl, Linux command [593](#)

lsscm, Linux command [193](#), [594](#)

lsshut, Linux command [596](#)

lstape, Linux command [597](#)

lszscrypt, Linux command [600](#)

lszdev, Linux command [605](#)

lszfcf, Linux command [610](#)

LUNs

finding available [187](#)

LVM [193](#)

## M

MAC

address learning [253](#)

MAC addresses [215](#)

MAC header

layer2 for qeth [215](#)

magic sysrequest functions

procfs [50](#)

major and minor

block devices [414](#)

major number

DASD devices [120](#)

tape devices [196](#)

management information base [271](#)

maxcpus=, kernel parameter [688](#)

maxframe\_size

zfcf attribute [160](#)

MB [xi](#)

mcast\_flooding, qeth attribute [253](#)

measurement

channel path [14](#)

measurements

PCIe attribute [354](#)

Media Access Control (MAC) addresses [215](#)

mediated device

VFIO AP [426](#)

mediated device, VFIO [423](#)

Medium Access Control (MAC) header [216](#)

medium\_state, tape attribute [201](#)

mega [xi](#)

memory

block\_size\_bytes attribute [320](#)

Flash Express [191](#)

guest, reducing [359](#)

hotplug [319](#)

state attribute [321](#)

storage-class [191](#)

memory blocks

in sysfs [319](#)

memory control

complex rules [537](#)

configuration file [534](#)

memory hotplug

sample configuration file [538](#)

memory hotplug rules [536](#)

menu configuration

z/VM example [89](#)

metadata file for z/OS DASD [661](#)

MIB (management information base) [271](#)

migration, virtual server [407](#)

minor and major

block devices [414](#)

minor number

DASD devices [120](#)

DCSS devices [389](#)

tape devices [195](#)

mlc4\_core [305](#)

mlx4

debugging [306](#)

mlx4\_en

device driver [305](#)

mlx4, debug [306](#)

mlx5\_core [305](#)

modalias

cryptographic adapter attribute [442](#)

mode

prandom attribute [454](#)

mode terminal

full-screen [44](#)

model

zfcf attribute (SCSI device) [179](#)

modprobe [23](#)

module

ism [307](#)

mlx4\_core [305](#)

mlx4\_en [305](#)

mlx5\_core [305](#)

mlx5\_ib [305](#)

parameters [28](#)

rds\_rdma [305](#)

module parameter

hpage= [421](#)

ids= [425](#)

nested= [421](#)

module parameters

boot configuration [28](#)

cachsize= [340](#)

chunksize= [453](#)

cmd= [110](#)

conceal= [110](#)

dasd= [124](#)

dcssblk.segments= [386](#)

kernel parameter line [28](#)

mode=

module parameters [453](#)

mondcss= [367](#), [373](#)

nowayout= [110](#)

reseed\_limit= [453](#)

scm\_block= [191](#)

sender= [397](#)

modules

qeth, removing [221](#)

modulus-exponent [433](#)

mon\_fsstatd

command-line syntax [613](#)

monitor data, processing [614](#)

monitor data, reading [615](#)

systemd service unit syntax [612](#)

mon\_fsstatd, command [612](#)

mon\_procd

command-line syntax [618](#)

monitor data, reading [621](#)

systemd service unit syntax [616](#)

mon\_procd, command [616](#)

mon\_statd

monitor data, processing [618](#)

mondcss=, module parameters [367](#), [373](#)

monitor data

read [358](#)

monitor stream

- monitor stream (*continued*)
  - module activation [362](#)
  - sampling interval [362](#)
- monitor stream application
  - device driver [367](#)
- monitoring
  - z/VM performance [357](#)
- monitoring Linux instances [357](#)
- mount media contents [341](#)
- mount point
  - debugfs [xi](#)
  - procfs [xi](#)
  - sysfs [xi](#)
- mt-st, package [202](#)
- MTIO interface [197](#)
- MTU
  - qeth [232](#)
- multicast forwarding [253](#)
- multicast\_router, value for qeth router attribute [242](#)
- multiple subchannel set [11](#)
- multithreading [311](#)

## N

- name
  - devices, *See* device names
- names
  - DASD [120](#)
- navigate between windows
  - hyptop [569](#)
- nested hosts, KVM [421](#)
- nested=, module parameter [421](#)
- net-snmp [271](#)
- network
  - device drivers [205](#)
- network concentrator
  - examples [265](#)
- Network Concentrator [263](#)
- network interfaces [3](#)
- network names [4](#)
- network traffic analyzer
  - HiperSockets [268](#)
- no\_auto\_port\_rescan=
  - zfc module parameters [156](#)
- no\_console\_suspend, kernel parameters [99](#)
- no\_prio\_queueing, value for qeth priority\_queueing attribute [227](#)
- no\_router, value for qeth router attribute [242](#)
- node\_name
  - zfc attribute [160](#)
  - zfc attribute (port) [168](#)
- node, device, *See* device nodes
- noexec=
  - kernel parameter [467](#)
- non-operational terminals
  - preventing re-spawns for [45](#)
- non-priority commands [51](#)
- noresume, kernel parameters [99](#)
- nos\_count, zfc attribute [161](#)
- nosmt, kernel parameter [689](#)
- nowayout=, module parameters [110](#)
- NPIV
  - example [164](#)
  - FCP channel mode [164](#)

- NPIV (*continued*)
  - for FCP channels [155](#)
  - removing SCSI devices [184](#)
- nr\_hugepages
  - huge page support attribute [327](#)
- NUMA emulation [317](#)
- numa\_balancing=, kernel parameters [317](#)
- numa\_debug, kernel parameters [317](#)
- numa=, kernel parameters [317](#)

## O

- object ID [271](#)
- offline
  - CHPID [15](#), [16](#)
  - devices [9](#)
- offload operations
  - inbound checksum [235](#)
  - outbound checksum [235](#)
  - TCP segmentation offload (TSO) [235](#)
- OID (object ID) [271](#)
- online
  - CHPID [15](#), [16](#)
  - common CCW attribute [9](#)
  - CPU attribute [313](#)
  - cryptographic adapter attribute [443](#)
  - CTCM attribute [289](#)
  - DASD attribute [132](#), [133](#)
  - LCS attribute [282](#)
  - qeth attribute [231](#)
  - tape attribute [198](#), [200](#)
  - TTY attribute [48](#)
  - zfc attribute [158](#)
- Open Source Development Network, Inc. [271](#)
- openCryptoki, library [451](#)
- Operating System Messages applet
  - emulation of the HMC [50](#)
  - on HMC [37](#)
- operation, tape attribute [201](#)
- OPTION MAXCONN [298](#)
- optional properties
  - DCSS [386](#)
- OSA-Express
  - device driver [207](#)
  - LAN channel station [279](#)
  - SNMP subagent support [271](#)
- OSA-Express MIB file [272](#)
- osasnmppd
  - access control [273](#)
  - checking the log file [276](#)
  - master agent [271](#)
  - setup [272](#)
  - starting the subagent [276](#)
  - stopping [278](#)
  - subagent [271](#)
- osasnmppd, OSA-Express SNMP subagent [271](#)
- OSDN (Open Source Development Network, Inc.) [271](#)
- outbound checksum
  - offload operation [235](#)
- outbound checksum, qeth [236](#)
- overlap with guest storage [372](#)

## P

- PAES [463](#)
- paes\_s390, kernel module [464](#)
- page pool
  - static [359](#)
  - timed [359](#)
- parallel access volume (PAV) [146](#)
- parameter
  - kernel and module [23](#)
- parameters
  - displaying IPL [93](#)
- partition
  - on DASD [116](#)
  - schemes for DASD [116](#)
  - table [118](#)
- partitioning
  - SCSI devices [154](#)
- pass-through, VFIO [423](#)
- path\_autodisable
  - DASD attribute [143](#)
- path\_interval
  - DASD attribute [143](#)
- path\_threshold
  - DASD attribute [143](#)
- PAV (parallel access volume) [146](#)
- PAV enablement, suppression [125](#)
- pchid
  - PCIe attribute [353](#)
- PCHID
  - map to CHPID [17](#)
- pci=, kernel parameter [351](#)
- PCIe
  - defective [353](#)
  - device driver [351](#)
  - function\_handle attribute [353](#)
  - function\_id attribute [353](#)
  - pchid attribute [353](#)
  - pfgid attribute [353](#)
  - pfip attribute [353](#)
  - power attribute [351](#)
  - recover attribute [352](#)
  - set up [351](#)
  - statistics attribute [354](#)
  - uid attribute [353](#)
  - vfn attribute [353](#), [354](#)
- peer\_d\_id, zfc attribute [160](#)
- peer\_wwnn, zfc attribute [160](#)
- peer\_wwpn, zfc attribute [160](#)
- perf tool
  - reading a hardware counter [476](#)
  - reading sample data [477](#)
- performance
  - CPU-measurement facilities [475](#)
  - DASD [135](#), [545](#)
- performance measuring
  - with hardware facilities [469](#)
- performance monitoring
  - z/VM [357](#)
- performance statistics, QETH [240](#)
- Peripheral Component Interconnect [351](#)
- permanent\_port\_name, zfc attribute [160](#), [164](#)
- permissions
  - S/390 hypervisor file system [332](#)
- pfgid
  - PCIe attribute [353](#)
- pfip
  - PCIe attribute [353](#)
- physical channel ID
  - for CHPID [17](#)
- physical\_s\_id, zfc attribute [164](#)
- pimpampom, subchannel attribute [14](#)
- pkey
  - protected AES key [461](#)
  - secure key [460](#)
- pkey-generated protected key [460](#)
- pkey, kernel module [460](#)
- PNET ID [307](#)
- polarization
  - CPU sysfs attribute [315](#)
  - values [315](#)
- poll thread
  - disable using chcrypt [513](#)
  - enable using chcrypt [513](#)
- poll\_thread
  - AP bus [450](#)
  - cryptographic adapter attribute [444](#)
- poll\_timeout
  - cryptographic adapter attribute [445](#)
  - set using chcrypt [514](#)
- port scan
  - controlling [166](#)
- port\_id
  - zfc attribute (port) [168](#)
- port\_id, zfc attribute [160](#)
- port\_name
  - zfc attribute (port) [168](#)
- port\_name, zfc attribute [160](#)
- port\_remove, zfc attribute [171](#)
- port\_rescan, zfc attribute [165](#)
- port\_scan\_backoff [166](#)
- port\_scan\_ratelimit [166](#)
- port\_state
  - zfc attribute (port) [168](#)
- port\_type, NPIV [172](#)
- port\_type, zfc attribute [160](#)
- portno, qeth attribute [229](#)
- ports
  - listing [187](#)
- possible\_cpus=, kernel parameter [690](#)
- power attribute
  - PCIe [351](#)
- power/state attribute [100](#)
- prandom
  - byte\_counter attribute [454](#)
  - chunksize attribute [454](#)
  - errorflag attribute [454](#)
  - for non-root users [454](#)
  - mode attribute [454](#)
- preferred console [42](#)
- preparing as dump device [64](#)
- preparing ECKD [127](#)
- preparing FBA [128](#)
- pri=, fstab parameter [99](#)
- prim\_seq\_protocol\_err\_count, zfc attribute [161](#)
- primary\_connector, value for qeth router attribute [242](#)
- primary\_router, value for qeth router attribute [242](#)

- prio\_queueing, value for qeth priority\_queueing attribute [228](#)
- priority command [51](#)
- priority\_queueing, qeth attribute [227](#)
- prng
  - reseed [456](#)
  - reseed\_limit [455](#)
- processors
  - cryptographic [7](#)
- procfs
  - apldata [361](#)
  - cio\_ignore [683](#)
  - magic sysrequest function [50](#)
  - VLAN [262](#)
- programming interfaces
  - protected key device driver [462](#)
- prot\_capabilities
  - zfc attribute [186](#)
- protected key
  - pkey generated [460](#)
- protected key device driver
  - programming interfaces [462](#)
- protected keyswap disk [461](#)
- protocol, CTCM attribute [289](#)
- proxy ARP [248](#)
- proxy ARP attributes [223](#)
- pseudorandom number
  - device driver [453](#)
- pseudorandom number device driver
  - setup [453](#)
- PSW
  - disabled wait [491](#)
- purge, z/VM recording attribute [380](#)
- PVMSG [51](#)

## Q

- qclib [494](#)
- QDIO [213](#)
- QEMU [421](#)
- qeth
  - activating an interface [232](#)
  - activating and deactivating IP addresses for takeover [246](#)
  - auto-detection [214](#)
  - bridge\_hostnotify attribute [218](#)
  - bridge\_invisible attribute [253](#)
  - bridge\_role attribute [218](#), [251](#)
  - bridge\_state attribute [218](#)
  - buffer\_count attribute [229](#)
  - card\_type attribute [230](#)
  - configuration tool [625](#)
  - deactivating an interface [234](#)
  - device directories [214](#)
  - device driver [207](#)
  - device driver functions [210](#)
  - displaying device overview [592](#)
  - enable attribute for IP takeover [246](#)
  - fake\_broadcast attribute [245](#)
  - flooding attribute [253](#)
  - group attribute [224](#)
  - group devices, names of [212](#)
  - hsuid attribute [250](#)
  - hw\_trap attribute [241](#)

- qeth (*continued*)
  - if\_name attribute [231](#)
  - interface names [214](#)
  - ipa\_takeover attributes [246](#)
  - isolation attribute [237](#)
  - layer 2 [212](#)
  - layer 3 [212](#)
  - layer2 attribute [215](#), [225](#)
  - learning attribute [253](#)
  - learning\_timeout attribute [253](#)
  - mcast\_flooding attribute [253](#)
  - MTU [232](#)
  - online attribute [231](#)
  - portno attribute [229](#)
  - priority\_queueing attribute [227](#)
  - problem determination attribute [222](#)
  - proxy ARP attributes [223](#)
  - recover attribute [234](#)
  - removing modules [221](#)
  - route4 attribute [242](#)
  - route6 attribute [242](#)
  - rx\_bcast attribute [253](#)
  - sniffer attributes [223](#)
  - subchannels [213](#)
  - summary of attributes [221–224](#)
  - switching the discipline [221](#)
  - takeover\_learning attribute [253](#)
  - takeover\_setvmac attribute [253](#)
  - TCP segmentation offload [236](#)
  - ungroup attribute [225](#)
  - VIPA attributes [223](#)
  - vnicc attributes [253](#)
- qeth interfaces, mapping [4](#)
- QETH performance statistics [240](#)
- qetharp, Linux command [623](#)
- qethconf, Linux command [625](#)
- qethcoat, Linux command [628](#)
- query host access
  - DASD [145](#)
- query HPF
  - DASD [144](#)
- queue\_depth, zfc attribute [180](#)
- queue\_depth=, zfc module parameters [156](#)
- queue\_ramp\_up\_period, zfc attribute [180](#)
- queueing, priority [227](#)

## R

- RAM disk, initial [79](#)
- ramdisk\_size=, kernel parameter [691](#)
- random number
  - device driver [453](#), [457](#)
- random numbers
  - reading [454](#), [457](#)
- raw\_track\_access, DASD attribute [139](#)
- raw-track access mode [661](#)
- RDMA [351](#)
- rds\_rdma module [305](#)
- read monitor data [358](#)
- readelf, Linux command [467](#)
- readlink, Linux command [4](#)
- readonly
  - DASD attribute [147](#)
- reboot

- reboot (*continued*)
  - kernel parameters [27](#)
- receive checksum, qeth [235](#)
- recfm
  - metadata file attribute [661](#)
- record layout
  - z/VM [377](#)
- recording, z/VM recording attribute [379](#)
- recover
  - PCIe attribute [352](#)
- recover, lcs attribute [283](#)
- recover, qeth attribute [234](#)
- recovery, CTC interfaces [292](#)
- Red Hat Enterprise Linux
  - documentation website [719](#)
- reflective relay mode [237](#)
- relative port number
  - qeth [229](#)
- Remote Direct Memory Access (RDMA) [351](#)
- Remote Spooling Communications Subsystem [653](#)
- Removable media, loading Linux [85](#)
- remove channel path
  - DASD [143](#)
- remove, DCSS attribute [392](#)
- request processing
  - cryptographic [435](#)
- request\_count
  - cryptographic adapter attribute [442](#)
- rescan
  - zfc attribute (SCSI device) [182](#)
- reseed
  - prandom attribute [454](#)
  - prng [456](#)
- reseed\_limit
  - prandom attribute [454](#)
  - prng [455](#)
- reseed\_limit=, module parameters [453](#)
- reservation state
  - DASD [142](#)
- reservation\_policy, DASD attribute [141](#)
- reset\_statistics
  - zfc attribute [160](#)
- respawn prevention [45](#)
- resume [97](#)
- resume=, kernel parameters [99](#)
- retrieving hardware information [494](#)
- rev
  - zfc attribute (SCSI device) [179](#)
- RFC
  - 1950 (zlib) [343](#)
  - 1951 (deflate) [343](#)
  - 1952 (gzip) [343](#)
- Rivest-Shamir-Adleman [433](#)
- ro, kernel parameter [692](#)
- RoCE [351](#)
- roles
  - zfc attribute (port) [168](#)
- root=, kernel parameter [693](#)
- route4, qeth attribute [242](#)
- route6, qeth attribute [242](#)
- router
  - IPv4 router settings [242](#)
  - IPv6 router settings [242](#)
- RPM

- RPM (*continued*)
  - genwqe-tools [345](#)
  - genwqe-zlib [345](#)
  - libfuse [661](#)
  - libhbaapi-devel [188](#)
  - libhugetlbfs [325](#)
  - libica [434](#)
  - libzfcphbaapi [189](#)
  - mt-st [202](#)
  - openCryptoki [451](#)
  - s390utils [501](#)
  - sg3\_utils [597](#)
  - src\_vipa [258](#)
  - util-linux [311](#)
- RSA [433](#)
- RSA exponentiation [433](#)
- RSCS [653](#)
- rx\_bcast, qeth attribute [253](#)
- rx\_frames, zfc attribute [161](#)
- rx\_words, zfc attribute [161](#)

## S

- s\_id, zfc attribute [164](#)
- S/390 hypervisor file system
  - defining access rights [332](#)
  - directory structure [329](#)
  - LPAR directory structure [329](#)
  - updating hypfs information [333](#)
  - z/VM directory structure [330](#)
- s390\_sthyi() [494](#)
- s390dbf [360](#)
- s390utils, package [501](#)
- safe\_offline
  - DASD attribute [132](#)
- sample\_count, cmf attribute [472](#)
- sampling facility
  - reading data [477](#)
- save, DCSS attribute [390](#)
- sched\_debug, kernel parameters [317](#)
- sclp\_con\_drop=, kernel parameter [42](#)
- sclp\_con\_pages=, kernel parameter [43](#)
- SCM [193](#)
- scm\_block=, module parameters [191](#)
- script
  - base device [63](#)
- SCSI
  - data consistency checking [186](#)
  - device nodes [153](#)
  - multipath devices [154](#)
  - tape [416](#)
  - virtual CD/DVD drive [418](#)
  - virtual HBA [410](#)
- SCSI device
  - automatically attached, configuring [172](#)
  - configuring manually [172](#)
- SCSI devices
  - information in sysfs [178](#)
  - partitioning [154](#)
  - removing [184](#)
  - sysfs structure [152](#)
- SCSI disk [64](#)
- SCSI tape
  - lstape data [599](#)

- scsi\_host\_no, zfcpl attribute [174](#)
- scsi\_id, zfcpl attribute [174](#)
- scsi\_level
  - zfcpl attribute (SCSI device) [179](#)
- scsi\_logging\_level, Linux command [631](#)
- scsi\_lun, zfcpl attribute [174](#)
- scsi\_target\_id
  - zfcpl attribute (port) [168](#)
- SCSI-over-Fibre Channel, *See* zfcpl
- SCSI-over-Fibre Channel device driver [151](#)
- SCSI, booting from [80](#), [82](#), [90](#)
- SE (Support Element) [78](#)
- secondary unicast [210](#), [212](#)
- secondary\_connector, value for qeth router attribute [242](#)
- secondary\_router, value for qeth router attribute [242](#)
- seconds\_since\_last\_reset
  - zfcpl attribute [160](#)
- secure boot
  - zipl syntax [56](#)
- secure key
  - pkey [460](#)
- seglist, DCSS attribute [389](#)
- segmentation offload, TCP [236](#)
- send files
  - vmur command [659](#)
- send files to z/VSE
  - vmur command [660](#)
- sender=, module parameter [397](#)
- serial\_number, zfcpl attribute [160](#)
- service levels
  - reporting to IBM Support [491](#)
- service utility
  - cpuplugd [531](#)
- set, CPI attribute [487](#)
- setup
  - KVM host [421](#)
  - LCS device driver [279](#)
  - source VIPA [258](#)
  - standard VIPA [256](#)
- setxattr [527](#)
- sg\_inq, Linux command [597](#)
- sg3\_utils, package [597](#)
- SHA-1 [463](#)
- SHA-256 [463](#)
- SHA-512
  - in-kernel cryptography [463](#)
- sha512, kernel module [464](#)
- shared, DCSS attribute [390](#)
- shutdown actions [103](#)
- SIE capability [495](#)
- Simple Network Management Protocol [271](#)
- simultaneous multithreading [311](#)
- smc\_pnet, Linux command [634](#)
- smc\_run, Linux command [636](#)
- smcss, Linux command [637](#)
- SMSG\_ID [398](#)
- SMSG\_SENDER [398](#)
- smsgiucv\_app
  - device driver [397](#)
- SMT [311](#)
- smt=, kernel parameter [694](#)
- sniffer
  - attributes [223](#)
- sniffer, guest LAN [269](#)
- SNMP [271](#)
- SNMP queries [277](#)
- snmpcmd command [277](#)
- source VIPA
  - example [260](#)
  - IPv6 [258](#)
  - setup [258](#)
- special characters
  - line-mode terminals [48](#)
  - z/VM console [52](#)
- special file
  - DASD [121](#)
  - See also* device nodes
- speed, zfcpl attribute [160](#)
- ssch\_rsch\_count, cmf attribute [472](#)
- standard VIPA
  - adapter outage [256](#)
  - setup [256](#)
- standby CPU, configuring [312](#)
- state
  - sysfs attribute [321](#)
  - zfcpl attribute (SCSI device) [183](#)
- state attribute, power management [100](#)
- state, tape attribute [200](#)
- stateless autoconfiguration, IPv6 [214](#)
- static page pool
  - reading the size of the [402](#)
- static page pool size
  - setting to avoid guest swapping [490](#)
- static routing, and VIPA [256](#)
- statistics
  - crypto [676](#)
  - DASD [135](#), [545](#)
  - PCIe attribute [354](#)
- status
  - DASD attribute [148](#)
- status information
  - FCP devices [165](#)
- status, CHPID attribute [15](#), [16](#)
- STHYI instruction [494](#)
- storage
  - memory hotplug [319](#)
- storage class memory
  - device names [191](#)
  - device nodes [191](#)
  - displaying overview [594](#)
- storage-class memory
  - device driver [191](#)
- Store Hypervisor Information instruction [494](#)
- STP
  - sysfs interface [335](#)
- stp=, kernel parameter [335](#)
- strength
  - prandom attribute [454](#)
- stripe size, NUMA emulation [317](#)
- subchannel
  - multiple set [11](#)
  - status logging [483](#)
- subchannel set ID [11](#)
- subchannels
  - attributes in sysfs [13](#)
  - CCW and CCW group devices [8](#)
  - CTCM [285](#)
  - displaying overview [582](#)



- subchannels (*continued*)
  - EADM [191](#)
  - in sysfs [13](#)
  - LCS [279](#)
  - qeth [213](#)
- support
  - AF\_IUCV address family [297](#)
- Support Element [78](#)
- supported\_classes
  - zfcpx attribute (port) [168](#)
- supported\_classes, zfcpx attribute [160](#)
- supported\_speeds, zfcpx attribute [160](#)
- suspend [97](#)
- swap disk
  - pkey-generated protected key [461](#)
- swap partition
  - for suspend resume [99](#)
  - priority [99](#)
- swapping
  - avoiding [359](#)
- SYMPTOM, z/VM record [377](#)
- syntax diagrams [705](#)
- syntax overview
  - zipl [56](#)
- sysfs
  - channel subsystem view [13](#)
  - device view [12](#)
  - device view by category [12](#)
  - device view by drivers [11](#)
  - FCP devices [152](#)
  - information about SCSI devices [178](#)
  - SCSI devices [152](#)
- sysfs attribute
  - cm\_enable [14](#)
  - state [321](#)
- sysinfo [493](#)
- sysplex\_name, CPI attribute [485](#)
- system states
  - displaying current settings [596](#)
- system time [335](#)
- system time protocol [335](#)
- system\_level, CPI attribute [486](#)
- system\_name, CPI attribute [485](#)
- system\_type, CPI attribute [486](#)
- systemd [44](#)

## T

- T10 DIF [186](#)
- takeover\_learning, qeth attribute [253](#)
- takeover\_setvmac, qeth attribute [253](#)
- tape
  - blocksize attribute [200](#)
  - booting from [80](#), [84](#), [88](#)
  - cmb\_enable attribute [200](#)
  - cutype attribute [200](#)
  - device names [195](#)
  - device nodes [197](#)
  - devtype attribute [200](#)
  - display support [645](#)
  - displaying overview [597](#)
  - encryption support [641](#)
  - IDRC compression [202](#)
  - loading and unloading [202](#)

- tape (*continued*)
  - medium\_state attribute [201](#)
  - MTIO interface [197](#)
  - online attribute [198](#), [200](#)
  - operation attribute [201](#)
  - state attribute [200](#)
  - uid attribute [353](#)
- tape device driver [195](#)
- tape devices
  - typical tasks [198](#)
- tape, channel-attached [64](#)
- tape390\_crypt, Linux command [641](#)
- tape390\_display, Linux command [645](#)
- tar command, acceleration [347](#)
- TCP segmentation offload [236](#)
- TCP segmentation offload (TSO)
  - offload operation [235](#)
- TCP/IP
  - ARP [217](#)
  - DHCP [267](#)
  - point-to-point [285](#)
  - service machine [286](#), [305](#), [307](#)
- TDEA [453](#)
- TDES
  - in-kernel cryptography [463](#)
- TERM, environment variable [44](#)
- terminal
  - 3270, switching the views of [47](#)
  - accessing over IUCV [46](#)
  - CCW, switching device on- or offline [48](#)
  - line-mode [44](#)
  - mainframe versus Linux [34](#)
  - non-operational, preventing re-spawns for [45](#)
  - provided by the 3270 terminal device driver [44](#)
- terminals
  - escape character [52](#)
- tgid\_bind\_type, zfcpx attribute [160](#)
- thread\_siblings
  - CPU sysfs attribute [314](#)
- time
  - command [347](#)
  - cpuplugd keyword
    - use with historical data [537](#)
- time-of-day clock [335](#)
- time, command [347](#)
- timed page pool
  - reading the size of the [402](#)
- timed page pool size
  - setting to avoid guest swapping [490](#)
- timeout
  - zfcpx attribute (SCSI device) [183](#)
- timeout for LCS LAN commands [281](#)
- TOD clock [335](#)
- transmit checksum, qeth [236](#)
- Triple Data Encryption Standard [453](#)
- triple DES [453](#)
- trng
  - byte\_counter attribute [458](#)
- TRNG device driver
  - setup [457](#)
- troubleshooting [489](#)
- true random numbers
  - reading [457](#)
- true random-number device driver



- true random-number device driver (*continued*)
  - setup [457](#)
- TSO
  - offload operation [235](#)
- TTY
  - online attribute [48](#)
- ttyrun [45](#)
- tunedasd, Linux command [647](#)
- tuning automatic port scans [166](#)
- tx\_frames, zfcpx attribute [161](#)
- tx\_words, zfcpx attribute [161](#)
- type
  - cryptographic adapter attribute [442](#)
  - zfcpx attribute (SCSI device) [179](#)
- type, CTCM attribute [288](#)

## U

- udev
  - DASD device nodes [121](#)
  - handling CP special messages [398](#)
- uevent [398](#)
- uid
  - DASD attribute [148](#)
  - PCIe attribute [353](#)
- ungroup
  - CTCM attribute [288](#)
  - LCS attribute [281](#)
  - qeth attribute [225](#)
- unit\_add, zfcpx attribute [172](#)
- unit\_remove, zfcpx attribute [185](#)
- updating information
  - S/390 hypervisor file system [333](#)
- USB storage, HMC [339](#)
- USB-attached storage, loading Linux [85](#)
- use\_diag
  - DASD attribute [148](#)
- use\_diag, DASD attribute [130](#)
- user terminal login [44](#)
- user.dsorg
  - extended attribute for z/OS data set [661](#)
- user.lrecl
  - extended attribute for z/OS data set [661](#)
- user.recfm
  - extended attribute for z/OS data set [661](#)
- using SCM devices with [193](#)

## V

- VACM (View-Based Access Control Mechanism) [273](#)
- vdso=, kernel parameter [695](#)
- vendor
  - DASD attribute [148](#)
  - zfcpx attribute (SCSI device) [179](#)
- VEPA mode [237](#)
- VFIO [423](#)
- vfio\_ap, kernel module [426](#)
- vfio\_mdev, kernel module [426](#)
- vfio\_pci, kernel module [425](#)
- vfn
  - PCIe attribute [353](#), [354](#)
- view
  - channel subsystem [13](#)

- view (*continued*)
  - device [12](#)
  - device by category [12](#)
  - device by drivers [11](#)
- View-Based Access Control Mechanism (VACM) [273](#)
- VINPUT
  - CP command [52](#)
- VIPA (virtual IP address)
  - attributes [223](#)
  - description [249](#), [255](#)
  - example [256](#)
  - high-performance environments [258](#)
  - source [258](#)
  - static routing [256](#)
  - usage [256](#)
- VIPA, source
  - setup [258](#)
- VIPA, standard
  - adapter outage [256](#)
  - setup [256](#)
- virtio-blk [405](#), [414](#)
- virtio-net [405](#)
- virtual
  - DASD [115](#)
  - IP address [249](#)
  - LAN [260](#)
- virtual dynamic shared object [695](#)
- Virtual Ethernet Port Aggregator mode [237](#)
- Virtual Flash Memory [191](#)
- Virtual Function I/O [423](#)
- virtual server
  - dump [497](#)
  - live migration [407](#)
- virtual unit record
  - set device online [383](#)
- VLAN
  - configure [262](#)
  - introduction to [260](#)
- VLAN (virtual LAN) [260](#)
- VLAN example [262](#)
- vmconvert, Linux command [657](#)
- vmcp
  - device driver [395](#)
  - device nodes [395](#)
- vmcp, Linux command [651](#)
- vmhalt=, kernel parameter [696](#)
- vmpanic=, kernel parameter [697](#)
- vmppoff=, kernel parameter [698](#)
- vmreboot=, kernel parameter [699](#)
- VMRM [360](#)
- VMSG [51](#)
- vmur
  - device driver [383](#)
  - device names [383](#)
  - device nodes [383](#)
  - setting device online [383](#)
- vmur command
  - FTP [658](#)
  - guest memory dump [658](#)
  - send files [659](#)
  - send files to z/VSE [660](#)
  - z/VM reader as IPL device [659](#)
- vmur, kernel module [383](#)
- vmur, Linux command [653](#)

VNIC characteristics [253](#)  
vnicc, qeth attributes [253](#)  
VOL1 labeled disk [117](#)  
VOLSER [117](#)  
VOLSER, DASD device access by [122](#)  
volume label [117](#)  
Volume Table Of Contents [118](#)  
VTOC [117](#), [118](#)

## W

watchdog  
    device driver [109](#)  
    device node [109](#)  
    kernel module [110](#)  
    when adding DCSS [388](#)  
wwpn, zfc attribute [164](#)

## X

x3270 code page [45](#)  
XFS [186](#)  
XRC, extended remote copy [335](#)  
XTS [463](#)

## Z

z/VM  
    guest LAN sniffer [269](#)  
    monitor stream [361](#)  
    performance monitoring [357](#)  
z/VM \*MONITOR record  
    device name [371](#)  
    device node [371](#)  
z/VM \*MONITOR record reader  
    device driver [371](#)  
z/VM console, line edit characters [52](#)  
z/VM discontinuous saved segments, *See* DCSS  
z/VM reader  
    booting from [91](#)  
z/VM reader as IPL device  
    vmur command [659](#)  
z/VM record layout [377](#)  
z/VM recording  
    device names [377](#)  
    device nodes [377](#)  
z/VM recording device driver  
    autopurge attribute [380](#)  
    autorecording attribute [379](#)  
    purge attribute [380](#)  
    recording attribute [379](#)  
z/VM spool file queues [653](#)  
z90crypt  
    cryptographic device node [435](#)  
    device node [439](#)  
zcrypt  
    device driver [433](#)  
    kernel parameter [438](#)  
zcrypt configuration [513](#), [600](#), [673](#)  
zcrypt sysfs attribute  
    depth [442](#)  
    hwtype [442](#)  
    modalias [442](#)

zcrypt sysfs attribute (*continued*)  
    request\_count [442](#)  
    type [442](#)  
zcryptctl, Linux command [673](#)  
zcryptstats, Linux command [676](#)  
zdev:early [19](#)  
zdsfs, Linux command [661](#)  
zEDC Express [343](#)  
zfc  
    access\_denied attribute (port) [168](#)  
    access\_denied attribute (SCSI device) [179](#)  
    access\_shared attribute [179](#)  
    card\_version attribute [160](#)  
    delete attribute [185](#)  
    device driver [151](#)  
    device nodes [153](#)  
    device\_blocked attribute (SCSI device) [179](#)  
    dumped\_frames attribute [161](#)  
    error\_frames attribute [161](#)  
    failed attribute (channel) [163](#)  
    failed attribute (port) [170](#)  
    fcp\_control\_requests attribute [161](#)  
    fcp\_input\_megabytes attribute [161](#)  
    fcp\_input\_requests attribute [161](#)  
    fcp\_output\_megabytes attribute [161](#)  
    fcp\_output\_requests attribute [161](#)  
    features [151](#)  
    hardware\_version attribute [160](#)  
    HBA API support [188](#)  
    in\_recovery attribute [160](#)  
    in\_recovery attribute (channel) [163](#)  
    in\_recovery attribute (port) [168](#), [170](#)  
    in\_recovery attribute (SCSI device) [179](#)  
    invalid\_crc\_count attribute [161](#)  
    invalid\_tx\_word\_count attribute [161](#)  
    iocounterbits attribute [179](#)  
    iodone\_cnt attribute (SCSI device) [179](#)  
    ioerr\_cnt attribute (SCSI device) [179](#)  
    iorequest\_cnt attribute (SCSI device) [179](#)  
    lic\_version attribute [160](#)  
    link\_failure\_count attribute [161](#)  
    lip\_count attribute [161](#)  
    loss\_of\_signal\_count attribute [161](#)  
    loss\_of\_sync\_count attribute [161](#)  
    maxframe\_siz attribute [160](#)  
    model attribute (SCSI device) [179](#)  
    node\_name attribute [160](#)  
    node\_name attribute (port) [168](#)  
    nos\_count attribute [161](#)  
    online attribute [158](#)  
    peer\_d\_id attribute [160](#)  
    peer\_wwnn attribute [160](#)  
    peer\_wwpn attribute [160](#)  
    permanent\_port\_name attribute [160](#), [164](#)  
    physical\_s\_id attribute [164](#)  
    port\_id attribute [160](#)  
    port\_id attribute (port) [168](#)  
    port\_name attribute [160](#)  
    port\_name attribute (port) [168](#)  
    port\_remove attribute [171](#)  
    port\_rescan attribute [165](#)  
    port\_state attribute (port) [168](#)  
    port\_type attribute [160](#)  
    prim\_seq\_protocol\_err\_count attribute [161](#)

- zfcpx (continued)
  - prot\_capabilities attribute [186](#)
  - queue\_depth attribute [180](#)
  - queue\_ramp\_up\_period attribute [180](#)
  - rescan attribute (SCSI device) [182](#)
  - reset\_statistics attribute [160](#)
  - rev attribute (SCSI device) [179](#)
  - roles attribute (port) [168](#)
  - rx\_frames attribute [161](#)
  - rx\_words attribute [161](#)
  - s\_id attribute [164](#)
  - scsi\_host\_no attribute [174](#)
  - scsi\_id attribute [174](#)
  - scsi\_level attribute (SCSI device) [179](#)
  - scsi\_lun attribute [174](#)
  - scsi\_target\_id attribute (port) [168](#)
  - seconds\_since\_last\_reset attribute [160](#)
  - serial\_number attribute [160](#)
  - speed attribute [160](#)
  - state attribute (SCSI device) [183](#)
  - supported\_classes attribute [160](#)
  - supported\_classes attribute (port) [168](#)
  - supported\_speeds attribute [160](#)
  - tgid\_bind\_type attribute [160](#)
  - timeout attribute (SCSI device) [183](#)
  - tx\_frames attribute [161](#)
  - tx\_words attribute [161](#)
  - type attribute (SCSI device) [179](#)
  - unit\_add attribute [172](#)
  - unit\_remove attribute [185](#)
  - vendor attribute (SCSI device) [179](#)
  - wwpn attribute [164](#)
  - zfcpx\_access\_denied attribute (SCSI device) [179](#)
  - zfcpx\_failed attribute (SCSI device) [181](#)
  - zfcpx\_in\_recovery attribute (SCSI device) [179](#), [181](#)
- zfcpx HBA API [155](#)
- zfcpx HBA API library [189](#)
- zfcpx module parameters
  - datarouter= [156](#)
  - dbfsz= [156](#)
  - dif= [156](#)
  - no\_auto\_port\_rescan= [156](#)
  - queue\_depth= [156](#)
- zfcpx traces [155](#)
- zfcpx\_access\_denied
  - zfcpx attribute (SCSI device) [179](#)
- zfcpx\_disk\_configure [185](#)
- zfcpx\_failed
  - zfcpx attribute (SCSI device) [181](#)
- zfcpx\_in\_recovery
  - zfcpx attribute (SCSI device) [179](#), [181](#)
- zfcpx\_ping [190](#)
- zfcpx\_show [190](#)
- zipl
  - and kernel parameters [60](#)
  - base functions [55](#)
  - base parameters [62](#)
  - boot device [58](#)
  - bootmap [58](#)
  - configuration file [71](#)
  - directory [58](#)
  - image address [58](#)
  - kernel image [58](#)
  - Linux command [55](#)

- zipl (continued)
  - menu configurations [72](#)
  - modes [56](#)
  - parameters [58](#), [67](#)
  - RAM disk [58](#)
  - secure boot [58](#)
  - syntax overview [56](#)
- zipl boot menu [35](#)
- zipl syntax
  - secure boot [56](#)
- ZIPLCONF, environment variable [71](#)
- zkey, Linux command [666](#)
- ZLIB\_CARD, environment variable [346](#)
- ZLIB\_DEFLATE\_IMPL, environment variable [346](#)
- ZLIB\_INFLATE\_IMPL, environment variable [346](#)
- ZLIB\_TRACE, environment variable [346](#)
- zlib, GenWQE [343](#)
- zlib, RFC 1950 [343](#)
- znetconf, Linux command [669](#)
- zpcictl, Linux command [672](#)







Part Number:

SC34-7715-01



(1P) P/N: