

IBM Flex System EN2092 1 Gb Ethernet Scalable  
Switch



# User's Guide



IBM Flex System EN2092 1 Gb Ethernet Scalable  
Switch



# User's Guide

**Note:** Before using this information and the product it supports, read the general information in Appendix B, "Notices," on page 35, the *Safety Information* and *Environmental Notices and User Guide* documents on the *IBM Notices for Network Devices* CD, and the *Warranty Information* document that comes with the product.

**Third Edition, August 2013**

**© Copyright IBM Corporation 2013.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

# Contents

<b>Safety</b>	v
Safety statements	vi
UL Regulatory Information	viii
 <b>Chapter 1. The IBM Flex System EN2092 1 Gb Ethernet Scalable Switch</b>	 1
Related documentation	1
Notices and statements in this document	2
Features and specifications	2
Major components of the switch	2
 <b>Chapter 2. Installing and removing the switch module</b>	 3
Before installing the switch module	4
Installation guidelines	5
System reliability guidelines	5
Handling static-sensitive devices	6
Installing the switch module	6
Removing and replacing the switch module	8
Cabling the switch module and the SFP+ module	9
Connecting the serial console cable	9
Disconnecting the serial console cable	9
Connecting the SFP+ module cable	9
Disconnecting the SFP+ module cable	10
Connecting the RJ-45 cable	10
Disconnecting the RJ-45 cable	10
Installing and removing the 10 Gb SFP+ module	11
Handling the SFP+ module	11
Installing the SFP+ module	12
Removing the SFP+ module	13
Locating the information panels, LEDs, and external ports	13
Information panel	13
Information LEDs	15
Switch status LEDs	15
Port status LEDs	16
 <b>Chapter 3. Configuring the switch</b>	 17
Establishing a TCP/IP session through the management module	18
Enabling management through external ports	19
Configuring the switch through the SSHv2/Telnet interface	19
Connecting to the switch	20
Accessing the main menu	20
Configuring the switch through the serial-port interface	20
Configuring the switch through the switch browser-based interface	21
Initial configuration	22
Logging in to the switch	22
 <b>Chapter 4. Updating the firmware and licensing</b>	 23
Determining the level of switch firmware	23
Obtaining the latest level of switch firmware	23
Upgrading the switch firmware	24
Resetting and restarting the switch	25
Acquiring feature licenses	25
Installing feature licenses	26

<b>Chapter 5. Solving problems</b>	27
Running POST	27
POST errors	27
<b>Chapter 6. Parts listing</b>	29
<b>Appendix A. Getting help and technical assistance</b>	31
Before you call	31
Using the documentation	32
Getting help and information from the World Wide Web	32
How to send Dynamic System Analysis data to IBM	32
Creating a personalized support web page	32
Software service and support	32
Hardware service and support	33
IBM Taiwan product service	33
<b>Appendix B. Notices</b>	35
Trademarks	35
Important notes	36
Particulate contamination	37
Documentation format	38
Telecommunication regulatory statement	38
Electronic emission notices	38
Federal Communications Commission (FCC) statement	38
Industry Canada Class A emission compliance statement	39
Avis de conformité à la réglementation d'Industrie Canada	39
Australia and New Zealand Class A statement	39
European Union EMC Directive conformance statement	39
Germany Class A statement	39
Deutschland: Einhaltung des Gesetzes über die elektromagnetische	
Verträglichkeit von Geräten	40
Zulassungsbescheinigung laut dem Deutschen Gesetz über die	
elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC	
EG Richtlinie 2004/108/EG) für Geräte der Klasse A	40
VCCI Class A statement	40
Japan Electronics and Information Technology Industries Association (JEITA)	
statement	40
Korea Communications Commission (KCC) statement	41
Russia Electromagnetic Interference (EMI) Class A statement	41
People's Republic of China Class A electronic emission statement	41
Taiwan Class A compliance statement	41
<b>Index</b>	43

## Safety

Before installing this product, read the Safety Information.

قبل تركيب هذا المنتج، يجب قراءة الملاحظات الأمنية

Antes de instalar este produto, leia as Informações de Segurança.

在安裝本產品之前，請仔細閱讀 **Safety Information** (安全信息)。

安裝本產品之前，請先閱讀「安全資訊」。

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Před instalací tohoto produktu si přečtěte příručku bezpečnostních instrukcí.

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

Ennen kuin asennat tämän tuotteen, lue turvaohjeet kohdasta Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφάλειας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.


A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

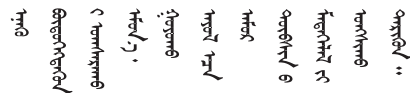

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Antes de instalar este produto, leia as Informações sobre Segurança.

Перед установкой продукта прочтите инструкции по технике безопасности.

Pred inštaláciou tohto zariadenia si pečítajte Bezpečnostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Antes de instalar este producto, lea la información de seguridad.

Läs säkerhetsinformationen innan du installerar den här produkten.

ཐོན་རྒྱུ་འདི་བདེ་སྤྱད་མ་བྱས་གོང་། རྒྱུ་རྒྱ་ཡིད་གཟབ་  
བྱ་འདྲ་མིན་ཡིད་པའི་འོད་མེར་བཟླ་དགོས།

Bu ürünü kurmadan önce güvenlik bilgilerini okuyun.

مەزكۇر مەھسۇلاتنى ئورنىتىشتىن بۇرۇن بىخەتەرلىك ئۇچۇرلىرىنى ئوقۇپ چىقىڭ.

Youq mwngz yungh canjbinj neix gaxgonq, itdingh aeu doeg aen  
canjbinj soengq cungj vahgangj ancien siusik.

---

## Safety statements

### Important:

Each caution and danger statement in this document is labeled with a number. This number is used to cross reference an English-language caution or danger statement with translated versions of the caution or danger statement in the *Safety Information* document.

For example, if a caution statement is labeled “Statement 1,” translations for that caution statement are in the *Safety Information* document under “Statement 1.”

Be sure to read all caution and danger statements in this document before you perform the procedures. Read any additional safety information that comes with the system or optional device before you install the device.

### Statement 1:





## **DANGER**

**Electrical current from power, telephone, and communication cables is hazardous.**

**To avoid a shock hazard:**

- **Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.**
- **Connect all power cords to a properly wired and grounded electrical outlet.**
- **Connect to properly wired outlets any equipment that will be attached to this product.**
- **When possible, use one hand only to connect or disconnect signal cables.**
- **Never turn on any equipment when there is evidence of fire, water, or structural damage.**
- **Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.**
- **Connect and disconnect cables as described in the following table when installing, moving, or opening covers on this product or attached devices.**

### **To Connect:**

1. Turn everything OFF.
2. First, attach all cables to devices.
3. Attach signal cables to connectors.
4. Attach power cords to outlet.
5. Turn device ON.

### **To Disconnect:**

1. Turn everything OFF.
2. First, remove power cords from outlet.
3. Remove signal cables from connectors.
4. Remove all cables from devices.

**Statement 3:**



**CAUTION:**

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.



**DANGER**

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following.

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

---

## UL Regulatory Information

This device is for use only with Listed IBM Flex System Enterprise Chassis.

---

## Chapter 1. The IBM Flex System EN2092 1 Gb Ethernet Scalable Switch

The IBM Flex System™ EN2092 1 Gb Ethernet scalable switch provides support for L2/L3 switching and routing. This switch supports IPv6 functions.

The base model of the switch supports twenty-four 1 Gb full-duplex throughput with fourteen 1 Gb ports down and ten RJ-45 1 Gb ports up. The following upgrades are available.

- Upgrade 1 - adds forty-eight 1 Gb full-duplex throughput with twenty-eight 1 Gb ports down and twenty RJ-45 1 Gb ports up.
- Upgrade 2 - adds eighty-eight 1 Gb full-duplex throughput with twenty-eight 1 Gb ports down, twenty RJ-45 1 Gb ports up, and four 1 Gb or 10 Gb SFP+ uplink ports up.

This *User's Guide* contains information and instructions for installing the switch, updating the firmware, and solving problems.

For information about the types of compatible devices available for IBM® products, contact your IBM marketing representative or authorized reseller. For a list of supported optional devices, see <http://www.ibm.com/servers/eserver/serverproven/compat/us/>.

You can obtain up-to-date information about the switch at <http://www.ibm.com/supportportal/>.

### Notes:

1. The illustrations in this document might differ slightly from your hardware.
2. The screens that are described or referenced in this document might differ slightly from the screens that are displayed by your system. Screen content varies according to the type of IBM chassis and the firmware versions and options that are installed.

---

## Related documentation

This *User's Guide* contains setup and installation instructions for the switch and general information about the switch, including how to configure, update, and troubleshoot the switch, and how to get help. The most recent version of this *User's Guide* and all other related documents are at <http://publib.boulder.ibm.com/infocenter/flexsys/information/index.jsp>

- *IBM Flex System EN2092 1 Gb Ethernet Scalable Switch Application Guide*
- *IBM Flex System EN2092 1 Gb Ethernet Scalable Switch ISCLI—Industry Standard CLI Command Reference*
- *IBM Flex System EN2092 1 Gb Ethernet Scalable Switch BBI Quick Guide*
- *IBM Flex System EN2092 1 Gb Ethernet Scalable Switch Release Notes*
- *IBM Flex System Network Devices Basic Troubleshooting Information*

---

## Notices and statements in this document

The caution and danger statements in this document are also in the multilingual *Safety Information* document, which is on the IBM *Documentation* CD. Each statement is numbered for reference to the corresponding statement in the *Safety Information* document.

The following notices and statements are used in this document:

- **Note:** These notices provide important tips, guidance, or advice.
- **Important:** These notices provide information or advice that might help you avoid inconvenient or problem situations.
- **Attention:** These notices indicate potential damage to programs, devices, or data. An attention notice is placed just before the instruction or situation in which damage could occur.
- **Caution:** These statements indicate situations that can be potentially hazardous to you. A caution statement is placed just before the description of a potentially hazardous procedure step or situation.
- **Danger:** These statements indicate situations that can be potentially lethal or extremely hazardous to you. A danger statement is placed just before the description of a potentially lethal or extremely hazardous procedure step or situation.

---

## Features and specifications

For detailed information about the switch hardware and firmware features, specifications, and standards, see the switch *Application Guide*.

See the documentation that came with your IBM chassis for information about the environmental conditions and specifications that are supported by the system.

---

## Major components of the switch

The base model of the EN2092 1 Gb Ethernet scalable switch supports twenty-four 1 Gb full-duplex throughput with fourteen 1 Gb ports down and ten RJ-45 1 Gb ports up.

See “Acquiring feature licenses” on page 25 for information on how to upgrade the switch with optional licenses.

You can manage and configure the switch through the following interfaces:


- A SSHv2/Telnet connection to the embedded command-line interface (CLI)
- A terminal emulation program connection to the serial port interface
- A Web browser-based interface (https/http) connection to the switch

## Chapter 2. Installing and removing the switch module

This chapter provides instructions for installing and removing the switch module in the IBM Flex System chassis. See the documentation for your IBM Flex System chassis for information about I/O bay locations and the components that can be installed in them that is specific to your IBM Flex System chassis type.

You can install up to four I/O modules in the IBM Flex System chassis, including Ethernet switch modules, Fibre Channel switch modules, Infiniband, and pass-thru modules (optical and copper).

The following illustration shows an example of a IBM Flex System chassis with the I/O bays identified.

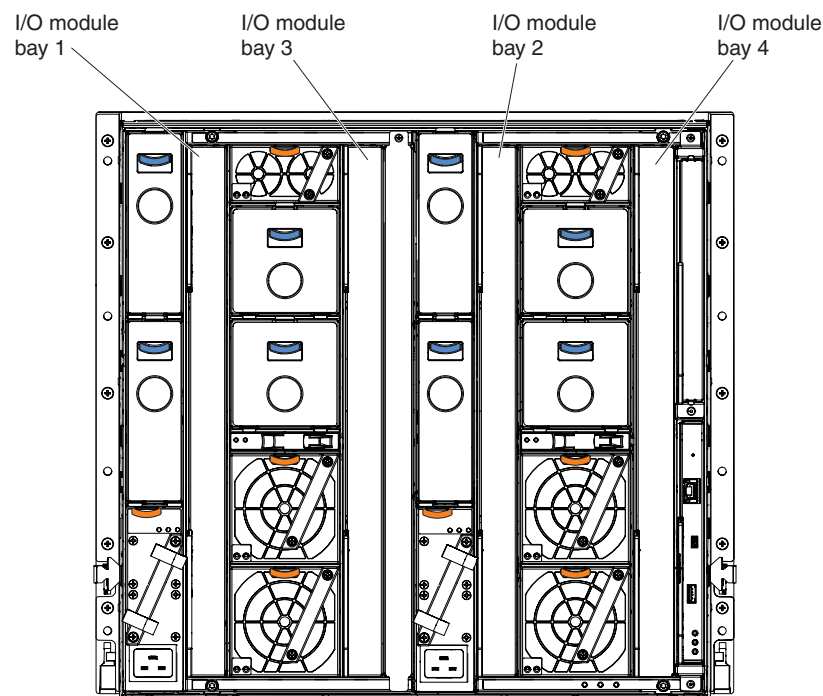

To enable the switch to communicate with a compute node, at least one switch must be installed in the IBM Flex System chassis. For details about network adapter installation, configuration, and use, see the documentation that comes with the network adapter.

Installing a second switch enables a redundant path and a separate connection from the compute node to the external Ethernet network.

The IBM Flex System chassis supports a maximum of four switch modules. Depending on the type of IBM Flex System chassis that you are using, the IBM Flex System chassis supports a maximum of ten or fourteen network adapters.

### Notes:

- I/O bays 1 and 2 support any standard Ethernet switch or pass-thru modules that connects to the two integrated Ethernet controllers in each of the compute nodes. When you install an adapter card in the first bay on the compute node, the I/O

bays support any switch with the same type of network interface that is used in the corresponding compute node adapter bay.

- The I/O bays 3 and 4 support Ethernet switch modules, Fibre Channel switch modules, Infiniband, and pass-thru modules (optical and copper) if the serial pass-thru modules are not being used. If you install an additional I/O module in bay 3 or 4, a corresponding adapter card is required to be installed in each compute node to access the I/O bay.
- The compute nodes or IBM Flex System chassis that are described or shown in this document might be different from your compute nodes or IBM Flex System chassis. For additional information, see the documentation that comes with your compute node or IBM Flex System chassis.
- When the switch is installed in a IBM Flex System chassis, the internal ports operate at 10 Gbps or 1 Gbps. The external ports can operate at 10 Gbps or 1 Gbps, depending on the SFP module type.

---

## Before installing the switch module

Locate and record information about the switch module in the following table. The labels contain the product name, model number, serial number, part number and the media access control (MAC) address for the switch module. After the switch module is installed most of the labels are hidden from view (located on the bottom and rear of the module) and require removing the switch module in order to relocate them.

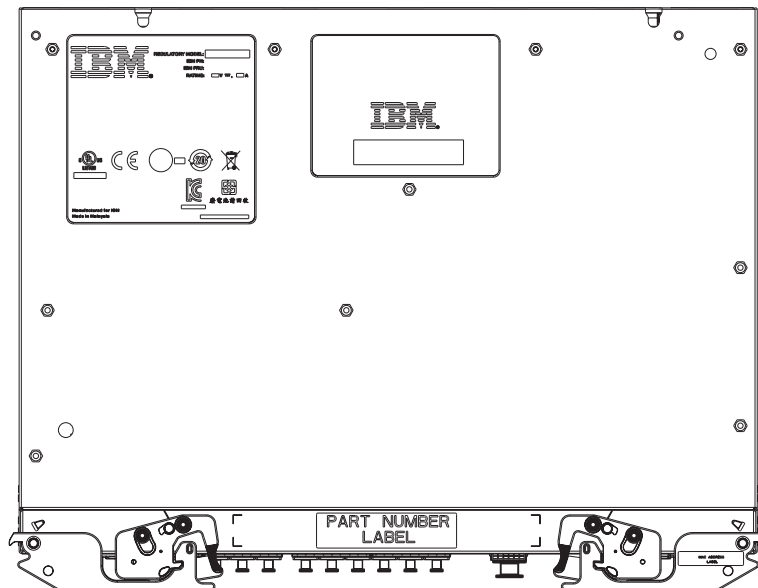


Figure 1. Label locations

Record this information below and print this page and keep it in a safe place for possible future reference. You will need this information when you register the switch module with IBM. You can register the switch at <http://www.ibm.com/support/mysupport/>.

<b>Product name</b>	IBM Flex System EN2092 1 Gb Ethernet Scalable Switch
<b>Model number</b>	_____
<b>Serial number</b>	_____
<b>Part number</b>	_____
<b>Media access control (MAC) address for switch</b>	_____
<b>MAC addresses for other components</b>	_____
	_____
	_____

## Installation guidelines

Before you install the switch in the IBM Flex System chassis, read the following information:

- Read the safety information that begins on page v, “Handling static-sensitive devices” on page 6, and the safety statements in the IBM Flex System chassis documentation. This information provides a safe working environment.
- Observe good housekeeping in the area where you are working. Place removed covers and other parts in a safe place.
- Blue on a component indicates touch points, where you can grip the component to remove it from or install it in the blade server or IBM Flex System chassis, open or close a latch, and so on.
- Orange on a component or an orange label on or near a component on the switch, blade server, or IBM Flex System chassis indicates that the component can be hot-swapped, which means that if the IBM Flex System chassis and operating system support hot-swap capability, you can remove or install the component while the IBM Flex System chassis is running. (Orange can also indicate touch points on hot-swap components.) See the instructions for removing or installing a specific hot-swap component for any additional procedures that you might have to perform before you remove or install the component.
- You do not have to turn off the IBM Flex System chassis to install or replace any of the hot-swap modules on the front or rear of the IBM Flex System chassis.
- When you install a switch in the IBM Flex System chassis, you must also install a compatible I/O expansion card in the blade server to support the switch.
- When you are finished working on the blade server or IBM Flex System chassis, reinstall all safety shields, guards, labels, and ground wires.
- For a list of supported optional devices for the IBM Flex System chassis and other IBM products, see <http://www.ibm.com/servers/eserver/serverproven/compat/us/>.

## System reliability guidelines

To help ensure proper cooling, performance, and system reliability, make sure that the following requirements are met:

- Each of the module bays on the rear of the IBM Flex System chassis contains either a module or a filler module.
- A removed hot-swap module is replaced with an identical module or filler module within 1 minute of removal.
- A removed hot-swap compute node is replaced with another compute node or filler node within 1 minute of removal.
- The ventilation areas on the sides of the compute node are not blocked.

- You have followed the reliability guidelines in the documentation that comes with the IBM Flex System chassis.

Cable requirements for the switch are described in the IBM *Configuration and Options Guide* at <http://www.ibm.com/servers/eserver/xseries/cog/>. See the documentation that comes with the IBM Flex System chassis for cable-routing information.

## Handling static-sensitive devices

**Attention:** Static electricity can damage the IBM Flex System chassis and other electronic devices. To avoid damage, keep static-sensitive devices in their static-protective packages until you are ready to install them.

To reduce the possibility of electrostatic discharge, observe the following precautions:

- Limit your movement. Movement can cause static electricity to build up around you.
- Handle the device carefully, holding it by its edges or its frame.
- Do not touch solder joints, pins, or exposed printed circuitry.
- Do not leave the device where others can handle and damage it.
- While the device is still in its static-protective package, touch it to an *unpainted* metal surface of the IBM Flex System chassis or an *unpainted* metal surface on any other grounded rack component in the rack that you are installing the device in for at least 2 seconds. This drains static electricity from the package and from your body.
- Remove the device from its package and install it directly into the IBM Flex System chassis without setting down the device. If it is necessary to set down the device, put it back into its static-protective package. Do not place the device on the IBM Flex System chassis or on a metal surface.
- Take additional care when you handle devices during cold weather. Heating reduces indoor humidity and increases static electricity.
- Some types of IBM Flex System chassis come with electrostatic discharge (ESD) connectors. If your unit is equipped with an ESD connector, see the documentation that comes with the IBM Flex System chassis for using the ESD connector.

---


## Installing the switch module

**Note:** The following illustration shows how to install a switch in a IBM Flex System chassis. The appearance of your IBM Flex System chassis might be different; see the documentation for your IBM Flex System chassis for additional information.

Use the following instructions to install a switch in the IBM Flex System chassis. You can install a switch while the IBM Flex System chassis is powered on. For redundancy support, you must install I/O modules of the same type in I/O bays 1 and 2, and I/O modules of the same type in bays 3 and 4 of the chassis.

To install a switch, complete the following steps.



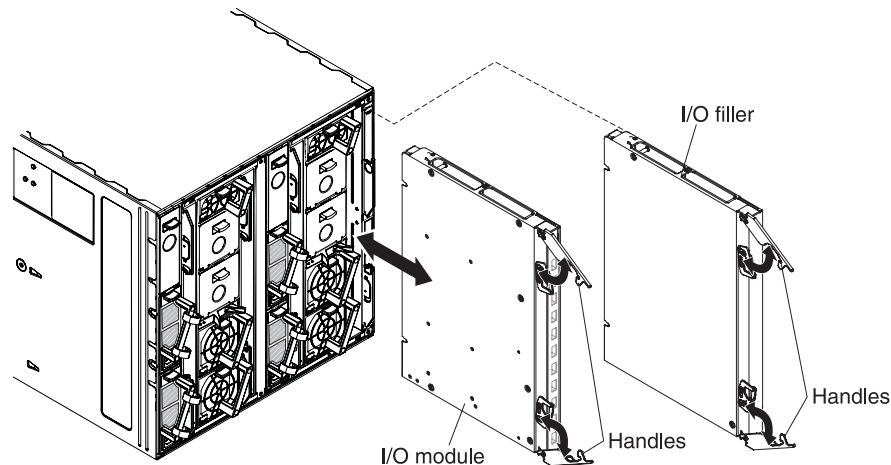

1. Read the safety information that begins on page v and “Installation guidelines” on page 5.
2. Verify that the switch is compatible with the chassis. For a list of supported optional devices for the IBM Flex System chassis and other IBM products, see <http://www.ibm.com/servers/eserver/serverproven/compat/us/>.
3. Select I/O bay in which to install the switch.

**Note:** For details about I/O bay requirements and bay locations, see the documentation for the IBM Flex System chassis and compute nodes.

4. Remove the filler module from the selected bay. Store the filler module for future use.
5. If you have not already done so, touch the static-protective package that contains the switch to an *unpainted* metal surface of the IBM Flex System chassis or an *unpainted* metal surface on any other grounded rack-component for at least 2 seconds.
6. If the removed filler module (from step 4) occupied two bays:
  - Remove the single-high filler module from its static-protective package.
  - Install the single-high filler module into the unused bay.
7. Remove the switch from its static-protective package.
8. Make sure that the release levers on the switch are in the open position (perpendicular to the switch).
9. Slide the switch into the applicable I/O-module bay until it stops.
10. Push the release levers on the front of the switch to the closed position. After you insert and lock the switch, it is turned on, and a power-on self-test (POST) occurs to verify that the switch is operating correctly.

**Notes:**

- a. The switch takes approximately 60 seconds to complete the POST. When the switch is turned on, an LED test occurs. All LEDs are lit and remain lit during POST; then, all the LEDs except the OK LED turn off. This indicates normal POST results.
  - b. To maintain proper airflow, make sure that the ventilation holes on the front of the switch are not blocked.
11. Make sure that the LEDs on the switch indicate that it is operating correctly (see “Information LEDs” on page 15).
  12. If you have another switch to install, repeat step 4 through step 11; otherwise, go to the next step.


13. Install the SFP+ modules in the switch. For information and instructions, see “Installing and removing the 10 Gb SFP+ module” on page 11 and the documentation that comes with the SFP+ module.
14. Attach any cables that are required by the switch. For additional information about cabling the switch, see “Cabling the switch module and the SFP+ module” on page 9, the documentation that comes with the cables, and the optional network devices to which the cables have been connected. For the locations of the connectors on the IBM Flex System chassis, see the documentation that comes with the IBM Flex System chassis. Then, continue with the next step.
15. Make sure that the external ports on the switch are enabled through one of the management-module interfaces, such as the Web-based interface or the CLI.

---

## Removing and replacing the switch module

**Note:** The following illustration shows how to remove and replace a switch from a IBM Flex System chassis. The appearance of your IBM Flex System chassis might be different; see the documentation for your IBM Flex System chassis for additional information.

To replace a switch, complete the following steps.

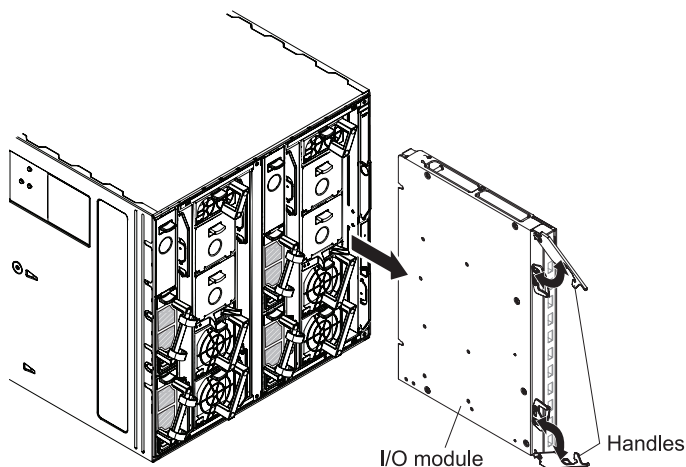

1. Read the safety information that begins on page v, and “Installation guidelines” on page 5.
2. Disconnect any cables from the switch that you are removing. Removing these cables (especially an Ethernet cable) disrupts the network connection from the external Ethernet port to any connected external Ethernet devices. If you plan to replace the switch with another switch, you can use the existing Ethernet cable, provided that it remains securely attached to the Ethernet network. For additional information about cabling the switch, see “Cabling the switch module and the SFP+ module” on page 9, the documentation that comes with the cables, and the optional network devices to which the cables have been connected. For the locations of the connectors on the IBM Flex System chassis, see the documentation that comes with the IBM Flex System chassis. Then, continue with step 3.
3. Pull the release latches out from the switch. The switch moves out of the bay approximately 0.6 cm (0.25 inch).
4. Slide the switch out of the bay and set it aside.

5. Place either another switch or a filler module in the bay.  
**Important:** Complete this step within 1 minute. (For more information, see steps 10 and 11 on page 7.)
6. If you placed a filler module in the bay, continue with “Installing and removing the 10 Gb SFP+ module” on page 11.
7. If you placed a switch in the bay, reconnect the other cables that you disconnected. Attach any additional cables that are required by the switch. For additional information about cabling the switch, see “Cabling the switch module and the SFP+ module,” the documentation that comes with the cables, and the optional network devices to which the cables have been connected. For the locations of the connectors on the IBM Flex System chassis, see the documentation that comes with the IBM Flex System chassis. Then, continue with “Installing and removing the 10 Gb SFP+ module” on page 11.

---

## Cabling the switch module and the SFP+ module

This section describes cable connections for the switch module. For more information about these component part numbers, see Chapter 6, “Parts listing,” on page 29.

**Note:** The illustrations in this document might differ slightly from your hardware.

### Connecting the serial console cable

To connect the serial console cable to the switch module, connect the serial cable to the mini-USB serial console port of the switch module and the other end of the cable to the console device.

### Disconnecting the serial console cable

To disconnect the serial console cable, grasp the connector and gently pull the cable from the switch module.


### Connecting the SFP+ module cable

**Attention:** To avoid damage to the fiber optic cables, follow these guidelines:


- Do not route the cable along a folding cable-management arm.
- When you attach the cable to a device on slide rails, leave enough slack in the cable so that it does not bend to a radius of less than 38 mm (1.5 in.) when the device is extended or become pinched when the device is retracted.
- Route the cable away from places where it can be snagged by other devices in the rack.
- Do not overtighten the cable straps or bend the cables to a radius of less than 38 mm (1.5 in.).
- Do not put excess weight on the cable at the connection point. Make sure that the cable is well supported.

To connect the SFP+ module cable, complete the following steps.

1. Remove the protective caps from the end of the fiber optic cable.

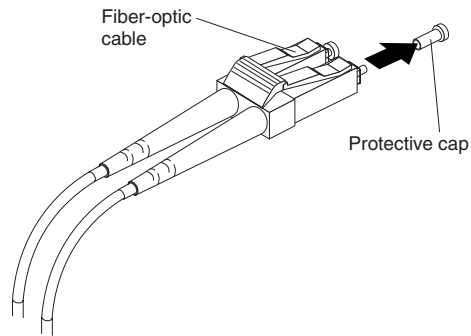

2. Gently slide the fiber optic cable into the SFP+ module until it clicks into place.

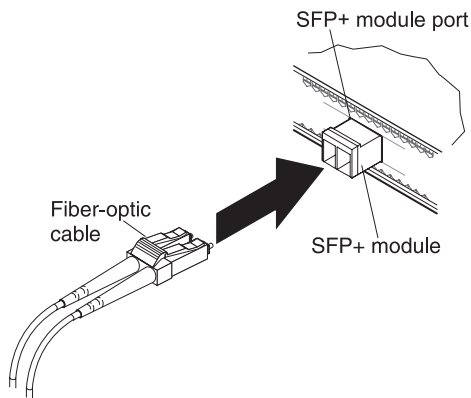

3. Check the LEDs on the switch. When the switch is operating correctly, the green link LED is lit. For information about the status of the switch LEDs, see "Locating the information panels, LEDs, and external ports" on page 13.


## Disconnecting the SFP+ module cable

To disconnect the SFP+ module cable, complete the following steps.

1. Squeeze the release tabs and gently pull the fiber optic cable from the SFP+ module.
2. Replace the protective caps on the ends of the fiber optic cable.

## Connecting the RJ-45 cable

To connect the RJ-45 connector to the switch, push the RJ-45 cable connector into the port connector until it clicks into place.

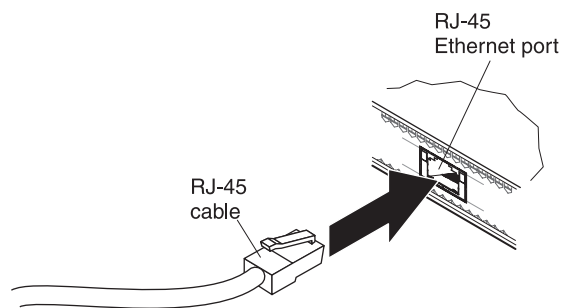

## Disconnecting the RJ-45 cable

To disconnect the RJ-45 connector, squeeze the release tab and gently pull the cable connector out of the switch-module connector.

## Installing and removing the 10 Gb SFP+ module

The switch supports the 10 Gb small-form-factor pluggable (SFP+) module and the 1 Gb small-form-factor pluggable (SFP) module. The SFP+ and SFP modules are laser products that convert electrical signals to optical signals.

For additional information about the location of the switch, the network interface requirements, and expansion options, see the documentation for your IBM Flex System chassis.

### Notes:

1. The illustrations in this document might differ slightly from your hardware.
2. While the information in this section describes the 10 Gb small-form-factor pluggable (SFP+) module, it also applies to the 1 Gb small-form-factor pluggable (SFP) module.
3. The switch also supports MSA-compliant copper direct-attach cables (DAC), up to 7 m (23 ft) in length.

### Handling the SFP+ module

Before you install an SFP+ module, read the following information:

- The module housing of the SFP+ has an integral guide key that is designed to prevent you from inserting the module incorrectly.
- Use minimal pressure when you insert the module into the port. Forcing the module into the port can cause damage to the module or the module port.
- You can insert or remove the module while the IBM Flex System chassis is turned on.
- You must first insert the module into the port before you can connect the cables.
- You must remove the cable from the SFP+ module before you remove the SFP+ module from the switch.

### Statement 3:



### CAUTION:

**When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:**

- **Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.**
- **Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.**



## DANGER

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following.

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.



Class 1 Laser Product  
Laser Klasse 1  
Laser Klass 1  
Luokan 1 Laserlaite  
Appareil À Laser de Classe 1


## Installing the SFP+ module

The SFP+ module provides two fiber-optic cable connectors for connecting to external ports. To install the SFP+ module, complete the following steps.

1. Read the safety information that begins on page v and “Installation guidelines” on page 5.
2. If you have not already done so, touch the static-protective package that contains the SFP+ module to an *unpainted* metal surface of the IBM Flex System chassis or an *unpainted* metal surface on any other grounded rack component in the rack in which you are installing the switch for at least 2 seconds.
3. Read the information in “Handling the SFP+ module” on page 11.
4. Remove the SFP+ module from its static-protective package.
5. Remove the protective cap, if one is installed, from the SFP+ module port where you are installing the SFP+ module and store it in a safe place.
6. Remove the protective cap from the SFP+ module and store it in a safe place.

**Attention:** To avoid damage to the cable or the SFP+ module, make sure that you do not connect the fiber optic cable *before* you install the SFP+ module.

7. Insert the SFP+ module into the SFP+ module port until it clicks into place.

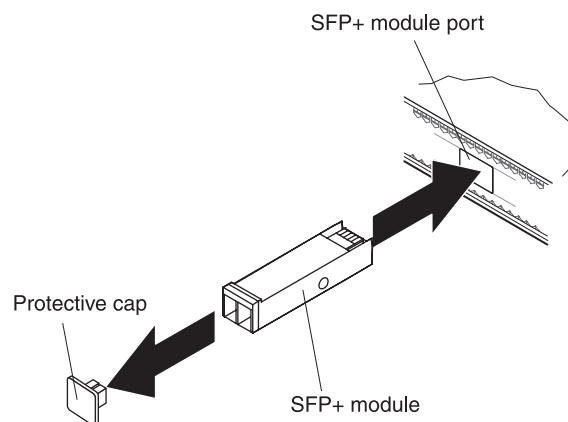

8. Connect the fiber optic cable (see “Connecting the SFP+ module cable” on page 9) and any cables that you disconnected earlier.


## Removing the SFP+ module

To remove the SFP+ module, complete the following steps.

1. Read the safety information that begins on page v and “Installation guidelines” on page 5.
2. Read the information in “Handling the SFP+ module” on page 11.
3. Remove the fiber optic cable from the SFP+ module that you want to replace. For more information about removing the cable, see “Disconnecting the SFP+ module cable” on page 10.

**Attention:** To avoid damage to the cable or the SFP+ module, make sure that you disconnect the fiber-optic cable *before* you remove the SFP+ module.

4. Unlock the SFP+ module by pulling the wire tab straight out, as shown in the following illustration.

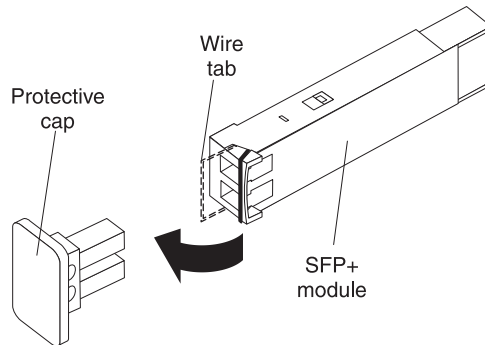

5. Grasp the wire tab on the SFP+ module and pull it out of the port.
6. Replace the protective cap on the SFP+ module and the SFP+ module port.
7. Place the SFP+ module into a static-protective package.

---


## Locating the information panels, LEDs, and external ports

This section describes the information panels and LEDs on the switch and identifies the external ports on the information panels.

**Note:** The illustrations in this document might differ slightly from your hardware.

### Information panel

The front panel of the switch contains information LEDs, four SFP+ module port connectors, one mini-USB serial port connector, and twenty RJ-45 ports.

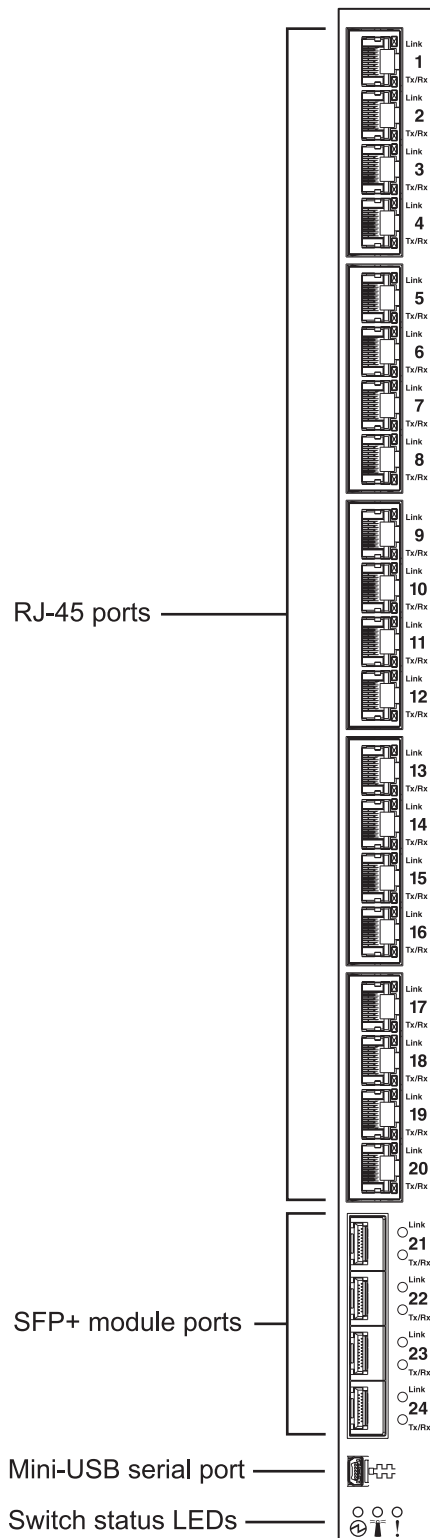

The switch-module information panel contains the following components:

- LEDs that display the following information:
  - The status of the switch and its network connection
  - The status of the external connections to the switch

For further details about LEDs, see “Information LEDs” on page 15.



- Four SFP+ port connectors to attach SFP+ modules and twenty RJ-45 ports.
- One mini-USB serial port connector for console port use (management purposes) only. Do *not* attach any devices to this connector other than the serial cable that comes with the switch, as described in “Cabling the switch module and the SFP+ module” on page 9.

## Information LEDs

The front panel of the switch has two sets of LEDs. The OK and switch error LEDs in the first column at the bottom of the switch indicate the switch status. The link (LINK) and activity (TX/RX) LEDs indicate the status of the external ports. .

### Notes:

- A yellow LED on the IBM Flex System chassis is lit when a system error or event has occurred. To identify the error or event, check the IBM Flex System management-module event log or the switch system log.
- An LED test occurs whenever the switch is turned on. All LEDs are lit and remain lit during POST, and then all the LEDs except the OK LED turn off.

Any errors that are detected during POST are written to the system log. For information about the command to read the system log, see the *IBM Command Reference* for the switch.

When POST errors are written to the system log, these errors are also written to the IBM Flex System management-module event log. If a hardware error, such as a current fault occurs, the management module displays it. If a firmware error occurs, the management module displays the Module did not complete POST message and a post error code that indicates the test that was running when the error was detected.

**Note:** You can also use the management module to make sure that the switch is operating correctly. For more information, see the documentation for the IBM Flex System chassis.

## Switch status LEDs

The following table provides descriptions of the switch status LEDs on the front panel of the switch.

Table 1. Switch status LEDs

Status LED	Description
OK (Ⓞ) LED	<p>This green LED is at the bottom of the switch on the front panel.</p> <ul style="list-style-type: none"> <li>• When this LED is lit, it indicates that the switch is on.</li> <li>• When this LED is not lit and the yellow switch error LED is lit, it indicates a critical alert. If the yellow LED is also not lit, it indicates that the switch is off.</li> </ul>
Switch error (!) LED	<p>This yellow LED is at the bottom of the switch on the front panel.</p> <ul style="list-style-type: none"> <li>• When this LED is lit, it indicates a POST failure or critical alert. <b>Note:</b> When this LED is lit, the system-error LED on the IBM Flex System chassis is also lit.</li> <li>• When this LED is not lit and the green LED is lit, it indicates that the switch is working correctly. If the green LED is also not lit, it indicates that the switch is off.</li> </ul>

## Port status LEDs

The following table provides descriptions of the port status LEDs on the front panel of the switch.

*Table 2. Port status LEDs*

Status LED	Description
Link LED	<p>This green LED indicates whether the port link is up or down.</p> <ul style="list-style-type: none"><li>• When this LED is lit, there is an active connection (or link) between the corresponding port and the device that is using this connection.</li><li>• When this LED is not lit, it indicates that there is no signal on the corresponding port, or the link is down.</li></ul>
Activity (TX/RX) LED	<p>This yellow LED indicates the status of the link activity for the port.</p> <ul style="list-style-type: none"><li>• When this LED is flashing or lit, the corresponding port is connected and online, and link activity is occurring on that port.</li><li>• When this LED is not lit, it indicates that there is no signal or no link activity on the corresponding port.</li></ul>

---

## Chapter 3. Configuring the switch

The switch module has an internal Ethernet path to the management module, twenty-four external Ethernet ports, and a serial console port. The switch supports two remote-access modes for management through Ethernet connections. You can select the mode that is best suited for your IBM Flex System environment.

- **Default mode:** The default mode uses the internal path to the management module only. In this mode, the remote-access link to the management console must be attached to the Ethernet connector on the management module. The Internet protocol (IP) addresses and SNMP parameters of the switches can be automatically assigned by the IBM Director Flex System Deployment wizard (when available), or you must assign them through the IBM Flex System Management and Configuration program. This mode provides a secure LAN for management of the IBM Flex Systems subsystems that is separate from the data network. See “Establishing a TCP/IP session through the management module” on page 18 for more information.
- **Remote management mode:** You can enable remote management of the switch through the external ports, instead of or in addition to access through the management module. This mode can be enabled only through the management-module configuration interface. When this mode is enabled, the twenty external RJ-45 ports and the four external SFP+ ports support both management traffic and IBM Flex System application data traffic.

This mode enables the use of additional switch IP addresses on different IP subnets than the management modules. This is useful when the switches are to be managed and controlled as part of the overall network infrastructure, while secure management of other IBM Flex System subsystems is maintained through the management module. See “Enabling management through external ports” on page 19 for additional instructions about configuring the switch for this mode of operation.

The mini-USB console port provides an alternative path to manage and configure the switch for local access.

### Important:

- Before you configure the switch, make sure that the management modules in the IBM Flex System chassis are correctly configured. For more information about configuring the switch, see the following documents:
  - *IBM Flex System Chassis Management Module Installation Guide*
  - *IBM Flex System Chassis Management Module User's Guide*
- The default IP address of the switch is 192.168.70.120, 192.168.70.121, 192.168.70.122, or 192.168.70.123, depending on the switch bay where it is installed.
- If you change the IP address of the switch and restart the IBM Flex System chassis, the switch maintains this new IP address as its default value.
- When configuring the switch using the management interfaces, note that the `apply` command changes the currently active configuration. If you want the configuration change to persist beyond the next reboot of the switch, you must run the `copy running-config startup-config` command. This command stores the current switch configuration and all changes in NVRAM.

If the switch restarts and the management module cannot apply the saved configuration, the switch defaults to the configuration that was previously saved. If the IP subnet address of the switch does not match the IP subnet address of

the management module, you can no longer manage the switch from the management module. For more information about configuring the switch, see the *Command Reference* for the switch.

- When you use the management-module Web interface to update the switch configuration, the management-module firmware saves the new configuration in internal nonvolatile random-access memory (NVRAM). If the switch restarts, the management module applies the saved configuration to the switch. For more information, see the *Application* guide and *Command Reference*.
- For switch communication with a remote management station, such as an IBM Director management server, through the management-module external Ethernet port, the switch internal-network interface and the management-module external interface must be on the same IP subnet.

For specific details about configuring the switch and preparing for system installation, see the documentation listed in “Related documentation” on page 1.

**Notes:**

- Unless otherwise stated, references to the management module apply only to the IBM Flex System Advanced Management Module, which is the only type of management module that supports the switch.
- Throughout this document, the user name is also known as the login name or user ID for logging on to interfaces or programs.
- The screens that are described or referenced in this document might differ slightly from the screens that are displayed by your system. Screen content varies according to the type of IBM Flex System chassis and the firmware versions and options that are installed.

---

## Establishing a TCP/IP session through the management module

To establish a TCP/IP session for the switch through the IBM Flex System Chassis Management Module (CMM), complete the following steps.

1. Log on to the IBM Flex System Chassis Management Module (CMM) CLI as described in the *User's Guide* or *Command Line Interface Reference Guide* for the CMM. If necessary, obtain the IP address of the management module from your system administrator.

**Note:** The **User ID** and **Password** fields are case-sensitive. Type your information in uppercase letters only. To maintain system security, change your password after you log on for the first time. The default User ID is USERID, and the default password is PASSW0RD (where the sixth character is the number zero, not the letter O).

2. From the **I/O Module Tasks** menu, click **Configuration**.
3. In the **I/O Module Configuration** area, click the bay number that corresponds to the location of the switch that you installed.
4. In the **IP address field** in the New Static IP Configuration area, type the new TCP/IP address of the switch; then, click **Save**.

**Note:** The management module does not check for invalid IP addresses.

5. Click **Advanced Configuration**. You can now start a Web session or a Telnet session.

The Web interface application and the Telnet interface provide different ways to access the same internal-switching firmware and configure it.

- If your system application requires that you use the Web interface application, see “Configuring the switch through the switch browser-based interface” on page 21 for additional information.
- If your system application requires that you use the SSHv2/Telnet client software, see “Configuring the switch through the SSHv2/Telnet interface” for additional information.

---

## Enabling management through external ports

To access and manage the switch through external interfaces, you must enable the external ports and the ability to manage the switch through them. Use the information in the following table to configure your ports.

External management	External ports	Description
Disabled	Disabled	The switch must be managed through the management module. No traffic is allowed on external ports.
Disabled	Enabled	The switch must be managed through the management module. Data traffic is allowed on external ports.
Enabled	Disabled	The switch can be managed through the management module or a blade server. No traffic is allowed on external ports.
Enabled	Enabled	The switch can be managed through the management module, a blade server, or a management station that is connected through an external port. Data traffic is allowed on external ports.

To enable management through external ports, complete the following steps.

1. Log on to the IBM Flex System Chassis Management Module (CMM) CLI as described in the *User's Guide* or *Command Line Interface Reference Guide* for the CMM. If necessary, obtain the IP address of the management module from your system administrator.
2. Click **I/O Module Tasks > Configuration** and click the bay number that corresponds to the location of the switch that you installed.
3. Click **Advanced Configuration** and make sure that external management is enabled.
4. Click **I/O Module Tasks > Admin/Power/Restart** and make sure that the external ports are enabled for the switch that you installed.

---

## Configuring the switch through the SSHv2/Telnet interface

**Note:** Telnet is disabled by default.

The switch supports a command-line interface (CLI) that you can use to configure and control the switch over the network through the SSHv2/Telnet program. You can use the CLI to perform many basic network-management functions. In addition, you can configure the switch for management through an SNMP-based network-management system. The following sections describe how to use the Telnet interface to access the switch, change its settings, and monitor its operation.

## Connecting to the switch

If you know the IP address for the switch and you have an existing network connection, you can use the SSHv2/Telnet interface from an external management station or the management module to access and control the switch. The management station and the switch must be on the same IP subnet. If you have to obtain the IP address for the switch or establish a network connection, contact your system or network administrator. Be sure to use the correct IP address in the required command, as specified in “Accessing the main menu.”

## Accessing the main menu

To connect to the switch through the SSHv2/Telnet interface, complete the following steps.

1. From a DOS command-line prompt, type `telnet x` and press **Enter**.  
where *x* is the IP address for the switch.
2. If you do not have an assigned initial password, in the Password field, type the default password (where the sixth character is the number zero, not the letter O) and press **Enter**.

**Important:** The **apply** command changes the currently active configuration. If you want your change to persist beyond the next reboot of the switch, you must enter the **save** command. This command stores the current switch configuration and all changes in nonvolatile memory.

For more information about configuring through the CLI, see the *Application Guide* for the switch.


---

## Configuring the switch through the serial-port interface

The mini-USB serial port provides basic communication through a terminal emulation program (such as Hyperterminal). Because messages from the power-on self-test (POST) and all initialization information are transmitted through the serial port, you can use the serial port to log in to the switch and access and configure the internal switching firmware.

To log in to the switch, complete the following steps.

1. Connect one end of the specifically designed serial cable that comes with your device into the mini-USB port and connect the other end to the management station.

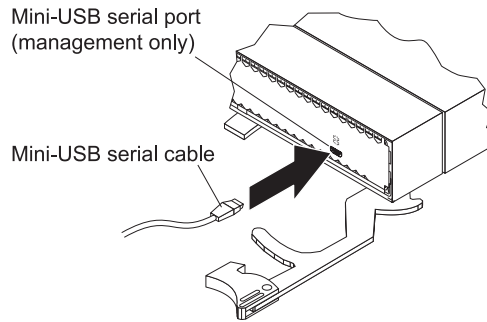

For additional information, see “Connecting the serial console cable” on page 9.

2. On the management station, open a console window and make sure that the serial port is configured with the following settings:
  - 9600 baud
  - 8 data bits
  - No parity
  - 1 stop bit
  - No flow control
3. Type the user name and password. The default user name is `USERID`. The default password is `PASSW0RD` (where the sixth character is the number zero, not the letter O).

The serial port is compatible with the standard 16550 Universal Asynchronous Receiver/Transmitter (UART) protocol. The mini-USB serial port is enabled by default.

---

## Configuring the switch through the switch browser-based interface

**Note:** HTTP is disabled by default. HTTPS is not disabled by default.

Before you can access and start the browser-based interface, make sure that you have completed the following procedures:

- Install the switch in the IBM Flex System chassis.
- Make sure that the switch firmware is installed on the switch.
- Configure at least one IP interface on the switch.
- Enable frames and the JavaScript program in your Web browser.

The following hardware and software are required for the Web interface:

- A frame-capable Web-browser program, such as Internet Explorer (version 7.0 or later), Mozilla Firefox (version 8.0 or later), or Google Chrome (version 16.0 or later)
- A computer or workstation with network access to the switch

To start the browser-based interface, complete the following steps.

1. Start a Web browser. The Web-browser window opens.
2. In the **URL** field, enter the IP address of the switch, in the following format: `http://xxx.xxx.xxx.xxx`. The login window opens.
3. Type the switch user ID and password and click **OK**. The default user ID is `USERID`. The default password is `PASSW0RD` (where the sixth character is the number zero, not the letter O).

**Note:** The passwords that are used to access the switch are case-sensitive. To increase system security, change the password after you log on for the first time.

---

## Initial configuration

The operating firmware on the switch contains default configuration files that are installed during the firmware installation. These initial configuration settings are not in a separate configuration file but are components of the firmware. When you restore the management module to factory defaults, the original configuration is restored. For more information about configuring and managing the switch through the management module, see the *Command Reference* for the switch.

---

## Logging in to the switch

The switch supports user-based security that enables you to prevent unauthorized users from accessing the switch or changing its settings.

To log in to the switch, complete the following steps.

1. At the prompt, type your user ID and press Enter. The default user ID is USERID.
2. Type your password and press Enter. The default password is PASSWORD (where the sixth character is the number zero, not the letter O). The main-menu window opens.

After you log on to the switch, you must set the date and time. See the *Command Reference* for the switch to perform this task and others as needed.



---

## Chapter 4. Updating the firmware and licensing

This chapter describes how to determine the level of the firmware that is installed on the switch, how to obtain the latest level of switch firmware, how to upgrade the firmware, how to acquire additional feature licensing, and how to reset the switch to activate the firmware upgrade.

**Note:** Configuration settings can be lost during a firmware update. Before updating the firmware, save a copy of the configuration on a separate device. In the event of a failed update, the saved configuration can be restored. For more information about the configuration file, see the *Application* guide and *Command Reference* for the switch.

---

### Determining the level of switch firmware

After you install the switch in the IBM Flex System chassis, make sure that the latest firmware is installed on the switch. To determine the level of the firmware that is installed, complete the following steps.

1. Log on to the management module CLI as described in the switch's *User's Guide* or *CLI Reference Guide*. If necessary, obtain the IP address of the management module from your system administrator.
2. Set the environment to the bay where you installed the switch. For example:

```
system> env -T system:switch[1]
```

3. Type the `info` command to display switch firmware information:

```
system:switch[1]> info
...
Boot ROM
  Rel date:      04/02/2013
  Version:       7.7.1.12
  Status: Active
Main application
  Rel date:      04/02/2013
  Version:       7.7.1.12
  Status: Active
Main application
  Rel date:      03/22/2013
  Version:       7.7.1.12
  Status: Inactive
```

---

### Obtaining the latest level of switch firmware

The latest firmware update for the switch module is available at <http://www.ibm.com/support/fixcentral>.

**Note:** Changes are made periodically to the IBM Web site. The procedure for locating firmware and documentation might change from what is described in this document.

---

## Upgrading the switch firmware

You can upgrade the switch firmware by using a server application. Typically, this firmware runs as an application under your operating system. Make sure that this firmware is installed on your file server; then, download the firmware images from <http://www.ibm.com/systems/support/> into a directory on your server. Enable the file and set the default directory to the directory where the image resides.

**Note:** If you want your change to persist beyond the next reboot of the switch, you must type the `copy running-config startup-config` command. This command stores the current switch configuration and all changes in nonvolatile memory.

To transfer the firmware image files from the file server to the switch, you can establish a SSHv2/Telnet session through the management module. Ping the file server to make sure that you have a connection. The session performs optimally if all three network entities (file server, management module, and switch IP addresses) are on the same subnet. Otherwise, you must use a router and configure a gateway address on the switch. Use the management-module interface to configure the IP addresses of the management module external interface (eth0) and the switch so that they are both on the same subnet as the file server.

Examples of IP addresses and masks are described in the following table.

Network entity	IP address	Mask
TFTP server	192.168.2.178	255.255.255.0
Management module (eth0)	192.168.2.237	255.255.255.0
Switch-module current IP configuration (IF 128)	192.168.2.51	255.255.255.0

**Note:** With this configuration, you can ping the switch from the TFTP server.

Access the switch command line interface (CLI). Refer to the *Command Reference* for more information.

To upgrade the switch firmware, complete the following steps.

1. Log in to the switch.
2. At the CLI prompt, type the following command and press Enter.

```
/boot/gtimg imageX TADDR zzzzz
```

Where *imagex* is the image to install, *TADDR* is the address of TFTP server, and *zzzzz* is the operating-system image file name.

3. At the CLI prompt, type the following command and press Enter.

```
/boot/gtimg boot TADDR yyyy
```

Where *yyyy* is the boot image file name.

4. Press Enter for user name.
5. Enter data path (either mgt or data).
6. Reset and restart the switch as described in “Resetting and restarting the switch” on page 25.

---

## Resetting and restarting the switch

To activate the new image or images, you must reset the switch. To reset the switch, complete the following steps.

1. Log on to the management module CLI as described in the switch *CLI Reference Guide*. If necessary, obtain the IP address of the management module from your system administrator.
2. Set the environment to the bay where you installed the switch. For example:

```
system> env -T system:switch[1]
```

3. Type the reset command to restart the switch. Wait approximately 100 seconds for POST to complete.

```
system:mm[1]> env -T system:switch[1]  
system:switch[1]> reset
```

4. Type the info command for the switch that was just restarted and note the corresponding level of the firmware for the switch. Confirm that the firmware build number reflects the correct firmware release:

```
system:switch[1]> info  
...  
Boot ROM  
  Rel date:      04/18/2013  
  Version:       7.7.1.12  
  Status: Active  
Main application  
  Rel date:      04/18/2013  
  Version:       7.7.1.12  
  Status: Active  
Main application  
  Rel date:      04/21/2013  
  Version:       7.7.1.12  
  Status: Inactive
```

---

## Acquiring feature licenses

Licenses are available that enable the use of additional ports on the switch:

- Base product: twenty-four 1 Gb full duplex throughput arranged as fourteen 1 Gb ports down and ten (RJ-45) 1 Gb ports up.
- Upgrade 1: adds forty-eight 1 Gb full duplex throughput arranged as twenty-eight 1 Gb ports down and twenty (RJ-45), 1 Gb ports up.
- Upgrade 2: adds eighty-eight 1 Gb full duplex throughput arranged as twenty-eight 1 Gb ports down and twenty (RJ-45) 1 Gb ports up, and four 1 Gb or 10 Gb SFP+ uplink ports up.

Upgrade licenses are unique to each switch and are non transferable.

To acquire an upgrade license activation key, purchase the Authorization Code and locate the unique ID (UID) on the switch module serial number (SN) label (bottom or rear of switch module). The UID is the last twelve characters of the switch serial number. The serial number is located on the part number (PN) label (bottom or rear of unit) and is also displayed during a login to any of the user interfaces. For example: SN (UID): Y250CM294998. For more information about locating the switch identification labels, see Before installing the switch module.

In the event of a switch replacement, new activation key files based on the serial number of the replacement unit must be acquired and installed. If the replacement is handled through IBM Service and Support, the original Authorization Code is transferred to the serial number of the replacement unit.

The upgrade licenses can be acquired using the IBM System x Features on Demand website <http://www.ibm.com/systems/x/fod/>.

You can use the website to perform the following tasks:

- Request a new activation key
- Check an authorization code to see what feature it enables and how many remaining times it can be used to create a key
- Retrieve the history of feature activation on a selected device
- Retrieve the history of feature activation on a selected authorization code
- Retrieve a lost authorization code
- Manage your IBM customer number
- Find help for the Features on Demand feature activation process
- Provide feedback to IBM about the Features on Demand process

**Note:** Your IBM ID and password are required to log into the Features on Demand web site. If you are not registered with IBM, go to <http://www.ibm.com/systems/x/fod/> and click My IBM registration in the left navigation pane.

---

## Installing feature licenses

Once Features on Demand (FoD) activation key files have been acquired, they must be installed on the switch. The example below illustrates use of the switch Command Line Interface (CLI), but other interfaces may also be used (such as BBI or SNMP). For more information about using SNMP, see the *Application* and *ISCLI* guide(s) for the switch module. When installing licenses, please note the following requirements:

- A switch reboot is required to fully activate the license(s).
- Both license key files can be downloaded prior to the switch reset.
- Save the configuration before upgrading the feature licenses.

Complete the following steps to install feature licenses:

1. Log in to the switch.
2. At the CLI prompt, type the following command.

```
/oper/swkey/enakey
```

3. Follow the prompts to enter values including the TFTP/SFTP server IP address and key file name.
4. Once the key file download is complete, reset the switch to activate the license(s).

---

## Chapter 5. Solving problems

This section provides basic troubleshooting information to help you solve some problems that might occur while you are setting up the switch. The *Application Guide* for the switch provides more details about troubleshooting the switch.

If you cannot locate and correct a problem by using the information in this section, see Appendix A, “Getting help and technical assistance,” on page 31.

---

### Running POST

To ensure that it is fully operational, the switch processes a series of tests during power-up or a restart (power-on self-test, or POST). These tests take approximately 1 minute to complete. The management module reads the test results and displays them for you. During normal operation, these tests are completed without error, and the green OK LED is lit. However, if the switch fails POST, the yellow switch error LED and the system-error LED on the IBM Flex System chassis are lit. An event is stored in the event log in the system status panel of the management module. The specific failure is displayed on the system status I/O module panel of the management module.

**Note:** For the locations and descriptions of the switch LEDs, see “Locating the information panels, LEDs, and external ports” on page 13.

---

### POST errors

There are two types of errors: noncritical and critical. A noncritical error applies to one port, and the switch is operational. You can continue to operate the switch; however, you must replace it as soon as possible. When critical errors occur, the switch does not operate. To view POST results, complete the following steps.

1. Log on to the management module as described in the *IBM Flex System Chassis Management Module Command-Line Interface Reference Guide*. If necessary, obtain the IP address of the management module from your system administrator. The login window opens.
2. Turn off the power to the switch; then, turn it on again.
3. After POST is completed, the management module displays the results. Refresh the window to view the POST results. If a critical error occurs, replace the switch. If a noncritical error occurs, see the switch error log for additional details.

The following table describes the basic critical and noncritical failures. This abbreviated list is representative; it is not an exhaustive list. An error code is associated with each failure. Error codes are displayed on the Management Module Switch Information window. Be sure to note the applicable error code and corresponding failure. You might have to provide this information when you call for service. For details, see Appendix A, “Getting help and technical assistance,” on page 31.

Diagnostic indicator (in hex)	Failing functional area	Failure criticality
00 - 7F	Base internal functions	Critical
80 - 9F	Internal interface failures	Noncritical
A0 - AF	External interface errors	Noncritical

Diagnostic indicator (in hex)	Failing functional area	Failure criticality
B0 - FE	Reserved	Noncritical
FF	Switch “good” indicator	Operation

## Chapter 6. Parts listing

Replaceable components are of three types:

- **Tier 1 customer replaceable unit (CRU):** Replacement of Tier 1 CRUs is your responsibility. If IBM installs a Tier 1 CRU at your request, you will be charged for the installation.
- **Tier 2 customer replaceable unit (CRU):** You may install a Tier 2 CRU yourself or request IBM to install it, at no additional charge, under the type of warranty service that is designated for your server.
- **Field replaceable unit (FRU):** FRUs must be installed only by trained service technicians.

For information about the terms of the warranty, see the *Warranty Information* document.

Description	CRU number (Tier 1)
IBM Flex System EN2092 1 Gb Ethernet Scalable Switch	49Y4296
IBM Flex System EN2092 1 Gb Ethernet Scalable Switch, Upgrade 1	90Y3562
IBM Flex System EN2092 1 Gb Ethernet Scalable Switch, Upgrade 2	49Y4298
<b>Transceivers</b>	
10GBase-SR SFP+ (MMFiber) transceiver	44W4408
10GBase-SR SFP+ (MMFiber) transceiver	46C3447
IBM SFP+ LR transceiver	90Y9412
1000Base-SX SFP (MMFiber) transceiver	81Y1622
1000Base-T SFP transceiver	81Y1618
1000Base-LX SFP LX transceiver	90Y9424
<b>Cables</b>	
1 m IBM passive DAC SFP+	90Y9427
3 m IBM passive DAC SFP+	90Y9430
5 m IBM passive DAC SFP+	90Y9433
Serial access	90Y9338





---

## Appendix A. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you. Use this information to obtain additional information about IBM and IBM products, determine what to do if you experience a problem with your IBM system or optional device, and determine whom to call for service, if it is necessary.

---

### Before you call

Before you call, make sure that you have taken these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated firmware and operating-system device drivers for your IBM product. The IBM Warranty terms and conditions state that you, the owner of the IBM product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your IBM service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
- If you have installed new hardware or software in your environment, check <http://www.ibm.com/systems/info/x86servers/serverproven/compat/us/> to make sure that the hardware and software is supported by your IBM product.
- Go to <http://www.ibm.com/supportportal/> to check for information to help you solve the problem.
- Gather the following information to provide to IBM Support. This data will help IBM Support quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.
  - Hardware and Software Maintenance agreement contract numbers, if applicable
  - Machine type number (IBM 4-digit machine identifier)
  - Model number
  - Serial number
  - Current system UEFI and firmware levels
  - Other pertinent information such as error messages and logs
- Go to [http://www.ibm.com/support/entry/portal/Open\\_service\\_request/](http://www.ibm.com/support/entry/portal/Open_service_request/) to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to IBM Support quickly and efficiently. IBM service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

You can solve many problems without outside assistance by following the troubleshooting procedures that IBM provides in the online help or in the documentation that is provided with your IBM product. The documentation that comes with IBM systems also describes the diagnostic tests that you can perform. Most systems, operating systems, and programs come with documentation that

contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

---

## Using the documentation

Information about your IBM system and preinstalled software, if any, or optional device is available in the documentation that comes with the product. That documentation can include printed documents, online documents, readme files, and help files. See the troubleshooting information in your system documentation for instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might tell you that you need additional or updated device drivers or other software. IBM maintains pages on the World Wide Web where you can get the latest technical information and download device drivers and updates. To access these pages, go to <http://www.ibm.com/supportportal/>. Also, some documents are available through the IBM Publications Center at <http://www.ibm.com/shop/publications/order/>.

---

## Getting help and information from the World Wide Web

On the World Wide Web, up-to-date information about IBM systems, optional devices, services, and support is available at <http://www.ibm.com/supportportal/>. The address for IBM System x<sup>®</sup> information is <http://www.ibm.com/systems/x/>. The address for IBM BladeCenter<sup>®</sup> information is <http://www.ibm.com/systems/bladecenter/>. The address for IBM IntelliStation<sup>®</sup> information is <http://www.ibm.com/systems/intellistation/>.

---

## How to send Dynamic System Analysis data to IBM

Use the IBM Enhanced Customer Data Repository to send diagnostic data to IBM. Before you send diagnostic data to IBM, read the terms of use at <http://www.ibm.com/de/support/ecurep/terms.html>.

You can use any of the following methods to send diagnostic data to IBM:

- **Standard upload:** [http://www.ibm.com/de/support/ecurep/send\\_http.html](http://www.ibm.com/de/support/ecurep/send_http.html)
- **Standard upload with the system serial number:** [http://www.ecurep.ibm.com/app/upload\\_hw](http://www.ecurep.ibm.com/app/upload_hw)
- **Secure upload:** [http://www.ibm.com/de/support/ecurep/send\\_http.html#secure](http://www.ibm.com/de/support/ecurep/send_http.html#secure)
- **Secure upload with the system serial number:** [https://www.ecurep.ibm.com/app/upload\\_hw](https://www.ecurep.ibm.com/app/upload_hw)

---

## Creating a personalized support web page

At <http://www.ibm.com/support/mynotifications/>, you can create a personalized support web page by identifying IBM products that are of interest to you. From this personalized page, you can subscribe to weekly email notifications about new technical documents, search for information and downloads, and access various administrative services.

---

## Software service and support

Through IBM Support Line, you can get telephone assistance, for a fee, with usage, configuration, and software problems with your IBM products. For information about which products are supported by Support Line in your country or region, see <http://www.ibm.com/services/supline/products/>.

For more information about Support Line and other IBM services, see <http://www.ibm.com/services/>, or see <http://www.ibm.com/planetwide/> for support telephone numbers. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

---

## Hardware service and support

You can receive hardware service through your IBM reseller or IBM Services. To locate a reseller authorized by IBM to provide warranty service, go to <http://www.ibm.com/partnerworld/> and click **Find Business Partners** on the right side of the page. For IBM support telephone numbers, see <http://www.ibm.com/planetwide/>. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

---

## IBM Taiwan product service

台灣 IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

IBM Taiwan product service contact information:

IBM Taiwan Corporation  
3F, No 7, Song Ren Rd.  
Taipei, Taiwan  
Telephone: 0800-016-888



---

## Appendix B. Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product, and use of those websites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

---

## Trademarks

IBM, the IBM logo, and [ibm.com](http://www.ibm.com) are trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at "Copyright and trademark information" at <http://www.ibm.com/legal/copytrade.shtml>.

Adobe and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Cell Broadband Engine is a trademark of Sony Computer Entertainment, Inc., in the United States, other countries, or both and is used under license therefrom.

Intel, Intel Xeon, Itanium, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.

---

## Important notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1024 bytes, MB stands for 1,048,576 bytes, and GB stands for 1,073,741,824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1,000,000 bytes, and GB stands for 1,000,000,000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard disk drive bays with the largest currently supported drives that are available from IBM.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as “total bytes written” (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. IBM is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

IBM makes no representation or warranties regarding non-IBM products and services that are ServerProven®, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. These products are offered and warranted solely by third parties.

IBM makes no representations or warranties with respect to non-IBM products. Support (if any) for the non-IBM products is provided by the third party, not IBM.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

## Particulate contamination

**Attention:** Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the switch module that is described in this document. Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the switch module to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If IBM determines that the levels of particulates or gases in your environment have caused damage to the switch module, IBM may condition provision of repair or replacement of switch module or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 3. Limits for particulates and gases

Contaminant	Limits
Particulate	<ul style="list-style-type: none"> <li>The room air must be continuously filtered with 40% atmospheric dust spot efficiency (MERV 9) according to ASHRAE Standard 52.2<sup>1</sup>.</li> <li>Air that enters a data center must be filtered to 99.97% efficiency or greater, using high-efficiency particulate air (HEPA) filters that meet MIL-STD-282.</li> <li>The deliquescent relative humidity of the particulate contamination must be more than 60%<sup>2</sup>.</li> <li>The room must be free of conductive contamination such as zinc whiskers.</li> </ul>
Gaseous	<ul style="list-style-type: none"> <li>Copper: Class G1 as per ANSI/ISA 71.04-1985<sup>3</sup></li> <li>Silver: Corrosion rate of less than 300 Å in 30 days</li> </ul>

<sup>1</sup> ASHRAE 52.2-2008 - *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

<sup>2</sup> The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

<sup>3</sup> ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

---

## Documentation format

The publications for this product are in Adobe Portable Document Format (PDF) and should be compliant with accessibility standards. If you experience difficulties when you use the PDF files and want to request a web-based format or accessible PDF document for a publication, direct your mail to the following address:

*Information Development  
IBM Corporation  
205/A015  
3039 E. Cornwallis Road  
P.O. Box 12195  
Research Triangle Park, North Carolina 27709-2195  
U.S.A.*

In the request, be sure to include the publication part number and title.

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

---

## Telecommunication regulatory statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks.

Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

---

## Electronic emission notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

## Federal Communications Commission (FCC) statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



## Industry Canada Class A emission compliance statement

This Class A digital apparatus complies with Canadian ICES-003.

## Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## Australia and New Zealand Class A statement

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## European Union EMC Directive conformance statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a nonrecommended modification of the product, including the fitting of non-IBM option cards.

**Attention:** This is an EN 55022 Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Responsible manufacturer:

International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
914-499-1900

European Community contact:

IBM Deutschland GmbH  
Technical Regulations, Department M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Telephone: +49 7032 15 2941  
Email: lugi@de.ibm.com

## Germany Class A statement

**Deutschsprachiger EU Hinweis:**

### **Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:  
“Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen.”

### **Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem “Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)”. Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

### **Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:

International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:

IBM Deutschland GmbH  
Technical Regulations, Abteilung M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Telephone: +49 7032 15 2941  
Email: lugi@de.ibm.com

### **Generelle Informationen:**

**Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.**

## **VCCI Class A statement**

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用する  
と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策  
を講ずるよう要求されることがあります。 VCCI-A

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI). If this equipment is used in a domestic environment, radio interference may occur, in which case the user may be required to take corrective actions.

## **Japan Electronics and Information Technology Industries Association (JEITA) statement**

高調波ガイドライン準用品

Japanese Electronics and Information Technology Industries Association (JEITA)  
Confirmed Harmonics Guideline with Modifications (products greater than 20 A per phase)

## Korea Communications Commission (KCC) statement

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

This is electromagnetic wave compatibility equipment for business (Type A). Sellers and users need to pay attention to it. This is for any areas other than home.

## Russia Electromagnetic Interference (EMI) Class A statement

ВНИМАНИЕ! Настоящее изделие относится к классу А. В жилых помещениях оно может создавать радиопомехи, для снижения которых необходимы дополнительные меры

## People's Republic of China Class A electronic emission statement

中华人民共和国“A类”警告声明

声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

## Taiwan Class A compliance statement

警告使用者：  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。



---

# Index

## A

- accessible documentation 38
- acquiring feature licenses 25
- assistance, getting 31

## B

- bay locations, IBM Flex System chassis 3
- before installing the switch module 4
- browser-based interface, configuring 21

## C

- cables
  - parts listing 29
  - requirements for Ethernet network 8, 9
  - requirements for switch modules 6
  - serial console
    - installing 9
    - removing 9
  - SFP+ module
    - installing 9
    - removing 10
- cabling
  - serial console 9
  - SFP+ module 9
  - switch module 9
- Class A electronic emission notice 38
- communication requirements 3, 8
- configuration
  - cable requirements 6
- configure
  - interfaces supported 2
- configuring
  - default mode 17
  - remote management mode 17
  - serial-port interface 20
  - SSHv2/Telnet interface 19
  - switch module 17
- connecting
  - RJ-45 cable 10
  - serial console cable 9
  - SFP+ module cable 9
  - to the switch module 20
- contamination, particulate and gaseous 37
- critical errors 27

## D

- default IP address 17
- default mode, configuring 17
- determining the current level of switch module
  - firmware 23
- diagnostic data 32
- disconnecting
  - RJ-45 cable 10
  - serial console cable 9

- disconnecting (*continued*)
  - SFP+ module cable 10
- documentation
  - cable requirements 6
  - documentation format 38
  - Dynamic System Analysis 32

## E

- electronic emission Class A notice 38
- enabling management over external ports 8
- enabling the external ports 8
- error
  - critical 27
  - noncritical 27
- Ethernet
  - network requirements 8, 9
- Ethernet switch module
  - error (!) LED 15
  - installation guidelines 5
  - installing 3, 6, 7
  - OK LED 15
  - removing or replacing 8
- expansion card
  - network requirements 3
- external ports
  - enabling 8
  - enabling management 8, 19
  - Ethernet
    - cable requirements 8, 9
  - locating 13
  - operating speeds on switch module 4

## F

- FCC Class A notice 38
- feature license
  - Upgrade 1 25
  - Upgrade 2 25
- feature licenses
  - installing 26
- fiber optic cables
  - installing 9
  - removing 10
- filler module
  - installation requirements 7
  - parts listing 29
- firmware updates 23

## G

- gaseous contamination 37
- getting help 31
- guidelines
  - handling an SFP+ module 11
  - handling fiber optic cables 9
  - handling static-sensitive devices 6

guidelines *(continued)*  
    installation 5  
    system reliability 5

## H

handling  
    an SFP+ module 11  
    fiber optic cables 9  
    static-sensitive devices 6  
hardware requirements 3  
hardware service and support 33  
help, getting 31  
high-speed device interconnections 3  
high-speed switch-module (HSSM)  
    network requirements 3  
host channel adapter (HCA)  
    internal ports 3  
    network requirements 3  
host channel requirements 3  
hot-swap component 5  
HSSM (high-speed switch module) 3

## I

I/O bay locations 3  
IBM Support Line 32  
information panel  
    detail 13  
    locating 13  
    status LEDs 14  
initial configuration 22  
installation  
    guidelines 5  
    procedure  
        cables 9  
        cables for switch module 8, 9  
        serial console cable 9  
        SFP+ module 12  
        SFP+ module cable 9  
        switch module 7  
    requirements 3  
installing  
    feature licenses 26  
    fiber optic cables 9  
    high-speed switch module 3  
    options 5, 11  
    SFP+ module 12  
    switch module 3, 6, 7  
installing switch module  
    before 4  
installing, before 4  
internal ports  
    on Ethernet switch module 4  
    on host channel adapter 3

## L

LED  
    critical alert 15  
    locating 13

LED *(continued)*  
    OK 15  
    port activity 16  
    port fault 16  
    switch module status 15  
    switch-module error (!) 15  
    system status 15

### LEDs

    port status 16  
license features  
    acquiring 25  
    Upgrade 1 25  
    Upgrade 2 25  
locating  
    external ports 13  
    information panel 13  
    LEDs 13  
    media access control label 4  
    model number 4  
    part number label 4  
logging in to the switch module  
    through the SSHv2/Telnet interface 22  
login window  
    Telnet interface 22

## M

main menu  
    SSHv2/Telnet interface 20  
management  
    external ports 19  
    TCP/IP session 18  
media access control label, locating 4  
model number, locating 4

## N

network requirements 3, 8  
noncritical errors 27  
notes, important 36  
notices 35  
    electronic emission 38  
    FCC, Class A 38

## O

obtaining the latest level of switch module firmware 23  
OK LED 15  
options  
    installing 5, 11

## P

part number, locating 4  
particulate contamination 37  
parts listing 29  
password rules  
    Telnet interface 20, 22  
port activity LED 16  
port fault LED 16

- port status LEDs 16
- ports
  - external
    - operating speeds on switch module 4
  - internal
    - on host channel adapter 3
    - operating speeds on switch module 4
- POST errors
  - critical 27
  - noncritical 27
- power-on self-test (POST)
  - completed 7
  - description 7
  - failure 15
  - normal 7
- public services network, use in 38
- public telecommunications network, connection to 38

## R

- remote management mode, configuring 17
- removing
  - fiber optic cables 10
  - serial console cable 9
  - SFP+ module 13
  - switch module 8
- requirements, hardware 3
- resetting the switch module 25
- restarting the switch module 25
- RJ-45 cable
  - connecting 10
  - disconnecting 10
- running POST 27

## S

- serial console cable
  - connecting 9
  - disconnecting 9
  - parts listing 29
- serial port interface
  - configuring 20
  - connect cable 20
- SFP+ module
  - cable, connecting 9
  - cable, disconnecting 10
  - description 11
  - handling 11
  - installation procedure 12
  - installing 12
  - removing 13
- small form-factor pluggable module
  - removing 13
- software service and support 32
- solving problems 27
- SSHv2/Telnet interface
  - configuring 19
  - login 22
  - main menu 20
- SSHv2/Telnet main menu
  - accessing 20

- static-sensitive devices, handling 6
- switch module
  - cable requirements 6
  - cabling 9, 29
  - configuring 17
  - configuring browser-based interface 21
  - default IP address 17
  - external ports
    - enabling 8
  - high-speed 3
  - I/O bay locations 3
  - initial configuration 22
  - installation guidelines 5
  - installing 3, 6, 7
  - label locations 4
  - logging in 22
  - network requirements 8
  - operating speeds for internal and external ports 4
  - parts listing 29
  - removing or replacing 8
  - resetting and restarting 25
  - status 15
  - switch module firmware
    - determining the current level 23
    - obtaining the latest level 23
    - updating 23
    - upgrading 24
  - switch-module error (!) LED 15
  - system reliability 5
  - system status LED 15
  - system-error LED 15

## T

- TCP/IP session
  - management module 18
- telephone numbers 33
- Telnet interface
  - accessing main menu 20
  - password rules 20
- trademarks 35
- transceivers, parts listing 29
- troubleshooting 27

## U

- United States electronic emission Class A notice 38
- United States FCC Class A notice 38
- updating the firmware 23
- Upgrade 1
  - parts listing 29
- Upgrade 2
  - parts listing 29
- upgrading the switch module firmware 24

## W

- Web site
  - IBM Flex System documentation 6
- website
  - personalized support 32

website (*continued*)  
    publication ordering 32  
    support line, telephone numbers 33







Part Number: 00AY519

Printed in USA

(1P) P/N: 00AY519

