


INTELLIGENT CLUSTER 1410 RACK MOUNT INSTALL GUIDE




Supported products: ICX 6610

Step 1

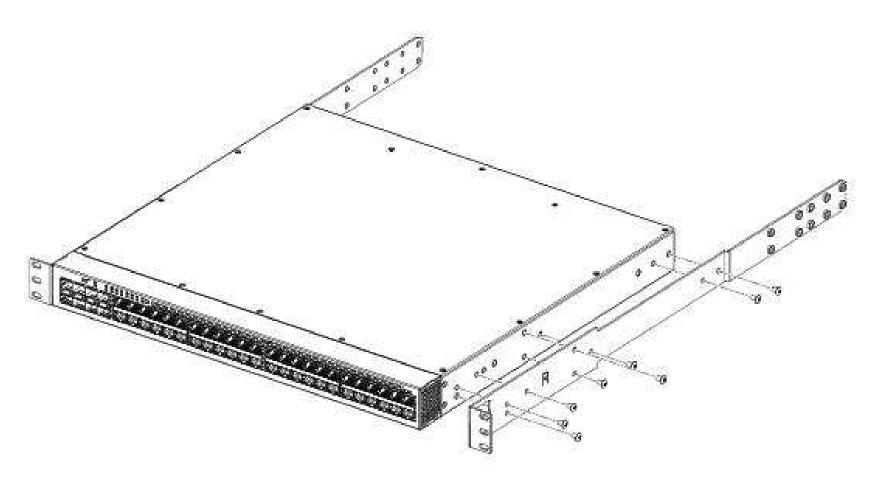




Step 2

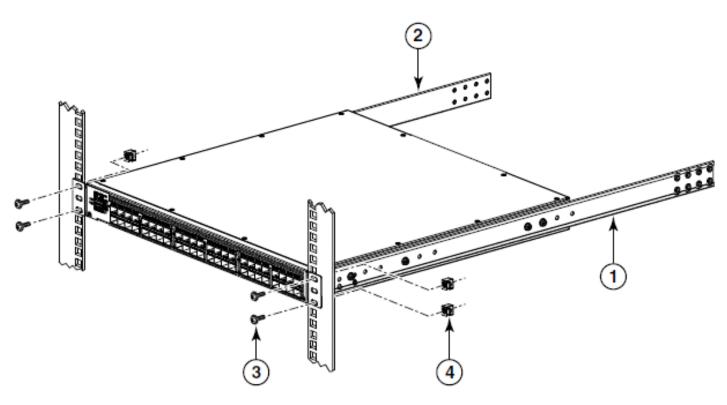

Bracket, front right

- 2 Bracket, front left
- 3 Screw, 10-32 x 5/8 in., panhead Phillips 4
- Retainer nut, 10-32, square or round hole as needed

Step 3

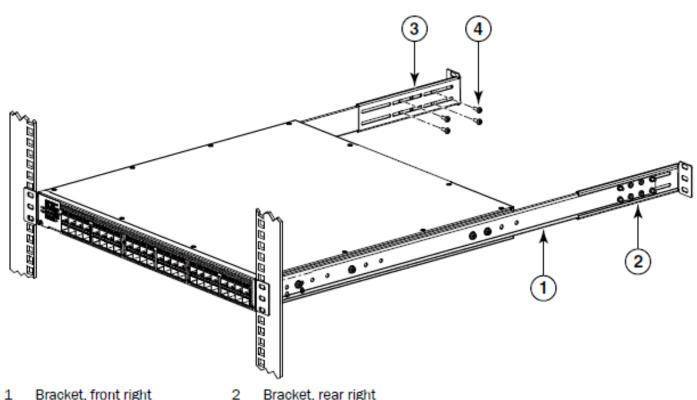


- Bracket, front right
- Bracket, rear left

- Bracket, rear right
- Screw, 6-32 x 1/4 in., flathead Phillips



Step 4

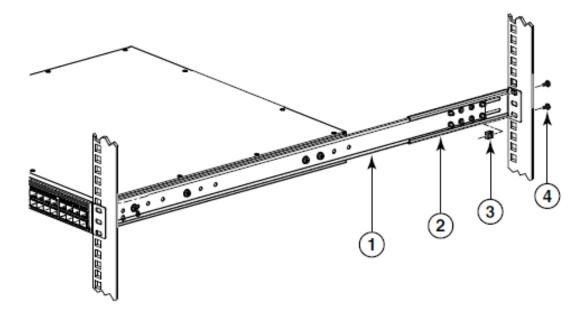

- Bracket, front right
- 3 Retainer nut, 10-32, square or round holes as needed
- 2 Bracket, rear right
- 4 Screw, 10-32 x 5/8 in., panhead Phillips