

Power Systems

*Installing the NVMe Expansion Drawer -
24 devices (NED24)*



Note

Before using this information and the product it supports, read the information in [“Safety notices” on page v](#), [“Notices” on page 21](#), the *IBM Systems Safety Notices* manual, G229-9054, and the *IBM Environmental Notices and User Guide*, Z125-5823.

This edition applies to IBM® Power® servers that contain the Power11 processor and to all associated models.

© **Copyright International Business Machines Corporation 2025.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Safety notices.....	V
Installing an NVMe Expansion Drawer - 24 devices (NED24).....	1
Installing or setting up an NED24 NVMe expansion drawer.....	1
Preparing the system to install or set up an NED24 NVMe expansion drawer.....	1
Completing inventory for installing the NED24 NVMe expansion drawer.....	2
Determining and marking the location in the rack.....	3
Attaching the mounting hardware to the rack.....	5
Installing an NED24 NVMe expansion drawer into a rack	5
Connecting an NED24 NVMe expansion drawer to your system.....	7
Preparing the system to connect an NED24 NVMe expansion drawer.....	7
Routing, connecting, and activating the expansion drawer cable pair or pairs while the server is powered off.....	7
Preparing your system for operation after connecting an NED24 NVMe expansion drawer to your system.....	13
Connector locations for Power11 servers.....	15
Connector locations for the 9824-22A and 9856-22H systems.....	15
Connector locations for the 9824-42A and 9856-42H systems.....	16
Connector locations for the 9043-MRU systems.....	17
Connector locations for the 9080-HEU system.....	19
Notices.....	21
Accessibility features for IBM Power servers.....	22
Privacy policy considerations	23
Trademarks.....	23
Electronic emission notices.....	23
Class A Notices.....	23
Class B Notices.....	27
Terms and conditions.....	30

Safety notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, safety information documentation is included in the publications package (such as in printed documentation, on DVD, or as part of the product) shipped with the product. The documentation contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information documentation. You should also refer to the safety information documentation any time you do not clearly understand any safety information in the U.S. English publications.

Replacement or additional copies of safety information documentation can be obtained by calling the IBM Hotline at 1-800-300-8751.

German safety information

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

Laser safety information

IBM servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

Laser compliance

IBM servers may be installed inside or outside of an IT equipment rack.



DANGER: When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard: If IBM supplied the power cord(s), connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product. Do not open or service any power supply assembly. Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.



- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. For AC power, disconnect all power cords from their AC power source. For racks with a DC power distribution panel (PDP), disconnect the customer's DC power source to the PDP.
- When connecting power to the product ensure all power cables are properly connected. For racks with AC power, connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate. For racks with a DC power distribution panel (PDP), connect the customer's DC power source to the PDP. Ensure that the proper polarity is used when attaching the DC power and DC power return wiring.
- Connect any equipment that will be attached to this product to properly wired outlets.

- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Do not attempt to switch on power to the machine until all possible unsafe conditions are corrected.
- When performing a machine inspection: Assume that an electrical safety hazard is present. Perform all continuity, grounding, and power checks specified during the subsystem installation procedures to ensure that the machine meets safety requirements. Do not attempt to switch power to the machine until all possible unsafe conditions are corrected. Before you open the device covers, unless instructed otherwise in the installation and configuration procedures: Disconnect the attached AC power cords, turn off the applicable circuit breakers located in the rack power distribution panel (PDP), and disconnect any telecommunications systems, networks, and modems.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect: 1) Turn off everything (unless instructed otherwise). 2) For AC power, remove the power cords from the outlets. 3) For racks with a DC power distribution panel (PDP), turn off the circuit breakers located in the PDP and remove the power from the Customer's DC power source. 4) Remove the signal cables from the connectors. 5) Remove all cables from the devices.

To Connect: 1) Turn off everything (unless instructed otherwise). 2) Attach all cables to the devices. 3) Attach the signal cables to the connectors. 4) For AC power, attach the power cords to the outlets. 5) For racks with a DC power distribution panel (PDP), restore the power from the Customer's DC power source and turn on the circuit breakers located in the PDP. 6) Turn on the devices.



- Sharp edges, corners and joints may be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching. (D005)

(R001 part 1 of 2):



DANGER: Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet if provided, unless the earthquake option is to be installed.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices. In addition, do not lean on rack mounted devices and do not use them to stabilize your body position (for example, when working from a ladder).



- Stability hazard:
 - The rack may tip over causing serious personal injury.
 - Before extending the rack to the installation position, read the installation instructions.
 - Do not put any load on the slide-rail mounted equipment mounted in the installation position.
 - Do not leave the slide-rail mounted equipment in the installation position.
- Each rack cabinet might have more than one power cord.
 - For AC powered racks, be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.

- For racks with a DC power distribution panel (PDP), turn off the circuit breaker that controls the power to the system unit(s), or disconnect the customer's DC power source, when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (R001 part 1 of 2)

(R001 part 2 of 2):



CAUTION:

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack or if the rack is not bolted to the floor. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.



- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack. (R001 part 2 of 2)



CAUTION: Removing components from the upper positions in the rack cabinet improves rack stability during relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions:
 - Remove all devices in the 32U position (compliance ID RACK-001 or 22U (compliance ID RR001) and above.
 - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.

- Ensure that there are little-to-no empty U-levels between devices installed in the rack cabinet below the 32U (compliance ID RACK-001 or 22U (compliance ID RR001) level, unless the received configuration specifically allowed it.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 2083 mm (30 x 82 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
 - Lower the four leveling pads.
 - Install stabilizer brackets on the rack cabinet or in an earthquake environment bolt the rack to the floor.
 - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off of the pallet and bolt the rack cabinet to the pallet.

(R002)

(L001)



DANGER: Hazardous voltage, current, or energy levels are present inside any component that has this label attached. Do not open any cover or barrier that contains this label. (L001)

(L002)




DANGER: Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices. In addition, do not lean on rack-mounted devices and do not use them to stabilize your body position (for example, when working from a ladder). Stability hazard:

- The rack may tip over causing serious personal injury.

- Before extending the rack to the installation position, read the installation instructions.
- Do not put any load on the slide-rail mounted equipment mounted in the installation position.
- Do not leave the slide-rail mounted equipment in the installation position.

(L002)

(L003)

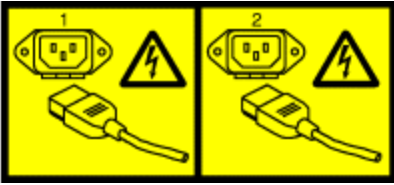

or



or




or



or



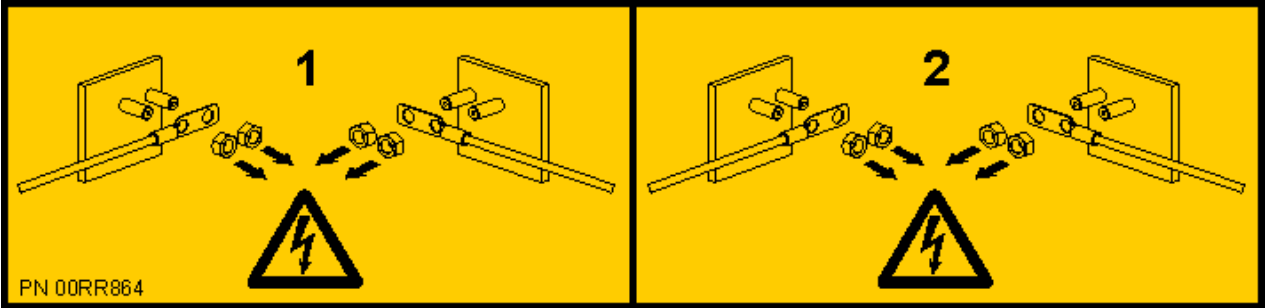

DANGER: Multiple power cords. The product might be equipped with multiple AC power cords or multiple DC power cables. To remove all hazardous voltages, disconnect all power cords and power cables. (L003)

(L007)



CAUTION: A hot surface nearby. (L007)

(L008)



CAUTION: Hazardous moving parts nearby. (L008)

(L018)



or



CAUTION: High levels of acoustical noise are (or could be under certain circumstances) present. Use approved hearing protection and/ or provide mitigation or limit exposure. (L018)

(L031)

**CAUTION:**

Enclosure Integrity.

- Access covers are intended only for occasional removal.
- Follow documented procedures when opening during live or temporary service.
- When service is complete, promptly reinstall all covers, lids, and/or doors for correct operation. (L031)

All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.



CAUTION: This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)



CAUTION: Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. Although shining light into one end and looking into the other end of a disconnected optical fiber to verify the continuity of optic fibers may not injure the eye, this procedure is potentially dangerous. Therefore, verifying the continuity of optical fibers by shining light into one end and looking at the other end is not recommended. To verify continuity of a fiber optic cable, use an optical light source and power meter. (C027)



CAUTION: This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)



CAUTION: Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information:

- Laser radiation when open.
- Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

(C030)



CAUTION: The battery contains lithium. To avoid possible explosion, do not burn or charge the battery.

Do Not:

- Throw or immerse into water
- Heat to more than 100 degrees C (212 degrees F)
- Repair or disassemble

Exchange only with the IBM-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, IBM has a process for the collection of this battery. For information, call 1-800-426-4333. Have the IBM part number for the battery unit available when you call. (C003)



CAUTION: Regarding IBM provided VENDOR LIFT TOOL:

- Operation of LIFT TOOL by authorized personnel only.
- LIFT TOOL intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers).
- Read and completely understand the contents of LIFT TOOL operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's web site.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the LIFT TOOL with stabilizer brake engaged.
- Do not raise, lower or slide platform load shelf unless stabilizer (brake pedal jack) is fully engaged. Keep stabilizer brake engaged when not in use or motion.
- Do not move LIFT TOOL while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See LOAD CAPACITY CHART regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platforms, tilt riser, angled unit install wedge or other such accessory options. Secure such platforms -- riser tilt, wedge, etc options to main lift shelf or forks in all four (4x or all other provisioned mounting) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt [adjustable angling platform] option flat at all times except for final minor angle adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads.
- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against LIFT TOOL (unless the specific allowance is provided for one following qualified procedures for working at elevations with this TOOL).
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning LIFT TOOL machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare LIFT TOOL MACHINE with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave LIFT TOOL machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.

- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury.
- This TOOL must be maintained correctly for IBM Service personnel to use it. IBM shall inspect condition and verify maintenance history before operation. Personnel reserve the right not to use TOOL if inadequate. (C048)



CAUTION: This equipment is not suitable for use in locations where children are likely to be present. (C052)

Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE

The following comments apply to the IBM servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intra-building ports of this equipment are suitable for connection to intra-building or unexposed wiring or cabling only. The intra-building ports of this equipment *must not* be metalically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

Note: All Ethernet cables must be shielded and grounded at both ends.

The AC-powered system does not require the use of an external surge protection device (SPD).

The DC-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

The DC-powered system is intended to be installed in a common bonding network (CBN) as described in GR-1089-CORE.

Installing an NVMe Expansion Drawer - 24 devices (NED24)

Learn how to install an NVMe Expansion Drawer - 24 devices (NED24) (NED24 NVMe expansion drawer) into a rack or remove the shipping bracket from a preinstalled NED24 NVMe expansion drawer. Then, learn how to connect the NED24 NVMe expansion drawer to your system and activate the PCIe link.

Important: If you are connecting the drawer to the server using copper cables, the rack extender is required. For instructions about how to install the rack extender, see [Installing an extender to the rack](http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_s42extender.htm) (http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_s42extender.htm).

Installing or setting up an NED24 NVMe expansion drawer

Learn how to install an NED24 NVMe expansion drawer into a rack.

Complete the following tasks to install or set up an NED24 NVMe expansion drawer:

1. [Preparing to install or set up an NED24 NVMe expansion drawer](#)
2. [Completing inventory for the NED24 NVMe expansion drawer](#)
3. [Determining and marking the location in the rack](#)
4. [Attaching the mounting hardware to the rack](#)
5. [Installing the NED24 NVMe expansion drawer into the rack](#)

Preparing the system to install or set up an NED24 NVMe expansion drawer

Find information about the prerequisites for installing your NED24 NVMe expansion drawer.

About this task

Important: If you are installing a NED24 NVMe expansion drawer below the following IBM systems, ensure that you leave at least 1 EIA unit of open space between the system and the drawer, and install a single EIA unit rack filler in that space. This allows for proper servicing of the drawer.

1. ENZO PCIe4 expansion drawer
2. 9824-22A
3. 9824-42A
4. 9856-22H
5. 9856-42H
6. 9043-MRU

This ensures that the ENZO PCIe4 expansion drawer's cable management arm has enough clearance for service procedures.

To prepare the system to install an NED24 NVMe expansion drawer, complete the following steps:

Procedure

1. Determine the level of software that you need to support the drawer.
For instructions, see the [Power Systems Prerequisites](https://www14.software.ibm.com/support/customer/care/iprt/home) website (<https://www14.software.ibm.com/support/customer/care/iprt/home>).
2. Choose from the following options:
 - If your NED24 NVMe expansion drawer arrived to your site preinstalled in a rack, continue with the step [“3” on page 2](#).

- If your NED24 NVMe expansion drawer needs to be installed into a rack, continue with step “4” on page 2.
3. If your NED24 NVMe expansion drawer arrived to your site preinstalled in a rack, complete the following steps:
 - a) Ensure that you have the following items before you begin working on your preinstalled system:
 - #1 and #2 Phillips screwdriver
 - Flat-head screwdriver
 - b) Remove the shipping bracket, if present.
 - c) Continue with “Connecting an NED24 NVMe expansion drawer to your system” on page 7.
 4. If you need to install your NED24 NVMe expansion drawer into a rack, complete the following steps:
 - a) Ensure that you have the following items before you start your installation:
 - #1 and #2 Phillips screwdriver
 - Flat-head screwdriver
 - Rack with four Electronic Industries Alliance (EIA) units of contiguous space

Note: If you do not have a rack that is installed, install the rack. For instructions, see [Racks and rack features](http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_10xx_kickoff.htm) (http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_10xx_kickoff.htm).

 - **Important:** If you are connecting the drawer to the server using copper cables, the rack extender is required. For instructions about how to install the rack extender, see [Installing an extender to the rack](http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_s42extender.htm) (http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_s42extender.htm).
 - Help to lift the NED24 NVMe expansion drawer into the rack, which requires two people.
 - b) Determine where to install a new NED24 NVMe expansion drawer.

Consider several elements that include size, security, and environmental factors. For more information, see [Site preparation and physical planning](http://www.ibm.com/docs/POWER11/p11ebe/p11ebe_kickoff.htm) (http://www.ibm.com/docs/POWER11/p11ebe/p11ebe_kickoff.htm).
 - c) Continue with “Completing inventory for installing the NED24 NVMe expansion drawer” on page 2.

Completing inventory for installing the NED24 NVMe expansion drawer

Find information about completing inventory for the NED24 NVMe expansion drawer.

Procedure

1. Refer to the inventory list, and verify that you received all of the parts that you ordered. At a minimum, each order contains the following items:
 - Left and right rack-mounting hardware` (rails)
 - Power supply cables
 - Expansion drawer cable pairs.

Notes:

 - 3-meter CXP GEN4 copper cables are used for intra-rack installations.
 - CXP GEN4 optical cables in multiple lengths are used for connections between racks.
2. If your shipment contains parts that are not required to complete the installation procedure, store those parts in case they are needed in the future.

Determining and marking the location in the rack

Find information about determining where to install the NED24 NVMe expansion drawer into the rack.

About this task

Important: If you are installing a NED24 NVMe expansion drawer below the following IBM systems, ensure that you leave at least 1 EIA unit of open space between the system and the drawer, and install a single EIA unit rack filler in that space. This allows for proper servicing of the drawer.

1. ENZO PCIe4 expansion drawer
2. 9824-22A
3. 9824-42A
4. 9856-22H
5. 9856-42H
6. 9043-MRU

This ensures that the ENZO PCIe4 expansion drawer's cable management arm has enough clearance for service procedures.

Note: This expansion drawer is two EIA units high. An EIA unit is 44.45 mm (1.75 in.) in height. The rack contains three mounting holes for each EIA unit of height. This expansion drawer covers six mounting holes in the rack.

Procedure

1. Read the [Rack safety notices](http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_racksafety.htm) (http://www.ibm.com/docs/POWER11/p11hbf/p11hbf_racksafety.htm).
2. Determine where in the rack to place the drawer in relation to other system hardware. As you plan for installing the drawer in a rack, keep in mind the following information:
3. If necessary, open or remove the front and rear rack doors.
4. Information:

Important:

- The NED24 NVMe expansion drawer must be placed above the system when possible.
- If you must install the NED24 NVMe expansion drawer below the system, the placement of the NED24 NVMe expansion drawer in relation to your system is important so that the cable management arm can function properly.

General location information includes the following recommendations:

- Organize larger and heavier units into the lower part of the rack.
 - Plan to install units into the lower part of the rack first.
 - Record the EIA locations in your plan.
5. Attach the electrostatic discharge (ESD) wrist strap.

The ESD wrist strap must be connected to an unpainted metal surface until the service procedure is completed, and if applicable, until the service access cover is replaced.




Attention:

- Attach an electrostatic discharge (ESD) wrist strap to the front ESD jack, to the rear ESD jack, or to an unpainted metal surface of your hardware to prevent the electrostatic discharge from damaging your hardware.
- When you use an ESD wrist strap, follow all electrical safety procedures. An ESD wrist strap is used for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
- If you do not have an ESD wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for

a minimum of 5 seconds. If at any point in this service process you move away from the system, it is important to again discharge yourself by touching an unpainted metal surface for at least 5 seconds before you continue with the service process.

6. If necessary, remove the filler panels to allow access to the inside of the rack enclosure where you plan to place the enclosure or drawer.

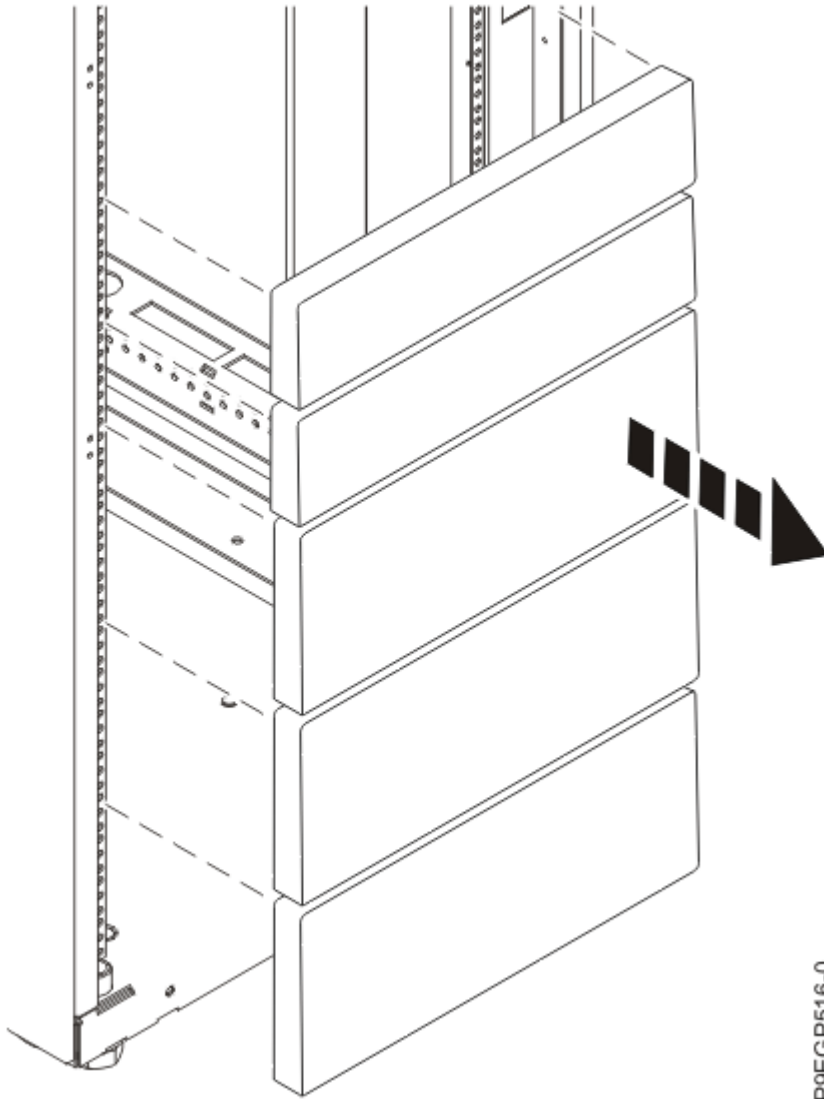

P9EGP516-0

Figure 1. Removing the filler panels

7. Face the front of the rack and work from the left side to complete the following steps:
 - a) Make a note of both the lowest and highest EIA units to be used for the drawer.
 - b) Use tape, a marker, or a pencil to mark the top mounting hole of the third EIA unit from the lowest EIA unit you marked. Insert a nut clip at this location.
Note: Mark the rack so that these marks can also be seen from the rear of the rack.
 - c) Mark the top mounting hole on the lowest EIA unit.
 - d) Count up two holes and place another mark beside that mounting hole. You now have two marks on the rack, with one mounting hole between the marks.
Note: During this procedure, put nut clips in the marks. Then, during the procedure to attach the mounting hardware to the rack, put rail pins in the other marks.
8. Repeat step “7” on page 4 to place two marks on the corresponding mounting holes on the front-right side of the rack. Insert a nut clip in the mark.
9. Go to the rear of the rack and work from the left side to complete the following steps:

- a) Find the EIA unit that corresponds to the lowest EIA unit marked on the front of the rack.
 - b) Use tape, a marker, or a pencil to mark the top mounting hole of this EIA unit.
 - c) Count up two holes and place another mark beside that mounting hole. You now have two marks on the rack, with one mounting hole between the marks.
 - d) Count up two mounting holes from where you placed your last mark, and place another mark next to that mounting hole.
 - e) Count up two holes and place another mark beside that mounting hole. You now have two marks on the rack. Insert nut clips in these two locations.
10. Repeat step “9” on page 4 to place four marks on the corresponding mounting holes on the rear-right side of the rack. Insert nut clips in the marks.

Attaching the mounting hardware to the rack

Find information about attaching the mounting hardware to the rack and then installing the rails into the rack.

About this task

Note: The system requires 2 EIA rack units (2U) of space.

To install the rails into the rack, complete the following steps:

Procedure

1. Locate the left slide rail. The left mounting slide is stamped with an L identifier on the inside front location.
2. At the front of the rack, position the left slide rail between the left-side front and rear rack flanges.
3. Insert the front slide flange locator studs into the front EIA mounting holes.
4. Insert the rear slide flange locator studs on the slide rail into the rear EIA mounting holes.
5. Insert a flat head screw through the front rail and through the rack flange in the top mounting hole of the highest EIA unit.
6. Move to the rear of the rack.
7. Attach the left slide rail and right slide rail with a M5x16mm screw. Insert and tighten each screw into the threaded slide flange hole, located in the middle hole of the lowest EIA rack unit.

What to do next

Note: When you have finished using the installation tools, store them for future use.

Installing an NED24 NVMe expansion drawer into a rack

Find information about installing an NED24 NVMe expansion drawer into a rack.

Before you begin

Important: If you are installing a NED24 NVMe expansion drawer below the following IBM systems, ensure that you leave at least 1 EIA unit of open space between the system and the drawer, and install a single EIA unit rack filler in that space. This allows for proper servicing of the drawer.

1. ENZ0 PCIe4 expansion drawer
2. 9824-22A
3. 9824-42A
4. 9856-22H
5. 9856-42H

6. 9043-MRU

This ensures that the ENZO PCIe4 expansion drawer's cable management arm has enough clearance for service procedures.

Note: Three people are required to safely lift the drawer.

About this task

To install an NED24 NVMe expansion drawer into a rack, complete the following steps.

Procedure

1. Ensure that you have the electrostatic discharge (ESD) wrist strap on and that the ESD clip is plugged into a ground jack or connected to an unpainted metal surface. If not, do so now.
2. Extend both slide rails forward until they stop. Then press in the release latches on each rail to further extend the rails until they click into the second stop position.
3. Carefully lift the drawer and tilt it into position over the slide rails so that the rear nail heads on the drawer line up with the rear slots on the slide rails.
4. Slide the drawer down until the rear nail heads slip into the two rear slots.
5. Slowly lower the front of the drawer until the other nail heads slip into the other slots on the slide rails. Ensure that the front latch slides over the nail heads.

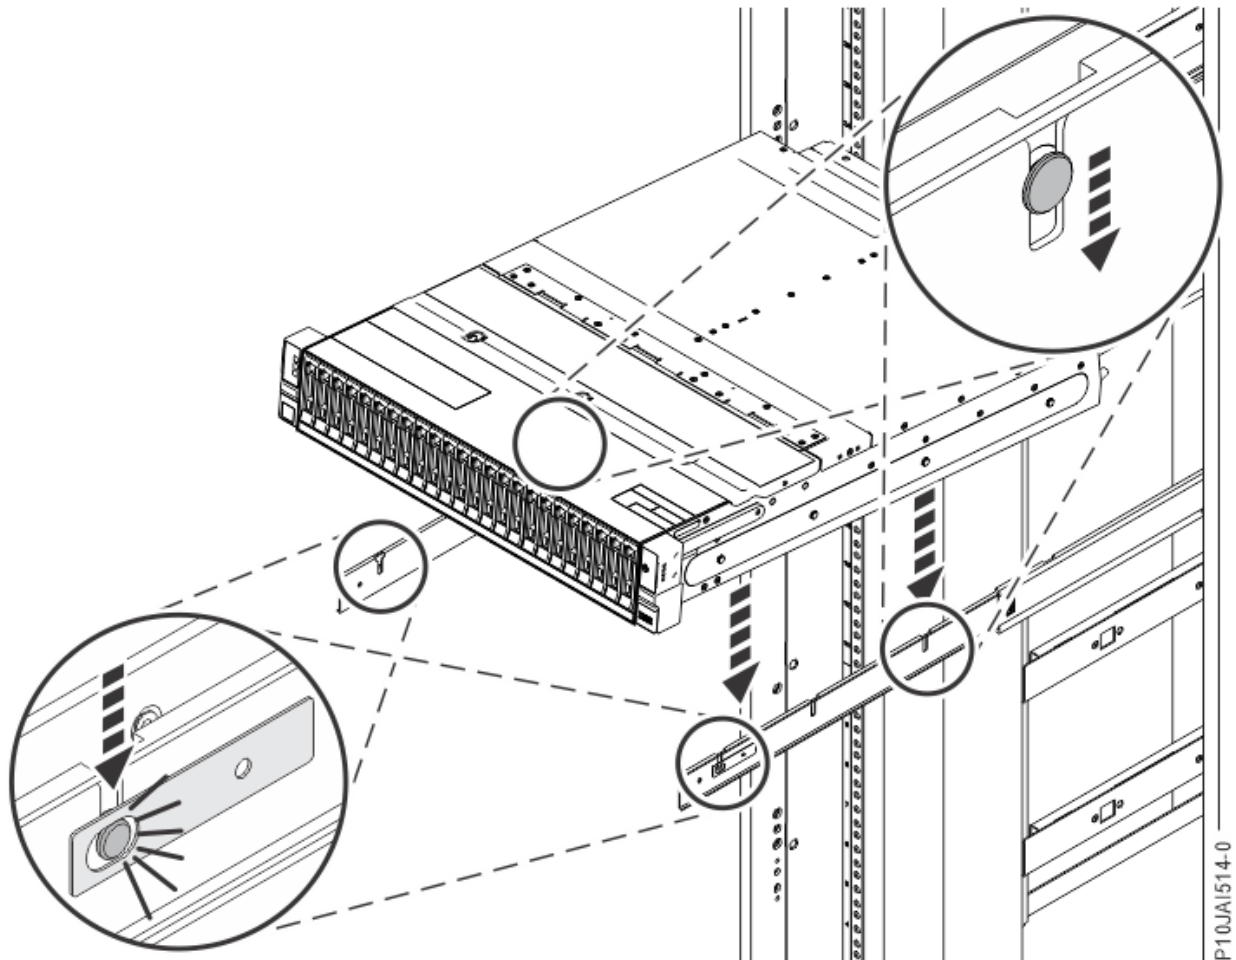


Figure 2. Installing the drawer onto the rails

6. **Note:** Ensure that the area above and below the drawer is free from any obstructions that might prevent the drawer from sliding into the rack.

Press in the release latches on the slide rails and push the drawer toward the rack until they stop.
Press in the release latches again and push the drawer all the way into the rack until it clicks into place.

7. Install the cable-management arm. The cable-management arm is used to efficiently route cables so that you have proper access to the rear of the drawer. To install the cable management-arm, complete the following steps:
 - a. The cable-management arm can be installed on either side of the drawer. For this procedure, you are installing it on the right side, while you are facing the drawer from the rear. If you want to install the cable management arm on the other side of the rack, you can press the button on the extension tab so that it swivels in the opposite direction.
 - b. Insert the inner cable management arm tab to the inner mounting bracket until the outer mounting bracket clicks into place.
Note: To avoid damage when the system is placed in the service position, ensure that the middle pin is between each arm.
 - c. On the opposite side of the rack, insert the extension tab to the outer cable management arm tab until it clicks into place.
8. Continue with [“Connecting an NED24 NVMe expansion drawer to your system”](#) on page 7.

Connecting an NED24 NVMe expansion drawer to your system

Find information about connecting an NED24 NVMe expansion drawer to your system.

Preparing the system to connect an NED24 NVMe expansion drawer

To prepare the system to connect an NED24 NVMe expansion drawer, complete the steps in this procedure.

About this task

Note: If you are connecting the NED24 NVMe expansion drawer to a server in the same rack, use 3-meter copper cables. If you are connecting the NED24 NVMe expansion drawer to servers in other racks, use optical cables.

Procedure

1. If the system has a rear cover, remove or open it.
2. Carefully remove the expansion drawer cable pair from the packaging. Do not remove the protective covers now.

Routing, connecting, and activating the expansion drawer cable pair or pairs while the server is powered off

To route, connect, and activate the expansion drawer cable pair or pairs, complete the steps in this procedure.

About this task

Note: During the steps in this procedure, route the expansion drawer cables but do not connect them to the host system or the drawer until you are told to do so.

Important: To avoid damage to the connectors on the expansion drawer cables, do not remove the protective covers until just before you need to plug the cable into the host system or the drawer.

Procedure

1. Ensure that you have the electrostatic discharge (ESD) wrist strap on and that the ESD clip is plugged into a ground jack or connected to an unpainted metal surface. If not, do so now.

2. Locate the expansion drawer cable pairs.
3. Create and attach host system location labels to the expansion drawer cables.

Note: Each of the two PCIe connections to the drawer must use two cables connected from the same PCIe4 cable adapter to the same host interface card location *and* port on the expansion drawer.

- a) Locate the host system that you are attaching to the drawer.
 - b) Determine the location of the cable adapter on the host system where you attach the first expansion drawer cable pair.
 - c) Select one of the expansion drawer cables as the top cable that you will attach to port T0.
 - d) Fill in a label with the location code of the host adapter (**Cx-T0**) and attach it near the connector end of the cable.
 - e) Fill in a second label in the same manner and place it on the opposite end of the cable that attaches to the drawer. Ensure that the label is placed more than 100 mm (4 in) from the end of the cable.
 - f) Leave the cable end near where it will be plugged.
 - g) Route the other end of the cable to the drawer to which it attaches.
 - h) Leave the cable end near where it will be plugged.
 - i) Repeat these steps for the cable that will attach to the **T1** location.
4. Create and attach expansion drawer location labels to the expansion drawer cable:
 - a) Locate the drawer that you are connecting to the host system.
 - b) Determine the location of the I/O module on the drawer where you will attach the first cable pair.
 - c) Identify the cable previously labeled for the host cable location ending with **Cx-T0**.
 - d) Fill in a label with the location code of the EMS host interface adapter (**P1-C1-T0**) and attach it near the connector end of the cable.
 - e) Locate the opposite end of the same cable and verify that the location cable matches.
 - f) Leave the cable near where it will be plugged.
 - g) Repeat these steps for the cable that will attach to the **T1** location.
 5. Repeat these steps for the other cable pair that will connect the host system to the **P2-C1** on the enclosure services manager (ESM).
 6. If you need to label and route more cable pairs, repeat steps [“3” on page 8](#) - [“4” on page 8](#).
 7. Continue with step [“8” on page 8](#).
 8. To connect the expansion drawer cables and activate the link, complete the following steps:
 - a) Connect the power cables for the drawer by completing the following steps:
 - i) Route the power cables through the hook-and-loop fasteners attached to each power supply handle so that the cables clear the modules.

Note: Do not connect the ends of the power cables to the power supplies on the drawer that you are installing at this time.
 - ii) Connect the power cables into the power source.
 9. Ensure that you have installed the cable adapter in the host system. Refer to the adapter installation instructions that were provided with your system.
 10. To connect the expansion drawer cables to the ports on the host system, complete the following steps:
 - a) Determine the first expansion drawer cable that you connect. It is the cable that is located near connector **T0** on the cable adapter in the host system.
 - b) Remove the protective cover from the connector on the expansion drawer cable.
 - i) Hold the cable housing (**B**) on the short edges with the index finger and thumb on one hand.

- ii) Then, grasping the cover on the long edge **(A)** with the index finger and thumb on your other hand, pull off the protective cover as shown in the following figure.

Note: Keep your fingers close to the closed end of the protective cover.

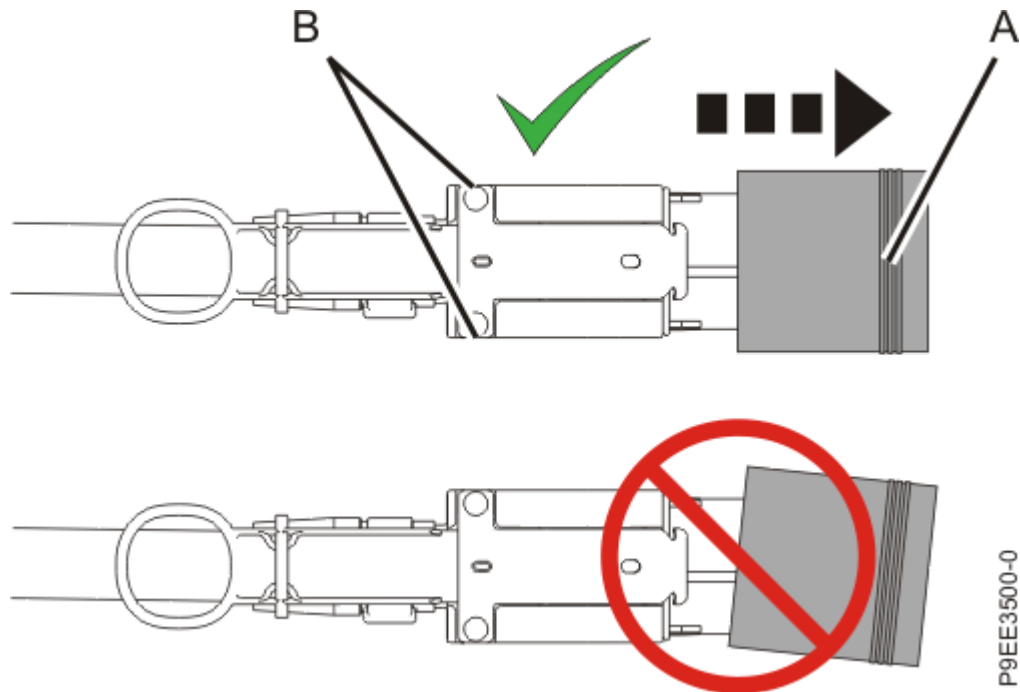


Figure 3. Removing the protective cover from the connector on the expansion drawer cable

- c) Connect the expansion drawer cable into the **T1** connector on the cable adapter in the host system.

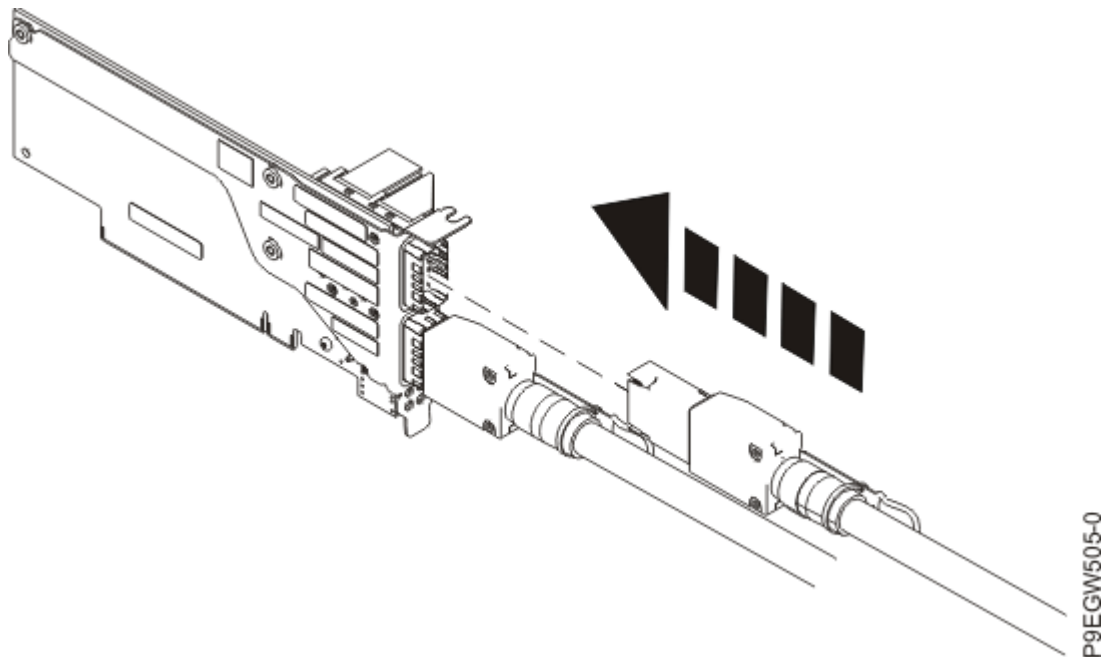


Figure 4. Connecting the expansion drawer cable to the cable adapter on the host system

- d) Remove the protective cover and connect the cable that is located near connector **T1** on the cable adapter in the host system.
- e) Connect the expansion drawer cable into the **T0** connector on the cable adapter in the host system.

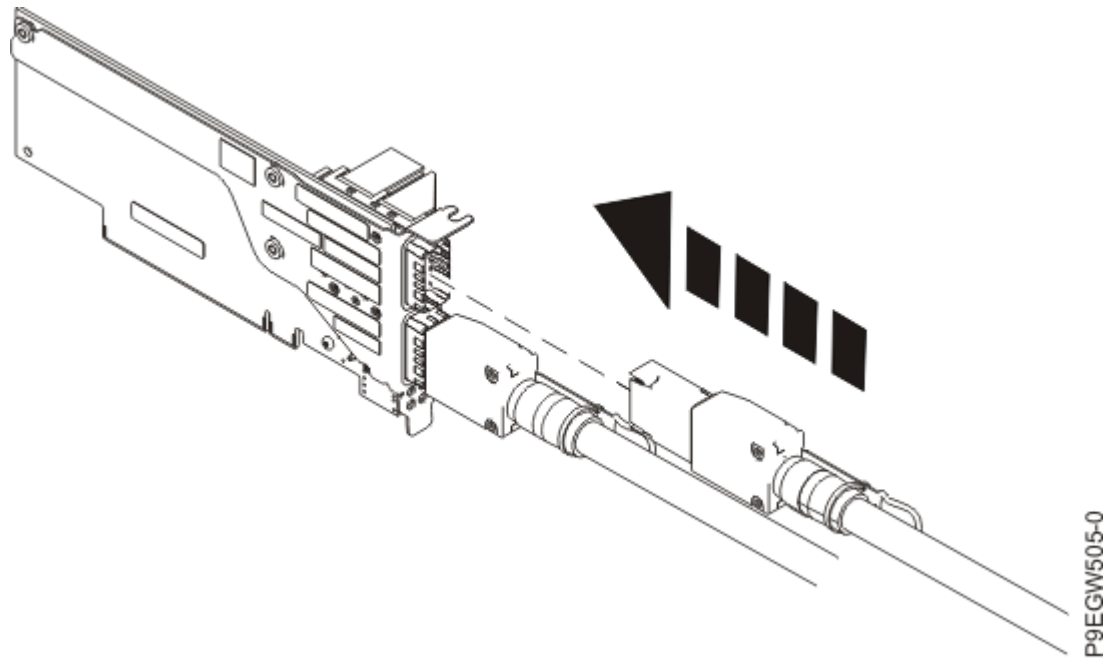


Figure 5. Connecting the expansion drawer cable to the cable adapter on the host system

- f) Repeat this step for the second cable pair.
11. Connect the cables to the rear of the drawer and route them through the cable-management arm. To connect the cables to the drawer and route them through the cable-management arm, complete the following steps:

Note: Use of the cable management arm is required.

- At the rear of the rack, extend the cable-management arm. To extend the cable-management arm, press the release tab to release the inner cable management arm tab from the outer mounting bracket.
- Rotate the arm so that it extends away from the rack.
- At the rear of the rack, open each cable management basket by pressing the latches on each basket.
- At the rear of the rack, attach the end of each cable to the leftmost vertical slot on each side of the ESM according to the labels that you previously attached.


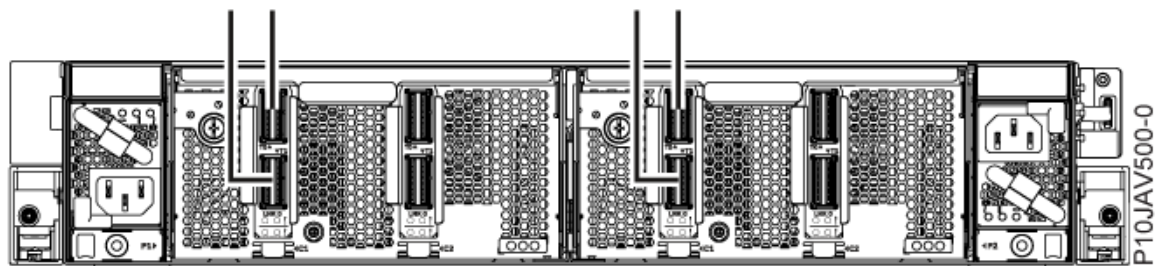


Figure 6. Locating the leftmost vertical slots on each side of the enclosure services manager (ESM)

- At the rear of the rack, connect the power cables to the power supplies on each side of the enclosure.

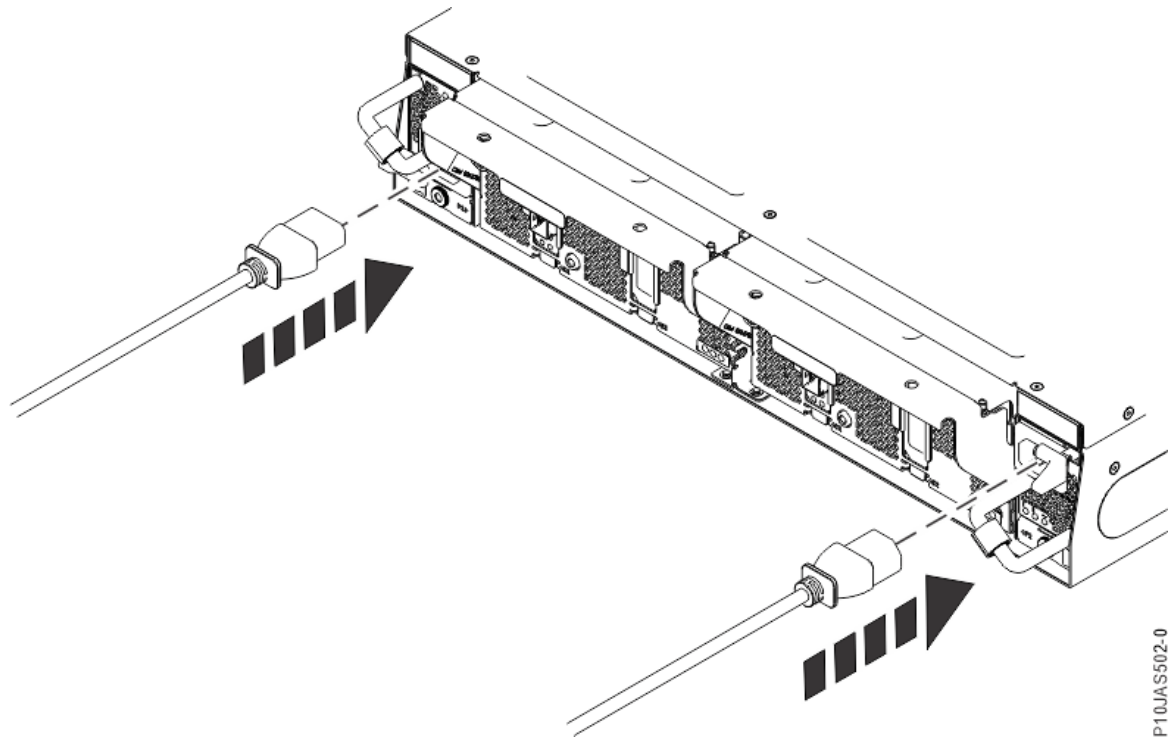

P10JAS502-0

Figure 7. Connecting the power cables to the power supplies on each side of the enclosure

- f. At the rear of the rack, route the cables from the EMS through the cable-management arm and into the cable-management arm baskets.
- g. Re-latch the baskets. Ensure that the latches are fully seated.
- h. Close the cable-management arm. To close the cable management arm, insert the inner cable management arm tab into the outer mounting bracket until it clicks into place. The inner mounting bracket is not used.

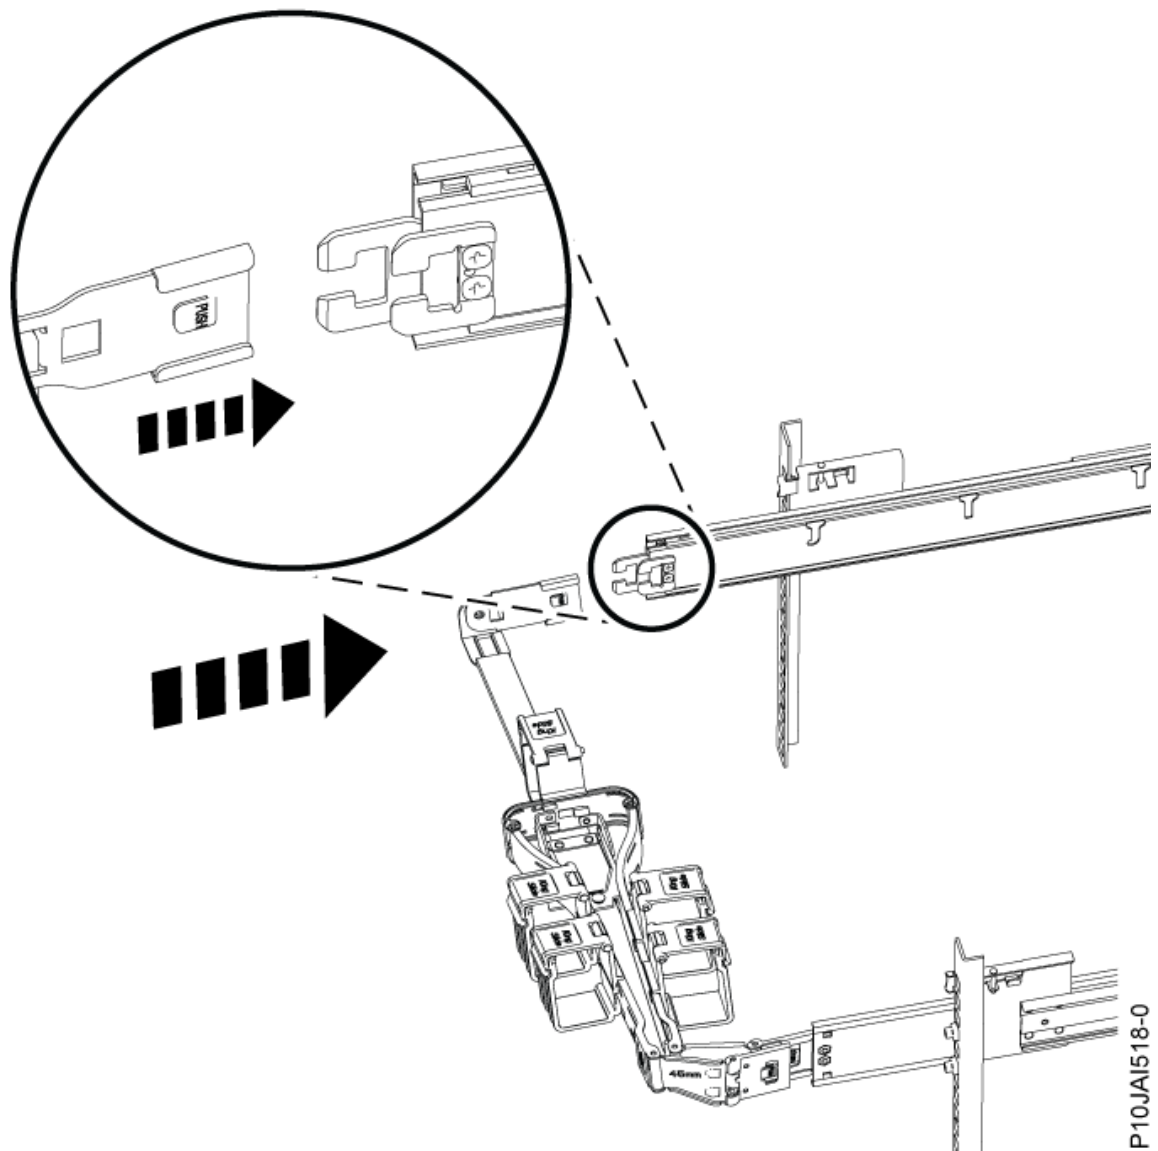


Figure 8. Closing the cable management arm

- i. Gently slide the drawer into the service position and then back into the operating position to ensure that the cables can move freely and are unobstructed by any of the components in the rear of the rack.

Note: Before you slide the drawer into the operating position, check for obstructions (such as lid latches) above and below the drawer to prevent damage.

- j. Tie the cable bundle to the side of the rack using hook-and-loop fasteners.
- k. Route the appropriate cables through the cable-management arm attached to the server to which you are connecting the enclosure.

Note: If you have excess cable length after you have routed the cables through the server's cable-management arm, use hook-and-loop fasteners to tie the excess cable bundle to the side of the rack to ensure that they are out of the way.

Preparing your system for operation after connecting an NED24 NVMe expansion drawer to your system

To prepare your system for operation, complete the steps in this procedure.

Procedure

1. If the system has a rear door, close or replace it.
2. Use the HMC to power on the server. To power on the server by using the HMC, see [Power On](http://www.ibm.com/docs/POWER11/p11jau/p11jau_smpoweron.htm) (www.ibm.com/docs/POWER11/p11jau/p11jau_smpoweron.htm).
3. Verify that the system or logical partition recognized the NED24 NVMe expansion drawer.
To verify that the system or logical partition recognizes the disk drive enclosure, see [Verifying the installed part](http://www.ibm.com/docs/POWER11/p11haj/pxhaj_hsmverify.htm) (www.ibm.com/docs/POWER11/p11haj/pxhaj_hsmverify.htm).
4. If the system has logical partitions, you can now assign I/O slots in the expansion drawer that was added to the logical partitions.
For instructions, see [Managing physical I/O devices and slots dynamically](http://www.ibm.com/docs/POWER11/p11hat/p11hat_dlpriopp6.htm) (http://www.ibm.com/docs/POWER11/p11hat/p11hat_dlpriopp6.htm).
5. You have completed the steps to install an NED24 NVMe expansion drawer.
If you were directed here from another procedure, return to that procedure now.

Connector locations for Power11 servers

Learn about connector locations for Power11 servers.

Connector locations for the 9824-22A and 9856-22H systems

Learn about connector locations for the 9824-22A and 9856-22H systems.

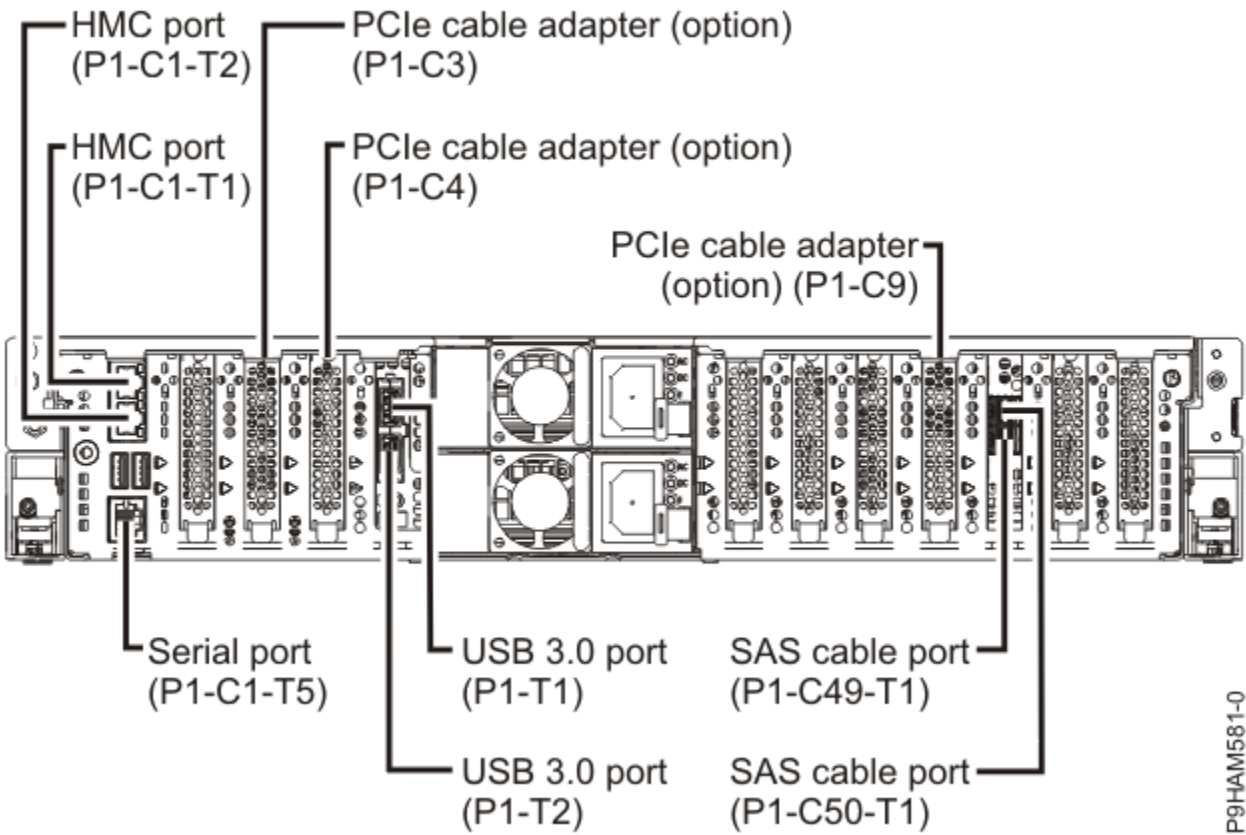


Figure 9. Connector locations for the 9824-22A and 9856-22H systems

Connector locations for the 9824-42A and 9856-42H systems

Learn about connector locations for the 9824-42A and 9856-42H systems.

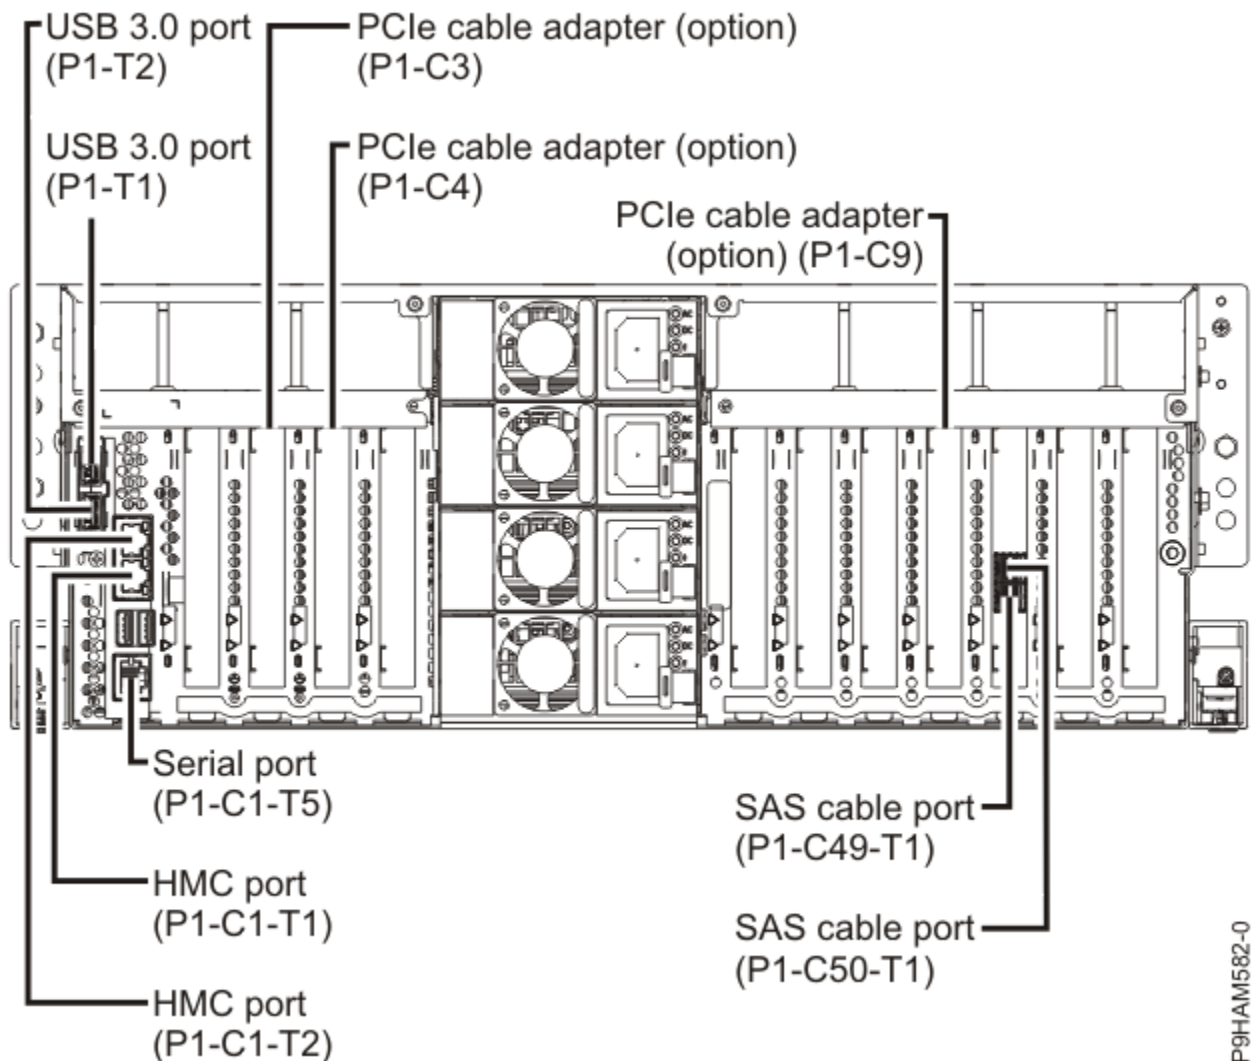


Figure 10. Connector locations for 9824-42A and 9856-42H systems

Connector locations for the 9043-MRU systems

Learn about connector locations for the 9043-MRU systems.

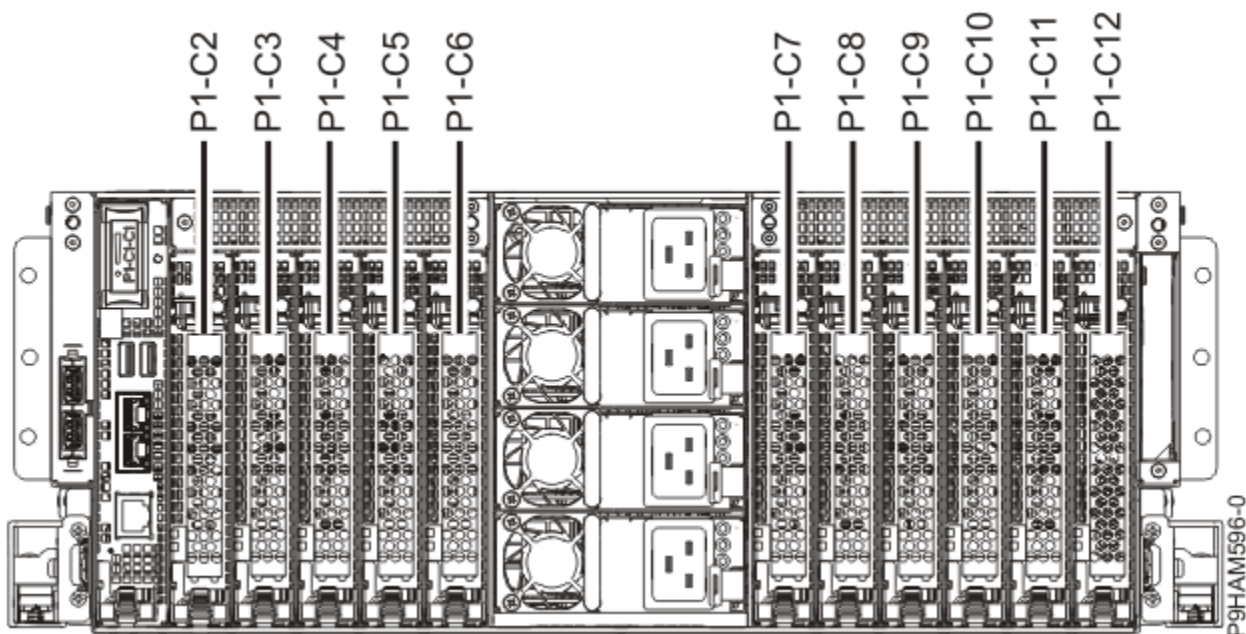


Figure 11. Rear view of the 9043-MRU system

Table 1 on page 17 shows the slots that must be used to install a SAS RAID controller in the 9043-MRU system for controlling the internal SAS disk drive bays.

Table 1. SAS RAID controller slots for the 9043-MRU system	
SAS RAID controller	Slot
PCIe3 SAS RAID quad-port 6 Gb x8, low-profile capable adapter (FC EJ0K; CCIN 57B4)	P1-C12
PCIe3 SAS RAID quad-port 6 Gb x8, low-profile capable adapter (two FC EJ0K; two CCIN 57B4)	P1-C9 and P1-C12
Note: The C9 and C12 slots are used for controlling the internal SAS disk drive bays and have limited availability for attaching a 5887 disk drive enclosure or an ESLS storage enclosure.	

For more information about FC EJ0K, see [PCIe3 RAID SAS quad-port 6 Gb adapter \(FC EJ0K; CCIN 57B4\)](http://www.ibm.com/docs/POWER11/p11hcd/fcej0k.htm) (<http://www.ibm.com/docs/POWER11/p11hcd/fcej0k.htm>).

Table 2 on page 18 shows the slot priorities for the FC EJ0K adapter in the 9043-MRU system.

Table 2. Slot priorities for the FC EJ0K

Feature code	Description	Slot priorities for two processors	Slot priorities for three processors	Slot priorities for four processors	Maximum number of adapters supported
EJ0K	PCIe3 SAS RAID quad-port 6 Gb x8, low-profile capable adapter (FC EJ0K; CCIN 57B4)	12, 9, 11, 8, 10, 7	12, 9, 11, 8, 5, 10, 7, 4	12, 9, 11, 8, 5, 3, 10, 7, 4, 2	6/8/10

Note: The C9 and C12 slots are used for controlling the internal disk drive bays and have limited availability for attaching a 5887 disk drive enclosure or an ESLS storage enclosure.

Table 3 on page 18 shows the cable adapter slots and priorities for the 9043-MRU system. The cable adapter is used to connect your system to the PCIe3 6-slot fanout module in your EMX0 PCIe Gen3 I/O expansion drawer.

Table 3. PCIe3 cable adapter slots and priorities

Feature code	Description	Slot priorities for two processors	Slot priorities for three processors	Slot priorities for four processors	Maximum number of adapters supported
EJ08	PCIe to optical CXP converter adapter (FC EJ08; CCIN 2CE2); Adapter part number: 041T9901	11, 8 10, 7	11, 8, 5, 10, 7, 4	11, 8, 5, 3, 10, 7, 4, 2	4/6/8

Connector locations for the 9080-HEU system

Learn about connector locations for the 9080-HEU system.

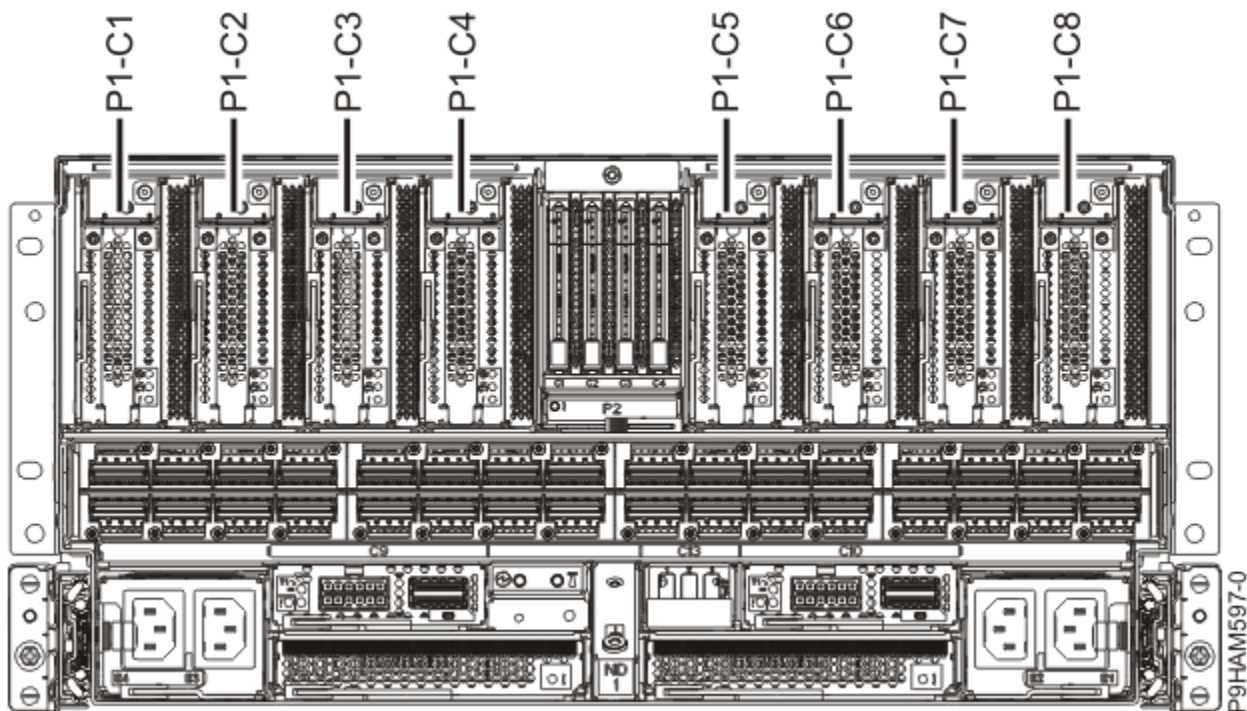


Figure 12. Rear view of the 9080-HEU system

Table 4 on page 19 shows the slot priorities for the FC EJ0M and EJ14 adapters, which support the attachment of SAS hard disk drives (HDDs) and solid-state devices (SSDs) in the 9080-HEU system.

Table 4. Slot priorities for FC EJ0M and FC EJ14 adapters			
Feature code	Description	Slot priorities	Node max
EJ0M	PCIe3 SAS RAID quad-port 6 Gb LP adapter (FC EJ0M and FC EL3B; CCIN 57B4); Adapter part number: 000MH910	2, 4, 6, 3, 5, 7, 1, 8	8
EJ14	PCIe3 12 GB Cache RAID PLUS SAS adapter quad-port 6 Gb x8 (FC EJ14; CCIN 57B1); Adapter part number 01DH742	1, 3, 5, 7, 2, 4, 6, 8	8

Table 5 on page 20 shows the PCIe cable adapter slots and priorities for the 9080-HEU system.

<i>Table 5. PCIe3 cable adapter slots and priorities</i>			
Feature code	Description	Slot priorities	Node max
EJ07	PCIe3 cable adapter for the PCIe3 expansion drawer (FC EJ07; CCIN 6B52); Adapter part number: 00TK704	1, 7, 3, 5, 2, 8, 4, 6	8

Notices

This information was developed for products and services offered in the US.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119
Armonk, NY 10504-1785
US

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product and use of those websites is at your own risk.

IBM may use or distribute any of the information you provide in any way it believes appropriate without incurring any obligation to you.

The performance data and client examples cited are presented for illustrative purposes only. Actual performance results may vary depending on specific configurations and operating conditions.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

Statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

All IBM prices shown are IBM's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to actual people or business enterprises is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of IBM.

IBM has prepared this information for use with the specific machines indicated. IBM makes no representations that it is suitable for any other purpose.

IBM's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check IBM's support websites for updated information and fixes applicable to the system and related software.

Homologation statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

Accessibility features for IBM Power servers

Accessibility features assist users who have a disability, such as restricted mobility or limited vision, to use information technology content successfully.

Overview

The IBM Power servers include the following major accessibility features:

- Keyboard-only operation
- Operations that use a screen reader

The IBM Power servers use the latest W3C Standard, [WAI-ARIA 1.0](http://www.w3.org/TR/wai-aria/) (www.w3.org/TR/wai-aria/), to ensure compliance with [ICT Accessibility 508 Standards and 255 Guidelines](https://www.access-board.gov/ict/) (<https://www.access-board.gov/ict/>) and [Web Content Accessibility Guidelines \(WCAG\) 2.0](http://www.w3.org/TR/WCAG20/) (www.w3.org/TR/WCAG20/). To take advantage of accessibility features, use the latest release of your screen reader and the latest web browser that is supported by the IBM Power servers.

The IBM Power servers online product documentation in IBM Documentation is enabled for accessibility. For more information about IBM's commitment to accessibility, see the IBM accessibility website at [IBM Accessibility](https://www.ibm.com/able/) (<https://www.ibm.com/able/>).

Keyboard navigation

This product uses standard navigation keys.

Interface information

The IBM Power servers user interfaces do not have content that flashes 2 - 55 times per second.

The IBM Power servers web user interface relies on cascading style sheets to render content properly and to provide a usable experience. The application provides an equivalent way for low-vision users to use system display settings, including high-contrast mode. You can control font size by using the device or web browser settings.

The IBM Power servers web user interface includes WAI-ARIA navigational landmarks that you can use to quickly navigate to functional areas in the application.

Vendor software

The IBM Power servers include certain vendor software that is not covered under the IBM license agreement. IBM makes no representation about the accessibility features of these products. Contact the vendor for accessibility information about its products.

Related accessibility information

In addition to standard IBM help desk and support websites, IBM has a TTY telephone service for use by deaf or hard of hearing customers to access sales and support services:

TTY service
800-IBM-3383 (800-426-3383)
(within North America)

For more information about the commitment that IBM has to accessibility, see [IBM Accessibility](http://www.ibm.com/able) (www.ibm.com/able).

Privacy policy considerations

IBM Software products, including software as a service solutions, (“Software Offerings”) may use cookies or other technologies to collect product usage information, to help improve the end user experience, to tailor interactions with the end user, or for other purposes. In many cases no personally identifiable information is collected by the Software Offerings. Some of our Software Offerings can help enable you to collect personally identifiable information. If this Software Offering uses cookies to collect personally identifiable information, specific information about this offering’s use of cookies is set forth below.

This Software Offering does not use cookies or other technologies to collect personally identifiable information.

If the configurations deployed for this Software Offering provide you as the customer the ability to collect personally identifiable information from end users via cookies and other technologies, you should seek your own legal advice about any laws applicable to such data collection, including any requirements for notice and consent.

For more information about the use of various technologies, including cookies, for these purposes, see IBM’s Privacy Policy at <http://www.ibm.com/privacy> and IBM’s Online Privacy Statement at <http://www.ibm.com/privacy/details> the section entitled “Cookies, Web Beacons and Other Technologies” and the “IBM Software Products and Software-as-a-Service Privacy Statement” at <http://www.ibm.com/software/info/product-privacy>.

Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at [Copyright and trademark information](#).

Electronic emission notices

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

Class A Notices

The following Class A statements apply to the IBM servers that contain the Power11 processor and its features unless designated as electromagnetic compatibility (EMC) Class B in the feature information.

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

The following Class A statements apply to the servers.

Canada Notice

CAN ICES-3 (A)/NMB-3(A)

European Community and Morocco Notice

This product is in conformity with the protection requirements of Directive 2014/30/EU of the European Parliament and of the Council on the harmonization of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interference to the reception of radio and television broadcasts.

Warning: This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

Germany Notice

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 / EN 55032 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

EN 55032 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:

"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC Richtlinie 2014/30/EU) für Geräte der Klasse A

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:
International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:
IBM Deutschland GmbH
Technical Relations Europe, Abteilung M456
IBM-Allee 1, 71139 Ehningen, Germany

Tel: +49 (0) 800 225 5426
email: HalloIBM@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 / EN 55032 Klasse A.

Japan Electronics and Information Technology Industries Association (JEITA) Notice

(一社) 電子情報技術産業協会 高調波電流抑制対策実施
要領に基づく定格入力電力値 : IBM Documentationの各製品
の仕様ページ参照

This statement applies to products less than or equal to 20 A per phase.

高調波電流規格 JIS C 61000-3-2 適合品

This statement applies to products greater than 20 A, single phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6 (単相、P F C回路付)
- 換算係数 : 0

This statement applies to products greater than 20 A per phase, three-phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5 (3相、P F C回路付)
- 換算係数 : 0

Japan Voluntary Control Council for Interference (VCCI) Notice

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

V C C I - A

Korea Notice

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

People's Republic of China Notice

警告：在居住环境中，运行此设备可能会造成无线电干扰。

Russia Notice

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать
радиопомехи, для снижения которых необходимы
дополнительные меры

Kingdom of Saudi Arabia Notice

قد يتسبب هذا المنتج في حدوث تداخل إذا تم استخدامه في المناطق السكنية.

ويجب تجنب هذا الاستخدام ما لم يتخذ المستخدم تدابير خاصة لتقليل الانبعاثات الكهرومغناطيسية لمنع التداخل مع استقبال البث الإذاعي والتلفزيوني.

تحذير: هذا الجهاز متوافق مع الفئة أ من SASO CISPR 32

في البيئة السكنية، قد يتسبب هذا الجهاز في حدوث تداخل لاسلكي.

Taiwan Notice

CNS 13438:

警告使用者：
此為甲類資訊技術設備，
於居住環境中使用時，可
能會造成射頻擾動，在此
種情況下，使用者會被要
求採取某些適當的對策。

CNS 15936:

警告：為避免電磁干擾，本產品不應安裝或使用於住宅環境。

IBM Taiwan Contact Information:

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

United States Federal Communications Commission (FCC) Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM-authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:
International Business Machines Corporation
New Orchard Road
Armonk, NY 10504
Contact for FCC compliance information only: fccinfo@us.ibm.com

United Kingdom Notice

This product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interference to the reception of radio and television broadcasts.

Class B Notices

The following Class B statements apply to features designated as electromagnetic compatibility (EMC) Class B in the feature installation information.

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

Canada Notice

CAN ICES-3 (B)/NMB-3(B)

European Community and Morocco Notice

This product is in conformity with the protection requirements of Directive 2014/30/EU of the European Parliament and of the Council on the harmonization of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

German Notice

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse B EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022/ EN 55032 Klasse B ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt

ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC Richtlinie 2014/30/EU) für Geräte der Klasse B

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:
International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:
IBM Deutschland GmbH
Technical Relations Europe, Abteilung M456
IBM-Allee 1, 71139 Ehningen, Germany
Tel: +49 (0) 800 225 5426
email: HalloIBM@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55032 Klasse B

Japan Electronics and Information Technology Industries Association (JEITA) Notice

(一社) 電子情報技術産業協会 高調波電流抑制対策実施
要領に基づく定格入力電力値 : IBM Documentationの各製品
の仕様ページ参照

This statement applies to products less than or equal to 20 A per phase.

高調波電流規格 JIS C 61000-3-2 適合品

This statement applies to products greater than 20 A, single phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6 (単相、P F C回路付)
- 換算係数 : 0

This statement applies to products greater than 20 A per phase, three-phase.

高調波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5 (3相、PFC回路付)
- 換算係数 : 0

Japan Voluntary Control Council for Interference (VCCI) Notice

この装置は、クラス B 機器です。この装置は、住宅環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

Taiwan Notice

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

United States Federal Communications Commission (FCC) Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM-authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM-authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

International Business Machines Corporation
New Orchard Road

Terms and conditions

Permissions for the use of these publications are granted subject to the following terms and conditions.

Applicability: These terms and conditions are in addition to any terms of use for the IBM website.

Personal Use: You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of IBM.

Commercial Use: You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

Rights: Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.



Part Number: 03KG575

(4L) Origin: MX



Printed in Mexico

(1P) P/N: 03KG575

