



Rack and ball-bearing slide rails installation instructions

Important: If you are installing the server with an IBM MAX5 for System x, do not use these instructions. Instead, refer to the rack installation instructions that come with the cabling option kit.

Review the documentation that comes with the rack cabinet for safety and cabling information. Before you install the server in a rack cabinet, review the following guidelines:

- Two or more people are required to install devices 2U or larger in a rack cabinet.
- Make sure that the room air temperature is below 35°C (95°F).
- Do not block any air vents; usually 15 cm (6 in.) of space provides proper airflow.
- Do not leave open spaces above or below an installed server in your rack cabinet. To help prevent damage to server components, always install a blank filler panel to cover the open space and to help ensure proper air circulation.
- Install the server only in a rack cabinet with perforated doors.
- Plan the device installation starting from the bottom of the rack cabinet.
- Install the heaviest device in the bottom of the rack cabinet.
- Do not extend more than one device out of the rack cabinet at the same time.
- Remove the rack doors and side panels to provide easier access during installation.
- Connect the server to a properly grounded outlet.
- Do not overload the power outlet when you install multiple devices in the rack cabinet.
- Install the server in a rack that meets the following requirements:
 - Minimum depth of 70 mm (2.76 in.) between the front mounting flange and inside of the front door.
 - Minimum depth of 157 mm (6.18 in.) between the rear mounting flange and inside of the rear door.
 - Minimum depth of 718 mm (28.27 in.) and maximum depth of 762 mm (30 in.) between the front and rear mounting flanges to support the use of the cable-management arm.



Use safe practices when lifting.



≥18 kg (39.7 lb)



≥32 kg (70.5 lb)



≥55 kg (121.2 lb)



Do not place any object on top of rack-mounted devices.



Statement 37:



DANGER:

When you populate a rack cabinet, adhere to the following guidelines:

- Always lower the leveling pads on the rack cabinet.
- Always install the stabilizer brackets on the rack cabinet.
- Always install the heaviest devices in the bottom of the rack cabinet.
- Always install devices starting from the bottom of the rack cabinet.
- Do not extend multiple devices from the rack cabinet simultaneously, unless the rack-mounting instructions direct you to do so.
Multiple devices extended into the service position can cause your rack cabinet to tip.
- If you are not using the IBM 9308 rack cabinet, securely anchor the rack cabinet to ensure its stability.




Notes:

1. Cage nuts and clip nuts are not required to install the server in a rack cabinet unless you plan to transport the rack cabinet to another location with the server installed.
2. You can install the cable-management arm on either side of the server. These instructions are shown with the cable management arm mounted on the left side. The installation instructions in this document can be reversed if you are installing the cable-management arm on the side of the server not shown.


The following illustrations show the items that you need to install the server in the rack cabinet. If any items are missing or damaged, contact your place of purchase.

Notes:

1. You will need the contents from the slide rail box and the cable management arm box for this installation.
2. You will need the contents from the shipping brackets kit that is included in the miscellaneous parts box that comes with the server and a Philips screwdriver if you plan to transport the rack cabinet to another location with the server installed.
3. The velco strips are located on the cable management arm.

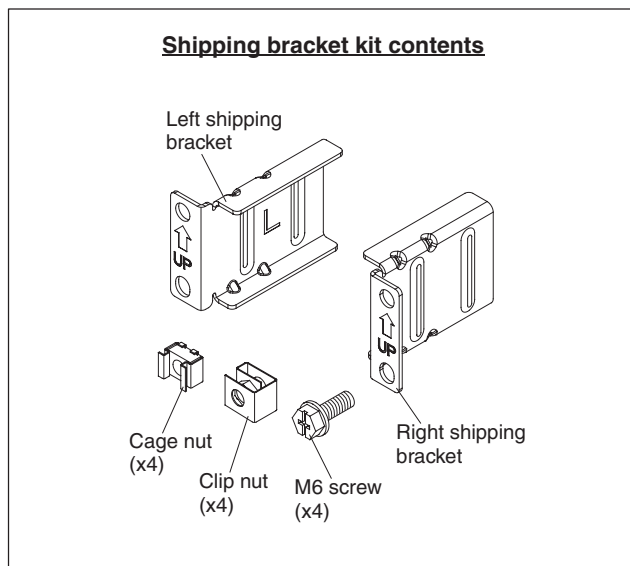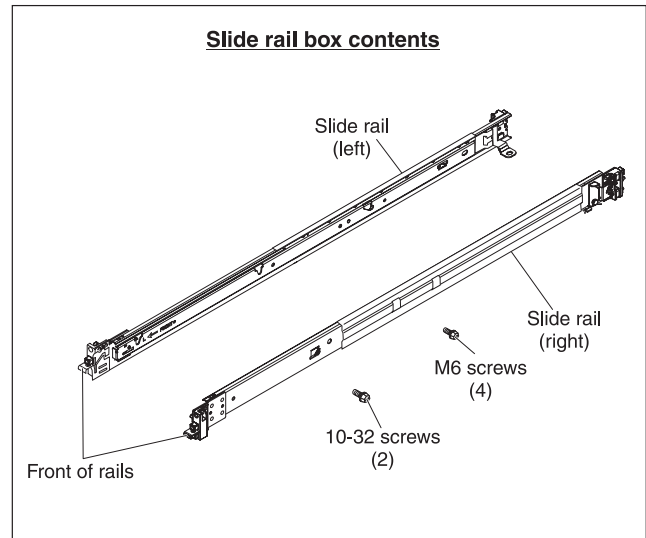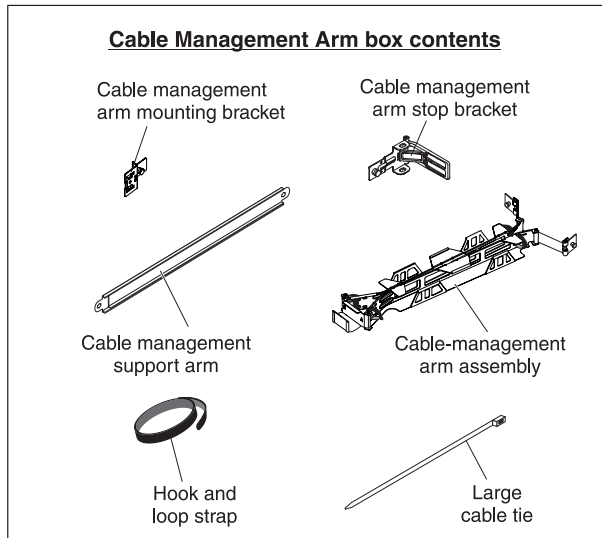


Note: If the slide rails in your rack installation kit came with shipping thumbscrews, remove them before you begin the following installation procedure.

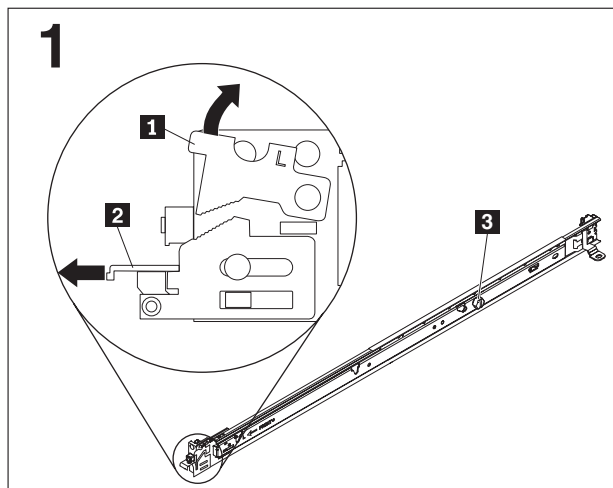

Open the front slide rail latches.

Each slide rail is marked with either an R (right) or an L (left). Select one of the slide rails and push up on the front moveable tab **1**; then, pull out the front latch **2**. If a thumbscrew is installed in the slide rail **3**, remove it.

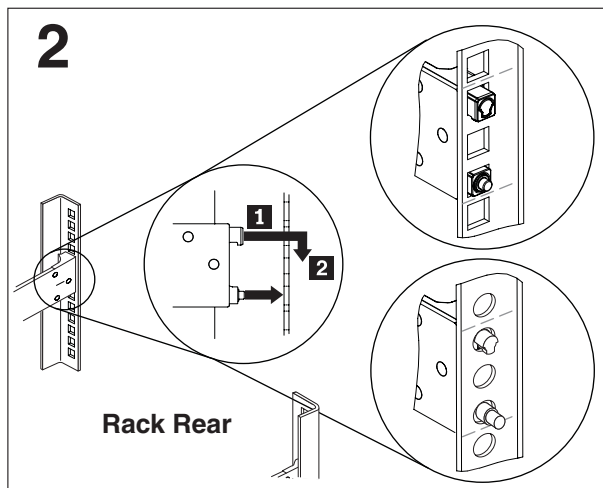


Install the rear end of the slide rails.

Notes:

1. If you are installing the slide rails into a 1U space with devices already installed directly above and below this 1U space, you will need to extend the slide rails to slide the rear of the slide rails into the rear of the rack.
2. When you install a 2U server, be sure to install the slide rails in the bottom U of the 2U area in the rack.


From the front of the rack, line up the three pins on the rear of the slide rail with the three holes in the selected U on the rear of the rack. Push the rails so that the pins go into the holes **1**, and latch down into place **2** until it latches into place.

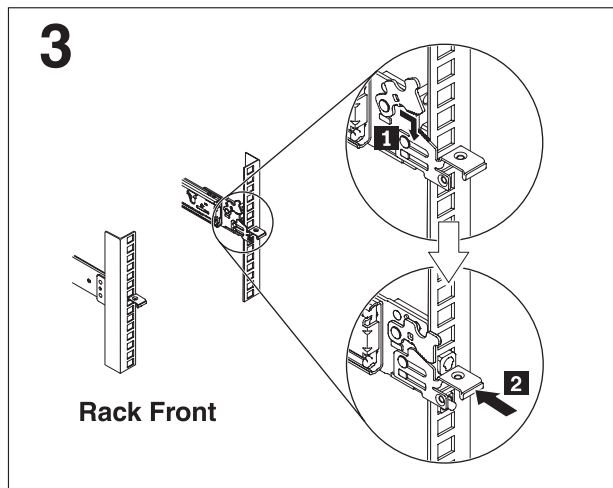

Install the front end of the slide rails.


Pull the slide rail forward and insert the two pins **1** on the front of the rail into the two lower holes in the U on the front of the rack. Drop the rail into place until it clicks. Push the front latch **2** in all the way.

Repeat steps 1 through 3 to install the other rail into the rack. Make sure that each front latch is fully engaged.

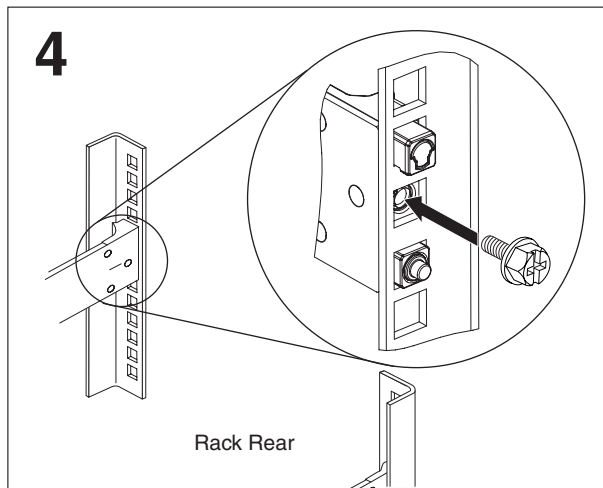

Secure the server slide rails in the rack.


Install a 10-32 screw in the rear of each slide rail.

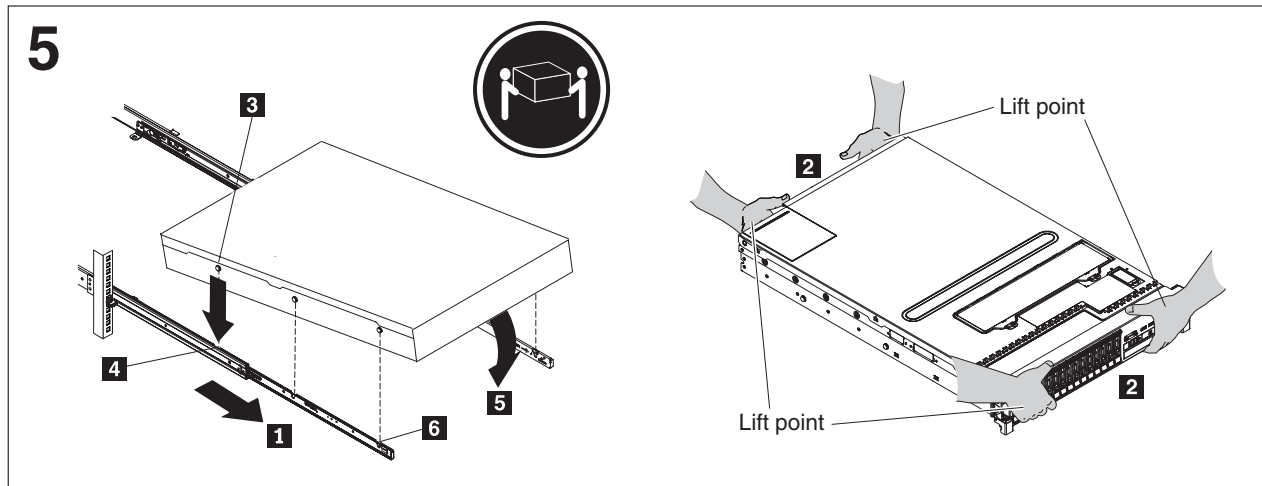

Install the server on the slide rails.


Note: Make sure that you use two people when lifting the server. Their hands should be positioned as illustrated by **2**.

Pull the slide rails forward **1** until they click, two times, into place. Use two people to carefully lift the server **2** and tilt it into position over the slide rails so that the rear nail heads **3** on the server line up with the rear slots **4** on the slide rails. Slide the server down until the rear nail heads slip into the two rear slots, and then slowly lower the front of the server **5** until the other nail heads slip into the other slots on the slide rails. Make sure that the front latch **6** slides over the nail heads.

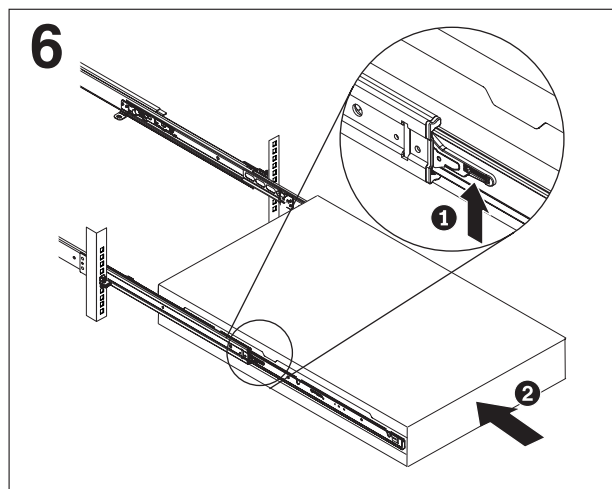

Slide the server into the rack.

Lift the locking levers **1** on the slide rails and push the server **2** all the way into the rack until it clicks into place.

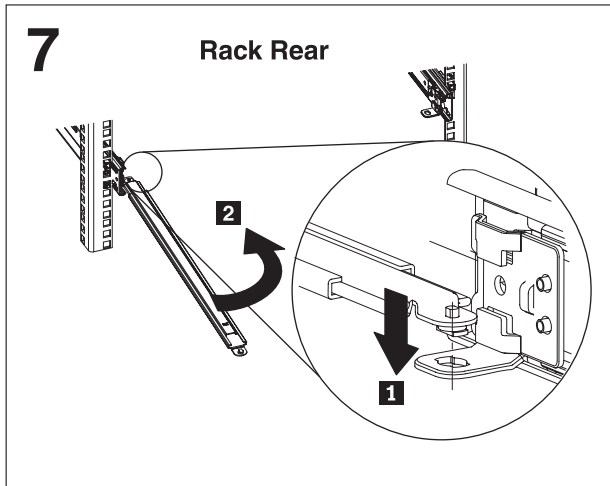


Install the cable management support arm.

Note: Make sure the inner rail of the cable management support arm must be on top in order to work correctly.


The cable-management arm can be installed on either side of the server. This document shows it being installed on the left side. To install the cable-management arm on the right side, follow the instructions and install the hardware on the opposite side.

Connect one end of the support arm **1** to the same slide rail to which you plan to attach the cable-management arm so that you can swing the other end of the support arm **2** toward the rack.

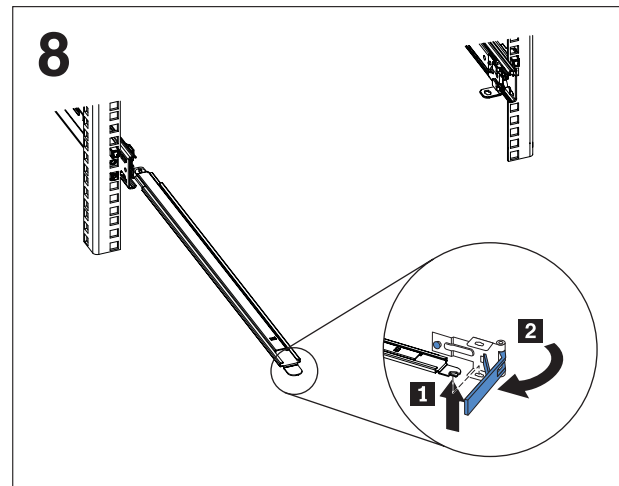


Install the cable management arm stop bracket.

Install the L-shaped cable-management stop bracket **1** on the unattached end of the support arm. Turn the bracket **2** to secure it to the support arm.

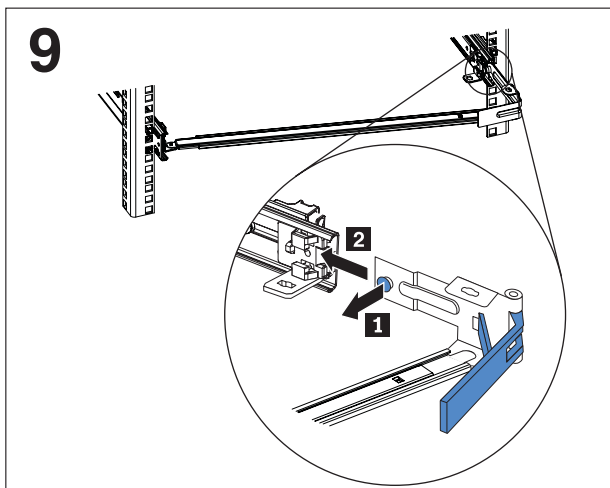


Connect the stop bracket to the slide rail.

To attach the other side of the support arm to the backside of the slide rail, pull the pin out **1**, and then slide the bracket **2** into the slide rail.

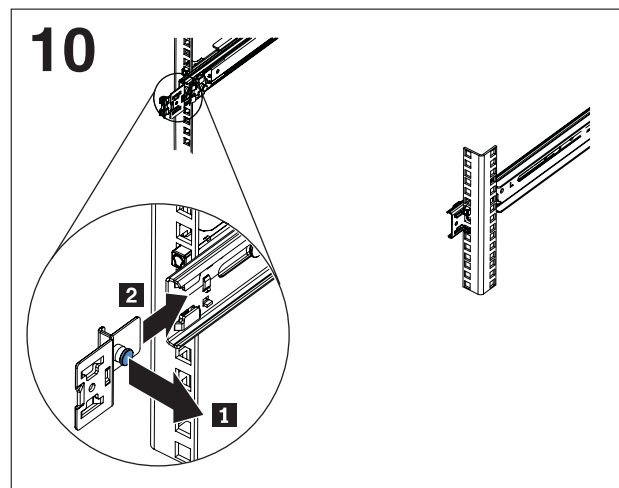


Install the cable management arm mounting bracket.

Pull out the mounting bracket pin **1** and slide the mounting bracket **2** into the slide rail onto which you are installing the cable-management arm. Push the bracket into the slide rail until the spring-loaded pin snaps into place.

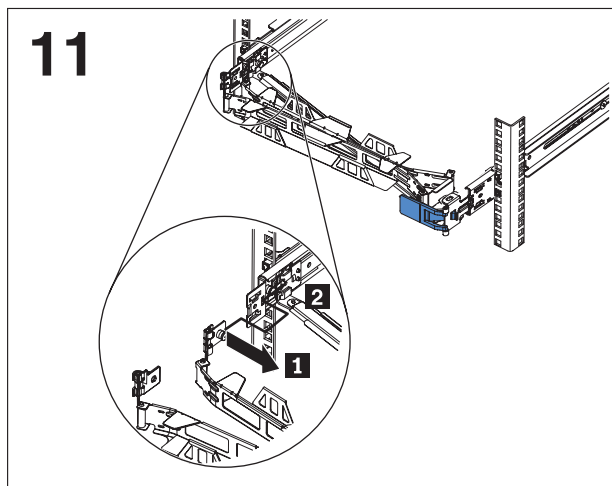


Install the cable management arm.

Place the cable-management arm on the support arm. Pull out the cable-management arm pin **1**, and then slide the cable-management arm tab **2** into the slot on the inside of the slide rail. Push the tab until it snaps into place.

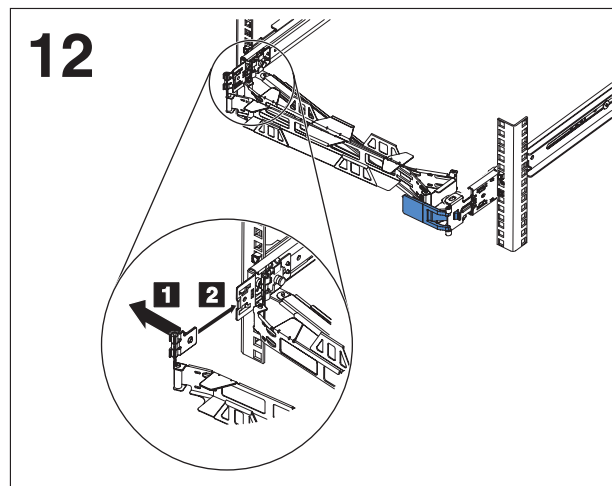

Install the cable management arm.


Pull out the other cable-management arm pin **1**, and then slide that cable management arm tab into the slot **2** on the outside of the slide rail. Push the tab until it snaps into place.

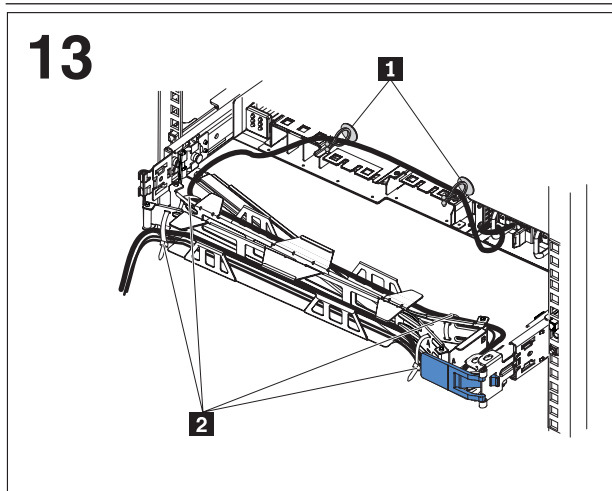

Connect and route the cables.


Attach the power cords and other cables to the rear of the server (including keyboard, monitor, and mouse cables, if required). (To access the rear of the server, lift the cable management arm above the stop bracket and rotate it out of the way.)

Route the cables and power cords on the cable-management arm **1** and secure them with cable ties or hook-and-loop fasteners. **Note:** Allow slack in all cables to avoid tension in the cables as the cable-management arm moves.

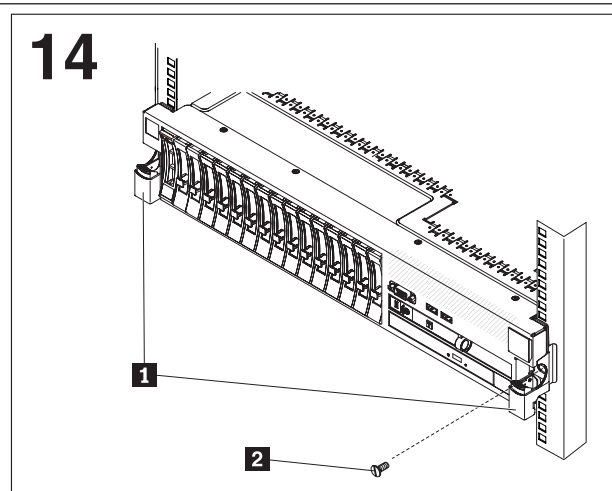

Install the front screws, if necessary.

Slide the server into the rack until it snaps into place. To slide the server out of the rack, press on the release latches **1**. **Note:** When you move the rack cabinet, or if you install the rack cabinet in a vibration-prone area, insert the optional M6 screws **2** in the front of the server.

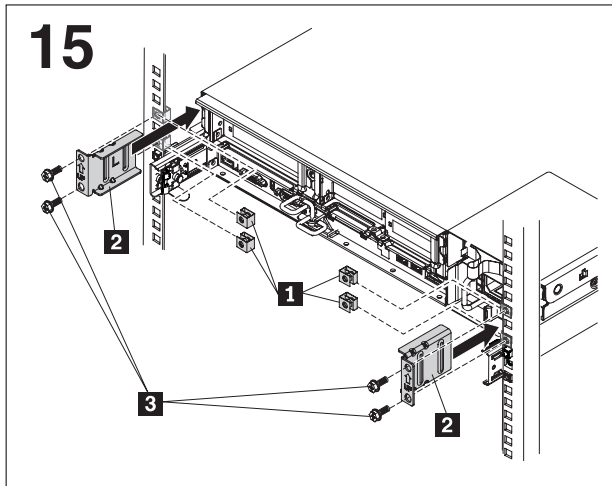

Note: When you slide the server out of the rack cabinet when the shipping brackets are installed, you will need to remove the shipping brackets from the rack before you slide the server back into the rack cabinet. The shipping brackets can impede the server from sliding fully into the rack cabinet. To remove the shipping brackets, remove the screws and remove the shipping brackets from the rack.


Install the shipping brackets on the rear of the rack, if necessary.

Note: If you plan to transport the rack cabinet to another location with the server installed, you must install the shipping brackets.

The cable management arm is not shown in the illustration for clarity.

Install the cage nuts (square hole racks) or the clip nuts (round hole racks) **1** on the rack. Align the shipping bracket **2** with the left side of the rack and attach it to the rack cabinet with two M6 screws **3**. Repeat these steps to attach the shipping bracket to the right side of the rack cabinet.

Removing the server from the rack

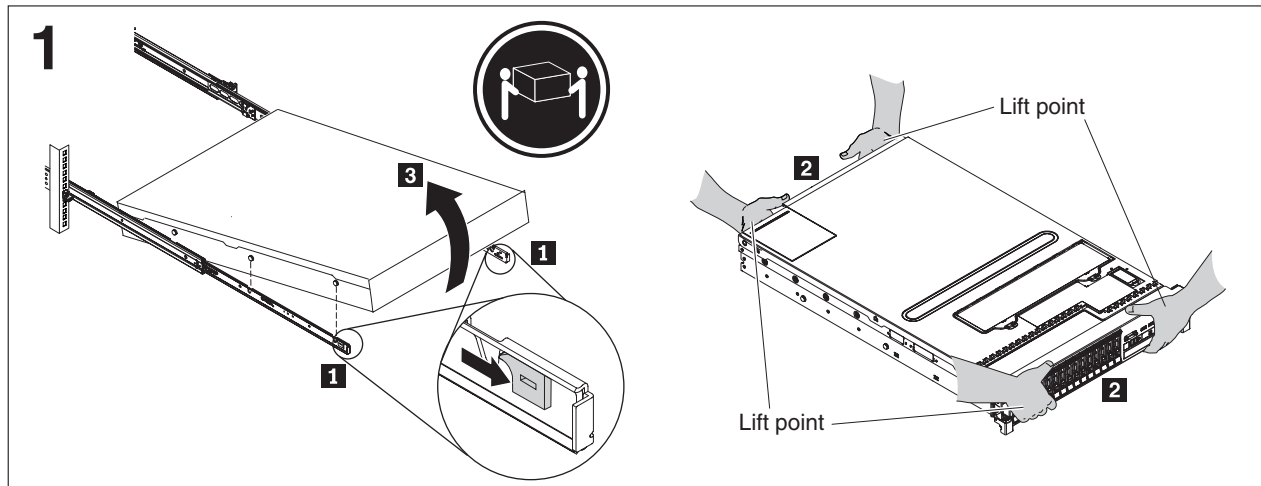


Unlatch and rotate the front of the server.

Note: Make sure that you use two people when lifting the server. Their hands should be positioned as illustrated by **2**.

To remove the server from the rack, disconnect the cables from the rear of the server. Remove the cable management arm by pulling the pins out while sliding the tabs out of the mounting location.

Pull the locking levers **1** forward, then with two people supporting the front and the rear of the server **2**, lift the front of the server up slightly **3** to clear the nailhead from the slot.

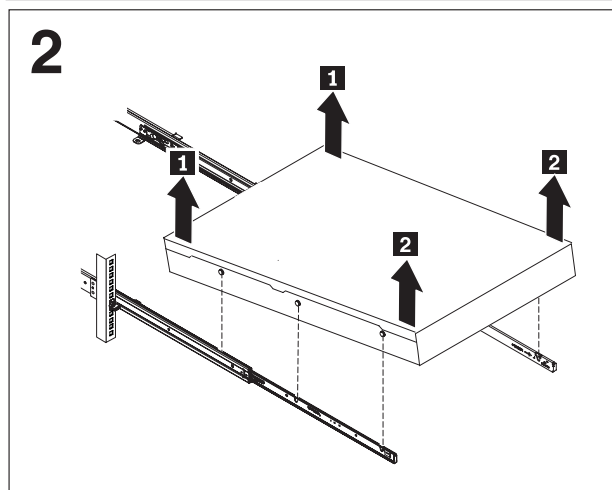


Lift the server off of the slide rails.

Note: Make sure that you use two people when lifting the server. Their hands should be positioned as illustrated by **2** of step 1.


After the front nailheads clear the latches, lift up on the rear **1** of the server to level the server. Lift the server out of the rack **2** and place it on a sturdy surface.

Slide the rails back into the rack.

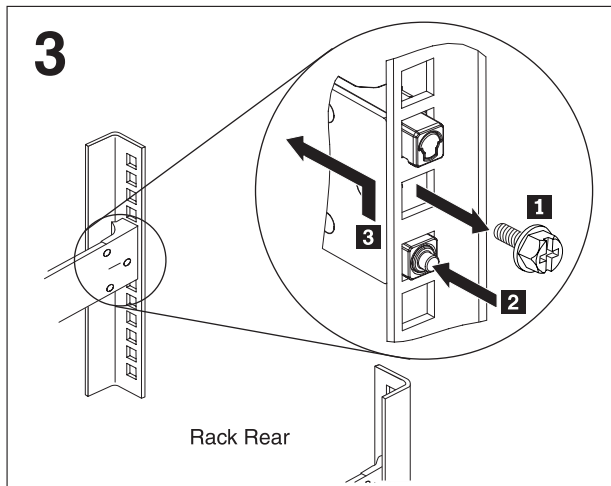

Remove the rear end of the slide rails.

To disengage the slide rails from the rear of the rack, push in the pins **1** and **2** and push back on the rail **3**.

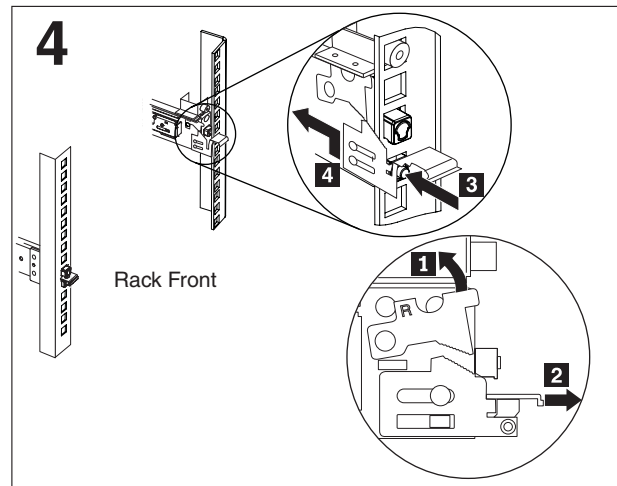

Remove the front end of the slide rails.

To remove the slide rails from the front of the rack, push up the front tab **1** and slide out the front latch **2**. Push in the lower pin **3** and lift up slightly on the front of the slide rail **4**. Remove the slide rail from the rack.

Store this information with your server documentation for future use.

Third Edition (October 2010)

Printed in the U.S.A.

IBM is a trademark of the IBM Corporation in the United States, other countries, or both.

© Copyright IBM Corporation 2010.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 81Y9046

