

IBM System Storage TS2240



# Setup, Operator, and Service Guide

*Machine Type 3580 Model H4V*



IBM System Storage TS2240



# Setup, Operator, and Service Guide

*Machine Type 3580 Model H4V*

**Note!**

Before using this information and the product it supports, be sure to read the general information in "Notices."

To ensure that you have the latest publications, visit the web at <http://www.ibm.com/storage/lto>.

**Released December 2010**

This edition applies to the *IBM System Storage T52240 Tape Drive*, GC27-3902-00, and to the subsequent releases and modifications until otherwise indicated in new editions.

© **Copyright IBM Corporation 2010.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

## Read this First

This product is not intended to be connected directly or indirectly by any means whatsoever to interfaces of public telecommunications Networks.

---

## Accessing Online Technical Support

It is the customer's responsibility to set up this tape drive or library and to ensure that the drive and library have the latest firmware (unless you have purchased a service contract).

For online Technical Support:

1. Visit <http://www.ibm.com>.
2. Click **Get Support**.
3. Click **Customer Support** and follow on-screen instructions.

---

## Registering for Support Notification

Support Notification registration provides email notification when new firmware levels have been updated and are available for download and installation. To register for Support Notification, visit the web at <http://www-304.ibm.com/jct01004c/systems/support/storage/news/05072007SupportNotif.html>.

---

## Sending Us Your Comments

Your feedback is important in helping IBM® provide accurate and useful information. If you have comments or suggestions for improving this publication, send your comments by:

- E-mailing IBM:
    - Internet or IBMLink from US: [starpubs@us.ibm.com](mailto:starpubs@us.ibm.com)
    - IBMLink from Canada: *STARPUBS at TORIBM*
- Include the following information in your e-mail:
- Exact publication title
  - Form number (for example, GA32-1234-02) or part number (located on the back cover of the publication)
  - Page number to which you are referring
- Using the Readers' Comments form at the back of this publication
  - Mailing your comments to:

International Business Machines Corporation  
Information Development  
Department GZW  
9000 South Rita Road  
Tucson, AZ 85744-0001 USA



---

# Contents

<b>Read this First.</b>	<b>iii</b>
Accessing Online Technical Support	iii
Registering for Support Notification	iii
Sending Us Your Comments	iii

<b>Figures</b>	<b>vii</b>
----------------	------------

<b>Tables</b>	<b>ix</b>
---------------	-----------

<b>Safety notices</b>	<b>xi</b>
Performing the Safety Inspection Procedure	xii
Tape drive ac grounding inspection	xii
Class I Laser Product	xiii
Rack Safety	xiii
Power cords	xv
Product Recycling and Disposal	xvi
End of Life (EOL) Plan	xviii

<b>Environmental notices.</b>	<b>xix</b>
-------------------------------	------------

<b>Preface</b>	<b>xxi</b>
----------------	------------

<b>Chapter 1. Introduction</b>	<b>1-1</b>
Drive features	1-1
Front panel of the drive	1-2
Rear panel of the drive	1-2
Drive Performance.	1-3
Cartridge compatibility	1-3
Speed Matching	1-3
Channel Calibration	1-4
Data cartridge capacity scaling.	1-4
Inhibit firmware down-leveling	1-4
SAS interface	1-5
Supported servers and operating systems	1-5
Supported device drivers	1-5
Specifications	1-5
Physical specifications	1-5
Power specifications	1-6
Other specifications	1-6
Environmental specifications	1-6

<b>Chapter 2. Installing the drive</b>	<b>2-1</b>
Avoiding Drive Damage	2-1
Installation overview	2-1
Unpack the Drive	2-1
Verify the Shipment	2-2
Installing a 19-inch rack mount kit (optional)	2-2
Inspect the Power Cord and Outlet	2-3
Position the Tape Drive	2-4
Install the SAS Host Adapter Card (if required)	2-4
Connect the SAS Bus Cable	2-4
Connect Power	2-5
Run drive diagnostics.	2-5
Install Device Drivers.	2-6

Configure the Tape Drive to a Server/Host	2-6
Updating firmware	2-6
Register for <i>Support Notification</i>	2-8

<b>Chapter 3. Operating the Drive</b>	<b>3-1</b>
---------------------------------------	------------

Operating modes	3-1
Single-character Display (SCD).	3-1
Status Lights.	3-2
Unload Button	3-4
Inserting a Tape Cartridge	3-5
Removing a Tape Cartridge.	3-5
Mid-tape Recovery.	3-6
Cleaning the Drive Head	3-6
Cleaning the tape drive	3-6
Diagnostic and Maintenance Functions	3-6
Entering Maintenance Mode	3-8
Exiting Maintenance Mode	3-8
Function Code 0: Maintenance Mode	3-9
Function Code 1: Run Drive Diagnostics	3-9
Function Code 2: Update Drive Firmware from FMR Tape	3-10
Function Code 3: Create FMR Tape	3-11
Function Code 4: Force a Drive Dump.	3-11
Function Code 5: Copy Drive Dump	3-12
Function Code 6: Run Host Interface Wrap Test	3-13
Function Code 7: Run RS-422 Wrap Test	3-14
Function Code 8: Unmake FMR Tape	3-15
Function Code 9: Display Error Code Log	3-15
Function Code A: Clear Error Code Log	3-16
Function Code C: Insert Cartridge into Tape Drive.	3-16
Function Code E: Test Cartridge & Media.	3-16
Function Code F: Write Performance Test.	3-17
Function Code H: Test Head	3-18
Function Code J: Fast Read/Write Test.	3-19
Function Code L: Load/Unload Test	3-20
Function Code P: Post Error Reporting Enabled	3-21
Function Code U: Post Error Reporting Disabled.	3-21

<b>Chapter 4. Using Ultrium Media</b>	<b>4-1</b>
---------------------------------------	------------

Types of Cartridges	4-2
Data Cartridge	4-2
WORM (Write Once, Read Many) Cartridge	4-3
Cleaning Cartridge.	4-4
Cartridge Compatibility	4-4
Bar Code Labels	4-4
Handling Cartridges	4-6
Provide Training	4-7
Provide Proper Acclimation and Environmental Conditions	4-7
Perform a Thorough Inspection	4-7
Handle the Cartridge Carefully	4-8
Ensure Proper Packaging	4-8

Environmental and Shipping Specifications for Tape Cartridges . . . . .	4-10
Disposing of Tape Cartridges . . . . .	4-10
<b>Chapter 5. Troubleshooting . . . . .</b>	<b>5-1</b>
Procedure 1: Determining Firmware Level and Capturing Drive Dump . . . . .	5-1
Procedure 2: Inspecting a Cartridge for Damage . . . . .	5-2
Procedure 3: Checking SAS Host Connections . . . . .	5-3
Procedure 4: Verifying Host Interface Communications . . . . .	5-3
Resolving Problems Reported by the Server . . . . .	5-4
Resolving Media-Related Problems . . . . .	5-4
Pre-Call Checklist . . . . .	5-4
Replacing the Tape Drive . . . . .	5-5
<b>Appendix A. Error Codes and Messages . . . . .</b>	<b>A-1</b>
<b>Appendix B. TapeAlert flags . . . . .</b>	<b>B-1</b>
<b>Appendix C. Ordering Optional Features, Replacement Parts, Power Cords, and Media. . . . .</b>	<b>C-1</b>
<b>Appendix D. Repairing a Cartridge . . . . .</b>	<b>D-1</b>
Repositioning a Leader Pin. . . . .	D-1
Reattaching a Leader Pin . . . . .	D-3
<b>Appendix E. Information for Trained Service Personnel . . . . .</b>	<b>E-1</b>
Removing a Drive from an Enclosure . . . . .	E-1
Removing the Internal Drive . . . . .	E-1
Manually Removing a Tape Cartridge . . . . .	E-4

Before You Begin . . . . .	E-5
Recommended Tools . . . . .	E-5
Beginning Procedure . . . . .	E-5
Tape Spooled off Supply Reel . . . . .	E-6
Tape Pulled from or Broken near Leader Pin . . . . .	E-8
Tape Broken in Mid-tape . . . . .	E-9
Tape Tangled along Tape Path . . . . .	E-10
No Apparent Failure or Damage to Tape . . . . .	E-11
<b>Notices . . . . .</b>	<b>F-1</b>
Trademarks . . . . .	F-2
Electronic emission notices . . . . .	F-3
Federal Communications Commission statement . . . . .	F-3
Industry Canada compliance statement . . . . .	F-3
European Union Electromagnetic Compatibility Directive . . . . .	F-4
People's Republic of China Class A Electronic Emission statement . . . . .	F-5
Taiwan Class A compliance statement . . . . .	F-5
Taiwan contact information . . . . .	F-6
Japan VCCI Council Class A statement . . . . .	F-6
Japan Electronics and Information Technology Industries Association (JEITA) Statement (less than or equal to 20 A per phase) . . . . .	F-6
Japan Electronics and Information Technology Industries Association (JEITA) Statement (greater than 20 A per phase) . . . . .	F-6
Korean Communications Commission (KCC) Class A Statement . . . . .	F-6
Russia Electromagnetic Interference (EMI) Class A Statement . . . . .	F-7
<b>Glossary . . . . .</b>	<b>G-1</b>
<b>Index . . . . .</b>	<b>X-1</b>



## Figures

1.	AC grounding diagram (50 Hz and 60 Hz)	xiii	D-3.	Rewinding the tape into the cartridge	D-3
1-1.	View of the drive.	1-1	D-4.	Leader Pin Reattachment Kit	D-3
1-2.	Front panel element descriptions	1-2	D-5.	Attaching the leader pin attach tool to the cartridge	D-4
1-3.	Drive rear panel element descriptions	1-2	D-6.	Winding the tape out of the cartridge	D-5
2-1.	Front view of shelf attached to rack rails	2-3	D-7.	Removing the C-clip from the leader pin	D-5
2-2.	Example of connecting one SAS device to the server	2-5	D-8.	Attaching the leader pin to the tape	D-7
2-3.	Example of connecting the SAS device to two servers.	2-5	E-1.	Removing the screws that secure the cover and internal drive	E-2
3-1.	Inserting a cartridge into the drive	3-5	E-2.	Removing cables from the internal drive	E-3
4-1.	The IBM LTO Ultrium Data Cartridge	4-1	E-3.	Releasing the drive from the chassis	E-4
4-2.	Ultrium Data Cartridge on the left; WORM Cartridge on the right	4-3	E-4.	Sliding the drive forward	E-4
4-3.	Sample bar code label on the LTO Ultrium 4 Tape Cartridge	4-6	E-5.	Removing the bezel and the cover from the internal drive	E-6
4-4.	Checking for gaps in the seams of a cartridge	4-8	E-6.	Rewinding tape into cartridge	E-7
4-5.	Tape cartridges in a Turtlecase	4-9	E-7.	Drive with cover removed to reveal gear train.	E-8
4-6.	Double-boxing tape cartridges for shipping	4-9	E-8.	Leader Block Assembly (LBA)	E-9
5-1.	Flowchart for analyzing maintenance problems	5-1	E-9.	Rewinding tape into cartridge	E-10
5-2.	RID tag on rear panel	5-6	E-10.	Rewinding tape into cartridge	E-11
C-1.	Types of Receptacles	C-4	E-11.	Rewinding tape into cartridge	E-12
D-1.	Leader pin in the incorrect and correct positions	D-2	E-12.	Drive with cover removed to reveal gear train.	E-13
D-2.	Placing the dislodged leader pin into the correct position	D-2	E-13.	Leader Block Assembly (LBA)	E-13



---

## Tables

1-1.	Performance characteristics . . . . .	1-3	4-3.	Cartridges and VOLSERS . . . . .	4-5
1-2.	Performance Parameters . . . . .	1-4	4-4.	Environment for operating, storing, and shipping LTO media . . . . .	4-10
3-1.	Meaning of Status Lights and Single-character Display (SCD) . . . . .	3-2	A-1.	Error codes on the Single-character Display	A-1
3-2.	Functions that the Unload Button performs	3-4	C-1.	Optional Features . . . . .	C-1
3-3.	Diagnostic and maintenance functions	3-7	C-2.	Replacement Parts . . . . .	C-1
4-1.	Ultrium cartridge compatibility with Ultrium tape drives . . . . .	4-4	C-3.	Power Cords . . . . .	C-2
4-2.	Bar code label requirements for Ultrium tape drives and libraries . . . . .	4-5	C-4.	Media supplies . . . . .	C-4
			C-5.	Authorized suppliers of custom bar code labels . . . . .	C-6



---

## Safety notices

Observe the safety notices when using this product. These safety notices contain danger and caution notices. These notices are sometimes accompanied by symbols that represent the severity of the safety condition.

Most danger or caution notices contain a reference number (Dxxx or Cxxx). Use the reference number to check the translation in the *IBM Systems Safety Notices*, G229-9054 manual.

The sections that follow define each type of safety notice and give examples.

### Danger notice





A danger notice calls attention to a situation that is potentially lethal or extremely hazardous to people. A lightning bolt symbol always accompanies a danger notice to represent a dangerous electrical condition. A sample danger notice follows:



**DANGER:** An electrical outlet that is not correctly wired could place hazardous voltage on metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (D004)

### Caution notice

A caution notice calls attention to a situation that is potentially hazardous to people because of some existing condition, or to a potentially dangerous situation that might develop because of some unsafe practice. A caution notice can be accompanied by one of several symbols:

If the symbol is...	It means...
	A generally hazardous condition not represented by other safety symbols.
	This product contains a Class II laser. Do not stare into the beam. (C029) Laser symbols are always accompanied by the classification of the laser as defined by the U. S. Department of Health and Human Services (for example, Class I, Class II, and so forth).
	A hazardous condition due to mechanical movement in or around the product.
	This part or unit is heavy but has a weight smaller than 18 kg (39.7 lb). Use care when lifting, removing, or installing this part or unit. (C008)

Sample caution notices follow:

**Caution**

The battery is a lithium ion battery. To avoid possible explosion, do not burn. Exchange only with the IBM-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, IBM has a process for the collection of this battery. For information, call 1-800-426-4333. Have the IBM part number for the battery unit available when you call. (C007)

**Caution**

The system contains circuit cards, assemblies, or both that contain lead solder. To avoid the release of lead (Pb) into the environment, do not burn. Discard the circuit card as instructed by local regulations. (C014)

**Caution**

When removing the Modular Refrigeration Unit (MRU), immediately remove any oil residue from the MRU support shelf, floor, and any other area to prevent injuries because of slips or falls. Do not use refrigerant lines or connectors to lift, move, or remove the MRU. Use handholds as instructed by service procedures. (C016)

**Caution**

Do not connect an IBM control unit directly to a public optical network. The customer must use an additional connectivity device between an IBM control unit optical adapter (that is, fibre, ESCON®, FICON®) and an external public network. Use a device such as a patch panel, a router, or a switch. You do not need an additional connectivity device for optical fibre connectivity that does not pass through a public network.

---

## Performing the Safety Inspection Procedure

Before you service the unit, perform the following safety inspection procedure:

1. Stop all activity on the host bus.
2. Turn off the power to the tape drive.
3. Disconnect the host interface cable.
4. Unplug the tape drive's power cord from the electrical outlet.
5. Check the tape drive's power cord for damage, such as a pinched, cut, or frayed cord.
6. Check the tape drive's host interface cable for damage.
7. Check the cover of the tape drive for sharp edges, damage, or alterations that expose its internal parts.
8. Check the cover of the tape drive for proper fit. It should be in place and secure.
9. Check the product label on the tape drive to make sure that it matches the voltage at your outlet.

---

## Tape drive ac grounding inspection

1. Power off the drive.
2. Disconnect all cables.
3. See Figure 1 on page xiii which is provided for reference only. Disconnect the power cord from its source.

4. Inspect the power cable for visible cracks, wear, or damage.

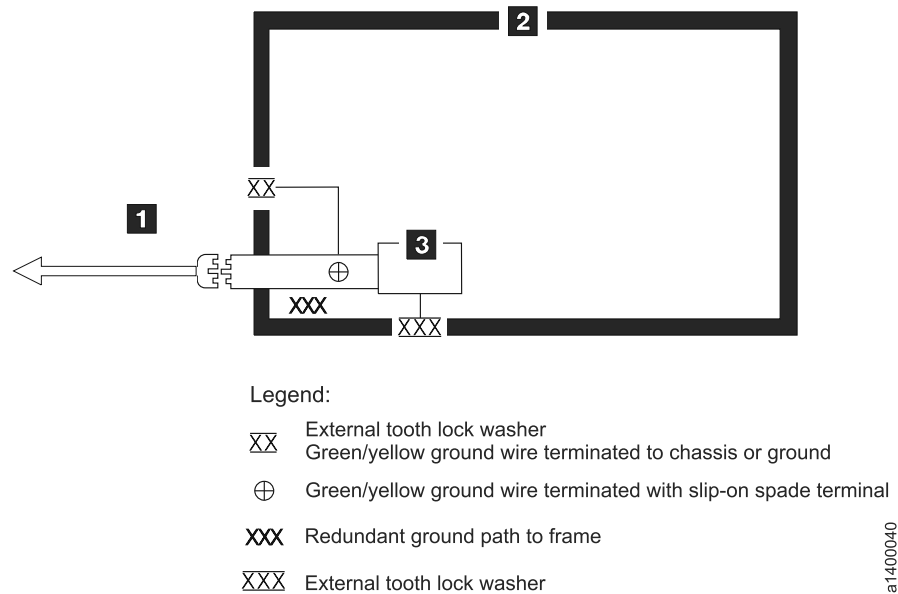


Figure 1. AC grounding diagram (50 Hz and 60 Hz)

---

## Class I Laser Product

The product may contain a laser assembly that complies with the performance standards set by the U.S. Food and Drug Administration for a Class I laser product. Class I laser products do not emit hazardous laser radiation. The product has the necessary protective housing and scanning safeguards to ensure that laser radiation is inaccessible during operation or is within Class I limits. External safety agencies have reviewed the product and have obtained approvals to the latest standards as they apply.

---

## Rack Safety

The following general safety information should be used for all rack mounted devices.

### DANGER

- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack mounted devices are not to be used as a shelf or work space. Do not place any object on top of rack mounted devices.
- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet before servicing any device in the rack cabinet.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.

- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

**CAUTION:**

- **Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack mounted devices.**
- **Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.**
- **Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.**
- *(For sliding drawers)* **Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack may become unstable if you pull out more than one drawer at a time.**
- *(For fixed drawers)* **This drawer is a fixed drawer and should not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack may cause the rack to become unstable or cause the drawer to fall out of the rack.**

*(R001)*



**CAUTION:**

Removing components from the upper positions in the rack cabinet improves rack stability during relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building:

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must do the following:
  - Remove all devices in the 32U position and above.
  - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
  - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 2032 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than ten degrees.
- Once the rack cabinet is in the new location, do the following:
  - Lower the four leveling pads.
  - Install stabilizer brackets on the rack cabinet.
  - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off of the pallet and bolt the rack cabinet to the pallet.

(R002)

---

## Power cords

For your safety, IBM provides a power cord with a grounded attachment plug to use with this IBM product. To avoid electrical shock, always use the power cord and plug with a properly grounded outlet.

IBM power cords used in the United States and Canada are listed by Underwriter's Laboratories (UL) and certified by the Canadian Standards Association (CSA).

For units intended to be operated at 115 volts: Use a UL-listed and CSA-certified cord set consisting of a minimum 18 AWG, Type SVT or SJT, three-conductor cord, a maximum of 15 feet in length and a parallel blade, grounding-type attachment plug rated 15 amperes, 125 volts.

For units intended to be operated at 230 volts (U.S. use): Use a UL-listed and CSA-certified cord set consisting of a minimum 18 AWG, Type SVT or SJT, three-conductor cord, a maximum of 15 feet in length and a tandem blade, grounding-type attachment plug rated 15 amperes, 250 volts.

For units intended to be operated at 230 volts (outside the U.S.): Use a cord set with a grounding-type attachment plug. The cord set should have the appropriate safety approvals for the country in which the equipment will be installed.


IBM power cords for a specific country or region are usually available only in that country or region.

---

## Product Recycling and Disposal

This unit must be recycled or discarded according to applicable local and national regulations. IBM encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. IBM offers a variety of product return programs and services in several countries to assist equipment owners in recycling their IT products. Information on IBM product recycling offerings can be found on IBM's Internet site at <http://www.ibm.com/ibm/environment/products/prp.shtml>.

Esta unidad debe reciclarse o desecharse de acuerdo con lo establecido en la normativa nacional o local aplicable. IBM recomienda a los propietarios de equipos de tecnología de la información (TI) que reciclen responsablemente sus equipos cuando éstos ya no les sean útiles. IBM dispone de una serie de programas y servicios de devolución de productos en varios países, a fin de ayudar a los propietarios de equipos a reciclar sus productos de TI. Se puede encontrar información sobre las ofertas de reciclado de productos de IBM en el sitio web de IBM <http://www.ibm.com/ibm/environment/products/prp.shtml>.

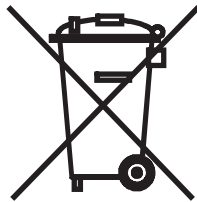

**Notice:** This mark applies only to countries within the European Union (EU) and Norway.

Appliances are labeled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European WEEE Directive, electrical and electronic equipment (EEE) is to be collected separately and to be reused, recycled, or recovered at end of life. Users of EEE with the WEEE marking per Annex IV of the WEEE Directive, as shown above, must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to customers for the return, recycling and recovery of WEEE. Customer participation is important to minimize any potential effects of EEE on the environment and human health due

to the potential presence of hazardous substances in EEE. For proper collection and treatment, contact your local IBM representative.

## Battery Return Policy

This product may contain sealed lead acid, nickel cadmium, nickel metal hydride, lithium, or a lithium ion battery. Consult your user manual or service manual for specific battery information. The battery must be recycled or disposed of properly. Recycling facilities may not be available in your area. For information on disposal of batteries outside the United States, go to <http://www.ibm.com/ibm/environment/products/batteryrecycle.shtml> or contact your local waste disposal facility.

In the United States, IBM has established a return process for reuse, recycling, or proper disposal of used IBM sealed lead acid, nickel cadmium, nickel metal hydride, and other battery packs from IBM Equipment. For information on proper disposal of these batteries, contact IBM at 1-800-426-4333. Please have the IBM part number listed on the battery available prior to your call.


For Taiwan:



Please recycle batteries

廢電池請回收

For the European Union:

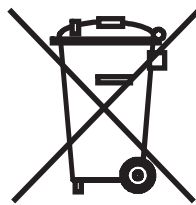

Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC concerning batteries and accumulators and waste batteries and accumulators. The Directive determines the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union. This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European Directive 2006/66/EC, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may also include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury and Cd for cadmium). Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and

accumulators on the environment and human health due to the potential presence of hazardous substances. For proper collection and treatment, contact your local IBM representative.

For California:

Perchlorate Material - special handling may apply. See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate>.

The foregoing notice is provided in accordance with California Code of Regulations Title 22, Division 4.5 Chapter 33. Best Management Practices for Perchlorate Materials. This product/part may include a lithium manganese dioxide battery which contains a perchlorate substance.

### **Flat Panel Display**

The fluorescent lamp or lamps in the liquid crystal display contain mercury. Dispose of it as required by local ordinances and regulations.

### **Monitors**

Connecticut - Please see the web site of the Department of Environmental Protection at <http://www.ct.gov/dep> for information about recycling covered electronic devices in the State of Connecticut, or telephone the Connecticut Department of Environmental Protection at 1-860-424-3000.

Washington - Please see the web site of the Department of Ecology at <http://1800recycle.wa.gov/> for information about recycling covered electronic devices in the State of Washington, or telephone the Washington Department of Ecology at 1-800Recycle.

---

## **End of Life (EOL) Plan**

This product is a purchased unit. Therefore, it is the sole responsibility of the purchaser to dispose of it in accordance with local laws and regulations at the time of disposal.

This product contains recyclable materials. The materials should be recycled where facilities are available and according to local regulations. In some areas IBM provides a product take-back program that ensures proper handling of the product. For more information, contact your IBM representative.

---

## Environmental notices

The environmental notices that apply to this product are provided in the *Environmental Notices and User Guide*, Z125-5823-xx manual. A copy of this manual is located on the publications CD.



---

## Preface

This guide describes how to install and use the IBM TS2240 Tape Drive in the following chapters:

Chapter 1, “Introduction,” on page 1-1 describes the product, discusses supported servers, operating systems, and device drivers, and lists hardware specifications.

Chapter 2, “Installing the drive,” on page 2-1 gives unpacking, set up, and configuration information.

Chapter 3, “Operating the Drive,” on page 3-1 describes the Power Button, Unload Button, and Status lights and explains the function of the Single-character Display. It gives instruction on inserting and removing a tape cartridge, describes methods of updating drive firmware, and explains how to clean the tape drive. It also lists diagnostic and maintenance functions.

Chapter 4, “Using Ultrium Media,” on page 4-1 describes the types of tape cartridges to use and defines the conditions for storing and shipping them. It also describes how to handle the cartridges, how to set a cartridge's write-protect switch, and how to order additional cartridges.

Chapter 5, “Troubleshooting,” on page 5-1 gives tips for solving problems with the drive.

Appendix A, “Error Codes and Messages,” on page A-1 describes the error and informational codes that appear on the single-character display.

Appendix B, “TapeAlert flags,” on page B-1 describes where to find information on TapeAlert messages that are supported and that may aid during problem determination.

Appendix C, “Ordering Optional Features, Replacement Parts, Power Cords, and Media,” on page C-1 lists parts and supplies and provides information about the power cords that are used in different countries or regions.

Appendix D, “Repairing a Cartridge,” on page D-1 describes how to repair a tape cartridge.

Appendix E, “Information for Trained Service Personnel,” on page E-1 gives the procedure for removing a tape cartridge that will not eject from the drive and other servicing procedures.

### Related Publications

- *IBM System Storage TS2230, TS2240 and TS2250 Tape Drive (SAS) Installation Quick Reference*, GC27-2276 illustrates how to install the drive.
- *IBM System Storage LTO Ultrium Tape Drive SCSI Reference*, GA32-0450, gives information about the supported SCSI commands and protocol that govern the behavior of the SCSI interface for LTO drives. The SCSI reference also includes information about the TapeAlert flags that are supported.
- *IBM Tape Device Drivers Installation and User's Guide*, GC27-2130, provides instructions for attaching IBM-supported hardware to open-systems operating

systems. It indicates what devices and levels of operating systems are supported, gives the requirements for adapter cards, and tells how to configure servers to use the device driver with the Ultrium family of devices. You can obtain this reference at the web site <http://www.ibm.com/support/fixcentral>.

- *IBM Tape Device Drivers Programming Reference*, GA32-0566, supplies information to application developers who want to integrate their open-systems applications with IBM-supported Ultrium hardware. The reference contains information about the application programming interfaces (APIs) for each of the various supported operating-system environments. You can obtain this reference at the web site <http://www.ibm.com/support/fixcentral>.
- *IBM Translated Safety Notices*, 96P0851, provides translation of danger and caution notices.



---

## Chapter 1. Introduction

The IBM TS2240 Tape Drive is a high-performance, high-capacity data-storage device that is designed to backup and restore open systems applications. It is the fourth generation in the Ultrium series of products, and is available with a Serial Attached SCSI interface (SAS). This model incorporates the Linear Tape-Open (LTO) IBM Ultrium 4 Half-High Tape Drive.

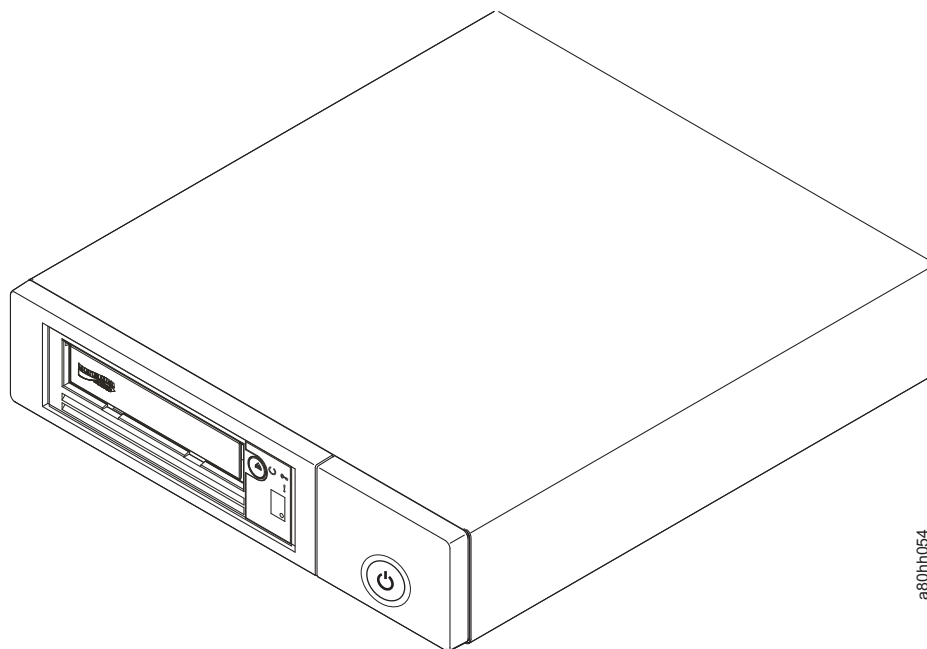


Figure 1-1. View of the drive

---

### Drive features

The drive offers the following features:

- Dual port 6 Gbps Serial Attached Small Computer Systems Interface (SAS)
- Half height form factor
- Native storage capacity of 800 GB per cartridge (1600 GB at 2:1 compression)
- Maximum native data transfer rate of up to 120 MB per second
- Burst data transfer rate of 600 MB per second
- 256 MB read-and-write cache
- Support for encryption on Ultrium 4 tape cartridges
- Single Character Display (SCD) operator panel
- Ready and Fault status lights
- Maintenance Mode functions
- Ethernet Port (drive service use only)

---

## Front panel of the drive

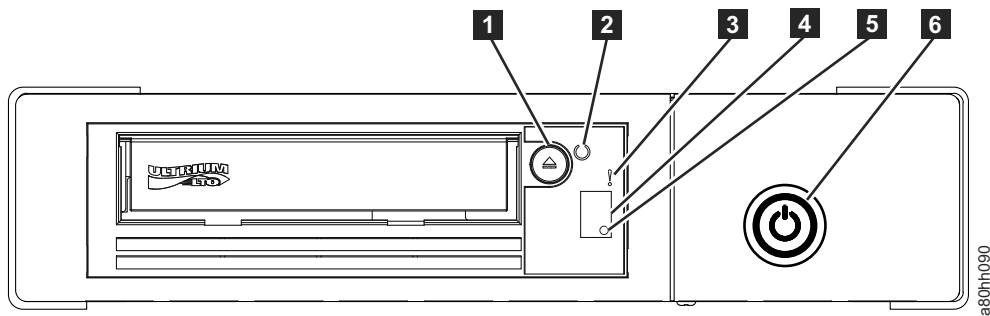


Figure 1-2. Front panel element descriptions

- |          |                         |          |                                |
|----------|-------------------------|----------|--------------------------------|
| <b>1</b> | Cartridge unload button | <b>4</b> | Single Character Display (SCD) |
| <b>2</b> | Ready light (green)     | <b>5</b> | SCD dot                        |
| <b>3</b> | Fault light (amber)     | <b>6</b> | Drive power button             |

---

## Rear panel of the drive

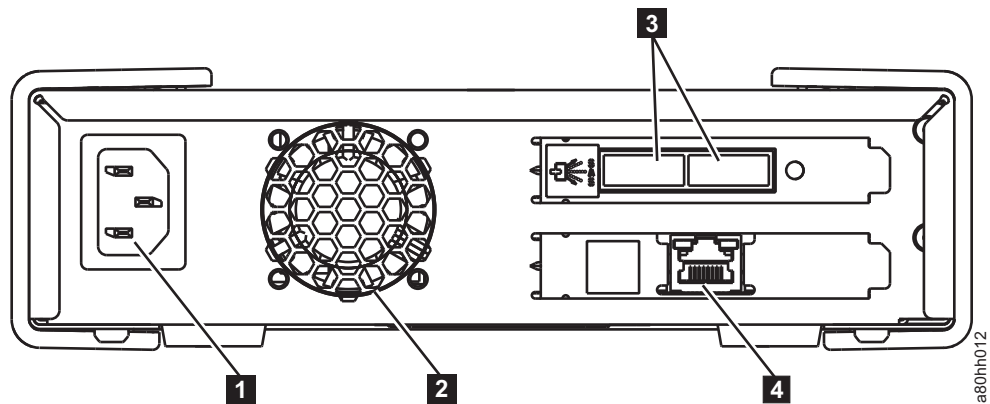


Figure 1-3. Drive rear panel element descriptions

- |          |   |
|----------|---|
| <b>1</b> | Power receptacle                            |
| <b>2</b> | Fan vent                                    |
| <b>3</b> | SAS connectors                              |
| <b>4</b> | Ethernet connector (for drive service only) |

---

## Drive Performance

If you run applications that are highly dependent on tape-processing speed, take advantage of the significant performance improvements provided by this tape drive.

Table 1-1. Performance characteristics

Performance Characteristics	TS2240 Tape Drive
Native data rate	120 MB/s (with Ultrium 4 media)
Maximum sustained data rate (at maximum compression)	550 MB/s
Burst data rate	600MB/s
Nominal load-to-ready time	12 seconds
Nominal unload time	17 seconds
Average rewind time	70 seconds
<b>Note:</b> All sustained data rates are dependent on the capabilities of the interconnect.	

By using the built-in data-compression capability of the tape drive, greater data rates than the native data transfer rate can be achieved. However, the actual throughput is a function of many components, such as the host system processor, disk data rate, block size, data compression ratio, SAS bus capabilities, and system or application software.

---

## Cartridge compatibility

The TS2240 uses the IBM LTO Ultrium 800 GB Data Cartridge and is compatible with the cartridges of its predecessor, the IBM TS2230 Tape Drive. The drive performs the following functions:

- Reads and writes Generation 4 and Generation 3
- Only reads Generation 2 cartridges
- Does not write prior generation format to current generation cartridge.

The drive reads tapes that have been written by other licensed Ultrium 4 drives. It also writes to tapes that can be read by other licensed Ultrium 4 drives.

In addition to using the IBM LTO Ultrium Data Cartridge with up to 800 GB capacity, the drive also offers read/write capability for certified LTO Ultrium tape cartridges.

---

## Speed Matching

To improve system performance, the drive uses a technique called *speed matching* to dynamically adjust its native (uncompressed) data rate to the slower data rate of a server. With speed matching, the drive operates at different speeds when reading or writing the Ultrium 3 or Ultrium 4 cartridge format. Native data rates are as follows in the table below.

Table 1-2. Performance Parameters

	Ultrium Generation Media		
	Generation 4 Media	Generation 3 Media	Generation 2 Media
Speed matching data rates (MB/sec)	120.0	80.0	35.0
	113.1	76.1	33.7
	106.0	72.3	32.3
	99.2	68.4	31.0
	92.3	64.6	29.6
	85.3	60.7	28.3
	78.5	56.8	26.9
	71.4	53.0	25.6
	64.6	59.2	24.2
	57.6	45.3	22.9
	50.7	41.5	21.5
	43.8	37.6	20.2
	36.9	33.8	18.8
	30.5	30.0	17.5

If the server's net (compressed) data rate is between two of the preceding native data rates, the drive calculates the appropriate data rate at which to operate. Speed matching dramatically reduces backhitch, the condition that occurs when a tape stops, reverses, and restarts motion. A backhitch is usually the result of a mismatch between the data rates of the server and the drive.

---

## Channel Calibration

System performance is further optimized by a feature called *channel calibration*, in which the drive automatically customizes each read/write data channel to compensate for variations in such things as the recording channel's transfer function, the media, and characteristics of the drive head.

---

## Data cartridge capacity scaling

The SET CAPACITY SCSI command enables a customer to capacity scale a data cartridge to enable faster random access. As an example, a customer could capacity scale a data cartridge to 20% of its normal length which improves the average access time by almost a factor of 5; however, it also reduces the native capacity of the tape to 160 GB.

---

## Inhibit firmware down-leveling

The drive provides the capability to prevent loading and installing drive microcode via a Field Microcode Replace (FMR tape) if the firmware level contained in the FMR tape is older than the code level already installed. This option is controlled by the host application. No checking will be performed if the firmware level is loaded via the host interface or the library interface.

---

## SAS interface

The drive has a dual port 6 Gbps SAS (Serial Attached SCSI) host interface.

A drive with a SAS interface can be linked directly to controllers. SAS is a performance improvement over traditional SCSI because SAS enables multiple devices (up to 128) of different sizes and types to be connected simultaneously with thinner and longer cables; its full-duplex signal transmission supports 6.0 Gb/s. In addition, SAS drives can be hot-plugged.

SAS drives will auto-negotiate speed. There are no configurable topologies thus no feature switches associated with SAS.

### Physical Characteristics

The drive contains a dual port, SFF-8088 SAS connector. A list of compatible cables is shown in Appendix C, "Ordering Optional Features, Replacement Parts, Power Cords, and Media," on page C-1.

---

## Supported servers and operating systems

To determine the latest supported attachments, visit the web at <http://www.ibm.com/storage/lto>. For specific instructions about attaching the drive, see Chapter 2, "Installing the drive," on page 2-1.

---

## Supported device drivers

Device drivers enable the drive to interact with a variety of servers. To properly install an IBM device driver (if required), refer to the *IBM Tape Device Drivers Installation and User's Guide*. For applications that use other device drivers, see the application's documentation to determine which drivers to use.

IBM maintains the levels of device drivers and driver documentation for the drive on the Internet. You can access this material at the web site: <http://www.ibm.com/support/fixcentral>

**Note:** If you do not have Internet access and you need information about device drivers, contact your Marketing Representative.

**Note:** The device driver for System i<sup>®</sup> servers is included in the OS/400<sup>®</sup> operating system.

---

## Specifications

The sections below give the physical, power, and environmental specifications for the drive. Specifications for tape cartridges are given in "Environmental specifications" on page 1-6.

### Physical specifications

Specification	Measurement
Width	213 mm (8.4 in.)
Length	332 mm (13.1 in.)
Height	58 mm (2.3 in.)

Specification	Measurement
Weight (without a cartridge)	4.3 kg (9.4 lbs.)

## Power specifications

Power Measurements	Drive
AC line current	100 to 240 Vac
Line frequency	50 to 60 Hz, auto-ranging
Line current at 100 Vac	0.48 A
Line current at 240 Vac	0.20 A

## Other specifications

Specification	Measurement
Maximum altitude for operating and storage	3048 m (10,000 ft)
Maximum altitude for shipping	12192 m (40,000 ft)

## Environmental specifications

Specification	Measurement		
	Operating	Storage	Shipping
Temperature	10 to 40°C (50 to 104°F)	-40 to 60°C (-40 to 140°F)	-40 to 60°C (-40 to 140°F)
Relative humidity (noncondensing)	20 to 80%	10 to 90%	10 to 90%
Wet bulb temperature (maximum)	26°C (78.8°F)	26°C (78.8°F)	26°C (78.8°F)

---

## Chapter 2. Installing the drive

This is a customer setup unit. It is the customer's responsibility to install this product.

---

### Avoiding Drive Damage

To avoid static electricity damage when handling the drive, use the following precautions:

- Limit your movement. Movement can cause static electricity to build around you.
- Always handle the drive carefully. Never touch exposed circuitry.
- Prevent others from touching the drive.
- Before unpacking and installing the drive into an enclosure, touch its static-protective packaging to an unpainted metal surface on the enclosure for at least two seconds. This reduces static electricity in the packaging and your body.
- When possible, remove the drive from its static-protective packaging and install it directly into an enclosure without setting it down. When this is not possible, place the drive's packaging on a smooth, level surface and place the drive on the packaging.
- Do not place the drive on the cover of the enclosure or on any other metal surface.

---

### Installation overview

Installation involves the following steps:

1. "Unpack the Drive"
2. "Verify the Shipment" on page 2-2
3. "Installing a 19-inch rack mount kit (optional)" on page 2-2
4. "Inspect the Power Cord and Outlet" on page 2-3
5. "Position the Tape Drive" on page 2-4
6. "Install the SAS Host Adapter Card (if required)" on page 2-4
7. "Connect the SAS Bus Cable" on page 2-4
8. "Connect Power" on page 2-5
9. "Run drive diagnostics" on page 2-5
10. "Install Device Drivers" on page 2-6
11. "Configure the Tape Drive to a Server/Host" on page 2-6
12. "Updating firmware" on page 2-6
13. "Register for *Support Notification*" on page 2-8

---

### Unpack the Drive

Unpack the drive and store the packaging for future moves or shipping.

**Attention:** If you return the unit for service, ship it in its original or equivalent packing material, or the warranty may be invalidated.

1. Inspect the unit for shipping damage. If there is damage, do not install the unit. Report the damage immediately by contacting your place of purchase.
2. Locate the label on the rear panel of the unit with the machine type, model number, and serial number of the unit. Make a note of these numbers and store them in an easily accessible place. Should you need to contact Technical Support, you will be asked for these numbers.

---

## Verify the Shipment

Ensure that the following items are included in the shipment:

- Power cord (For the appropriate cord for your country or region, see Appendix C, "Ordering Optional Features, Replacement Parts, Power Cords, and Media," on page C-1.)
- IBM LTO Ultrium Cleaning Cartridge
- Single-connector SAS wrap tool
- Optional Rack Mount Kit
- The *IBM System Storage TS2240 Tape Drive Quick Reference* (GC27-2276-01)
- The *IBM System Storage TS2240 Tape Drive Setup, Operator and Service Guide* GC27-3902-00 (this guide)
- Documentation CD (includes library documentation, translated safety information, and translated warranty information)
- SAS cables are not part of the ship group. They must be ordered separately.

---

## Installing a 19-inch rack mount kit (optional)

**Important:** Before installing the rack shelf, read the information on rack safety. See "Rack Safety" on page xiii

Before you begin, read these instructions to familiarize yourself with the installation procedure.

### Verify Kit Contents

Qty	Description
1	fixed shelf
4	screws
2	tie wraps
1	PDU line cord
	Installation Instructions (Feature 7003)

### Tools Required

- 7 mm nut driver or 7 mm socket wrench

### Installing a 19-inch rack shelf

1. Decide at what level you want to install the shelf. The drive requires 3 units (EIAs) of rack space (see **2** in Figure 2-1 on page 2-3).

**Note:** All vertical rack measurements are given in rack units (U). One U is equal to 4.45 cm (1.75 in.). The U levels are marked on labels on one front mounting rail and one rear mounting rail.



2. With the sides and back of the shelf facing up, carefully lift the shelf into the rack between the front and back rack rails with the shelf flanges behind the front rack rails.
3. Align the holes in the shelf flange exactly with the holes in the front rack rails.
4. Holding the shelf **1** level, insert a screw through the top hole **3** in each front flange of the shelf. Loosely thread the screws into the front mounting rails.

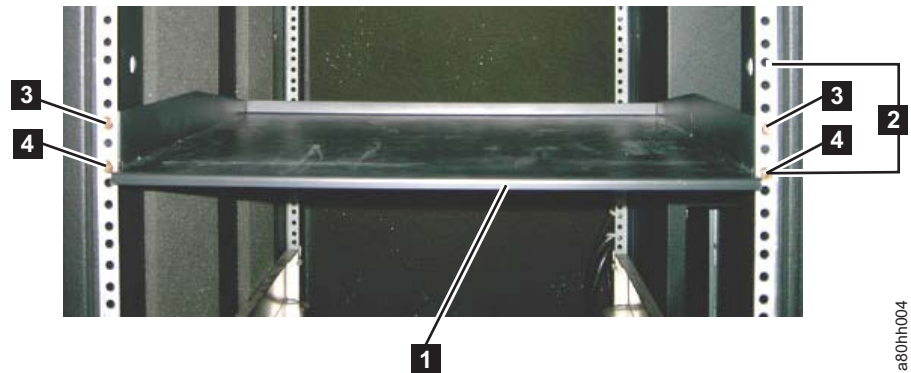


Figure 2-1. Front view of shelf attached to rack rails

5. Check that the shelf is at the same level on the four mounting rails.
6. Insert a screw through the bottom hole **4** in each front flange of the shelf. Loosely thread the screws into the front mounting rails.
7. Tighten all mounting screws using a 7 mm nut driver or a 7 mm socket wrench.
8. Route cables down one of the rear rack rails by threading each tie wrap through a hole in the rail and around the cables. One tie wrap should be located near the rear of the drive; the other should be located farther down the rack rail. Tighten cable ties securely around the cables so the cables cannot be pulled out. Cut off tie wrap excess.

**Attention:** It is important to install cable ties on the cables! This helps secure the equipment on the shelf from being accidentally pushed off or from slipping off the front of the shelf.

The shelf installation is complete. You can now install your equipment on the shelf.

## Removing the shelf from the rack

To remove the shelf from the rack, reverse the steps in the installation procedure.

---

## Inspect the Power Cord and Outlet

1. Inspect the power cord plug to ensure that it matches the power receptacle. If it does not match, see “Power Cords” on page C-1 to determine the appropriate power cord.
2. Ensure that all associated electrical outlets are properly grounded and that the circuit breaker is turned on.



#### DANGER

An electrical outlet that is not correctly wired could place hazardous voltage on metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (D004)

---

## Position the Tape Drive

Position the unit so it is convenient to the server. The only restrictions are the length of the power cord and the length of the cable to the server. Recommended locations are:

- Away from high-traffic areas, especially if the floor is carpeted.
- Out of printer or copy rooms to avoid toner and paper dust. Do not store paper supplies next to any unit.
- Away from moving air, such as doorways, open windows, fans, and air conditioners.
- Off the floor.
- In a horizontal position.
- Where the tape cartridge can be easily inserted.

The unit should not be stacked. Do not place anything on top of the unit.

---

## Install the SAS Host Adapter Card (if required)

If there are no other devices attached to your server, a SAS host adapter card may need to be installed in the server. To install an adapter, refer to the instructions that accompany it, as well as to the section about host adapter card installation in your server's documentation. For a list of supported adapters and required interposers, visit the web at <http://www.ibm.com/storage/ito>.

---

## Connect the SAS Bus Cable

The requirements for SAS bus connections are different than for the SCSI bus. Each tape drive is required to have a dedicated bus to the initiator, referred to as point-to-point connection. SAS architecture does not support multiple tape drives connected to a single host adapter port. The maximum SAS cable length that can be used to connect the host adapter to the tape drive is 5.5 m.

To connect the cable:

1. Ensure the tape drive is powered OFF.
2. Since there are several types of SAS connectors, verify the SAS cable has the correct connectors for the SAS host adapter and for the tape drive.
3. The tape drive has two SAS ports and can be connected to two servers, if desired. See Figure 2-2 on page 2-5 for connection to one server. See Figure 2-3 on page 2-5 for connection to two servers. Then connect the SAS cable(s) to SAS host adapter(s) and to the tape drive as shown.

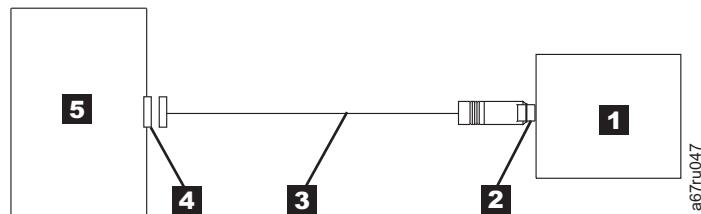


Figure 2-2. Example of connecting one SAS device to the server

- |          |               |          |                       |
|----------|---------------|----------|-----------------------|
| <b>1</b> | Tape drive    | <b>4</b> | SAS host adapter card |
| <b>2</b> | SAS connector | <b>5</b> | Server                |
| <b>3</b> | SAS cable     |          |                       |

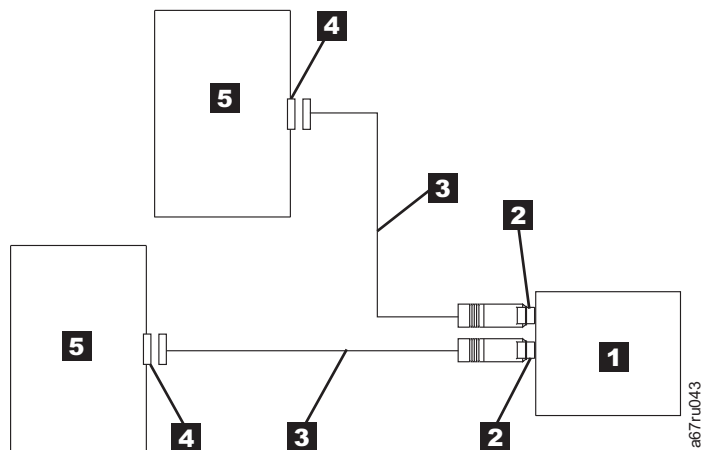


Figure 2-3. Example of connecting the SAS device to two servers

- |          |                |          |                       |
|----------|----------------|----------|-----------------------|
| <b>1</b> | Tape drive     | <b>4</b> | SAS host adapter card |
| <b>2</b> | SAS connectors | <b>5</b> | Servers               |
| <b>3</b> | SAS cables     |          |                       |

4. Ensure the host adapter and the server are configured correctly for a SAS bus operation. Refer to the host adapter and server documentation for instructions.

## Connect Power

1. Plug the power cord into the rear panel (see Figure 1-3 on page 1-2), then plug the other end into a grounded electrical outlet.
2. Power-on the unit by pressing the Power Button. The POST runs, which checks all hardware except the drive head. During the POST, the Single-character Display (SCD) flashes several segmented characters. Each segmented character represents a test performed during the POST. When the POST finishes, the SCD momentarily lights all segmented characters and then goes blank.

## Run drive diagnostics

Run the Standalone Diagnostic (see “Function Code 1: Run Drive Diagnostics” on page 3-9).

**Note:** Optionally, you can use the ITDT tool to verify host to drive communications and to run a device test that will send data across the host

interface. For more information on ITDT, see "ITDT firmware update, dump retrieval and library/drive test tool" on page 2-7.

---

## Install Device Drivers

A device driver is firmware that enables the tape drive to interact with a variety of servers. Refer to "Supported device drivers" on page 1-5 for instructions on downloading the latest device drivers.

If you intend to use the tape drive with a commercial software application, refer to that application's installation instructions to install the device driver and configure the tape drive.

If you do not intend to use the tape drive with a commercial software application, refer to the *IBM Tape Device Drivers Installation and User's Guide*.

---

## Configure the Tape Drive to a Server/Host

1. Power-on the unit.
2. To configure the tape drive, refer to the documentation for your server/host and application software.

---

## Updating firmware

**Attention:** When updating firmware, do not power-off the drive until the update is complete, or the firmware may be lost.

It is the customer's responsibility to ensure that this drive has the latest firmware. Periodically check for updated levels of drive firmware by visiting the web at <http://www.ibm.com/support/fixcentral>. Update drive firmware using:

- The host interface
- The ITDT tool
- A field microcode replacement (FMR) tape cartridge
- The ethernet interface

For instructions on obtaining a new firmware image, visit <http://www.ibm.com/support/fixcentral>. To update the firmware, refer to the following sections.

### Updating Firmware through the Host Interface

When updating drive firmware by using the host interface, the procedure varies depending on whether your server uses an IBM tape device driver or a non-IBM tape device driver (such as a driver from Sun, Hewlett-Packard, or Microsoft).

For instructions about updating firmware from a server that uses an IBM tape device driver, refer to the *IBM Tape Device Drivers Installation and User's Guide*.

To update firmware from a server that uses a non-IBM tape device driver, refer to the documentation for that device driver.

## ITDT firmware update, dump retrieval and library/drive test tool

ITDT is a tool with multiple functional capability and is a very quick, convenient, and efficient method for both drive and library firmware updates. As a note, both drive and library dump retrievals can be performed by the tool as well.

Below are some of the capabilities of this tool:

- Firmware update capability to all IBM LTO Tape Drive and Tape Library products.
- The tool does not require any special device drivers.
- The tool is available for most major platforms (Windows, AIX®, Solaris, Linux, HP-UX, i5/OS).
- The tool is capable of uploading drive and library dump files.
- The tool's primary function is thoroughly testing a drive. However, if the library is online to the server/host where the tool resides, ITDT will communicate with the drive through the library to load and unload a test cartridge thereby exercising some library functions.
- The tool scans the host bus and will find and display for selection all IBM LTO devices. The tool will not display and allow for selection any non-IBM device.
- Each function has "Help" selection which explains the required syntax as well as a brief explanation of the particular function.
- A Readme text file will be posted with the .exe for a thorough explanation of initial tool download information from the web as well as explanation of tool capabilities. Refer to the ITDT Readme text file for information on tool usage. You can also refer to the web at <http://www.ibm.com/support/fixcentral> and look for information about the ITDT site.

## Updating the firmware with an FMR tape cartridge


**Attention:** A SAS drive requires a SAS firmware image. Other types of firmware images will not load on the SAS drive.

### To update the drive's firmware from an FMR tape cartridge:

1. Create an FMR tape (see "Function Code 3: Create FMR Tape" on page 3-11). A single FMR tape can be used to update multiple drives if the drives are the same drive type (e.g. LTO Gen 4) and host interface (e.g. SAS).
2. Update the drive firmware (see "Function Code 2: Update Drive Firmware from FMR Tape" on page 3-10).

After updating the drive firmware, the FMR tape can be used as a data cartridge by using the "Unmake FMR Tape" function (see "Function Code 8: Unmake FMR Tape" on page 3-15).

The SCD presents a series of random characters during the firmware download

and update. The SCD briefly displays , then becomes blank (not lit) when the firmware download and update is complete and there are no errors. An error code will be displayed if a firmware download or update error has been detected. The Ready light and the Fault light flash briefly during the firmware download and update. The Ready light turns On after the firmware download and update are complete.

## Updating the firmware using the Ethernet Port

**Note:** The drive uses a limited version of FTP protocol to communicate on the ethernet interface. It is recommended to use a simple, command line FTP session, such as the DOS command prompt, when communicating with the drive.

1. Obtain the latest drive firmware from the web, as described above.
2. Connect an ethernet patch cable to the drive's ethernet interface and to a computer. In order to meet electromagnetic immunity requirements, a shielded ethernet cable is required.
3. Create an FTP session between the drive and the computer. The drive's IP address: 169.254.0.3
4. At the user prompt, type *guest* and press Enter.
5. At the password prompt, press Enter. No response is needed.
6. Type *bin* to set the communication mode to binary.
7. Type *put <firmware name>* to transfer the firmware to the drive. Replace *<firmware name>* with the actual firmware name. The drive will reset automatically when the transfer is complete and the FTP session will close.
8. After the drive resets, the new firmware will be loaded on the drive.
9. Remove the ethernet patch cable from the drive's ethernet interface and the computer.

---

## Register for *Support Notification*

For information on registering for Support Notification, see “Registering for Support Notification” on page iii.

---

## Chapter 3. Operating the Drive

Operating the drive involves using the following front panel items:

- Single-character Display (SCD)
- SCD Dot
- Ready and Fault status lights
- Unload Button

---

### Operating modes

The drive functions in the following modes:

- Operation mode - functions include reading and writing data, cartridge manipulation, error reporting, and firmware updating using an FMR cartridge. For more information, see “Status Lights” on page 3-2.
- Maintenance mode - functions include drive diagnostic, creation/unmake FMR cartridge, and drive dump manipulation (force to RAM, copy to tape, copy to flash memory, and erase flash). For more information, see “Diagnostic and Maintenance Functions” on page 3-6.

The Unload button is used to switch between modes. For more information, see “Unload Button” on page 3-4.

---

### Single-character Display (SCD)

The SCD (  in “Front panel of the drive” on page 1-2) presents a single-character code for:


- Error conditions and informational messages
- Diagnostic or maintenance functions (while in maintenance mode only)

Appendix A, “Error Codes and Messages,” on page A-1 lists the codes for error conditions and informational messages. If multiple errors occur, the code with the highest priority (represented by the lowest number) displays first. When the error is corrected, the code with the next highest priority displays, and so on until no errors remain.

“Diagnostic and Maintenance Functions” on page 3-6 lists the single-character codes that represent diagnostic or maintenance functions. To initiate a function the unit must be in maintenance mode.

The SCD is blank during normal operation.

#### SCD Dot

If a drive dump is present while the drive is in maintenance mode, a single dot illuminates in the lower right corner of the SCD (  ). To copy the dump, see “Function Code 5: Copy Drive Dump” on page 3-12.

The SCD Dot is on solid if the dump is in RAM memory. The SCD Dot flashes if the dump is in FLASH memory.

The SCD Dot turns off when you obtain a dump (by using ITDT or a SCSI command) or update the drive firmware.

**Note:** If the drive dump is stored in RAM memory (SCD Dot on solid), the dump will be lost when you turn OFF the power or reset the drive.

## Status Lights

The status lights ( **2** , **3** in “Front panel of the drive” on page 1-2) are light-emitting diodes (LEDs) that provides information about the state of the drive. The Ready status light is green and the Fault status light is amber, and (when lit) solid or flashing.

Mode	SCD	Ready LED (green)	Fault LED (amber)
Operational	blank	On	Off
Activity (tape movement) in Operational Mode	blank	Flashing	Off
Maintenance	solid character	Flashing	On
Executing Maintenance Selection	flashing character	Off	On
Error Condition	solid character	Off	Flashing
Power-On / Reset Initialization	random segments	Off	On







Table 3-1 lists the conditions of the status lights and Single-character Display (SCD) and provides an explanation of what each condition means.

*Table 3-1. Meaning of Status Lights and Single-character Display (SCD)*

If the green Ready Status Light is...	and the amber Fault Status Light is...	and the SCD is...	and the SCD Dot is...	Meaning
Off	Off	Off	Off	The drive has no power or is powered off.
On	Off	Off	Off	The drive is powered on and in an idle state.
Flashing (once per second)	Off	Off	Off	The drive is reading from the tape, writing to the tape, rewinding the tape, locating data on the tape, loading the tape, or unloading the tape.
Flashing (once per second)	Off	Off	Off	If the drive contains a cartridge during the power-on cycle, the drive completes POST and slowly rewinds the tape (the process may take up to ten minutes). The light stops blinking and becomes solid when the drive completes the recovery and ejects the cartridge.
Off	On	Displaying an error code or Maintenance Mode Function	On/Off	The drive is displaying error code(s) from the error code log on the SCD. For more information, see “Function Code 9: Display Error Code Log” on page 3-15 and Appendix A, “Error Codes and Messages,” on page A-1.



Table 3-1. Meaning of Status Lights and Single-character Display (SCD) (continued)



If the green Ready Status Light is...	and the amber Fault Status Light is...	and the SCD is...	and the SCD Dot is...	Meaning
On/Off	On/Off	Displaying random segments/ Blank/ displaying random segments/ displaying  /Blank	On/Off	<p>During power on, or a drive reset, the drive front panel will display drive progress as follows:</p> <ol style="list-style-type: none"> <li>1. SCD will display random segments (no Lights ON).</li> <li>2. SCD will display random segments (Ready light ON).</li> <li>3. SCD will display random segments (Fault light ON)</li> <li>4. SCD will display [8] (Ready, Fault, and SCD Dot lights ON).</li> <li>5. SCD will go blank (Ready light ON) after a successful power on or reset.</li> </ol> <p>If an error is detected during the power on or reset, the tape drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1.</p>
Off	On		On/Off	The drive is entering or exiting from maintenance mode. For more information, see "Function Code 0: Maintenance Mode" on page 3-9.
Off	On	Flashing selected function	On/Off	The drive is executing the selected function while in maintenance mode.
Off	Flashing (once per second)	Displaying error code	Off	An error occurred and the drive or media may require service, or it may require cleaning. Note the code on the SCD, then go to Appendix A, "Error Codes and Messages," on page A-1 to determine the action that is required.
Off	Flashing	Displaying 	Off	The drive needs cleaning.
Off	Flashing	Displaying Function Code  or Flashing	Off	The drive is updating firmware. <sup>1</sup> The SCD will display a  if using an FMR cartridge. The SCD will be off if using the host interface. For more information, see "Updating firmware" on page 2-6.
Off	Flashing (twice per second)	Off	Off	The drive detected an error and is performing a firmware recovery. It will reset automatically.
Off	On	Flashing 	Off	The drive is requesting a cartridge to be loaded.
Off	Flashing (twice per second)	Off	On	There is a drive dump in flash memory.

<sup>1</sup> Power should not be removed from the drive until the microcode update is complete. The drive indicates that the update is complete by resetting and performing POST.

## Unload Button

The Unload Button (**1** in “Front panel of the drive” on page 1-2) performs the following functions:

Table 3-2. Functions that the Unload Button performs

Unload Button Function	How to Initiate the Function
Rewind the tape into the cartridge and eject the cartridge from the drive	Press the Unload Button once. The Ready light flashes while the drive is rewinding and unloading. <b>Note:</b> During a rewind and eject operation, the drive does not accept host interface commands.
Place the drive in maintenance mode	Ensure that the drive is unloaded. Then, within two seconds, press the Unload Button three times. The drive is in maintenance mode when the Ready light is flashing and  appears in the SCD. <b>Note:</b> While in maintenance mode, the drive does not accept host interface commands. <b>Note:</b> If you attempt to enter Maintenance Mode with a cartridge in the drive, the drive will rewind and eject the cartridge. Remove the cartridge and repeat the steps for entering Maintenance Mode.
Scroll through the maintenance functions	While in maintenance mode, press the Unload Button once per second to increment the display characters by one. When you reach the character of the diagnostic or maintenance function that you want (see “Diagnostic and Maintenance Functions” on page 3-6), press and hold the Unload Button for three seconds.
Exit maintenance mode	Press the Unload Button once per second to increment the display character until  displays. Then press and hold the Unload Button for three seconds. Maintenance mode is exited when the Ready light is On and the SCD becomes blank.
Force a drive dump (part of the maintenance mode)	<b>Attention:</b> If the drive detects a permanent error and displays an error code, it automatically forces a drive dump (also known as a save of the firmware trace). If you force a drive dump, the existing dump will be overwritten and data will be lost. After you force a drive dump, do not turn off the power to the drive or you may lose the dump data.  Choose one of the following procedures: <ul style="list-style-type: none"> <li>• If the drive is in maintenance mode (Ready light is flashing and Fault light is On for Maintenance mode), refer to “Function Code 4: Force a Drive Dump” on page 3-11.</li> <li>• If the drive is in operating mode (Ready light is On or flashing), press and hold the Unload Button for ten seconds.</li> </ul> If captured dump data exists, the drive places it into a dump area (for information about retrieving the data, see “Procedure 1: Determining Firmware Level and Capturing Drive Dump” on page 5-1).
Reset the drive	Press and hold the Unload Button until the drive begins the reset procedure (Fault light will turn On when reset starts). <b>Note:</b> If a tape cartridge is loaded in the drive the drive will unload the tape. Repeat the “Reset the drive” procedure after the tape is unloaded. The drive saves a dump of the current drive state, then reboots to allow communication. Do not cycle power as this will erase the contents of the dump.

---

## Inserting a Tape Cartridge

To insert a tape cartridge:

1. Ensure that the drive is powered-on.
2. Ensure that the write-protect switch on the tape cartridge is properly set (see “Write-Protect Switch” on page 4-2).
3. Grasp the cartridge so that the write-protect switch faces you (see **1** in Figure 3-1).
4. Slide the cartridge into the tape load compartment.

**Note:**

- a. If the cartridge is already in an ejected position and you want to reinsert it, remove the cartridge then insert it again.
- b. If the cartridge is already loaded and you cycle the power (turn it off, then on), the tape will reload.

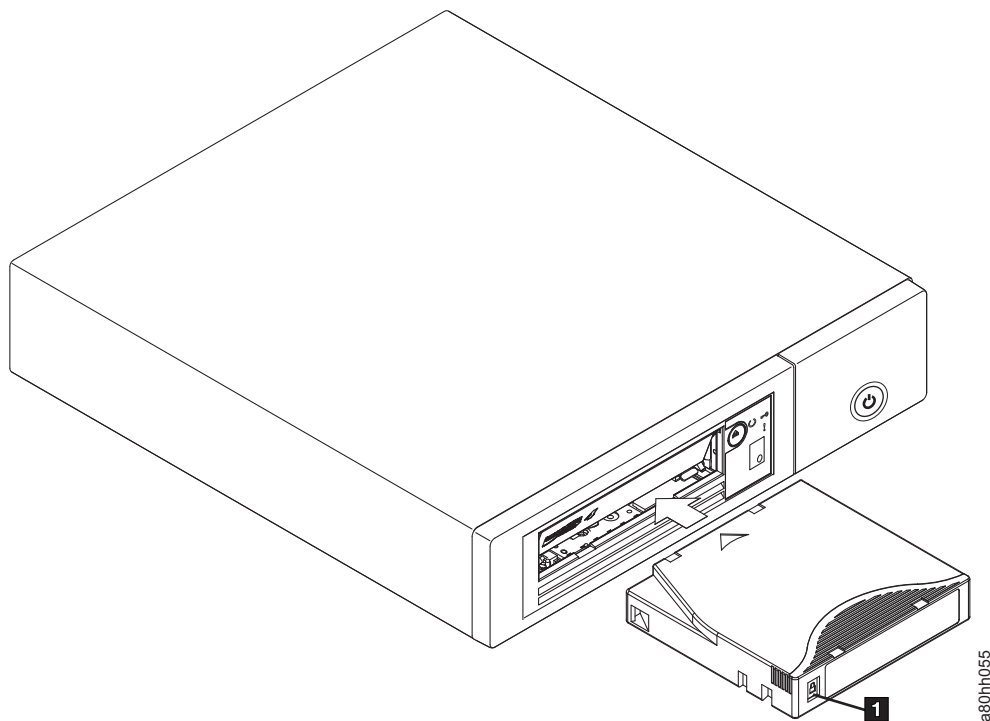


Figure 3-1. Inserting a cartridge into the drive

---

## Removing a Tape Cartridge

To remove a tape cartridge:

1. Ensure that the drive is powered-on.
2. Press the Unload Button. The drive rewinds the tape and partially ejects the cartridge. The Ready light flashes while the tape rewinds, then goes out before the cartridge partially ejects.
3. After the cartridge partially ejects, grasp the cartridge and remove it.

**Important:** Always remove an ejected cartridge before reinserting.

Whenever you unload a tape cartridge, the drive writes any pertinent information to the cartridge memory.

---

## Mid-tape Recovery


If reset occurs while a cartridge is loaded, the drive will slowly rewind the tape and eject the cartridge. If a power cycle occurs while a cartridge is loaded, the drive will slowly rewind the tape. The drive will not automatically eject the cartridge.


The Ready light flashes and the SCD displays random segments during tape movement. Push the Unload Button to eject the cartridge when the Ready light stops flashing.

---

## Cleaning the Drive Head

**Attention:** When cleaning the drive head, use the IBM LTO Ultrium Cleaning Cartridge (see “Media Supplies” on page C-4). You may use another LTO cleaning cartridge, but it may not meet the standards of reliability established by IBM.

Clean the drive head whenever  displays on the Single-character Display and the Fault light is flashing once per second. It is not recommended that you clean the drive head on a periodic basis; only when the drive requests to be cleaned.

**Note:** In Maintenance Mode, a flashing  with the Fault light On, means to insert a cartridge, not clean the drive head.

To clean the head, insert the cleaning cartridge into the tape load compartment (see “Front panel of the drive” on page 1-2). The drive performs the cleaning automatically in less than two minutes then ejects the cartridge. The drive will perform a short Load/Unload Test while ejecting the drive. Wait for the drive to finish before removing the cartridge.

**Note:** The drive will automatically eject an expired cleaning cartridge.

The IBM LTO Ultrium Cleaning Cartridge is valid for 50 uses.

---

## Cleaning the tape drive

Clean the exterior surface of the tape drive with a damp towel. If a liquid all-purpose cleaner is used, apply it to the towel. Do not spray the tape drive.

---

## Diagnostic and Maintenance Functions

The drive can:

- Run diagnostics
- Test write and read functions
- Test a suspect tape cartridge
- Update firmware
- Perform other diagnostic and maintenance functions

The drive must be in maintenance mode to perform these functions.

**Attention:** Maintenance functions cannot be performed concurrently with read or write operations. While in maintenance mode, the tape drive does not accept host interface commands from the server.









Table 3-3 describes each diagnostic and maintenance function that the drive can perform, gives the function code which appears on the Single-character Display (SCD), and directs you to the instructions for performing the function. It is recommended that you use a customer-supplied scratch (blank) data cartridge for diagnostic testing.

**Note:** During normal operation the fan only runs when cooling is required. The fan will be turned on/off during the POST and Run Drive Diagnostics to demonstrate the fan is operational.

*Table 3-3. Diagnostic and maintenance functions*


Function Code	Diagnostic or Maintenance Function	Instructions Location
0	<b>Exit Maintenance Mode:</b> Causes the drive to become available for reading and writing data.	"Function Code 0: Maintenance Mode" on page 3-9
1	<b>Run Drive Diagnostics:</b> Runs tests to determine whether the drive can properly load and unload cartridges, and read and write data.	"Function Code 1: Run Drive Diagnostics" on page 3-9
2	<b>Update Tape Drive Firmware from FMR Tape:</b> Loads updated firmware from a field microcode replacement (FMR) tape.	"Function Code 2: Update Drive Firmware from FMR Tape" on page 3-10
3	<b>Create FMR Tape:</b> Copies its field microcode replacement (FMR) data to a customer-supplied scratch (blank) data cartridge.	"Function Code 3: Create FMR Tape" on page 3-11
4	<b>Force a Drive Dump:</b> Performs a dump of data (also known as saving a microcode trace).	"Function Code 4: Force a Drive Dump" on page 3-11
5	<b>Copy Drive Dump:</b> Copies data from a drive dump (captured by using Function Code 4) to the beginning of a customer-supplied scratch (blank) data cartridge, copies a drive dump to flash memory, or erases a dump from flash memory.	"Function Code 5: Copy Drive Dump" on page 3-12
6	<b>Run Host Interface Wrap Test:</b> Performs a check of the circuitry from and to the connector.	"Function Code 6: Run Host Interface Wrap Test" on page 3-13
7	<b>Run RS-422 Wrap Test:</b> This test causes the drive to perform a check of the circuitry and connector for the RS-422 interface.	"Function Code 7: Run RS-422 Wrap Test" on page 3-14
8	<b>Unmake FMR Tape:</b> Erases the FMR data on a customer-supplied scratch (blank) data cartridge and rewrite the cartridge memory on the tape. This turns the cartridge into a valid customer-supplied scratch data cartridge.	"Function Code 8: Unmake FMR Tape" on page 3-15
9	<b>Display Error Code Log:</b> Displays the last 10 error codes, one at a time (the codes are ordered; the most recent is presented first and the oldest (tenth) is presented last).	"Function Code 9: Display Error Code Log" on page 3-15
A	<b>Clear Error Code Log:</b> Erases the contents of the error code log.	"Function Code A: Clear Error Code Log" on page 3-16


Table 3-3. Diagnostic and maintenance functions (continued)

Function Code	Diagnostic or Maintenance Function	Instructions Location
	<b>Insert Cartridge into Tape Drive:</b> This function cannot be selected by itself, but is a part of other maintenance functions (such as Run Tape Drive Diagnostics and Create FMR Tape) that require a tape cartridge to be loaded.	"Function Code C: Insert Cartridge into Tape Drive" on page 3-16
	<b>Test Cartridge &amp; Media:</b> Performs tests to ensure that a suspect cartridge and its magnetic tape are acceptable.	"Function Code E: Test Cartridge & Media" on page 3-16
	<b>Write Performance Test:</b> Performs tests to ensure that the drive can read from and write to tape.	"Function Code F: Write Performance Test" on page 3-17
	<b>Test Head:</b> Performs tests to ensure that the tape drive's head and tape-carriage mechanics are working correctly.	"Function Code H: Test Head" on page 3-18
	<b>Fast Read/Write Test:</b> Performs tests to ensure that the drive can read from and write to tape.	"Function Code J: Fast Read/Write Test" on page 3-19
	<b>Load/Unload Test:</b> Tests the drive's ability to load and unload a tape cartridge.	"Function Code L: Load/Unload Test" on page 3-20
	<b>Enable Post Error Reporting:</b> When selected, deferred-check conditions are reported to the host.	"Function Code P: Post Error Reporting Enabled" on page 3-21
	<b>Disable Post Error Reporting:</b> When selected, deferred-check conditions are NOT reported to the host.	"Function Code U: Post Error Reporting Disabled" on page 3-21

## Entering Maintenance Mode

The drive must be in maintenance mode to run drive diagnostics or maintenance functions. To place the unit in maintenance mode:


1. Make sure that no cartridge is in the drive.
2. Press the Unload Button three times within two seconds.  appears in the Single-character Display (SCD) the Ready light is flashing, and the Fault light turns On.

**Note:** If a cartridge is in the tape drive, it will eject the first time that you press the Unload Button and the drive will not be placed in maintenance mode. To continue placing the drive in maintenance mode, perform the preceding step. While in Maintenance Mode, the drive will not accept a cartridge unless the drive requests it. The SCD will display a flashing  to indicate a cartridge needs to be inserted.


Maintenance functions cannot be performed concurrently with read or write operations. While in maintenance mode, the drive does not receive host interface commands from the server.

## Exiting Maintenance Mode

The drive must be in maintenance mode to run drive diagnostics or maintenance functions. To exit maintenance mode:

1. Press the Unload Button once per second to increment the display character until  displays. Press and hold the Unload Button for 3 or more seconds

then release the button to take the drive out of maintenance mode. If no error

is detected,  temporarily appears in the SCD, then goes blank. The drive then exits maintenance mode and the Ready light will turn On.

2. If an error is detected, the SCD shows an error code but still exits maintenance mode. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1. To clear the error, turn the power off, then on again.
3. Press and hold the Unload button until the drive resets.

**Note:** The drive also exits maintenance mode automatically after it completes a maintenance function or after 10 minutes if no action has occurred.

## Function Code 0: Maintenance Mode

Function Code  makes the drive available for running drive diagnostics or maintenance functions.


1. Place the drive in Maintenance Mode. For instructions, see "Entering Maintenance Mode" on page 3-8.
2. To exit Maintenance Mode, see "Exiting Maintenance Mode" on page 3-8.

The drive exits Maintenance Mode automatically after it completes a maintenance function or after 10 minutes if no action has occurred.

## Function Code 1: Run Drive Diagnostics

Approximate Run Time = 5 minutes per loop



Total Number of Loops = 1


Function Code  runs tests that determine whether the drive can properly load and unload cartridges and read and write data.

Record the time it takes for the test to complete. Compare the recorded time with the "Approximate Run Time" above. If the test runs successfully but the execution time is significantly longer than the "Approximate Run Time," run "Function Code F: Write Performance Test" on page 3-17. If the Write Performance Test fails, replace the media and exit maintenance mode.

**Attention:** For this test, insert only a scratch (blank) data cartridge or a cartridge that may be overwritten. During the test, the drive overwrites the data on the cartridge.

**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error






code  or  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error

code  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.

### Steps to Execute Run Drive Diagnostics:


1. Place the drive in Maintenance Mode. For instructions, see "Entering Maintenance Mode" on page 3-8.






2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select function . Wait for the SCD to change to a flashing .
4. Insert a scratch (blank) data cartridge. The SCD changes to a flashing  and the test begins. During the test, the drive will Unload/Load the cartridge. Do not remove the cartridge during the test.
  - If no error is detected, when the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
  - If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Error Codes and Messages. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code 2: Update Drive Firmware from FMR Tape


**Attention:** When updating drive firmware, do not power-off the drive until the update is complete or the firmware may be lost.

Function Code  loads drive firmware from a field microcode replacement (FMR) tape. The FMR tape must have been created from a LTO 4 tape drive with the same host interface (e.g. SAS, Fibre Channel).

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing .
4. Insert the FMR tape cartridge. The SCD changes to a flashing . The Fault light will be ON solid during tape movement and flashing while code is being loaded. The Ready light will be OFF. The tape drive loads the updated firmware from the FMR tape into its erasable programmable read-only memory (EPROM) area.
  - If the update completes successfully, the tape drive rewinds and unloads the FMR tape, resets itself, and is ready to use the new firmware. The drive automatically reboots.
  - If the update fails, the tape drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, “Error Codes and Messages,” on page A-1. Push the Unload Button to eject the cartridge. The drive exits Maintenance Mode after the cartridge is removed. Contact IBM Technical Support for problem determination or machine replacement.









## Function Code 3: Create FMR Tape

Function Code  copies the drive's field microcode replacement (FMR) data to a scratch data cartridge. The resulting FMR tape can only be used to update the firmware on other LTO Gen 4 tape drives with the same host interface (SAS, or Fibre Channel).


**Attention:** For this function, insert only a scratch (blank) data cartridge or a cartridge that may be overwritten. During the test, the drive overwrites the data on the cartridge.



**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error

code  or  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing .
4. Insert a scratch (blank) data cartridge that is not write protected (or the tape drive exits maintenance mode). If the cartridge is not inserted within 60 seconds, the drive will exit Maintenance Mode. The SCD changes to a flashing . The tape drive copies the FMR data to the scratch data cartridge.
  - If the tape drive creates the FMR tape successfully, it rewinds and unloads the new tape, exits Maintenance Mode, and the tape is ready to use.
  - If the tape drive fails to create the FMR tape, it displays an error code. To determine the error, see Appendix A, “Error Codes and Messages,” on page A-1. The tape drive then unloads the FMR tape, and exits Maintenance Mode after the cartridge is removed.

## Function Code 4: Force a Drive Dump

Function Code  performs a dump of data collected by the drive (this process is also known as saving a microcode trace).

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The drive performs the dump. The SCD shows , then

goes blank, and the drive exits Maintenance Mode. To access the contents of the dump, see "Function Code 5: Copy Drive Dump."

**Note:** You can also force a drive dump when the tape drive is in normal operating mode. Simply press and hold the Unload Button for ten seconds. This causes the drive to reboot.

## Function Code 5: Copy Drive Dump

Function Code  $\boxed{5}$  copies data from a drive dump (captured in Function Code 4) to the beginning of a scratch (blank) data cartridge.

**Attention:** For this function, insert only a scratch (blank) data cartridge or a cartridge that may be overwritten. During the test, the drive overwrites the data on the cartridge.

**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error

code  $\boxed{U}$  or  $\boxed{7}$  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code  $\boxed{P}$  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.

1. Place the drive in Maintenance Mode. (For instructions, see "Entering Maintenance Mode" on page 3-8.) Index through the Maintenance Mode

options until  $\boxed{5}$  is displayed on the SCD. Press and hold the Unload Button for three seconds to select Function Code 5. After selecting Function Code 5 the

SCD will display option  $\boxed{5} - \boxed{1}$ . Press the Unload Button within 5 seconds to make a different selection. If no other selection is made, the drive will perform option  $\boxed{5} - \boxed{1}$ .

2. Press the Unload Button once per second to cycle through the following functions:

- $\boxed{5} - \boxed{1}$  : copy dump to tape; clears RAM dump
- $\boxed{5} - \boxed{2}$  : copy dump to flash memory; clears RAM dump
- $\boxed{5} - \boxed{3}$  : erase flash memory
- $\boxed{5} - \boxed{0}$  : no function

If you cycle past the desired code, press the Unload Button once per second until the code reappears.

3. Press and hold the Unload Button for three or more seconds, then release it to select one of the above functions.

4. If you selected  $\boxed{5} - \boxed{0}$  the drive will exit Maintenance Mode. If you selected  $\boxed{5} - \boxed{2}$  or  $\boxed{5} - \boxed{3}$  the SCD will change to a flashing  $\boxed{5}$  while the procedure is being performed. After the procedure is completed the drive will exit

Maintenance Mode. If you selected **5** - **1** the SCD will change to a flashing **5** indicating that a data cartridge is to be inserted.

5. Insert a scratch (blank) data cartridge within 60 seconds, or the drive will exit Maintenance Mode. Ensure the scratch cartridge is not write protected (or the tape drive exits maintenance mode). The SCD flashes the selection number while performing the function.
  - If the copy operation completes successfully, the tape drive rewinds and unloads the tape, and exits Maintenance Mode after the cartridge is removed.
  - If the copy operation fails, an error code appears in the SCD. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1. The tape drive unloads the tape cartridge and exits Maintenance Mode after the cartridge is removed.



## Function Code 6: Run Host Interface Wrap Test

Approximate Run Time = 10 seconds per loop

Number of Loops = This test runs until stopped by pressing the Unload Button.

Function Code **6** performs a check of the host interface circuitry and host connector on the drive.

1. Make sure that the host interface wrap plug is connected to the host interface connector at the rear of the drive.
2. Place the drive in Maintenance Mode. For instructions, see "Entering Maintenance Mode" on page 3-8.
3. Press the Unload Button once per second until **6** appears in the SCD.
  - a. Index through the Maintenance Mode options until **6** is displayed on the SCD.
  - b. Press and hold the Unload Button for three seconds to select Function Code **6**
  - c. After selecting Function Code 6 the SCD will display option **6** - **1**.
  - d. Press the Unload Button within 5 seconds to make a different selection. If no other selection is made, the drive will perform option **6** - **1**.
4. Continue to press the Unload Button once per second to cycle through the following functions:
  - a. **6** - **1** : test the primary SAS port
  - b. **6** - **2** : test the secondary SAS port
  - c. **6** - **3** : test both primary and secondary SAS ports at the same time (requires a wrap plug in both ports)
  - d. **6** - **0** : exit

5. Press and hold the Unload Button for three or more seconds, then release it to select one of the above functions. The drive automatically starts the test. If you cycle past the desired code, press the Unload Button once per second until the code reappears.
6. The SCD will display a flashing  during the test.
  - If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
  - If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code 7: Run RS-422 Wrap Test



Approximate Run Time = 10 seconds per loop


Number of Loops = This test runs until stopped by pressing the Unload Button.


**Note:** This function is described here for information only. It is not supported on the TS2240 Tape Drive.

This test causes the drive to perform a check of the circuitry and connector for the RS-422 interface. This connector supports the Library Drive Interface (LDI) and the Automation Drive Interface (ADI).

Before selecting this function, attach an LDI or RS-422 wrap plug to the drive's LDI or RS-422 connector (in place of the LDI or RS-422 cable).


1. Make sure that no cartridge is in the drive, and the appropriate wrap plug is attached to the RS-422 connector.
2. Place the drive in Maintenance Mode. For instructions, see "Entering Maintenance Mode" on page 3-8.
3. Press the Unload Button once per second until  appears in the Single-character Display (SCD). If you cycle past , continue to press the Unload Button until it displays again.
4. To select the function, press and hold the Unload Button for three seconds.





After you select the function,  flashes and the drive automatically starts the test.




- If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
- If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A,

“Error Codes and Messages,” on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.



## Function Code 8: Unmake FMR Tape



Function Code  erases the field microcode replacement (FMR) data and rewrites the cartridge memory on the tape. This converts the cartridge into a valid scratch (blank) data cartridge.


1. Place the drive in maintenance mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select function . The SCD changes to a flashing .
4. Insert the FMR data cartridge (or the tape drive exits maintenance mode). The SCD changes to a flashing . The tape drive erases the firmware on the tape and rewrites the header in the cartridge memory to change the cartridge to a valid scratch (blank) data cartridge. The drive then ejects the cartridge and exits Maintenance Mode.

**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error code  or  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.


## Function Code 9: Display Error Code Log




Function Code  displays the last ten error codes, one at a time (the codes are ordered; the most recent is presented first and the oldest is presented last). If there are no errors in the log, function code  displays in the Single-character Display (SCD) and exits Maintenance Mode.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press the Unload Button, then release it to view the most recent error code.
4. Press and release the Unload Button again to view successive error codes. Let two to three seconds pass between each depression. The Ready light and Fault light will flash On/Off once for each successive error code. The SCD will display  when all the error codes have been displayed.

5. After viewing all error codes, exit this function by pressing the Unload Button again. The SCD will display  and exit Maintenance Mode.

## Function Code A: Clear Error Code Log

Function Code  erases the contents of the error code log.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function.  flashes in the SCD, followed by . The tape drive erases all errors from the error code log and exits Maintenance Mode.


## Function Code C: Insert Cartridge into Tape Drive

This function cannot be selected by itself, but is part of other maintenance functions (such as Run Tape Drive Diagnostics and Create FMR Tape) that require a tape cartridge to be inserted.

## Function Code E: Test Cartridge & Media




Approximate Run Time = 15 minutes per loop

Total Number of Loops = 10

Function Code  performs tests that determine whether a suspect cartridge and its magnetic tape are acceptable.

Press the Unload Button to stop the diagnostic and exit maintenance mode. Pressing the Unload Button once will abort the test at the end of the current test loop. Pressing the Unload Button twice will abort the test immediately. Wait for the drive to rewind the tape and unload the cartridge.

**Attention:** When you perform this test, data on the suspect tape will be overwritten.

**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error code  or  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.

2. Press the Unload Button once per second until **E** appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing **E** requesting a cartridge.
4. Ensure that the write-protect switch on the cartridge is off, then insert the cartridge (or the tape drive exits maintenance mode). The SCD changes to flashing **E**. The tape drive runs the tests.
  - If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends, **E** temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
  - If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code F: Write Performance Test

Approximate Run Time = 7 minutes per loop

Total Number of Loops = 10




Function Code **F** performs tests to ensure that the drive can read from and write to tape.

Press the Unload Button to stop the diagnostic and exit maintenance mode. Pressing the Unload Button once will abort the test at the end of the current test loop. Pressing the Unload Button twice will abort the test immediately. Wait for the drive to rewind the tape and unload the cartridge.

**Attention:** For this test, insert only a scratch (blank) data cartridge or a cartridge that may be overwritten. During the test, the drive overwrites the data on the cartridge.

**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error code **U** or **7** appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code **P** appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.


1. Place the drive in Maintenance Mode. For instructions, see "Entering Maintenance Mode" on page 3-8.
2. Press the Unload Button once per second until **F** appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)

3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing .
4. Insert a scratch (blank) data cartridge. The SCD changes to a flashing  and the tape drive runs the tests.
  - If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
  - If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code H: Test Head

Approximate Run Time = 12 minutes per loop

Total Number of Loops = 10




Function Code  performs tests to ensure that the tape drive's head and tape-carriage mechanics work correctly.

Once you begin this test, the diagnostic begins the loop sequence. Time the first loop by pressing the Unload Button once to stop the diagnostic after the completion of the first loop, then record the time it takes for the test to complete. Compare the recorded time with the "Approximate Run Time" above. If the test runs successfully but the execution time is significantly longer than the "Approximate Run Time", run "Function Code F: Write Performance Test" on page 3-17. If the Write Performance Test fails, replace the media and exit maintenance mode.

Press the Unload Button to stop the diagnostic and exit maintenance mode. Pressing the Unload Button once will abort the test at the end of the current test loop. Pressing the Unload Button twice will abort the test immediately. Wait for the drive to rewind the tape and unload the cartridge.





**Attention:** For this test, insert only a scratch (blank) data cartridge or a cartridge that may be overwritten. During the test, the drive overwrites the data on the cartridge.

**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error

code  or  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.

1. Place the drive in Maintenance Mode. For instructions, see "Entering Maintenance Mode" on page 3-8.




2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing .
4. Insert a scratch (blank) data cartridge. The SCD changes to a flashing . The tape drive runs the tests.
  - If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
  - If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, "Error Codes and Messages," on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code J: Fast Read/Write Test

Approximate Run Time = 7 minutes per loop




Total Number of Loops = 10





Function Code  performs tests to ensure that the drive can read from and write to tape.

Once you begin this test, the diagnostic begins the loop sequence. Time the first loop by pressing the Unload Button once to stop the diagnostic after the completion of the first loop, then record the time it takes for the test to complete. Compare the recorded time with the "Approximate Run Time" above. If the test runs successfully but the execution time is significantly longer than the "Approximate Run Time", run "Function Code F: Write Performance Test" on page 3-17. If the Write Performance Test fails, replace the media and exit maintenance mode.

Press the Unload Button to stop the diagnostic and exit maintenance mode. Pressing the Unload Button once will abort the test at the end of the current test loop. Pressing the Unload Button twice will abort the test immediately. Wait for the drive to rewind the tape and unload the cartridge.

**Attention:** For this test, insert only a scratch (blank) data cartridge or a cartridge that may be overwritten. During the test, the drive overwrites the data on the cartridge.


**Note:** If you inserted an invalid tape cartridge (e.g. Gen1 or WORM media), error code  or  appears in the SCD. If you inserted a write-protected cartridge, or the media has read-only compatibility (e.g., Gen2 media), error code  appears in the SCD. In either case, the tape drive unloads the cartridge and exits Maintenance Mode after the cartridge is removed.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing .
4. Insert a scratch (blank) data cartridge. The SCD changes to a flashing  and the tape drive runs the tests.
  - If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
  - If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, “Error Codes and Messages,” on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code L: Load/Unload Test




Approximate Run Time = 25 seconds per loop


Total Number of Loops = 10

Function Code  tests the drive's ability to load and unload a tape cartridge.

Press the Unload Button to stop the diagnostic and exit maintenance mode. Pressing the Unload Button once will abort the test at the end of the current test loop. Pressing the Unload Button twice will abort the test immediately. Wait for the drive to rewind the tape and unload the cartridge.

**Attention:** Even though no data is written during this test, it is recommended that you use a blank (scratch) cartridge for this test.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until  appears in the SCD. (If you cycle past the desired code, press the Unload Button once per second until the code reappears.)
3. Press and hold the Unload Button for three or more seconds, then release it to select the function. The SCD changes to a flashing .
4. Insert a scratch (blank) data cartridge. The SCD changes to a flashing  and the tape drive runs the tests.







- If no error is detected, the diagnostic will loop and begin again. To stop the loop, press the Unload Button for one second and release. When the diagnostic ends,  temporarily appears in the SCD, and the tape drive exits Maintenance Mode.
- If an error is detected, the Fault light flashes and the drive posts an error code to the SCD. To determine the error, locate the code in Appendix A, “Error Codes and Messages,” on page A-1. To clear the error either turn the power off and then on again, or reboot the drive by pressing and holding the Unload Button for 10 seconds.

## Function Code P: Post Error Reporting Enabled

When Post Error Reporting is enabled, deferred-check conditions are reported to the host and temporary errors are reported in the sense data. Function Code

 will be displayed in Maintenance Mode when the drive has Post Error Reporting enabled.





This selection is normally used as a request from support personnel.



1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until either  or  appears in the SCD.  or  will appear in the SCD to indicate the current setting for Post Error Reporting. If you cycle past the desired code, press the Unload Button once per second until the code reappears.
3. Exit Maintenance Mode if you do not want to change the current setting for Post Error Reporting. For instructions, see “Exiting Maintenance Mode” on page 3-8.
4. To disable Post Error Reporting, Press and hold the Unload Button for three seconds while  appears in the SCD. The SCD changes to  after you release the Unload Button.
5. Press the Unload Button once per second to select another Maintenance Mode Function. To exit Maintenance Mode, refer to “Exiting Maintenance Mode” on page 3-8.

## Function Code U: Post Error Reporting Disabled

When Post Error Reporting is disabled, deferred-check conditions are not reported to the host and temporary errors are not reported in the sense data. This is the normal (default) setting for the drive. When the drive has Post Error Reporting

disabled, Function Code  will be displayed in Maintenance Mode. The drive will default to Post Error Reporting disabled after a reboot or power off/on cycle.

1. Place the drive in Maintenance Mode. For instructions, see “Entering Maintenance Mode” on page 3-8.
2. Press the Unload Button once per second until either  or  appears in the SCD.  or  will appear in the SCD to indicate the current setting for Post Error Reporting. If you cycle past the desired code, press the Unload Button once per second until the code reappears.

3. Exit Maintenance Mode if you do not want to change the current setting for Post Error Reporting. For instructions, see “Exiting Maintenance Mode” on page 3-8.
4. To disable Post Error Reporting, Press and hold the Unload Button for three seconds while  appears in the SCD. The SCD changes to  after you release the Unload Button.
5. Press the Unload Button once per second to select another Maintenance Mode Function. To exit Maintenance Mode, refer to “Exiting Maintenance Mode” on page 3-8.

## Chapter 4. Using Ultrium Media

To ensure that your IBM Ultrium Tape Drive conforms to IBM's specifications for reliability, use only IBM LTO Ultrium tape cartridges. You may use other LTO-certified data cartridges, but they may not meet the standards of reliability that are established by IBM. The IBM LTO Ultrium Data Cartridge can not be used in other IBM non-LTO Ultrium tape products.

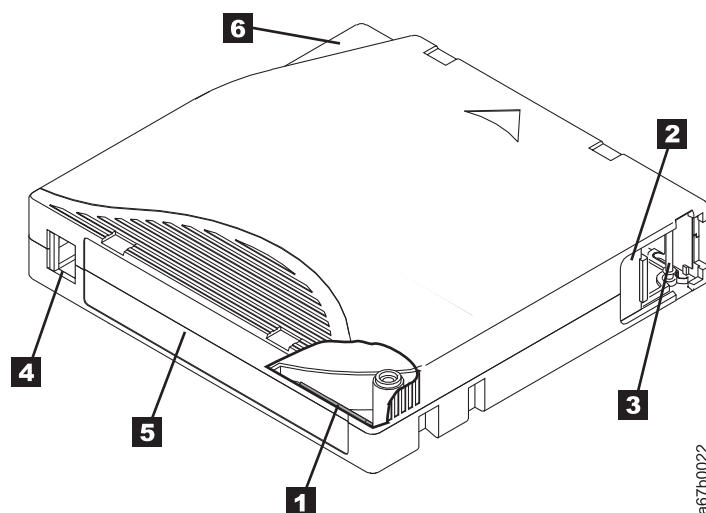


Figure 4-1. The IBM LTO Ultrium Data Cartridge

<b>1</b>	LTO cartridge memory	a chip that contains information about the cartridge and the tape, as well as statistical information about the cartridge's use (For more information, see "Cartridge Memory Chip (LTO-CM)" on page 4-2.)
<b>2</b>	Cartridge door	protects the tape from contamination when the cartridge is out of the drive
<b>3</b>	Leader Pin	The tape is attached to a leader pin, behind the cartridge door. When the cartridge is inserted into the drive, a threading mechanism pulls the pin (and tape) out of the cartridge, across the drive head, and onto a non-removable take-up reel. The head can then read or write data from or to the tape.
<b>4</b>	Write-protect Switch	prevents data from being written to the tape cartridge (For more information, see "Write-Protect Switch" on page 4-2.)
<b>5</b>	Label area	provides a location to place a label (To obtain tape cartridges and bar code labels, see "Media Supplies" on page C-4.)
<b>6</b>	Insertion guide	a large, notched area that prevents the cartridge from being inserted incorrectly

## Types of Cartridges

IBM Ultrium media is available in the following types:

- “Data Cartridge”
- “WORM (Write Once, Read Many) Cartridge” on page 4-3
- “Cleaning Cartridge” on page 4-4

### Data Cartridge

All generations of IBM Ultrium data cartridges contain 1/2-inch, dual-coat, metal-particle tape. When processing tape in the cartridges, Ultrium Tape Drives use a linear, serpentine recording format.

Each generation of data cartridge is identified by case color, native data capacity, recording format and nominal cartridge life.

Data Cartridge	Case Color	Native Data Capacity	Recording Format*	Nominal Cartridge Life (load/unload cycles)
Ultrium 4	Green	800 GB (1600 GB at 2:1 compression)	Reads and writes data on 896 tracks, sixteen tracks at a time.	20,000
Ultrium 3	Slate Blue	400 GB (800 GB at 2:1 compression)	Reads and writes data on 704 tracks, sixteen tracks at a time	20,000
Ultrium 2	Purple	200 GB (400 GB at 2:1 compression)	Reads and writes data on 512 tracks, eight tracks at a time	10,000
Ultrium 1	Black	100 GB (200 GB at 2:1 compression)	Reads and writes data on 384 tracks, eight tracks at a time	5,000

\* The first set of tracks (sixteen for Ultrium 4 and 3; eight for Ultrium 2 and 1) is written from near the beginning of the tape to near the end of the tape. The head then repositions to the next set of tracks for the return pass. This process continues until all tracks are written and the cartridge is full, or until all data is written.


### Cartridge Memory Chip (LTO-CM)

All generations of the IBM LTO Ultrium Data Cartridges include a Linear Tape-Open Cartridge Memory (LTO-CM) chip ( **1** in Figure 4-1 on page 4-1), that contains information about the cartridge and the tape (such as the name of the manufacturer that created the tape), as well as statistical information about the cartridge's use. The LTO-CM enhances the efficiency of the cartridge. For example, the LTO-CM stores the end-of-data location which, when the next time this cartridge is inserted and the WRITE command is issued, enables the drive to quickly locate the recording area and begin recording. The LTO-CM also aids in determining the reliability of the cartridge by storing data about its age, how many times it has been loaded, and how many errors it has accumulated. Whenever a tape cartridge is unloaded, the tape drive writes any pertinent information to the cartridge memory.

The storage capacity of the LTO Generation 4 is 8160 bytes. LTO Generations 1, 2, and 3 have an LTO-CM capacity of 4096 bytes.

### Write-Protect Switch

The position of the write-protect switch on the tape cartridge (see **4** in Figure 4-1 on page 4-1) determines whether you can write to the tape. If the switch is set to:

- The locked position  (solid red), data cannot be written to the tape.

- The unlocked position (black void), data can be written to the tape.

If possible, use your server's application software to write-protect your cartridges (rather than manually setting the write-protect switch). This allows the server's software to identify a cartridge that no longer contains current data and is eligible to become a scratch (blank) data cartridge. Do not write-protect scratch (blank) cartridges; the tape drive will not be able to write new data to them.

If you must manually set the write-protect switch, slide it left or right to the desired position.

## Capacity Scaling

To control the capacity of the cartridge (for example, to obtain a faster seek time) issue the SCSI command SET CAPACITY. For information about this command, refer to the *IBM System Storage Ultrium Tape Drive SCSI Reference*.

## WORM (Write Once, Read Many) Cartridge

Certain records retention and data security applications require a Write Once, Read Many (WORM) method for storing data on tape. The LTO Ultrium generation 3 and 4 drives enable WORM support when a WORM tape cartridge is loaded into the drive.

Because standard read/write media are incompatible with the WORM feature, a specially formatted WORM tape cartridge (see Figure 4-2) is required. Each WORM cartridge has a unique, worldwide cartridge identifier (WWCID), which comprises the unique CM chip serial number and the unique tape media serial number. See "Media Supplies" on page C-4 for information on how to choose and purchase the appropriate WORM tape cartridges for your library.

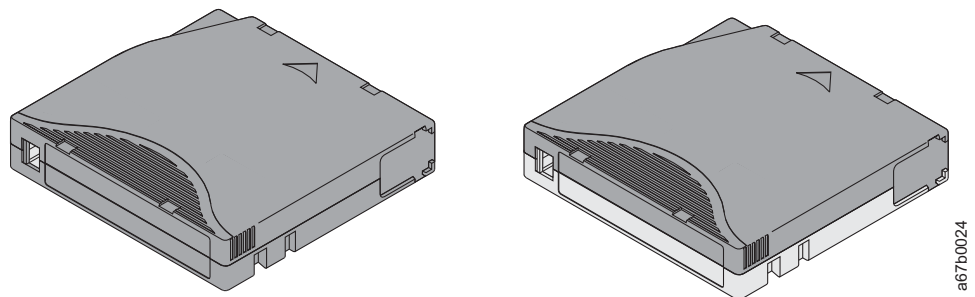


Figure 4-2. Ultrium Data Cartridge on the left; WORM Cartridge on the right

## Data Security on WORM Media

Certain built-in security measures help ensure that the data written on a WORM cartridge does not become compromised, for example:

- The format of a WORM Tape Cartridge is unlike that of standard read/write media. This unique format prevents a drive that lacks WORM-capable firmware from writing on a WORM tape cartridge.
- When the drive senses a WORM cartridge, the firmware prohibits the changing or altering of user data already written on the tape. The firmware keeps track of the last appendable point on the tape.

## WORM Media Errors

The following conditions cause WORM media errors to occur:

- Information in the servo manufacturer's word (SMW) on the tape must match information from the cartridge memory (CM) module in the cartridge. If it does not match:
  - a tape drive will post a media Error Code 7 on the single-character display (SCD).
  - a library will post an error on the operator control panel
- Inserting a WORM tape cartridge into a drive that is not WORM capable causes the cartridge to be treated as an unsupported medium. The drive will report a media Error Code J. Upgrading the drive firmware to the correct code level will resolve the problem.

## Requirements for WORM Capability

To add WORM capability to your LTO Ultrium generation 3 or generation 4 drive(s), drive firmware must be at the correct code level, and you must use either Ultrium 3 400 GB WORM tape cartridge or Ultrium 4 800 GB tape cartridges (see "Media Supplies" on page C-4).

## Cleaning Cartridge

A specially labeled IBM LTO Ultrium Cleaning Cartridge is used to clean the drive head. The drive itself determines when a head needs to be cleaned. To clean the head, insert the cleaning cartridge into the tape drive. The cleaning is performed automatically. When the cleaning is finished, the cartridge is ejected.

**Note:** The drive will automatically eject an expired cleaning cartridge.

IBM Cleaning Cartridges are valid for 50 uses. The cartridge's LTO-CM chip tracks the number of times that the cartridge is used.

---

## Cartridge Compatibility

Table 4-1. Ultrium cartridge compatibility with Ultrium tape drives

IBM Ultrium Tape Drive	IBM LTO Ultrium Data Cartridges			
	800 GB (Ultrium 4)	400 GB (Ultrium 3)	200GB (Ultrium 2)	100GB (Ultrium 1)
Ultrium 4	Read/Write	Read/Write	Read only	
Ultrium 3		Read/Write	Read/Write	Read only
Ultrium 2			Read/Write	Read/Write
Ultrium 1				Read/Write

---

## Bar Code Labels

A bar code label contains:

- A volume serial number (VOLSER) that is human-readable
- A bar code that the library can read

**Note:** The tape drive does not require bar code labels, but you may choose to use labels for tape cartridge identification purposes.



Table 4-2. Bar code label requirements for Ultrium tape drives and libraries

Ultrium Tape Drive/Library	Bar Code Label Requirements
3573	Not required
3576	Recommended
3580	Not required
3581	Required with optional Bar Code Reader
3582	Required
3583	Required
3584	Required

When read by a library's bar code reader, the bar code identifies the cartridge's VOLSER to the library. The bar code also tells the library whether the cartridge is a data cartridge, WORM cartridge or cleaning cartridge. In addition, the bar code includes the two-character media-type identifier Lx, where x equals 1, 2, 3, 4, T or U. "Bar Code Labels" on page 4-4 shows a sample bar code label for the LTO Ultrium Tape Cartridge.

Table 4-3. Cartridges and VOLSERs

Cartridges	VOLSER
Ultrium 4 Data Cartridge	xxxxxxL4
Ultrium 4 WORM Cartridge	xxxxxxLU
Ultrium 3 Data Cartridge	xxxxxxL3
Ultrium 3 WORM Cartridge*	xxxxxxLT
Ultrium 2 Data Cartridge	xxxxxxL2
Ultrium 1 Data Cartridge	xxxxxxL1
IBM LTO Ultrium Cleaning Cartridge	CLNxxxLx
*An Ultrium 3 Tape Drive must have a minimum firmware level of 54xx for it to be compatible with the WORM cartridge.	

Tape cartridges can be ordered with the labels included or with custom labels. To order tape cartridges and bar code labels, see "Media Supplies" on page C-4. The bar code for usage in IBM tape libraries must meet predefined specifications. They include (but are not limited to):

- Eight uppercase alphanumeric characters, where the last two characters must be L4, L3, L2, L1, LT or LU
- Label and printing to be non-glossy
- Nominal narrow line or space width of 0.423 mm (0.017 in.)
- Wide to narrow ratio of 2.75:1
- Minimum bar length of 11.1 mm (0.44 in.)

To determine the complete specifications of the bar code and the bar code label, visit the web at <http://www.ibm.com/storage/lto> (select **LTO Support**), or contact your IBM Sales Representative.

When attaching a bar code label to a tape cartridge, place the label only in the recessed label area (see **5** in Figure 4-1 on page 4-1). A label that extends outside of the recessed area can cause loading problems in the drive.

**Attention:** Do not place any type of mark on the white space at either end of the bar code. A mark in this area may prevent the library from reading the label.

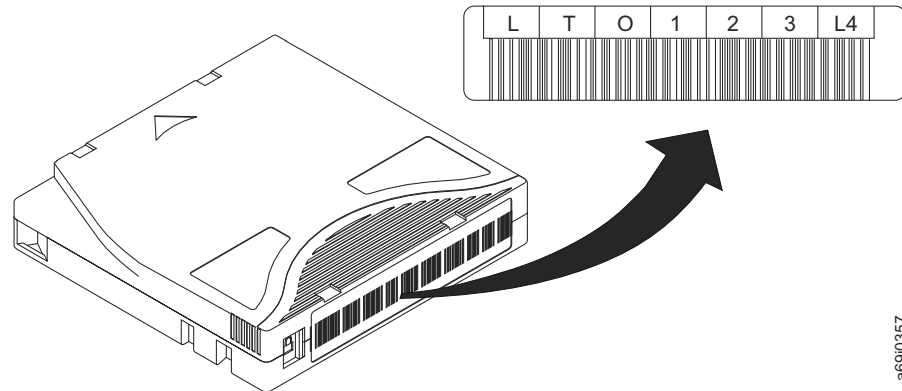


Figure 4-3. Sample bar code label on the LTO Ultrium 4 Tape Cartridge. The volume serial number (LTO4), cartridge type (L4), and bar code are printed on the label.

## Guidelines for Using Bar Code Labels

Apply the following guidelines whenever using bar code labels:

- Use only IBM-approved bar code labels on cartridges to be used in an IBM tape library.
- Do not reuse a label or reapply a used label over an existing label.
- Before you apply a new label, remove the old label by slowly pulling it at a right angle to the cartridge case.
- Use peel-clean labels that do not leave a residue after being removed. If there is glue residue on the cartridge, remove it by gently rubbing it with your finger. Do not use a sharp object, water, or a chemical to clean the label area.
- Examine the label before applying it to the cartridge. Do not use the label if it has voids or smears in the printed characters or bar code (a library's inventory operation will take much longer if the bar code label is not readable).
- Remove the label from the label sheet carefully. Do not stretch the label or cause the edges to curl.
- Position the label within the recessed label area (see **5** in Figure 4-1 on page 4-1).
- With light finger pressure, smooth the label so that no wrinkles or bubbles exist on its surface.
- Verify that the label is smooth and parallel, and has no roll-up or roll-over. The label must be flat to within 0.5 mm (0.02 in.) over the length of the label and have no folds, missing pieces, or smudges.
- Do not place other machine-readable labels on other surfaces of the cartridge. They may interfere with the ability of the drive to load the cartridge.

---

## Handling Cartridges

**Attention:** Do not insert a damaged tape cartridge into the drive. A damaged cartridge can interfere with the reliability of a drive and may void the warranties of the drive and the cartridge. Before inserting a tape cartridge, inspect the cartridge case, cartridge door, and write-protect switch for breaks.

Incorrect handling or an incorrect environment can damage cartridges or their magnetic tape. To avoid damage to your tape cartridges and to ensure the continued high reliability of your IBM LTO Ultrium Tape Drives, use the following guidelines.

## **Provide Training**

- Post procedures that describe proper media handling in places where people gather.
- Ensure that anyone who handles tape has been properly trained in handling and shipping procedures. This includes operators, users, programmers, archival services, and shipping personnel.
- Ensure that any service or contract personnel who perform archiving are properly trained in media-handling procedures.
- Include media-handling procedures as part of any services contract.
- Define and make personnel aware of data recovery procedures.

## **Provide Proper Acclimation and Environmental Conditions**

- Before using a cartridge, let it acclimate to the normal operating environment for 1 hour. If condensation is visible on the cartridge, wait an additional hour.
- Ensure that all surfaces of a cartridge are dry before inserting it.
- Do not expose the cartridge to moisture or direct sunlight.
- Do not expose recorded or blank cartridges to stray magnetic fields of greater than 100 oersteds (for example, terminals, motors, video equipment, X-ray equipment, or fields that exist near high-current cables or power supplies). Such exposure can cause the loss of recorded data or make the blank cartridge unusable.
- Maintain the conditions that are described in “Environmental and Shipping Specifications for Tape Cartridges” on page 4-10.

## **Perform a Thorough Inspection**

After purchasing a cartridge and before using it, perform the following steps:

- Inspect the cartridge's packaging to determine potential rough handling.
- When inspecting a cartridge, open only the cartridge door. Do not open any other part of the cartridge case. The upper and lower parts of the case are held together with screws; separating them destroys the usefulness of the cartridge.
- Inspect the cartridge for damage before using or storing it.
- Inspect the rear of the cartridge (the part that loads first into the tape load compartment) and ensure that there are no gaps in the seam of the cartridge case (see **1** in Figure 4-4 on page 4-8 and **4** in Figure D-2 on page D-2). If there are gaps in the seam (see Figure 4-4 on page 4-8), the leader pin may be dislodged. Go to Appendix D, “Repairing a Cartridge,” on page D-1.

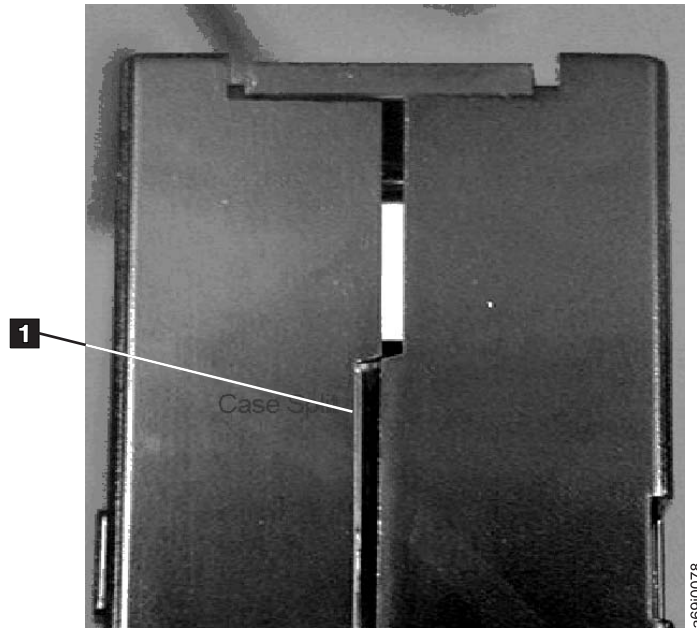


Figure 4-4. Checking for gaps in the seams of a cartridge

- Check that the leader pin is properly seated (see **2** in Figure D-2 on page D-2).
- If you suspect that the cartridge has been mishandled but it appears usable, copy any data onto a good cartridge immediately for possible data recovery. Discard the mishandled cartridge.
- Review handling and shipping procedures.

## Handle the Cartridge Carefully

- Do not drop the cartridge. If the cartridge drops, slide the cartridge door back and ensure that the leader pin is properly seated in the pin-retaining spring clips (see **2** in Figure D-1 on page D-2). If the leader pin has become dislodged, go to Appendix D, “Repairing a Cartridge,” on page D-1.
- Do not handle tape that is outside the cartridge. Handling the tape can damage the tape's surface or edges, which may interfere with read or write reliability. Pulling on tape that is outside the cartridge can damage the tape and the brake mechanism in the cartridge.
- Do not stack more than six cartridges.
- Do not degauss a cartridge that you intend to reuse. Degaussing makes the tape unusable.

## Ensure Proper Packaging

- When shipping a cartridge, use the original or better packaging.
- Always ship or store a cartridge in a jewel case.
- Use only a recommended shipping container that securely holds the cartridge in its jewel case during transportation. Ultrium Turtlecases (by Perm-A-Store) have been tested and found to be satisfactory. They are available at <http://www.turtlecase.com>.



a69i0077

*Figure 4-5. Tape cartridges in a Turtlecase*

- Never ship a cartridge in a commercial shipping envelope. Always place it in a box or package.
- If you ship the cartridge in a cardboard box or a box of a sturdy material, ensure the following:
  - Place the cartridge in polyethylene plastic wrap or bags to protect it from dust, moisture, and other contaminants.
  - Pack the cartridge snugly; do not allow it to move around.
  - Double-box the cartridge (place it inside a box, then place that box inside the shipping box) and add padding between the two boxes.



a69i0076

*Figure 4-6. Double-boxing tape cartridges for shipping*

## Environmental and Shipping Specifications for Tape Cartridges

Before you use a tape cartridge, acclimate it to the operating environment to prevent condensation in the drive (the time will vary, depending on the environmental extremes to which the cartridge was exposed).

The best storage container for the cartridges (until they are opened) is the original shipping container. The plastic wrapping prevents dirt from accumulating on the cartridges and partially protects them from humidity changes.

When you ship a cartridge, place it in its jewel case or in a sealed, moisture-proof bag to protect it from moisture, contaminants, and physical damage. Ship the cartridge in a shipping container that has enough packing material to cushion the cartridge and prevent it from moving within the container.

Table 4-4. Environment for operating, storing, and shipping LTO media

Environmental Factor	Environmental Specifications			
	Operating	Operational Storage <sup>1</sup>	Archival Storage <sup>2</sup>	Shipping
Temperature	10 to 45°C (50 to 113°F)	16 to 32°C (61 to 90°F)	16 to 25°C (61 to 77°F)	-23 to 49°C (-9 to 120°F)
Relative humidity (non-condensing)	10 to 80%	20 to 80%	20 to 50%	5 to 80%
Maximum wet bulb temperature	26°C (79°F)	26°C (79°F)	26°C (79°F)	26°C (79°F)
<b>Note:</b>				
1. The short term or operational storage environment is for storage durations of up to six months.				
2. The long term or archival storage environment is for durations of six months up to ten years.				

## Disposing of Tape Cartridges

Under the current rules of the U.S. Environmental Protection Agency (EPA), regulation 40CFR261, the LTO Ultrium Tape Cartridge is classified as non-hazardous waste. As such, it may be disposed of in the same way as normal office trash. These regulations are amended from time to time, and you should review them at the time of disposal.

If your local, state, country (non-U.S.A.), or regional regulations are more restrictive than EPA 40CFR261, you must review them before you dispose of a cartridge. Contact your account representative for information about the materials that are in the cartridge.

If a tape cartridge must be disposed of in a secure manner, you can erase the data on the cartridge by using a high-energy ac degausser (use a minimum of 4000 oersted peak field over the entire space that the cartridge occupies). The tape should make two passes through the field at 90 degree orientation change for each pass to achieve complete erasure. Some commercial degaussers have two magnetic field regions offset 90 degrees from each other to accomplish complete erasure in one pass for higher throughput. Degaussing makes the cartridge unusable.

If you burn the cartridge and tape, ensure that the incineration complies with all applicable regulations.

## Chapter 5. Troubleshooting

If you encounter problems when running the drive, refer to the flowchart in Figure 5-1. For explanations of codes on the Single-character Display (SCD), see “Single-character Display (SCD)” on page 3-1. Please review the “Pre-Call Checklist” on page 5-4 before calling IBM Technical Support.

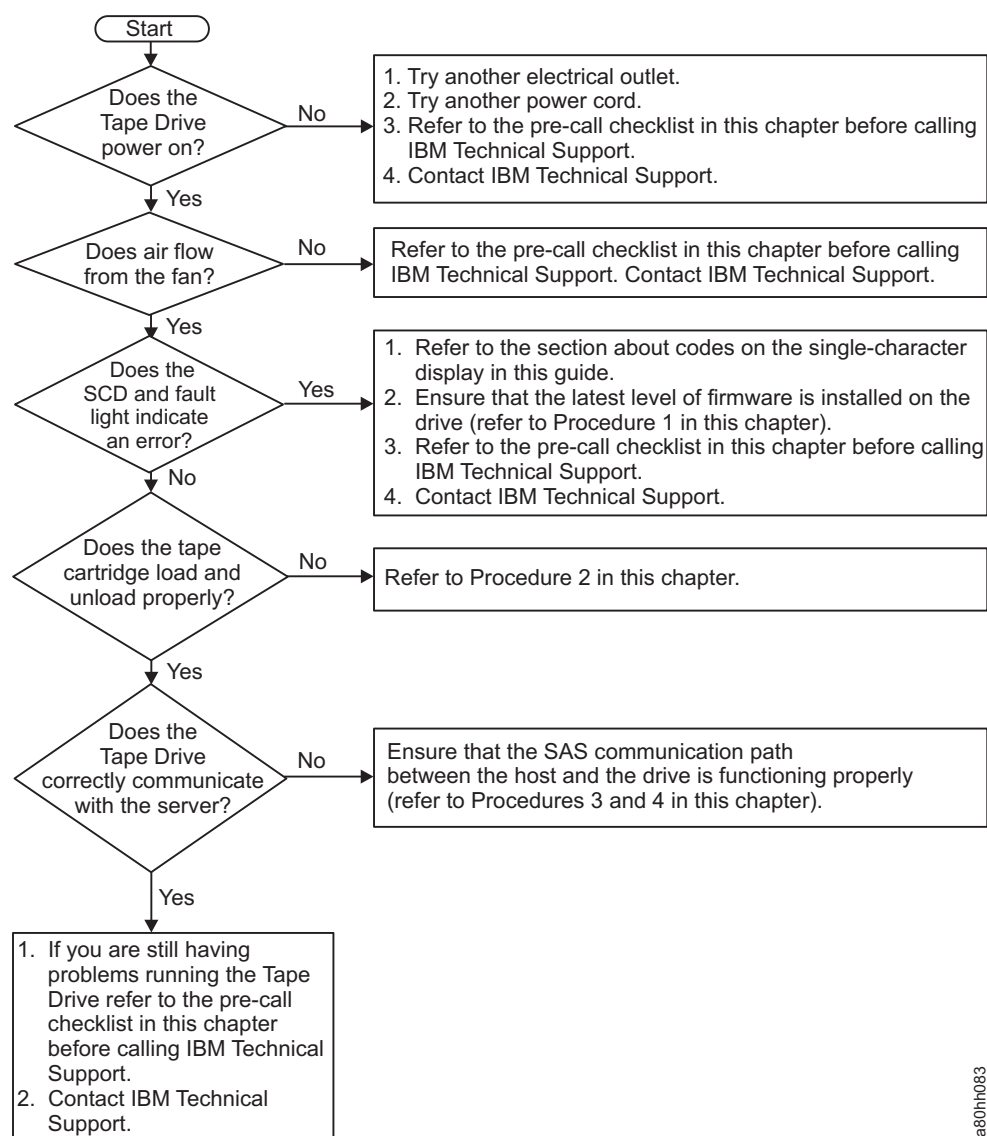


Figure 5-1. Flowchart for analyzing maintenance problems

### Procedure 1: Determining Firmware Level and Capturing Drive Dump

Customers are responsible for updating Firmware. For optimum performance, the customer must obtain the latest level of firmware for the unit by downloading the firmware from the web site <http://www.ibm.com/support/fixcentral>.



The ITDT utility (see “ITDT firmware update, dump retrieval and library/drive test tool” on page 2-7) can be used to update the firmware level as well as to capture a drive dump which may be requested by technical support to aid in problem analysis.

For instructions about updating firmware from a server that uses an IBM tape device driver, refer to the *IBM Tape Device Drivers Installation and User's Guide*.

To update firmware from a server that uses a non-IBM tape device driver, refer to the documentation for that device driver.

Perform the following steps to determine the current firmware level installed on the drive.

1. Use the ITDT utility (available on the web at <http://www.ibm.com/support/fixcentral>) to view the current drive firmware level.
2. Compare this level with the latest available firmware level by visiting the same website. For additional information about using the ITDT utility, see “Updating firmware” on page 2-6.

**Note:** The ITDT utility can be used to either update drive firmware to the latest level or to capture drive dumps from a drive which may be experiencing problems.

Another way to capture a drive dump is using the ethernet port. To capture a dump on the drive using the Ethernet interface follow the steps below.

**Note:** The drive uses a limited version of FTP protocol to communicate on the Ethernet interface. It is recommended to use a simple, command line FTP session, such as the DOS command prompt, when communicating with the drive.

1. Obtain the latest drive firmware from the web, as described above.
2. Connect an ethernet patch cable to the drive's ethernet interface and to a computer. In order to meet electromagnetic immunity requirements, a shielded ethernet cable is required.
3. Create an FTP session between the drive and the computer. The drive's IP address: 169.254.0.3
4. At the user prompt, type *guest* and press **Enter**.
5. At the password prompt, press **Enter**. No response is needed.
6. Type *bin* to set the communication mode to binary.
7. Type *mget \*.dmp* to transfer a drive dump to the computer. If a dump already exists, the drive will show you the dump name and ask if you want to transfer it to the computer. Type *y* to transfer the existing dump or *n* to skip this dump file. Then the drive will ask if you want a forced dump. Type *y* to force a dump and to transfer the forced dump to the computer, or type *n* to skip forcing a dump.
8. Type *quit* to end the FTP session.
9. Remove ethernet patch cable from the drive's ethernet interface and the computer.

---

## Procedure 2: Inspecting a Cartridge for Damage

If the cartridge fails to load or unload properly, perform the following steps:



1. Check that the leader pin is attached and properly seated (see “Repositioning a Leader Pin” on page D-1) by opening the cartridge door and observing the pin's placement.
2. Inspect the cartridge case, the cartridge door, and the write-protect switch for damage.
3. Inspect the rear of the cartridge (the part that you load first into the tape load compartment) and ensure that there are no gaps in the seam of the cartridge case (see **1** in Figure 4-4 on page 4-8 and **4** in Figure D-2 on page D-2). If there are gaps, the leader pin may be dislodged. Go to Appendix D, “Repairing a Cartridge,” on page D-1.
4. Try loading or unloading another tape cartridge.
  - If it fails, contact your service representative for additional problem determination.
  - If it is successful, discard the cartridge that originally failed.

**Note:**

1. If a damaged or mishandled cartridge is the problem, see “Handling Cartridges” on page 4-6 for proper instructions about handling media. It is possible that your other cartridges may also be damaged.
2. If your cartridge does not eject properly, contact your service representative. (IBM service personnel should go to Appendix E, “Information for Trained Service Personnel,” on page E-1.)

---

## Procedure 3: Checking SAS Host Connections

Check the host connections for your drive by following the steps below.

If your server is not communicating with the SAS drive, the problem may be with the SAS cable, the SAS host adapter or the SAS host adapter setup.

1. Check if the tape drive power is on.
2. Verify the SAS cable is connected properly to the server and to the tape drive.
3. Check whether the parameters for the SAS host adapter installation are correct.
4. Verify the SAS host adaptor is supported by the tape drive.
5. Ensure there is a point-to-point connectivity between the server and the tape drive. SAS connectivity does not support multiple drive connections (daisy-chaining of devices).
6. Check the length of the SAS cable. It can not exceed 5.5m (18 ft).

---

## Procedure 4: Verifying Host Interface Communications

The Wrap Diagnostic tests the communication function at the device interface. However, to thoroughly verify host-to-device communications, it is highly recommended to exercise activity over the SAS interface bus from the host to the drive and back. A recommended utility to perform this test is the ITDT utility available on the web at <http://www.ibm.com/support/fixcentral>. This utility is especially effective for updating the drive firmware and for performing the Test Device function. For additional information about using the ITDT utility, see “Updating firmware” on page 2-6. Perform the following steps:

1. If the ITDT utility is not installed on your system, download the appropriate operating system version from the web into a directory or folder of your choice on your system.

2. When installation is complete, run the SCAN (s) option to determine if your system can detect all of the Ultrium tape drive devices (including any libraries or autoloaders that may be on the bus).
3. Select the drive that is to be tested or to have firmware downloaded.
4. For testing, select the Test Device (t) option.

**Note:** This option will perform a series of LOADS, UNLOADS, and WRITE/READ operations. Both tape drive control commands and data are sent to the device over the interface bus.

5. If allowed to complete, the test will run for at least 30 minutes. At any time an ABORT (a) can be entered to end the device test early if it is determined that interface communications have been satisfactorily achieved.

---

## Resolving Problems Reported by the Server

The procedure for fixing interface bus errors varies, depending on whether the error is consistent or intermittent, and on your configuration. The sections that follow describe how to fix an error.

### Fixing SAS Bus Errors

1. Check if the tape drive power is on.
2. Verify the SAS cable is connected properly to the server and to the tape drive.
3. Replace SAS cable if it shows any signs of damage.

---

## Resolving Media-Related Problems

To resolve problems that are related to media, the drive's firmware includes:

- Test Cartridge & Media diagnostic that verifies whether a suspect cartridge and its magnetic tape are acceptable for use.
- Statistical Analysis and Reporting System (SARS) to assist in isolating failures between media and hardware. To determine the cause of failure, SARS uses the cartridge performance history that is saved in the cartridge memory (CM) and the drive performance history that is kept in the drive's VPD (Vital Product Data) area in NVRAM. Any failures that SARS detects are reported as TapeAlert flags on the server (see *IBM LTO Ultrium Tape Drive SCSI Reference*).

**Attention:** If you insert the IBM LTO Ultrium Data Cartridge into another manufacturer's drive, the SARS data in the cartridge memory may become lost or invalid.

If you encounter a media-related problem, refer to "Function Code E: Test Cartridge & Media" on page 3-16.

---

## Pre-Call Checklist

If you have questions or problems, go through this checklist before contacting IBM Technical Support. Ensure that the total SAS cable length does not exceed 5.5m (18 ft). Perform the following steps before you place a call to IBM Technical Support. Where instructions refer you to the web, visit <http://www.ibm.com/storage/lto>.

1. Perform a general checkup of the hardware and connections:
  - Verify that all cables are connected properly at both ends.
  - Before attaching the SAS cables, ensure that the connector does not contain bent or recessed pins.

- Ensure that all retention screws for the SAS cable are securely tightened.
- 2. Verify that the drive's firmware is at the most recent level. To determine the latest release of firmware, visit the web. See "Updating firmware" on page 2-6 for instructions on downloading the latest firmware.
- 3. Verify that your device drivers are at the most recent level:
  - For IBM device drivers, visit the web.
  - For the device drivers of independent software vendors (ISVs), visit the appropriate third-party web site.
- 4. Verify whether your hardware and software configuration is supported. To determine the latest supported attachments, visit the web.
- 5. Review "Frequently Asked Questions" and "Hints and Tips" on the web.
- 6. Run one of the following diagnostic methods:
  - Local diagnostic:
    - a. Run "Function Code 1: Run Drive Diagnostics" on page 3-9 to determine whether the drive can properly load and unload cartridges, and read and write data. Optionally, you may run one of the following diagnostics:
      - "Function Code E: Test Cartridge & Media" on page 3-16 to determine whether a suspect cartridge and its magnetic tape are acceptable.
      - "Function Code F: Write Performance Test" on page 3-17 to ensure that the drive can read from and write to tape.
      - "Function Code H: Test Head" on page 3-18 to ensure that the tape drive's head and tape-carriage mechanics work correctly.
      - "Function Code J: Fast Read/Write Test" on page 3-19 to ensure that the drive can read from and write to tape.
      - "Function Code L: Load/Unload Test" on page 3-20 to test the drive's ability to load and unload a tape cartridge.
    - b. Run "Function Code 6: Run Host Interface Wrap Test" on page 3-13.
  - Remote diagnostic:
    - Using the ITDT utility, run the SCAN as described in "Procedure 4: Verifying Host Interface Communications" on page 5-3

---

## Replacing the Tape Drive

To replace your tape drive, perform the following steps:

1. Remove the replacement unit from its packaging.
2. Locate the repair identification (RID) tag (included with the replacement unit). See **1** in Figure 5-2 on page 5-6)
3. Write down the serial number of the failed unit on the RID tag.
4. Affix the repair tag to the rear panel of the replacement unit (below the serial number label).
5. Place the failed unit into the packaging of the replacement unit.
6. Follow the instructions (included with the replacement unit) for returning the failed unit.

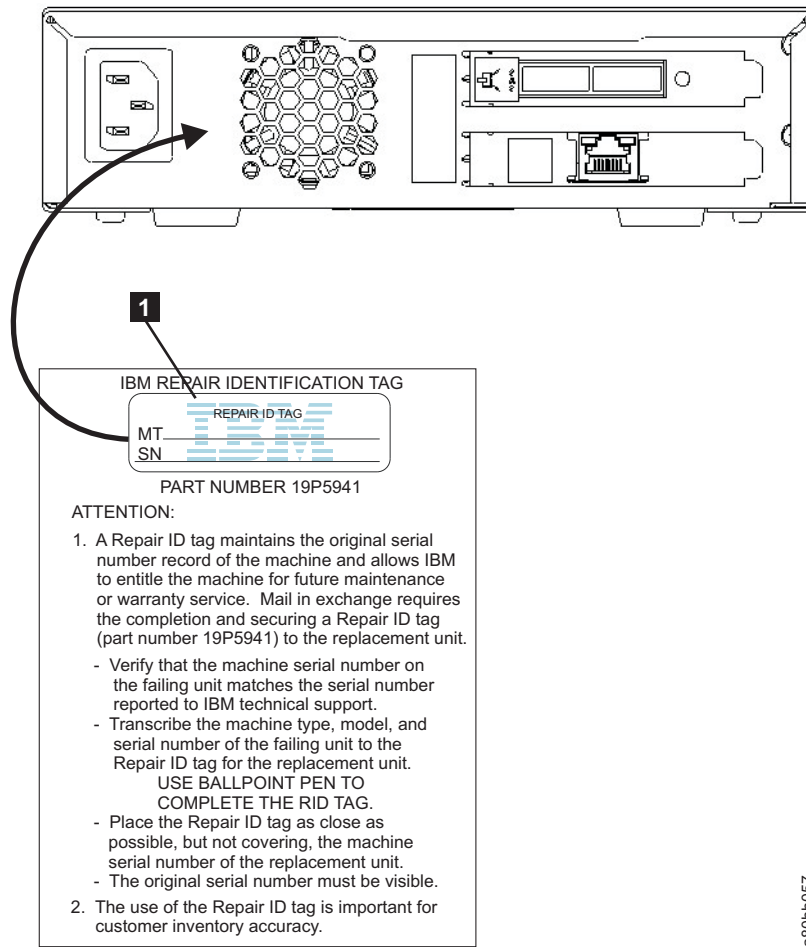


Figure 5-2. RID tag on rear panel

## Appendix A. Error Codes and Messages

If the drive detects a permanent error, it will display the error code on the SCD and flash the Ready light (Ready light will be Off).

- Make note of the SCD error code prior to removing a cartridge or clearing the SCD error code.
- If an error occurred with a cartridge in the drive, push the Unload Button to eject the cartridge.
- To clear the SCD error code and power cycle the drive, press the Unload Button for ten seconds. A drive dump will be created.


**Attention:** If the drive detects a permanent error and displays an error code other than , it automatically performs a drive dump. If you force a drive dump, the existing dump will be overwritten and data will be lost. After you force a drive dump, do not turn off the power to the drive or you may lose the dump data.

Table A-1. Error codes on the Single-character Display




Error Code	Cause and Action
	No error occurred and no action is required. This code displays when diagnostics have finished running and no error occurred. <b>Note:</b> The Single-character Display is blank during normal operation of the tape drive.
	Temperature problem. The tape drive detected that the recommended operating temperature was exceeded. Perform one or more of the following actions: <ul style="list-style-type: none"><li>• Ensure that the cooling fan is rotating and is quiet. If not, refer to your enclosure documentation.</li><li>• Remove any blockage that prevents air from flowing freely through the tape drive.</li><li>• Ensure that the operating temperature and airflow is within the specified range (see "Specifications" on page 1-5).</li></ul> Clear the error code by power cycling the tape drive or placing the drive in Maintenance Mode. If the operating temperature and airflow are within the specified range, and the problem persists, replace the drive.
	Power problem. The tape drive detected that the externally supplied power is outside the specified voltage limits (the tape drive is not operating). Perform the following action: <ol style="list-style-type: none"><li>1. Ensure that the power connector is properly seated.</li><li>2. Ensure that the proper dc voltages are being applied within the tolerances allowed (see "Specifications" on page 1-5).</li><li>3. If the proper voltages are not being applied, service the power supply.</li><li>4. If the proper voltages are being applied, power off/on the tape drive to see if the problem repeats.</li><li>5. Replace the tape drive if the problem persists.</li></ol> The error code clears when you place the tape drive in maintenance mode.

Table A-1. Error codes on the Single-character Display (continued)

Error Code	Cause and Action
3	<p>Firmware problem. The tape drive determined that a firmware error occurred. Perform the following action:</p> <ol style="list-style-type: none"> <li>1. Collect a drive dump from one of the following:  <b>Note:</b> Do not force a new dump; the tape drive has already created one. <ul style="list-style-type: none"> <li>• Server's host interface by using a device driver utility or system tool (for instructions about reading a drive dump from tape, visit the Web at <a href="http://www.ibm.com/support/fixcentral">http://www.ibm.com/support/fixcentral</a>)</li> <li>• Ultrium Tape Drive (to copy and read a drive dump, use "Function Code 5: Copy Drive Dump" on page 3-12)</li> </ul> </li> <li>2. Power the tape drive off and on, then retry the operation that produced the error.</li> <li>3. If the problem persists, download new firmware and retry the operation.</li> <li>4. If the problem persists, send the drive dump that you collected in step <b>1</b> to your IBM Support Center.</li> </ol> <p>The error code clears when you place the tape drive in maintenance mode.</p>
4	<p>Firmware or hardware problem. The tape drive determined that a firmware or tape drive hardware failure occurred. Perform the following action:</p> <ol style="list-style-type: none"> <li>1. Collect a drive dump from one of the following:  <b>Note:</b> Do not force a new dump; one already exists. <ul style="list-style-type: none"> <li>• Server's host interface by using a device driver utility or system tool (for instructions about reading a drive dump from tape, visit the Web at <a href="http://www.ibm.com/support/fixcentral">http://www.ibm.com/support/fixcentral</a>)</li> <li>• Ultrium Tape Drive (to copy and read a drive dump, use "Function Code 5: Copy Drive Dump" on page 3-12)</li> </ul> </li> <li>2. Power the tape drive off and on, then retry the operation that produced the error. The error code clears when you place the tape drive in maintenance mode.</li> <li>3. If the problem persists, download new firmware and retry the operation; if new firmware is not available, replace the drive.</li> </ol>
5	<p>Tape drive hardware problem. The drive determined that a tape path or read/write error occurred. To prevent damage to the drive or tape, the tape drive will not allow you to insert a cartridge if the current cartridge was successfully ejected. The error code may clear when you cycle power to the tape drive or place it in maintenance mode. If the problem persists, replace the drive.</p> <p><b>Note:</b> Copy the drive dump to flash memory before returning the drive. For instructions, refer to "Function Code 5: Copy Drive Dump" on page 3-12.</p>
6	<p>Tape drive or media error. The tape drive determined that an error occurred, but it cannot isolate the error to faulty hardware or to the tape cartridge. Ensure the tape cartridge is the correct media type:</p> <ul style="list-style-type: none"> <li>• Ultrium 1 cartridge is not supported in the Ultrium 4 tape drive.</li> <li>• Drive will not accept an expired Cleaning Cartridge.</li> <li>• Drive will not accept a WORM cartridge when running diagnostic tests in Maintenance Mode.</li> <li>• Drive will not write over existing datasets on a WORM cartridge. Ensure you are appending datasets on WORM media rather than attempting to write over existing datasets.</li> </ul> <p>If the tape cartridge is the correct media type, perform the following action:</p>

Table A-1. Error codes on the Single-character Display (continued)

Error Code	Cause and Action
	<p><b><u>For Problems with Writing Data:</u></b></p> <p>If the problem occurred while the tape drive was writing data to the tape, retry the operation with a different cartridge:</p> <ul style="list-style-type: none"> <li>• If the operation succeeds, the original cartridge was defective. Copy data from the defective cartridge and discard it.</li> <li>• If the operation fails and another tape drive is available, insert the cartridge into the other unit and retry the operation. <ul style="list-style-type: none"> <li>– If the operation fails, discard the defective cartridge.</li> <li>– If the operation succeeds, insert a scratch data cartridge into the first unit and run “Function Code 1: Run Drive Diagnostics” on page 3-9. <ul style="list-style-type: none"> <li>- If the diagnostics fail, replace the tape drive.</li> <li>- If the diagnostics succeed, the error was temporary.</li> </ul> </li> </ul> </li> <li>• If the operation fails and another tape drive is not available, insert a scratch data cartridge into the unit and run “Function Code 1: Run Drive Diagnostics” on page 3-9. <ul style="list-style-type: none"> <li>– If the diagnostics fail, replace the tape drive.</li> <li>– If the diagnostics succeed, discard the cartridge.</li> </ul> </li> </ul> <p>If the problem occurs with multiple tape cartridges, run “Function Code 1: Run Drive Diagnostics” on page 3-9:</p> <ul style="list-style-type: none"> <li>• If the diagnostics fail, replace the tape drive.</li> <li>• If the diagnostics succeed, run “Function Code H: Test Head” on page 3-18. <ul style="list-style-type: none"> <li>– If the diagnostic fails, replace the tape drive.</li> <li>– If the diagnostic succeeds, replace the cartridges that caused the problem.</li> </ul> </li> </ul> <p>The error code clears when you remove the tape cartridge or place the tape drive in maintenance mode.</p> <p><b><u>For Problems with Reading Data:</u></b></p> <p>If the problem occurred while the tape drive was reading data from the tape, perform one of the following procedures:</p> <ul style="list-style-type: none"> <li>• If another tape drive is available, insert the cartridge into the other unit and retry the operation: <ul style="list-style-type: none"> <li>– If the operation fails, discard the defective cartridge.</li> <li>– If the operation succeeds, insert a scratch data cartridge into the first unit and run “Function Code 1: Run Drive Diagnostics” on page 3-9: <ul style="list-style-type: none"> <li>- If the diagnostic fails, replace the tape drive.</li> <li>- If the diagnostic succeeds, the error was temporary.</li> </ul> </li> </ul> </li> <li>• If another tape drive is not available, insert a scratch data cartridge into the unit and run “Function Code 1: Run Drive Diagnostics” on page 3-9: <ul style="list-style-type: none"> <li>– If the diagnostic fails, replace the tape drive.</li> <li>– If the diagnostic succeeds, discard the cartridge.</li> </ul> </li> </ul> <p>If the problem occurs with multiple tape cartridges, run “Function Code 1: Run Drive Diagnostics” on page 3-9:</p> <ul style="list-style-type: none"> <li>• If the diagnostic fails, replace the tape drive.</li> <li>• If the diagnostic succeeds, run “Function Code H: Test Head” on page 3-18. <ul style="list-style-type: none"> <li>– If the diagnostic fails, replace the tape drive.</li> <li>– If the diagnostic succeeds, replace the cartridges that caused the problem.</li> </ul> </li> </ul> <p>The error code clears when you remove the tape cartridge or place the tape drive in maintenance mode.</p>

Table A-1. Error codes on the Single-character Display (continued)







Error Code	Cause and Action
	<p>Media error. The tape drive determined an error occurred because of a faulty tape cartridge or an invalid tape cartridge. Ensure the tape cartridge is the correct media type:</p> <ul style="list-style-type: none"> <li>• Ultrium 1 cartridge is not supported in the Ultrium 4 tape drive.</li> <li>• Drive will not accept an expired Cleaning Cartridge.</li> <li>• Drive will not accept a WORM cartridge when running diagnostic tests in Maintenance Mode.</li> <li>• Drive will not accept an FMR tape unless the drive is performing "Function Code 8: Unmake FMR Tape" on page 3-15.</li> <li>• Drive will not write over existing datasets on a WORM cartridge. Ensure you are appending datasets on WORM media rather than attempting to write over existing datasets.</li> </ul> <p>If the tape cartridge is the correct media type, try another tape cartridge. If the problem occurs with multiple tape cartridges, use the following procedure:</p> <ol style="list-style-type: none"> <li>1. If possible, run the tape cartridge in a different tape drive. If the operation in the other unit fails and  or  displays, replace the media. If the operation succeeds, run "Function Code E: Test Cartridge &amp; Media" on page 3-16.</li> </ol> <p><b>Attention:</b> When you run the Test Cartridge &amp; Media diagnostic, data on the suspect tape is overwritten. Use only a scratch data cartridge to run the test.</p> <ul style="list-style-type: none"> <li>• If the diagnostic fails, replace the media.</li> <li>• If the diagnostic succeeds, clean the drive head (see "Cleaning the Drive Head" on page 3-6) and run "Function Code 1: Run Drive Diagnostics" on page 3-9. <ul style="list-style-type: none"> <li>– If the drive diagnostic fails, replace the drive.</li> <li>– If the drive diagnostic succeeds, perform the operation that produced the initial media error.</li> </ul> </li> </ul> <p>The error code clears when you remove the tape cartridge or place the tape drive in maintenance mode.</p>
	<p>Interface problem. The tape drive determined that a failure occurred in the tape drive's hardware or in the host bus. See Chapter 5, "Troubleshooting," on page 5-1. If  was displayed while running "Function Code 6: Host Interface Test":</p> <ol style="list-style-type: none"> <li>1. Verify the correct interface wrap tool was attached during the test. The test will fail if the correct interface wrap tool is not attached.</li> <li>2. If the correct interface wrap tool was attached during the test, replace the drive. The error code clears when you place the tape drive in maintenance mode.</li> </ol>
	<p>Tape drive or RS-422 error. The tape drive determined that a failure occurred in the tape drive's hardware or in the RS-422 connection. See "Function Code 7: Run RS-422 Wrap Test" on page 3-14 or refer to the Library procedures to isolate the problem to the drive. The error code clears when you place the tape drive in maintenance mode.</p>



Table A-1. Error codes on the Single-character Display (continued)











Error Code	Cause and Action
	<p>Degraded operation. The tape drive determined that a problem occurred which degraded the operation of the tape drive, but it did not restrict continued use. If the problem persists, determine whether the problem is with the drive or the media.</p> <p><b>Note:</b> The drive is usable, though the Single-character Display continues to indicate an error and the Fault light flashes. The error code may clear when you cycle power to the tape drive or place it in maintenance mode.</p> <p>To determine if the problem is with the drive hardware, or the tape media, perform the following procedures:</p> <ol style="list-style-type: none"> <li>1. If possible, run the tape cartridge in a different drive. If the operation in the other drive fails and  or  displays, replace the media. If the operation succeeds, run the Test Cartridge &amp; Media diagnostic (see "Function Code E: Test Cartridge &amp; Media" on page 3-16).</li> <li>2. If the Test Cartridge &amp; Media diagnostic fails, replace the media. If it runs successfully, clean the failing drive and run the drive diagnostics (see "Cleaning the Drive Head" on page 3-6 and "Function Code 1: Run Drive Diagnostics" on page 3-9). Once you begin this test, the diagnostic begins the loop sequence. Time the first loop by pressing the Unload Button once to stop the diagnostic after the completion of the first loop, then record the time it takes for the test to complete. Compare the recorded time with the "Approximate Run Time" above. If the test runs successfully but the execution time is significantly longer than the "Approximate Run Time", run "Function Code F: Write Performance Test" on page 3-17. If the Write Performance Test fails, replace the media and exit maintenance mode. If the drive diagnostics run successfully, perform the operation that produced the initial drive error.</li> <li>3. If the problem persists replace the drive.</li> </ol> <p>If it is not possible to run the tape cartridge in a different drive, perform the following procedures:</p> <ol style="list-style-type: none"> <li>1. Clean the failing drive and run the drive diagnostics (see "Cleaning the Drive Head" on page 3-6 and "Function Code 1: Run Drive Diagnostics" on page 3-9). Once you begin this test, the diagnostic begins the loop sequence. Time the first loop by pressing the Unload Button once to stop the diagnostic after the completion of the first loop, then record the time it takes for the test to complete. Compare the recorded time with the "Approximate Run Time" above. If the test runs successfully but the execution time is significantly longer than the "Approximate Run Time", run "Function Code F: Write Performance Test" on page 3-17. If the Write Performance Test fails, replace the media and exit maintenance mode. If the drive diagnostics run successfully, run the Test Cartridge &amp; media diagnostic (see "Function Code E: Test Cartridge &amp; Media" on page 3-16).</li> <li>2. If the Test Cartridge &amp; Media diagnostic fails, replace the media. If it runs successfully, perform the operation that produced the initial drive error.</li> <li>3. If the problem persists replace the drive.</li> </ol>
	<p>The tape drive needs to be cleaned. Clean the tape drive. See "Cleaning the Drive Head" on page 3-6.</p> <p>The error code clears when you clean the tape drive or place it in maintenance mode.</p>
	Fiber AL_PA conflict. NOT SUPPORTED ON THIS DRIVE.

Table A-1. Error codes on the Single-character Display (continued)

Error Code	Cause and Action
	<p>Encryption Error. Displayed when the drive detects an error associated with a encryption operation. If the problem occurred while the tape drive was writing data to, or reading data from, tape:</p> <ol style="list-style-type: none"> <li>1. Check the host application to ensure the host application is providing the correct encryption key. <ul style="list-style-type: none"> <li>• Refer to the <i>IBM LTO Ultrium Tape Drive SCSI Reference</i> documentation for the Sense Data returned for an encryption operation.</li> <li>• Retry the encryption operation after the host application problems have been resolved.</li> </ul> </li> <li>2. Check the operation of the tape drive by resetting the drive and running POST. See Table 3-2 on page 3-4. <ul style="list-style-type: none"> <li>• Refer to the error code displayed on the SCD if the drive reset and POST fails.</li> <li>• Retry the encryption operation if the drive reset and POST complete without errors.</li> </ul> </li> <li>3. Check the media. <ul style="list-style-type: none"> <li>• Ensure the correct media is being used. Data encryption is supported with LTO Ultrium 4 and 5 Data Cartridges only.</li> <li>• Retry the encryption operation with the tape cartridge in another encryption enabled drive. Replace the media if the problem repeats with the same tape cartridge in multiple drives.</li> </ul> </li> </ol> <p>If the problem occurred while the tape drive was running POST or diagnostics, replace the drive.</p> <p>The error code clears with the first attempted write/read after the encryption key is changed, or when the drive is placed in maintenance mode.</p>
	Fiber Port offline. NOT SUPPORTED ON THIS DRIVE.
	Fiber Channel Error. NOT SUPPORTED ON THIS DRIVE.
	Incompatible media. The tape drive detected an unsupported cartridge was loaded or the cartridge loaded has an incompatible format. Ultrium 1 cartridge is not supported in the Ultrium 4 tape drive.
	Write operation to a write protected cartridge has been attempted (this includes any attempt to overwrite a WORM protected tape). Ensure the tape cartridge is the correct media type. Writes to an Ultrium 1 cartridge are not supported in the Ultrium 4 tape drive. If the tape cartridge is the correct media type, check the write-protect switch on the cartridge. The drive will not write to a write-protected cartridge. The error code clears when you remove the tape cartridge or place the tape drive in maintenance mode.

---

## Appendix B. TapeAlert flags

TapeAlert is a patented technology and standard of the American National Standards Institute (ANSI) that defines conditions and problems that are experienced by tape drives. The technology enables a server to read TapeAlert flags from a tape drive through the host interface. The server reads the flags from Log Sense Page 0x2E. Refer to the *IBM LTO Ultrium Tape Drive SCSI Reference* for the list of TapeAlert flags that are supported by this tape drive.



---

## Appendix C. Ordering Optional Features, Replacement Parts, Power Cords, and Media

For ordering information, please refer to the following sections:

- “Optional Features”
- “Replacement Parts”
- “Power Cords”
- “Media Supplies” on page C-4
- “Bar Code Labels” on page C-5

### Optional Features

*Table C-1. Optional Features*

Feature Code	Description
5402	2.0 m SAS/Mini-SAS 1x Cable
5502	2.0 m Mini-SAS/Mini-SAS 1x Cable

### Replacement Parts

*Table C-2. Replacement Parts*

Part Number	Description
46C2388	TS2240 (3580-H4V) Half High SAS Bridgebox CRU
95P4587	2 m SAS/Mini-SAS 1x Cable
95P4488	2 m Mini-SAS/Mini-SAS 1x Cable
95P6566	SAS wrap tool

### Power Cords



To avoid electrical shock, a power cord with a grounded attachment plug has been provided. Use only properly grounded outlets.

The table below lists the power cord part number, feature code, the country or region where the power cord can be used, and the plug's standard reference. The last column in the table contains an index number that you can match to a specific receptacle type in Figure C-1 on page C-4.

All power cords use an appliance coupler that complies with the International Electrotechnical Commission (IEC) Standard 320, Sheet C13.

If the power cord that you receive does not match your receptacle, contact your local dealer.

Power cords used in the United States and Canada are listed by Underwriter's Laboratories (UL), are certified by the Canadian Standards Association (CSA), and comply with the plug standards of the National Electrical Manufacturers Association (NEMA). For other worldwide geographies, plug standards are listed in the table below.

Table C-3. Power Cords

Description, Feature Code (FC), and Part Number (PN)	Plug Standard Reference	Country or Region	Index Number in Figure C-1 on page C-4
<b>US/Canada</b> <ul style="list-style-type: none"> <li>• 2.8 m, 125V</li> <li>• FC 9800</li> <li>• PN 39M5081</li> <li>• (See Note)</li> </ul>	NEMA 5-15P	Aruba, Bahamas, Barbados, Bermuda, Bolivia, Brazil, Canada, Cayman Islands, Colombia, Costa Rica, Curacao, Dominican Republic, Ecuador, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Japan, Liberia, Mexico, Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Saudi Arabia, South Korea, Suriname, Taiwan, Trinidad Tobago, Venezuela, US	1
<b>Chicago</b> <ul style="list-style-type: none"> <li>• 1.8 m, 125 V</li> <li>• FC 9986</li> <li>• PN 39M5080</li> </ul>	NEMA 5-15P	Chicago, U.S.A.	1
<b>US/Canada</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250 V</li> <li>• FC 9833</li> <li>• PN 39M5095</li> </ul>	NEMA 6-15P	Aruba, Bahamas, Barbados, Bermuda, Bolivia, Brazil, Canada, Cayman Islands, Costa Rica, Curacao, Dominican Republic, Ecuador, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Japan, Liberia, Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Suriname, Taiwan, Thailand, Trinidad Tobago, Venezuela, US	2
<b>Australia</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9831</li> <li>• PN 39M5102</li> </ul>	AS 3112 NZS 198	Argentina, Australia, China, Colombia, New Zealand, Papua New Guinea, Paraguay, Uruguay, Western Samoa	3
<b>France, Germany</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9820</li> <li>• PN 39M5123</li> </ul>	CEE 7 - VII	Afghanistan, Algeria, Andorra, Angola, Aruba, Austria, Belgium, Benin, Brazil, Bulgaria, Burkina Faso, Burundi, Cameroon, Central African Republic, Chad, Congo-Brazzaville, Curacao, Czech Republic, Democratic Republic of Congo, Denmark, Egypt, Finland, France, French Guiana, Germany, Greece, Guinea, Hungary, Iceland, Indonesia, Iran, Ivory Coast, Jordan, Kenya, Korea, Lebanon, Luxembourg, Macau, Malagasy, Mali, Martinique, Mauritania, Mauritius, Monaco, Morocco, Mozambique, Netherlands, Netherlands Antilles, New Caledonia, Niger, Norway, Poland, Portugal, Romania, Russia, Saudi Arabia, Senegal, Spain, Sweden, Sudan, Syria, Togo, Tunisia, Turkey, Yugoslavia, Zaire, Zimbabwe, Vietnam	4
<b>Denmark</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9821</li> <li>• PN 39M5130</li> </ul>	DK2-5A	Denmark	5
<b>South Africa</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9829</li> <li>• PN 39M5144</li> </ul>	SABS 164	Bangladesh, Burma, Pakistan, South Africa, Sri Lanka	6
<b>United Kingdom</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9825</li> <li>• PN 39M5151</li> </ul>	BS 1363	Antigua, Bahrain, Bermuda, Brunei, Channel Islands, China (Hong Kong S.A.R.), Cyprus, Fiji, Ghana, Guyana, India, Iraq, Ireland, Jordan, Kenya, Kuwait, Malaysia, Malawi, Malta, Nepal, Nigeria, Oman, Polynesia, Qatar, Sierra Leone, Singapore, Tanzania, Uganda, UK, United Arab Emirate (Dubai), Yemen, Zambia	7
<b>Switzerland</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9828</li> <li>• PN 39M5158</li> </ul>	SEV SN 416534	Liechtenstein, Switzerland	8

Table C-3. Power Cords (continued)

Description, Feature Code (FC), and Part Number (PN)	Plug Standard Reference	Country or Region	Index Number in Figure C-1 on page C-4
<b>Italy</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9830</li> <li>• PN 39M5165</li> </ul>	CEI 23- 16	Chile, Ethiopia, Italy, Libya, Somalia	9
<b>Israel</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9827</li> <li>• PN 39M5172</li> </ul>	S11-32-1971	Israel	10
<b>Argentina</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9834</li> <li>• PN 39M5068</li> </ul>	IEC 83-A5	Argentina, Brazil, Colombia, Paraguay, Trinidad Tobago, Uruguay	11
<b>China</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9840</li> <li>• PN 39M5206</li> </ul>	CCEE	People's Republic of China	12
<b>Taiwan LV*</b> <ul style="list-style-type: none"> <li>• 2.8 m, 125V</li> <li>• FC 9835</li> <li>• PN 39M5247</li> </ul>	CNS 10917-3	Taiwan	13
<b>Taiwan HV**</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9841</li> <li>• PN 39M5254</li> </ul>	CNS 10917-3	Taiwan	14
<b>Japan LV*</b> <ul style="list-style-type: none"> <li>• 2.8 m, 125V</li> <li>• FC 9842</li> <li>• PN 39M5199</li> </ul>	JIS C8303, C8306	Japan	15
<b>Japan HV**</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9843</li> <li>• PN 39M5186</li> </ul>	JIS C8303, C8306	Japan	16
<b>Korea HV**</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9844</li> <li>• PN 39M5219</li> </ul>	KS C8305, K60884-1	Korea	17
<b>India HV**</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9845</li> <li>• PN 39M5226</li> </ul>	IS 6538	India	18
<b>Brazil HV**</b> <ul style="list-style-type: none"> <li>• 2.8 m, 250V</li> <li>• FC 9847</li> <li>• PN 39M5240</li> </ul>	InMetro NBR 14136	Brazil	20
* Low Voltage ** High Voltage			

## Types of Receptacles

The figure below shows the plugs that are available on the power cords in . Match the index number that is beside each plug to the index number in Table C-3 on page C-2.

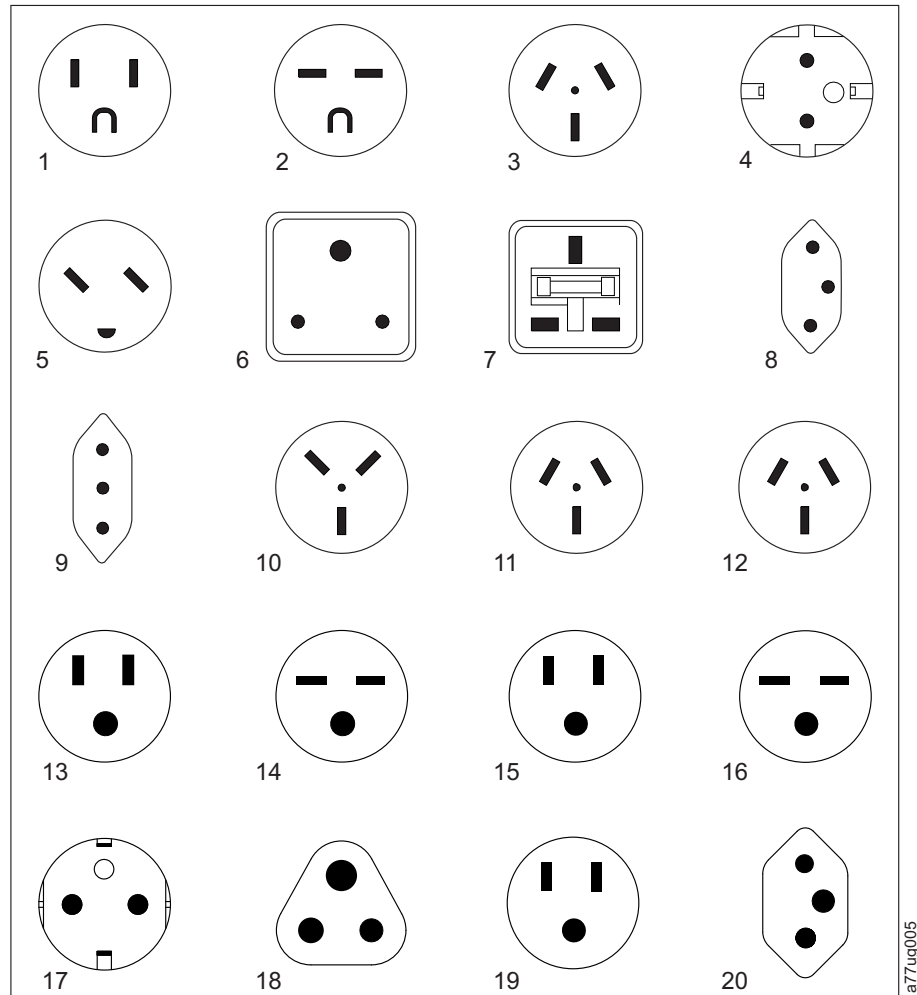


Figure C-1. Types of Receptacles

## Media Supplies

To find the closest IBM-authorized distributor, visit the web at <http://www.ibm.com/storage/media> or call 1-888-IBM-MEDIA.

Table C-4. Media supplies

Item Type	Description	Quantity	Order by Machine Type / Model from IBM Sales Representative or authorized IBM Business Partner	Order by Part Number (P/N) from an IBM Authorized Distributor
(Specify the VOLSER characters that you want.)	Ultrium 5	20-PACK	Machine Type 3589 Model 014	46X1953 (color label) 46X1951 (black and white label)
	Ultrium 4	20-PACK	Machine Type 3589 Model 010	95P4443 (color label) 95P4445 (black and white label)
	Ultrium 3	1	Machine Type 3589 Model 008	96P1470 (color label) 96P1471 (black and white label)



Table C-4. Media supplies (continued)

Item Type	Description	Quantity	Order by Machine Type / Model from IBM Sales Representative or authorized IBM Business Partner	Order by Part Number (P/N) from an IBM Authorized Distributor
Data Cartridges (without labels)  Order VOLSER labels separately (see "Bar Code Labels").	Ultrium 5	20-PACK	Machine Type 3589 Model 015	46X1960
	Ultrium 5	5-PACK		46C2084
	Ultrium 4	20-PACK	Machine Type 3589 Model 011	95P4447
	Ultrium 3	1	Machine Type 3589 Model 009	24R1922
	Ultrium 2	1	Machine Type 3589 Model 007	
WORM Cartridges (with labels)  (Specify the VOLSER characters that you want.)	Ultrium 5	20-PACK	Machine Type 3589 Model 034	46X1965 (color label) 46X1963 (black and white label)
	Ultrium 4	20-PACK	Machine Type 3589 Model 032  WORM cartridges labeled with starting volume serial information and, optionally, packed in individual jewel cases.	95P4457 (color label) 95P4459 (black and white label)
	Ultrium 3	20-PACK	Machine Type 3589 Model 028  WORM cartridges labeled with starting volume serial information and, optionally, packed in individual jewel cases.	
WORM Cartridges (without labels)  Order VOLSER labels separately (see "Bar Code Labels").	Ultrium 5	20-PACK	Machine Type 3589 Model 035	46X1972
	Ultrium 4	20-PACK	Machine Type 3589 Model 033	95P4461
	Ultrium 3	20-PACK	Machine Type 3589 Model 029 Feature Code 2920  WORM cartridges packed in individual jewel cases with unattached blank labels.	
Cleaning Cartridge (with label)	Universal Cleaning Cartridge	5-PACK	Machine Type 3589 Model 004 Feature Code 4005	35L2086
Repair Tools	Leader Pin Reattachment Kit	1	not available in this sales channel	08L9129
	Manual Rewind Tool	1	not available in this sales channel	08L9130

## Bar Code Labels

The LTO Ultrium 4 Tape Drives do not require cartridge bar code labels. However, if you use your data cartridges or cleaning cartridges in an IBM tape library product, you may need cartridge bar code labels if your tape library product requires them. You can order these labels separately from the IBM Data Cartridges and Cleaning Cartridges.

You can order bar code labels directly from the authorized label suppliers listed in the table below.

*Table C-5. Authorized suppliers of custom bar code labels*

In America	In Europe and Asia
Tri-Optic Broomfield, CO U. S. A. Telephone: 888-438-8362 <a href="http://www.tri-optic.com">http://www.tri-optic.com</a>	EDP Europe, Ltd. U. K. Telephone: 44 (0) 1245-322380 <a href="http://www.edpeurope.com/media-labels">http://www.edpeurope.com/media-labels</a>
Dataware Houston, TX U. S. A. Telephone: 800-426-4844 <a href="http://www.datawarelabels.com/">http://www.datawarelabels.com/</a>	Dataware Labels Europe Germany Telephone: 49 8062-9455 <a href="http://www.datawarelabels.com/">http://www.datawarelabels.com/</a>
NetC Fairfield, CT U. S. A. Telephone: 203-372-6382 <a href="http://www.netc11c.com/">http://www.netc11c.com/</a>	NetC Europe Ltd U. K. Telephone: 44 (0) 1823 49 1439 <a href="http://www.netclabels.co.uk">http://www.netclabels.co.uk</a>
	NetC Asia Pacific Pty Ltd Australia Telephone: 61 (0) 2 4573 6556 <a href="http://www.netclabels.com.uk">http://www.netclabels.com.uk</a>

---

## Appendix D. Repairing a Cartridge

**Attention:** Use a repaired tape cartridge only to recover data and move it to another cartridge. Continued use of a repaired cartridge may void the warranties of the drive and the cartridge.

If the leader pin in your cartridge becomes dislodged from its pin-retaining spring clips or detaches from the tape, you must use the IBM Leader Pin Reattachment Kit (part number 08L9129) to reposition or reattach it. (Do not reattach the pin if you must remove more than seven meters (23 feet) of leader tape.) The sections that follow describe each procedure.

**Attention:** Use a repaired tape cartridge only to recover data and move it to another cartridge. Continued use of a repaired cartridge may void the warranties of the drive and the cartridge.

### Examples of Cartridge Problems

#### Example: Split Cartridge Case (see “Perform a Thorough Inspection” on page 4-7)

The cartridge's case is damaged. There is a high possibility of media damage and potential loss. Perform the following steps:

1. Look for cartridge mishandling.
2. Use the IBM Leader Pin Reattachment Kit (part number 08L9129) to correctly seat the pin.
3. Use data recovery procedures to minimize chances of data loss.
4. Review media-handling procedures.

#### Example: Improper Placement of Leader Pin (see Figure D-1 on page D-2)

The leader pin is misaligned. Perform the following steps:

1. Look for cartridge damage.
2. Use the IBM Leader Pin Reattachment Kit (part number 08L9129) to correctly seat the pin.
3. Use data recovery procedures to minimize chances of data loss.


---

## Repositioning a Leader Pin

To place the leader pin in its proper position, you will need the following tools:

- Plastic or blunt-end tweezers
- Cartridge manual rewind tool (from Leader Pin Reattachment Kit, part number 08L9129)


A leader pin that is improperly seated inside a cartridge can interfere with the operation of the drive. Figure D-1 on page D-2 shows a leader pin in the incorrect **1** and correct **2** positions.

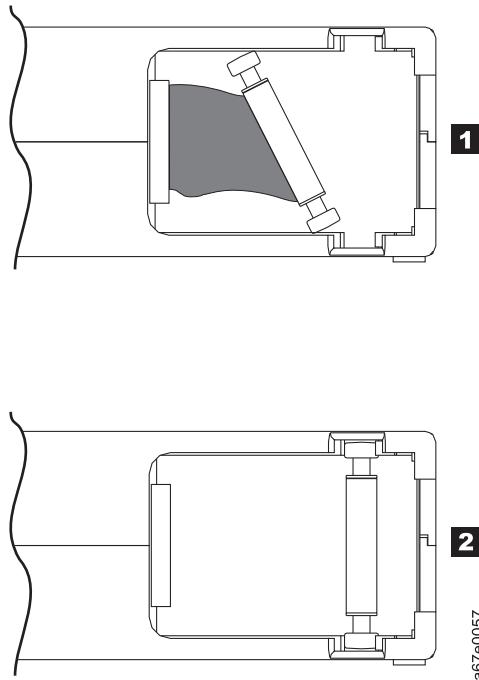

*Figure D-1. Leader pin in the incorrect and correct positions. The cartridge door is open and the leader pin is visible inside the cartridge.*

To reposition the leader pin, refer to Figure D-2 and perform the steps below.

1. Slide open the cartridge door ( **1** ) and locate the leader pin ( **2** )  
**Note:** If necessary, shake the cartridge gently to roll the pin toward the door.
2. With plastic or blunt-end tweezers, grasp the leader pin and position it in the pin-retaining spring clips ( **3** ).
3. Press the leader pin gently into the clips until it snaps into place and is firmly seated.
4. Close the cartridge door.
5. Ensure that there are no gaps in the seam of the cartridge

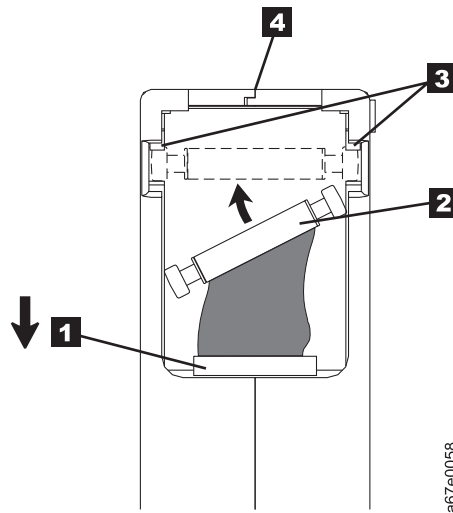

*Figure D-2. Placing the dislodged leader pin into the correct position*

To rewind the tape, refer to Figure D-3 and perform the steps below.

1. Insert the cartridge manual rewind tool ( **1** ) into the cartridge's hub ( **2** ) and turn it clockwise until the tape becomes taut.
2. Remove the rewind tool by pulling it away from the cartridge.
3. If you suspect that the cartridge has been mishandled but it appears usable, copy any data onto a good cartridge immediately for possible data recovery. Discard the mishandled cartridge.

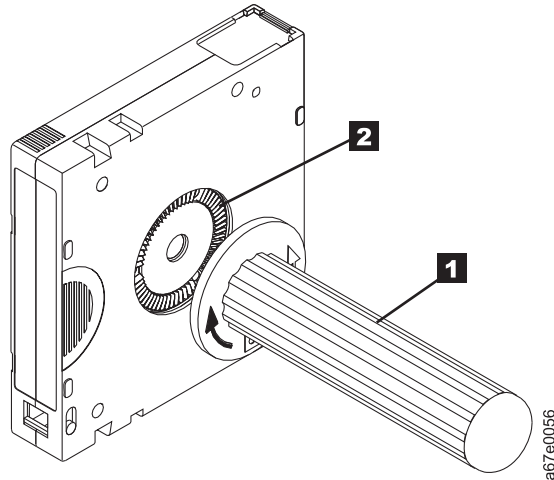


Figure D-3. Rewinding the tape into the cartridge

## Reattaching a Leader Pin

The first meter of tape in a cartridge is leader tape. Once the leader tape has been removed there is a possibility of tape breakage. After reattaching the leader pin, transfer data from the defective tape cartridge. **Do not reuse the defective tape cartridge.**

The Leader Pin Reattachment Kit contains three parts:

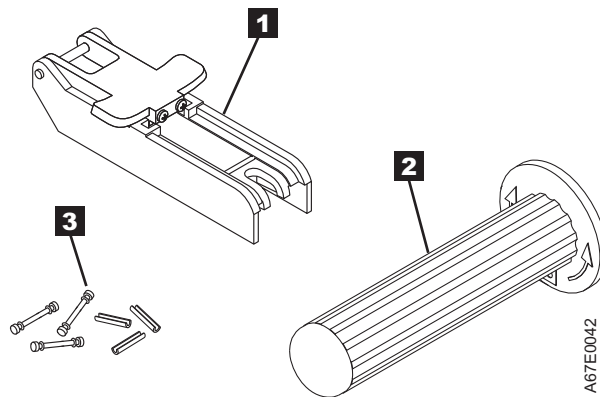


Figure D-4. Leader Pin Reattachment Kit

- **Leader pin attach tool ( 1 ).** A plastic brace that holds the cartridge door open.
- **Cartridge manual rewind tool ( 2 ).** A device that fits into the cartridge's hub and lets you wind the tape into and out of the cartridge.


- **Pin supplies ( 3 ).** Leader pins and C-clips.

**Attention:**

- Use only the IBM Leader Pin Reattachment Kit to reattach the leader pin to the tape. Other methods of reattaching the pin will damage the tape, the drive, or both.
- Use this procedure on your tape cartridge only when the leader pin detaches from the magnetic tape and you must copy the cartridge's data onto another cartridge. Destroy the damaged cartridge after you copy the data. This procedure may affect the performance of the leader pin during threading and unloading operations.
- Touch only the end of the tape. Touching the tape in an area other than the end can damage the tape's surface or edges, which may interfere with read or write reliability.

To reattach a leader pin by using the IBM Leader Pin Reattachment Kit, refer to Figure D-5 and perform the steps below.

1. Attach the leader pin attach tool ( **1** ) to the cartridge ( **2** ) so that the tool's hook ( **3** ) latches into the cartridge's door ( **4** ).
2. Pull the tool back to hold the door open, then slide the tool onto the cartridge. Open the tool's pivot arm ( **5** ).

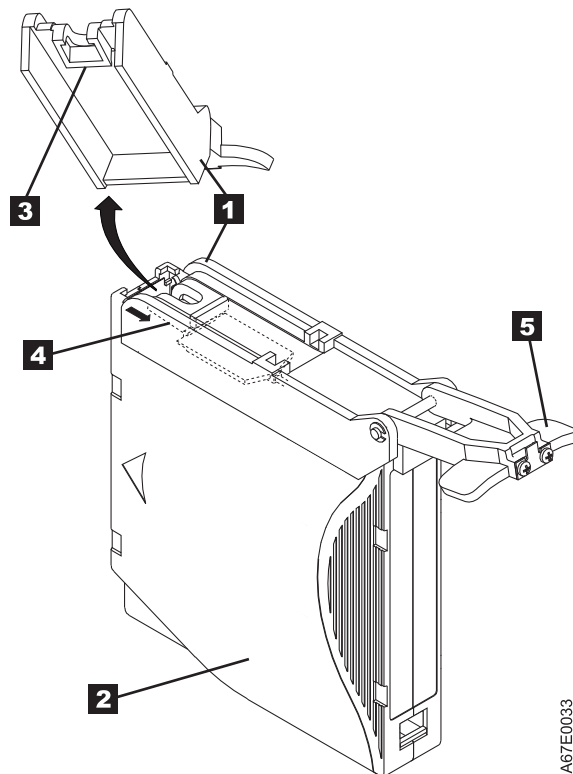


*Figure D-5. Attaching the leader pin attach tool to the cartridge. To hold the cartridge door open, hook the tool into the door and pull the tool back.*

To find the end of the tape inside the cartridge, refer to Figure D-6 on page D-5 and perform the steps below.

1. Attach the cartridge manual rewind tool ( **1** ) to the cartridge's hub ( **2** ) by fitting the tool's teeth between the teeth of the hub. Turn the tool clockwise

until you see the end of the tape inside the cartridge. Then, slowly turn the rewind tool counterclockwise to bring the tape edge toward the cartridge door ( **3** ).


2. Continue to turn the rewind tool counterclockwise until approximately 13 cm (5 in.) of tape hangs from the cartridge door. If necessary, grasp the tape and pull gently to unwind it from the cartridge.
3. Remove the rewind tool by pulling it away from the cartridge. Set the tool and the cartridge aside.

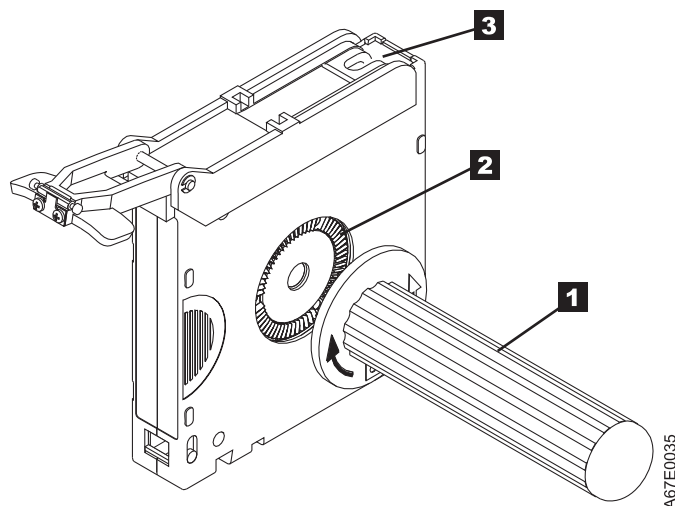

*Figure D-6. Winding the tape out of the cartridge. Turn the cartridge manual rewind tool clockwise to see the end of the tape, then turn it counterclockwise to bring the tape to the cartridge door.*

To remove the C-clip from the leader pin, refer to Figure D-7 and perform the steps below.

1. On the leader pin ( **1** ), locate the open side of the C-clip ( **2** ). The C-clip is a small black part that secures the tape ( **3** ) to the pin.
2. Remove the C-clip from the leader pin by using your fingers to push the clip away from the pin. Set the pin aside and discard the clip.

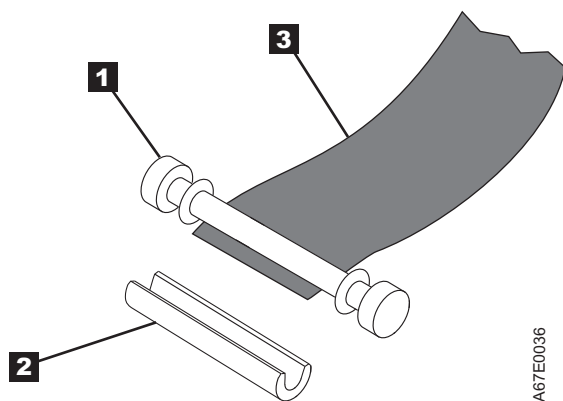

*Figure D-7. Removing the C-clip from the leader pin. Use your fingers to push the C-clip from the leader pin.*

To attach the leader pin to the tape, refer to Figure D-8 on page D-7 and perform the steps below.

1. Position the tape in the alignment groove of the leader pin attach tool ( **1** ).

2. Place a new C-clip into the retention groove ( **2** ) on the leader pin attachment tool and make sure that the clip's open side faces up.
3. Place the leader pin that was removed earlier into the cavity ( **3** ) of the leader pin attach tool.


**Attention:** To prevent the leader pin from rolling into the cartridge, in the following step use care when folding the tape over the pin.

4. Fold the tape over the leader pin and hold it with your fingers.

**Note:** Use care to ensure that the tape is centered over the leader pin. Failure to properly center the tape on the pin will cause the repaired cartridge to fail. When the tape is properly centered, a 0.25 mm (0.01 in.) gap exists on both sides of the pin.

5. Close the pivot arm ( **4** ) of the leader pin attach tool by swinging it over the leader pin so that the C-clip snaps onto the pin and the tape.
6. Swing the pivot arm open and trim the excess tape ( **5** ) so that it is flush with the reattached leader pin ( **6** ).
7. Use your fingers to remove the leader pin from the cavity ( **3** ) in the leader pin attach tool.
8. Use the cartridge manual rewind tool to wind the tape back into the cartridge (wind the tape clockwise). Ensure that the leader pin is latched by the pin-retaining spring clips on each end of the leader pin.
9. Remove the rewind tool.
10. Remove the leader pin attach tool by lifting its end up and away from the cartridge.



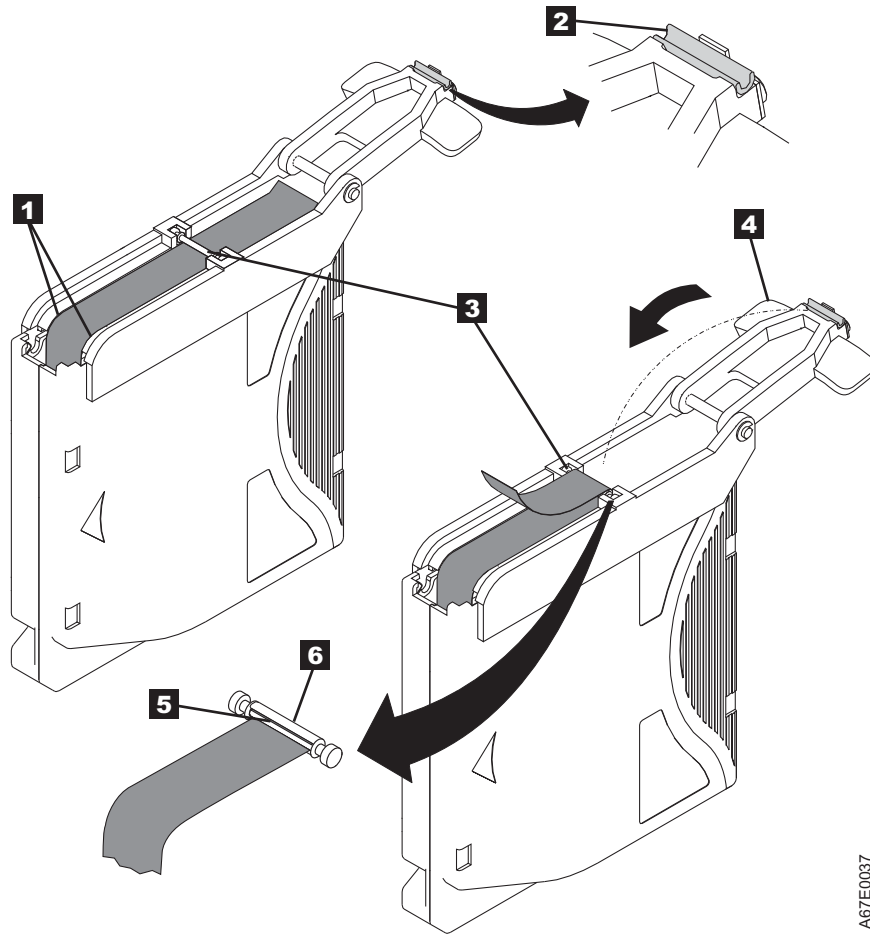

A67E0037

Figure D-8. Attaching the leader pin to the tape



---

## Appendix E. Information for Trained Service Personnel

### Attention

- It is strongly recommended that the drive and stuck tape be returned to IBM for removal and recovery.
- These procedures must be performed only by a trained IBM service provider. SSRs should claim their time against service code 33 ECA 013 when performing this procedure.
- Inform the customer the following procedure has high risk of damaging the drive and high risk of not being able to recover the data.

---

## Removing a Drive from an Enclosure

Depending on the type of enclosure, removal procedures may vary. The following generic procedure can be used if the enclosure documentation is not available for the different enclosure types.


### Removing the Internal Drive

**This Procedure is to be performed by IBM Service Personnel only.**

**Note:** One of the four screws securing the cover to the chassis is a tamperproof screw. A T20 Torx tamperproof screwdriver is required to remove the cover.

#### Step 1. Remove the Cover

1. Unplug all cables from the rear panel of the unit.
2. Move the unit to a clean and sturdy work surface.
3. Turn the unit on its side with the bottom of the unit facing you.
4. Remove the 4 screws ( **1** in Figure E-1 on page E-2) by the feet.

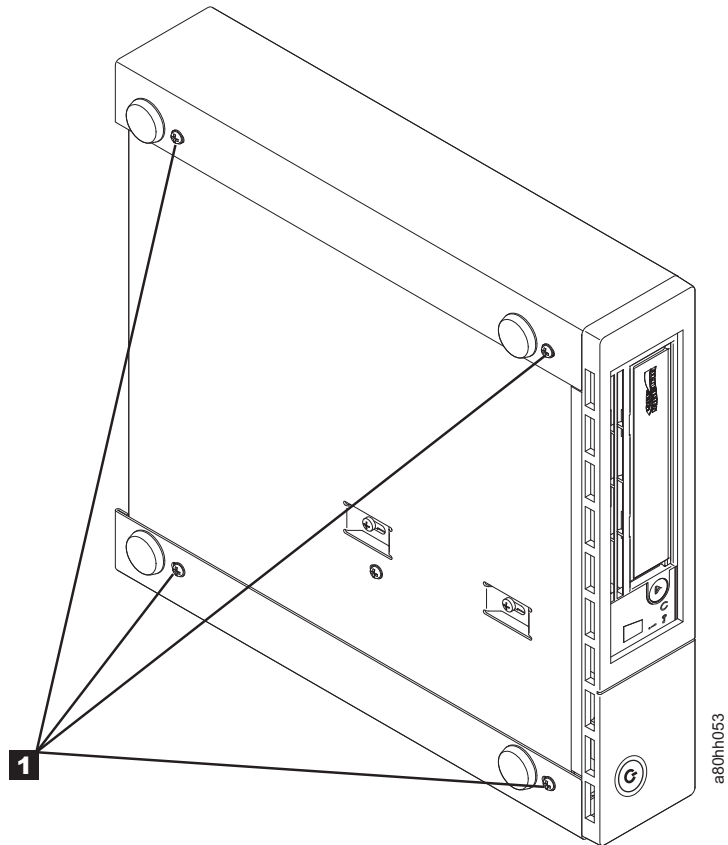

*Figure E-1. Removing the screws that secure the cover and internal drive*

5. Return the unit to its upright position.
6. Gently push on the drive's rear panel to remove the chassis from the cover (see Figure E-2 on page E-3).

## Step 2. Remove the Internal Drive

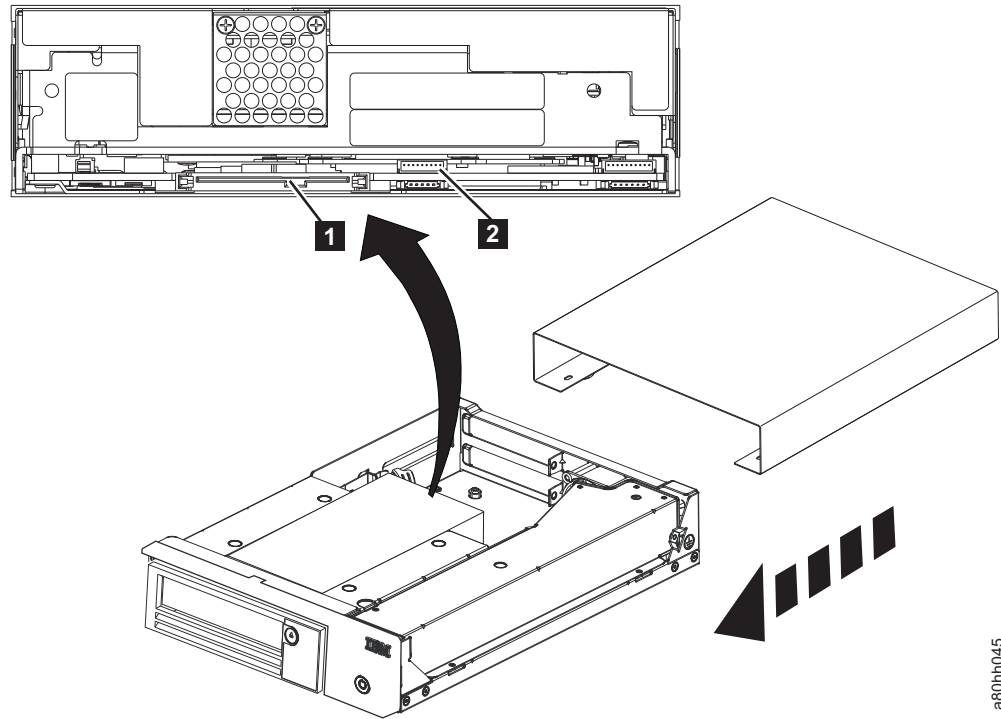


Figure E-2. Removing cables from the internal drive

1. Unplug the SAS interface cable and the ethernet interface cable ( **1** and **2** in Figure E-2) from the drive. Disconnecting the internal SAS interface cable disconnects both the SAS interface and electrical power from the drive.  
**Attention:** DO NOT UNPLUG THE INTERNAL POWER CABLE.
2. Press the latch assembly to release the drive.

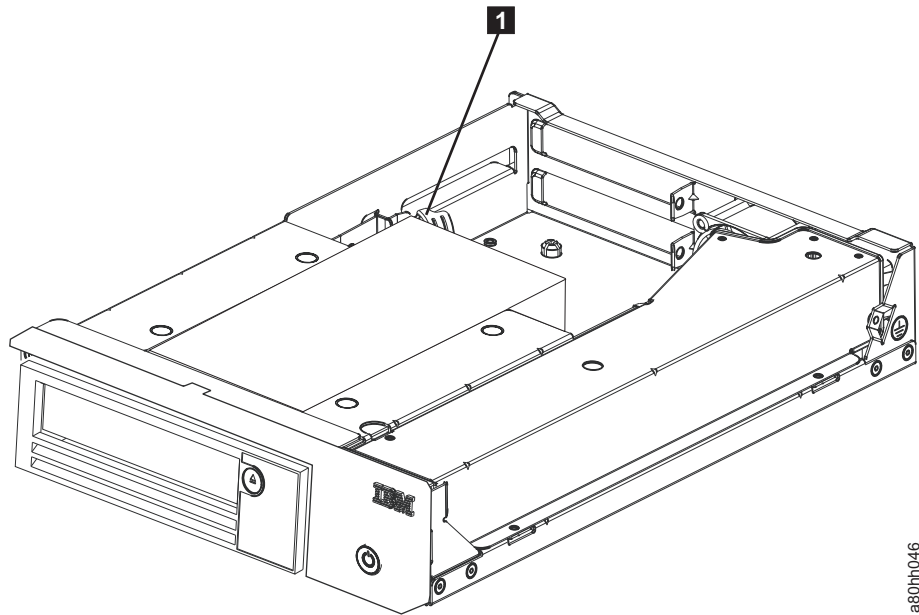


Figure E-3. Releasing the drive from the chassis

3. Slide the internal drive forward towards the front of the chassis to clear the front bezel.

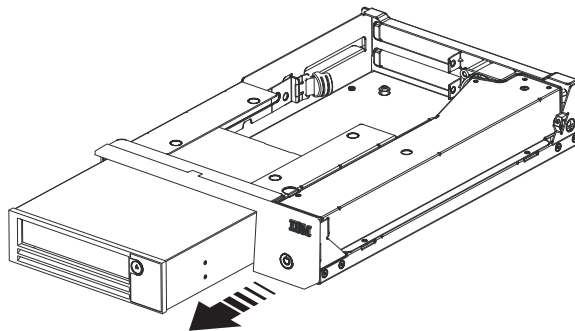


Figure E-4. Sliding the drive forward

## Manually Removing a Tape Cartridge

The purpose of this section is to assist you in determining the condition of the cartridge or the magnetic tape and to direct you to the procedure you must follow to remove the cartridge.

### Attention

- The best solution for recovering data on a damaged cartridge is to send it to IBM for professional data recovery.
- Before using this procedure, you must have exhausted all other means of removing the tape cartridge from the drive. Use this procedure only if you cannot remove the tape cartridge by using any other means.
- Determine from the customer if the cartridge contains critical customer data. If the cartridge contains sensitive data that cannot leave the site, inform the customer that certain failure conditions diagnostics will be performed to test the drive for continued use.

- The following removal procedures can destroy customer data! Use extreme care when handling or removing the customer's tape cartridges to minimize tape damage and lost data.
- DO NOT TOUCH the magnetic tape or tape path. Both are extremely sensitive to the oil and salt from your skin. Use clean, lint-free gloves when working around magnetic tape or the tape path components.
- Electrostatic-sensitive components: Consider using an ESD Kit.
- After you remove the tape cartridge, advise the customer to copy the data to another cartridge and to remove this tape cartridge from service.
- Do not use power tools or magnetic tools to perform this procedure.
- To avoid contamination and electrostatic-discharge damage to the drive, never touch the head or electronic components inside the drive.
- If you cannot remove the cartridge from the drive using the following procedures, contact your next level of support.
- The cartridge will not eject automatically at the end of a mid-tape recovery. Instead, the tape will be reloaded into the drive and may result in the loss of data.
- INTERNAL COMPONENTS OF THE DRIVE ARE DELICATE AND CAN EASILY BE DAMAGED. EXERCISE EXTREME CAUTION WHEN MANUALLY REMOVING A CARTRIDGE THAT WILL NOT EJECT AFTER PRESSING THE UNLOAD BUTTON.

## Before You Begin

1. If you have not already done so, attempt to remove the cartridge with the device power ON and using library manager, a host application, or the unload button. When using the Unload button, press and hold the button for 12 seconds. This will cause the drive to eject the cartridge when it has completed the mid-tape recovery.
2. If you have not already done so, ensure the operator has issued the appropriate application commands to perform a rewind and unload of the cartridge. This is to ensure that the stuck cartridge is not due to a hang condition in the application.
3. If you have not already done so, attempt to remove the cartridge by power cycling the drive. Look for the drive to attempt a midtape recovery.

**Note:** It can take as long as fifteen minutes for the cartridge to rewind and unload.

4. If the cartridge unloads, inform the operator that the cartridge is unloaded. If the cartridge does not unload, repeat steps 2 and 3 once before continuing with this procedure.

## Recommended Tools

- #1 Phillips screwdriver
- ESD Kit
- Flashlight (optional)
- #1 Flathead screwdriver (optional)

## Beginning Procedure

1. Refer to the enclosure documentation for instructions on removing the drive.
2. Place the drive on a non-slip, sturdy work surface.

3. Ground yourself to the drive by using the ESD Kit.
4. Remove the cover of the drive by performing the following steps:
  - a. To remove the drive bezel, pull the right side of the bezel from the front of the drive, then pull the left side of the bezel out of the frame of the drive.
  - b. Remove the cover of the internal drive by performing the following steps:
    - 1) Remove the four cover-mounting screws ( **1** in Figure E-5). Two screws are located on each side of the drive.
    - 2) Remove the cover by lifting it up.

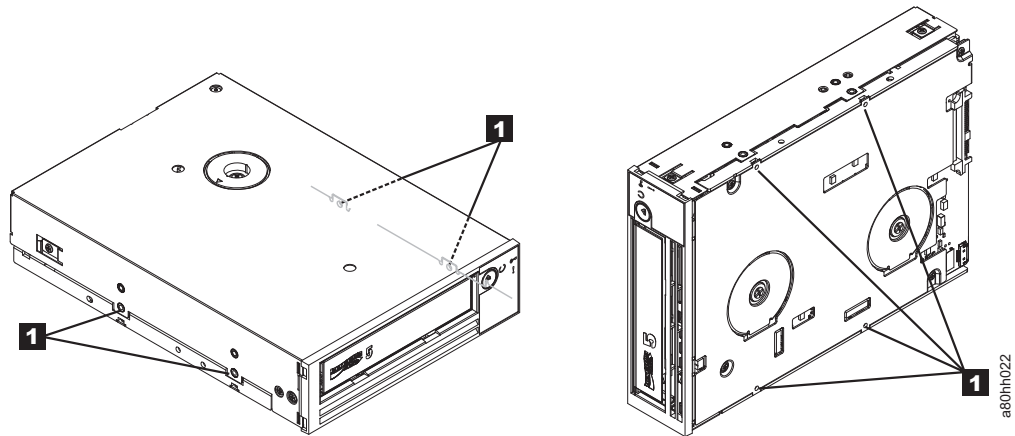


Figure E-5. Removing the bezel and the cover from the internal drive

5. Inspect the drive to decide which of the following conditions most closely matches the symptom on the drive:
  - **Tape spooled off the supply reel** - All the tape appears to be on the takeup reel and no tape is on the supply reel (inside the cartridge). Test the drive after the procedure is completed.
  - **Tape pulled from leader pin (or broken at the front end)** - All the tape appears to be on the supply reel (inside the cartridge) and very little or no tape appears to be on the takeup reel. The leader block is positioned in the takeup reel. Return the drive after the procedure is completed.
  - **Tape broken in mid-tape** - Tape appears to be on both the supply reel (inside the cartridge) and takeup reel. Test the drive after the procedure is completed.
  - **Tape tangled along tape path** - Tape appears to be tangled and damaged but intact. Return the drive after the procedure is completed.

-- OR --

**No damage to tape (or no apparent failure)** - There appears to be no damage or slack to the tape. Return the drive after the procedure is completed.

## Tape Spooled off Supply Reel

**Attention:** DO NOT TOUCH THE OUTER GUIDE RAIL ( **2** in Figure E-6 on page E-7). THIS RAIL IS VERY DELICATE AND EASILY DAMAGED.

1. From the takeup reel, pull an arm's length of tape around the rear of the tape path and over the head and rollers on the left side of the drive.
2. Set the drive on its left side with the head and tape path facing up.
3. Make sure the tape is not twisted. Untwist tape if required.



4. Moisten a cotton swab with water and wet approximately 13 mm (0.5 in.) of the tape end and feed it onto the supply reel (inside the cartridge).
5. Turn the supply reel ( **4** in Figure E-6) clockwise, allowing the moistened tape to adhere to the hub as it winds around the supply reel (inside the cartridge).

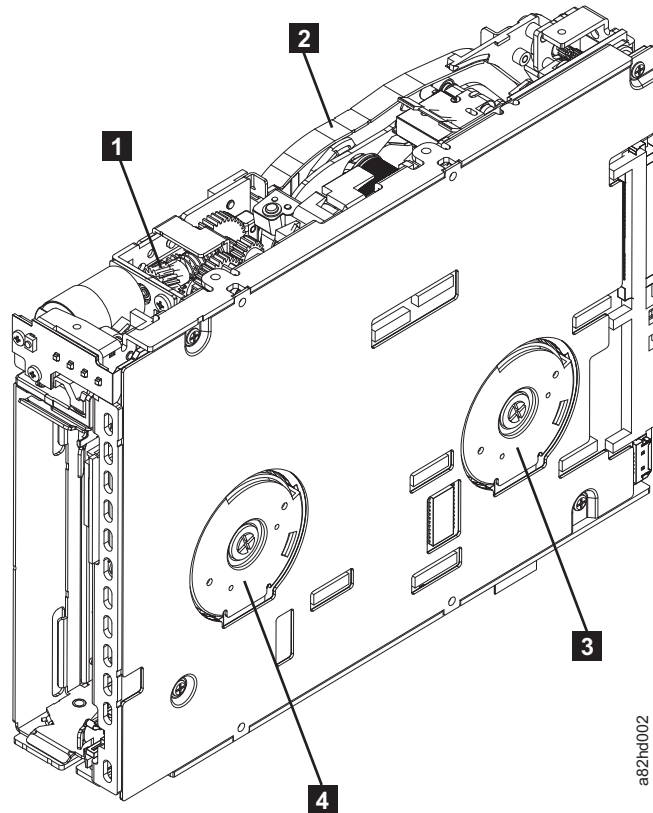


Figure E-6. Rewinding tape into cartridge

- |   |   |
|---|---|
| <p><b>1</b> Loader motor worm gear</p> <p><b>2</b> Outer guide rail</p> | <p><b>3</b> Takeup reel motor</p> <p><b>4</b> Supply reel motor</p> |
|---|---|
- WARNING: DO NOT TOUCH

6. Continue spooling into the cartridge until the tape is taut and remains within the flanges of the tape guiding rollers. Turn the supply reel ( **4** in Figure E-6) 10 additional turns. Ensure that you do not stretch the tape.
7. Reassemble the drive, reversing the steps in “Beginning Procedure” on page E-5.
8. Reassemble the drive chassis, reversing the steps in “Removing a Drive from an Enclosure” on page E-1.
9. Reinstall the drive canister into the cradle assembly. Ensure that the connector on the drive is seated properly into the connector on the cradle.
10. Allow the drive to perform mid-tape recovery. This takes several minutes. When this activity completes, push the Unload button to eject the cartridge.
11. Test the drive (see “Function Code 1: Run Drive Diagnostics” on page 3-9) to determine if it should be replaced.

## Tape Pulled from or Broken near Leader Pin

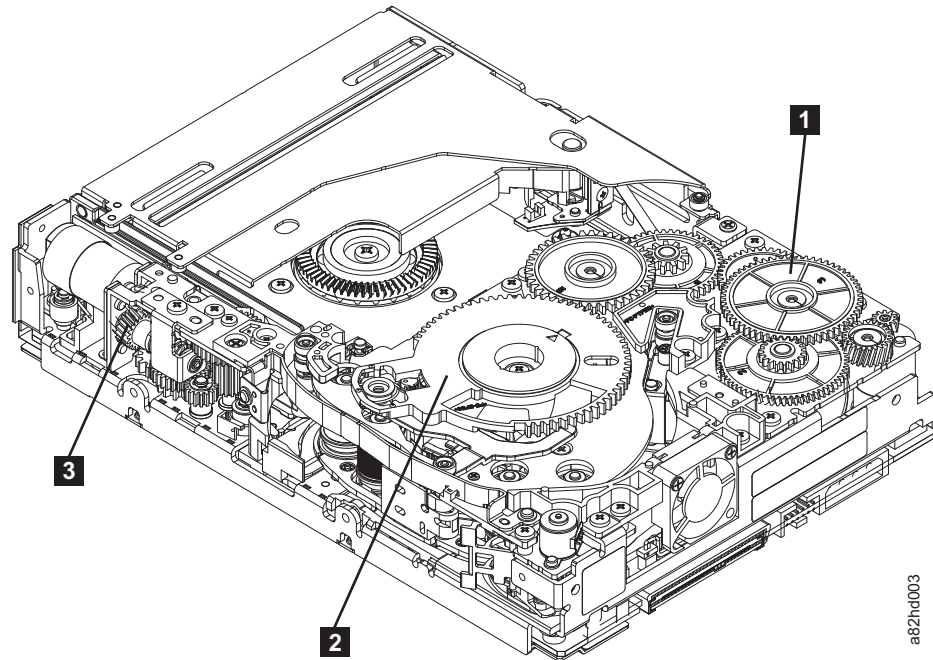


Figure E-7. Drive with cover removed to reveal gear train.

<b>1</b>	Threader intermediate gear	<b>2</b>	Threader mechanism gear	<b>3</b>	Loader motor worm gear
----------	----------------------------------	----------	-------------------------------	----------	---------------------------

1. Pull out tape from the takeup reel.

**Note:** If there is more than approximately 0.6 m (2 ft.) of tape on the takeup reel, go to “Tape Broken in Mid-tape” on page E-9.

2. If there is less than approximately 0.6 m (2 ft.) of tape on the takeup reel, cut off the excess tape as close to the leader pin, as possible.
3. Reattach the leader pin to the remaining tape. For instructions, see Appendix D, “Repairing a Cartridge,” on page D-1.
4. Locate the threader intermediate gear (**1** in Figure E-7) near the rear of the drive. You can use your finger to rotate the threader intermediate gear (**1** in Figure E-7) and slowly rotate the threader mechanism gear (**2** in Figure E-7) clockwise.

This draws the tape leader block assembly (LBA) into the cartridge.

5. As the leader pin is secured in the cartridge, you should hear the leader pin retention spring clips click into place. If you do not hear the click, continue rolling until the threader intermediate gear (**1** in Figure E-7) stops. The LBA is in the correct position.

**Note:** Be sure to keep tension on the tape as the LBA is drawn into the cartridge.

6. Rotate the loader motor worm gear (**3** in Figure E-7) clockwise as viewed from the front of the drive until it stops. This releases the LBA leader pin.
7. Rotate the threader intermediate gear (**1** in Figure E-7) counterclockwise until the leader block is in front of the Read/Write head. This moves the LBA

out of the cartridge.

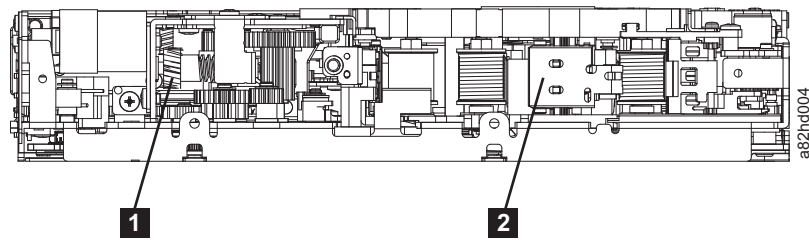


Figure E-8. Leader Block Assembly (LBA)

- 1** Loader motor worm gear      **2** Leader block assembly (LBA)

8. Rotate the loader motor worm gear ( **3** in Figure E-7 on page E-8) counterclockwise as viewed from the front of the drive until it stops.
9. Remove the cartridge from the cartridge loader tray.
10. Reassemble the drive by reversing the procedure in Step 4 in “Beginning Procedure” on page E-5.
11. Reassemble the drive chassis.
12. Refer to the appropriate procedure to install the new drive and return the failed drive.

## Tape Broken in Mid-tape

1. With the front of the drive facing you, pull an arm's length of tape out of the takeup reel. From the takeup reel, thread tape around the rear of the tape path and over the head rollers on the left side of the drive.

**Note:** If there is less than approximately 5 cm (2 in.) of tape on the takeup reel, go to “Tape Pulled from or Broken near Leader Pin” on page E-8.

2. From the supply reel inside the cartridge, pull approximately 0.3 m (1 ft.) of tape.
3. Make sure the tape is not twisted. Untwist tape if required.
4. Moisten a cotton swab with water, and wet approximately 13 mm (0.5 in.) of the tape end. Overlap the tape ends, loosely mending them together.
5. Set the drive on its left side with the head and tape path facing up.
6. Turn the supply reel ( **4** in Figure E-9 on page E-10) clockwise, carefully guiding the mended portion of the tape to wind around the hub of the supply reel located inside the cartridge. Continue spooling into the cartridge until the tape is taut. The tape must remain within the flanges of the tape guiding rollers. Turn the supply reel ( **4** in Figure E-9 on page E-10) 10 additional turns. Ensure that you do not stretch the tape.

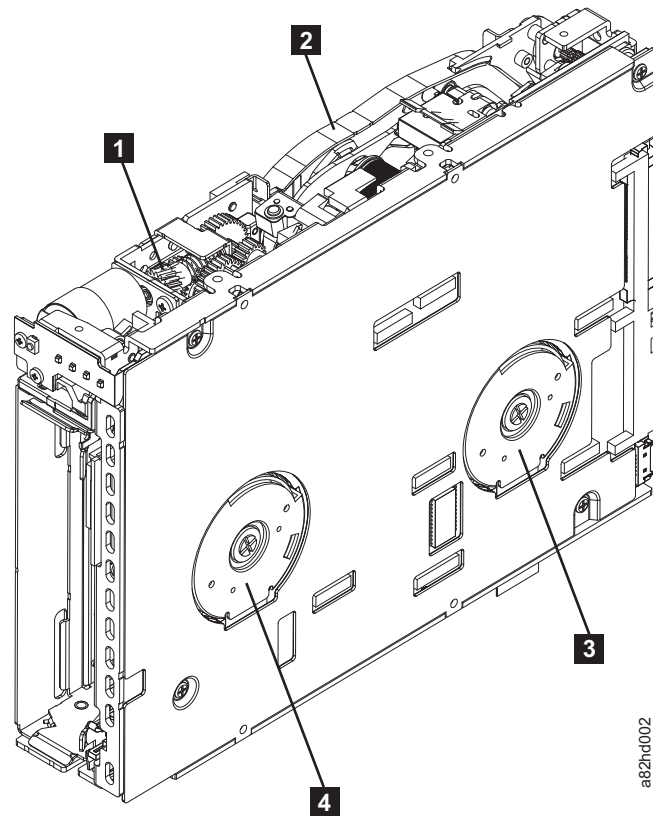


Figure E-9. Rewinding tape into cartridge

- |          |                        |          |                   |
|----------|------------------------|----------|-------------------|
| <b>1</b> | Loader motor worm gear | <b>3</b> | Takeup reel motor |
| <b>2</b> | Outer guide rail       | <b>4</b> | Supply reel motor |
- WARNING: DO NOT TOUCH

7. Reassemble the drive by reversing the procedure in Step 4 in "Beginning Procedure" on page E-5.
8. Reassemble the chassis by reversing the steps in "Removing a Drive from an Enclosure" on page E-1.
9. Allow the drive to perform mid-tape recovery. This takes several minutes. When this activity completes, push the Unload button to eject the cartridge.
10. Test the drive (see "Function Code 1: Run Drive Diagnostics" on page 3-9) to determine if it should be replaced.

## Tape Tangled along Tape Path

1. Carefully pull out excess tape and untangle.

**Note:** If you find the tape to be broken, go to one of the following appropriate procedures:

- "Tape Spooled off Supply Reel" on page E-6
- "Tape Pulled from or Broken near Leader Pin" on page E-8

--OR--

"Tape Broken in Mid-tape" on page E-9

2. Set the drive on its left side with the head and tape path facing up.

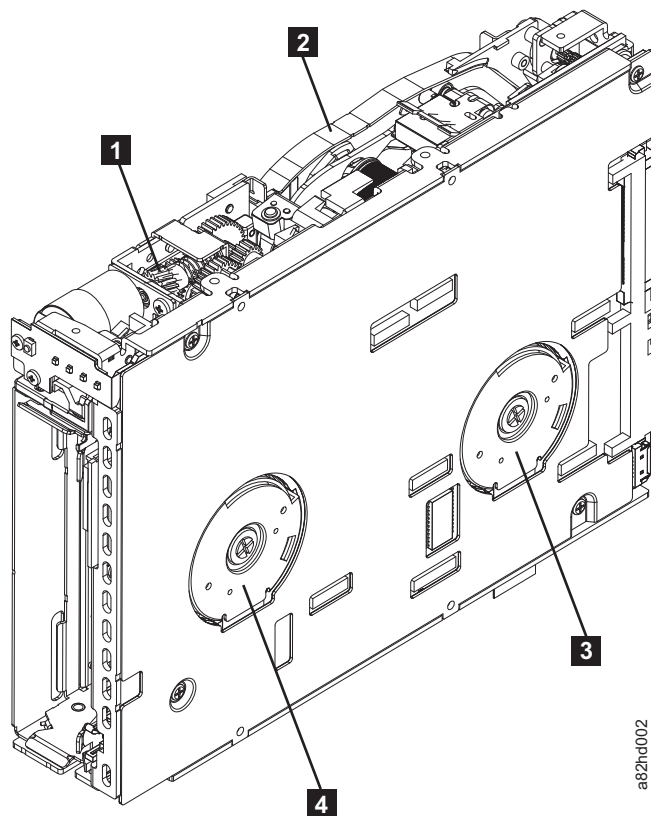


Figure E-10. Rewinding tape into cartridge

- |          |                        |          |                   |
|----------|------------------------|----------|-------------------|
| <b>1</b> | Loader motor worm gear | <b>3</b> | Takeup reel motor |
| <b>2</b> | Outer guide rail       | <b>4</b> | Supply reel motor |
- WARNING: DO NOT TOUCH

3. Turn the supply reel ( **4** in Figure E-10) clockwise.
4. Continue spooling into the cartridge until the tape is taut and remains within the flanges of the tape guiding rollers. turn the supply reel ( **4** in Figure E-10) 10 turns. Ensure that you do not stretch the tape.
5. Reassemble the chassis by following the steps in “Removing a Drive from an Enclosure” on page E-1.
6. Allow the drive to perform mid-tape recovery. This takes several minutes. When this activity completes, push the Unload button to eject the cartridge.
7. Test the drive (see “Function Code 1: Run Drive Diagnostics” on page 3-9) to determine if it should be replaced.

## No Apparent Failure or Damage to Tape

1. Set the drive on its left side with the head and tape path facing up.

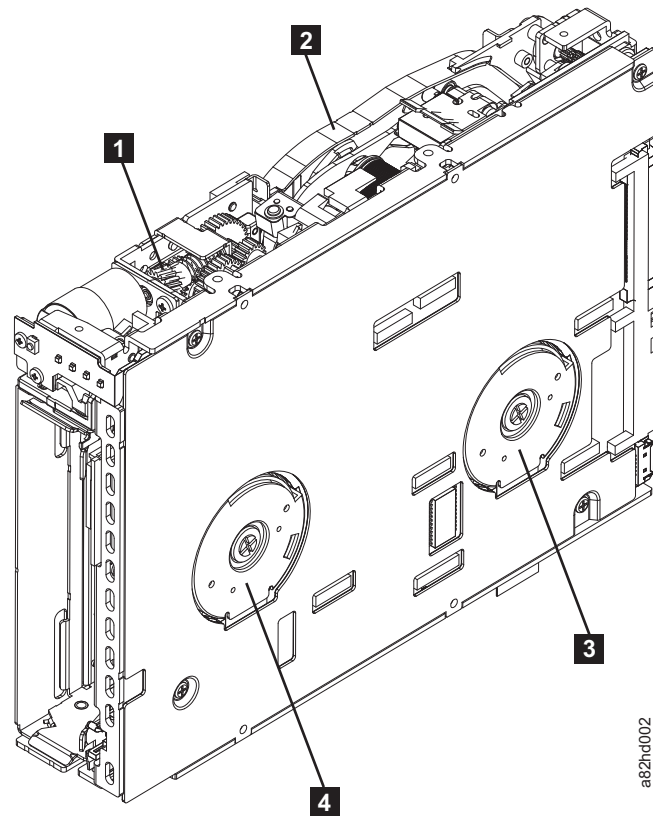


Figure E-11. Rewinding tape into cartridge

- |          |                        |          |                   |
|----------|------------------------|----------|-------------------|
| <b>1</b> | Loader motor worm gear | <b>3</b> | Takeup reel motor |
| <b>2</b> | Outer guide rail       | <b>4</b> | Supply reel motor |
- WARNING: DO NOT TOUCH

2. Begin spooling the tape back into the cartridge by turning the supply reel motor (**4** in Figure E-11) clockwise.
3. Continue spooling into the cartridge until the tape is taut and remains within the flanges of the tape guiding rollers. Ensure that you do not stretch the tape. Continue spooling until all tape is removed from the takeup reel (**3** in Figure E-11).
4. Locate the threader intermediate gear (**1** in Figure E-12 on page E-13) near the rear of the drive. You can use your finger to rotate the threader intermediate gear (**1** in Figure E-12 on page E-13) and slowly rotate the threader mechanism gear (**2** in Figure E-12 on page E-13) clockwise. This draws the tape leader block assembly (LBA) into the cartridge.

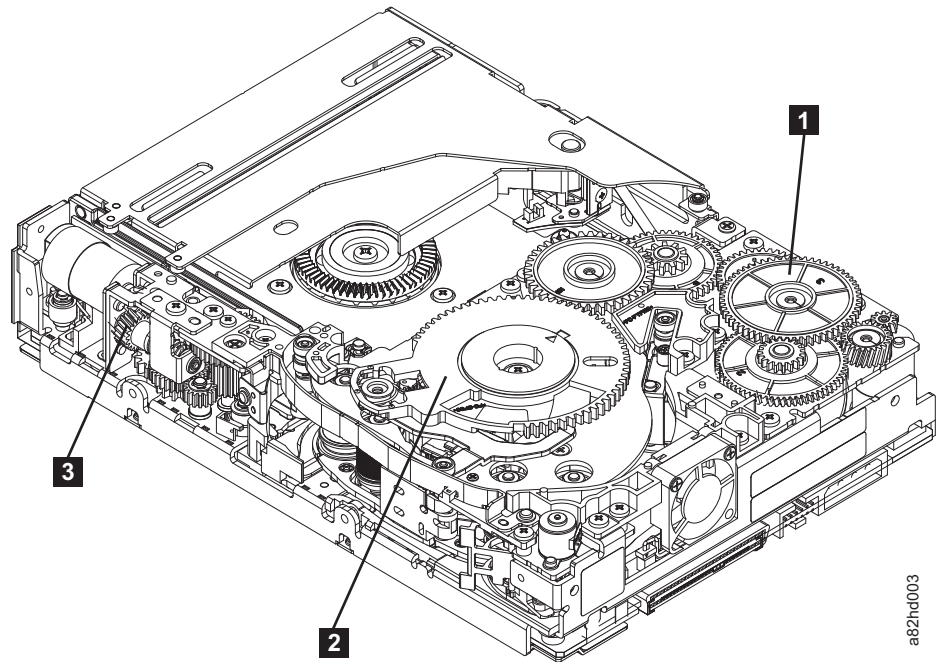


Figure E-12. Drive with cover removed to reveal gear train.

- |          |                                  |          |                               |          |                           |
|----------|----------------------------------|----------|-------------------------------|----------|---------------------------|
| <b>1</b> | Threader<br>intermediate<br>gear | <b>2</b> | Threader<br>mechanism<br>gear | <b>3</b> | Loader motor<br>worm gear |
|----------|----------------------------------|----------|-------------------------------|----------|---------------------------|

5. As the leader pin is secured in the cartridge, you should hear the leader pin retention spring clips click into place. If you do not hear the click, continue rolling until the threader intermediate gear (**1** in Figure E-12) stops. The LBA is in the correct position.

**Note:** Be sure to keep tension on the tape as the LBA is drawn into the cartridge.

6. Rotate the loader intermediate gear (**1** in Figure E-13) clockwise as viewed from the front of the drive until it stops. This releases the LBA leader pin.
7. Rotate the threader motor worm gear (**3** in Figure E-13) counterclockwise until the leader block is in front of the Read/Write head. This moves the LBA out of the cartridge.

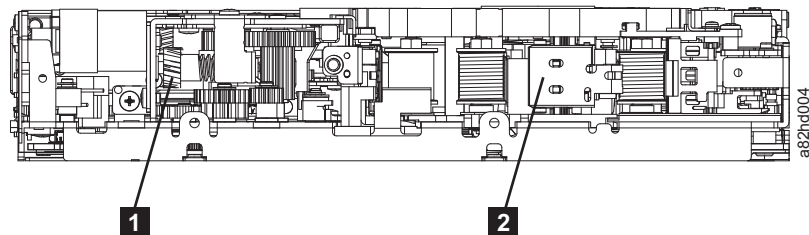


Figure E-13. Leader Block Assembly (LBA)

- |          |                        |          |                             |
|----------|------------------------|----------|-----------------------------|
| <b>1</b> | Loader motor worm gear | <b>2</b> | Leader block assembly (LBA) |
|----------|------------------------|----------|-----------------------------|

8. Rotate the loader motor worm gear (**3** in Figure E-13) counterclockwise as viewed from the front of the drive until it stops.

9. Remove the cartridge from the cartridge loader tray.
10. Reassemble the drive by reversing the procedure in Step 4 in "Beginning Procedure" on page E-5.
11. Reassemble the drive chassis by reversing the steps in "Removing a Drive from an Enclosure" on page E-1.
12. Refer to the appropriate procedure to install the new drive and return the failed drive.



---

## Notices

The information provided by this media supports the products and services described with consideration for the conditions described herein.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.*

**The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:**

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurement may have been

estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

---

## Trademarks

The following terms are trademarks of the International Business Machines Corporation in the United States, other countries, or both.

- AIX
- Enterprise Storage Server
- ESCON
- FICON
- i5/OS
- iSeries
- IBM
- pSeries
- S/390
- System Storage
- TotalStorage
- z/OS
- zSeries

IBM, the IBM logo, and [ibm.com](http://www.ibm.com) are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. If these and other IBM trademarked terms are marked on their first occurrence in this information with a trademark symbol ((R) or (TM)), these symbols indicate U.S. registered or common law trademarks owned by IBM at the time this information was published. Such trademarks may also be registered or common law trademarks in other countries. A current list of IBM trademarks is available on the Web at "Copyright and trademark information" at <http://www.ibm.com/legal/copytrade.shtml>.

Adobe, the Adobe logo, PostScript, and the PostScript logo are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States, and/or other countries.

Java and all Java-based trademarks are trademarks of Sun Microsystems, Inc. in the United States, other countries, or both.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation in the United States, other countries, or both.

Intel, Intel logo, Intel Inside, Intel Inside logo, Intel Centrino, Intel Centrino logo, Celeron, Intel Xeon, Intel SpeedStep, Itanium, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Other company, product, and service names may be trademarks or service marks of others.

---

## **Electronic emission notices**

This section contains the electronic emission notices or statements for the United States and other countries.

### **Federal Communications Commission statement**

This explains the Federal Communications Commission's (FCC) statement.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors, or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device might not cause harmful interference, and (2) this device must accept any interference received, including interference that might cause undesired operation.

### **Industry Canada compliance statement**

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## European Union Electromagnetic Compatibility Directive

This product is in conformity with the protection requirements of European Union (EU) Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

**Attention:** This is an EN 55022 Class A product. In a domestic environment this product might cause radio interference in which case the user might be required to take adequate measures.

Responsible Manufacturer:

International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
914-499-1900

European community contact:

IBM Technical Regulations, Department M456  
IBM-Allee 1, 71137 Ehningen, Germany  
Tel: +49 7032 15-2937  
E-mail: tjahn@de.ibm.com

### Australia and New Zealand Class A Statement

**Attention:** This is a Class A product. In a domestic environment this product might cause radio interference in which case the user might be required to take adequate measures.

### Germany Electromagnetic compatibility directive

**Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:

"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

**Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)." Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A**

Dieses Gerät ist berechtigt, in übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:

International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:

IBM Deutschland  
Technical Regulations, Department M456  
IBM-Allee 1, 71137 Ehningen, Germany  
Tel: +49 7032 15-2937  
e-mail: tjahn@de.ibm.com

**Generelle Informationen:**

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

**People's Republic of China Class A Electronic Emission statement**

**中华人民共和国“A类”警告声明**

**声 明**

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

**Taiwan Class A compliance statement**

警告使用者：  
這是甲類的資訊產品，在  
居住的環境中使用時，可  
能會造成射頻干擾，在這  
種情況下，使用者會被要  
求採取某些適當的對策。

taitemi

## Taiwan contact information

This topic contains the product service contact information for Taiwan.

IBM Taiwan Product Service Contact Information:  
IBM Taiwan Corporation  
3F, No 7, Song Ren Rd., Taipei Taiwan  
Tel: 0800-016-888

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

f2c00790

## Japan VCCI Council Class A statement

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用する  
と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策  
を講ずるよう要求されることがあります。

VCCI-A

## Japan Electronics and Information Technology Industries Association (JEITA) Statement (less than or equal to 20 A per phase)

高調波ガイドライン適合品

jjeita1

## Japan Electronics and Information Technology Industries Association (JEITA) Statement (greater than 20 A per phase)

高調波ガイドライン準用品

jjeita2

## Korean Communications Commission (KCC) Class A Statement

이 기기는 업무용으로 전자파 적합등록을 받은 기기  
이오니, 판매자 또는 사용자는 이점을 주의하시기  
바라며, 만약 잘못 구입하셨을 때에는 구입한 곳에  
서 비업무용으로 교환하시기 바랍니다.

## Russia Electromagnetic Interference (EMI) Class A Statement

ВНИМАНИЕ! Настоящее изделие относится к классу А.  
В жилых помещениях оно может создавать  
радиопомехи, для снижения которых необходимы  
дополнительные меры

rusemi





---

## Glossary

This glossary defines the special terms, abbreviations, and acronyms that are used in this publication. If you do not find the term you are looking for, refer to the index or to the *Dictionary of Computing*, 1994.

### Numbers

#### 2:1 compression

The relationship between the quantity of data that can be stored with compression as compared to the quantity of data that can be stored without compression. In 2:1 compression, twice as much data can be stored with compression as can be stored without compression.

### A

**A** Ampere.

**ac** Alternating current.

#### access method

A technique for moving data between main storage and input or output devices.

#### adapter card

A circuit board that adds function to a computer.

**adj** Adjustment.

**AIX** Advanced Interactive Executive. IBM's implementation of the UNIX operating system. The RS/6000 system, among others, uses AIX as its operating system.

#### alphanumeric

Pertaining to a character set that contains letters, numerals, and usually other characters, such as punctuation marks.

**alter** To change.

#### ambient temperature

The temperature of air or other media in a designated area, particularly the area surrounding equipment.

#### ampere (A)

A unit of measure for electric current that is equivalent to a flow of one coulomb per second, or to the current produced by one volt applied across a resistance of one ohm.

**ANSI** American National Standards Institute.

#### archive

To collect and store files in a designated place.

**ASCII** American National Standard Code for Information Interchange. A 7 bit coded character set (8 bits including parity check) that consists of control characters and graphic characters.

#### assigning a device

The establishing of the relationship of a device to a running task, process, job, or program.

**assignment**

The naming of a specific device to perform a function.

**asynchronous**

Pertaining to two or more processes that do not depend upon the occurrence of specific events such as common timing signals.

**attention (notice)**

A word for calling attention to the possibility of danger to a program, device, or system, or to data. Contrast with *caution* and *danger*.

**ATTN** Attention.

**B****backup**

To make additional copies of documents or software for safekeeping.

**bar code**

A code representing characters by sets of parallel bars of varying thickness and separation which are read optically by transverse scanning.

**bar code label**

Paper bearing a bar code and having an adhesive backing. The bar code label must be affixed to a tape cartridge to enable the library to identify the cartridge and its volume serial number.

**bar code reader**

A laser device specialized for scanning and reading bar codes and converting them into either the ASCII or EBCDIC digital character code.

**bezel** Decorative and safety cover.

**bicolored**

Having two colors.

**bit** Either of the digits 0 or 1 when used in the binary numbering system.

**BM or bill of materials**

A list of specific types and amounts of direct materials expected to be used to produce a given job or quantity of output.

**browser**

A client program that initiates requests to a Web server and displays the information that the server returns.

**buffer**

A routine or storage used to compensate for a difference in rate of flow of data or time of occurrence of events, when transferring data from one device to another.

**bus** A facility for transferring data between several devices located between two end points, only one device being able to transmit at a given moment.

**byte** A string consisting of a certain number of bits (usually 8) that are treated as a unit and represent a character. A fundamental data unit.

**C****capacity**

The amount of data that can be contained on storage media and expressed in bytes of data.

**cartridge manual rewind tool**

A device that can be fitted into the reel of a cartridge and used to rewind tape into or out of the cartridge.

**cartridge storage slot**

Individual slot located within a magazine that is used to house tape cartridges.

**caution (notice)**

A word to call attention to possible personal harm to people. Contrast with *attention* and *danger*.

**CE** Customer engineer; field engineer; service representative.

**centimeter (cm)**

One one-hundredth of a meter (0.01 m). Approximately 0.39 inch.

**channel command**

An instruction that directs a data channel, control unit, or device to perform an operation or set of operations.

**char** Character.

**CHK** Check.

**cleaning cartridge**

A tape cartridge that is used to clean the heads of a tape drive. Contrast with *data cartridge*.

**command**

A control signal that initiates an action or the start of a sequence of actions.

**compact disc (CD)**

A disc, usually 4.75 inches in diameter, from which data is read optically by means of a laser.

**compression**

The process of eliminating gaps, empty fields, redundancies, and unnecessary data to shorten the length of records or blocks.

**concurrent**

Refers to diagnostic procedures that can be run on one control unit while the rest of the subsystem remains available for customer applications.

**contingent connection**

A connection between a channel path and a drive caused when a unit check occurs during an I/O operation.

**controller**

A device that provides the interface between a system and one or more tape drives.

**CP** Circuit protector.

**ctrl** Control.

**CU** Control unit.

**D**

**danger (notice)**

A word to call attention to possible lethal harm to people. Contrast with *attention* and *caution*.

- data** Any representations such as characters or analog quantities to which meaning is or might be assigned.
- data buffer**  
The storage buffer in the control unit. This buffer is used to increase the data transfer rate between the control unit and the channel.
- data cartridge**  
A tape cartridge dedicated to storing data. Contrast with *cleaning cartridge*.
- data check**  
A synchronous or asynchronous indication of a condition caused by invalid data or incorrect positioning of data.
- dc** Direct current.
- degauss**  
To make a magnetic tape nonmagnetic by means of electrical coils carrying currents that neutralize the magnetism of the tape.
- degausser**  
A device that makes magnetic tape nonmagnetic.
- degradation**  
A decrease in quality of output or throughput or an increase in machine error rate.
- degraded**  
Decreased in quality of output or throughput or increased machine error rate.
- deserialize**  
To change from serial-by-bit to parallel-by-byte.
- detented**  
A part being held in position with a catch or lever.
- device** Any hardware component or peripheral, such as a tape drive or tape library, that can receive and send data.
- device driver**  
A file that contains the code needed to use an attached device.
- DIAG**  
Diagnostic section of maintenance information manual.
- differential**  
See *High Voltage Differential (HVD)*.
- direct access storage**  
A storage device in which the access time is independent of the location of the data.
- DNS** Directory Name System. This allows the library to recognize text-based addresses instead of numeric IP addresses.
- download**  
To transfer programs or data from a computer to a connected device, typically a personal computer.  
  
To transfer data from a computer to a connected device, such as a workstation or microcomputer.
- DRAM**  
Dynamic random-access memory.

**drive, magnetic tape**

A mechanism for moving magnetic tape and controlling its movement.

**DRV** Drive.

**DSE** Data security erase.

**DSP** Digital signal processor.

**E**

**EBCDIC**

Extended binary-coded decimal interchange code.

**EC** Edge connector. Engineering change.

**ECC** Error correction code.

**EEPROM**

Electrically erasable programmable read-only memory.

**EIA** Electronics Industries Association.

**EIA unit**

A unit of measure, established by the Electronic Industries Association, equal to 44.45 millimeters (1.75 inches).

**eject** To remove or force out from within.

**electronic mail**

Correspondence in the form of messages transmitted between user terminals over a computer network.

**e-mail** See *electronic mail*.

**EPO** Emergency power off.

**EPROM**

Erasable programmable read only memory.

**EQC** Equipment check.

**equipment check**

An asynchronous indication of a malfunction.

**Error log**

A dataset or file in a product or system where error information is stored for later access.

**ESD** Electrostatic discharge.

**F**

**fault symptom code (FSC)**

A hexadecimal code generated by the drive or the control unit microcode in response to a detected subsystem error.

**FC** Feature code.

**FCC** Federal communications commission.

**FE** Field engineer, customer engineer, or service representative.

**fiducial**

A target used for teaching a physical location to a robot.

**field replaceable unit (FRU)**

An assembly that is replaced in its entirety when any one of its components fails.

**file** A named set of records stored or processed as a unit. Also referred to as a dataset.

**file protection**

The processes and procedures established in an information system that are designed to inhibit unauthorized access to, contamination of, or deletion of a file.

**file transfer protocol (FTP)**

In the Internet suite of protocols, an application layer protocol that uses TCP and Telnet services to transfer bulk-data files between machines or hosts.

**firmware**

Proprietary code that is usually delivered as microcode as part of an operating system. Firmware is more efficient than software loaded from an alterable medium and more adaptable to change than pure hardware circuitry. An example of firmware is the Basic Input/Output System (BIOS) in read-only memory (ROM) on a PC motherboard.

**FLASH EEPROM**

An electrically erasable programmable read-only memory (EEPROM) that can be updated.

**FMR** Field microcode replacement.

**format**

The arrangement or layout of data on a data medium.

**formatter**

Part of a magnetic tape subsystem that performs data conversion, speed matching, encoding, first level error recovery, and interfaces to one or more tape drives.

**FP** File protect.

**frayed** Damaged as if by an abrasive substance.

**FRU** Field replaceable unit.

**FSC** Fault symptom code.

**FSI** Fault symptom index.

**functional microcode**

Microcode that is resident in the machine during normal customer operation.

**G**

**g** Gram.

**GB** gigabyte.

**GBIC** Gigabit Interface Converter.

**Gbi** gigabit

**gigabit (Gbit)**

1 000 000 000 bits.

**gigabyte (GB)**

1 000 000 000 bytes.

**Gigabit Interface Converter (GBIC)**

Converts copper interface to optic interface.

**gnd** Ground.

**H****hertz (Hz)**

Unit of frequency. One hertz equals one cycle per second.

**hex** Hexadecimal.

**High Voltage Differential (HVD)**

A logic signaling system that enables data communication between a supported host and the library. HVD signaling uses a paired plus and minus signal level to reduce the effects of noise on the SCSI bus. Any noise injected into the signal is present in both a plus and minus state, and is thereby canceled. Synonymous with *differential*.

**HVD** SCSI Bus High Voltage Differential

**Hz** Hertz (cycles per second).

**I****IBM Ultrium Tape Drive**

Located within the library, a data-storage device that controls the movement of the magnetic tape in an IBM LTO Ultrium Tape Cartridge. The drive houses the mechanism (drive head) that reads and writes data to the tape.

**ID** Identifier.

**identifier (ID)**

(1) In programming languages, a lexical unit that names a language object; for example, the names of variables, arrays, records, labels, or procedures. An identifier usually consists of a letter optionally followed by letters, digits, or other characters. (2) One or more characters used to identify or name data element and possibly to indicate certain properties of that data element. (3) A sequence of bits or characters that identifies a program, device, or system to another program, device, or system.

**IML** Initial microprogram load.

**initial microprogram load (IML)**

The action of loading a microprogram from an external storage to writable control storage.

**initiator**

The component that executes a command. The initiator can be the host system or the tape control unit.

**INST** Installation.

**interface**

A shared boundary. An interface might be a hardware component to link two devices or it might be a portion of storage or registers accessed by two or more computer programs.

**interposer**

The part used to convert a 68-pin connector to a 50-pin D-shell connector.

**intervention required**

Manual action is needed.

**INTRO**

Introduction.

**I/O** Input/output.

**IOP** Input/output processor.

**IPL** Initial program load.

**ITST** Idle-time self-test.

**K****kilogram (kg)**

One thousand grams (approximately 2.2 pounds).

**km** kilometer. 1000 Meters, Approximately 5/8 mile.

**L**

**LAN** Local area network. A computer network within a limited area.

**LCD** See *liquid crystal display*.

**LDAP** Lightweight Directory Access Protocol. This allows the library to use login and password information stored on a server to grant access to the library functionality.

**LED** Light-emitting diode.

**Linear Tape-Open (LTO)**

A type of tape storage technology developed by the IBM Corporation, Hewlett-Packard, and Certance. LTO technology is an “open format” technology, which means that its users will have multiple sources of product and media. The “open” nature of LTO technology enables compatibility between different vendors' offerings by ensuring that vendors comply with verification standards. The LTO technology is implemented in two formats: the Accelis format focuses on fast access; the Ultrium format focuses on high capacity. The Ultrium format is the preferred format when capacity (rather than fast access) is the key storage consideration. An Ultrium cartridge has a compressed data capacity of up to 800 GB (2:1 compression) and a native data capacity of up to 400 GB.

**liquid crystal display (LCD)**

A low-power display technology used in computers and other I/O devices.

**loadable**

Having the ability to be loaded.

**LTO cartridge memory (LTO-CM)**

Within each LTO Ultrium data cartridge, an embedded electronics and interface module that can store and retrieve a cartridge's historical usage and other information.

**LVD** SCSI Bus Low Voltage Differential

**M**

**m** Meter. In the Metric System, the basic unit of length; equal to approximately 39.37 inches.



**magnetic tape**

A tape with a magnetical surface layer on which data can be stored by magnetic recording.

**MAP** Maintenance analysis procedure.

**mask** A pattern of characters that controls the retention or elimination of portions of another pattern of characters. To use a pattern of characters to control the retention or elimination of portions of another pattern of characters.

**master file**

A file used as an authority in a given job and that is relatively permanent, even though its contents may change. Synonymous with main file.

**MB** Mega Byte (usually expressed as data rate in MB/s or MB/second).

**media capacity**

The amount of data that can be contained on a storage medium, expressed in bytes of data.

**media-type identifier**

Pertaining to the bar code on the bar code label of the IBM Ultrium Tape Cartridge, a 2-character code, L1, that represents information about the cartridge. L identifies the cartridge as one that can be read by devices which incorporate LTO technology; 1 indicates that it is the first generation of its type.

**mega** One million of.

**meter** In the Metric System, the basic unit of length; equal to approximately 39.37 inches.

**micro** One millionth of.

**microcode**

(1) One or more micro instructions. (2) A code, representing the instructions of an instruction set, implemented in a part of storage that is not program-addressable. (3) To design, write, and test one or more micro instructions. (4) See also *microprogram*.

**microdiagnostic routine**

A program that runs under the control of a supervisor, usually to identify field replaceable units.

**microdiagnostic utility**

A program that is run by the customer engineer to test the machine.

**microinstruction**

A basic or elementary machine instruction.

**microprogram**

A group of microinstructions that when executed performs a preplanned function.

The term microprogram represents a dynamic arrangement or selection of one or more groups of microinstructions for execution to perform a particular function. The term microcode represents microinstructions used in a product as an alternative to hard-wired circuitry to implement certain functions of a processor or other system component.

**MIM** Media information message.

**mm** Millimeter.

**modifier**

That which changes the meaning.

**mount a device**

To assign an I/O device with a request to the operator.

**MP** Microprocessor.

**ms** Millisecond.

**MSG** Message.

**multipath**

Pertaining to using more than one path.

**N**

**N/A** Not applicable.

**node** In a network, a point at which one or more functional units connect channels or data circuits.

**NTP** Network Time Protocol. This allows the library to set its internal date and time based on the date and time of a sever.

**NVS** Nonvolatile storage. A storage device whose contents are not lost when power is cut off.

**O****oersted**

The unit of magnetic field strength in the unrationalized centimeter-gram-second (cgs) electromagnetic system. The oersted is the magnetic field strength in the interior of an elongated, uniformly wound solenoid that is excited with a linear current density in its winding of one abampere per  $4\pi$  centimeters of axial length.

**offline**

Pertaining to the operation of a functional unit without the continual control of a computer. Contrast with *online*.

**online** Pertaining to the operation of a functional unit that is under the continual control of a computer. Contrast with *offline*.

**OPER** Operation.

**ov** Over voltage.

**overflow**

Loss of data because a receiving device is unable to accept data at the rate it is transmitted.

**overtightening**

To tighten too much.

**P****parameter**

A variable that is given a constant value for a specified application and that may denote the application.

**p bit** Parity bit.

**PC** Parity check.

**PCC** Power control compartment.

**PDF** Portable Document Format.

**PE** Parity error. Product engineer.

**pick** Pertaining to the library, to remove, by means of a robotic device, a tape cartridge from a storage slot or drive.

**picker** A robotic mechanism located inside the library that moves cartridges between the cartridge storage slots and the drive.

**PM** Preventive maintenance.

**POR** Power-on reset.

**port** A physical connection for communication between the 3590 and the host processor. The 3590 has two SCSI ports.

**Portable Document Format (PDF)**

A standard specified by Adobe Systems, Incorporated, for the electronic distribution of documents. PDF files are compact, can be distributed globally (via e-mail, the Web, intranets, or CD-ROM), and can be viewed with the Acrobat Reader, which is software from Adobe Systems that can be downloaded at no cost from the Adobe Systems home page.

**PROM**

Programmable read only memory.

**PS** Power supply.

**PWR** Power.

**R**

**rack** A unit that houses the components of a storage subsystem, such as the library.

**rackmount kit**

A packaged collection of articles used to install the rack mounted version of the library.

**RAM** Random access memory.

**Random access memory**

A storage device into which data is entered and from which data is retrieved in a nonsequential manner.

**RAS** Reliability, availability, and serviceability.

**record** A collection of related data or words, treated as a unit.

**recording density**

The number of bits in a single linear track measured per unit of length of the recording medium.

**recoverable error**

An error condition that allows continued execution of a program.

**ref** Reference.

**reg** Register.

**reinventory**

To inventory again.

**retension**

The process or function of tightening the tape onto the cartridge, if it is sensed that the tape has a loose wrap on the cartridge.

**robot** Picker.

**robotics**

Picker assembly.

**RPQ** Request for price quotation.

**R/W** Read/write.

**S**

**s** Seconds of time.

**SAC** Service Action Code. Code developed to indicate possible FRU or FRU's to replace to repair the hardware.

**SAS** Serial attached SCSI interface.

**scratch cartridge**

A data cartridge that contains no useful data, but can be written to with new data.

**SCSI** Small computer system interface.

**segment**

A part.

**sel** Select.

**serialize**

To change from parallel-by-byte to serial-by-bit.

**serializer**

A device that converts a space distribution of simultaneous states representing data into a corresponding time sequence of states.

**servo, servos**

An adjective for use in qualifying some part or aspect of a servomechanism.

**servomechanism**

A feedback control system in which at least one of the system signals represents mechanical motion.

**Small Computer Systems Interface (SCSI)**

A standard used by computer manufacturers for attaching peripheral devices (such as tape drives, hard disks, CD-ROM players, printers, and scanners) to computers (servers). Pronounced "scuzzy". Variations of the SCSI interface provide for faster data transmission rates than standard serial and parallel ports (up to 160 megabytes per second). The variations include:

- Fast/Wide SCSI: Uses a 16-bit bus, and supports data rates of up to 20 MBps.
- SCSI-1: Uses an 8-bit bus, and supports data rates of 4 MBps.
- SCSI-2: Same as SCSI-1, but uses a 50-pin connector instead of a 25-pin connector, and supports multiple devices.
- Ultra SCSI: Uses an 8- or 16-bit bus, and supports data rates of 20 or 40 MBps.
- Ultra2 SCSI: Uses an 8- or 16-bit bus and supports data rates of 40 or 80 MBps.
- Ultra3 SCSI: Uses a 16-bit bus and supports data rates of 80 or 160 MBps.

- Ultra160 SCSI: Uses a 16-bit bus and supports data rates of 80 or 160 MBps.

**SNS** Sense.

**special feature**

A feature that can be ordered to enhance the capability, storage capacity, or performance of a product, but is not essential for its basic work.

**SR** Service representative, see also *CE*.

**SRAM**

Static random access memory.

**SS** Status store.

**ST** Store.

**standard feature**

The significant design elements of a product that are included as part of the fundamental product.

**START**

Start maintenance.

**subsystem**

A secondary or subordinate system, usually capable of operating independently of, or asynchronously with, a controlling system.

**SUPP** Support.

**sync** Synchronous, synchronize. Occurring with a regular or predictable time relationship.

**T**

**tachometer, tach**

A device that emits pulses that are used to measure/check speed or distance.

**tape cartridge**

A container holding magnetic tape that can be processed without separating it from the container.

**tape void**

An area in the tape in which no signal can be detected.

**TCP/IP**

Transmission Control Protocol/Internet Protocol.

**TCU** Tape control unit.

**TH** Thermal.

**thread/load operation**

A procedure that places tape along the tape path.

**TM** Tapemark.

**U**

**UART** Universal asynchronous receiver/transmitter.

**unload**

Prepare the tape cartridge for removal from the drive.

**utilities**

Utility programs.

**utility programs**

A computer program in general support of the processes of a computer; for instance, a diagnostic program.

**uv** Under voltage.

**V****VOLSER**

Volume serial number.

**volume**

A certain portion of data, together with its data carrier, that can be handled conveniently as a unit.

**VPD** Vital product data. The information contained within the tape drive that requires nonvolatile storage used by functional areas of the drive, and information required for manufacturing, RAS, and engineering.

**W**

**word** A character string that is convenient for some purpose to consider as an entity.

**Write** Write command.

**WT** world trade.

**X**

**XR** External register.

**XRA** External register address register.

---

# Index

## A

- ac grounding diagram xiii
- ac grounding inspection xii
- adjust data rate 1-3
- attaching tape drive to server 1-5

## B

- Bar Code Labels 4-4
  - guidelines for using 4-4
- Battery Return Policy xvi

## C

- Cables
  - connecting SAS bus 2-4
- Capacity scaling 1-4
- cartridge
  - compatibility 1-3
  - manual removal from drive E-4
- Cartridge 4-1
  - capacity scaling 4-2
  - Capacity scaling 1-4
  - cleaning 4-4
  - compatibility 4-4
  - data 4-2
  - inserting 3-5
  - mid-tape recovery 3-6
  - proper handling 4-6
  - removing 3-5
  - repairing D-1
  - specifications 4-6
  - Write-Protect Switch 4-2
- Cartridge, environment 4-6
- cartridges
  - types 4-2
- Cartridges
  - inspecting for damage 5-2
  - repairing E-1
  - testing 3-16
- channel calibration 1-4
- cleaning the drive 3-6
- Cover
  - removing E-1
- customize each data channel 1-4

## D

- description of drive 1-1
- Device drivers
  - installing 2-6
  - supported 1-5
- diagnostics 2-5
- Diagnostics 3-13
  - clear error code log 3-16
  - copying drive dump to tape 3-12
  - disabling post error reporting 3-21
  - display error code log 3-15
  - enabling post error reporting 3-21

- Diagnostics (*continued*)
  - Fast Read/Write Test 3-19
  - forcing a drive dump 3-11
  - Load/Unload Test 3-20
  - RS-422 Wrap Test 3-14
  - selecting function 3-6
  - tape drive 3-9
  - test cartridge 3-16
  - Test Head 3-18
  - Write Performance Test 3-17
- Display
  - SCD dot 3-1
  - single-character 3-1
- Disposal of this product xvi
- drive
  - avoiding damage 2-1
  - description 1-1
- Drive
  - features 1-1
  - removing E-1
- drive cleaning 3-6
- drive diagnostics 2-5
- Drive dump
  - capturing 5-1
  - copying to tape 3-12
  - forcing 3-11
- Drive head
  - cleaning 3-6

## E

- end of life plan xviii
- Error code log
  - clear 3-16
  - display 3-15
- Error codes A-1
- errors
  - WORM media 4-3

## F

- Fast Read/Write Test 3-19
- Features of drive 1-1
- Feedback
  - Comments
    - sending iii
  - sending iii
- firmware
  - inhibiting down-leveling 1-4
- Firmware
  - determining level 5-1
  - updating 2-6
    - using FMR tape 2-6
    - using ITDT Tool 2-6
- FMR tape
  - create 3-11
  - unmake 3-15
  - update firmware 3-10
- front panel features 1-2

## G

- glossary G-1
- grounding diagram xiii

## H

- host interface
  - physical characteristics 1-5
- host wrap tes 3-13

## I

- Insert Cartridge 3-16
- installation
  - overview 2-1
  - rack
    - safety xiii
- Installation 2-1
- Internal drive
  - removing E-3

## L

- Labels
  - bar code 4-4
  - guidelines for using 4-4
- laser
  - compliance xiii
  - safety xiii
- leader pin
  - reattaching D-3
  - repositioning D-1
- liquid crystal display disposal xvi
- Load/Unload Test 3-20
- Location rules 2-4

## M

- Maintenance
  - create FMR tape 3-11
  - update firmware with FMR tape 3-10
- Maintenance Function
  - selecting function 3-6
  - unmaking an FMR tape 3-15
- Maintenance Mode
  - entering 3-8
  - exiting 3-8, 3-9
- media
  - acclimating 4-7
  - cartridge compatibility 1-3
  - disposing 4-10
  - environmental conditions 4-7
  - environmental specifications 4-10
  - handling 4-8
  - inspecting 4-7
  - packaging properly 4-8
  - shipping specifications 4-10
  - training 4-7
- Media 4-1

Media (*continued*)  
Capacity scaling 1-4  
inserting 3-5  
mid-tape recovery 3-6  
removing 3-5  
resolving problems 5-4  
Message codes A-1  
My Support iii

## O

operating instructions 3-1  
operating modes 3-1  
Operating systems supported 1-5  
operating systems, supported 1-5  
ordering  
bar code labels C-1  
media C-1  
optional features C-1  
power cords C-1  
replacement parts C-1

## P

Performance 1-3  
Post error reporting  
disabling 3-21  
enabling 3-21  
Power  
connecting 2-5  
cord inspection 2-3  
outlet inspection 2-3  
Problem determination 5-1  
checklist 5-4  
Problems reported by server  
resolving 5-4

## R

rack installation  
safety xiii  
Rack installation 2-2  
Rack Mount Kit  
install 2-2  
Read/Write capability 4-4  
rear panel features 1-2  
Recycling this product xvi  
Remove  
cover E-1  
Removing  
internal drive E-3  
Replacement procedure 5-5  
requirements for attaching tape drive to  
server 1-5  
RS-422 Wrap Test 3-14

## S

safety  
end of life plan xviii  
safety information  
laser compliance xiii  
laser safety xiii  
safety inspection xii  
SAS bus cables 2-4

SAS Host Adapter Card  
installation 2-4  
SAS Host connections  
checking 5-3  
Server connection  
configuring 2-6  
Servers supported 1-5  
servers, supported 1-5  
Service procedures E-1  
Shipment  
verify 2-2  
Verify shipment 2-2  
specifications  
environmental 1-6  
other 1-6  
physical 1-5  
power 1-6  
Specifications  
cartridges 4-6  
environmental 1-5  
physical 1-5  
power 1-5  
speed matching 1-3  
Status Light 3-2  
Support Notification iii  
registration 2-8  
supported SAN components 1-5  
supported servers and operating  
systems 1-5

## T

TapeAlert flags B-1  
Technical Support  
accessing online iii  
My Support iii  
Support Notification iii  
Test Drive Head 3-18  
Trademarks F-2  
training  
media handling 4-7

## U

Unload Button 3-4  
Unpacking shipment 2-1  
Updating firmware 2-6  
using FMR tape 2-6  
using Host Interface 2-6  
using ITDT Tool 2-6

## V

Verifying Host Interface  
Communications 5-3

## W

WORM  
requirements 4-3  
WORM (Write Once, Read Many) 4-3  
WORM media errors 4-3  
Write Once, Read Many (see  
WORM) 4-3  
Write Performance Test 3-17

Write-Protect Switch  
setting 4-2



---

## Readers' Comments — We'd Like to Hear from You

IBM System Storage TS2240  
Setup, Operator, and Service Guide  
Machine Type 3580 Model H4V

Publication No. GC27-3902-00

We appreciate your comments about this publication. Please comment on specific errors or omissions, accuracy, organization, subject matter, or completeness of this book. The comments you send should pertain to only the information in this manual or product and the way in which the information is presented.

For technical questions and information about products and prices, please contact your IBM branch office, your IBM business partner, or your authorized remarketer.

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you. IBM or any other organizations will only use the personal information that you supply to contact you about the issues that you state on this form.

Comments:

Thank you for your support.

Send your comments to the address on the reverse side of this form.

If you would like a response from IBM, please fill in the following information:

\_\_\_\_\_  
Name

\_\_\_\_\_  
Address

\_\_\_\_\_  
Company or Organization

\_\_\_\_\_  
Phone No.

\_\_\_\_\_  
Email address



Cut or Fold  
Along Line

Fold and Tape

Please do not staple

Fold and Tape




NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

International Business Machines Corporation  
Information Development  
Department GZW  
9000 South Rita Road  
Tucson, Arizona U.S.A. 85775-4401

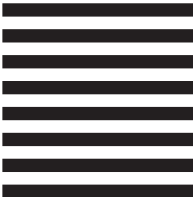

Fold and Tape

Please do not staple

Fold and Tape

Cut or Fold  
Along Line





Part Number: 46C2363

Printed in USA

GC27-3902-00



(1P) P/N: 46C2363



Spine information:



IBM System Storage TS2240

TS2240 Tape Drive Setup, Operator and Service  
manual

Machine Type 3580 Model  
H4V