



i5/OS

i5/OS and related software

Installing, upgrading, or deleting i5/OS and related software

Version 6 Release 1

SC41-5120-10





i5/OS

i5/OS and related software

Installing, upgrading, or deleting i5/OS and related software

Version 6 Release 1

SC41-5120-10

Note

Before using this information and the product it supports, read the information in "Notices," on page 239 and the manual *IBM eServer Safety Information*, G229-9054.

This edition applies to version 6, release 1, modification 0 of IBM i5/OS (product number 5761-SS1) and to all subsequent releases and modifications until otherwise indicated in new editions. This version does not run on all reduced instruction set computer (RISC) models nor does it run on CISC models.

This edition replaces SC41-5120-09.

This document may contain references to Licensed Internal Code. Licensed Internal Code is Machine Code and is licensed to you under the terms of the IBM License Agreement for Machine Code.

© **Copyright IBM Corporation 1998, 2008.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

What's new for V6R1. vii

Chapter 1. Installing, upgrading, or deleting i5/OS and related software. . . . 1

Chapter 2. Fast path for software installation, upgrade, and deletion tasks. 3

Chapter 3. Concepts for software installation 7

Software installation process	7
Types of software installation devices.	10
Contents of a software order.	12
Software licensing documents	12
Media distribution set	14
Individual product documentation.	14
Skipping a release	15
Performance data collection	15
Mixed-release environment	16
Software upgrade or replacement	16
Releases supported and system model information for i5/OS upgrades	16
Installation and IBM-supplied objects.	17
Compressed objects and storage space	18
Files that the system deletes during installation	19
Globalization and i5/OS software installation	19
Considerations for changing a primary language	20
Considerations for installing additional secondary languages	20
Object conversions	21

Chapter 4. Checklist: i5/OS software upgrade or replacement readiness. . . . 23

Chapter 5. Preparing to upgrade or replace i5/OS software 27

Verifying the contents of your software order	27
Identifying and reviewing information resources	27
Verifying the correct optical distribution media	28
Verifying license keys for keyed products	29
Preparing the system for i5/OS software upgrade or replacement	29
Verifying firmware requirements for the new release	29
Reviewing software PTF (fix) requirements.	30
Finding the latest PSP information.	30
Analyzing fixes you currently have on your system	30
Installing PTFs and analyzing your system for object conversions	31
Required (if upgrading from V5R3): Installing the Prepare for Install PTFs for V5R3.	32

Permanently applying program temporary fixes (PTFs)	32
Adding fix support for currently installed licensed programs	33
Working with critical system values before you install software	33
Recording and printing all system values before you install software	33
Changing certain system values (QSYSLIBL, QUSRLIBL, QALWOBJRST, or QVIFYOBRST)	33
Optionally changing the scan control system value	35
Setting the Year offset value	35
Verifying the integrity of user-modified system objects	35
Verifying user profiles and checking cross-reference files	35
Checking the QSECOFR user profile	36
Ensuring that the IBM-supplied product libraries are in the system ASP	36
Ensuring two-phase commit integrity.	36
Minimizing software installation time	37
Gathering performance data for benchmark	38
Gathering performance data with Collection Services	38
Analyzing performance data.	40
Performing initial upgrade or replacement tasks	40
Choosing a software installation method and device	40
Preparing for globalization	40
Preparing the upgrade device and media	40
Preparing to upgrade or replace software using an image catalog	41
Determining storage requirements for image catalog installation.	41
Freeing up space on the load-source disk unit for an image catalog.	41
Preparing an optical image catalog to install software	42
Preparing a tape image catalog to install software	43
Required: Creating a custom list of software to install	45
Preselecting the licensed programs to install	45
Adding additional licensed programs to the installation list	48
Required: Accepting software agreements	49
Ensuring the system meets disk storage requirements for upgrades	50
Determining storage space required for a software upgrade	50
Cleaning up disk storage space.	51
Deleting licensed programs during cleanup	51
Cleaning up user profiles.	52

Required (if upgrading from V5R3M0):	
Allocating additional space for Licensed Internal Code	53
Choosing disk configuration	54
Estimating upgrade or replacement time	54
Preparing your console for software installation	54
Stopping the integrated server and other application servers	55
Saving the system	56
Optional: Running the IBM Pre-Upgrade Verification tool	56

Chapter 6. Upgrading or replacing software using automatic installation . 57

Before you begin automatic installation	57
Replacing software using the automatic installation method	58
Verifying completion of automatic installation	63

Chapter 7. Upgrading or replacing software using manual installation. . . 67

Before you begin manual installation	67
Replacing the Licensed Internal Code	68
Replacing the i5/OS operating system	76
Replacing the licensed programs	82
Verifying completion of manual installation	85

Chapter 8. Checklist: Completing the i5/OS upgrade or replacement. . . . 87

Chapter 9. Replacing Licensed Internal Code and i5/OS of the same version and release. 93

Checklist: i5/OS software replacement	93
Obtaining a record of PTFs applied	95
Permanently applying PTFs for a replacement of the same release	95
Determining storage space required for a replacement of the same release	95
Replacing software of the same release using manual installation	96
Installing PTFs for the Licensed Internal Code and the operating system	96
Checklist: Completing the replacement of the same i5/OS release	96

Chapter 10. Checklist: i5/OS software installation readiness 99

Chapter 11. Installing i5/OS and related software on a new system or logical partition 101

Preparing to install the i5/OS release	101
Verifying the contents of your software order	101
Identifying and reviewing information resources	101
Verifying the correct optical distribution media	102

Verifying license keys for keyed products	102
Performing initial installation tasks	103
Ensuring you have the latest information	103
Determining disk storage space required for a new installation	103
Estimating installation time	103
Preparing your console for software installation	103
Preparing the installation device and media	105
Installing the i5/OS release	105
Installing Licensed Internal Code on a new logical partition	105
Before you begin to install Licensed Internal Code on a logical partition	105
Installing Licensed Internal Code on the new logical partition	106
Installing software on a new system or logical partition (without i5/OS installed)	112
Before you begin to install software on a new system or logical partition	113
Installing i5/OS on a new system or logical partition	113
Installing software on a new system (with i5/OS installed)	123
Before you begin to install software on a new system	123
Performing the initial program load (IPL)	124
Installing additional licensed programs	127
Before you begin to install additional licensed programs	127
Using the Work with Licensed Programs menu to install IBM licensed programs	128
Using the Restore Licensed Programs command to install IBM or non-IBM licensed programs	133
Installing a secondary language	134
Before you begin to install a secondary language	134
Installing secondary languages for IBM licensed programs	134
Installing secondary languages for non-IBM licensed programs	137
Checklist: Completing the i5/OS installation	138

Chapter 12. Changing the primary language of your system or logical partition. 143

Before you begin to change the primary language	143
Changing the primary language	144
Installing the licensed programs after changing the primary language	148

Chapter 13. Deleting software related to the i5/OS operating system 153

Determining what unused parts of products to delete	153
Considerations for deleting licensed programs	155
Deleting licensed programs	155

Chapter 14. Troubleshooting software installation problems 157

Where to begin recovery	157
Image catalog recovery	158
Operations Console recovery	159
Starting point for automatic installation recovery	161
Licensed Internal Code recovery	162
Operating system recovery	164
Licensed programs, PTFs, and secondary language recovery	166
Starting the automatic installation process again	171
Starting the manual installation process again	172
Initialize System (INZSYS) recovery	172
Disk configuration warning and error messages	173
Starting from a power-off condition	175
Reference codes for i5/OS software installation	175
Common reference codes for i5/OS software installation	175
i5/OS installation recovery after using reference codes	178
Chapter 15. i5/OS software reference	181
Licensed program releases and sizes	181
Estimates for i5/OS software installation time	186
Common methods of estimating i5/OS installation time	186
Conditions that affect i5/OS installation time	186
i5/OS installation processes	187
Checklist: Estimating i5/OS installation time	188
Times for installing licensed programs	189
Times for conversions	194
Program conversions	194
Spooled file conversions	195
Integrated file system conversions	197
Conversion of objects that contain SQL statements	198
Database file conversions	199
IBM Backup Recovery and Media Services for i5/OS conversions	199
Data protection mechanisms	200
Installation devices and media	200
Optical media	200
Tape or tape libraries	200
Non-IBM tape device	201
Image catalog for a virtual device	201
Using an alternate installation device	202
Alternate installation device: Overview	202
Setting up an alternate installation device	202

Disabling an alternate installation device	205
Verifying and selecting an alternate installation device during a manual installation	206
i5/OS release interoperability	208
Installation notes about the i5/OS release	209
Media labels and their contents	210
Feature codes for national language version	214
Blank displays	216
Using D-mode IPL to refresh the vital product data	216
System password	219
Installed status values	219
Options on the Prepare for Install menu	220
Options on Work with Licensed Programs menu	222
Manual installation Option 1. Install all.	222
Automatic installation options.	224
Options for displaying, installing, deleting, and saving from a list	224
Option 10. Display installed licensed programs	224
Option 11. Install licensed programs	224
Option 12. Delete licensed programs	226
Option 13. Save licensed programs	227
Options for secondary languages	228
Option 20. Display secondary languages	228
Option 21. Install secondary languages	229
Option 22. Delete secondary languages	230
Completion status	230
Commands related to the Work with Licensed Programs menu	231

**Chapter 16. Related information for
Installing, upgrading, or deleting
i5/OS and related software. 233**

**Chapter 17. Code license and
disclaimer information 237**

Appendix. Notices 239

Programming interface information	241
Trademarks	241
Terms and conditions.	242

Index 243

What's new for V6R1

Read about new or significantly changed information for the Installing, upgrading, or deleting IBM® i5/OS® and related software topic collection.

Program conversions and other object conversions when upgrading to V6R1

To adequately prepare your system for your upgrade to the new release, you will need to allow extra time beforehand to analyze your system and possibly readjust your programs for conversions. The length of time required to analyze your system depends on the type, number, and size of your libraries and directories. You also need to plan in advance for possible down times.

Conversions occur during a software upgrade to V6R1 or during normal operations after the upgrade.

Note: If any of these preparations are normally done by a third party, contact your application provider for advice and assistance.

You will need to install planning PTFs for the release from which you are upgrading (either V5R3 or V5R4) to assist you in the conversion process. These PTFs do not convert your objects but rather enable you to run the Analyze Object Conversion (ANZOBJCVN) command to assist you in preparing for the upgrade. After you run the ANZOBJCVN command, you receive information to help you determine the affect that object conversions will have on your system such as identifying potential conversion difficulties, if any, and supplying estimates on the time required for program conversion. For an overview and timeline on how the conversion tasks fit into the overall upgrade process, see “Software installation process” on page 7. Also review the information “Installing PTFs and analyzing your system for object conversions” on page 31 and the topics under “Times for conversions” on page 194 to determine how the conversions might affect your system.

Optical media for V6R1 is primarily DVD

The optical media for the i5/OS V6R1 operating system is DVD. If you use physical media to install your V6R1 release, you must have a DVD device. Previous typical releases required approximately 13 CD-ROMs. The V6R1 release is available on three optical media. Some individual licensed programs are on CD-ROM. For a description of the V6R1 media, see “Media labels and their contents” on page 210.

Virtual tape devices for release upgrades

In addition to using a tape image catalog and a virtual tape device to install PTF fixes or single licensed programs, you can now also use these to perform an i5/OS software upgrade. Changes for this capability are shown throughout this topic collection.

Virtual optical device type (632B; model 003) for installing fixes or additional licensed programs

This special type of virtual optical device supports virtual image files on a remote system in a network. An image directory identifies a network path on the central system that contains the virtual image files that are prepared for use with a target system. For more information, see Virtual optical storage using the Network File System.

Sharing optical resources

Starting in V6R1, optical resources from an i5/OS logical partition can be used to perform a software upgrade, to install PTFs (fixes), or to install single licensed programs on another logical partition that is on the same system. Supported devices for sharing optical resources include CD-ROM devices, DVD devices, and virtual optical device types 632B-002 and 632B-003. All these devices are considered a 632C-002 device type to the logical partition that is used to install or upgrade. The 632C-002 device type requires that you manually change the media in the logical partition that owns the device. For more information, see 9406-MMA (IBM System i[®] 570) and select the *Logical Partitioning Guide*.

Power Down System command change

The default value for the CONFIRM parameter on the PWRDWNSYS command has changed for V6R1. The default value for the Power Down System (PWRDWNSYS) command is to display a confirmation. You can change the default by specifying *NO for the Confirm (CONFIRM) parameter (CONFIRM(*NO)). This function is valid only if you have V6R1 installed.

What's new for V5R3-to-V6R1 upgrades

Requirements before you install V6R1 Licensed Internal Code

The V6R1 Licensed Internal Code requires more storage space on the load-source disk unit than V5R3M0 Licensed Internal Code. (Your load-source disk unit has enough storage if you have a system with V5R3M5 Licensed Internal Code installed.) To upgrade to the V6R1 Licensed Internal Code, you must have a load-source disk unit of 17 GB or larger. Steps for determining if you have enough storage space are included in Chapter 5, "Preparing to upgrade or replace i5/OS software," on page 27.

In addition, all systems with V5R3 installed require up to approximately 4 gigabytes of system ASP free space before V6R1 can be installed. (A system with V5R3M5 Licensed Internal Code installed already has the 4 gigabytes of free space allocated.) Your upgrade will stop during the installation of Licensed Internal Code if you do not have this space. Steps for determining storage space are included within the topic "Determining storage space required for a software upgrade" on page 50.

Server firmware

The level of the server firmware needs to be managed. (This does not apply to System i 8xx models that support i5/OS V6R1.) *Server firmware* is code that resides in system flash memory, and includes a number of subcomponents, including power control code and the logical partition firmware that is loaded into AIX[®] or Linux logical partitions. The server firmware is part of your machine code. If your system is not managed by a Hardware Management Console (HMC), the level of the server firmware that is on the service partition is used. A *service partition* is one partition on a system that must be set up to report hardware status and software

errors to IBM. Installing a new level of the server firmware will require a server IPL to be performed. A *server IPL* is an initial program load where all logical partitions on a system are shut down at the same time and then restarted.

If your system is managed by an HMC, the level of the server firmware on the service partition is not used. The level of the server firmware is managed by the HMC. For more information about fixes and the HMC, refer to the topic Updates in the IBM Systems Hardware Information Center.

Electronic software delivery

An option when you order V6R1 is to receive i5/OS software online through electronic software delivery. The i5/OS operating system and most related licensed programs support this delivery method.

When you order i5/OS licensed programs, you can select electronic software delivery as the method of delivery. If you select electronic software delivery, you receive information on how to access your ordered licensed programs from the

Entitled software support  Web site. Associated publications and other documentation are also available from the same Web site.

Instructions on how to download and prepare to install your software are available at the Electronic software delivery  (http://www.ibm.com/servers/eserver/support/software/delivery/en_US/downloadinfo.html) Web site.

Software keys available online

You can view, print, or download the software license keys from the Entitled software support  (<http://www.ibm.com/eserver/ess>) Web site. Printed copies of software keys are no longer sent with your i5/OS order. You need to have your customer number and either your order number or system number that is listed on your software packing list available. For further instructions on how to access your online software license keys, refer to the Customer Notice that is included with your software order.

Procedures for replacing Licensed Internal Code and i5/OS of the same version and release

If you order resave media, use this procedure to install a new modification of Licensed Internal Code and a more recent update of i5/OS to support new hardware. Procedures are in the topic Chapter 9, “Replacing Licensed Internal Code and i5/OS of the same version and release,” on page 93.

What's new as of 23 October 2009

Chapter 16, “Related information for Installing, upgrading, or deleting i5/OS and related software,” on page 233

Link to Installing from virtual optical storage using the Network File System document added.

What's new as of 21 March 2008

“Optional: Running the IBM Pre-Upgrade Verification tool” on page 56

Before beginning an upgrade, you can optionally use the IBM Pre-Upgrade Verification tool for i5/OS to verify that you have completed the key pre-upgrade steps.

What's new as of 15 February 2008

“Licensed program releases and sizes” on page 181

The size of Extended Base Directory Support (5761SS1 option 3) has increased to 2315 MB.

What's new as of 29 January 2008

i5/OS client partition considerations

This topic covers considerations for installing and using i5/OS client logical partitions on IBM BladeCenter® blade servers that are managed by the Integrated Virtualization Manager.

“Media labels and their contents” on page 210

Additional Fonts (5761SS1 option 43) and IBM Portable Utilities for i5/OS (5733SC1) are now on the B29xx_02 media.

How to see what's new or changed

To help you see where technical changes have been made, the information center uses:

- The  image to mark where new or changed information begins.
- The  image to mark where new or changed information ends.

In PDF files, you might see revision bars (|) in the left margin of new and changed information.

To find other information about what's new or changed this release, see the Memo to users.

Chapter 1. Installing, upgrading, or deleting i5/OS and related software

This topic collection guides you through the concepts and procedures for installing, upgrading, or deleting i5/OS software on your system.

Use this information to install the i5/OS release, part of the i5/OS release, or licensed programs related to i5/OS. This information also describes how to change a primary language, install a secondary language, or delete software that is related to the i5/OS operating system.

Note: The display examples and procedures in this topic collection show the character-based interface. Many topics in the i5/OS Information Center assume that you have the graphical user interface (System i Navigator) running. Most System i Navigator functions, however, have equivalent control language commands in the character-based interface that you can use.

If you are moving your data to another system with a different serial number, see Data migrations. If you are upgrading to a new system without changing the serial number, see the Server upgrades and data migration topic in the IBM Systems Hardware Information Center.

If you are planning to boot to i5/OS (perform an initial program load) from the load-source disk unit that is attached via the 2847 I/O processor, ensure you see the IBM Redbooks® publication, iSeries and TotalStorage: A Guide to Implementing External Disk on eServer i5; SG24-7120  for important planning and implementation considerations.

References to V5R3 in this topic include both V5R3M0 and V5R3M5. Likewise, references to V5R4 include both V5R4M0 and V5R4M5.

Note: By using the code examples, you agree to the terms of the Chapter 17, “Code license and disclaimer information,” on page 237.

Chapter 2. Fast path for software installation, upgrade, and deletion tasks

Use this information as a shortcut to help you determine the group of tasks you need to perform for your particular i5/OS installation or upgrade.

Task	Steps
Upgrading a release on a system or logical partition (either from V5R3 or V5R4 to V6R1)	<ol style="list-style-type: none"> 1. "Installing PTFs and analyzing your system for object conversions" on page 31. This describes the high-level tasks that are related to V6R1 object conversions, which begin with downloading and applying fixes for object conversion analysis. This step is also part of the overall preparation tasks in step 2. It is specifically identified first so that you have adequate time to analyze your system for object conversions. 2. Chapter 5, "Preparing to upgrade or replace i5/OS software," on page 27 3. Use one of the following methods to upgrade or replace an i5/OS release: <ul style="list-style-type: none"> • Chapter 6, "Upgrading or replacing software using automatic installation," on page 57 • Chapter 7, "Upgrading or replacing software using manual installation," on page 67 4. "Installing additional licensed programs" on page 127 5. "Installing a secondary language" on page 134 6. Review Chapter 8, "Checklist: Completing the i5/OS upgrade or replacement," on page 87
Replacing Licensed Internal Code and i5/OS of the same version and release to support new hardware.	Chapter 9, "Replacing Licensed Internal Code and i5/OS of the same version and release," on page 93
Installing the i5/OS release on a new system or logical partition	<ol style="list-style-type: none"> 1. "Preparing to install the i5/OS release" on page 101 2. Perform the following based on your situation: <ul style="list-style-type: none"> • "Installing Licensed Internal Code on a new logical partition" on page 105 • "Installing software on a new system or logical partition (without i5/OS installed)" on page 112 • "Installing software on a new system (with i5/OS installed)" on page 123 3. "Using the Work with Licensed Programs menu to install IBM licensed programs" on page 128 4. "Installing a secondary language" on page 134 5. Review "Checklist: Completing the i5/OS installation" on page 138
Installing licensed programs	<ol style="list-style-type: none"> 1. "Installing additional licensed programs" on page 127 2. Review "Checklist: Completing the i5/OS installation" on page 138 (certain steps apply)
Installing a secondary language	<ol style="list-style-type: none"> 1. Review "Globalization and i5/OS software installation" on page 19 2. "Installing a secondary language" on page 134 3. Review "Checklist: Completing the i5/OS installation" on page 138 (certain steps apply)

Task	Steps
Changing the primary language using either primary or secondary language media on the same release.	<ol style="list-style-type: none"> 1. Arrange your media in the order shown in “Media labels and their contents” on page 210 2. Chapter 12, “Changing the primary language of your system or logical partition,” on page 143 3. Review “Checklist: Completing the i5/OS installation” on page 138
Changing your primary language and upgrading a release using primary language media	<ol style="list-style-type: none"> 1. Chapter 5, “Preparing to upgrade or replace i5/OS software,” on page 27 2. Use one of the following methods to upgrade or replace an i5/OS release: <ul style="list-style-type: none"> • Chapter 6, “Upgrading or replacing software using automatic installation,” on page 57 • Chapter 7, “Upgrading or replacing software using manual installation,” on page 67 3. “Installing additional licensed programs” on page 127 4. “Installing a secondary language” on page 134 5. Review Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87
Selecting the primary language or changing your primary language and installing software on a new system	<ol style="list-style-type: none"> 1. “Preparing to install the i5/OS release” on page 101 2. Perform the following based on your situation: <ul style="list-style-type: none"> • “Installing Licensed Internal Code on a new logical partition” on page 105 • “Installing software on a new system or logical partition (without i5/OS installed)” on page 112 • Chapter 12, “Changing the primary language of your system or logical partition,” on page 143 3. “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128 4. “Installing a secondary language” on page 134 5. Review “Checklist: Completing the i5/OS installation” on page 138
Adding a new disk unit to an existing system before upgrading or replacing a release	<p>If you are currently using mirrored protection, device parity protection, or auxiliary storage pools, refer to these topics in the topic category Recovering your system in the i5/OS Information Center before you begin these tasks.</p> <ol style="list-style-type: none"> 1. Chapter 5, “Preparing to upgrade or replace i5/OS software,” on page 27 2. Chapter 7, “Upgrading or replacing software using manual installation,” on page 67 3. “Installing additional licensed programs” on page 127 4. “Installing a secondary language” on page 134 5. Review Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87
Installing a cumulative program temporary fix (PTF) package	<ol style="list-style-type: none"> 1. Go to the Support for IBM System i  Web site (http://www/systems/support/i) for Internet downloads or PSP information. 2. Review the PTF Shipping Information Letter that you received for instructions on how to install a cumulative PTF package. 3. Optional: Review concept information about how to use and install fixes in the i5/OS Information Center.
Installing a hardware upgrade	<p>Perform the tasks in the Server upgrades and data migration topic in the IBM Systems Hardware Information Center. For certain earlier System i models, see the Upgrading your iSeries® server topic in the V5R4 i5/OS Information Center (Migration > Upgrading your iSeries server).</p>

Task	Steps
Deleting software	<p>Use either of the following methods:</p> <ul style="list-style-type: none">• “Preselecting the licensed programs to install” on page 45. If you have licensed programs that are no longer supported, these can be deleted when you perform other upgrade preparation tasks in this topic.• Chapter 13, “Deleting software related to the i5/OS operating system,” on page 153.

Chapter 3. Concepts for software installation

You and IBM together manage the use, documentation, and transfer of i5/OS licensed programs.

The following information is a conceptual look at i5/OS software installation. This information describes the basics of installing i5/OS software: your software order, what to do when you skip a release, software installation scenarios, the types of devices used to install, globalization considerations, and how some conversions could affect your installation time.

Software installation process

The i5/OS software installation process involves three phases: preinstallation activities, the main installation, and postinstallation activities.

1. Preinstallation activities:

To upgrade to the V6R1 release, allow adequate time (up to several weeks) before the upgrade to do the planning and analysis work for program conversions. The total amount of time that is required for the conversion work could be significant. A few days to a few weeks is adequate for the other preparation activities. To plan and prepare your system before you install your software, follow the appropriate planning and preparation topics to guide you through the activities that you need to do.

- Upgrading to V6R1 from either V5R3 or V5R4: Chapter 4, “Checklist: i5/OS software upgrade or replacement readiness,” on page 23
- Replacing Licensed Internal Code and i5/OS of the same version and release to support new hardware: “Checklist: i5/OS software replacement” on page 93
- Installing V6R1 on a new system or logical partition: Chapter 10, “Checklist: i5/OS software installation readiness,” on page 99

These activities include verifying your order, checking the amount of available disk space, backing up your system, and cleaning your media device. In a software upgrade or replacement, some of the tasks are required. If you do not perform these required tasks, you will be forced to restart the installation.

2. The installation process:

The installation process begins when you start performing the instructions in one of the procedural topics. For example, to upgrade to the new release, you might have chosen automatic installation. The automatic installation process installs the Licensed Internal Code, the i5/OS operating system, and related licensed programs. In the automatic installation method of upgrading, you have minimal interaction with the system except to load the optical distribution media and to monitor the system.


Your only installation activity might be changing the primary language or installing additional licensed programs. Or, perhaps you want to perform these activities after an automatic or manual installation.

3. Postinstallation activities:

The last step of each procedure directs you to use a completion checklist. You might be directed to additional steps, such as saving your system and performing installation activities on workstations for IBM System i Access Family products. Other activities could include customizing your system, or

setting usage limits for user-based priced products. Before you begin production work on your system, be sure to adequately protect your system from unauthorized use.

| The following figure shows an example of one type of software installation for
| V6R1. (Your particular installation might not include all of the topics that are
| shown in this figure.)

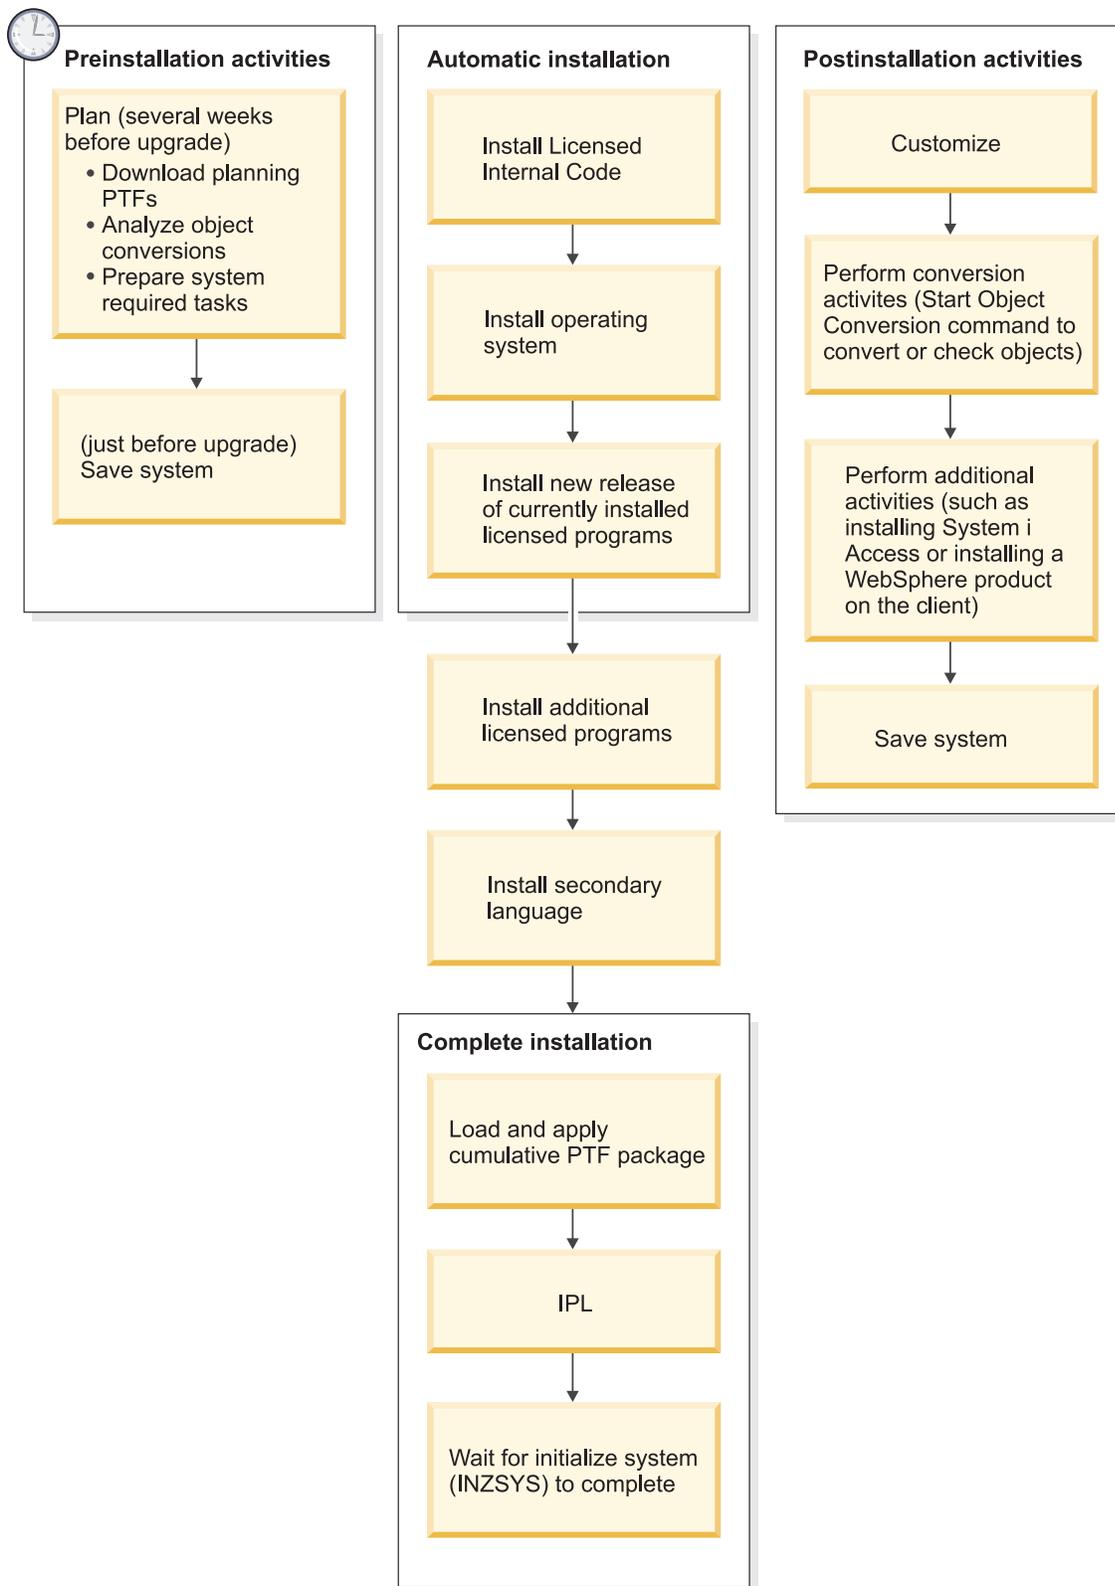

RZAH0501-4

Figure 1. Overview of the installation process

The procedure that you use for software installation depends on what you plan to install.

Install software on a new system

If you just received a new system, the operating system and other licensed programs might or might not be installed already.

Upgrade or replace existing software

If you are upgrading or replacing your existing i5/OS software, use either the automatic installation method or the manual installation method.

Automatic installation

This replaces your existing release with minimal user interaction. The language feature code on the distribution media is installed as the primary language on the system. The automatic installation process keeps the current environment and system values. The process will add all nonconfigured disk units to the system auxiliary storage pool (ASP) and will retain the ASP configuration of previously configured disk units. The automatic installation process is recommended for use with most systems.

Manual installation

This interactively replaces your existing release by using the Work with Licensed Programs menu. Displays that require responses appear on the console. During a manual installation, you can change installation options. Use the manual installation process if you are doing any of the following installation procedures:

- Adding a disk device to a user auxiliary storage pool.
- Changing the environment (i5/OS or System/36), system values, language feature code, or configuration values.
- Planning to use an alternate installation device when you upgrade.
- Creating logical partitions during the installation process.
- Using tapes created with the Save System (SAVSYS) command. (The SAVSYS command creates tapes that are meant for recovery.)

Add licensed programs

When you add additional licensed programs (in addition to those done already in the methods mentioned above) or optional parts of licensed programs, you use the method done through option 11 (Install licensed programs) of the Work with Licensed Programs (LICPGM) menu. Typically you use option 11 when you need to install a new licensed program or to replace a single licensed program.

Add or change globalization support

When you add a secondary language, you add additional language objects for the licensed programs that are installed on your system.

When you change the primary language, you replace the existing language objects. Depending on the procedure that you use, you can also replace program objects.

If a failure occurs during the installation process, Chapter 14, "Troubleshooting software installation problems," on page 157 contains information that can help you determine the problem and the necessary recovery steps.

Types of software installation devices

These devices can be used to install or upgrade an i5/OS release on your system.

Optical devices

The software distribution media that is shipped to customers is optical media (DVD). This media can be used in DVD-ROM, or DVD-RAM devices. Optical media can also be created from files that you download through electronic software delivery.

Optical resources from an i5/OS logical partition can be used to perform a software upgrade, to install PTFs (fixes), or to install single licensed programs on another logical partition that is on the same system. Supported devices for sharing optical resources include CD-ROM devices, DVD devices, and virtual optical device types 632B-002 and 632B-003. All these devices are considered a 632C-002 device type to the logical partition that is used to install or upgrade. The 632C-002 device type requires that you manually change the media in the logical partition that owns the device. For more information, see 9406-MMA (IBM System i 570) and select the *Logical Partitioning Guide*.

Virtual optical devices

You can use an image catalog to perform a software upgrade, to install PTFs (fixes), or to install single licensed programs that you receive on media or create from files received through electronic software delivery. Installing with an image catalog has significant advantages when you want to do the following tasks:

- Validate your optical media before you install the release.
- Run the Prepare for install tasks against your virtual optical media and automate the media-handling portion.
- Eliminate the handling of individual media during the installation (unattended installations).
- Upgrade software from an installation image delivered from a network or generated from IBM-supplied optical media.

A special type of virtual optical device (632B; model 003) supports virtual image files on a remote system in a network. An image directory identifies a network path on the central system that contains the virtual image files that are prepared for use with a target system. This virtual optical device can be used to install additional licensed programs or PTFs. For further details, see Virtual optical storage using the Network File System.

Tape devices

There could be times when tape media is used for installation. Examples include distribution media creation or certain backup and recovery scenarios.

Installing with an image catalog has significant advantages when you want to do the following tasks:

- Validate your tape media before you install the release.
- Eliminate the handling of individual media during the installation (unattended installations).
- Upgrade software from an installation image delivered from a network.

Virtual tape devices

You can use a tape image catalog and a virtual tape device to perform an i5/OS software upgrade, install PTF fixes, or to install single licensed programs.

Alternate installation devices

You can perform installation and recovery procedures by using the primary installation device along with an alternate installation device that

you define. The alternate installation device can be a tape device or an optical device. Some systems, typically those with faster devices attached, might see a performance improvement when using an alternate installation device.

The following table shows the naming conventions for a device that can be used for the alternate IPL (a Type D IPL). The optical drive is the installation device for software distribution media. Examples here use OPT01 for the optical device (optical media class). This is the i5/OS normal naming convention. Your system could be set up to use the System/36 naming convention. Use the following table to select the correct device name for your system's installation device or use the name that you have selected.

Table 1. Naming conventions for devices

Media type	System/36 names	i5/OS normal names
Optical media (CD, DVD, or virtual optical images)	OPTxx	OPTxx
Cartridge	TC	TAPxx
Reel	T1	TAPxx
Media library device created through automatic configuration		TAPMLBxx

“Preparing the upgrade device and media” on page 40 contains further information on what you need to do with your media before you install a release.

Contents of a software order

Your i5/OS software order package includes software licensing documents, the optical media, and other product documentation as appropriate. The optical media can be either physical media or media that is created from files that are downloaded through electronic software delivery.

When you order software from IBM, you receive the optical media distribution set. The software license keys and software entitlements created for your licensed programs are available online.

Software licensing documents

The software licensing documents that you receive with your i5/OS software release order can be either printed or online.

These documents contain important information concerning the use, management, and transfer of licensed programs. The licensing documents for IBM licensed programs that you receive could be either printed or online on the system. The Customer Notice that is included in your software order describes how to access the online documents.

To automatically install IBM licensed programs that have online software agreements, you need to accept the agreement through the Prepare for Install menu before you can install the programs. An upgrade of the Licensed Internal Code and the i5/OS operating system will stop if the agreements have not been accepted. The topic “Required: Accepting software agreements” on page 49 describes how to accept the agreements.

Ensure that you read and understand all software license agreements and documents before you use the programs.

Store the printed agreements and documents in a secure location. Both printed and online agreements need to be passed to the new owner when you transfer a program.

Proof of Entitlement

The Proof of Entitlement (PoE) is evidence of the owner's authorization to use the program and is the official record on entitlement. It is evidence of eligibility for any version or release updates under software subscription, warranty services, future upgrade program prices (if announced), and potential special or promotional opportunities. A PoE is created for new customer orders or when additional entitlement is purchased.

An electronic PoE for i5/OS software upgrade orders is replacing the printed PoE formerly shipped with your software products. For instructions on how to access your electronic PoEs and software license keys, refer to the Customer Notice that is included with your software order. The printed PoEs should be destroyed after you verify the existence and content of the Web-based PoE.

The International Program License Agreement

The International Program License Agreement (IPLA) provides a nonexclusive license to use a software product that has a warranty.

International License Agreement for Non-Warranted Programs

This agreement is similar to the IPLA but is used for IBM licensed programs that have no warranty.

International License Agreement for Evaluation of Programs

The Evaluation of Programs provides a nonexclusive, nontransferable license to use a program only for internal evaluation, testing, or demonstration purposes, on a trial or “try-and-buy” basis.

Licensed Information Document

The Licensed Information Document (LID) contains specific license information and additional restrictions for a product.

Software license keys

For each keyed IBM product or keyed IBM product option that you order, a software license key is created. This applies to both new and upgraded software. You can view, print, or download the software license keys from the Entitled software support  (<http://www.ibm.com/eserver/ess>) Web site. You need to have your customer number and either your order number or system number that is listed on your software packing list available. For further instructions on how to access your online software license keys, refer to the Customer Notice that is included with your software order.

The Entitled software support  Web site also contains more information on managing IBM software license keys.

For a general description of how software license keys are used, see the topic Working with software agreements and licenses in the i5/OS Information Center. For unique licensing applications regarding logical partitions for System i 8xx models that support i5/OS V6R1, see the topic Software licensing and licensed programs for logical partitions in the i5/OS Information Center. For all other

systems, see Software licensing for IBM licensed programs on logical partitions in the IBM Systems Hardware Information Center.

Media distribution set

The software products that you receive in an i5/OS release order are grouped into different media sets.

The licensed programs on the standard set and keyed set come in your primary language. If you order additional primary languages (feature code 80xx), you will receive the standard set and keyed set for those languages. Secondary languages, if ordered, come on separate optical media.

Other licensed programs, which are in addition to the standard set and keyed set, come on their own separate media when ordered. In this case, all supported languages, not just one secondary language, come on this same media.

Standard set

The standard set of products comes with every i5/OS software or System i hardware upgrade order. It contains the hardware and software components to install on your system. This includes Licensed Internal Code (machine code), i5/OS, its no-charge options, and no-charge licensed programs and options. The i5/OS operating system has all the applications necessary for the basic operations of your system. In addition, it could contain more programs than you want. You can choose not to install some of these programs.

Keyed set

The keyed set of products comes with the standard set. It contains keyed products and program options. You can evaluate these programs for a 70-day trial period. Within 70 days, you must apply license keys to keep the programs operational. Once you purchase the use of a licensed program and load the license key, the licensed program will remain in operation for continual use.

Single products (if ordered)

When specifically ordered, licensed programs that are not part of the standard set and keyed set arrive on separate media with your software order. You might install these licensed programs using the automatic installation procedure. Some of these licensed programs might come with their own installation instructions, and some might have limited language support.

Secondary languages (if ordered)

You can order secondary languages separately from the primary language. Each language comes on separate optical media or as a set of optical media. You specify the secondary language during the installation procedure.

Informational set

IBM provides technical and setup information on optical media with your software order. This information includes the i5/OS Information Center and the PDF versions of i5/OS manuals.

Individual product documentation

Additional material that contains information unique to the installation of a certain product on your system might be sent with your i5/OS software order.

You might have received additional letters to users for individual products. Such material could contain information unique for that product that could affect its installation. Be sure to check these additional sources. When you install a product for the first time, you might need to customize the product or complete additional actions before the product will work. Look for this type of information in your product order.

Skipping a release

If you plan to skip an i5/OS release, such as performing an upgrade from V5R3 to V6R1 and skipping V5R4, you need to be aware of changes from the skipped version and release that could affect your programs and system operations.

If you are skipping a release level of i5/OS, you should review the *Memo to Users* for the release that you are skipping. This will ensure that you are aware of software changes that occurred in the skipped release that could also affect your programs and system operations.

More object conversions occur if you are skipping a release. Consider both the conversions in the release that you are skipping and the new release. “Times for conversions” on page 194 contains more information about the V5R4 impacts to your system.

Performance data collection

With any software i5/OS release, the support for new functions can cause an incremental change (increase or decrease) in performance for some workloads.

IBM makes a significant effort to minimize negative effects, and in most cases a change in performance is not observed. However, in a skip-release upgrade, there is a higher potential that the compound effect of incremental performance differences will be observed.

To understand the performance characteristics of an upgrade, collect performance data both before and after the upgrade is complete. Following are two recommended performance collections:

- Collect general performance data for one or more days by using Collection Services. “Gathering performance data for benchmark” on page 38 contains information on ways to start Collection Services.
- Collect specific profile data for approximately an hour by running the following program in a batch job during a period of high activity on the system. To call this program, enter the command `CALL SYSPROF PARM(PEXDTAVxRy)` where *x* and *y* indicate the i5/OS version and release numbers.

Note: You cannot store PEX data from two different releases into the same library.

```
SYSPROF: PGM PARM(&LIB)
DCL VAR(&LIB) TYPE(*CHAR) LEN(10) /* Library to store the data */

/* Create a PEX definition to collect profile data. */
ADDPEXDFN DFN(SYSPROF) TYPE(*TRACE) JOB((*ALL)) +
          TASK(*ALL) MAXSTG(1000000) INTERVAL(5) +
          TRCTYPE(*PRFDTA)

/* If the definition already exists, assume it is ok. */
MONMSG MSGID(CPFAF10)
```

```
STRPEX SSNID(SYSPROFILE) DFN(SYSPROF)
DLYJOB 3600
ENDPEX SSNID(SYSPROFILE) DTALIB(&LIB)
ENDPGM
```

Save this data from both collections for future reference.

For additional information about determining how upgrades might affect your performance workloads, see the Performance management for IBM System i Web site (www.ibm.com/servers/eserver/iseriess/perfmgmt/resource.html). 

Mixed-release environment

Licensed programs or their options do not always have the same release as the i5/OS operating system.

In addition to licensed programs not always being at the same release, they can be packaged so that the product's options are not at the same release as its base. This is referred to as a mixed-release environment. For these reasons, your V6R1 media might contain licensed programs and options that are at different releases than V6R1. Products that do not have any new function for this release are not repackaged, and therefore could have a release previous to V6R1. "Licensed program releases and sizes" on page 181 contains information about the version, release, and modification level of the standard and keyed set products. You can also look at the product information to determine i5/OS releases that are supported.

Software upgrade or replacement

Use this information to understand special considerations of the system and its software when you upgrade or replace an i5/OS release.

Releases supported and system model information for i5/OS upgrades

Upgrades to current releases require that you be at a certain level of software and hardware. This information shows the supported combinations for source and current target releases for software and also system model information in relation to i5/OS.

To be able to upgrade to the i5/OS V6R1 release, your current version of the operating system must be either at V6R1, V5R4, or V5R3. If your target release is V5R4 or V5R3, use the i5/OS software installation information for the version of i5/OS that is your target release.

If you plan to use logical partitions and want to understand about supported releases on logical partitions, see Software licensing for IBM licensed programs on logical partitions in the IBM Systems Hardware Information Center. For IBM System i 8xx systems that support V6R1, see Software licensing and licensed programs for logical partitions in the i5/OS Information Center.

Table 2 on page 17 shows the currently supported combinations for source and target releases. Some of the target releases shown in this table might not be available. If your currently installed release is earlier than those listed here, you must first upgrade your system to either V5R3 or V5R4 before you can upgrade to V6R1.

Table 2. Supported releases for i5/OS upgrades

Currently installed (source) release	Valid target releases
V6R1	V6R1
V5R4	V5R4 or V6R1
V5R3	V5R3, V5R4, or V6R1

For information about the machine type-model (MTM) name, the full name, the short name, and the brand or family for each model supported, see List of model numbers and names in the IBM Systems Hardware Information Center.

See also IBM System i Overview: Models 515, 525, 570, 595 and More  (http://www.redbooks.ibm.com/abstracts/redp5052.html). This IBM Redpaper describes hardware and software capabilities announced V5R4 and later.

For information about the POWER[®] processor-based models that are available, see the IBM Web site Browse by processor  (www.ibm.com/systems/browse/power/index.html).

You will not be able to install V6R1 on the following AS/400 or iSeries models:

Table 3. Nonsupported models for i5/OS V6R1 upgrades

150	510 (AS/400 [®])	740
170	530	820
250	50S	830
270	600	840
400	620	S10
40S	640	S20
436	650	S30
53S	720	S40
500	730	SB1

For information about planning for system hardware upgrades, see System i Support Planning  (http://www.ibm.com/systems/support/i/planning/). In particular, select **Migration & Upgrades** and then select **Upgrade planning information** to find information about the release cycle and i5/OS and OS/400 level mapping.

Installation and IBM-supplied objects

When you replace your software with a new i5/OS release, by default the system keeps changes that you made to some IBM-supplied objects.

Certain job descriptions and subsystem descriptions are restored during the installation process. The installation process creates these libraries (if they do not already exist):

QINSYS
QINMEDIA
QINPRIOR

The system copies your current customized descriptions from library QSYS to library QINSYS. The descriptions are installed from the installation media into library QSYS. The system compares those values with the descriptions in QINSYS. If there are any differences, the system uses your customized value from QINSYS to update the QSYS version. If there are conflicts in certain values, the system uses the value from the installation media, and the conflicting value remains in QINSYS. QINMEDIA holds the description from the installation media. QINPRIOR holds the descriptions from the prior release level so that you can compare the current and previous release descriptions.

Use the PRTSYSINF command before you upgrade to have a copy of the IBM-supplied objects. After the upgrade you can change these objects back to the previous customization.

IBM-supplied objects that retain customized information

If you have made changes to any of the IBM-supplied descriptions shown in the following table, the default action of the system is to keep your changes.

Job descriptions	Subsystem descriptions
QCTL (Controlling subsystem job description)	QBASE (Basic controlling)
QCTLIJBD (Controlling subsystem ICG job description)	QBATCH (Batch)
QESAUTON (Automatic problem notification)	QCMN (Communications)
QFSIOPWK (File server I/O processor)	QCTL (Controlling subsystem)
QMSF (Used by QPGMF job)	QINTER (Interactive)
QPDAUTOPAR (Used for automatic problem analysis)	QPGMR (Programmer)
QQQTEMPS (DB2 [®] for i5/OS job description used by QSYSWRK)	QSNADS (Systems Network Architecture (SNA) Distribution)
QSPLERROR (Spooling error)	QSPL (Spooling subsystem)
QSTRUPJD (Auto start)	QSYSWRK (System subsystem)
QSYSWRK (System subsystem job description)	QUSRWRK (User subsystem)
QTMSNMP (Simple Network Management Protocol (SNMP) job description)	
QZMFEJBD (QSYSWRK autostart job entry)	

Compressed objects and storage space

All of the licensed programs and some objects of the i5/OS operating system ship in a compressed form. This requires less storage space on your system. The system decompresses objects according to certain criteria, which could affect the performance of the system.

System jobs (QDCPOBJx, where x is a number) automatically decompress these objects during the installation process if your system has sufficient unused disk storage. If enough storage space is not available, the system decompresses the objects when you use them, which could affect the performance of the system.

The system decompresses objects according to the following criteria:

- Greater than 750 MB available storage
The system submits jobs to decompress all system objects just installed.

- 250-750 MB available storage

The system automatically decompresses only frequently used objects.

Object-usage information (the number of days an object has been used and the last-used date) is used to identify frequently used objects. The system decompresses any object that was used within the last 14 days and which also has been used at least five times. The system leaves the remaining low-use objects in compressed form.

- This does not include decompression of objects that are shipped in the operating system and in library QSYS. The system resets usage information for those objects during the installation process. For all other licensed programs, the object usage information is kept during the installation process.
- A call to a system program does not update its usage information; the system does not automatically decompress programs in constrained storage mode. However, high-use programs ship in decompressed form and are not considered able to be compressed.

- Less than 250 MB available storage

The system does not submit the decompression jobs and instead decompresses the objects as they are used.

Note: The QDCPOBJx system jobs might run for some time after the installation process completes.

Files that the system deletes during installation

If you have created logical files over IBM-supplied physical files in QSYS, the logical files will be deleted during the i5/OS installation process.

Globalization and i5/OS software installation

This information introduces the basic concepts of installing and upgrading national languages on your system.

The **primary language** is the national language that is installed on the system as the default language used to display and print information. The primary language is also used to service the system.

If you are planning to change your primary language only and not upgrade at the same time, use the manual installation process. To determine which installation process will work best for your situation, compare reasons in “Software installation process” on page 7.

If the primary language is uppercase English (2938), you need to type uppercase characters when you respond to system messages.

Secondary languages are one or more additional national languages that can be installed on the system to display and print information.

You can order additional primary language media (feature code 82xx) and receive the standard set and keyed set for each of those languages. Secondary languages, if ordered, come on separate optical media.

The i5/OS Information Center topic i5/OS Globalization contains more information about planning for and using national languages on your system.

Feature codes for your primary or secondary languages are listed in the topic, “Feature codes for national language version” on page 214.

Considerations for changing a primary language

This information describes the requirements for changing your i5/OS primary language.

You can change the primary language of your system in these two ways:

- By using secondary language media to replace the language objects.
- While replacing a release using the manual installation process.

You cannot change your primary language to a language you currently have installed as a secondary language on your system. You must delete the secondary language before you can change it to your primary language. Use Option 22 from the Work with Licensed Programs menu to delete a secondary language.

If you perform the tasks in Chapter 12, “Changing the primary language of your system or logical partition,” on page 143, the release and modification of your system must be the same as the release and modification of your secondary language media. You need both the media that contains i5/OS (B29xx_01) and the media that contains the secondary language (N29xx).

When changing your primary language from a single-byte character set (SBCS) to a double-byte character set (DBCS) or from a DBCS to SBCS, refer to the topic i5/OS globalization in the i5/OS Information Center. If you change the character set of your primary language as part of a release upgrade, your installation time could be longer.

Make sure that you configure your console device to support the default code page of the primary language you are going to install. If you plan on using 5250 emulation on the Hardware Management Console, not all languages are supported. Change the console device to one that supports the code page of the new primary language before you install a new release.

Considerations for installing additional secondary languages

To be able to install an i5/OS secondary language, several requirements must be met.

The process to add a secondary language installs only one secondary language at a time. If you need to add more than one secondary language, you need to perform the procedure to install a secondary language multiple times. “Installing a secondary language” on page 134 contains the following two procedures to install secondary languages:

- “Installing secondary languages for IBM licensed programs” on page 134 shows how to install secondary language objects for i5/OS and installed licensed programs. Use this procedure when you are installing a secondary language after installing the new release or when you are adding additional secondary languages to the system.
- “Installing secondary languages for non-IBM licensed programs” on page 137 shows how to restore a secondary language for only one licensed program or optional part. Use this procedure when you want to restore a secondary

language for only one licensed program and when you are installing secondary language objects for licensed programs that you installed using the RSTLICPGM command.

Only the secondary language objects for the installed licensed programs are installed. If you add a licensed program or an optional part after the secondary language is installed, you will not have the secondary language objects for licensed programs you add later. To get the new language objects, install the secondary language for the added licensed program.

When you plan to install a secondary language, consider the following:

- To save storage space, delete secondary languages you no longer need. If you want to delete a secondary language for all of the licensed programs installed on your system, use option 22 on the Work with Licensed Program menu. If you want to delete a secondary language for only one licensed program, use the Delete Licensed Program (DLTLICPGM) command.
- The QSECOFR user profile cannot have a secondary language library at a previous release in its library list when you install a new release. If you have an initial program for the QSECOFR user profile, be sure it does not add a secondary language library to the system library list. (the task, Checking the QSECOFR user profile, ensures that you do this.)
- If you added a secondary language library (QSYS29xx) to the system values QSYSLIBL or QUSRLIBL, use the WRKSYSVAL command to remove the library from the library list before you install a new release. (Performing the steps in the topic, “Changing certain system values (QSYSLIBL, QUSRLIBL, QALWOBJRST, or QVIFYOBJRST)” on page 33, ensures that you do this.) i5/OS globalization also contains more information about secondary language libraries in user profiles.

Object conversions

When you upgrade the i5/OS release, you need to plan time for certain object conversions from previous releases.

Object conversions that occur when you install a new release provide improved performance, reliability, and support. The number and type of conversions that occur can have a significant effect on your planning time before the upgrade and during normal operations after the upgrade.

For V6R1, unique conversions will occur with programs in libraries, Java programs in directories, spooled files, and integrated file system names in files systems that are not case-sensitive. Before you upgrade to a new release, it is strongly recommended that you gather information about specific object types on your system.

More conversions occur if you are skipping a release. Consider both the conversions in the release that you are skipping and the new release.

Specific information about how conversions can affect either your installation time or normal operations following an upgrade are described in “Times for conversions” on page 194. You will experience various levels of impacts to your release upgrade in these areas:

- “Program conversions” on page 194 (allow adequate time to analyze your system before you upgrade). This includes these conversions:

Programs in libraries

Java programs in directories

- “Spooled file conversions” on page 195 (allow time to analyze your system and convert objects either during or after you upgrade)
- “Integrated file system conversions” on page 197 (requires preparation time but should not affect the overall length of time for an i5/OS upgrade)
- “Conversion of objects that contain SQL statements” on page 198 (affects V5R3-to-V6R1 upgrades)
- “Database file conversions” on page 199 (affects V5R3-to-V6R1 upgrades)
- “IBM Backup Recovery and Media Services for i5/OS conversions” on page 199 (requires product initialization after a software upgrade)

Chapter 4. Checklist: i5/OS software upgrade or replacement readiness

Use this checklist to help consolidate and verify that you have completed all the preparation tasks for a software upgrade.

If you plan to navigate through this checklist online, it might help to right-click this topic in the navigation tree to open a new window. This checklist summarizes the major tasks that you need to do before you begin to upgrade or replace your software.

Before you begin

1. Verify that your server model meets the requirements to support the new release. Use the following Web pages.
 - The IBM Prerequisite Web page (www.ibm.com/eserver/series/support/e_dir/eserverprereq.nsf) provides you with operating system compatibility information for hardware features.
 - The Upgrade planning Web page (www.ibm.com/systems/support/i/planning/upgrade/osmapping.html) has a table that indicates which releases of the operating system are supported by each of the server models.
2. Know your current strategy for connecting a console to your system or logical partition. Your current connection strategy influences your planning activities. For information about twinaxial consoles and Operations Console, refer to the Connecting to System i topic in the i5/OS Information Center. For information about managing your systems with Hardware Management Console, refer to the topic Managing your server using the Hardware Management Console in the IBM Systems Hardware Information Center.
3. (This does not apply to IBM System i 8xx models that support i5/OS V6R1.) Plan for extra time after the upgrade to perform a server IPL. This is one of the tasks described in the Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87.
4. Understand system administration tasks (basic system operations). To perform software installation tasks, you need to be able to restart your system, sign on and off, use the command interface, install fixes, change the system operation mode and initial program load (IPL) source on the system unit control panel, and analyze system problems.
5. Understand the different “Types of software installation devices” on page 10. The installation tasks are different based on the device type and media type that you use.

Software preupgrade or replacement tasks

From the following checklist, perform the tasks that are appropriate for your system. Required steps are noted. If you are viewing this in printed copy, use this checklist as a guide for the steps on the pages that follow.

1. **“Installing PTFs and analyzing your system for object conversions” on page 31.** Review this topic early to allow adequate time to analyze your system and plan for V6R1 object conversions.
2. “Verifying the contents of your software order” on page 27
 - a. “Identifying and reviewing information resources” on page 27

- b. "Verifying the correct optical distribution media" on page 28
- c. "Verifying license keys for keyed products" on page 29
- 3. "Preparing the system for i5/OS software upgrade or replacement" on page 29
 - a. "Verifying firmware requirements for the new release" on page 29
 - b. "Reviewing software PTF (fix) requirements" on page 30
 - 1) "Finding the latest PSP information" on page 30
 - 2) "Analyzing fixes you currently have on your system" on page 30
 - 3) **"Required (if upgrading from V5R3): Installing the Prepare for Install PTFs for V5R3" on page 32**
 - 4) "Permanently applying program temporary fixes (PTFs)" on page 32
 - 5) "Adding fix support for currently installed licensed programs" on page 33
 - c. "Working with critical system values before you install software" on page 33
 - 1) "Recording and printing all system values before you install software" on page 33
 - 2) "Changing certain system values (QSYSLIBL, QUSRLIBL, QALWOBJRST, or QVIFYOBJRST)" on page 33
 - 3) "Optionally changing the scan control system value" on page 35
 - 4) "Setting the Year offset value" on page 35
 - d. "Verifying the integrity of user-modified system objects" on page 35
 - 1) "Verifying user profiles and checking cross-reference files" on page 35
 - 2) "Checking the QSECOFR user profile" on page 36
 - 3) "Ensuring that the IBM-supplied product libraries are in the system ASP" on page 36
 - e. "Ensuring two-phase commit integrity" on page 36
 - f. "Minimizing software installation time" on page 37
 - g. "Gathering performance data for benchmark" on page 38
 - 1) "Gathering performance data with Collection Services" on page 38
 - 2) "Analyzing performance data" on page 40
- 4. "Performing initial upgrade or replacement tasks" on page 40
 - a. "Choosing a software installation method and device" on page 40
 - b. "Preparing for globalization" on page 40
 - c. "Preparing the upgrade device and media" on page 40
 - 1) "Preparing to upgrade or replace software using an image catalog" on page 41
 - a) "Determining storage requirements for image catalog installation" on page 41
 - b) "Freeing up space on the load-source disk unit for an image catalog" on page 41
 - c) "Preparing an optical image catalog to install software" on page 42
 - d) "Preparing a tape image catalog to install software" on page 43
 - d. **"Required: Creating a custom list of software to install" on page 45**
 - 1) "Preselecting the licensed programs to install" on page 45
 - 2) "Adding additional licensed programs to the installation list" on page 48
 - e. **"Required: Accepting software agreements" on page 49**
 - f. "Ensuring the system meets disk storage requirements for upgrades" on page 50

- 1) "Determining storage space required for a software upgrade" on page 50
- 2) "Cleaning up disk storage space" on page 51
- g. **"Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code" on page 53**
- h. "Choosing disk configuration" on page 54
- i. "Estimating upgrade or replacement time" on page 54
- j. "Preparing your console for software installation" on page 54
- k. "Stopping the integrated server and other application servers" on page 55
5. "Saving the system" on page 56
6. "Optional: Running the IBM Pre-Upgrade Verification tool" on page 56

After you finish

After the tasks in the preceding checklist and your upgrade have been completed, consider the following tasks.

1. Develop a strategy for managing and maintaining your software. For information about software fixes (or program temporary fixes, PTFs), and software licenses and license keys, go to the Maintaining and managing i5/OS and related software topic in the i5/OS Information Center.
2. For information about software distribution of supported products, go to the Distributing software topic in the i5/OS Information Center.

Chapter 5. Preparing to upgrade or replace i5/OS software

Perform these preparatory tasks, some of which are mandatory, before you schedule your installation.

Careful, complete, and early preparation saves a considerable amount of time and can help make your software release upgrade on your system run smoothly. To do the tasks in this topic, you will need to sign on as security officer (QSECOFR user profile). Allow ample time (several weeks before the installation) to complete these tasks before you perform the actual installation tasks.

If you are setting up logical partitions, you need to plan in advance of your installation and have a basic understanding of logical partitions plus your software and hardware requirements. For System i 8xx models that support i5/OS V6R1, refer to Planning for logical partitions in the i5/OS Information Center. For all other systems, refer to Planning for logical partitions in the IBM Systems Hardware Information Center.

You can also have different release levels on different partitions. For directions on how to do these correctly on System i 8xx models that support V6R1, see Logical partition release support in the i5/OS Information Center.

The following topics pertain to the preparation tasks for software upgrades or replacement.

Verifying the contents of your software order

To save you time and avoid frustration, verify that the contents of your i5/OS software order are correct before you start the installation.

Identifying and reviewing information resources

Use these documents to help plan your i5/OS installation process.

Many of these resources are shipped with the distribution media in your software order. Read the material that applies to your system.

- **Memo to Users** (in the i5/OS Information Center)

The *Memo to Users* describes significant changes in the new release that could potentially affect your programs or system operations. Use the *Memo to Users* to prepare for changes on the release and to use the new release. Be sure to read each section that pertains to licensed programs that you currently have installed or plan to install on your system.

In addition to the Memo to Users in the i5/OS Information Center, you can

access the Memo to Users from the Support for IBM System i  Web site (<http://www.ibm.com/systems/support/i>).

On the Web site, follow this path:

1. Technical databases
2. Preventive Service Planning - PSP
3. All Preventive Service Planning Documents by Release
4. R610

5. SF98026: i5/OS Memo to Users

The *Memo to Users* is also available to customers who use electronic customer support. You can order this document for V6R1 by using the Send PTF Order (SNDPTFORD) command and specifying program temporary fix (PTF) number SF98026.

If you are skipping a release level of i5/OS, you should also review the Memo to Users for the release that you are skipping. This ensures that you are aware of changes that occurred in the skipped release that could also affect your programs and system operations. The command to order the PTF version of the V5R4 Memorandum to Users is SNDPTFORD SF98016. The same version is also

available on the V5R4 i5/OS Information Center  (www.ibm.com/systems/i/infocenter/) and through the preventive service planning information at the

Support for IBM System i  Web site.

- **System i Access for Windows DVD**

With every order that includes Operations Console, you receive *System i Access for Windows* DVD, SK3T-4098.

- **Information Center media**

The *i5/OS Information Center* CD, SK3T-4091, ships with your i5/OS software upgrade order.

- **PSP information**

To keep informed of the latest information about conditions that could impede your software installation, you need the most recent edition of the preventive service planning information (PSP). For information on preventive service planning, see Preventive service planning information in the i5/OS Information Center.

- **PTF shipping information letter**

This letter contains the instructions for installing the cumulative program temporary fix (PTF) package. IBM recommends that you order the cumulative PTF package a minimum of 2 weeks before your i5/OS installation if you order by mail and then install the package as part of your completion tasks. For information about the most recent cumulative package, refer to the Ordering fixes topic in the i5/OS Information Center).

Verifying the correct optical distribution media

If you are planning for a complete i5/OS software release upgrade, ensure you have the correct media for your upcoming tasks.

1. Locate the software distribution media. Verify that the optical media for Licensed Internal Code and the operating system are for V6R1.

When you receive software for a new release, you should receive optical media for at least Licensed Internal Code (I_BASE_01), the operating system (B29xx_01), and licensed programs (B29xx_02).

Note: If you are replacing software with the same version and release, you need only two DVDs: I_BASE_01 and B29xx_01. Verify also that B29xx_01 and B29xx_02 are in the correct primary language.

You could also receive optical media for secondary languages and other types of software products, such as Programming Requests for Price Quotation (PRPQs) and licensed program offerings (LPOs).

“Media labels and their contents” on page 210 lists the names and product identifiers of licensed programs that you ordered.

2. Verify that the media you received is in the correct primary and secondary languages. Do the following to determine the feature number for the national language version (NLV) for your system's primary language and any installed secondary languages:
 - a. From the Work with Licensed Programs command menu (type G0 LICPGM and press Enter). Select option 20 (Display secondary languages).
 - b. The Display Installed Secondary Languages display appears. This display identifies the primary language of the system and any installed secondary languages.

Compare the i5/OS media label with the primary language of your system. If the system uses secondary languages, compare the secondary language media that you have received with the secondary languages listed on your system.
 - c. Press the F3 (Exit) key twice.

Note: If the logical partitions on your system have different primary languages, make sure you have media for each primary language.

Verifying license keys for keyed products

For the keyed IBM products or keyed IBM product options that you have ordered, review the software license keys created online for your system.

Refer to the Customer Notice that is included with your software order for information on how to access your software license keys. The online access requires that you do the following:

- Register with IBM.
- Use the customer packing list from your software order to obtain the following numbers:
 - Customer number that was used for your order.
 - Software order number that was used to process your order.

After completing these steps, you can view, print, or download your software license keys to your system. If you have further questions, refer to the information about the Customer Notice for details on how to contact the IBM Software License Key Center.

For general information about licensed keys, refer to the topic Software license keys in the i5/OS Information Center.

For a list of products, see “Licensed program releases and sizes” on page 181.

Preparing the system for i5/OS software upgrade or replacement

To prepare the system for software installation, review and perform the preparation tasks that pertain to your system.

Verifying firmware requirements for the new release

Before you upgrade to the next release, verify the server firmware level that is supported.

Your server firmware must be at certain minimal level to be able to support V6R1. (This does not include System i 8xx models that support i5/OS V6R1.)

1. Find the firmware level required. For information on the prerequisite information for features that you currently have or plan to add to your system, see the IBM Prerequisite  Web site (www.ibm.com/eserver/iserier/support/e_dir/eserverprereq.nsf).
2. Find the level of firmware for your system. For instructions on how to view firmware levels, see Viewing existing firmware levels in the IBM Systems Hardware Information Center.
3. Verify the level of the server firmware on your system matches the minimum required firmware level as determined in step 2.
4. If you need to update the firmware, see Getting fixes in the IBM Systems Hardware Information Center.

Reviewing software PTF (fix) requirements

Before you begin the i5/OS installation process, make sure that your system is ready by reviewing your requirements for program temporary fixes (PTFs).

If you are upgrading from V5R3, for example, a PTF for accepting online software agreements for Licensed Internal Code and the i5/OS operating system is required to be temporarily applied before you upgrade. A PTF to allocate additional space for the Licensed Internal Code before you upgrade might also be required.

Finding the latest PSP information

Keep informed on the most recent information about conditions that might impede your i5/OS software installation process.

To ensure that your system has the correct PTFs installed for upgrading to V6R1, review **Information APAR II14310**  (search for II14310 at www.ibm.com/support/).

If you are upgrading from V5R3, verify that you have the PTFs on your system that are required to upgrade from V5R3 to V6R1. These PTFs will be loaded and applied in the steps within “Required (if upgrading from V5R3): Installing the Prepare for Install PTFs for V5R3” on page 32.

If you are using image catalogs to upgrade, certain PTFs are required. If you using an image catalog to install a more recent update of the same release of i5/OS, for example, you might need to load and apply a certain PTF. This information is part of the steps found in “Preparing to upgrade or replace software using an image catalog” on page 41. Some of these steps need to be performed at least a day before you install the software to ensure that your installation media are ready to use.

For information about how to use preventive service planning, see Preventive service planning information in the i5/OS Information Center.

Analyzing fixes you currently have on your system

A fix cross-reference summary list enables you to analyze the program temporary fixes (PTFs) and Licensed Internal Code fixes you currently have installed on your system.

With this information, you can determine which fixes you need to order to maintain the same or higher PTF and Licensed Internal Code fix level as you

update to the new level of software. These summaries are updated each working day with the latest information as new PTFs and Licensed Internal Code fixes are released.

To find out how to order a cross-reference summary list, see the topic Fix cross-reference summary lists in the i5/OS Information Center.

Installing PTFs and analyzing your system for object conversions

When you upgrade your system to V6R1, conversions occur on program objects in libraries, Java programs in directories, spooled files, and integrated file system names in file systems that are not case-sensitive.

To have adequate time to prepare your system for the upcoming conversions, allow extra time before the upgrade to download planning PTFs for object conversion, analyze your system, and take necessary proactive steps for a successful upgrade. Such steps might include recompiling existing programs or, if programs cannot be converted, acquiring a new version from your software provider. You also might need to plan for possible down times.

Note: If this type of preparation is normally done by a third party, contact your application provider for assistance.

The planning PTFs for object conversion that you download include information and tools to help you prepare for the upgrade. The release level from which you are upgrading (V5R3 or V5R4) determines the PTFs that you use. These PTFs include the Analyze Object Conversion (ANZOBJCVN) command, which is used to collect information about the following objects:

- Programs, modules, service programs, and SQL packages in all specified user libraries. By running the command, you can determine if they can be converted for V6R1. You also will have an estimate of the time required for these conversions.
- Java programs from all the specified user directories. An estimate of the time required for conversion is given.
- The total number of spooled files on each auxiliary storage pool (ASP) and the time to perform this conversion either during or after the upgrade.
- Objects with names that contain characters affected by new Unicode characters and casing rules in V6R1. These objects are in directories that exist in file systems that are not case sensitive; for example, “root” (/) and user-defined file systems with CASE(*MONO).

To begin the steps of preparing your systems for V6R1 object conversions, following these general directions.

1. Review Information APAR II14306 for the commands and function included with the conversion PTFs. This information APAR is in the preventive service planning information about the **Support for IBM System i**  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).
2. Follow the suggestions and directions in the IBM Redpaper publication i5/OS Program Conversion: Getting Ready for i5/OS V6R1 .
3. Download the planning PTFs that are identified in the Redpaper publication.

Required (if upgrading from V5R3): Installing the Prepare for Install PTFs for V5R3

This topic refers only to V5R3-to-V6R1 upgrades. If you are upgrading from V5R4, skip this topic. Specific program temporary fixes (PTFs) for V5R3 are required before you can upgrade to the V6R1 i5/OS release.

You must temporarily apply PTFs from the *Prepare for install PTFs for V5R1, V5R2, and V5R3*, SK3T-8163, CD-ROM to be able to accept online software agreements for V6R1 licensed programs and to allocate additional space needed for V6R1.

Important: You need to accept the licensed agreements for Licensed Internal Code and the operating system before you can upgrade. If you do not accept the agreements, the installation of Licensed Internal Code will not be allowed to continue.

The *Prepare for install PTFs for V5R1, V5R2, and V5R3* CD-ROM is included with your V6R1 software media. If you want to know the specific PTFs that are included, refer to Information APAR II14310 in the preventive service planning information Web page. From the **Support for IBM System i** , select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).

To install the prepare for install PTFs for V5R3, follow these steps:

1. Locate the CD-ROM labeled *Prepare for install PTFs for V5R1, V5R2, and V5R3*.
2. Load the CD-ROM in the optical device.
3. Type the following command and press Enter:
`INSPTF LICPGM(*ALL) DEV(OPTxx) INSTYP(*IMMDLY)`

The system applies the appropriate PTFs for V5R3 along with the associated PTF for the installed national languages for your current release.

Steps for using the functions of the PTFs are included in the preparation process under “Required: Accepting software agreements” on page 49 and “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53.

Note: You might need to perform an initial program load (IPL) of the system after you install the PTFs. Check the status of these PTFs to verify whether you need to perform an IPL.

Permanently applying program temporary fixes (PTFs)

Temporarily applied PTFs require a considerable amount of disk storage space. Follow these procedures only for i5/OS products and temporarily applied PTFs that you have verified on your system.

When a new release is installed, the installation process overwrites the PTFs applied to the previous release. The PTFs for the previous release are no longer applied, but there might be associated objects that remain on the system and take up disk storage space. When you use Operational Assistant and choose to clean up system journals and system logs, PTF save files from previous releases are deleted from your system. However, for systems that have the System Manager for i5/OS licensed program installed, the PTF save files are not deleted.

Notes:

- Applying fixes in the i5/OS Information Center contains information about applying immediate PTFs temporarily or permanently.
- Do not permanently apply PTFs for those licensed programs that you do not plan to upgrade.
- If you have the System Manager for i5/OS (57xx-SM1) licensed program installed on your system, use the instructions in the manual System Manager Use  for managing PTFs on your system.

Adding fix support for currently installed licensed programs

IBM licensed programs that are installed on your system are not automatically supported after an i5/OS upgrade to a new release.

If you want to keep the PTF save files for licensed programs that you have currently installed to continue after you upgrade, add the fix support for these licensed programs before you upgrade.

To add support, see the topic Add fix support for a software product in the i5/OS Information Center.

Working with critical system values before you install software

System values are IBM-supplied objects that can be modified from their shipped value to tailor certain aspects of the i5/OS operating system to your environment. The software installation program will overlay these objects on your system with values that are supplied on the installation media.

If you have modified any of your system values, record and print these system values before you upgrade. Be sure to check the QSYSLIBL, QUSRLIBL, QALWOBJRST, and QVFYOBJRST system values.

If you are upgrading a system that observes a non-Gregorian calendar, IBM recommends that you set the Year offset value.

Recording and printing all system values before you install software

IBM recommends that you record or print your system values before the i5/OS upgrade.

To do this, use the Work with System Value command. On the i5/OS command line, type `WRKSYSVAL OUTPUT(*PRINT)`. This helps to ensure that the upgrade process will not fail due to a previous modification of any system value. This will also help you reset the values after you complete the upgrade.

Changing certain system values (QSYSLIBL, QUSRLIBL, QALWOBJRST, or QVFYOBJRST)

To ensure that your i5/OS installation runs smoothly, check the system library list (QSYSLIBL), user library list (QUSRLIBL), allow restore of security sensitive objects (QALWOBJRST), and verify object signatures during restore (QVFYOBJRST) system values.

Follow these steps:

1. Type the Work with System Values command, `WRKSYSVAL`, and press Enter. The Work with System Values display appears.

2. Type 2 (Change) in the *Option* column next to the system value you want and press Enter. The Change System Value display appears.
3. Check the system values as described in table that follows.
4. Write down the current values of QALWOBJRST and QVFYOBJRST plus any library names that are shown for QSYSLIBL and QUSRLIBL.

System value	Action to take
System library list (QSYSLIBL) ¹ Current libraries: _____ _____ _____ _____ _____ User library list (QUSRLIBL) ¹ Current libraries: _____ _____ _____ _____	With the exception of QSYS, QGPL, QUSRSYS, QTEMP, or QSYS2, delete all other libraries from the library list.
Allow restore of security sensitive objects (QALWOBJRST) ² Current value: _____	Change the value to *ALL before installing the operating system or licensed programs. If you have previously locked this system value, go to SST and unlock it before you upgrade. Locking and unlocking security-related system values in the i5/OS Information Center describes how to do this.
Verify object signatures during restore (QVFYOBJRST) ³ Current value: _____	If this system value is set to either 4 or 5, change this value to 3 before you install the new release. If you have previously locked this system value, go to SST and unlock it before you upgrade. Locking and unlocking security-related system values in the i5/OS Information Center describes how to do this.
<p>Notes:</p> <ol style="list-style-type: none"> 1. Having licensed program libraries or secondary language libraries in these library lists can cause errors when you install or delete software. 2. The Allow restore of security sensitive objects (QALWOBJRST) system value specifies whether objects with security-sensitive attributes can be restored. It is important to set the value to *ALL before performing the following system activities: <ul style="list-style-type: none"> • Installing a new release of the operating system. • Installing new licensed programs. • Applying program temporary fixes (PTFs). • Recovering your system. <p>These activities can fail if the value of QALWOBJRST is not set to *ALL. To ensure system security, return the QALWOBJRST value to your normal setting after completing the system activity.</p> 3. After you have upgraded the operating system and option 34, you can return the QVFYOBJRST system value to either 4 or 5. 	

Note that if you want the same values after the installation process is completed, you need to reset the system values. This step is included in the final checklist after you upgrade.

You can also use System i Navigator to set your system values. For more information, see system values in the i5/OS Information Center to find out how to use and access the system values from System i Navigator.

Optionally changing the scan control system value

Consider specifying *NOPOSTRST for the scan control (QSCANFCTL) system value.

This helps to minimize future scanning of some objects that are restored during the installation of licensed programs. For more information on scanning and the system value settings, see the topic Scanning support in the i5/OS Information Center.

Setting the Year offset value

If you are upgrading a system that observes a non-Gregorian calendar, set the Year offset value before the system is upgraded.

IBM recommends that you set the Year offset value because your time zone can then be set correctly with this year offset as soon as the upgrade is complete. The i5/OS Information Center topic Setting the Year offset value before upgrading the operating system includes the steps for creating a user-defined time zone object and creating the QWCYEAROFS data area in the QSYS library.

Verifying the integrity of user-modified system objects

When you replace your software with the new i5/OS release, the system keeps changes you made to some IBM-supplied objects.

To ensure a successful installation of all licensed programs and to take advantage of certain new functions, perform these tasks that relate to system objects before you begin.

Verifying user profiles and checking cross-reference files

The i5/OS installation process requires that the QSECOFR and QLPINSTALL user profiles exist in the system distribution directory. The process also requires that all database cross-reference files are not in error before the installation process begins.

The following procedure adds the QSECOFR and QLPINSTALL user profiles if you have deleted them from the system distribution directory. It also checks for errors in database cross-reference files on your system.

1. Type G0 LICPGM at the i5/OS command line and press Enter. The Work with Licensed Programs menu appears.
2. Type 5 (Prepare for Install) and press Enter. The Prepare for Install display appears.
3. Select the option to verify system objects and press Enter. The system verifies the system directory entries and adds the QSECOFR and QLPINSTALL user profiles if necessary. Database cross-reference files are checked for errors.
4. If the database cross-reference files are in error, you see message CPI3DA3. Follow the instructions of this message to resolve the errors before you continue.
5. If the database cross-reference files are not in error, you see a completion message at the bottom of the display. Press F3 (Exit) to return to the Work with Licensed Programs menu.

Checking the QSECOFR user profile

The QSECOFR user profile cannot have a secondary language library (QSYS29xx) at a previous release in its library list when you install a new i5/OS release.

If you have an initial program for the QSECOFR user program, be sure that it does not add a secondary language library to the system library list.

Ensuring that the IBM-supplied product libraries are in the system ASP

If you have moved IBM-supplied product libraries to user auxiliary storage pools (user ASPs), the libraries will not be updated when you go through the i5/OS installation procedures.

To prevent this problem, ensure that IBM-supplied product libraries are in the system ASP before you start the installation procedures. The product libraries should remain in the system ASP (*SYSBAS). PTFs are not applied to product libraries that are not in the system ASP.

If you have duplicate IBM-supplied product libraries, delete the duplicate libraries before you start the upgrade procedures. The upgrade process fails and the new release does not install until duplicate IBM-supplied libraries are deleted.

Use the Display Object Description (DSPOBJD) command to list the libraries and the ASP in which they reside to an output file. Then use SQL to query the results of the output file:

```
DSPOBJD OBJ(QSYS/Q*)
        OBJTYPE(*LIB)
        ASPDEV(*ALLAVL)
        OUTPUT(*OUTFILE)
        OUTFILE(QGPL/LIBS)
```

Note: SS1 Option 5 (System/36 Environment) has five libraries that do not begin with a Q. They are #CGULIB, #DFULIB, #DSULIB, #SDALIB, and #SEULIB.

Ensuring two-phase commit integrity

Complete or cancel all pending resynchronizations of commitment control definitions before you replace your i5/OS software.

You need to perform this task only if both of the following are true:

- Your system is connected in a network.
- Your system runs applications that use two-phase commit support.

Two-phase commit support is used when an application updates database files on more than one system. Two-phase commit support ensures that the databases remained synchronized. If you are not sure whether your system uses two-phase commit support, perform steps 1 on page 37 and 2 on page 37. You might need to continue with the rest of the procedure.

Remember that any actions you take with respect to a pending resynchronization affect the other systems that are participating in the logical unit of work (transaction) with your system. Therefore, you or someone else will also need to handle pending resynchronizations on the connected systems before you begin your upgrade procedure.

If you perform this procedure 1 or 2 days before you install the new release, you should recheck for resynchronizations before starting the installation.

To work with pending resynchronizations on your source system, do the following:

1. To display all commitment definitions that might require resynchronization, type the following Work with Commitment Definitions (WRKCMTDFN) command:

```
WRKCMTDFN JOB(*ALL) STATUS(*RESYNC)
```

2. If you see the message, No commitment definitions are active, you can skip the rest of this procedure.
3. On the Work with Commitment Definitions display, type 19 (Cancel Resync) in the Option column for each commitment definition. You see the Cancel Resync display.
4. If the value in the column *Resync Required* is Yes for any remote location listed, then do the following for that location:
 - a. Attempt an action, such as restarting communications, and allow the resynchronization to complete.
 - b. If you cannot allow the resynchronization to complete, specify option 1 (Select) to cancel resynchronization to that remote location.

You could receive message CPF83E4, which indicates that the logical unit of work is in an undecided state. You will have to make an educated decision to force either a commit operation or a rollback operation before you can successfully cancel resynchronization. These options are available from the Work with Commitment Definitions display.

By canceling resynchronization, you could cause the databases between the two systems to be in an inconsistent state. You must then take the responsibility for determining the action taken by all the other locations that participated in this Logical Unit of Work (LUW), and resynchronize the database changes.

5. Refresh the display periodically. When resynchronization for a commitment definition completes or cancels successfully, the value in the *Resync in Progress* column will be No.

The resynchronization or a cancelation of resynchronization might not take place immediately. They are dependent on the state of the other systems that are participating in the logical unit of work.

For more information on commitment control and resynchronization, see the topic When to force commits and rollbacks and when to cancel resynchronization in the i5/OS Information Center.

Minimizing software installation time

These actions can minimize the time required to install your i5/OS software.

- Use the automatic installation process rather than performing a manual installation process. “Software installation process” on page 7 has information about both methods.
- If you are not using the automatic installation process, be sure to set the QSYSOPR message queue in *BREAK mode before you start the installation process.
- Perform the licensed program installation with all subsystems ended (ENDSBS *ALL). If you are performing an automatic installation, you are operating in the preferred environment. This environment provides maximum system resources to the installation process.

- If you have a large number of spooled files on your system, set the compress job tables IPL attribute to none. To do this, use the Change IPL Attributes command: `CHGIPLA CPRJOBTL(*NONE)`.

Gathering performance data for benchmark

Establish system benchmarks before you install a new version of the i5/OS operating system or make a major system configuration change such as adding a new software application.

Accurate system benchmarks allow you to compare system performance before and after the upgrade. A valid comparison allows you to accurately assess any performance improvement as well as isolate any changes to the system that can prevent optimal performance.

Collection Services can collect sample data for a wide range of system resources. Collection Services stores sample performance data in a collection object (*MGTCOL) on your system. Minimally, benchmarks should include data from current and representative collection objects. This can require that Collection Services run long enough to collect representative data. Representative data should include all periods of activity (both peak and off-peak hours), all applications, and all normal activities performed on a system. Additionally, you might require more detailed benchmark information to identify how critical applications, transactions, and jobs are affected by the system configuration change.

Several tools are available for collecting detailed information about application performance. However, these tools can require specialized skills and could adversely affect system performance. For details about collecting different types of performance data, refer to *Researching a performance problem in the i5/OS Information Center* .

Gathering performance data with Collection Services

If you are not running Collection Services or your collection objects are not current, you can start Collection Services in any of these ways to analyze the i5/OS operating environment.

- Use the Collection Services function that is available in System i Navigator. Specific information about Collection Services is in the i5/OS Information Center at **Systems management > Performance > Applications for performance management > Collection Services**.
- Use either the Start Collector (QYPSSTRC) API or the Start Performance Collection (STRPFRCOL) command. If you do not use the Management Central function in System i Navigator, you can manage your collections with either of the following methods:
 - Performance Management APIs in the i5/OS Information Center. These APIs start, end, and cycle collections, and change and retrieve system parameters for the data collected.
 - Performance collection commands: STRPFRCOL, End Performance Collection (ENDPFRCOL), Configure Performance Collection (CFGPFRCOL), and Check Performance Collection (CHKPFRCOL). These commands start, end, and cycle collections for the data collected.
- If you have the Performance Tools licensed program (PT1) installed, use Option 2 from the Performance Tools main menu. Refer to *Performance Tools for iSeries*



for additional information about collecting performance data with this option.

- Activate IBM Performance Management for System i5[®], which automates the start of Collection Services and then creates the database files during collection.

Ensure that Collection Services has been configured to collect the data you require, and that it runs long enough to accurately represent your operating environment.

The following example uses the Collector APIs.

1. Run Collection Services for at least one or two days, and make sure that peak and off-peak workloads are represented. Type this command:

```
CALL PGM(QYPSSTRC) PARM(*PFR ' *STANDARDP' X'00000000')
```

This command starts Collection Services and uses the **Standard plus protocol** for the collection profile. Once you start Collection Services with this command, it will collect performance data and store it in the collection object until you either explicitly stop it or restart the system. (If collection was run for more than one day, more than one collection object will be produced.) This profile collects all the data categories typically needed by the tools in Performance Tools for i5/OS, including communications protocol data. The default configuration also starts a batch job CRTPFRTA, which creates the performance database files.

2. Collection Services stores the data in an object type of *MGTCOL.

You can convert this object into performance database files for later analysis. To retain the object for future use, you can save the objects to tape or to a save file (SAVF). Collection Services can delete collection objects from the system at any time after the retention period has expired. The default retention period is 24 hours. If you do not want Collection Services to delete your collection objects for you, change your retention period to permanent (set a retention period of *PERM) as shown in the example that follows.

Note: The following command example shows the shipped default values with the exception of the retention period value. A retention period of *PERM requires a value of 0. Furthermore, you must make this change before or during the data collection. The change does not affect any collection objects that are already cycled.

To change the retention period by using the Change Collection Services Attributes API, type the following command:

Note: By using the following code example, you agree to the terms of the Chapter 17, “Code license and disclaimer information,” on page 237.

```
CALL PGM(QYPSSCSA) PARM(*PFR ' /* collection */
                          X'00000384' /* interval 900 sec */
                          'QPFRTA ' /* library */
                          X'00000000' /* retention period is permanent */
                          X'00000000' /* cycle time 00:00:00 */
                          X'00000018' /* cycle interval 24Hrs */
                          X'00000001' /* start CRTPFRTA */
                          '*STANDARDP' /* default profile */
                          X'00000000') /* return code */
```

3. If you want to explicitly stop the collector after the data that you want is obtained, type this command:

```
CALL PGM(QYPSENDC) PARM(*PFR ' X'00000000')
```

Analyzing performance data

To analyze the i5/OS performance data, you must either export collection object data into the performance database files (if Collection Services has not already done so) or convert the database files created from the prior release to the current release format.

For more information, refer to Creating database files from Collection Services data in the i5/OS Information Center and also the step regarding converting the performance data in Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87.

There are several tools you can use to analyze the data from Collection Services. For more information, refer to Applications for performance management in the i5/OS Information Center . In particular, the Performance Tools licensed program summarizes this data into several reports you can use for detailed analysis.

For additional information on determining how upgrades might affect your performance workloads, see the Performance management for IBM System i Web site (www.ibm.com/systems/i/solutions/perfmgmt/resource.html) .

Performing initial upgrade or replacement tasks

Complete these initial installation tasks, which include saving the system. Several of these initial tasks are required for a successful i5/OS software upgrade.

Choosing a software installation method and device

If you are upgrading the i5/OS operating system and your licensed programs to the new release, you need to decide which installation method (manual or automatic) and which kind of device you will use to install the new release.

For a general view of the installation methods, see “Software installation process” on page 7.

To help you determine which device you will use, refer to “Types of software installation devices” on page 10. “Installation devices and media” on page 200 contains more detailed information about the devices and media available.

Preparing for globalization

If appropriate, prepare to change the primary language on your system or install additional secondary languages.

If you plan to change the primary language on your system or install additional secondary languages, review the information in “Globalization and i5/OS software installation” on page 19.

Preparing the upgrade device and media

You can prepare to install i5/OS software from optical media, an image catalog, tape devices or tape libraries, or alternate installation devices.

If you are not sure which installation device to use for your software upgrade, refer to “Types of software installation devices” on page 10. The topic “Installation devices and media” on page 200 contains more detailed information on the devices and media available.

Preparing to upgrade or replace software using an image catalog

You can use an image catalog to perform an i5/OS software upgrade, to install PTFs (fixes), or to install single licensed programs that you receive on media.

When you use an image catalog, you preload all your media so that you do not need to handle the physical media when you perform the installation. You do this by copying the images from the physical optical media or from files received through electronic software delivery to a file in the integrated file system and then use these preloaded images to install. The topic Virtual storage in the i5/OS Information Center describes further the concepts and uses of virtual tape and virtual optical media. “Image catalog for a virtual device” on page 201 describes the requirements for using image catalogs.

Determining storage requirements for image catalog installation:

i5/OS image catalog installation requires additional storage space to contain the installation images. The amount of system disk-unit storage that you need varies based on what you are installing.

The IBM-supplied media set uses the following storage.

Table 4. Storage sizes for IBM-supplied optical media

Media	Allocated size (in megabytes) ¹
I_Base_01	624
B29xx_01	4200
B29xx_02	4570
Total	9394
¹ Media and sizes at the time of publication.	

To calculate the size of any media not listed in this table, do the following:

1. Load your media into an optical device.
2. Enter the Work with Optical Volumes (WRKOPTVOL) command.
3. Select option 5. Use the value for *Volume capacity (bytes)* and add 1 MB to get the approximate size allocated for that optical media.

Freeing up space on the load-source disk unit for an image catalog:

i5/OS image catalog installation requires at least 1536 MB of free space on the load-source disk unit of your system.

If you are using an image catalog to install software and have not yet verified how much free space you have available, perform these steps.

1. Enter the Work with Disk Status (WRKDSKSTS) command to determine if your load-source disk unit (unit 1) has at least 1536 MB of free space. If you have enough free space, you do not need to continue with this task.
If you do not have enough free space, go to step 2.
2. Enter the Start ASP Balance (STRASPBAL) command to end the allocation for storage in the load-source disk unit:
STRASPBAL TYPE(*ENDALC) UNIT(1)
3. Use the Check ASP Balance (CHKASPBAL) command to view the previous end allocations and see these messages:

- Unit 1 is selected for end allocation.
 - ASP balancing is not active for ASP 1.
4. Enter the STRASPBAL command to move data off of the load-source disk unit:
STRASPBAL TYPE(*MOVDTA) TIMLMT(60)
 5. Enter the WRKDSKSTS command to monitor when the disk unit has enough free space. If you do not have enough free space, use the CHKASPBAL command (step 3 on page 41) to determine if the move data function is still active.

After the upgrade has been completed, enter the Start ASP Balance (STRASPBAL) command to resume the allocation of storage for the load-source disk unit. (This task is also included in Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87.)

```
STRASPBAL TYPE(*RSMALC) UNIT(1)
STRASPBAL TYPE(*CAPACITY) ASP(1) TIMLMT(*NOMAX)
```

Preparing an optical image catalog to install software:

These steps show how you create an image catalog and an image catalog entry, add an image catalog entry, and load the image catalog in preparation of performing an i5/OS software upgrade. The steps use a virtual optical device in the example.

Note: For a similar example using a virtual tape device, see “Preparing a tape image catalog to install software” on page 43.

Before you begin these steps, ensure that you have followed the instructions in Information APAR II14310 in the preventive service planning information from the

Support for IBM System i  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).

1. Create a virtual optical device.

To create a device description, enter the following:

```
CRTDEVOPT DEVD(virtual-device-name) RSRNAME(*VRT)+
  ONLINE(*YES) TEXT(text-description)
```

2. Vary on the virtual optical device

Enter the following:

```
VRYCFG CFGOBJ(virtual-device-name) CFGTYPE(*DEV) STATUS(*ON)
```

3. Create an image catalog

Create an image catalog for the licensed programs that you want to install. The Create Image Catalog (CRTIMGCLG) command associates an image catalog with a target directory where the optical image files are loaded.

```
CRTIMGCLG IMGCLG(catalog-name) DIR(catalog-path)
  CRTDIR(*YES) TEXT(text-description)
```

4. Add an image catalog entry

Add an image catalog entry for each physical media or optical image file that you have. You need to repeat this step for each volume of media. You should add the physical media or optical image files in the same order as if you were going to install from them. Start with the first media in the list and continue until all the media are loaded.

You can add the entries from either an optical device or from an existing optical image file. Select one of the following ways:

From an image file:

- (This is the fastest way.) To add an image entry to an image catalog from an integrated-file-system file that is already in the image catalog directory, enter the following:

```
ADDIMGCLGE IMGCLG(catalog-name) FROMFILE(file-name)
TOFILE(*fromfile) TEXT(text-description)
```

- To add an image catalog entry to an image catalog from an existing integrated-file-system optical image file from a directory other than the image catalog directory, enter the following:

```
ADDIMGCLGE IMGCLG(catalog-name)
FROMFILE(/directory-name/directory-name/file-name)
TOFILE(file-name or *FROMFILE) TEXT(text-description)
```

From a physical device:

- To add an image catalog entry to an image catalog from a physical optical media using optical device named OPT01, enter the following:

```
ADDIMGCLGE IMGCLG(catalog-name) FROMDEV(OPT01)
TOFILE(file-name or *GEN) TEXT(text-description)
```

Note: To generate a name for the TOFILE parameter, specify *GEN. To generate a text description from the media, specify *GEN.

5. Load the image catalog

This step associates the virtual optical device to the image catalog. Only one image catalog at a time can be associated with a specific virtual optical device. To load the image catalog, type the following command:

```
LODIMGCLG IMGCLG(catalog-name)
DEV(virtual-device-name) OPTION(*LOAD)
```

6. Verify that the images are in the correct order

Attention: If you are here because you are performing the steps in “Preselecting the licensed programs to install” on page 45, do not perform this step at this time. You are directed to perform this step later.

If you are preparing for an upgrade, you need to verify that the required media for an upgrade exist and are sorted in the correct sequence. You also need to verify that your software agreements have been accepted, that you have enough storage on the load source, and that you have enough reserved storage for the Licensed Internal Code.

Enter the following command:

```
VFYIMGCLG IMGCLG(catalog-name) TYPE(*UPGRADE) SORT(*YES)
```

To verify that images are added, an additional method would be to enter the following:

```
WRKIMGCLGE IMGCLG(catalog-name)
```

Then press PF7 to prompt for the VFYIMGCLG command. Enter *UPGRADE for the type and *YES for the sort field.

The system puts the images in the correct order. (If you are not successful, refer to “Image catalog recovery” on page 158.) By default, the volume with the lowest index is mounted. Then all the other volumes are loaded. To see the order of the images, use the Work with Image Catalog Entries (WRKIMGCLGE) command:

```
WRKIMGCLGE IMGCLG(catalog-name)
```

After completing these steps, your image catalog is ready for use.

Preparing a tape image catalog to install software:

These steps show how you create an image catalog, add an image catalog entry, and load the image catalog in preparation of performing an i5/OS software upgrade. The steps use a virtual tape device in the example.

Note: Virtual tape can be used to upgrade only from V6R1 to V6R1. For an example using a virtual optical device, see “Preparing an optical image catalog to install software” on page 42.

1. Create a virtual tape device.

To create a device description, enter the following:

```
CRTDEVTAP DEVD(virtual-device-name) RSRNAME(*VRT)+  
  ONLINE(*YES) TEXT(text-description)
```

2. Vary on the virtual tape device

Enter the following:

```
VRYCFG CFGOBJ(virtual-device-name) CFGTYPE(*DEV) STATUS(*ON)
```

3. Create an image catalog

Create an image catalog for the licensed programs that you want to install. The Create Image Catalog (CRTIMGCLG) command associates an image catalog with a target directory where the optical image files are loaded.

```
CRTIMGCLG IMGCLG(catalog-name) DIR(catalog-path) TYPE(*TAP)  
  CRTDIR(*YES) TEXT(text-description)
```

4. Add an image catalog entry

Add an image catalog entry for each tape image file that you have. You need to repeat this step for each image file. You should add the tape image files in the same order as if you were going to install from them.

You can add the entries from an existing tape image file by using one of these ways:

- (This is the fastest way.) To add an image entry to an image catalog from an integrated-file-system file that is already in the image catalog directory, enter the following:

```
ADDIMGCLGE IMGCLG(catalog-name) FROMFILE(file-name)  
  TOFILE(*fromfile) TEXT(text-description)
```

- To add an image catalog entry to an image catalog from an existing integrated-file-system tape image file from a directory other than the image catalog directory, enter the following:

```
ADDIMGCLGE IMGCLG(catalog-name)  
  FROMFILE(/directory-name/directory-name/file-name)  
  TOFILE(file-name or *FROMFILE) TEXT(text-description)
```

5. Load the image catalog

This step associates the virtual tape device to the image catalog. Only one image catalog at a time can be associated with a specific virtual tape device. To load the image catalog, type the following command:

```
LODIMGCLG IMGCLG(catalog-name)  
  DEV(virtual-device-name) OPTION(*LOAD)
```

6. Verify that the images are in the correct order

Attention: If you are here because you are performing the steps in “Preselecting the licensed programs to install” on page 45, do not perform this step at this time. You are directed to perform this step later.

If you are preparing for an upgrade, you need to verify that the required media for an upgrade exist and are sorted in the correct sequence. You also need to verify that your software agreements have been accepted, that you have enough storage on the load source, and that you have enough reserved storage for the Licensed Internal Code.

Enter the following command:

```
VFYIMGCLG IMGCLG(catalog-name) TYPE(*UPGRADE) SORT(*YES)
```

To verify that images are added, an additional method would be to enter the following:

```
WRKIMGCLGE IMGCLG(catalog-name)
```

Then press PF7 to prompt for the VFYIMGCLG command. Enter *UPGRADE for the type and *YES for the sort field.

The system puts the images in the correct order. (If you are not successful, refer to “Image catalog recovery” on page 158.) By default, the volume with the lowest index is mounted. Then all the other volumes are loaded. To see the order of the images, use the Work with Image Catalog Entries (WRKIMGCLGE) command:

```
WRKIMGCLGE IMGCLG(catalog-name)
```

After completing these steps, your image catalog is ready for use.

Required: Creating a custom list of software to install

Use this Prepare for install option to create a customized installation list and preselect the i5/OS licensed programs (including Licensed Internal Code and the i5/OS operating system) that you want to install. This step is required to ensure the software agreements for the licensed programs are restored and displayed on the Work with Software Agreements display, which occurs later in the process.

Before you do these tasks, you must perform the steps in the topic “Required (if upgrading from V5R3): Installing the Prepare for Install PTFs for V5R3” on page 32.

The Prepare for install option compares the programs that are installed on your system with the programs on the media. It then generates a list. This list contains preselected programs that are replaced during the installation. To customize this list, select or deselect programs from this installation list, depending on which programs you want to install or replace. You must verify that what you ordered can be replaced. You must verify that you have all of the necessary upgrades on your installation media to complete the automatic installation. You need to accept the software agreements for these licensed programs later in these preparation tasks.

Some single licensed programs might not appear on this installation list. If a previous release of these licensed programs are currently installed on the system, the new release of these licensed programs is installed during the upgrade. If these licensed programs are new (being installed for the first time), they cannot be added to this customized list. However, you can install them by using the method in “Installing additional licensed programs” on page 127 or by doing the following procedures.

Preselecting the licensed programs to install

Use these procedures to create and customize an installation list from your i5/OS distribution media.

Media considerations before you begin

Media type	Special considerations for this task
Optical image catalog	Ensure that you complete steps 1 on page 42 through 5 on page 43 in the topic “Preparing an optical image catalog to install software” on page 42 before you follow the steps in this procedure. Ensure that the first entry is in mounted status by entering the command <code>LODIMGCLGE IMGCLG(MYCATALOG) IMGCLGIDX(1) OPTION(*MOUNT)</code> .
Tape image catalog	Ensure that you complete steps 1 on page 44 through 5 on page 44 in the topic “Preparing a tape image catalog to install software” on page 43. Ensure that the first entry is in mounted status by entering the command <code>LODIMGCLGE IMGCLG(MYCATALOG) IMGCLGIDX(1) OPTION(*MOUNT)</code> .
Physical optical media	<p>A message might appear that instructs you to load the next media volume.</p> <ul style="list-style-type: none"> • If you have more volumes to load, type G and press Enter. • If there are no more volumes to load or if you want to end the loading process, type X and press Enter. <p>Continue to load the physical optical media in order (as described in step 2) until the system has read all of the volumes. If the display contains the message, Problem occurred loading volume into device, or if it states that a product was not found on the media, one of these situations occurred:</p> <ul style="list-style-type: none"> • You left the same media in the drive and the system read it again. • The system had problems reading in the new volume that you placed into the drive.

1. Sign on as security officer (QSECOFR user profile). If you are using image catalogs, go to step 3.
2. If you are using physical optical media, arrange the optical media for Licensed Internal Code, the operating system, and licensed programs in the order that is shown in the table “Media labels and their contents” on page 210. The order is important. More specifically, include only the I_BASE_01, B29xx_01, B29xx_02, and F29xx_nn optical media. Do not include any other optical media when creating the installation list at this time.
3. Type `CHGMSGQ QSYSOPR *BREAK SEV(95)` to put your message queue in the break mode.
4. A message display could appear. Press Enter.
5. Type `GO LICPGM` and press Enter.
6. Select option 5 (Prepare for install) from the Work with Licensed Programs (LICPGM) menu and press Enter. The Prepare for Install display appears.
7. Select the option to Work with Licensed Programs for Target Release and press Enter. The Work with Licensed Programs for Target Release display appears.
8. Do the following:
 - a. If you are using physical optical media, load the first optical media in the optical device.
 - b. Specify 1 (Distribution media), for the *Generate list from* prompt.
 - c. Specify a value for the media device or virtual media device.
 - d. Specify the target release for the i5/OS release. (This is the release of the operating system, not the Licensed Internal Code).
 - e. Press Enter.

9. The Work with Licensed Programs for Target Release display appears.

The list you see contains the licensed programs that are on the optical distribution media. Preselected licensed programs indicate that the product on the distribution media can replace a product that is installed on the system. (Preselected means a 1 appears in the option column.) Although more than one version of Licensed Internal Code might appear on the display, only one can be selected.

Verify that you received all of the licensed programs and priced features that you ordered.

- Use the F11 key to see alternative views that display information about licensed programs in greater detail. Press F11 to toggle through these views:
 - a. Display additional storage
 - b. Display expected release
 - c. Display expected action
 - d. Display product option
- Use option 5 (Display release-to-release mapping) to see what, if any, currently installed product will be replaced by the selected product. You might need to specify option 2 (Merge with additional distribution media) on the Work with Licensed Programs for Target Release display to merge your existing list with information about licensed programs on additional optical media. This task is described later. Continue with the next step.

10. Select additional licensed programs or optional parts of licensed programs to add to your customized list. Type a 1 in the *Option* column to select a licensed program to install. To remove a selected product from the list, blank out or remove the 1 in the *Option* column.

Note: If you deselect an item, the licensed program still will be installed unless you also follow the steps in “Deleting licensed programs during cleanup” on page 51.

When you complete your selections, press Enter. A message at the bottom of the display will prompt you to enter more changes, or press Enter to confirm the changes. The Confirm Target Release Licensed Programs display appears.

11. Press Enter to confirm the list. The Prepare for Install display appears.

12. Select the option to List Licensed Programs Not Found on Media and press Enter. The Licensed Programs Not Found On Media display appears.

13. If no products are listed, you have all the media needed to replace your existing software. Press Enter to return to the Work with Licensed Programs menu. Go to the next step (step 14 on page 48) to create a printed list of the licensed programs you selected. If there are any products listed, do the following:

- a. Delete the licensed programs that are no longer supported.
- b. You might need to obtain the others before you begin installing software. Do the following:
 - 1) Check to see whether you accidentally omitted an optical disk when you performed step 8 on page 46.
 - 2) Compare your media labels to the product tables (“Media labels and their contents” on page 210 and “Licensed program releases and sizes” on page 181) to see if the product was shipped. If you did not receive a licensed program that you expected, contact your software provider.

- 3) When you receive the product or locate the media, use the distribution media and product tables (“Media labels and their contents” on page 210 and “Licensed program releases and sizes” on page 181) to add its contents to the installation list. Use the procedure “Adding additional licensed programs to the installation list” to create a printed list of the programs that you selected to install.
 - 4) If you want to modify the installation list, type 3 (Modify previously generated list) on the Work with Licensed Programs for Target Release display.
14. If you do not need to select any additional licensed programs, do this step now. Otherwise, skip this step and continue with “Adding additional licensed programs to the installation list.”
- a. From the Prepare for Install display, select the option to Display Licensed Programs for the Target Release and press Enter.
 - b. Specify *PRINT for output on the Display Licensed Programs for Target Release display and press Enter. This creates a spooled file that you can print and use as a reference while performing the installation. You should see the message Task to prepare for install successfully completed appear at the bottom of the display.
 - c. Press F3 to exit.

Adding additional licensed programs to the installation list

After you have created an i5/OS installation list, add any additional licensed programs that you have to the list.

Perform this task only when you have already created a custom list of software to install and only when you have additional licensed programs to add to the list.

These additional programs could be a single product on media that came with your order or that were independently shipped. The order in which you load the additional optical media is not important.

Not all products will be included in this list. Among those are Programming Request for Price Quotations (PRPQs), licensed program offerings (LPOs), and single licensed programs. “Installing additional licensed programs” on page 127 describes how to install these products after you have completed your upgrade to the new release.

If you are using image catalogs, ensure that the image catalog entry is in mounted status by entering the following command:

```
LODIMGCLGE IMGCLG(MYCATALOG) IMGCLGIDX(index_number) OPTION(*MOUNT)
```

If you have more than one image, enter the following command:

```
LODIMGCLGE IMGCLG(MYCATALOG) IMGCLGIDX(index_number) OPTION(*LOAD)
```

To add licensed programs from additional optical media to the installation list, follow these steps.

Note: If you are using image catalogs, ignore the steps that refer to loading volumes.

1. Load the installation media that contains the additional licensed programs. Wait for the In Use indicator to go out.
2. Starting from the Work with Licensed Programs (LICPGM) menu, select option 5 (Prepare for install), and press Enter. The Prepare for Install display appears.

3. Select the option to Work with licensed programs for the target release, and press Enter. The Work with Licensed Programs for Target Release display appears.
4. Select option 2 (Merge with additional distribution media) for the *Generate list from* prompt so that optical media contents can be added to the list. The target release value of the existing list appears.
5. Specify a name for the optical device and press Enter.
6. When the Display Messages display appears, load the next media volume. Type G and press Enter.
After you load each volume, type G and press Enter. If there are no more volumes to load or if you want to end the loading process, type X and press Enter. A list of licensed programs appears.
7. Type 1 next to the additional licensed programs or optional parts that you want to select, and press Enter. The Confirm Licensed Programs for Target Release display appears. Press Enter to confirm the list.
8. You see the Prepare for Install display. Select the option to Display Licensed Programs for the Target Release, and press Enter.
9. Specify *PRINT for output on the Display Licensed Programs for Target Release display, and press Enter. This creates a spooled file that you can print and use as a reference while performing the installation.

Required: Accepting software agreements

As a continuation of using the i5/OS Prepare for install option, you must accept the software agreements for licensed programs before they can be installed.

If you are replacing the Licensed Internal Code and i5/OS operating system of the same version and release, acceptance of the software agreements for Licensed Internal Code and i5/OS is not required. You can skip this topic if you have no licensed programs to install.

Before you upgrade to the new release, it is a system requirement that you accept the online software agreements for the Licensed Internal Code and the i5/OS operating system through the Prepare for Install menu. If these software agreements are not accepted, you will not be able to continue with the upgrade of Licensed Internal Code. Any other licensed programs that have software agreements must also be accepted before they are upgraded.

To accept the software agreements for the licensed programs that you plan to upgrade, follow these steps:

1. Ensure that you have performed the steps in the topics “Required (if upgrading from V5R3): Installing the Prepare for Install PTFs for V5R3” on page 32 and “Required: Creating a custom list of software to install” on page 45. To be able to upgrade, the custom list must include, at a minimum, the Licensed Internal Code and the i5/OS operating system.
2. Type G0 LICPGM and press Enter. The Work with Licensed Programs display appears.
3. From the Work with Licensed Programs (LICPGM) menu, select option 5 (Prepare for install) and press Enter. The Prepare for Install display appears.
4. Select the option to work with software agreements. Press Enter.

On the Work with Software Agreements display that appears, you see all IBM licensed programs that require software agreement acceptance and whether the agreement has been accepted. Only licensed programs that are not yet installed appear on this display.

Attention: You must see at least products 5761999 *BASE and 5761SS1 *BASE on this list. If a message appears that no licensed programs need their software agreements to be accepted, do not continue. Ensure that you have completed all the previous steps in “Required: Creating a custom list of software to install” on page 45. If you completed these steps and no licensed programs appear on the list, do not continue. Contact IBM support.

If you have non-IBM licensed programs on optical media that were not inserted when you used the option to work with licensed programs for target release (step 7 on page 46 under “Preselecting the licensed programs to install” on page 45), press F22 (Restore software agreements) to add these licensed programs to the Work with Software Agreements display.

5. Select to display the software agreements for licensed programs that you want to accept and press Enter. Press F14 (Accept) to accept the terms of the software agreement. Press F15 (Accept all) to display a list of all licensed programs that share the same set of terms as the software agreement you are currently reading. Press Enter to accept the software agreements for all of the listed licensed programs.

Ensuring the system meets disk storage requirements for upgrades

You must ensure that you will have adequate disk storage before you start to install or replace i5/OS software.

To make more efficient use of your storage, clear your system of items that you no longer require before you estimate how much storage you will need.

Determining storage space required for a software upgrade

Before you schedule a time to install the i5/OS release, determine the available storage space and the storage space that is required.

Load-source disk unit requirements

- To upgrade to the V6R1 Licensed Internal Code, you must have a load-source disk unit of 17 GB or larger for each system or logical partition even when the load-source disk unit is parity protected.
- The procedures in this topic might not include all requirements for storage that you have on your system. If you are preparing to upgrade or replace software using an image catalog, ensure that you have reviewed the topic, “Determining storage requirements for image catalog installation” on page 41.

To determine if you have enough storage space for the new release, perform the following steps:

1. Type G0 LICPGM. The Work with Licensed Programs display appears.
2. Choose option 5 (Prepare for Install).
3. Type 1 next to Estimated storage requirements for system ASP. The Estimated Storage Requirements for System ASP display appears.

Enter the total storage that is needed for additional applications. Include storage for single licensed programs that were not included on your

customized installation list, and storage for Programming Request for Price Quotations (PRPQs), licensed program offerings (LPOs), or independent software.

Round up to the nearest whole number. Refer to the product documentation to determine how much additional storage is required. The system uses this number to calculate the disk storage that is required to install the target release.

Include independent software only when you intend to store it in the system ASP. Refer to Backup and recovery in the i5/OS Information Center for more information about system ASPs.

4. Press Enter to continue to the next display. The second Estimated Storage Requirements for System ASP display appears.

This display shows you information that you will need to determine whether enough disk storage is available to complete the installation.

5. Compare the value for *Storage required to install target release* with the value for *Current supported system capacity*. If the value for *Current supported system capacity* is greater than the value for *Storage required to install target release*, you can continue with the installation process. If the system capacity is less than the storage required, you might need to add additional disk units or install fewer optional programs.
6. Press Enter to return to the Prepare for Install display.

Repeat this process whenever you make any changes to your system that affect the available disk storage space.

Cleaning up disk storage space

Cleaning up your system before you begin to install a new i5/OS release makes more storage space available for the installation process.

To keep your system running smoothly, refer to the topic Basic system operations in the i5/OS Information Center.

Consider the following tasks that you can do to clean up your system and make more disk space available:

- Use the automatic cleanup option in Operational Assistant to keep your system free of unnecessary clutter.
- Permanently apply program temporary fixes (PTFs) that are temporarily applied on your system if you have not already done so.
- Delete PTF save files and cover letters that are no longer needed. (Use the Delete PTF (DLTPF) command to do this.)
- Delete any software applications that you installed from software sampler media.
- For licensed programs or optional parts that you no longer use, perform the steps in the topic Deleting licensed programs during cleanup. Read the topics on deleting licensed programs in Chapter 13, "Deleting software related to the i5/OS operating system," on page 153 for additional information.
- Have each user perform the tasks in Cleaning up user profiles. Delete any user profiles that you no longer need.

Deleting licensed programs during cleanup:

When you clean up your system before you install a new release of i5/OS software, your tasks might include deleting products.

For example, you might no longer need some licensed programs, or you might plan to not replace them. Occasionally, the system can require that you delete an obsolete product before you install a new release. The Work with Licensed Programs (LICPGM) menu option, Prepare for install, provides an easy way for you to identify and delete licensed programs when you are preparing to install a new release of software. Do the following:

1. Select option 5 (Prepare for install) from the Work with Licensed Programs display and press Enter. The Prepare for Install display appears.
2. Ensure that you have a customized installation list of software. If you do not have one, go to “Required: Creating a custom list of software to install” on page 45; then return to this step.

Select the option *Work with Licensed Programs to Delete* and press Enter. The Work with Licensed Programs to Delete display appears.

The display shows a list of installed products that should be deleted from the system. Licensed programs can appear in this list for the following reasons:

- The licensed program should not remain on the system because it is not supported in the target release.
- The licensed program is installed, but no replacement product was found on the optical distribution media.
- A preselected licensed program was removed from the installation list so its associated installed product appears on this display. If the installed product remains on the system, it will be replaced by the licensed program that is on the distribution media.

Press F11 (Display reasons), then press the Help key to display the reason each product is included in the list for deletion. Carefully review the reason for deletion before you take any action.

3. When you are sure of which products to delete, save a copy of the products, using option 1 (Save) in case you might need them again. Then use option 4 (Delete) to delete the products before you install the target release of software. Option 4 immediately deletes the product from your system.

Cleaning up user profiles:

Before you upgrade to a new i5/OS release, you should clean up user profiles and the objects that are owned by user profiles.

Attention: Do not delete any IBM-supplied user profiles (profiles that start with the letter Q).

To clean up user profiles, have each user sign on and do the following:

1. On the i5/OS command line, type WRK0BJOWN. The Work with Objects by Owner display is shown. It lists all of the objects that are owned by the user. Use option 4 (Delete) to delete objects that are no longer needed.
2. Type WRKSPLF to list all of the spooled files that are owned by the user. Delete spooled files that are no longer needed.

If users cannot do this, you can do clean up the user profiles as follows:

1. Sign on as security officer (QSECOFR user profile).
2. From the Work with Licensed programs menu (type GO LICPGM), select option 5 (Prepare for install).
3. Select the option to work with user profiles from the Prepare for Install display. The Work with User Profiles display appears.

4. Use option 12 (Work with objects by owner) to display the objects that are owned by a user profile.
First, use the F21 key (F21=Select Assistance level) to change your assistance level to Intermediate and then do the following:
 - For each user profile, delete objects that are no longer needed.
 - Use the WRKSPLF SELECT(*ALL) command to delete spooled files that are no longer needed.
5. Delete the user profiles that you no longer need.

Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code

The V6R1 Licensed Internal Code requires more storage space than V5R3M0. If your V5R3M0 system or logical partition does not have the additional space, the upgrade will stop during the installation of the V6R1 Licensed Internal Code.

If your system has V5R3M5 or V5R4 Licensed Internal Code currently installed, you have enough storage space and can skip this topic.

For best results, use the Allocate Licensed Internal Code Space (QLPALCSP) API to find out if enough reserved storage is available to allocate the additional space when necessary and to help determine and correct any possible errors. (For V5R3, the Allocate additional space for LIC option on the Prepare for install menu does not provide the same capabilities as the API.)

Attention: If your system requires the extra space to be allocated, an initial program load (IPL) is required to completely perform this task.

Enter the following text (where VxRxMx refers to the version, release, and modification of the Licensed Internal Code to which you are planning to upgrade).
CALL PGM(QLPALCSP) PARM('VxRxMx' 's')

The valid values for *s* (the **Start space allocation** parameter) are 0 or 1:

- For the value 0, an indicator is set for the Licensed Internal Code to allocate all of the additional space required for the specified release during the next IPL (not an installation IPL). This value also causes the Licensed Internal Code to stop any space allocation requests due to a previous call to QLPALCSP with the Start space allocation parameter set to 1.
- For the value 1, preparation for the allocation is done immediately by moving data off the load-source disk unit to ensure that the space can be allocated more quickly during the next IPL. This option is recommended to minimize the length of time that the next IPL will take to complete the operation.

In each of the above options (0 or 1), an IPL is needed to allocate the space if the space has not yet been allocated.

Note: You do not need to perform the IPL at this time, but you must do this before you begin to upgrade.

The QLPALCSP API also has an optional parameter (**IPL required**) that will let you know whether an IPL is needed. If you do not use the **IPL required** parameter of this API, review the job log after the API is called. If you see the following information message, you do not need to perform an IPL as you have the required space necessary.

CPI3DBF - Allocating additional space is not necessary

If you receive message CPF3DF7, you are directed to upgrade your load-source disk unit with device parity protection. Options for upgrading the load-source disk unit, including the load-source disk unit with device parity protection, are available under the topic Disk management checklist in the i5/OS Information Center. Otherwise contact your authorized service provider for assistance.

For more information on the QLPALCSP API, refer to the Allocate Licensed Internal Code space (QLPALCSP) API topic in the i5/OS Information Center.

Choosing disk configuration

If you are replacing the operating system and want to keep your current disk configuration, follow these steps.

1. Type G0 LICPGM and press Enter.
2. From the Work with Licensed Programs (LICPGM) menu, select option 5 (Prepare for install) and press Enter. The Prepare for Install display appears.
3. Select the option to keep the disk configuration and press Enter. The Keep Disk Configuration display appears.
4. At the Keep Disk Configuration prompt, type *YES and Press Enter.

Estimating upgrade or replacement time

You might want to estimate the time that is needed for an i5/OS upgrade or replacement of your software.

To calculate an estimate of this time, refer to “Estimates for i5/OS software installation time” on page 186.

Preparing your console for software installation

Before you install a new i5/OS software release, consider this information about consoles.

Although you can use twinaxial console on most systems, IBM recommends that you use either Operations Console or Hardware Management Console. For requirements on twinaxial console, Operations Console, and PCs, refer to the topic, Connecting to System i in the i5/OS Information Center. If you are moving from twinaxial console to Operations Console, use the *System i Access for Windows DVD*, SK3T-4098 to install Operations Console before you install the new release.

If you are using twinaxial console, the software installation process expects the system console device to be attached at port 0 and address 0 of the first workstation controller. In most cases, your hardware should be defined in this way. You should verify that the console is attached at port 0 address 0.

If you are planning on migrating your Operations Console, do so either before or after you upgrade. If you are planning on migrating your Hardware Management Console (HMC), do so only after you have completely installed your system. For more information about using the HMC as your i5/OS console, see Managing i5/OS consoles in the IBM Systems Hardware Information Center.

For all systems, verify that the console mode value is set correctly for your console. In addition, you can specify that an i5/OS local area network (LAN) console or

Hardware Management Console be taken over by another console in the event your console is disconnected. To verify the console mode value, follow these steps:

1. Access Dedicated Service Tools (DST).
2. Select **Work with DST environment**.
3. Select **System Devices**.
4. Select **Console mode**.

The value of the current console mode is present in the input field. Verify that this is the correct setting. A value of zero means that the console mode has not been set and can interfere with the automatic installation process. The console mode value must be one of the following values.

1	Twinaxial console
2	Operations Console (directly attached)
3	Operations Console (LAN attached)
4	Hardware Management Console (HMC) or Thin Console

During an installation or upgrade, the console type specified by this value is used.

The console mode display also includes the option to allow your 5250 console (does not include twinaxial console) to be taken over by another console. When this option is turned on, the system does not stop with a console failure but continues to run uninterrupted. For more information, see the topic Console takeover and recovery in the IBM Systems Hardware Information Center.

If you use Operations Console, follow these instructions before you install V6R1 on your system.

- Review the Operations Console topic in the i5/OS Information Center. To review the most recent information about the Operations Console client, go to the Operations Console Web site  (<http://www.ibm.com/systems/i/software/access/windows/console/>)
- IBM recommends that you update IBM eServer™ iSeries Access for Windows to V6R1 System i Access for Windows before you upgrade the i5/OS operating system. For more information, see System i Access for Windows: Installation and setup in the i5/OS Information Center.
- When you receive the i5/OS release upgrade, the shipped service tools user IDs (except 1111111) are expired. For all upgrades and installations, you need to establish a connection between the system and Operations Console PC by using 1111111 (eight 1's) for both the service tools user ID and the default password. This ensures a successful authentication of the subsequent connection of the client to the system. This is especially important for automatic installations.

Failure to comply with the above actions can prevent the console from working correctly during the upgrade or installation.

Stopping the integrated server and other application servers

If you have System i integration with BladeCenter and System x® installed, you must vary it off before you begin the i5/OS installation process. Other applications servers should also be stopped before you upgrade your software.

If your system has an active integrated server, it can cause the installation process to fail. Stopping the system also stops the operating system and any applications that are running on the system.

As a precaution, record the associated resources for your hardware. For these instructions, refer to the topic Upgrade the integrated server side of IBM i5/OS Integrated Server Support in the i5/OS Information Center.

Notify users before you stop the integrated server. The Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87 contains instructions on starting the server after you have completed your installation.

To stop the integrated server, do the following:

1. Type GO NWSADM on an i5/OS control language (CL) command line. The Network Server Administration display appears.
2. Select option 3 (Stop a network server).

Saving the system

Before you upgrade to a new i5/OS release, you should have a current backup copy of your system.

You do not need to save your system when you have a current backup copy that can be used to recover if a failure occurs. Be sure to keep this backup copy until you save your entire system again. In the i5/OS Information Center, the topic Backing up your system contains information about how to perform your save strategy and also the steps to automatically save your entire system.

1. Before you begin the process for saving the system for a recovery procedure, determine the optical or tape device for the alternate IPL.
2. Save your system by using the alternate IPL device.

Tapes that are created with the Save System (SAVSYS) command cannot be used with the automatic installation process. These tapes also do not provide a complete backup.

Note: After you begin to upgrade the Licensed Internal Code to the next release, the upgrade process must be completed. If you do not complete the upgrade and you want to return to the previous release of the operating system, you need to initialize the disks and reload the system by using the backup tapes that were created by the GO SAVE command (Option 21) just before you began the upgrade.

Optional: Running the IBM Pre-Upgrade Verification tool

The IBM Pre-Upgrade Verification tool for i5/OS runs on the Windows client and checks the System i data to ensure that all the necessary requirements are completed before beginning an upgrade. This tool verifies key pre-upgrade steps.

To use the Pre-Upgrade Verification tool, follow these steps:

1. Download and install the Pre-Upgrade Verification tool for i5/OS . An IBM userid and password is needed to access the tool.
2. Run the Pre-Upgrade Verification tool to verify that your system is ready to begin the upgrade process.

Chapter 6. Upgrading or replacing software using automatic installation

To use the automatic installation method to replace the Licensed Internal Code, the IBM i5/OS operating system, and licensed programs currently installed on your system with the new release, follow these procedures.

Before you begin automatic installation

Before you upgrade to a new i5/OS release by using the automatic installation method, verify these points.

1. Verify that this is the correct topic for you to use for your software upgrade. If you are not sure, refer to “Releases supported and system model information for i5/OS upgrades” on page 16 to determine which releases are supported for upgrades to V6R1.
2. If you are changing a primary language, you must be aware of additional considerations before you begin the installation.
 - Be sure to read the topic “Globalization and i5/OS software installation” on page 19. You cannot change your primary language to a language you currently have installed as a secondary language on your system. You must delete the secondary language before you can change it to your primary language.
 - When you perform an automatic installation using either physical or virtual media devices and IBM-supplied media, your service tools language will be the same as the service tools language that was previously installed. If you want a different service tools language, refer to Changing the service tools language on your system or logical partition in the i5/OS Information Center.
3. If you have not completed the preparation tasks in Chapter 5, “Preparing to upgrade or replace i5/OS software,” on page 27, perform these preparation tasks before you upgrade. It is required that you use the Prepare for Install options to accept online software agreements for the Licensed Internal Code and the i5/OS operating system for the upgrade to occur. Also before upgrading to V6R1, you must determine if you need to allocate additional space for the Licensed Internal Code.
4. If you plan to use an image catalog (virtual optical device) to install, read the topic “Preparing to upgrade or replace software using an image catalog” on page 41 to create a device, an image catalog, and an image catalog entry.

To upgrade from either V5R3 or V5R4 to V6R1 using an image catalog, follow these steps:

 - a. Review Information APAR II14310 in the preventive service planning information from the **Support for IBM System i**  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).
 - b. Follow the instructions in the section entitled *For upgrading to Version 6 Release 1 using virtual media, the following PTFs must be applied.*
 - c. Perform the setup steps in “Preparing to upgrade or replace software using an image catalog” on page 41. Perform step 6 on page 43 at least a day before you do the actual installation. This ensures that your installation media are ready to use.

5. Verify that your console mode value is set correctly before you upgrade. Verify your console information in the topic “Preparing your console for software installation” on page 54.
6. If you plan to use or if you are using logical partitions, refer to these topics:
 - Planning for logical partitions:
 - For System i 8xx models that support i5/OS V6R1, see Planning for logical partitions in the i5/OS Information Center.
 - For all other systems, read the topic Planning for logical partitions in the IBM Systems Hardware Information Center.
 - Reference codes are viewable under the primary partition, the Hardware Management Console, or the Integrated Virtualization manager:
 - For System i 8xx models that support i5/OS V6R1, refer to Troubleshooting logical partitions in the i5/OS Information Center.
 - For all other systems, refer to Reference codes list for customers in the IBM Systems Hardware Information Center for more information.
 - Alternate IPL device within a logical partition:
 - If you plan to use an alternate IPL device within a logical partition on System i 8xx models that support i5/OS V6R1, refer to the Removable media device and alternate restart (IPL) devices topic in the i5/OS Information Center.
 - For all other systems, refer to the I/O devices topic in the IBM Systems Hardware Information Center.
7. If you are using an alternate installation device, ensure that the alternate installation device is enabled. See “Using an alternate installation device” on page 202 for information about setting up an alternate installation device. If you are not planning on using an alternate installation device and currently have one configured, you must clear the alternate installation device configuration information from the system before you install the new release.

Replacing software using the automatic installation method

The automatic installation process replaces Licensed Internal Code, the i5/OS operating system, and all of the licensed programs that are currently installed and that have been refreshed.

To add new products, either use the Work with Licensed Programs menu (type G0 LICPGM) option 5 (Prepare for Install) before you perform these automatic installation procedures or use LICPGM menu option 11 (Install Licensed Programs) after the automatic installation. You might need to delete some products that you do not want after the installation has finished.

As you perform these steps, reference codes (also known as system reference codes or SRCs) appear on the data display of the control panel or virtual control panel of the primary partition, Hardware Management Console (HMC), or Integrated Virtualization Manager. When the system attention light is on and a reference code starting with A6 appears, the system is waiting for you respond to a message or make a device ready. When this information lists a reference code with xx (such as A6xx 6001), it means that any combination of characters can occur where the xx appears. The console can also display reference codes during the installation of Licensed Internal Code. For more details about reference codes, refer to “Reference codes for i5/OS software installation” on page 175.

Before you upgrade, it is required that you use the Prepare for Install options to accept online software agreements for those licensed programs (including Licensed Internal Code and the i5/OS operating system) that you plan to install. If you are upgrading from V5R3 and have V5R3M0 Licensed Internal Code installed, you must also allocate additional space for Licensed Internal Code. These tasks are described in “Required: Accepting software agreements” on page 49 and “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53. If these steps are not completed, the upgrade will not be completed.

If you are using image catalogs, you need to have completed steps 1 on page 42 through 5 on page 43 in the topic “Preparing an optical image catalog to install software” on page 42. Then return to this topic. Ignore the following steps that refer to loading volumes.

1. If you have not previously performed an IPL either to perform the tasks to allocate the required additional storage for the V6R1 Licensed Internal Code (required for a V5R3-to-V6R1 upgrade) or to change the disk configuration (optional), you must perform this IPL now. Do this before you power down the system or logical partition in step 7 on page 60.

Note: If you are not sure that additional space for the Licensed Internal Code has been allocated, follow the steps in “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53.

2. If you are using an image catalog (virtual media device) to upgrade, perform this step at least a day before you do the actual installation. If you are not using an image catalog, go to step 3.

To verify the image catalog entries are sorted in the correct sequence and to validate that all your images are in loaded status, enter the following command:

```
WRKIMGCLGE IMGCLG(catalog-name)
```

Ensure your catalog is in ready status and that all image catalog entries are in loaded or mounted status. To sort and verify your image catalog for installation, press PF7 to prompt for the VFYIMGCLG command. Enter *UPGRADE for the type and *YES for the sort field.

Another method to sort and verify your image catalog is to enter the following command to put the images in the correct order. By default, the volume with the lowest index is mounted. Then all the other volumes are loaded.

```
VFYIMGCLG IMGCLG(catalog-name) TYPE(*UPGRADE) SORT(*YES)
```

After you ensure that your images are in loaded status, continue with step 4 on page 60.

3. If you are using physical media to upgrade, arrange the installation media that you plan to install in the following order (you might not have all of these). Verify that B29xx_01 and B29xx_02 are in the correct primary language.
 - a. I_BASE_01 Licensed Internal Code for i5/OS.
 - b. B29xx_01 i5/OS operating system, IBM-supplied libraries QGPL and QUSRSYS, and all i5/OS no-charge options.
 - c. B29xx_02 no-charge licensed programs and keyed products.
 - d. F29xx_01 single licensed programs.

Keep the following installation media available for later use:

- a. N29xx_01 Secondary Language Media
- b. Cydddvrn_01 Cumulative PTF Package (if ordered)

c. SK3T-4091 i5/OS Information Center

For descriptions of the optical media, refer to “Media labels and their contents” on page 210.

4. On your console, ensure that you have a connection to the system. If you are working on a logical partition, ensure that power is on for the console of that logical partition.
5. If you are using physical media, load the first volume of installation media that contains Licensed Internal Code into the installation device that is defined for the system. (If you are using IBM-supplied media, this volume is labeled L_BASE_01.) Throughout these procedures, load the next volume when prompted by the system. Wait for the In Use indicator to go out. Also ensure that you have removed other media from devices that are not involved in these procedures.
 - a. If you are using a tape device instead of an optical device, verify that the tape unit is varied on and allocated to your system.
 - b. If you are using a device that is enabled as an alternate installation device, you need to load the Licensed Internal Code media in your primary device and your installation media in your alternate installation device. Your installation will fail if both media do not contain the same release level of Licensed Internal Code. For more information, see “Using an alternate installation device” on page 202.
6. Use the control panel to set the mode to **Normal**.

For logical partitions only

Use the virtual control panel (Work with Partition Status display on your primary partition or partition status on systems with HMC or Integrated Virtualization Manager) to set the mode to **Normal**. Also, make sure that you have already selected the alternate IPL device before performing the initial program load (IPL) in step 7.

Notes:

1. If you have not already set up an alternate IPL device for a logical partition, refer to online help information in IBM System i Navigator.
2. If you are using another method to select an alternate IPL device in a logical partition, refer to the topic “Alternate installation device: Overview” on page 202.

7. Power down the system or logical partition to perform the upgrade.
 - If you are using a virtual media device to do the upgrade, ensure you have reviewed Information APAR II14310 in the preventive service planning information from the **Support for IBM System i**  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs). Follow the instructions in the section entitled *For upgrading to Version 6 Release 1 using virtual media, the following PTFs must be applied*.
After you have loaded and applied either of these PTFs, type the following:

```
PWRDWSYS OPTION(*IMMED) RESTART(*YES) IPLSRC(*IMGCLG)
IMGCLG(catalog-name)
```
 - If you are performing any other upgrade, type the following:

```
PWRDWSYS OPTION(*IMMED) RESTART(*YES) IPLSRC(D)
```

Note: If you have nonconfigured disk units present, performing this step configures disk units automatically by default.

Press Enter. Powering down could take approximately 15 minutes or more for this step. The data display area of the control panel continues to display reference codes.

called Licensed Internal Code IPL in Progress. Some of the IPL steps could take a long time (up to two hours or longer), depending on how much data recovery is required for your system. The last message shown on the IPL in Progress display should be Start the Operating System.

13. Load the next volume in sequence when the system prompts you for another volume.

Note: If the system does not prompt you or if you receive a Media command failed message, remove the I_BASE_01 volume and insert the B29xx_01 volume. Select option 1 (Attempt to install the operating system again) to continue with the installation.

You might be prompted for the next volume several times during the installation process.

If you receive a message that refers to device QINDEV, first make the device ready. Then press Enter to continue.

14. Status displays appear during the installation process. The installation status display shown here indicates how much of the installation is complete as well as how many stages remain. You do not need to respond to this status screen. The display is blank for a time between stage 4 and stage 5 and also during stage 6.

```

Message ID . . . : CPI2070                                i5/OS Installation Status

Stage 6 |-----+-----+
          |                    58%                    |
          |-----+-----+

Installation
Stage      Completed      Objects
2 Restoring programs to library QSYS . . . . . : X      13637
3 Restoring language objects to library QSYS . . : X      01540
4 Updating program table . . . . . : X
5 Installing database files . . . . . : X
>> 6 Installing base directory objects . . . . . :
7 Completing installation . . . . . :

i5/OS is a trademark of IBM in the United States and other countries.
  
```

15. Status displays might appear. These displays show the status of the licensed programs and language objects as they install on the system. You do not need to respond to these status displays.

```

                          Installing Licensed Programs
                                  System: XXXX

Licensed programs processed . . . . . :      0 of XXX

                          Licensed program install in progress
  
```

The following display is an example of the display that appears during the installation process.

```

Installing Licensed Programs
System: XXXX
Licensed programs processed . . . . . : X of XXX

Licensed
Program Option Description Type
5761SS1 2 Online Information 2924

```

This display shows which licensed programs and optional parts of licensed programs are being processed. After the *PGM objects and *LNG objects are processed, the display shows the total number of licensed programs processed.

- The following message might appear when the system is ready for the next media volume that contains licensed programs. When you are installing from optical media, wait for the In Use indicator to go out before you respond to the message.

```

Display Messages
System: XXXX
Queue . . . . . : QSYSOPR Program . . . . . : *DSPMSG
Library . . . . . : QSYS Library . . . . . :
Severity . . . . . : 95 Delivery . . . . . : *BREAK

Type reply (if required), press Enter.
Load a valid volume containing licensed programs in optical device OPT01 (X G).
Reply . . . . G

```

Load the next media volume that contains licensed programs and continue the installation. Occasionally, you will be prompted to load the next volume after a short time has passed. This event typically happens when the licensed programs on the media are at the same level as the licensed programs already installed on your machine.

Type G and press Enter. After you load each volume, type G and press Enter. If there are no more volumes to load that contain licensed programs, or if you want to end the loading process, type X and press Enter.

- The media has been read, and now the licensed programs are going through the installation process. Even though it might take a long time, wait for the Sign On display to appear. When the installation is successfully completed, the Sign On display appears. (There is no message that indicates automatic installation completed successfully. The Sign On display acts as the confirmation.)

If you receive the message Automatic installation not complete, sign on using QSECOFR for your user ID and go to Chapter 14, “Troubleshooting software installation problems,” on page 157 to determine the problem.

Verifying completion of automatic installation

To verify that you have successfully completed an i5/OS upgrade by using the automatic installation method, follow these steps.

- The Sign On display appears on the console after the installation has completed.

```

                                Sign On
                                System. . . . . : XXXX
                                Subsystem . . . . : XXXX
                                Display . . . . . : XXXXXXXX

                                User. . . . . : QSECOFR
                                Password . . . . .
                                Program/procedure . . . . .
                                Menu . . . . .
                                Current library . . . . .

```

Type the following and press Enter:

User: QSECOFR

Password: (Enter password, if required.)

2. The System i Main Menu (or the menu you chose as your initial menu) appears on the console.

Type GO LICPGM and press Enter.

3. The Work with Licensed Programs display appears. Use the page down or roll up key to see the third display of the Work with Licensed Programs menu. The System i Main Menu (or the menu you chose as your initial menu) appears on your console Type 50 and press Enter.
4. The Display Install History display appears. The XX's indicate default values.

```

                                Display Install History
                                Type choices, press enter.
                                Start date . . . . . XX/XX/XX MM/DD/YY
                                Start time . . . . . XX:XX:XX HH:MM:SS
                                Output . . . . . *_____ *, *PRINT

```

Press Enter.

5. Look at the messages that appear on the Display History Log Contents display.
 - If you had an installed licensed program that was not renewed by IBM, it might not be replaced. Refer to “Mixed-release environment” on page 16 for more information.
 - If any of the messages on the display indicate a failure or a licensed program that is partially installed, go to Chapter 14, “Troubleshooting software installation problems,” on page 157 to determine the problem.

Otherwise, press F3 (Exit).

6. Verify the installed status values of your licensed programs and check for compatibility. It is important to make sure all of your licensed programs are compatible with the operating system. You can determine a licensed program's compatibility by checking the installed status value.

Use LICPGM menu option 10 (Display licensed programs) to see the release and installed status values of the installed licensed programs. If the installed status value of a licensed program is *COMPATIBLE, it is ready for use. If the installed status value of a licensed program is *BACKLEVEL, the licensed program is installed, but its version, release, and modification is not compatible with the currently installed level of the operating system.

Check the topic “Licensed program releases and sizes” on page 181 to verify the current version, release, and modification of the licensed program. “Installed status values” on page 219 lists the possible installed status value descriptions.

You have completed this task.

1. Do you need to install additional licensed programs?
 - **No.** Go to the next step.
 - **Yes.** Go to “Installing additional licensed programs” on page 127 and complete the instructions.
2. Do you need to install a secondary language?
 - **No.** Go to the next step.
 - **Yes.** Go to “Installing a secondary language” on page 134 and complete the instructions.
3. You must complete the installation process before you put your system into operation. Go to Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87 and complete the instructions.

Chapter 7. Upgrading or replacing software using manual installation

Follow these instructions to use the manual installation method to replace the Licensed Internal Code, IBM i5/OS operating system, and licensed programs currently installed on your system with the V6R1 release.

Before you begin manual installation

Verify these points before you upgrade to a new i5/OS release using the manual installation method.

1. Verify that this is the correct topic for you to use for your software upgrade. Refer to “Releases supported and system model information for i5/OS upgrades” on page 16 to determine which releases are supported for upgrades to V6R1. Be familiar with the sequence of the steps you use to upgrade or replace a release on a system or logical partition.
2. If you are changing a primary language, you must be aware of additional considerations before you begin the installation.
 - Be sure to read the topic “Globalization and i5/OS software installation” on page 19. You cannot change your primary language to a language you currently have installed as a secondary language on your system. You must delete the secondary language before you can change it to your primary language.
 - Your primary language and service tools language can be installed separately. When performing a manual installation using an optical device and IBM-supplied media, the installation steps include the installation of the service tools language.
 - If you are using Save System (SAVSYS) media to upgrade, your primary language and service tools language will be the same language as what was on the SAVSYS media when the upgrade completes.
 - If a virtual media device is used for the upgrade, you might need to update your service tools language after the upgrade. For instructions, see Changing the service tools language on your system or logical partition in the i5/OS Information Center.
3. If you have not completed the preparation tasks in Chapter 5, “Preparing to upgrade or replace i5/OS software,” on page 27, perform these preparation tasks before you upgrade. It is required that you use the Prepare for Install options to accept online software agreements for the Licensed Internal Code and the i5/OS operating system for the upgrade to occur.
4. If you plan to use an image catalog (virtual optical device) to install, read the topic “Preparing to upgrade or replace software using an image catalog” on page 41 to create a device, an image catalog, and an image catalog entry. To upgrade from either V5R3 or V5R4 to V6R1 using an image catalog, follow these steps:
 - a. Review Information APAR II14310 in the preventive service planning information from the Support for IBM System i  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).

- b. Follow the instructions in the section entitled *For upgrading to Version 6 Release 1 using virtual media, the following PTFs must be applied.*
 - c. Perform the setup steps in “Preparing to upgrade or replace software using an image catalog” on page 41. Perform step 6 on page 43 at least a day before you do the actual installation. This ensures that your installation media are ready to use.
5. Verify that your console mode value is set correctly before you upgrade. Verify your console information in the topic “Preparing your console for software installation” on page 54.
 6. If you plan to use or if you are using logical partitions, refer to these topics:
 - Planning for logical partitions:
 - For System i 8xx models that support i5/OS V6R1, see Planning for logical partitions in the i5/OS Information Center.
 - For all other systems, read the topic Planning for logical partitions in the IBM Systems Hardware Information Center.
 - Reference codes are viewable under the primary partition, the Hardware Management Console, or the Integrated Virtualization Manager:
 - For System i 8xx models that support i5/OS V6R1, refer to Troubleshooting logical partitions in the i5/OS Information Center.
 - For all other systems, refer to Reference codes list for customers in the IBM Systems Hardware Information Center for more information.
 - Alternate IPL device within a logical partition:
 - If you plan to use an alternate IPL device within a logical partition on System i 8xx models that support i5/OS V6R1, refer to the Removable media device and alternate restart (IPL) devices topic in the i5/OS Information Center.
 - For all other systems, refer to the I/O devices topic in the IBM Systems Hardware Information Center.
 7. If you are using an alternate installation device, ensure that the alternate installation device is enabled. See “Using an alternate installation device” on page 202 for information about setting up an alternate installation device. If you are not planning on using an alternate installation device and currently have one configured, you must clear the alternate installation device configuration information from the system before you install the new release.

Replacing the Licensed Internal Code

Follow these steps to replace the Licensed Internal Code by using the manual installation method.

As you perform these steps, reference codes appear on the data display of the control panel or the virtual control panel of the primary partition, Hardware Management Console (HMC), or Integrated Virtualization Manager. When the system attention light is on and a reference code starting with A6 appears, the system is waiting for you to respond to a message or make a device ready. When this information lists a reference code with xx (such as A6xx 6001), it means that any combination of characters can occur where the xx appears. The console can also display reference codes during the installation of Licensed Internal Code. For more details about reference codes, refer to “Reference codes for i5/OS software installation” on page 175.

If you are using image catalogs, you need to have completed steps 1 on page 42 through step 5 on page 43 in the topic “Preparing to upgrade or replace software

using an image catalog” on page 41. Then return to this topic. In the following procedures, ignore the steps that refer to loading volumes.

1. If you have not previously performed an IPL either to perform the tasks to allocate additional storage for the V6R1 Licensed Internal Code (required for a V5R3-to-V6R1 upgrade) or to change the disk configuration (optional), you must do this IPL now before you power down the system or logical partition in step 8 on page 70.

Note: If you are not sure that additional space for the Licensed Internal Code has been allocated, follow the steps in “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53.

2. If you are using an image catalog (virtual media device) to upgrade, perform this step at least a day before you do the actual installation. If you are not using an image catalog, go to step 3.

To verify the image catalog entries are sorted in the correct sequence and to validate that all your images are in loaded status, enter the following command:

```
WRKIMGCLGE IMGCLG(catalog-name)
```

Ensure your catalog is in ready status and that all image catalog entries are in loaded or mounted status. To sort and verify your image catalog for installation, press PF7 to prompt for the VFYIMGCLG command. Enter *UPGRADE for the type and *YES for the sort field.

Another method to sort and verify your image catalog is to enter the following command to put the images in the correct order. By default, the volume with the lowest index is mounted. Then all the other volumes are loaded.

```
VFYIMGCLG IMGCLG(catalog-name) TYPE(*UPGRADE) SORT(*YES)
```

After you ensure that your images are in loaded status, continue with step 4.

3. If you are using physical media to upgrade, arrange the installation media that you plan to install in the following order.

Note: You might not have all of these. For example, if you are replacing Licensed Internal Code and i5/OS of the same version and release, you need only I_BASE_01 and B29xx_01. Verify also that B29xx_01 and B29xx_02 are in the correct primary language.

- a. I_BASE_01 Licensed Internal Code for i5/OS.
- b. B29xx_01 i5/OS operating system, IBM-supplied libraries QGPL and QUSRSYS, and all i5/OS no-charge options.
- c. B29xx_02 no-charge licensed programs and keyed products.
- d. F29xx_01 single licensed programs.

Keep the following installation media available for later use:

- a. N29xx_01 Secondary Language Media
- b. Cyddvrm_01 Cumulative PTF Package (if ordered)
- c. SK3T-4091 i5/OS Information Center

For descriptions of the optical media, refer to “Media labels and their contents” on page 210.

4. On your console, ensure that you have a connection to the system. If you are working on a logical partition, ensure that power is on for the console of that logical partition.
5. If you are upgrading a logical partition, verify that this partition has an alternate initial program load (IPL) resource assigned. For most cases, this is the optical device that supports the optical media class.

For more information, use the following sources to locate and select the alternate IPL resource:

- For System i 8xx models that support i5/OS V6R1, Managing logical partitions in the i5/OS Information Center.
 - For all other systems, Logical partitioning in the IBM Systems Hardware Information Center .
6. If you are using physical media, load the first volume of installation media that contains Licensed Internal Code into the installation device that is defined for the system. (If you are using IBM-supplied media, this volume is labeled L_BASE_01.) Throughout these procedures, load the next volume when prompted by the system. Wait for the In Use indicator to go out. Also ensure that you have removed other media from devices that are not involved in these procedures.
 - a. If you are using a tape device instead of an optical device, verify that the tape unit is varied on and allocated to your system.
 - b. If you are using a device that is enabled as an alternate installation device, you need to load the Licensed Internal Code media in your primary device and your installation media in your alternate installation device. Your installation will fail if both media do not contain the same release level of Licensed Internal Code. For more information, see “Using an alternate installation device” on page 202.
 7. Use the control panel to set the mode selection to **Manual**. If you are upgrading a logical partition, use the virtual control panel function of your primary partition, HMC, or Integrated Virtualization Manager. Also make sure that you have already selected the alternate IPL device before you perform the initial program load (IPL) in the next step.
 8. Power down the system or logical partition:
 - If you are using a virtual media device to do the upgrade, ensure you have reviewed Information APAR II14310 in the preventive service planning information from the Support for IBM System i  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs). Follow the instructions in the section entitled *For upgrading to Version 6 Release 1 using virtual media, the following PTFs must be applied*.

After you have loaded and applied the appropriate PTFs, type the following:

```
PWRDWN SYS OPTION(*IMMED) RESTART(*YES) IPLSRC(*IMGCLG)
  IMGCLG(catalog-name)
```
 - If you are performing any other upgrade, type the following and press Enter:

```
PWRDWN SYS OPTION(*IMMED) RESTART(*YES) IPLSRC(D)
```


Powering down could take approximately 15 minutes or more for this step. The data display area of the control panel continues to display reference codes.
 9. If the system attention light appears and a reference code listed in the topic “Reference codes for i5/OS software installation” on page 175 appears in the data display on the control panel, complete the instructions for that reference code.

If you are upgrading a logical partition, the system attention light will not appear. You must monitor the logical partition reference codes from the

primary partition, the HMC, or Integrated Virtualization Manager. When the State changes to Failed, that is the equivalent of having the attention light on for the primary partition.

10. If you are using an image catalog (virtual media device) to upgrade, go to step 17 on page 74.
11. The Select a Language Group display shows the service tools language that is currently installed on the system.

Note: The installation media for Licensed Internal Code is now language-independent. It is important that you complete this step carefully.

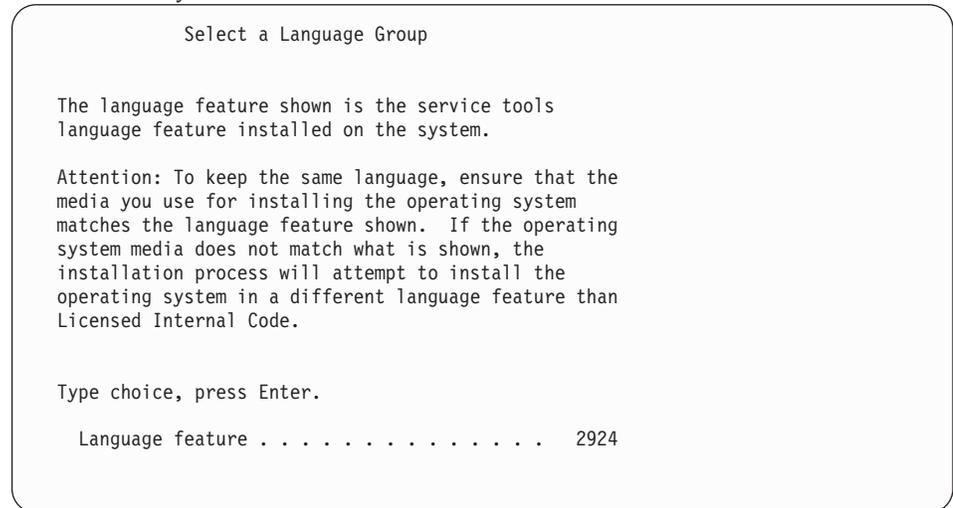


To keep the same service tools language, verify that the displayed language feature matches the service tools language that you want. If you want the service tools language to match your primary language, check the feature that is printed on the media that contains the operating system. The operating system media are labeled B29xx_nn, where 29xx indicates the feature for the primary language.

Note: The language you select and the language of the operating system typically should match. If they do not match, your service tools language will be different than your primary language.

Refer to “Feature codes for national language version” on page 214 for a list of the language feature codes.


To change the service tools language to match the primary language, type the language feature that appears on the media that contains the operating system. Press Enter.

12. After you enter the language feature, the Confirm Language Group display appears.

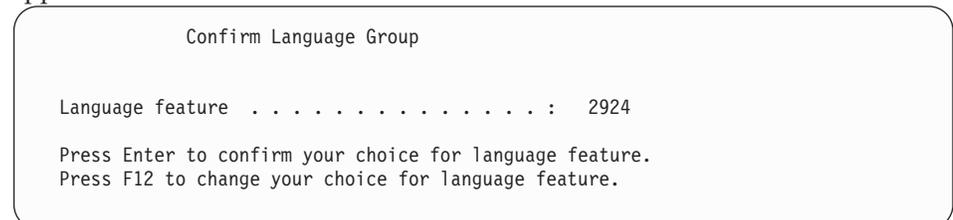

Press Enter.

13. The Install Licensed Internal Code display appears.

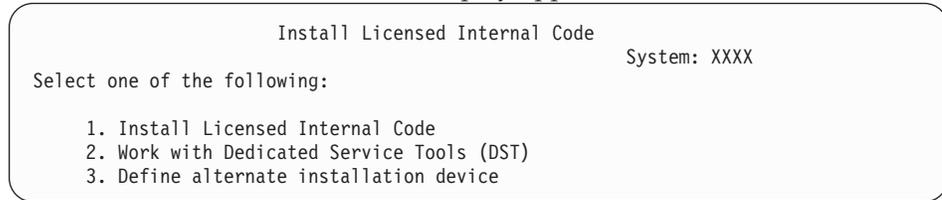


Either select the option to install Licensed Internal Code or the option to define an alternate installation device:


- If you are not using an alternate installation device, type 1 (Install Licensed Internal Code). (The alternate installation device function supports installation from optical or tape media that you have created. The topic “Using an alternate installation device” on page 202 describes when you can use an alternate installation device.) If you are not using an alternate installation device, continue with step 16 on page 73.
- If you have an alternate installation device attached to the system, type 3 to verify its address and determine whether it is enabled or disabled. Continue with the Verifying Alternate Installation Device Subtask in step 14. If you have an alternate installation device configured and do not want to use it, type 3 to clear the alternate installation device configuration information.

Press Enter.

14. **Verifying and selecting alternate installation device subtask:** The Select Alternate Installation Device Bus display appears.

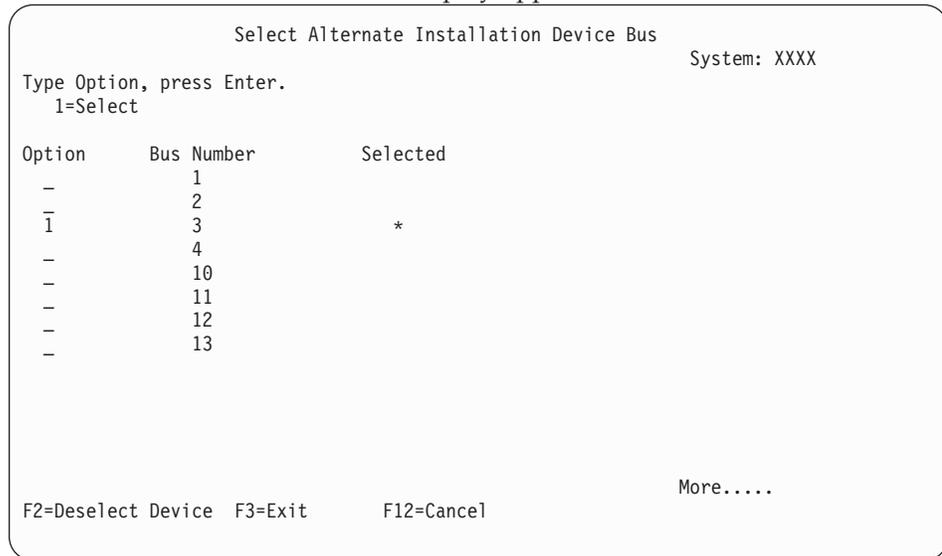


- a. Verify that the selected device is on the correct system bus. Type 1 in the Options field next to the selected bus, and press Enter to view information about the device that is attached to the bus. This might take several minutes. If you see the message No alternate installation device configured, wait one minute and refresh the display.
- b. When the Select Media Type display appears, select 1 for tape or 2 for optical media. Press Enter.
- c. The Select Alternate Installation Device display appears. Use this display to verify the resource name, type, model, and serial number for the device. The following display shows an example of a tape device.

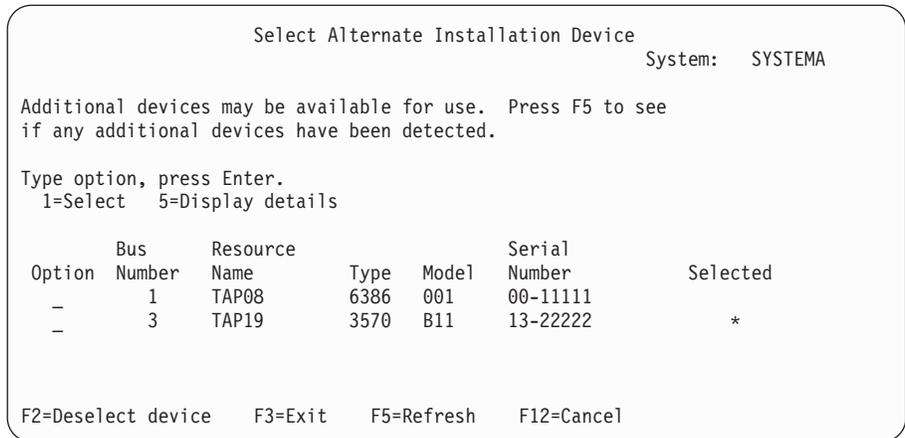

- d. Type 1 and press Enter to select the device to use or press F2 to deselect the currently selected device.
- e. The message Alternate installation device selected appears. Press F3 to return to the Install Licensed Internal Code display.
- f. Type 1 and press Enter to install the Licensed Internal Code.

This completes the subtask for verifying and selecting alternate installation device.

- 15. If there is an alternate installation device defined and enabled, the Confirm Alternate Installation Device display appears. Perform one of these tasks.
 - To install from the alternate installation device, press Enter.
 - If you do not want to install from the alternate installation device and want to continue using the primary media, press F12 to Cancel. You see the Licensed Internal Code display. Perform step 13 on page 72 and select option 3 (Define alternate installation device). Perform step 14 on page 72 and deselect the alternate installation device.
- 16. The Install Licensed Internal Code (LIC) display appears on your console.

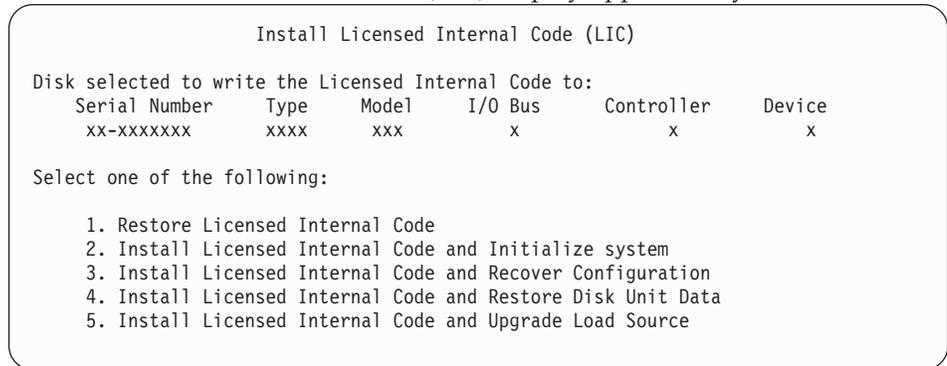

Attention: Be sure to select option 1. Some options on this display remove all data from your system.

Type 1 (Restore Licensed Internal Code) and press Enter.

If you did not previously accept the software agreement for the Licensed Internal Code or did not allocate additional space for the Licensed Internal Code, error messages are shown. Follow the instructions in the error messages. More information is in the topics “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53 and “Required: Accepting software agreements” on page 49.

If the problem Disk unit not formatted for optimal performance appears on this display, do the following:

- Type 5, and press Enter to display the detailed report.
- Write down the information displayed. After the upgrade is completed, you will need this information to format these disk units to gain optimal performance.
- Press F12 to cancel and return to the Disk Unit Attention Report.
- Press F10 to accept the problems and continue the IPL.

If you are upgrading a primary partition, a disk configuration error with SRC B600 5390 and SRC B600 5311 might be shown on the product activity log (PAL). Secondary partitions report a status of new and all system resources are temporarily owned by the primary partition. If you try to continue an IPL, an error message, Hardware resource information persistence disabled, is received. This indicates a problem with the memory configuration. To correct this problem, do the following tasks:

- a. Sign on to Dedicated Service Tools Sign-on prompt and return to the Use Dedicated Service Tools (DST) menu.
 - b. Select the option, Work with partitions.
 - c. Select the option, Work with partition configuration.
 - d. Select the option, Change partition processing resources on each partition. Change the minimum memory value to force a recalculation of these values; then make the appropriate configuration change.
20. If the console mode value is zero, the Accept Console display appears. If this display appears, follow these steps:
- a. Press F10 to accept the current console type. The Accept and Set New Console Type on this IPL display appears. The old value (zero) and the new value to be set (your current console type) are shown.
 - b. Press Enter to set the new value and continue with these instructions.
21. If your system processor configuration has changed, you could see other displays at this point. After you supply the requested information, the installation continues and the IPL or Install the System display appears. Refer to “System password” on page 219 for more information.
22. After approximately 10 minutes, the IPL or Install the System display appears. The Licensed Internal Code is now installed. Do not remove the distribution media at this time.
23. If the Accept Console display in step 20 did not appear, set the console mode for this partition:
- a. At the IPL or Install the system display, select option 3 to access Dedicated Service Tools (DST).
 - b. Sign on as security officer (QSECOFR user profile / QSECOFR password). When prompted, change the password to what you want to use for this partition.
 - c. Select option 5 (Work with DST environment).
 - d. Select option 2 (System devices).
 - e. Select option 6 (Console mode).
 - f. Select the valid console that you have for this partition.

Note: If you are using Operations Console (LAN) as your console type, press Enter on the verify window. You can also press F11 to review your network configuration.

- g. Select 1 (Yes) or 2 (No) for the option to allow the console to be taken over by another console in the event of a 5250 console failure (does not include twinaxial console). When this option is turned on, the system does not stop with a failure but continues to run uninterrupted. For more information, see the topic Console takeover and recovery in the IBM Systems Hardware Information Center.


Press Enter and then press F3 to return to the DST main menu.

- h. Press F3 to exit DST and return to the IPL or Install the System display.

Replacing the i5/OS operating system

Follow these steps to replace the IBM i5/OS operating system by using the manual installation method.

1. The IPL or Install the System menu appears on your console.

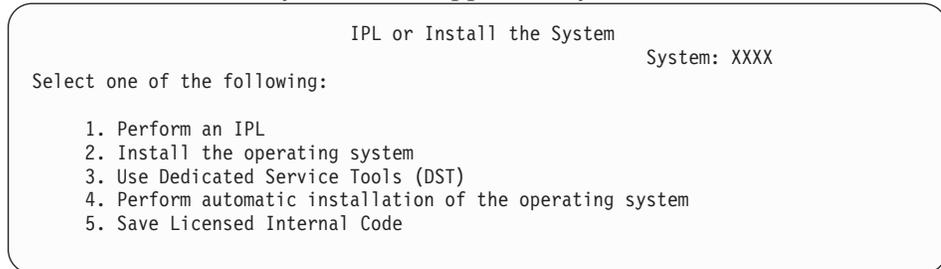


Ensure that the installation media that contains the Licensed Internal Code is in the installation device that is defined for the system. If you are using IBM-supplied media, this volume is labeled I_BASE_01.

Ensure that you have removed other media from devices that are not involved in this upgrade.

After you install the new release over your previous release (V5R3 or V5R4), passwords for all service tools user profiles that still use the default password expire automatically. When you try to log on or access service tools using those profiles, you receive a message that the password has expired and must be changed. Follow the prompts or press the appropriate key (F9) to change the password for that user profile.

2. Type 2 (Install the operating system) and press Enter. The Install Device Type Selection display appears.

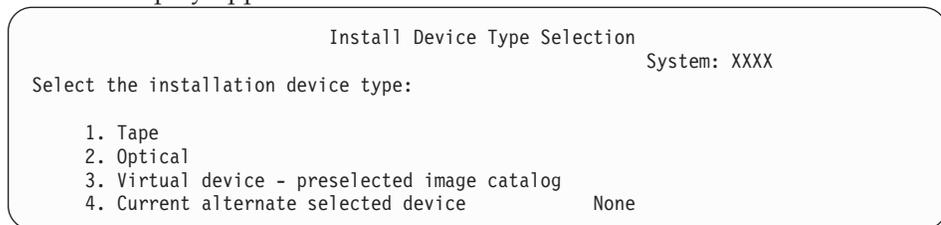

Type the number that corresponds to your device type and press Enter.

3. The Confirm Install of the Operating System display is shown on your console. Press Enter.
4. The Select a Language Group display appears, which shows the primary language currently installed on the system. The primary language value should match the language feature number that is printed on the installation media. To find the appropriate feature code for your language, refer to “Feature codes for national language version” on page 214.

```

                                Select a Language Group
                                System: XXXX
Note: The language feature shown is the language feature
installed on the system.

Type choice, press Enter.

Language feature . . . . . 2924

```

If you need to change the feature, type the numbers of the feature code for the language you want.

Press Enter.

5. Either the Confirm Language Feature Selection display or the Confirm Service Tools Language display is shown on your console. Press Enter.
6. If the Add All Disk Units to the System menu does not appear, go to step 8 on page 79.
7. **Adding disk units subtask:**
 - a. If any nonconfigured disk units that are capable of being protected by device parity are currently unprotected, the Add All Disk Units to the System display is shown. If the following display is not shown, continue with step 7b on page 78.

```

                                Add All Disk Units to the System
                                System: XXXX

Non-configured device parity capable disk units are attached
to the system. Disk units cannot be added automatically.
It is more efficient to device parity protect these
units before adding them to the system.
These disk units may be parity enabled and added at SST (i5/0S).
Configured disk units must have parity enabled at DST.

Select one of the following:

1. Perform any disk configuration at SST (i5/0S)
2. Perform disk configuration using DST

```

It is much faster to start device parity protection on the disk units at DST before the disk units are added to the auxiliary storage pool configuration. To start device parity on the eligible disk units, do the following tasks from the Add All Disk Units to the System display:

- 1) Select option 2 to perform disk configuration at DST.
- 2) Sign on at the Dedicated Service Tools Sign-on prompt and return to the Use Dedicated Service Tools (DST) menu.
- 3) Select the option Work with disk units.
- 4) Select the option Work with disk configuration.
- 5) Select the option Work with device parity protection.
- 6) Select the appropriate option for starting device parity protection.
- 7) A list of parity sets that are capable of running device parity protection are shown. Type 1 on each option line for each parity set.
- 8) You might see a Confirm Continuation display that indicates that the system must perform a directory recovery. Press Enter to continue.
- 9) The Confirm Starting Device Parity Protection display is shown. This shows the list of disk units that will have device parity protection. Press Enter to continue.

- 10) An in-progress display that indicates the status of the function is shown.
- 11) Return to the IPL or Install the System display.
- b. If the Add All Disk Units to the System menu appears, it could look like the following example.

Add All Disk Units to the System System: XXXX

Select one of the following:

1. Keep the current disk configuration
2. Perform disk configuration using DST
3. Add all disk units to the system auxiliary storage pool
4. Add all disk units to the system ASP and balance data

If you do not want device parity protection, mirrored protection, or user ASPs, select option 3 (Add all disk units to the system auxiliary storage pool). By adding disk units before you install the operating system, you improve your overall system performance because the operating system is distributed across all of your disk units.

For logical partitions only
<p>If you will be creating logical partitions later, you do not want to configure all units now. Refer to the validated output from the IBM System Planning Tool (SPT) supplied by IBM for the configuration selection. To access the tool, go to the IBM System Planning Tool  Web site (http://www.ibm.com/systems/support/tools/systemplanningtool/).</p>

Note: If either the Disk Configuration Error Report display or the Disk Configuration Warning Report display appears, go to “Disk configuration warning and error messages” on page 173 to determine the appropriate action.

- c. You could see the following display if your disk configuration has changed. Type 5 next to the problem and press Enter to display the detailed report.

Problem Report

Note: Some action for the problems listed below may need to be taken. Please select a problem to display more detailed information about the problem and to see what possible action may be taken to correct the problem.

Type option, press Enter.
5=Display Detailed Report

OPT	Problem
-	_____
-	_____

- d. If the following display appears, a disk unit that you selected to add to your disk configuration could already have data on it. If you choose to continue, any data that is on the disk units listed will be removed. Be certain that you want to configure the disk before you continue. Follow the instructions on the display. Press Enter to return to the Problem Report display. Press F10 to continue the Add Disk Unit subtask.

labeled B29xx_01, where 29xx is the identifier for the primary language.) Throughout the remainder of these procedures, load the next volume when prompted by the system. When you are installing from optical media, wait until the In Use indicator goes out before you continue.

- The Install the Operating System display appears when the IPL for the Licensed Internal Code completes. The XX's in the following display indicate default date and time values.

```

Install the Operating System

Type options, press Enter.

Install
option . . . . . 1           1=Take defaults (No other
                                options are displayed)
                                2=Change install options

Date:
Year . . . . . XX           00-99
Month . . . . . XX          01-12
Day . . . . . XX           01-31

Time:
Hour . . . . . XX           00-23
Minute . . . . . XX         00-59
Second . . . . . XX         00-59

```

Type the following and press Enter:

Install option 1

Date: (Use the current year, month, and day.)

Time: (Use the current time, 24-hour clock.)

- Status messages are displayed during the installation process. You do not need to respond to these displays. The following is an example of a status display. This display might be present for 2 hours or more. The display is blank for a time between stage 4 and stage 5.

```

Message ID . . . : CPI2070           i5/OS Installation Status

Stage 6 +-----+
        |                    58%                    |
        +-----+

Installation
Stage      Completed      Objects
2 Restoring programs to library QSYS . . . . . : X      13637
3 Restoring language objects to library QSYS . . : X      01540
4 Updating program table . . . . . : X
5 Installing database files . . . . . : X
>> 6 Installing base directory objects . . . . . :
7 Completing installation . . . . . :

i5/OS is a trademark of IBM in the United States and other countries.

```

- The Sign On display appears on your console.

```

                                Sign On
                                System. . . . . : XXXX
                                Subsystem . . . . : XXXX
                                Display . . . . . : XXXXXXXX

User. . . . . QSECOFR
Password . . . . .
Program/procedure . . . . . _____
Menu . . . . . _____
Current library . . . . . _____

```

Type the following and press Enter:

User: QSECOFR

Password: (Enter password, if required.)

13. The IPL Options display appears.

```

                                IPL Options

Type choices, press Enter.

System date . . . . . XX / XX / XX      MM / DD / YY
System time . . . . . XX : XX : XX      HH : MM : SS
System time zone . . . . . Q0000UTC      F4 for list
Clear job queues. . . . . N              Y=Yes, N=No
Clear output queues . . . . . N          Y=Yes, N=No
Clear incomplete job logs . . . . . N    Y=Yes, N=No
Start print writers . . . . . Y          Y=Yes, N=No
Start system to restricted state . . . . N Y=Yes, N=No

Set major system options. . . . . N      Y=Yes, N=No
Define or change system at IPL. . . . . N Y=Yes, N=No

Last power-down operation was ABNORMAL

```

Notes:

- a. Ignore the message on the bottom of the IPL Options display.
- b. If you need to change system values, you can do so now. One example of a system value that you might change is the value for the security level (QSECURITY) system value.

Another example is the scan control (QSCANFCTL) system value. If you have not already done so, consider specifying *NOPOSTRST for the QSCANFCTL system value to minimize future scanning of some objects that are restored during the installation of licensed programs in the following steps. For more information on scanning and the system value settings, see the topic Scanning support in the i5/OS Information Center.

Type Y for the *Define or change the system at IPL* prompt. Follow the instructions on the displays.

Type the following and press Enter:

- System date: (Use the current date.)
- System time: (Use the current time, 24-hour clock.)
- System time zone: (Verify that it is correct or press F4 to select a time zone.)
- Set major system options: N

14. The Edit Rebuild of Access Paths display could be shown. If it is, press Enter to continue.
15. You see the Status display again.

```

Message ID . . . : CPI2070                                i5/OS Installation Status

Stage 6 |-----+-----+
          |                    58%                          |
          +-----+-----+

Installation
Stage      Completed      Objects
2 Restoring programs to library QSYS . . . . . : X          13637
3 Restoring language objects to library QSYS . . . . . : X          01540
4 Updating program table . . . . . : X
5 Installing database files . . . . . : X
>> 6 Installing base directory objects . . . . . :
7 Completing installation . . . . . :

i5/OS is a trademark of IBM in the United States and other countries.

```

16. Additional display messages could be shown.
Press Enter after each message to continue.
17. The System i Main Menu (or the menu you chose as an initial menu) appears on your console.

You have completed the installation of the i5/OS operating system.

For most upgrades, continue with “Replacing the licensed programs.” If you are replacing software of the same version and release, however, do not replace any other licensed programs. Complete the tasks in “Checklist: Completing the replacement of the same i5/OS release” on page 96.

Replacing the licensed programs

Follow these steps to replace licensed programs related to i5/OS by using the manual installation method.

1. Begin this task at the System i Main Menu (or the menu you chose as an initial menu).
 - a. Type CHGMSGQ QSYSOPR *BREAK SEV(60) and press Enter.
 - b. A message display could appear. Press Enter.
 - c. Type ENDSBS *ALL *IMMED and press Enter.
 - d. When the following message appears, press Enter to continue:
ENDSBS SBS(*ALL) command being processed
 - e. The message System ended to restricted condition appears. Press Enter to continue.
 - f. Type CHGMSGQ QSYSOPR SEV(95) and press Enter.
 - g. A message display could appear. Press Enter.
2. The System i Main Menu (or the menu you chose as an initial menu) appears on your console.
Type GO LICPGM and press Enter.
3. The Work with Licensed Programs display appears.

- Status displays might appear. These displays show the status of the licensed programs and language objects as they install on the system. You do not need to respond to these status displays.

```

Installing Licensed Programs
System: XXXX

Licensed programs processed . . . . . : 0 of XXX

Licensed program install in progress

```

The following display is an example of the display that appears during the installation process.

```

Installing Licensed Programs
System: XXXX
Licensed programs processed . . . . . : X of XXX

Licensed
Program Option Description Type
5761SS1 2 Online Information 2924

```

This display shows which licensed programs and optional parts of licensed programs are being processed. After the *PGM objects and *LNG objects are processed, the display shows the total number of licensed programs processed.

- If a message similar to the following appears, load the next media volume that contains licensed program products, and continue the installation. When you are installing from optical media, wait for the In Use indicator to go out before you respond to the message.

```

Display Messages
System: XXXX
Queue . . . . . : QSYSOPR Program . . . . . : *DSPMSG
Library . . . . . : QSYS Library . . . . . :
Severity . . . . . : 95 Delivery . . . . . : *BREAK

Type reply (if required), press Enter.
Load the next volume in optical device OPT01 (X G)
Reply . . . . . G

```

Type G and press Enter.

After you load each volume, type G and press Enter. If there are no more volumes to load that contain licensed programs, or if you want to end the loading process, type X and press Enter.

- If a licensed program requires acceptance of a software agreement, the Software Agreements display appears. Do either of the following:
 - Press F14 to accept the agreement and allow the licensed program to continue installing.
 - Press F16 to decline the agreement and end the installation of that licensed program.
- The Work with Licensed Programs display appears on your console when the installation process is completed. One of the following messages appears on the bottom of the Work with Licensed Programs display:
 - Work with licensed programs function has completed.
 - Work with licensed programs function not complete.

Verifying completion of manual installation

Follow these steps to verify that you have successfully completed the i5/OS upgrade by using the manual installation method.

1. The Work with Licensed Programs display appears. Use the page down or roll up key to see the third display of the Work with Licensed Programs menu.
Type 50 and press Enter.
2. The Display Install History display appears. The XX's indicate default values.

```
Display Install History
Type choices, press enter.
Start date . . . . . XX/XX/XX MM/DD/YY
Start time . . . . . XX:XX:XX HH:MM:SS
Output . . . . . *_____ *, *PRINT
```

Press Enter.

3. Look at the messages that appear on the Display History Log Contents display.
 - If you had an installed licensed program that was not renewed by IBM, it might not be replaced. Refer to “Mixed-release environment” on page 16 for more information.
 - If any of the messages on the display indicate a failure or a licensed program that is partially installed, go to Chapter 14, “Troubleshooting software installation problems,” on page 157 to determine the problem.

Otherwise, press F3 (Exit).

4. Verify the installed status values of your licensed programs and check for compatibility. It is important to make sure that all of your licensed programs are compatible with the operating system.

Use LICPGM menu option 10 (Display licensed programs) to see the release and installed status values of the installed licensed programs. If the installed status value of a licensed program is *COMPATIBLE, it is ready for use. If the installed status value of a licensed program is *BACKLEVEL, the licensed program is installed, but its version, release, and modification is not compatible with the currently installed level of the operating system. Check the topic “Licensed program releases and sizes” on page 181 to verify the current version, release, and modification of the licensed program. “Installed status values” on page 219 lists the possible installed status value descriptions.

You have completed this task.

1. Do you need to install additional licensed programs?
 - **No.** Go to the next step.
 - **Yes.** Go to “Installing additional licensed programs” on page 127 and complete the instructions.
2. Do you need to install a secondary language?
 - **No.** Go to the next step.
 - **Yes.** Go to “Installing a secondary language” on page 134 and complete the instructions.
3. You must complete the installation process before you put your system into operation. Go to Chapter 8, “Checklist: Completing the i5/OS upgrade or replacement,” on page 87 and complete the instructions.

Chapter 8. Checklist: Completing the i5/OS upgrade or replacement

Use this checklist to complete the IBM i5/OS upgrade or replacement processes.

1. If you still have default passwords for your service tools user IDs, change them now. For information about service tools user IDs, see Changing service tools user IDs and passwords in the i5/OS Information Center.
2. Remove the media volume when the installation is complete. If your media is tape, wait for the tape to rewind completely.
3. If you have any IBM or non-IBM products with special installation instructions, install these products now. Check the product's documentation, and follow any special instructions.
4. **For logical partitions only:**

Attention: For System i 8xx systems that support i5/OS V6R1, do not perform the next step (step 5) to install the cumulative PTF package until after you are aware of the unique PTF installation considerations involved on a system with logical partitions. You could potentially lose data. Refer to the topic Installing fixes on systems with logical partitions in the i5/OS Information Center to understand how to install the cumulative PTF package on a system with logical partitions.

5. Install the most current cumulative PTF package. (This package should have been ordered a week or two before your installation.) Use the instructions in the *PTF Shipping Information Letter*. Then return here and continue with the next step.

Note: If you do not install the cumulative PTF package now, you need to perform an IPL and let the Initialize System (INZSYS) process complete. Before you do, set the IPL type to **B** (or the IPL type you use for everyday operation) and then set the mode selection to **Normal**. "Initialize System (INZSYS) recovery" on page 172 has more information on INZSYS.

6. Apply any PTF groups that you have ordered. For more information on PTF groups, refer to "Reviewing software PTF (fix) requirements" on page 30. To apply PTF groups, refer to the cover letter and instructions for the program temporary fix (PTF). For general information on applying PTFs, go to Installing fixes in the i5/OS Information Center.
7. (This does not apply to IBM System i 8xx models that support i5/OS V6R1.) If your system is operating as a service partition and your system is not being managed by a Hardware Management Console, you might be required to perform a server IPL. A *server IPL* is an IPL whereby all logical partitions on the system are shut down at the same time. This allows, for example, a new level of the server firmware to be activated on the system.

You might be required to perform a server IPL after you apply or remove a PTF on the service partition if that PTF affects the server firmware.

- To find out if you need to do a server IPL, type DSPFMWSTS on the i5/OS control language (CL) command line and press Enter. If a server IPL is required, the **Server IPL required** field is set to Yes.
- To find out if your system is operating as a service partition, type DSPFMWSTS on the CL command line and press Enter. If your system is operating as a service partition, the **Service partition** field is set to Yes.

Note: When shutting down your service partition, reference codes D6xx430B or D6xx430A could be displayed for an extended amount of time. The xx should increment periodically and is a normal part of processing when server firmware code is being updated. Allow the system to complete the processing. Do not interrupt this process.

8. Look for messages in the install history log that indicate the status of the Initialize System (INZSYS) process.
 - a. Type G0 LICPGM and press Enter.
 - b. Type 50 (Display log) on the Work with Licensed Programs display, and press Enter.
 - c. The Display Install History display appears. Press Enter.

The Display History Log Contents display appears. If you do not see either of the following messages on the display, wait a few minutes and select option 50 again. Find the message Initialize System (INZSYS) started. After this message appears, wait for a period of time and look for the Initialize System (INZSYS) processing completed successfully message (CPC37A9). If you do not see message CPC37A9 on the display, go to “Initialize System (INZSYS) recovery” on page 172 to determine the problem.
9. If you see the message An unexpected error occurred during an IPsec request in the QSYSOPR message queue, the Internet Protocol filtering rules might have failed to load. To help you determine why the loading of filtering rules failed, review the messages in the QTCPWRK system job log and search for TCP9535 (Failed to apply filtering rules). You will need to load your filter rules again.
10. If you used an image catalog to perform your upgrade, you might want to remove all installation images from your system. To delete the catalog and all the optical images (image files), type the following:

```
DLTIMGCLG IMGCLG(mycatalog) KEEP(*NO)
```
11. If you used an image catalog to perform your installation and you used the Start ASP Balance (STRASPBAL) command to end the allocation for storage in the load-source disk unit before you upgraded, enter the Start ASP Balance (STRASPBAL) command to resume the allocation of storage for the load-source disk unit.

```
STRASPBAL TYPE(*RSMALC) UNIT(1)  
STRASPBAL TYPE(*CAPACITY) ASP(1) TIMLMT(*NOMAX)
```
12. If your service tools language is different than your primary language, you might want to verify that the service tools language is the one that you want on the system or logical partition. For details, refer to Changing the service tools language on your system or logical partition in the i5/OS Information Center.
13. Install software license keys for your i5/OS and keyed products. Use the Work with License Information (WRKLICINF) command to display the installed keyed products to add license key data. For specific instructions, go to Adding license key information in the i5/OS Information Center.

After updating the license key information, return here and continue with the next step.
14. After you complete the installation process and before you make a system or partition available to all users, set the usage limit for the software-license managed products. These products are listed on the Proof of Entitlement (POE), invoice, or other documents that you have received with your software order. For products that have a usage limit, you set the usage limit with the Work with License Information (WRKLICINF) command.

To set your usage limit, do the following:

- a. Type WRKLICINF and press Enter.
- b. On the Work with License Information display, press F11 (Display Usage Information). The usage limit number on each product that is listed on the POE, invoice, or other documents must match the usage limit number on the Work with License Information display for the associated product.
- c. If the usage limit is to be updated, move the cursor to the line that contains the product name whose usage limit is to be updated.
- d. Type 2 (Change) and press Enter.
- e. When the Change License Information display is shown, update the usage limit prompt with the usage limit shown on the POE. In addition, update the threshold prompt with either *CALC or *USGLMT. Do not leave the threshold set to zero.

Note: If message CPA9E1B [Usage limit increase must be authorized. Press help before replying (C G).] is sent, respond by typing G.

- f. If the POE lists more products than the Work with License Information display, set the usage limits after you install those products.
15. If you deleted any licensed program libraries or secondary language libraries from either of the library list system values [system library list (QSYSLIBL) or user library list (QUSRLIBL)], change system values QSYSLIBL or QUSRLIBL to add the libraries back in the library list now.
16. If you changed the verify object signatures during restore (QVFYOBJRST) system value from 4 or 5 to 3 or had unlocked it before your upgrade, change this back to its normal setting. If you have additional software applications, however, that were included in the upgrade, keep them at 3 until after you restore them. If you changed the allow restore of security sensitive objects (QALWOBJRST) system value to *ALL or had unlocked it before the upgrade, return the value to its normal locked setting.
17. If you changed the scan control (QSCANFCTL) system value to minimize future scanning of some objects that are restored before you installed your licensed programs, you can now remove the *NOPOSTRST specification from this system value.
18. If you changed any other system value such as security level (QSECURITY) during your upgrade, change it back now.
19. Some of the tasks in this topic require that you change the QSYSOPR severity code filter to 95. If you do not want to continue with this level or you want to change the delivery notification, type CHGMSGQ QSYSOPR DLVRY(xx) SEV(yy) where *xx* indicates the delivery notification and *yy* indicates the severity code that you want to use. The system defaults are DLVRY(*HOLD) SEV(0).
20. If you have installed the product 5722-VI1, Content Manager, you can use the product. However, you must perform post-installation commands. For more information, refer to the Post Installation section in the product document *IBM ImagePlus VisualInfo for AS/400: Planning and Installation Guide*, GC34-4585.
21. If you have not already verified the compatibility of your licensed programs with the i5/OS operating system, do this now. Use LICPGM menu option 10, Display installed licensed programs. If *COMPATIBLE is not listed next to a licensed program, then go to "Installed status values" on page 219 and determine how to proceed.
22. Depending on your strategy for object conversion, consider running the Start Object Conversion (STROBJCVN) command to either convert user objects or check which objects still require conversion.

23. Save your system using your normal save procedures. Refer to the instructions in the Backing up your system topic in the i5/OS Information Center. Make sure that the Initialize System (INZSYS) process is complete before you save your system.

Note: Before you start a save operation, use the Work with Active Jobs (WRKACTJOB) command to check the status of QDCPOBJx jobs. These jobs decompress objects. There could be more than one QDCPOBJx job. You can start your save operation if these jobs are in an inactive state. If you put the system in a restricted state by ending subsystems, the QDCPOBJx jobs become inactive. The jobs will restart when the system is not in a restricted state. For more information about decompressing objects, see “Compressed objects and storage space” on page 18.

24. If you plan to install and use the i5/OS Information Center either from a workstation or the system, refer to the optical media that come with your software order: Find *i5/OS Information Center* CD, SK3T-4091. This package also includes the PDF versions of System i manuals. For the installation instructions, see the readme.txt file.
25. If you have installed System i Access Family products, you might have other tasks that you need to complete. You can find further information about installing System i Access Family products in the following sources:
 - System i Access for Windows in the i5/OS Information Center.
 - The System i Access Family  Web site (<http://www.ibm.com/systems/i/software/access/>).
26. You might have installed licensed programs that require additional installation steps on PCs, or you might have programs that should be installed on PCs through an System i Access Family function. If you have products such as these, complete your PC installation by using the instructions for the product.
27. If you have a System i integration with BladeCenter and System x that you stopped before you began the installation process, restart it now.
 - a. Type GO NWSADM on a CL command line. The Network Server Administration display appears.
 - b. Select option 2 (Start a network server).
28. If you installed 5761-TC1, TCP/IP Utilities, go to the topic TCP/IP setup in the i5/OS Information Center for advanced configuration and setup information.
29. If you have customized an IBM-supplied program (for example, QSTRUP in library QSYS) in a previous release, make sure that you re-create this program to run correctly in the new release.
30. If you have duplicated any IBM-supplied objects, you might want to make new duplicates after you install the release. This enables you to take advantage of functions added in the new release. Examples of objects that you might duplicate include the following:
 - Message text descriptions
 - Commands
 - Command defaults
31. If you use IBM Performance Management for System i5 Performance Toolsfunction, the Collection Services tool, or the Performance Tools licensed program and you collected data before installing your new release, you need to perform an action to enable the collecting of performance data to continue.

| You have the following choices regarding how to handle your performance
| data from the prior release:

- Convert the data.

| Use the Convert Performance Data (CVTPFRDTA) command to convert the
| data in the collection library.

- Use the automatic data collection support.

| If you do not convert your performance database files and if Collection
| Services is started and you specified the option to create database files
| automatically, a performance library for the prior release files is created. The
| performance database files are moved to that library. This action allows new
| files to be created and preserves the existing data files from the previous
| release. You should be aware of the following items:

- The library name that is created is QPFRDvrmmn, where vrm is the
| current version, release, and modification and nn is a unique sequence
| number starting with 01, for example, QPFRD52001.
- The library is created with *EXCLUDE public authority. The library is
| owned by the QSYS user profile, and the owner of the original library is
| given *ALL authority.
- All QAPMxxxx files are moved.
- If you do not want to keep the data from the previous release, you can
| delete the QPFRDvrmmn library with the Delete Library (DLTLIB)
| command (DLTLIB qpfrdvrmmn)

- Delete the QAPMxxxx files.

| If you do not convert your performance database files and do not run
| Collection Services, you can delete the QAPMxxxx files with the Delete File
| (DLTF) command (DLTF library/QAPM*).

You have completed upgrading to the new release on your system.

Chapter 9. Replacing Licensed Internal Code and i5/OS of the same version and release

Use this procedure to install a new modification of Licensed Internal Code and a more recent update (resave) of the i5/OS operating system to support new hardware.

This is not a backup and recovery procedure. If you have ordered resave media, follow these tasks to replace the Licensed Internal Code and the operating system.

Checklist: i5/OS software replacement

Use this checklist to complete all the tasks for a software replacement of the same i5/OS release.

If you plan to navigate through this checklist online, it might help to right-click this topic in the navigation tree to open a new window. The information in this checklist summarizes the major tasks that you need to do before you begin to replace your software.

Before you begin

1. Verify that your server model meets the requirements to support the new release. This information is found in the IBM Systems  Web site. Search for **IBM Prerequisite** and **OS Level Mapping**.
2. Know your current strategy for connecting a console to your system or logical partition. Your current connection strategy influences your planning activities. For information about twinaxial consoles and Operations Console, refer to the Connecting to System i topic in the i5/OS Information Center. For information about managing your systems with Hardware Management Console, refer to the topic Managing your server using the Hardware Management Console in the IBM Systems Hardware Information Center.
3. (This does not apply to IBM System i 8xx models that support i5/OS V6R1.) Plan for extra time after the upgrade to perform a server IPL. This is one of the tasks described in the “Checklist: Completing the replacement of the same i5/OS release” on page 96.
4. Understand system administration tasks (basic system operations). To perform software installation tasks, you need to be able to restart your system, sign on and off, use the command interface, install fixes, change the system operation mode and initial program load (IPL) source on the system unit control panel, and analyze system problems.
5. Understand the different “Types of software installation devices” on page 10. The installation tasks are different based on the device type and media type that you use.

From the following checklist, perform the tasks that are appropriate for your system. Required steps are noted. If you are viewing this in printed copy, use this checklist as a guide for the steps on the pages that follow.

Software replacement tasks

1. Verify the contents of your software order.

- a. You need these optical media: I_BASE_01, B29xx_01. Verify also that B29xx_01 is in the correct primary language.
- b. "Identifying and reviewing information resources" on page 27
2. "Reviewing software PTF (fix) requirements" on page 30
 - a. "Finding the latest PSP information" on page 30
 - b. "Analyzing fixes you currently have on your system" on page 30
 - c. "Obtaining a record of PTFs applied" on page 95
 - d. "Permanently applying PTFs for a replacement of the same release" on page 95
3. "Working with critical system values before you install software" on page 33
 - a. "Recording and printing all system values before you install software" on page 33
 - b. "Changing certain system values (QSYSLIBL, QUSRLIBL, QALWOBJRST, or QVFYOBJRST)" on page 33 (Only QALWOBJRST applies to a replacement.)
 - c. "Optionally changing the scan control system value" on page 35
4. "Ensuring two-phase commit integrity" on page 36
5. If you have a large number of spooled files on your system, set the compress job tables IPL attribute to none. To do this, use the Change IPL Attributes command: CHGIPLA CPRJOBIBL(*NONE).
6. "Gathering performance data for benchmark" on page 38
7. "Preparing the upgrade device and media" on page 40
8. "Preparing to upgrade or replace software using an image catalog" on page 41. (Only 3 optical media are used: I_BASE_01, B29xx_01, and B29xx_02.)
 - a. "Determining storage requirements for image catalog installation" on page 41
 - b. "Freeing up space on the load-source disk unit for an image catalog" on page 41
 - c. "Preparing an optical image catalog to install software" on page 42
9. "Determining storage space required for a replacement of the same release" on page 95
10. "Preparing your console for software installation" on page 54
11. "Stopping the integrated server and other application servers" on page 55
12. "Saving the system" on page 56
13. "Replacing software of the same release using manual installation" on page 96
14. "Installing PTFs for the Licensed Internal Code and the operating system" on page 96
15. "Checklist: Completing the replacement of the same i5/OS release" on page 96

After you finish

After the replacement tasks in this checklist have been completed, consider these tasks.

1. Develop a strategy for managing and maintaining your software. For information about software fixes (or program temporary fixes, PTFs), and software licenses and license keys, go to the topic Maintaining and managing i5/OS and related software in the i5/OS Information Center.
2. For information about software distribution of supported products, go to the topic Distributing software in the i5/OS Information Center.

Obtaining a record of PTFs applied

Obtain a record of the PTFs applied to your system for comparison later to ensure that any corrective fixes you have applied are still present after performing the i5/OS upgrade procedures.

If you display the PTFs to an output file (*OUTFILE), the query functions can be used later rather than looking through all the listings to verify that all the current PTFs are applied after the installation of Licensed Internal Code and i5/OS.

To determine what PTFs have been applied to Licensed Internal Code, enter the following on the i5/OS control language (CL) command line:

```
DSPPPTF LICPGM(5761999) to *PRINT or *OUTFILE
```

To determine what PTFs have been applied to the i5/OS operating system, enter the following on the CL command line:

```
DSPPTF LICPGM(5761SS1) to *PRINT or *OUTFILE
```

Permanently applying PTFs for a replacement of the same release

Permanently apply Licensed Internal Code and i5/OS operating system PTFs by using the following commands as recommended before all installations (the delay option is chosen so you can schedule the IPL).

Note: The primary partition of a logically partitioned system must be handled carefully.

1. Ensure the secondary partitions are in a normal IPL mode with the system IPL action of IPL.
2. Ensure the primary partition is a normal IPL mode.
3. Perform the APYPTF commands on the primary partition.

For System i 8xx models that support i5/OS V6R1, refer to Managing logical partitions in the i5/OS Information Center for more information.

For all other systems, refer to Logical partitioning in the IBM Systems Hardware Information Center.

```
APYPTF LICPGM(5761999) SELECT(*ALL) APY(*PERM) DELAYED(*YES) IPLAPY(*YES)
APYPTF LICPGM(5761SS1) SELECT(*ALL) APY(*PERM) DELAYED(*YES) IPLAPY(*YES)
```

Perform an IPL:

```
PWRDWNSYS RESTART(*YES)
```

Note: For V6R1, the default value for the Power Down System (PWRDWNSYS) command is to display a confirmation. This can be changed by specifying *NO for the Confirm (CONFIRM) parameter: CONFIRM(*NO). The default value for V5R3 and V5R4 is not to display a confirmation.

Determining storage space required for a replacement of the same release

Before you schedule a time to install this release, determine the available storage space and the storage space that is required.

Load-source disk unit requirements:

The procedures in this topic might not include all requirements for storage that you have on your system. If you are preparing to upgrade or replace software using an image catalog, ensure that you have reviewed the topic, “Determining storage requirements for image catalog installation” on page 41.

Replacing software of the same release using manual installation

Use the manual installation method to upgrade or replace your software of the same i5/OS release.

Complete the tasks in “Replacing the Licensed Internal Code” on page 68 and “Replacing the i5/OS operating system” on page 76. After performing these tasks, go to “Installing PTFs for the Licensed Internal Code and the operating system”.

Installing PTFs for the Licensed Internal Code and the operating system

Install PTFs (cumulative, HIPER, group, or individual PTFs) only for the Licensed Internal Code and the i5/OS operating system.

1. Mount the PTF media.
2. Type G0 PTF. On option 7, select 5761999 and 5761SS1.
3. After all the media is processed, perform an IPL.

To determine if all the Licensed Internal Code PTFs and the i5/OS PTFs that were applied to the partition before the installation exist on the partition now, enter the following on an i5/OS control language (CL) command line:

```
DSPPTF LICPGM(5761999) to *PRINT or *OUTFILE  
DSPPTF LICPGM(5761SS1) to *PRINT or *OUTFILE
```

1. Compare the output from the DSPPTF command that you obtained before the upgrade to determine if any PTFs you previously had on your system are missing.
2. Install PTFs that are missing after you upgrade.

Checklist: Completing the replacement of the same i5/OS release

Use this checklist to complete any of the V6R1-to-V6R1 IBM i5/OS replacement processes.

1. If you still have default passwords for your service tools user IDs, change them now. For information on service tools user IDs, see Changing service tools user IDs and passwords in the i5/OS Information Center.
2. (This does not apply to IBM System i 8xx models that support i5/OS V6R1.) If your system is operating as a service partition and your system is not being managed by a Hardware Management Console, you might be required to perform a server IPL. A *server IPL* is an IPL whereby all logical partitions on the system are shut down at the same time. This allows, for example, a new level of the server firmware to be activated on the system.

You might be required to perform a server IPL after you apply or remove a PTF on the service partition if that PTF affects the server firmware.

- To find out if you need to do a server IPL, type DSPFMWSTS on the i5/OS control language (CL) command line and press Enter. If a server IPL is required, the **Server IPL required** field is set to Yes.

- To find out if your system is operating as a service partition, type DSPFMWSTS on the CL command line and press Enter. If your system is operating as a service partition, the **Service partition** field is set to Yes.

Note: When shutting down your service partition, reference codes D6xx430B or D6xx430A could be displayed for an extended amount of time. The xx should increment periodically and is a normal part of processing when server firmware code is being updated. Allow the system to complete the processing. Do not interrupt this process.

3. If you used an image catalog to perform your installation, you might want to remove all installation images from your system. To delete the catalog and all the optical images (image files), type the following:

```
DLTIMGCLG IMGCLG(mycatalog) KEEP(*NO)
```

4. If you used an image catalog to perform your installation and you used the Start ASP Balance (STRASPBAL) command to end the allocation for storage in the load-source disk unit before you upgraded, enter the Start ASP Balance (STRASPBAL) command to resume the allocation of storage for the load-source disk unit.

```
STRASPBAL TYPE(*RSMALC) UNIT(1)
STRASPBAL TYPE(*CAPACITY) ASP(1) TIMLMT(*NOMAX)
```

5. If your service tools language is different than your primary language, you might want to verify that the service tools language is the one that you want on the system or logical partition. For details, refer to Changing the service tools language on your system or logical partition in the i5/OS Information Center.
6. After you complete the installation process and before you make a system or partition available to all users, set the usage limit for the software-license managed products. These products are listed on the Proof of Entitlement (POE), invoice, or other documents that you have received with your software order. For products that have a usage limit, you set the usage limit with the Work with License Information (WRKLCINF) command.

To set your usage limit, do the following:

- a. Type WRKLCINF and press Enter.
- b. On the Work with License Information display, press F11 (Display Usage Information). The usage limit number on each product that is listed on the POE, invoice, or other documents must match the usage limit number on the Work with License Information display for the associated product.
- c. If the usage limit is to be updated, move the cursor to the line that contains the product name whose usage limit is to be updated.
- d. Type 2 (Change) and press Enter.
- e. When the Change License Information display is shown, update the usage limit prompt with the usage limit shown on the POE. In addition, update the threshold prompt with either *CALC or *USGLMT. Do not leave the threshold set to zero.

Note: If message CPA9E1B [Usage limit increase must be authorized. Press help before replying (C G).] is sent, respond by typing G.

- f. If the POE lists more products than the Work with License Information display, set the usage limits after you install those products.
7. If you changed the allow restore of security sensitive objects (QALWOBJRST) system value to *ALL or had unlocked it before the upgrade, return the value to its normal locked setting.

8. If you changed any other system value such as security level (QSECURITY) during your upgrade, change it back now.
9. If you changed the scan control (QSCANFCTL) system value to minimize future scanning of some objects that are restored before you installed your licensed programs, remove the *NOPOSTRST specification from this system value.
10. Some of the tasks in this topic require that you change the QSYSOPR severity code filter to 95. If you do not want to continue with this level or you want to change the delivery notification, type CHGMSGQ QSYSOPR DLVRY(xx) SEV(yy) where *xx* indicates the delivery notification and *yy* indicates the severity code that you want to use. The system defaults are DLVRY(*HOLD) SEV(0).
11. Save your system using your normal save procedures. Refer to the instructions in the Backing up your system topic in the i5/OS Information Center.

Note: Before you start a save operation, use the Work with Active Jobs (WRKACTJOB) command to check the status of QDCPOBJx jobs. These jobs decompress objects. There could be more than one QDCPOBJx job. You can start your save operation if these jobs are in an inactive state. If you put the system in a restricted state by ending subsystems, the QDCPOBJx jobs become inactive. The jobs will restart when the system is not in a restricted state. For more information about decompressing objects, see “Compressed objects and storage space” on page 18.

12. If you plan to install and use the i5/OS Information Center either from a workstation or the system, refer to the optical media that come with your software order. Find *i5/OS Information Center CD, SK3T-4091*. This package also includes the PDF versions of System i manuals. For the installation instructions, see the readme.txt file.
13. If you have a System i integration with BladeCenter and System x that you stopped before you began the installation process, restart it now.
 - a. Type G0 NWSADM on a CL command line. The Network Server Administration display appears.
 - b. Select option 2 (Start a network server).
14. If you have customized an IBM-supplied program (for example, QSTRUP in library QSYS) in a previous release, make sure that you re-create this program to run correctly in the new release.
15. If you have duplicated any IBM-supplied objects, you might want to make new duplicates after you install the release. This enables you to take advantage of functions added in the new release. Examples of objects that you might duplicate include the following:
 - Message text descriptions
 - Commands
 - Command defaults

You have completed the replacement of the same release on your system.

Chapter 10. Checklist: i5/OS software installation readiness

Use this checklist to help consolidate and verify that you complete all the preparation tasks for a new i5/OS software installation.

If you plan to navigate through this checklist online, it might help to right-click this topic in the navigation tree to open a new window. This information summarizes the major tasks that you need to do before you begin to install your software.

Before you begin

1. Verify that your server model meets the requirements to support the new release. This information is found in the IBM Systems  Web site. Search for **IBM Prerequisite** and **OS Level Mapping**.
2. Know your current strategy for connecting a console to your system or logical partition. Your current connection strategy influences your planning activities. For information about twinaxial consoles and Operations Console, refer to the Connecting to System i topic in the i5/OS Information Center. For information about managing your systems with Hardware Management Console, refer to the topic Managing your server using the Hardware Management Console in the IBM Systems Hardware Information Center.
3. Understand system administration tasks (basic system operations). To perform software installation tasks, you need to be able to restart your system, sign on and off, use the command interface, install fixes, change the system operation mode and initial program load (IPL) source on the system unit control panel, and analyze system problems.
4. Understand the different “Types of software installation devices” on page 10. The installation tasks are different based on the optical media that you use.

Software preinstallation tasks

Perform the following tasks that are appropriate for your system.

1. “Verifying the contents of your software order” on page 101
 - a. “Identifying and reviewing information resources” on page 101
 - b. “Verifying the correct optical distribution media” on page 102
 - c. “Verifying license keys for keyed products” on page 29
2. “Performing initial installation tasks” on page 103
 - a. “Ensuring you have the latest information” on page 103
 - b. “Determining disk storage space required for a new installation” on page 103
 - c. “Estimating installation time” on page 103
 - d. “Preparing your console for software installation” on page 54
 - e. “Preparing the installation device and media” on page 105

After you finish

After the tasks in the preceding checklist and your installation have been completed, consider the following tasks.

1. Develop a strategy for managing and maintaining your software. For information about software fixes (also known as program temporary fixes or PTFs), software licenses, and license keys, go to the topic Maintaining and managing i5/OS and related software in the i5/OS Information Center .
2. For information about software distribution of supported products, go to the Distributing software in the i5/OS Information Center topic.

Chapter 11. Installing i5/OS and related software on a new system or logical partition

Follow these procedures to plan and prepare to install the i5/OS release, install software on a new system or logical partition, install additional licensed programs, install a secondary language, and complete the final checklist.

This software installation process includes installing the Licensed Internal Code, the IBM i5/OS operating system, and other software for the first time.

If you are upgrading software that you currently have installed, go to Chapter 5, "Preparing to upgrade or replace i5/OS software," on page 27. If you want to install a new primary language from either a secondary language media set or a primary language media set, go to Chapter 12, "Changing the primary language of your system or logical partition," on page 143.

If you are installing an i5/OS client partition on a system that is managed by the Integrated Virtualization Manager, go to i5/OS client partition considerations for more details.

Important: You cannot use image catalogs to install i5/OS on a new system, because image catalogs require a working system. However, you can use any other media (DVD or tape, for example) to install i5/OS on a new system.

Preparing to install the i5/OS release

Perform these preparatory tasks before you schedule your i5/OS software installation. Allow ample time (a few weeks or days before the installation) to complete these tasks before you perform the actual installation tasks.

Careful, complete, and early preparation saves a considerable amount of time and can help make your software installation on your new system or logical partition run smoothly.

If you are setting up logical partitions, ensure that you plan in advance of your installation and have a basic understanding of logical partitions, your software requirements, and your hardware requirements. For System i 8xx models that support i5/OS V6R1, refer to the topic Planning for logical partitions in the i5/OS Information Center. You can also have different release levels on different partitions. For directions on how to do these correctly for System i 8xx models that support i5/OS V6R1, see the topic Logical partition release support in the i5/OS Information Center. For all other systems, see the topic Planning for logical partitions in the IBM Systems Hardware Information Center.

Verifying the contents of your software order

To save you time and avoid frustration, verify that the contents of your i5/OS software order are correct before you start the installation.

Identifying and reviewing information resources

Become familiar with the important resources pertaining to the installation of your new i5/OS software. Use these documents to plan your installation process.

Many of these resources are shipped with the distribution media in your software order. Read the material that applies to your system

System i Access for Windows DVD, SK3T-4098

With every order that includes Operations Console, you receive *System i Access for Windows DVD, SK3T-4098*.

Information Center media

The *i5/OS Information Center CD, SK3T-4091*, ships with your i5/OS software upgrade order.

PSP information

To keep informed of the latest information about conditions that could impede your software installation, you need the most recent edition of the preventive service planning information (PSP). For information about preventive service planning, see Preventive service planning information in the i5/OS Information Center.

PTF shipping information letter

This letter contains the instructions for installing the cumulative program temporary fix (PTF) package. The letter comes with the package. IBM highly recommends that you order the cumulative PTF package a minimum of 2 weeks before your i5/OS installation if you order by mail and then install the package as part of your completion tasks. For information about the most recent cumulative package, refer to the Ordering fixes topic in the i5/OS Information Center.

Verifying the correct optical distribution media

Ensure that you have the correct media for your upcoming i5/OS installation tasks.

1. Verify that the optical media for Licensed Internal Code and the i5/OS operating system are for V6R1.
2. Verify that the media you received are in the correct primary and secondary languages.

Verifying license keys for keyed products

For the keyed IBM products or keyed IBM product options that you have ordered, review the software license keys created online for your system.

Refer to the Customer Notice that is included with your software order for information on how to access your software license keys. The online access requires that you do the following:

- Register with IBM.
- Use the customer packing list from your software order to obtain the following numbers:
 - Customer number that was used for your order.
 - Software order number that was used to process your order.

After completing these steps, you can view, print, or download your software license keys to your system. If you have further questions, refer to the information about the Customer Notice for details on how to contact the IBM Software License Key Center.

For general information about licensed keys, refer to the topic Software license keys in the i5/OS Information Center.

For a list of products, see “Licensed program releases and sizes” on page 181.

Performing initial installation tasks

Before you install new software on your system, complete these initial installation tasks.

Ensuring you have the latest information

Make sure that your system is ready by ensuring you have the latest information regarding the i5/OS installation.

- **Find the latest available PSP information** Keep informed on the most recent information about conditions that might impede your software installation process. Review the most recent edition of the preventive service planning information in the i5/OS Information Center.
- **Order current cumulative PTF packages and required group fixes** The cumulative PTF package does not come with your software order. Before your installation, order the most recent cumulative PTF package and also order PTF groups that pertain to your environment. Allow a minimum of 2 weeks by mail. If you do not have much time, order them electronically.

Determining disk storage space required for a new installation

Before you schedule a time to install the new i5/OS release, you need to know the storage space that is required.

Load-source disk unit requirements: V6R1 Licensed Internal Code requires that you have a load-source disk unit of 17 GB or larger for each system or logical partition.

Options for upgrading the load-source disk unit are available under the topic Disk management checklist in the i5/OS Information Center. Otherwise contact your authorized service provider for assistance.

Estimating installation time

As part of the installation preparation steps, you might want to estimate the time that will be needed to install the i5/OS release of software on your system.

If you want to estimate the time it will take to install software on your new system or logical partition, see the information in “Estimates for i5/OS software installation time” on page 186. Ignore the tasks that refer to upgrades.

Preparing your console for software installation

Before you install a new i5/OS software release, consider this information about consoles.

Although you can use twinaxial console on most systems, IBM recommends that you use either Operations Console or Hardware Management Console. For requirements on twinaxial console, Operations Console, and PCs, refer to the topic, Connecting to System i in the i5/OS Information Center. If you are moving from twinaxial console to Operations Console, use the *System i Access for Windows* DVD, SK3T-4098 to install Operations Console before you install the new release.

If you are using twinaxial console, the software installation process expects the system console device to be attached at port 0 and address 0 of the first

workstation controller. In most cases, your hardware should be defined in this way. You should verify that the console is attached at port 0 address 0.

If you are planning on migrating your Operations Console, do so either before or after you upgrade. If you are planning on migrating your Hardware Management Console (HMC), do so only after you have completely installed your system. For more information about using the HMC as your i5/OS console, see Managing i5/OS consoles in the IBM Systems Hardware Information Center.

For all systems, verify that the console mode value is set correctly for your console. In addition, you can specify that an i5/OS local area network (LAN) console or Hardware Management Console be taken over by another console in the event your console is disconnected. To verify the console mode value, follow these steps:

1. Access Dedicated Service Tools (DST).
2. Select **Work with DST environment**.
3. Select **System Devices**.
4. Select **Console mode**.

The value of the current console mode is present in the input field. Verify that this is the correct setting. A value of zero means that the console mode has not been set and can interfere with the automatic installation process. The console mode value must be one of the following values.

1	Twinaxial console
2	Operations Console (directly attached)
3	Operations Console (LAN attached)
4	Hardware Management Console (HMC) or Thin Console

During an installation or upgrade, the console type specified by this value is used.

The console mode display also includes the option to allow your 5250 console (does not include twinaxial console) to be taken over by another console. When this option is turned on, the system does not stop with a console failure but continues to run uninterrupted. For more information, see the topic Console takeover and recovery in the IBM Systems Hardware Information Center.

If you use Operations Console, follow these instructions before you install V6R1 on your system.

- Review the Operations Console topic in the i5/OS Information Center. To review the most recent information about the Operations Console client, go to the Operations Console Web site  (<http://www.ibm.com/systems/i/software/access/windows/console/>)
- IBM recommends that you update IBM eServer iSeries Access for Windows to V6R1 System i Access for Windows before you upgrade the i5/OS operating system. For more information, see System i Access for Windows: Installation and setup in the i5/OS Information Center.
- When you receive the i5/OS release upgrade, the shipped service tools user IDs (except 1111111) are expired. For all upgrades and installations, you need to establish a connection between the system and Operations Console PC by using 1111111 (eight 1's) for both the service tools user ID and the default password. This ensures a successful authentication of the subsequent connection of the client to the system. This is especially important for automatic installations.

Failure to comply with the above actions can prevent the console from working correctly during the upgrade or installation.

Preparing the installation device and media

Prepare to install i5/OS software from optical media, tape devices or tape libraries, or alternate installation devices.

If you are not sure which installation device to use, refer to “Types of software installation devices” on page 10. “Installation devices and media” on page 200 contains more detailed information about the devices and media available.

Installing the i5/OS release

Install the i5/OS release (the Licensed Internal Code, the operating system, or licensed programs) on a new system or logical partition or perform an IPL for the first time.

Installing Licensed Internal Code on a new logical partition

Perform these tasks to install Licensed Internal Code on a new i5/OS logical partition with twinaxial console or Operations Console installed.

If you are using the Hardware Management Console (HMC) to install Licensed Internal Code, review the Managing your server using the Hardware Management Console topic in the IBM Systems Hardware Information Center.

After you perform the instructions in this topic, follow the instructions in “Installing software on a new system or logical partition (without i5/OS installed)” on page 112 to install the i5/OS operating system and licensed programs.

Before you begin to install Licensed Internal Code on a logical partition

Verify these points before you install the Licensed Internal Code on an i5/OS logical partition.

1. Ensure you have completed the preparation tasks in the i5/OS Information Center topic “Preparing to install the i5/OS release” on page 101.
2. Verify your console information in the topic “Preparing your console for software installation” on page 54.
3. If you have not already done so, review the information about planning for logical partitions:
 - System i 8xx models that support i5/OS V6R1, see Plan for logical partitions in the i5/OS Information Center.
 - For all other systems, read the topic Planning for logical partitions in the IBM Systems Hardware Information Center.

Attention: This procedure causes existing data on the disk units assigned to this logical partition to be lost. Make sure you really want to perform this procedure.

Reference codes are viewable under the primary partition, the Hardware Management Console (HMC), or the Integrated Virtualization Manager. When a reference code appears with the characters xx (such as B2xx xxxx), xx pertains to the partition identifier and xxxx pertains to a variety of other characters.

The term *system* refers to the logical partition on which you are performing the installation.

When installing on logical partitions, the *control panel* can be found either on the primary partition, the HMC, or the Integrated Virtualization Manager.

Until you have completed the installation of the Licensed Internal Code, the information shown about the configuration of logical partitions will be incorrect. Devices attached to the buses of logical partitions are not listed until the installation is complete. Therefore, if you have logical partitions and look at your configuration from the primary partition, HMC, or Integrated Virtualization Manager before you complete the installation, you might see only buses and IOPs, but not the IOA and device details.

Installing Licensed Internal Code on the new logical partition

To install the Licensed Internal Code, follow these procedures.

1. If you are using physical media, load the first volume of installation media that contains the Licensed Internal Code into the installation device that is defined for the system. (If you are using IBM-supplied media, this volume is labeled I_BASE_01.) Throughout these procedures, load the next volume when prompted by the system. Wait for the In Use indicator to go out. Also ensure that you have removed other media from devices that are not involved in the upgrade.

Note: The optical media that you will need later for the operating system and other licensed programs are listed in step 2 on page 113.

2. Make sure you can access either the primary partition, the Hardware Management Console (HMC), or the Integrated Virtualization Manager to control your new logical partition.

If power is not on, go to the following sources for more information and return here when done.


- For System i 8xx models that support i5/OS V6R1, Restart and power down a system with logical partitions in the i5/OS Information Center.
- For all other systems:
 - (HMC) Managing logical partitions in the IBM Systems Hardware Information Center.
 - (Integrated Virtualization Manager) Managing partitions using the Integrated Virtualization Manager in the IBM Systems Hardware Information Center.

3. Ensure the following for the new logical partition:
 - If you are using a twinaxial console, the device for the new logical partition needs to be powered on.
 - If you are using Operations Console, you need a valid connection configuration for the logical partition after you have run the Operations Console wizard. The console for the logical partition needs to be at **Connecting console**. (To view the status in Operations Console, click the System i Access for Windows icon and double-click **Operations Console**.)
4. Verify that this logical partition has an alternate IPL resource (the resource for loading) assigned. For more information about alternate IPL resources, see the following sources:
 - For System i 8xx models that support i5/OS V6R1, Logical partition concepts in the i5/OS Information Center.

feature code in place of 2924. The language feature is shown on the label of your installation media as B29xx_nn, where 29xx indicates the feature for the primary language.


Press Enter.

9. After you enter the language feature, the Confirm Language Group display appears.

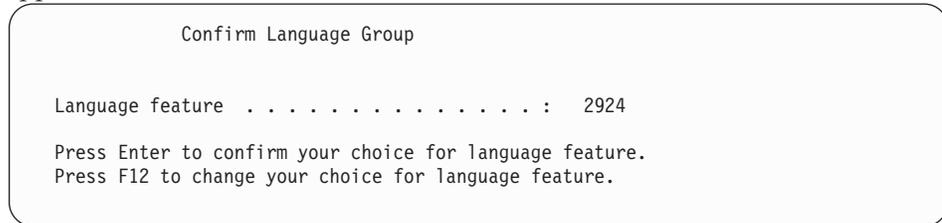

Press Enter.

10. The Install Licensed Internal Code display appears.

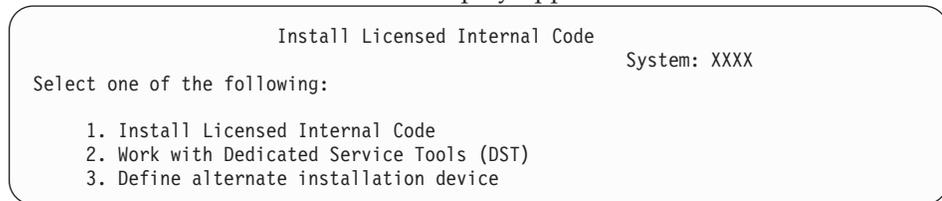

Attention: Starting with POWER6[®] models, you can do an IPL-type D from a tape device attached by a Fibre Channel interface only when it is attached to an adapter without an input-output processor (IOP). For other system models and configurations, a tape device attached by a Fibre Channel interface needs to be set up as an alternate installation device.

If you use an alternate installation device, you need to ensure that you set up the device and that you enable the device. You also need to have the optical media or tape media that contains the Licensed Internal Code and your save media.

Either select the option to install Licensed Internal Code or the option to define an alternate installation device:

- Type 1 (Install Licensed Internal Code) if you are not using an alternate installation device. (The alternate installation device function supports installation from tape media that you have created. “Alternate installation device: Overview” on page 202 describes when you can use an alternate installation device.) If you are not using an alternate installation device, go on to step 14 on page 110.
- If you have an alternate installation device attached to the system, type 3 to verify its address and determine whether it is enabled or disabled. Continue with the Verifying Alternate Installation Device Subtask in step 11. If you have an alternate installation device configured and do not want to use it, type 3 to clear the alternate installation device configuration information.

Press Enter. This step could take some time.

11. **Verifying and selecting alternate installation device subtask:**

The Select Alternate Installation Device Bus display appears.

```

Select Alternate Installation Device Bus
System: XXXX
Type Option, press Enter.
1=Select

Option      Bus Number      Selected
-           1
-           2
1           3           *
-           4
-           10
-           11
-           12
-           13

F2=Deselect Device  F3=Exit      F12=Cancel

More.....

```

- a. Verify that the selected device is on the correct system bus. Type 1 in the Options field next to the selected bus and press Enter to view information about the device that is attached to the bus. This might take several minutes. If you see the message No alternate installation device configured, wait one minute and refresh the display.
- b. When the Select Media Type display appears, select 1 for tape or 2 for optical media. Press Enter.
- c. The Select Alternate Installation Device display appears. Use this display to verify the resource name, type, model, and serial number for the device. The following display shows an example of a tape device.

```

Select Alternate Installation Device
System: SYSTEMA
Additional devices may be available for use. Press F5 to see
if any additional devices have been detected.
Type option, press Enter.
1=Select 5=Display details

Option      Bus      Resource      Type      Model      Serial      Selected
Number      Name
-           1      TAP08         6386      001        00-11111
-           3      TAP19         3570      B11        13-22222      *

F2=Deselect device  F3=Exit      F5=Refresh      F12=Cancel

```

- d. Type 1 and press Enter to select the device to use or press F2 to deselect the currently selected device.
- e. The message Alternate installation device selected appears. Press F3 to return to the Install Licensed Internal Code display.
- f. Type 1 and press Enter to install the Licensed Internal Code.

End of verifying and selecting alternate installation device subtask.

12. If the system cannot find a load-source disk unit but can find candidate disk units to become the load-source disk unit, the following is an example of the information display that is shown.

```

Select Load Source Device

Type 1 to select, press Enter.

Option  Serial Number  Type  Model  Bus  Card  Adapter  Bus  Ctl  Dev
      21-8DFFC        4326  050   128    0     1     0     0   6
      02-84921        6718  050   128    0     2     0     0   5
      02-73054        6718  050   218    0     1     1     0   0
      21-150197       433B  074    42    0     0     2     0   7

```

To select the correct load-source disk unit, type 1 next to the appropriate device and press Enter. You cannot continue until a current valid load-source device is identified.

13. If there is an alternate installation device defined and enabled, the Confirm Alternate Installation Device display appears. Perform one of these tasks.
 - To install from the alternate installation device, press Enter.
 - If you do not want to install from the alternate installation device and want to continue using the primary media, press F12 to Cancel. You see the Licensed Internal Code display. Perform step 10 on page 108 and select option 3 (Define alternate installation device). Perform step 11 on page 108 and deselect the alternate installation device.
14. The Install Licensed Internal Code (LIC) display appears on your console.

```

Install Licensed Internal Code (LIC)

Disk selected to write the Licensed Internal Code to:
  Serial Number  Type  Model  I/O Bus  Controller  Device
  xx-xxxxxxx   xxxx   xxx    x         x           x

Select one of the following:

  1. Restore Licensed Internal Code
  2. Install Licensed Internal Code and Initialize system
  3. Install Licensed Internal Code and Recover Configuration
  4. Install Licensed Internal Code and Restore Disk Unit Data
  5. Install Licensed Internal Code and Upgrade Load Source

```

Type 2 (Install Licensed Internal Code and Initialize system) and press Enter.

15. Read the attention notice and reply to the Confirmation display.

Attention: This procedure causes existing data on the disk units assigned to this logical partition to be lost! Make sure you really want to perform this procedure.

The Initialize the Disk - Status display appears while the load source for the logical partition is being initialized.

16. The Install Licensed Internal Code - Status display appears on your console. You do not need to respond to this display. It will remain on your console for approximately 30 minutes. If you are using Operations Console, your display might disappear. To complete the Licensed Internal Code installation, the logical partition is automatically restarted at this time (a manual-mode IPL).

```

Install Licensed Internal Code - Status

Install of the Licensed Internal Code in progress.

Percent complete |-----XX %-----|
                  +-----+
                  |               |
                  +-----+

Elapsed time in minutes . . . . . :   x.x

Please wait.

```

17. If an error occurs, you might see a display that requires a response. Perform the action necessary as prompted by the display. Otherwise, continue with step 20 on page 112.
18. The Disk Configuration Attention Report display might appear. If it does, display the detailed report for each attention notice shown on the display. Press the Help key from the Disk Configuration Attention Report display for more information about your choices. You can also refer to the topic, "Disk configuration warning and error messages" on page 173 for more information.

```

Disk Configuration Attention Report

Type option, press Enter.
 5=Display Detailed Report

Press F10 to accept all the following problems and continue.
The system will attempt to correct them.

Opt Problem
- xxxxxxxx xxxx xxxxxxxxxx xxxxx xx xxxxx xxxxxxxx
- xxxxx_xx_xxxxx xxxxxx_ xxxxxxxx xxxxxxxx xxxxxxxxxx_____
- _____
- _____
- _____
- _____
- _____
- _____
- _____
- _____
- _____
- _____

More...

F3=Exit  F10=Accept the problems and continue  F12=Cancel

```

- Note:** If the attention notice Disk unit not formatted for optimal performance appears on this display, do the following:
- a. Type a 5 and press Enter to display the detailed report.
 - b. Write down the information displayed. After the upgrade is completed, you will need this information to format these disk units to gain optimal performance.
 - c. Press F12 to cancel and return to the Disk Unit Attention Report.
 - d. Press F10 to accept the warnings and continue the IPL.

The Disk Configuration Attention Report display might also appear if a new disk configuration has been found. Press F10 to accept this new configuration.

19. If the console mode value is zero, the Accept Console display appears. If this display appears, follow these steps:

- a. Press F10 to accept the current console type. The Accept and Set New Console Type on this IPL display appears. The old value (zero) and the new value to be set (your current console type) is shown.
 - b. Press Enter to set the new value and continue with these instructions.
20. After approximately 10 minutes, the IPL or Install the System display appears. The Licensed Internal Code is now installed. Do not remove the distribution media at this time.
21. If the Accept Console display in step 19 on page 111 did not appear, set the console mode for this partition:
- a. At the IPL or Install the system display, select option 3 to access Dedicated Service Tools (DST).
 - b. Sign on as security officer (*QSECOFR user profile / QSECOFR password*). When prompted, change the password to what you want to use for this partition.
 - c. Select option 5 (Work with DST environment).
 - d. Select option 2 (System devices).
 - e. Select option 6 (Console mode).
 - f. Select the valid console that you have for this logical partition.

Note: If you are using Operations Console (LAN) as your console type, press Enter on the verify window. You can also press F11 to review your network configuration.

- g. Select 1 (Yes) or 2 (No) for the option to allow the console to be taken over by another console in the event of a 5250 console failure (does not include twinaxial console). When this option is turned on, the system does not stop with a failure but continues to run uninterrupted. For more information, see the topic Console takeover and recovery in the IBM Systems Hardware Information Center.
Press Enter and then press F3 to return to the DST main menu.
- h. Press F3 to exit DST and return to the IPL or Install the System display.

You have completed the installation of Licensed Internal Code on a new logical partition.

You are now ready to install the operating system. The “Installing i5/OS on a new system or logical partition” on page 113 procedure will direct you to optionally add disk units or enable disk protection before the operating system is installed.

The optical media that you will need for the operating system and other licensed programs are listed in step 2 on page 113 of “Installing i5/OS on a new system or logical partition” on page 113. Continue with step 10 on page 115.

Installing software on a new system or logical partition (without i5/OS installed)

Follow these instructions to install the i5/OS operating system and licensed programs on your new system or logical partition or to change the primary language when you are installing the operating system.

Refer to the i5/OS globalization topic in the i5/OS Information Center for any special considerations you might need to know about other languages.

Note:

- If you are installing software on a system, these instructions assume that the V6R1 release of the Licensed Internal Code is installed and the system is powered off. If you do not know what level of Licensed Internal Code is on your system, sign on to DST. Select option 7 (Start a Service Tool) and then select option 4 (Hardware Service Manager). The release at the top of the display should state V6R1M0.
- If you are installing software on a new logical partition, you need to complete the steps in “Installing Licensed Internal Code on a new logical partition” on page 105 first and then continue with step 10 on page 115 in this topic.

Before you begin to install software on a new system or logical partition

Verify these points before you install i5/OS software on a new system or logical partition.

If you have not already done so, complete the tasks in the i5/OS Information Center topic “Preparing to install the i5/OS release” on page 101.

Do you plan to use logical partitions? For System i 8xx models that support i5/OS V6R1, read the topic Plan for logical partitions in the i5/OS Information Center. For all other systems, read the topic Planning for logical partitions in the IBM Systems Hardware Information Center. Additionally, refer to the Logical Partitioning  Web site (<http://www.ibm.com/eserver/iserie/lpar>).

For logical partitions only

If you perform these actions on a system with logical partitions, the instructions pertain only to that partition. If that partition is a primary partition, these instructions will change the power status and perform an IPL on the entire system. There is no effect if you are on a system managed by Hardware Management Console (HMC) or Integrated Virtualization Manager.

Attention: If you are installing on a primary partition, you must shut down all partitions before performing these instructions. Otherwise, you could lose data or damage system software objects. You must perform these instructions for each partition with which you will do the related work. Also, references to the control panel refer either to the virtual control panel (Work with Partition Status display) on your primary partition.

Installing i5/OS on a new system or logical partition

Follow these steps to install the i5/OS operating system on a new system or logical partition. You can optionally add disk units or enable disk protection before the operating system is installed.

1. Ensure that the system is powered off before you begin.
2. If you are using physical media, arrange the installation media that you plan to install in the following order (you might not have all of these). The identifiers for the IBM-supplied media B29xx_01 and B29xx_02 (for example, RS 550-xx for V6R1) must match. Verify also that B29xx_01 and B29xx_02 are in the correct primary language.
 - a. I_BASE_01 Licensed Machine Code (Licensed Internal Code).
 - b. B29xx_01 i5/OS operating system, IBM-supplied libraries QGPL and QUSRSYS, and all i5/OS no-charge options.
 - c. B29xx_02 no-charge licensed programs and keyed products.
 - d. F29xx_01 single licensed programs.

Keep the following installation media available for later use:


- a. N29xx_01 Secondary Language Media
- b. Cydddvrn_01 Cumulative PTF Package (if ordered)
- c. SK3T-4091 i5/OS Information Center

For descriptions of the optical media, see “Media labels and their contents” on page 210.

3. Ensure the following for the system:
 - If you are using a twinaxial console, the console for the system needs to be powered on.
 - If you are using Operations Console, you need a valid connection configuration for the system after you have run the Operations Console wizard. The console for the system needs to be at **Connecting console**. (To view the status in Operations Console, click the IBM System i Access for Windows icon and double-click **Operations Console**.)
4. If the installation device has a separate power switch, set it to the On position.
5. Use the control panel to set the IPL type to **A** and set the mode to **Manual**.
6. Press the Enter button on the control panel.
7. Turn the power on for the system by pressing the power button.

Note: If either the Disk Configuration Error Report display or the Disk Configuration Warning Report display appears, go to “Disk configuration warning and error messages” on page 173 to determine the appropriate action.

8. The IPL or Install the System menu appears on your console.

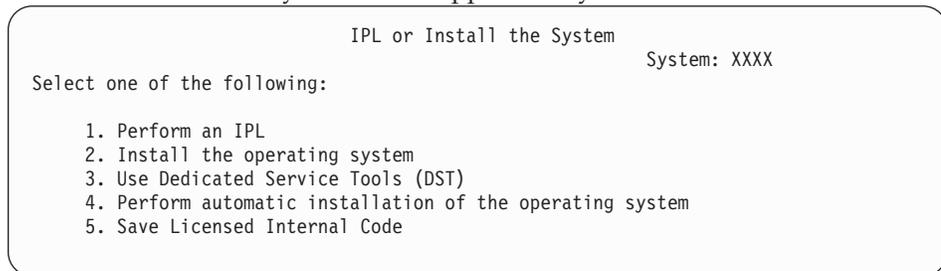

If you have not already done so, set the console mode for your system:

- a. At the IPL or Install the system display, select option 3 to access Dedicated Service Tools (DST).
- b. Sign on as security officer (QSECOFR *user profile* / QSECOFR *password*). When prompted, change the password to what you want to use for this partition.
- c. Select option 5 (Work with DST environment).
- d. Select option 2 (System devices).
- e. Select option 6 (Console mode).
- f. Select the valid console that you have for this partition.


Note: If you are using Operations Console (LAN) as your console type, press Enter on the verify window. You can also press F11 to review your network configuration.

- g. Select 1 (Yes) or 2 (No) for the option to allow the console to be taken over by another console in the event of a 5250 console failure (does not include twinaxial console). When this option is turned on, the system does not stop with a failure but continues to run uninterrupted. For more


information, see the topic Console takeover and recovery in the IBM Systems Hardware Information Center.

Press Enter and then press F3 to return to the DST main menu.

- h. Press F3 to exit DST and return to the IPL or Install the System display.

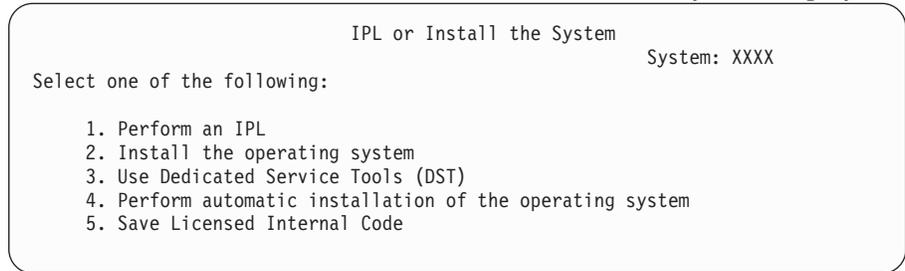


- 9. If you are using physical media, load the first volume of installation media that contains the operating system. (If you are using IBM-supplied media, the first volume is labeled B29xx_01, where 29xx is the identifier for the primary language.) Throughout these procedures, load the next volume when prompted by the system. When you are installing from optical media, wait until the In Use indicator goes out before you continue. Also ensure that you have removed other media from devices that are not involved in the upgrade.
- 10. On the IPL or Install the System display, type 2 and press Enter. The Install Device Type Selection display appears.

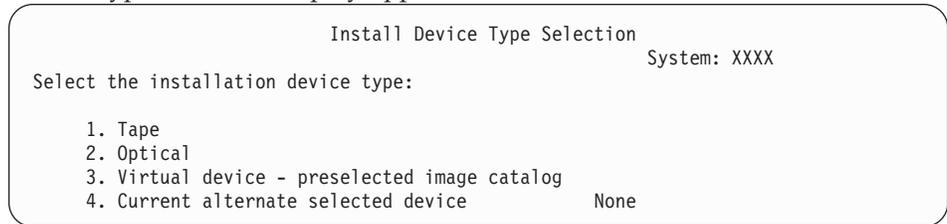

Type the number that corresponds to the correct device type and press Enter.

- 11. The Confirm Install of the Operating System display is shown on your console. Press Enter.
- 12. The Select a Language Group display, which shows the primary language currently on the system, appears. This value should match the language feature number that is printed on the installation media. Refer to "Feature codes for national language version" on page 214 for a list of language feature codes.

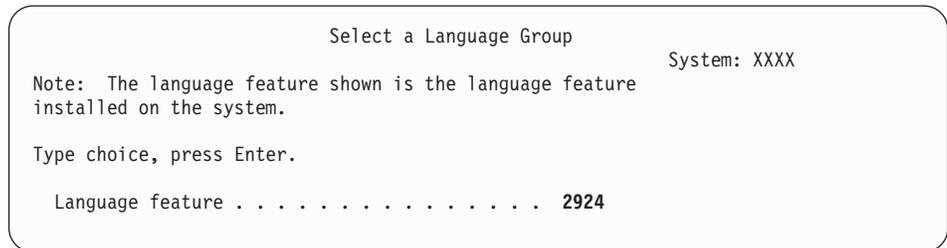

Verify that the displayed value is correct, or type the numbers of the feature code for the language you want. Press Enter.

- 13. After you enter the language feature, the Confirm Language Feature Selection display appears on your console. Press Enter.
- 14. If you are upgrading a service partition, a disk configuration error with SRC B600 5390 and SRC B600 5311 may be issued to the Product Activity Log (PAL). Secondary partitions report a status of new and all system resources

are temporarily owned by the primary partition. If you try to continue an IPL, an error, Hardware resource information persistence disabled is received. This indicates a problem with the memory configuration.

15. If the Add All Disk Units to the System menu is not shown, go to the IPL Step in Progress display in step 17 on page 118.

Note: If you are installing on a single disk unit, ensure that you have enough storage. The minimum requirements for each system or logical partition are listed in “Determining disk storage space required for a new installation” on page 103.

16. **Adding disk units subtask:**

- a. If any nonconfigured disk units that are capable of being protected by device parity are currently unprotected, the Add All Disk Units to the System display is shown. If the following display is not shown, go to step 16b.

Add All Disk Units to the System System: XXXX

Non-configured device parity capable disk units are attached to the system. Disk units cannot be added automatically. It is more efficient to device parity protect these units before adding them to the system. These disk units may be parity enabled and added at SST (i5/OS). Configured disk units must have parity enabled at DST.

Select one of the following:

1. Perform any disk configuration at SST (i5/OS)
2. Perform disk configuration using DST

It is much faster to start device parity protection on the disk units at DST before the disk units are added to the auxiliary storage pool configuration. To start device parity on the eligible disk units, do the following tasks from the Add All Disk Units to the System display:

- 1) Select option 2 to perform disk configuration at DST.
 - 2) Sign on at the Dedicated Service Tools Sign-on prompt and return to the Use Dedicated Service Tools (DST) menu.
 - 3) Select the option, Work with disk units.
 - 4) Select the option, Work with disk configuration.
 - 5) Section the option, Work with device parity protection.
 - 6) Select the option, Start device parity protection.
 - 7) A list of parity sets that are capable of running device parity protection are shown. Type 1 on each option line for each parity set.
 - 8) You might see a Confirm Continuation display that indicates that the system must perform a directory recovery. Press Enter to continue.
 - 9) The Confirm Starting Device Parity Protection display is shown. This shows the list of disk units that will have device parity protection. Press Enter to continue. An in-progress display that indicates the status of the function is shown.
 - 10) Return to the IPL or Install the System display.
- b. If you see the following display, continue with this step.

Add All Disk Units to the System System: XXXX

Select one of the following:

1. Keep the current disk configuration
2. Perform disk configuration using DST
3. Add all disk units to the system auxiliary storage pool
4. Add all disk units to the system ASP and balance data

If you do not want device parity protection, mirrored protection, or user ASPs, select option 3 (Add all disk units to the system auxiliary storage pool). By adding disk units before you install the operating system, you improve your overall system performance because the operating system is distributed across all of your disk units.

Attention: (For logical partitions only) Before you add disk units to this partition, ensure you have the correct I/O resources assigned. You might not want to configure all disk units now. Refer to the validated output from the System Planning Tool supplied by IBM for the configuration selection. To access the tool, go to the System Planning Tool  Web site (<http://www.ibm.com/systems/support/tools/systemplanningtool/>). Type 3 and press Enter.

Note: If either the Disk Configuration Error Report display or the Disk Configuration Warning Report display appears, go to “Disk configuration warning and error messages” on page 173 to determine the appropriate action.

- c. You could see the following display if your disk configuration has changed. Type 5 next to the problem and press Enter to display the detailed report.


Problem Report

Note: Some action for the problems listed below may need to be taken. Please select a problem to display more detailed information about the problem and to see what possible action may be taken to correct the problem.


Type option, press Enter.
5=Display Detailed Report

OPT	Problem
-	_____
-	_____

- d. If the following display appears, a disk unit that you selected to add to your disk configuration could already have data on it. If you choose to continue, any data that is on the disk units listed will be removed. Be certain that you want to configure the disk before you continue. Follow the instructions on the display.
Press Enter to return to the Problem Report display. Press F10 to continue the Add Disk Unit subtask.

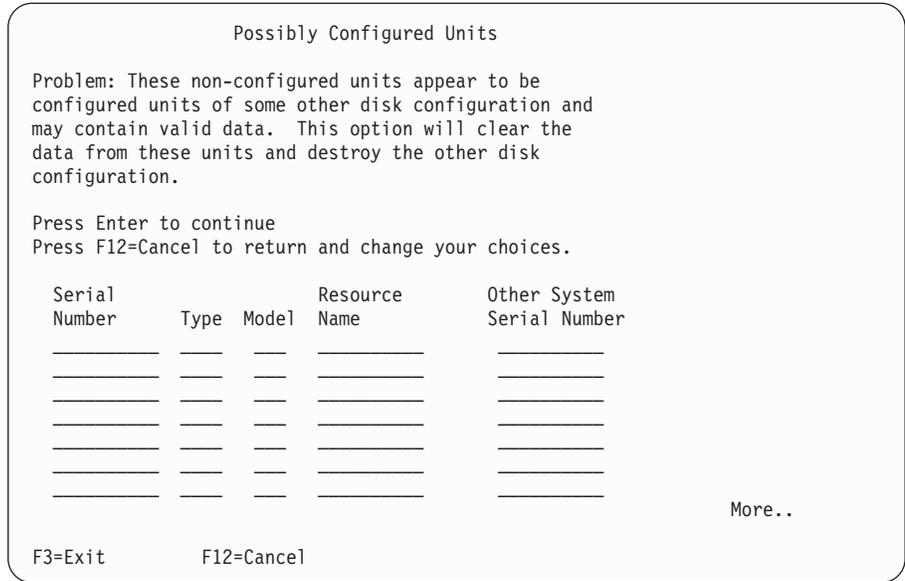


e. The following display shows the percentage of disk units added. This display does not require a response.

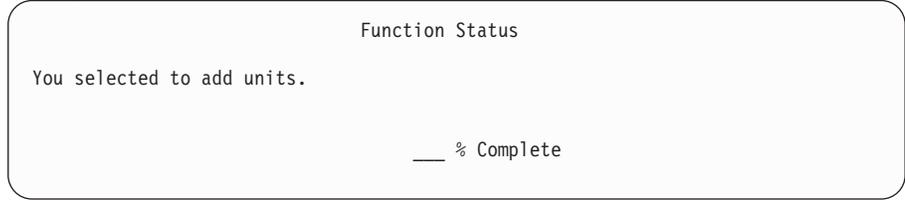

f. When the process is completed, continue the software installation process with the next step.

This completes the subtask for adding disk units.

17. Status displays appear on the console. You do not need to respond to any of these displays. The following is an example of a status display:

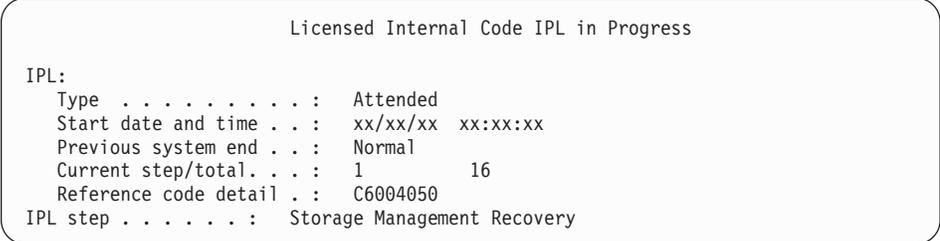

The following list shows some of the IPL steps that are shown on the IPL Step in Progress display.

- Authority Recovery
- Journal Recovery
- Database Recovery
- Journal Synchronization
- Start the Operating System

18. The Install the Operating System display appears.

```

                                Install the Operating System

Type options, press Enter.

  Install
  option . . . . . 1           1=Take defaults (No other
                                options are displayed)
                                2=Change install options

Date:
Year . . . . . XX           00-99
Month . . . . . XX          01-12
Day . . . . . XX            01-31

Time:
Hour . . . . . XX           00-23
Minute . . . . . XX         00-59
Second . . . . . XX         00-59

```

Type the following and press Enter:

Install option: 1
Date (Use the current year, month, and day.)
Time (Use the current time, 24-hour clock.)

19. Status messages appear during the installation process. You do not need to respond to any of these status displays. The following is an example of a status display. The display is blank for a time between stage 4 and stage 5.

```

Message ID . . . : CPI2070           i5/OS Installation Status

Stage 2  +-----+
         |                 33%                 |
         +-----+

Installation Objects
Stage Completed Restored
1 Creating needed profiles and libraries . . . . : X

>> 2 Restoring programs to library QSYS . . . . . : 04548

3 Restoring language objects to library QSYS . . . :

4 Updating program table . . . . . :

5 Installing database files . . . . . :

6 Installing base directory objects. . . . . :

i5/OS is a trademark of IBM in the United States and other countries.

```

20. Messages similar to the following might appear:

```

                                Display Messages

Queue . . . . . : QSYSOPR           System: XXXX
Library . . . . : QSYS              Program . . . . : *DSPMSG
Severity . . . . : 10               Library . . . . :
Delivery . . . . :                  *BREAK

Press Enter to continue.
System operator message queue QSYSOPR created again.
Console values lost.

```

Press Enter.

21. The Sign On display is shown.

```

                                Sign On
                                System . . . . : XXX
                                Subsystem . . . : XXXXX
                                Display . . . . : XXXXXXXX

User . . . . . QSECOFR
Program/procedure . . . . . _____
Menu . . . . . _____
Current library . . . . . _____

```

Type QSECOFR for the *User* prompt. Press Enter.

22. The IPL Options display appears.

```

                                IPL Options

Type choices, press Enter.

System date . . . . . XX / XX / XX      MM / DD / YY
System time . . . . . XX : XX : XX      HH : MM : SS
System time zone . . . . . Q0000UTC      F4 for list
Clear job queues . . . . . N              Y=Yes, N=No
Clear output queues . . . . . N          Y=Yes, N=No
Clear incomplete job logs . . . . . N    Y=Yes, N=No
Start print writers . . . . . Y           Y=Yes, N=No
Start system to restricted state . . . . N Y=Yes, N=No

Set major system options . . . . . Y      Y=Yes, N=No
Define or change system at IPL . . . . . N Y=Yes, N=No

Last power-down operation was ABNORMAL

```

Notes:

- Ignore the message on the bottom of the IPL Options display.
 - If you need to change system values, you can do so now. One example of a system value that you might change is the value for the security level (QSECURITY) system value.
Another example is the scan control (QSCANFCTL) system value. If you have not already done so, consider specifying *NOPOSTRST for the QSCANFCTL system value to minimize future scanning of some objects that are restored during the installation of licensed programs in the following steps. For more information on scanning and the system value settings, see the topic Scanning support in the i5/OS Information Center.
- Type Y for the *Define or change the system at IPL* prompt. Follow the instructions on the displays.
- Type the following and press Enter.
- System date (Use the current date.)
 - System time (Use the current time, 24-hour clock.)
 - System time zone (Verify that it is correct or press F4 to select a time zone.)
 - Start system to restricted state Y
 - Set major system options Y

23. The Set Major System Options display appears.

```
Set Major System Options

Type choices, press Enter.

Enable automatic configuration . . . . . Y           Y=Yes, N=No
Device configuration naming . . . . . *NORMAL       *NORMAL, *S36,
                                                    *DEVADR
Default special environment. . . . . *NONE         *NONE, *S36
```

Respond to the prompts on the Set Major System Options display.

- Enable automatic configuration
The value Y (Yes) automatically configures local devices. N (No) indicates no automatic configuration.
- Device configuration naming
Specify *NORMAL to use a naming convention unique to the i5/OS operating system. The value *S36 uses a naming convention similar to System/36. Refer to the book *Local Device Configuration, SC41-5121-00*, for information about device configuration naming and *DEVADR.
- Default special environment
The default value *NONE indicates no special environment. *S36 sets up the System/36 environment. Refer to the book, *System/36 Environment Programming, SC41-4730 (V4R5 or earlier)*, for more information about working in the System/36 environment.
Press Enter.

24. Several Display Messages displays could be shown. Press Enter for each message display to continue.

The following display is an example of a message that could be shown:

```
Display Messages

Queue . . . . . : QSYSOPR           System: XXXX
Library . . . . : QSYS             Program . . . . : *DSPMSG
Severity . . . . : 60              Library . . . . :
Delivery . . . . : *BREAK

Press Enter to continue.
System object QWCSCPF created again during IPL.
```

25. The Edit Rebuild of Access Paths display could be shown. If it is, press Enter to continue.

26. You see the Status display again.

```

Message ID . . . : CPI2070                                i5/OS Installation Status

Stage 6 |-----+-----|
        |                    | 58%                    |
        +-----+-----+

Installation
Stage      Completed      Objects
2 Restoring programs to library QSYS . . . . . : X      Restored
   13637
3 Restoring language objects to library QSYS . . : X      01540
4 Updating program table . . . . . : X
5 Installing database files . . . . . : X
>> 6 Installing base directory objects . . . . . :
7 Completing installation . . . . . :

i5/OS is a trademark of IBM in the United States and other countries.

```

27. The Sign On display appears on the console after the installation has completed.

```

                                Sign On
                                System. . . . . : XXXX
                                Subsystem . . . . : XXXX
                                Display . . . . . : XXXXXXXX

User. . . . . : QSECOFR
Password . . . . .
Program/procedure . . . . . _____
Menu . . . . . : _____
Current library . . . . . : _____

```

Type the following and press Enter:

User: QSECOFR

Password: (Enter password, if required.)

28. A message Your password has expired might appear. Press Enter. The Change Password display appears. Change the password from QSECOFR to your own choice. First enter the old password, QSECOFR. Then enter the new password of your choice. Enter the new password again as verification.
29. Several Display Messages displays are shown. To continue, press Enter for each message display.

The following display is an example of a message that could be shown:

```

                                Display Messages
                                System:   XXXX
Queue . . . . . : QSYSOPR           Program . . . . . : *DSPMSG
Library . . . . : QSYS              Library . . . . . :
Severity . . . . : 10               Delivery . . . . . : *BREAK

Press Enter to continue.
Library QHLPYSY in SYSVAL QSYSLIBL not found.

```

30. The Work with Software Agreements display appears. Select to display the software agreements for *MCHCOD (which includes Licensed Internal Code) and the i5/OS operating system (5761SS1). Read and accept these agreements.

- If the software agreements are declined, you are given the choice to either power down the system or return and accept the agreements. Press Enter.
31. When the System i Main Menu appears on your console, you have completed the task of installing the operating system.

You have completed this task.

To install additional licensed programs, continue with the tasks in “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128.

Installing software on a new system (with i5/OS installed)

Use these procedures if you already have the i5/OS operating system on your new system and want to install other licensed programs.

The following instructions assume that V6R1 of the Licensed Internal Code and the operating system are installed, the primary language is correct, the console mode value is correct, and the system is powered off.

If you are not sure whether the operating system is already installed, contact your authorized service provider.

Before you begin to install software on a new system

Verify these points before you install licensed programs that are related to the i5/OS operating system on a new system.

If you have not already done so, complete the tasks in the i5/OS Information Center topic “Preparing to install the i5/OS release” on page 101.

Note: If you have added a new disk unit to your system, you should load the operating system again to use that disk unit. This will improve the performance of your system by distributing the operating system across all of your disk units. Complete “Installing software on a new system or logical partition (without i5/OS installed)” on page 112 if you are adding disk units. If you are planning to use device parity protection, auxiliary storage pools, or mirrored protection, refer to the topics under Recovering your system in the i5/OS Information Center before you begin.

Do you plan to use logical partitions? For System i 8xx models that support i5/OS V6R1, read the topic Plan for logical partitions in the i5/OS Information Center. For all other systems, read the topic Planning for logical partitions in the IBM Systems Hardware Information Center. Additionally, refer to the Logical Partitioning Web site:

www.ibm.com/eserver/series/lpar

For logical partitions only
<p>If you perform these actions on a system with logical partitions, the instructions pertain only to that partition. If that partition is a primary partition, these instructions will change the power status and perform an IPL on the entire system. There is no effect if you are on a system managed by Hardware Management Console (HMC) or Integrated Virtualization Manager.</p> <p>Attention: If you are installing on a primary partition, you must shut down all partitions before performing these instructions. Otherwise, you could lose data or damage system software objects. You must perform these instructions for each partition with which you will do the related work. Also, references to the control panel refer either to the virtual control panel (Work with Partition Status display) on your primary partition.</p>

Performing the initial program load (IPL)

To prepare the system for i5/OS user operations, follow this procedure.

Note: If you already have the System i Main Menu on your console, go to “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128 to install additional licensed programs.

1. Ensure that the system is powered off before you begin.
2. On your console, establish a connection to the system
3. If the installation device has separate on and off switches, verify that the switch is in the On position.
4. Use the control panel to set the IPL type to **A** and to set the mode to **Manual**.
5. Press the Enter button on the control panel.
6. Turn the system power on by pressing the power button.
7. After some time, the IPL or Install the System display appears.

```
                                IPL or Install the System
                                System: XXXX

Select one of the following:

    1. Perform an IPL
    2. Install the operating system
    3. Use Dedicated Service Tools (DST)
    4. Perform automatic installation of the operating system
    5. Save Licensed Internal Code
```

Type 1 and press Enter.

8. Status displays are shown on the console. You do not need to respond to any of these displays. The following is an example of a status display:

```
                                Licensed Internal Code IPL in Progress

IPL:
Type . . . . . : Attended
Start date and time . . : xx/xx/xx  xx:xx:xx
Previous system end . . : Normal
Current step/total . . . : 1      16
Reference code detail . . : C6004050
IPL step . . . . . : Storage Management Recovery
```

The following list shows some of the IPL steps that are shown on the IPL Step in Progress display.

- Authority Recovery
- Journal Recovery
- Database Recovery
- Journal Synchronization
- Start the Operating System

Some of the IPL steps could take a long time.

9. Several messages might appear on the console. The following is an example of a message that might appear:

```

                                Display Messages
Queue . . . . . : QSYSOPR          System. . . . . : XXXX
Library . . . . : QSYS            Program . . . . . : *DSPMSG
Severity . . . . : 10             Library . . . . . :
                                Delivery . . . . . : *BREAK

Press Enter to continue.
System object xxxxx created again during IPL.

```

To continue, press Enter after each message that you receive.

10. The Sign On display appears.

Note: If you need to change the password for the QSECOFR user profile, record the new password now. Store it in a safe location.

11. The i5/OS IPL in Progress display appears.

12. If the Select Products to Work with PTFs display appears, press F3 (Exit).

13. The IPL Options display appears.

```

                                IPL Options

Type choices, press Enter.

System date . . . . . XX / XX / XX   MM / DD / YY
System time . . . . . XX : XX : XX   HH : MM : SS
System time zone . . . . . Q0000UTC   F4 for list
Clear job queues. . . . . N           Y=Yes, N=No
Clear output queues . . . . . N       Y=Yes, N=No
Clear incomplete job logs . . . . . N Y=Yes, N=No
Start print writers . . . . . Y       Y=Yes, N=No
Start system to restricted state . . . Y Y=Yes, N=No

Set major system options. . . . . Y   Y=Yes, N=No
Define or change system at IPL. . . . N Y=Yes, N=No

Last power-down operation was ABNORMAL

```

Notes:

- Ignore the message on the bottom of the IPL Options display.
 - If you need to change system values, you can do so now. One example of a system value that you might change is the value for the security level (QSECURITY) system value. Another example is the scan control (QSCANFCTL) system value. If you have not already done so, consider specifying *NOPOSTRST for the QSCANFCTL system value to minimize future scanning of some objects that are restored during the installation of licensed programs in the following steps. For more information on scanning and the system value settings, see the topic Scanning support in the i5/OS Information Center.
- Type Y for the *Define or change the system at IPL* prompt. Follow the instructions on the displays.
- Type the following and press Enter.
- System date (Use the current date.)

System time (Use the current time, 24-hour clock.)
 System time zone (Verify that it is correct or press F4 to select a time zone.)
 Start system to restricted state Y
 Set major system options Y

14. Additional display messages could be shown.

Press Enter after each message to continue.

15. The Set Major System Options display appears.

```

                                Set Major System Options

Type choices, press Enter.

Enable automatic configuration . . . . . Y           Y=Yes, N=No
Device configuration naming . . . . . *NORMAL        *NORMAL, *S36,
                                                    *DEVADR
Default special environment. . . . . *NONE          *NONE, *S36
  
```

Respond to the prompts on the Set Major System Options display.

- Enable automatic configuration
 The value Y (Yes) automatically configures local devices. N (No) indicates no automatic configuration.
- Device configuration naming
 Specify *NORMAL to use a naming convention unique to the i5/OS operating system. The value *S36 uses a naming convention similar to System/36. Refer to the book *Local Device Configuration, SC41-5121-00*, for information about device configuration naming and *DEVADR.
- Default special environment
 The default value *NONE indicates no special environment. *S36 sets up the System/36 environment. Refer to the book, *System/36 Environment Programming, SC41-4730 (V4R5 or earlier)*, for more information about working in the System/36 environment.
 Press Enter.

16. The Edit Rebuild of Access Paths display could be shown. If it is, press Enter to continue.

17. The Work with Software Agreements display appears. Select to display the software agreements for *MCHCOD (which includes Licensed Internal Code) and the i5/OS operating system (5761SS1). Read and accept these agreements. If the software agreements are declined, you are given the choice to either power down the system or return and accept the agreements.

18. Several blank displays and Display Messages displays appear. To continue, press Enter for each message display. Do not respond to blank displays.

The following display is an example of a message that appears:

```

                                Display Messages

Queue . . . . . : QSYSOPR           System. . . . . : XXXX
Library . . . . : QSYS             Program . . . . : *DSPMSG
Severity . . . . : 10              Library . . . . :
Delivery . . . . : *BREAK          Delivery . . . . : *BREAK

Press Enter to continue.
All jobs in system lost. Job and output queues cleared.
  
```

19. The System i Main Menu appears on your console.

You have completed this task.

To install additional licensed programs, continue with the tasks in “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128.

Installing additional licensed programs

To install additional licensed programs or optional parts of licensed programs on your system or i5/OS logical partition, follow these procedures. (Separately ordered features are installed as a licensed program.)

You can use these procedures to install most software products. However, if you received any other special installation instructions with your order, make sure that you verify these instructions before you install the software product.

Before you begin to install additional licensed programs

Use this information to add additional licensed programs either as part of an i5/OS software release upgrade or independently of one.

If you have not already done so, complete the tasks in “Preparing to install the i5/OS release” on page 101.

If you install an additional licensed program independently of a software release upgrade, check the following:

- Ensure that you have a recent copy of the cumulative PTF package (SF99610). When you order the cumulative PTF package, you also get the latest PTF HIPER Group CD-ROM (SF99609) and the Database Group CD-ROM (SF99601).
- Use the preventive service planning (PSP) information to determine if any prerequisite PTFs will need to be installed or if any special instructions are included for installing the licensed program.

The PTFs for licensed programs are on a separate media. Use the *PTF Shipping Information Letter* to install the cumulative PTF package after adding additional licensed programs.

If you add additional licensed programs and you have a secondary language installed on your system, you must install the secondary language after you install the licensed programs. Otherwise, the added licensed program will not have secondary language support.

Note: Restricted state required. The system must be in a restricted state to install the following libraries and options of the operating system.

- i5/OS libraries QGPL and QUSRSYS
- i5/OS option 3 - Extended Base Directory Support
- i5/OS option 12 - Host Servers

Some licensed programs and libraries require a restricted state, while others only require a partially restricted system. Other licensed programs might require special actions before saving, restoring, or installing a new copy of the product. However, to avoid installation failures and to get the best performance during your upgrade, put the system in a restricted state.

If you want to install other licensed programs while the system is not in a restricted state, you can skip steps 3a through 3e of “Using the Work with Licensed Programs menu to install IBM licensed programs.”

Do you plan to use or are you using logical partitions? For System i 8xx models that support i5/OS V6R1, read the topic Plan for logical partitions in the i5/OS Information Center. For all other systems, read the topic Planning for logical partitions in the IBM Systems Hardware Information Center.

Do you plan to use an image catalog (virtual media device) to install? Read the topic “Preparing to upgrade or replace software using an image catalog” on page 41 to create a device, image catalog, and an image catalog entry.

Using the Work with Licensed Programs menu to install IBM licensed programs

If you have logical partitions, you must perform this procedure on each i5/OS logical partition to which you want to install the IBM licensed programs.

1. If you are not already signed on to the system as the security officer (QSECOFR user profile), do so now.

Note: The System i Main Menu (or the menu you chose as your initial menu) appears on the console.

2. If you are installing from an image catalog (virtual media device), the setup instructions are in the topic “Preparing to upgrade or replace software using an image catalog” on page 41.

If you are installing from optical media, insert the volume of the licensed program that you want to install into the installation device. If this is a new installation, start with i5/OS media volume B29xx_01. To install keyed products, load the volumes labeled B29xx_02. If you have priced features of i5/OS or single licensed programs, load the volume labeled F29xx_01. For more information about the optical media you received with your order, see “Media labels and their contents” on page 210. Wait until the In Use indicator goes out before you continue.

3. Do the following to put the system in a restricted state and filter the messages that appear.
 - a. Type CHGMSGQ QSYSOPR *BREAK SEV(60) and press Enter.
 - b. A message display could appear. Press Enter.
 - c. Type ENDSBS *ALL *IMMED and press Enter.
 - d. When the following message appears, press Enter to continue:
ENDSBS SBS(*ALL) command being processed
 - e. The message System ended to restricted condition appears. Press Enter to continue.
 - f. Type CHGMSGQ QSYSOPR SEV(95) and press Enter.
 - g. A message display could appear. Press Enter.
4. Type GO LICPGM and press Enter.
5. The Work with Licensed Programs display appears.

```
LICPGM                Work with Licensed Programs                System:  XXXX
Select one of the following:

Manual Install
  1. Install all

Preparation
  5. Prepare for install

Licensed Programs
 10. Display installed licensed programs
 11. Install licensed programs
 12. Delete licensed programs
 13. Save licensed programs
```

|
|
|
|

If you were referred here from step 4 on page 83, complete this step and then return to step 5 on page 84. If you are following the tasks in this topic and want to accept software agreements for your licensed programs individually, continue with step 6.

If you have many licensed programs to install, accepting them together is faster than accepting them individually through manual installation. If you want to preaccept your licensed program agreements all at one time, select option 5 (Prepare for install).

- a. Select the option to work with software agreements. If a licensed program that you want to install does not appear on the Work with Software Agreements display, use F22 (Restore software agreements). Otherwise, continue with the next step.
 - b. Type a 5 to display the software agreements for the licensed programs that you want to install and press Enter. Press F14 to accept the software agreements and then return to the Work with Licensed Programs display.
6. On the Work with Licensed Programs display, either type 1 (Install all) or type 11 (Install licensed programs). Read the following note to help you decide.

Note: If you want to install all licensed programs that are on the distribution media, use Manual Install option 1, Install all. This will save time for the installation. If you want most of the licensed programs on the media, then Manual Install option 1 is also the preferred choice. You will have to delete the extra unwanted licensed programs. The Manual Install display appears after selecting Manual Install option 1.

- Type the following on this display:
- Install option: 2 (2=all products)
 - Installation device: OPT01
 - Replace if current: N
 - Nonaccepted agreement: 2 (2=Display software agreement)
 - Automatic IPL: N

In this example, OPT01 is used for the installation device. If you use a different naming convention, type the name that you have assigned to the installation device.

For more information about using option 1, refer to “Manual installation Option 1. Install all” on page 222.

Press Enter. If you typed 1, continue with step 10 on page 131 of these instructions.

7. If you typed 11, the Install Licensed Programs display appears.

Page through the display to find the licensed programs you want. Type a 1 in the Option column next to the licensed programs to be installed.

Install Licensed Programs				System: XXXX
Type options, press Enter.				
1=Install				
Option	Licensed Program	Product Option	Description	
-	5761SS1		i5/OS - Library QGPL	
-	5761SS1		i5/OS - Library QUSRSYS	
-	5761SS1	1	i5/OS - Extended Base Support	
-	5761SS1	2	i5/OS - Online Information	
-	5761SS1	3	i5/OS - Extended Base Directory Support	
-	5761SS1	5	i5/OS - System/36 Environment	
-	5761SS1	6	i5/OS - System/38 Environment	
-	5761SS1	7	i5/OS - Example Tools Library	
-	5761SS1	8	i5/OS - AFP Compatibility Fonts	
-	5761SS1	9	i5/OS - *PRV CL Compiler Support	
-	5761SS1	12	i5/OS - Host Servers	
-	5761SS1	13	i5/OS - System Openness Includes	
				More...
F3=Exit F11=Display status/release F12=Cancel F19=Display trademarks				

Notes:

- The libraries QGPL and QUSRSYS, and Extended Base Support (option 1) and Extended Base Directory Support (option 3) are preselected if you are installing licensed programs as part of a new system installation. If you are adding additional (new) licensed programs or optional parts, these items would be preselected only if they are in an error state.
- A licensed program you want to install might not be listed on the Install Licensed Programs display. If a licensed program is not listed, it can be added to the list by entering information into the blank fields at the top of the list. After you press Enter, this product then appears on the list with the other products.
 - Type 1 in the Option column.
 - Type the product identifier in the Licensed Program column.
 - Type the product option value in the Product Option column.
 - Press Enter.

When you are typing the product option, the system accepts only the following three values: *BASE, option number, or *ALL.

- A value of *BASE installs only the base product of the associated product identifier.
- The product option number installs only the particular option of the associated product identifier. To be able to install options, you must install the base product (*BASE).
- A value of *ALL installs the base product and all options of the associated product identifier that are found on the media.

Keep in mind that licensed programs that you add will appear on the list with only the product identifier and will not give a descriptive name of the product. Also, you should check the documentation that came with the product to see whether there are any special instructions.

If you get a message that the product already appears in the list, scroll down to the product. Make sure that there is a 1 in the Option column. Make sure that it is selected for installation.

Press Enter.

8. The Confirm Install of Licensed Programs display appears on the console. Press Enter to confirm your choices.
9. The Install Options display appears.

```

                                Install Options
                                System:  XXXX
Type choices, press Enter.
Installation device . . . . . OPT01      Name
Objects to install . . . . . 1          1=Programs and language objects
                                       2=Programs
                                       3=Language objects
Nonaccepted agreement. . . . . 2       1=Do not install licensed program
                                       2=Display software agreement
Automatic IPL . . . . . N              Y=Yes
                                       N=No

```

Type the following on this display:

- Installation device: OPT01 (In this example, OPT01 is used for the installation device. If you use a different naming convention, type the name that you have assigned to the installation device.)
- Objects to install: 1
- Nonaccepted agreement: 2
- Automatic IPL: N

10. One or both of the following displays show the status of the licensed programs and language objects as they are being installed on the system. You do not need to respond to these status displays.

```

                                Installing Licensed Programs
                                System:  XXXX
Licensed programs processed . . . . . :  0 of XXX
                                Licensed program install in progress

```

The following display is an example of the display that appears during the installation process.

```

                                Installing Licensed Programs
                                System:  XXXX
Licensed programs processed . . . . . :  X of XXX
Licensed
Program Option Description          Type
5761SS1  12    i5/OS - Host Servers              2924

```

Note: This display shows which licensed programs and optional parts of licensed programs are being installed. After the *PGM objects and *LNG objects for each licensed program or optional part have been

installed, the licensed program identifier disappears from the display and the number in the licensed programs processed field changes to show how many are processed.

11. You might see the Display Messages display. If you have another media volume that contains licensed programs to load, you can load it at this time. If you are installing from optical media, wait for the In Use indicator to go out before responding to the message.

```

                                Display Messages
                                System:   XXXX
Queue . . . . . : QSYSOPR           Program . . . . . : *DSPMSG
Library . . . . . : QSYS             Library . . . . . :
Severity . . . . . : 95              Delivery . . . . . : *BREAK

Type reply (if required), press Enter.
Load the next volume in optical device OPT01 (X G)
Reply . . . . . G
```

Type G and press Enter. After you load each volume, type G and press Enter. If there are no more volumes to load that contain licensed programs, or if you want to end the loading process, type X and press Enter.

12. If a licensed program requires acceptance of a software agreement, the Software Agreements display appears. Do either of the following:
 - Press F14 to accept the agreement and allow the licensed program to continue installing.
 - Press F16 to decline the agreement and end the installation of that licensed program.
13. The Work with Licensed Programs display appears on your console when the installation process is completed. One of the following messages appears on the bottom of the Work with Licensed Programs display.

Work with licensed programs function not complete. Go to the topic Chapter 14, “Troubleshooting software installation problems,” on page 157 to determine the problem.

Work with licensed programs function has completed. Continue with the next step.
14. Verify the installed status values of your licensed programs and check for compatibility. It is important to make sure all of your licensed programs are compatible with the operating system.

Use LICPGM menu option 10 (Display licensed programs) to see the release and installed status values of the installed licensed programs. If the installed status value of a licensed program is *COMPATIBLE, it is ready for use. If the installed status value of a licensed program is *BACKLEVEL, the licensed program is installed, but its version, release, and modification is not compatible with the currently installed level of the operating system. Check the topic, “Licensed program releases and sizes” on page 181, to verify the current version, release, and modification of the licensed program. “Installed status values” on page 219 lists the possible installed status value descriptions.

You have completed this task.

1. Do you have more licensed programs or optional parts to install, but they did not appear in the list displayed in step 7 on page 130 (or could not be added to the list)?
 - **No.** Go to the next step (step 2 on page 133).

- **Yes.** Go to “Using the Restore Licensed Programs command to install IBM or non-IBM licensed programs” to install these licensed programs or optional parts.
2. Do you need to install a secondary language?
 - **No.** Go to the next step (step 3).
 - **Yes.** Go to “Installing a secondary language” on page 134 and complete the instructions.
 3. You must complete the installation process before you put your system into operation. Go to “Checklist: Completing the i5/OS installation” on page 138 and complete the instructions.

Using the Restore Licensed Programs command to install IBM or non-IBM licensed programs

To use the i5/OS Restore Licensed Programs (RSTLICPGM) command to install licensed programs on a system, follow these procedures.

You might be instructed to use the RSTLICPGM command to install non-IBM licensed programs. All IBM-supplied licensed programs, including Programming Request for Price Quotations (PRPQs), licensed program offerings (LPOs), and single-set licensed programs, should have been installed already by using the LICPGM menu options 1 or 11, or during automatic installation.

Note: If you do not have non-IBM licensed programs, you can skip this task. If you need to install a secondary language, go to “Installing a secondary language” on page 134 and complete the instructions. Otherwise, you must complete the installation process and then go to “Checklist: Completing the i5/OS installation” on page 138 and complete the instructions.

1. You might have received special installation instructions with these products. If you did, you should use those instructions.
2. Load the media containing the licensed program or optional part in the installation device.
3. If you have non-IBM software agreements to accept, you can either accept all your licensed program agreements at one time, such as when you install products in a batch process, or you can accept them individually later. To accept all your software agreements now, type `G0 LICPGM`. Select option 5 (Prepare for install).
 - a. Select the option to work with software agreements. On the Work with Software Agreements display, use F22 (Restore software agreements).
 - b. Type a 5 to display the software agreements for the licensed programs that you want to install and press Enter. Press F14 to accept the software agreements and then return to the Work with Licensed Programs display.
4. In the following steps, OPT01 is used for the installation device. If you are using a different naming convention, use the name you have assigned to the installation device.

To install a new licensed program, type the command:

```
RSTLICPGM LICPGM(xxxxxxx) DEV(OPT01) OPTION(*BASE)
```

where `xxxxxxx` is the product identifier for the licensed program you are installing.

Press Enter. You might see an online software agreement. If you accept the software agreement, you can continue to install and use the program.

5. To install a new optional part, type the command:

RSTLICPGM LICPGM(xxxxxxx) DEV(OPT01) OPTION(n)

where *xxxxxxx* is the product identifier for the licensed program you are installing and *n* is the option number.

Press Enter. You might see an online software agreement. If you accept the software agreement, you can continue to install and use the option.

6. Repeat steps 4 on page 133 and 5 on page 133 until you have installed all of the new licensed programs and optional parts that could not be installed in “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128.

You have completed this task.

1. Do you need to install other licensed programs such as Lotus® Domino® 7 for i5/OS, TCP/IP, or WebSphere® to allow your company to participate over the Internet with other e-businesses?
 - **No.** Go to the next step.
 - **Yes.** Go to the i5/OS Information Center e-business and Web serving category.
2. Do you need to install a secondary language?
 - **No.** Go to the next step.
 - **Yes.** Go to “Installing a secondary language” and complete the instructions.
3. You must complete the installation process before you put your system into operation. Go to “Checklist: Completing the i5/OS installation” on page 138 and complete the instructions.

Installing a secondary language

Follow these instructions to install a new i5/OS secondary language on a system or logical partition.

Before you begin to install a secondary language

Verify the following tasks before you install a secondary language for the i5/OS operating system.

Complete the tasks in the i5/OS Information Center topic: “Preparing to install the i5/OS release” on page 101. Pay particular attention to the “Globalization and i5/OS software installation” on page 19 topic for more information about installing and using secondary languages.

Installing secondary languages for IBM licensed programs

Follow these steps to install an i5/OS secondary language for IBM licensed programs.

1. You must sign on to the system as QSECOFR. If you are not, sign off and then sign on again using QSECOFR.
2. Write down the national language version identifier on the secondary language media. You will need this in step 8 on page 135. _____
Secondary language media is identified by the N29xx on the label. The identifier is in the form 29xx, where xx is a unique number for each language. To find the appropriate feature code for your language, refer to “Feature codes for national language version” on page 214.
3. Load the secondary language media volume in the installation device.

- Type the following command on any i5/OS control language (CL) command line and press Enter:

```
CHGMSGQ QSYSOPR *BREAK SEV(95)
```

- A message display could appear. Press F3 (Exit).

Note: Ignore the messages that are shown.

- Type GO LICPGM on any CL command line and press Enter:
- The Work with Licensed Programs menu appears. Use the page down or rollup key to see the second display of the Work with Licensed Programs menu.

```
LICPGM                                Work with Licensed Programs                System: XXXX
Select one of the following:
Secondary Languages
 20. Display installed secondary languages
 21. Install secondary languages
 22. Delete secondary languages
```

Type 21 and press Enter.

- The Install Secondary Languages display appears.

```
                                Install Secondary Languages                System:  XXXX
Primary language . . . . . : 2924
Description . . . . . : English
Type options, press Enter.
 1=Install

Option  Language  Description                                Library      Installed
-      -          -          -          -          Release
-      2902      Estonian   QSYS2902
-      2903      Lithuanian QSYS2903
-      2904      Latvian   QSYS2904
-      2905      Vietnamese QSYS2905
-      2906      Lao       QSYS2906
-      2909      Belgian English QSYS2909
1     2911      Slovenian QSYS2911
-      2912      Croatian  QSYS2912
```

Use the Page Down key until you see the language that you want to install. Type 1 in the option column next to the language you want to install. You can install only one language at a time. Press Enter.

- After the language feature is entered, the Confirm Install of Secondary Languages display is shown.

```
                                Confirm Install of Secondary Languages        System:  XXX
Press Enter to confirm your choices for 1=Install.
Press F12 to return to change your choices.

Option  Language  Description                                Library      Installed
 1      2911      Slovenian   QSYS2911      Release
```

Press Enter.

- The Install Option for Secondary Languages appears.

```

                Install Option for Secondary Languages
                                System:   XXX
Type choice, press Enter.

Installation device . . . . OPT01      Name
Replace if Current . . . .  N         Y=Yes
                                       N=No

```

Type the following and press Enter:

Installation device: OPT01 (See note.)
 Replace if Current: N

Note: OPT01 is used for the installation device in this example. If you are using a different naming convention, type the name you have assigned to the installation device.

One or both of the following displays show the status of the language objects as they are installed on the system.

```

                Installing Licensed Programs
                                System: XXXX

Licensed programs processed . . . . . :    0 of XXX

                Licensed program install in progress

```

The following display is an example of the display that appears during the installation process.

```

                Installing Licensed Programs
                                System: XXXX

Licensed programs processed . . . . . :    X of XXX

Licensed
Program  Option  Description                                Type
5761WDS  *BASE    WebSphere Development Studio                2911

```

- If you see the following message, load the next volume of the secondary language media and continue the installation.

Note: Be certain that the label on the next volume is for the same secondary language.

```

                Display Messages
                                System:   XXXX
Queue . . . . . :    QSYSOPR          Program . . . . . : *DSPMSG
Library . . . . :    QSYS             Library . . . . . :
Severity . . . . :    95              Delivery . . . . . : *BREAK

Type reply (if required), press Enter.
Load the next volume in optical device OPT01 (X G)
Reply . . . . G

```

Type G and press Enter. After you load each volume, type G and press Enter. If there are no more volumes to load that contain licensed programs, or if you want to end the loading process, type X and press Enter.

12. The Work with Licensed Programs display appears on your console when the installation process is completed. One of the following messages appears on the bottom of the Work with Licensed Programs display.

Work with licensed programs function not complete. Go to the topic Chapter 14, “Troubleshooting software installation problems,” on page 157 to determine the problem.

Work with licensed programs function has completed. Continue with the next step.

Note: Some licensed program options do not have language objects or are not supported for secondary languages. For example, options 6, 7, and 9 of the operating system are not supported. Option 8 of the operating system does not have any language objects. You can use LICPGM menu option 20 to see the products that have secondary languages installed.

You have completed this task.

1. Do you have more secondary languages to install?
 - **No.** Go to the next step.
 - **Yes.** Go back to step 2 on page 134 at the beginning of this topic.
2. Do you need to install secondary languages for licensed programs that are not shown in the list using option 11 of the Work with Licensed Programs menu?
 - **No.** Go to the next step.
 - **Yes.** Go to “Installing secondary languages for non-IBM licensed programs” to install secondary languages for these licensed programs.
3. You must complete the installation process before you put your system into operation. Go to “Checklist: Completing the i5/OS installation” on page 138 and complete the instructions.

Installing secondary languages for non-IBM licensed programs

To install a secondary language for non-IBM licensed programs, follow these steps.

You might be instructed to use the i5/OS Restore Licensed Program (RSTLICPGM) command to install secondary languages for non-IBM licensed programs. All IBM-supplied licensed programs, including Programming Request for Price Quotations (PRPQs), licensed program offerings (LPOs), and single-set licensed programs, should have had secondary languages installed already by using the LICPGM menu option 21.

Note: If you do not have non-IBM licensed programs, you can skip this task. However, you must complete the installation process. Go to “Checklist: Completing the i5/OS installation” on page 138 and complete the instructions.

1. You might have received special installation instructions with independently shipped licensed programs (those that are not on the same media as the software release). If you did, you should use those instructions.
2. Load the media volume containing the secondary language that you want to install.

In the following steps, OPT01 is used for the installation device. If you are using a different naming convention, use the name you have assigned to the installation device.

3. To install a secondary language for a licensed program, type this command and press Enter:

```
RSTLICPGM LICPGM(xxxxxxx) DEV(OPT01)
  OPTION(*BASE) RSTOBJ(*LNG) LNG(29xx)
```

where *xxxxxxx* is the product identifier for the licensed program and *29xx* is the national language version feature code.

4. To install secondary language for an optional part of a licensed program, type this command and press Enter:

```
RSTLICPGM LICPGM(xxxxxxx) DEV(OPT01)
  OPTION(n) RSTOBJ(*LNG) LNG(29xx)
```

where *xxxxxxx* is the product identifier for the licensed program, *n* is the option number, and *29xx* is the national language version feature code.

5. Repeat steps 3 and 4 until you have installed all of the secondary languages for the licensed programs and optional parts that were independently installed.

You have completed this task.

You must complete the installation process before you put your system into operation. Go to “Checklist: Completing the i5/OS installation” and complete the instructions.

Checklist: Completing the i5/OS installation

Use this checklist to complete the i5/OS installation processes.

1. If you still have default passwords for your service tools user IDs, change them now. For information about service tools user IDs, see Change service tools user IDs and passwords in the i5/OS Information Center.
2. Remove the media volume when the installation is complete. If your media is tape, wait for the tape to rewind completely.
3. If you have any IBM or non-IBM products with special installation instructions, install these products now. Check the product's documentation, and follow any special instructions.
4. **For logical partitions only:**

Attention: For System i 8xx that support i5/OS V6R1, do not perform the next step (step 5) to install the cumulative PTF package until after you are aware of the unique PTF installation considerations involved on a system with logical partitions. You could potentially lose data. Refer to the topic Install fixes on systems with logical partitions in the i5/OS Information Center to understand how to install the cumulative PTF package on a system with logical partitions.

5. Install the most current cumulative PTF package and PTF groups that you have ordered. (This package should have been ordered a week or two before your installation.) Use the instructions in the *PTF Shipping Information Letter*. For more information about PTF groups, refer to “Ensuring you have the latest information” on page 103. To apply PTF groups, refer to the cover letter and instructions for the program temporary fix (PTF). For general information about applying PTFs, go to Install fixes in the i5/OS Information Center. Then return here and continue with the next step.

Note: If you do not install the cumulative PTF package now, you need to perform an IPL and let the Initialize System (INZSYS) process complete.

Before you do, set the IPL type to **B** (or the IPL type you use for everyday operation) and then set the mode selection to **Normal**. “Initialize System (INZSYS) recovery” on page 172 has more information about INZSYS.

6. (This does not apply to IBM System i 8xx models that support i5/OS V6R1.) If your system is operating as a service partition and your system is not being managed by a Hardware Management Console, you might be required to perform a server IPL. A *server IPL* is an IPL whereby all logical partitions on the system are shut down at the same time. This allows, for example, a new level of the server firmware to be activated on the system.

You might be required to perform a server IPL after you apply or remove a server firmware PTF on the service partition.

- To find out if you need to do a server IPL, type DSPFMWSTS on the i5/OS control language (CL) command line and press Enter. If a server IPL is required, the **Server IPL required** field is set to Yes.
- To find out if your system is operating as a service partition, type DSPMWSTS on the CL command line and press Enter. If your system is operating as a service partition, the **Service partition** field is set to Yes.

Note: When shutting down your service partition, reference codes D6xx430B or D6xx430A could be displayed for an extended amount of time. The xx should increment periodically and is a normal part of processing when server firmware code is being updated. Allow the system to complete the processing. Do not interrupt this process.

7. Look for messages in the install history log that indicate the status of the Initialize System (INZSYS) process:

- a. Type G0 LICPGM and press Enter.
- b. Type 50 (Display log) on the Work with Licensed Programs display, and press Enter.
- c. The Display Install History display appears. Press Enter.

The Display History Log Contents display appears. If you do not see either of the following messages on the display, wait a few minutes and select option 50 again. Find the message Initialize System (INZSYS) started. After this message appears, wait for a period of time and look for the Initialize System (INZSYS) processing completed successfully message (CPC37A9). If you do not see message CPC37A9 on the display, go to “Initialize System (INZSYS) recovery” on page 172 to determine the problem.

8. If you used an image catalog to perform your installation, you might want to remove all installation images from your system. To delete the catalog and all the optical images (image files), type the following:

```
DLTIMGCLG IMGCLG(mycatalog) KEEP(*NO)
```

9. If you used an image catalog to perform your installation and you used the Start ASP Balance (STRASPBAL) command to end the allocation for storage in the load-source disk unit before you upgraded, enter the Start ASP Balance (STRASPBAL) command to resume the allocation of storage for the load-source disk unit.

```
STRASPBAL TYPE(*RSMALC) UNIT(1)  
STRASPBAL TYPE(*CAPACITY) ASP(1) TIMLMT(*NOMAX)
```

10. Install software license keys for your operating system and keyed products. Use the Work with License Information (WRKLICINF) command to display the installed keyed products to add license key data. For specific instructions, go to Add license key information in the i5/OS Information Center.

After updating the license key information, return here and continue with the next step.

11. After you complete the installation process and before you make the system available to all users, set the usage limit for the software-license managed products. These products are listed on the Proof of Entitlement (POE), invoice, or other documents that you have received with your software order. For products that have a usage limit, you set the usage limit with the Work with License Information (WRKLICINF) command.

To set your usage limit, do the following:

- a. Type WRKLICINF and press Enter.
- b. On the Work with License Information display, press F11 (Display Usage Information). The usage limit number on each product that is listed on the POE, invoice, or other documents must match the usage limit number on the Work with License Information display for the associated product.
- c. Move the cursor to the line that contains the product name whose usage limit is to be updated.
- d. Type 2 (Change) and press Enter.
- e. When the Change License Information display is shown, update the usage limit prompt with the usage limit shown on the POE. In addition, update the threshold prompt with either *CALC or *USGLMT. Do not leave the threshold set to zero.

Note: If message CPA9E1B [Usage limit increase must be authorized. Press help before replying (C G).] is sent, respond by typing G.

- f. If the POE lists more products than the Work with License Information display, set the usage limits after you install those products.
12. If you have installed the product 5722-V11, Content Manager, you can use the product. However, you must perform post-installation commands. For more information, refer to the Post Installation section in the product document *IBM ImagePlus VisualInfo for AS/400: Planning and Installation Guide*, GC34-4585.
 13. If you have not already verified the compatibility of your licensed programs with the operating system, do this now. Use LICPGM menu option 10, Display installed licensed programs. If *COMPATIBLE is not listed next to a licensed program, then go to "Installed status values" on page 219 and determine how to proceed.
 14. If you changed any other system value such as for example security level (QSECURITY) during your installation, change it back now.
 15. If you changed the scan control (QSCANFCTL) system value to minimize future scanning of some objects that are restored before you installed your licensed programs, remove the *NOPOSTRST specification from this system value.
 16. Some of the tasks in this topic require that you change the QSYSOPR severity code filter to 95. If you do not want to continue with this level or you want to change the delivery notification, type CHGMSGQ QSYSOPR DLVRY(xx) SEV(yy) where *xx* indicates the delivery notification and *yy* indicates the severity code that you want to use. The system defaults are DLVRY(*HOLD) SEV(0).
 17. Save your system using your normal save procedures. Refer to the instructions in the Backing up your system topic in the i5/OS Information Center. Make sure that the Initialize System (INZSYS) process is complete before you save your system.

Note: Before you start a save operation, use the Work with Active Jobs (WRKACTJOB) command to check the status of QDCPOBJx jobs. These jobs decompress objects. There could be more than one QDCPOBJx job. You can start your save operation if these jobs are in an inactive state. If you put the system in a restricted state by ending subsystems, the QDCPOBJx jobs become inactive. The jobs will restart when the system is not in a restricted state. For more information about decompressing objects, see “Compressed objects and storage space” on page 18.

18. If you plan to install and use the i5/OS Information Center either from a workstation or the system, refer to the optical media that come with your software order. Find *i5/OS Information Center* CD, SK3T-4091. This package also includes the PDF versions of System i manuals. For the installation instructions, see the readme.txt file.
19. If you have installed System i Access Family products, you might have other tasks that you need to complete. You can find further information about installing System i Access Family products in the following sources:
 - System i Access in the i5/OS Information Center.
 - The System i Access Web site  (<http://www.ibm.com/systems/i/software/access>).
20. You might have installed licensed programs that require additional installation steps on PCs, or you might have programs that install on PCs through an System i Access Family function. If you have products such as this, complete your PC installation by using the instructions for the product.
21. If you have a System i integration with BladeCenter and System x that you stopped before you began the installation process, restart it now.
 - a. Type G0 NWSADM on the CL command line. The Network Server Administration display appears.
 - b. Select option 2, Start a network server.
22. If you installed 5761-TC1, TCP/IP Utilities, go to the topic TCP/IP setup in the i5/OS Information Center for advanced configuration and setup information.
23. If you have customized an IBM-supplied program (for example, QSTRUP in library QSYS) in a previous release, make sure that you re-create this program to run correctly in the new release.
24. If you have duplicated any IBM-supplied objects, you might want to make new duplicates after you install the release. This allows you to take advantage of functions added in the new release. Examples of objects that you might duplicate include the following:
 - Message text descriptions
 - Commands
 - Command defaults

You have completed your installation.

Chapter 12. Changing the primary language of your system or logical partition

Use this procedure to install a primary language from either a secondary language media set or a primary language media set.

Follow the directions closely because you use different options based on the type of media.

Note:

- If you have logical partitions, you must perform these instructions for each partition to which you change the primary language.
- Image catalogs (virtual optical and tape devices) do not support the procedures in this topic.

Before you begin to change the primary language

Consider this information before you change the primary language on your system or i5/OS logical partition.

Before you begin to change the primary language, read the topic, “Globalization and i5/OS software installation” on page 19.

Obtain either of the following media:

- A complete set of the primary language media, which includes the Licensed Internal Code media and the IBM i5/OS (5761-SS1) media. The media labels include the characters I_BASE_01 and B29xx_01, for example, where 29xx is the language feature code for the primary language that you want to install. Use either the steps in this topic collection (“Changing the primary language” on page 144) or, if you want to change your primary language as part of a release upgrade, then refer to Chapter 6, “Upgrading or replacing software using automatic installation,” on page 57 or Chapter 7, “Upgrading or replacing software using manual installation,” on page 67.
- Secondary language media. You need to ensure that the media label includes the characters N29xx and the name of the language. The character N indicates that the media contains only language objects, and 29xx is the language feature code of the secondary language. You will also need the Licensed Internal Code media that is labeled I_BASE_01 and B29xx_01 media from your system's primary language media set. Follow the instructions for using secondary language media in “Changing the primary language” on page 144.

Note: If the label on the secondary language media does not match this description, do not continue with the instructions in this part. If the letter B precedes the language feature code, go to “Installing software on a new system or logical partition (without i5/OS installed)” on page 112 and use those instructions to change your primary language.

The release and modification of your system must be the same as the release and modification of your secondary language media.

If you have not already done so, complete the tasks in “Preparing to install the i5/OS release” on page 101.

Changing the primary language

Follow these steps to change the primary language on the system or i5/OS logical partition.

Attention:

- You cannot change your primary language to a language you currently have installed as a secondary language on your system. You must delete the secondary language first before you can change it to your primary language. Go to “Option 22. Delete secondary languages” on page 230 for more information about deleting secondary languages.
- If the primary language and the service tools language do not match, you might need to go to dedicated service tools (DST) and reinstall the correct service tools language. For instructions, see Changing the service tools language on your system or logical partition in the i5/OS Information Center.

If you have secondary logical partitions, you must perform these instructions for each partition to which you change the primary language.

1. Begin at the System i Main Menu (or the menu you chose as your initial menu).

Load the first volume of the media that contains the Licensed Internal Code (labeled I_BASE_01). Have the operating system (5761-SS1) media available. This volume is labeled B29xx_01. Also ensure that you have removed other media from devices that are not involved in these procedures.

Note: Do not load your secondary language media at this time.

2. Use the control panel to switch the mode to **Manual**.
3. Type `PWRDWSYS OPTION(*IMMED) RESTART(*YES)` and press Enter.

Note: For V6R1, the default value for the Power Down System (PWRDWSYS) command is to display a confirmation. This can be changed by specifying `*NO` for the Confirm (CONFIRM) parameter: `CONFIRM(*NO)`. The default value for V5R3 and V5R4 is not to display a confirmation.

4. Wait for the IPL or Install the System display to appear on your console.

```
                                IPL or Install the System
                                System: XXXX

Select one of the following:

1. Perform an IPL
2. Install the operating system
3. Use Dedicated Service Tools (DST)
4. Perform automatic installation of the operating system
5. Save Licensed Internal Code
```

Type 2 (Install the operating system) and press Enter.

```

                                Install Device Type Selection
                                System: XXXX
Select the installation device type:

1. Tape
2. Optical
3. Virtual device - preselected image catalog
4. Current alternate selected device      None

```

Type 2 (Optical) and press Enter.

5. The Confirm Install of the Operating System display is shown on your console. Press Enter.
6. The Select a Language Group display shows the primary language currently installed on the system. Change the primary language of your system by specifying the language feature code of the secondary language media on this display.

For example, assume the primary language is English (2924) and you are using secondary language media to change it to Portuguese (2922). This display would appear showing 2924. You would type 2922.

```

                                Select a Language Group
                                System: XXXX
Note: The language feature shown is the language feature
installed on the system.

Type choice, press Enter.

Language feature . . . . . 2924

```

Type the numbers of the feature code for the language you want and press Enter.

7. After the language feature code is entered, either the Confirm Language Feature Selection display or the Confirm Service Tools Language display appears on your console.

```

Confirm Service Tools Language

Language feature . . . . . : 2922

The IBM Licensed Internal Code (I.BASE.01) V6R1M0
media is required.

Press Enter to confirm your choice to install the service
tools language.

Press F5 to bypass installing the service tools language
and continue installing the operating system.

Press F12 to return to change your choice.

```

. Changing the service tools language and the primary language.

```

Confirm Language Feature Selection
System: SYSTEM1
Language feature . . . . . : 2922

Press Enter to confirm your choice for language feature.
Installing the system will continue.
Press F12 to return to change your choice for
language feature.

F3=Exit F12=Cancel

```

. Confirm Language Feature Selection display when changing the primary language.

Press Enter.

8. Some status displays appear on the console. You do not need to respond to any of these status displays. The following is an example of a status display:

```

Licensed Internal Code IPL in Progress

IPL:
Type . . . . . : Attended
Start date and time . . : xx/xx/xx xx:xx:xx
Previous system end . . : Normal
Current step/total . . . : 1 16
Reference code detail . . : C6004050
IPL step . . . . . : Storage Management Recovery

```

The following list shows some of the IPL steps that are shown on the IPL Step in Progress display.

- Authority Recovery
- Journal Recovery
- Database Recovery
- Journal Synchronization
- Start the Operating System

Some of the IPL steps could take a long time.

9. You see the following display.

```

Message

Message ID . . . . . : CPA2055 Type . . . . . : Inquiry
From program . . . . . : ITLOADFO Severity . . . . . : 99

Message . . . . . : The next volume in the sequence is needed to
continue the installation process.

Cause . . . . . : The end of the volume has been reached.

Recovery . . . . . : Load the next volume on the installation device.

Type choice, press Enter.

Reply . . . . . 1 1=Continue, 2=End installing

```

Load the first volume of the IBM-supplied installation media that contains the operating system. (This volume is labeled B29xx_01, where 29xx is the identifier for the primary language.)

10. The Install the Operating System display appears when the IPL is complete.

```

Install the Operating System

Type options, press Enter.

Install
option . . . . . 2          1=Take defaults (No other
                             options are displayed)
                             2=Change install options

Date:
Year . . . . . —          00-99
Month . . . . . —        01-12
Day . . . . . —          01-31

Time:
Hour . . . . . —          00-23
Minute . . . . . —        00-59
Second . . . . . —        00-59

```

Type the following and press Enter.

Install option: 2

Date (Use the current year, month, and day.)

Time (Use the current time, 24-hour clock.)

11. The Installation Status display appears. You do not need to respond to this display.
12. The Specify Install Options display appears.

```

Specify Install Options

Type options, press Enter.

Restore option . . . . . 4      1=Restore programs and language objects
                                from the current media set
                                2=Do not restore programs or
                                language objects
                                3=Restore only language objects
                                from current media set
                                4=Restore only language objects
                                from a different media set using the
                                current install device.

Job and output
queues option . . . . . 2      1=Clear, 2=Keep

Distribute i5/OS on
available disk units . . . . . 2  1=Yes, 2=No

```

- a. Type either of the following for the restore option:
- 1) 3 (Restore only language objects from current media set) if you are installing from the primary language media.
 - 2) 4 (Restore only language objects from a different media set using the current install device) if you are installing from the secondary language media.
- b. Type 2 for the Job and output queues option and press Enter.
13. Based on the type of media you are using, perform either of the following steps:

- If you are using secondary language media, the Installation Status display appears. You do not need to respond to this display. When the following message appears, load the volume that contains secondary language media, which is labeled N29xx. The value 29xx is the feature code of the secondary language.

```

                                Message
Message ID . . . . . : CPA2057      Type . . . . . : Inquiry
From program . . . . . : XXXXXXXX   Severity . . . . . : 99

Language ID . . . . . : 2922

Message . . . . . : The installation media containing language objects
                    for the system language is needed to continue the installation
                    process.

Recovery . . . . . : Load the installation media containing language objects
                    for the specified language.

Type choice, press Enter.

Reply . . . . . 1                1=Continue, 2=End installing

```

Type 1 and press Enter.

The system searches through the media and loads the necessary language information. The Installation Status display appears, indicating that the language is being changed (in stage 3). The installation continues through the remaining stages. This display does not require a response.

- If you are using primary language media, insert the correct media when you are prompted.
14. After the base part of the operating system has been changed to the new primary language, the Sign On display appears on your console. Continue with the steps to change the language objects for the licensed programs in “Installing the licensed programs after changing the primary language.”

Installing the licensed programs after changing the primary language

Follow these steps to install the licensed programs after you have changed the i5/OS primary language.

If you have secondary logical partitions, you must perform this procedure on each partition to which you want to install the licensed programs.

1. Begin at the Sign On display.

```

                                Sign On
                                System . . . . : XXX
                                Subsystem . . . : XXXXX
                                Display . . . . : XXXXXXXX

User . . . . . QSECOFR
Password . . . . .
Program/procedure . . . . . _____
Menu . . . . . _____
Current library . . . . . _____

```

Type QSECOFR for the *User* prompt, and type your password, if required. Press Enter.

- Several display messages appear. To continue, press Enter on each display. The following is an example of a message that might appear:

```

                                Display Messages
                                System:   XXXX
Queue . . . . . : QSYSOPR          Program . . . . . : *DSPMSG
  Library . . . . : QSYS            Library . . . . . :
Severity . . . . . : 10             Delivery . . . . . : *BREAK

Press enter to continue.
System object QWCSCPF created again during IPL.

```

- The IPL Options display appears.

```

                                IPL Options

Type choices, press Enter.

System date . . . . . XX / XX / XX   MM / DD / YY
System time . . . . . XX : XX : XX   HH : MM : SS
System time zone . . . . . Q0000UTC   F4 for list
Clear job queues . . . . . N          Y=Yes, N=No
Clear output queues . . . . . N       Y=Yes, N=No
Clear incomplete job logs . . . . . N Y=Yes, N=No
Start print writers . . . . . Y        Y=Yes, N=No
Start system to restricted state . . . Y Y=Yes, N=No

Set major system options . . . . . Y   Y=Yes, N=No
Define or change system at IPL . . . . N Y=Yes, N=No

Last power-down operation was ABNORMAL

```

Note: Ignore the message on the bottom of the IPL Options display.

Type the following and press Enter.

- System date (Use the current date.)
- System time (Use the current time, 24-hour clock.)
- System time zone (Verify that it is correct or press F4 to select a time zone.)
- Start system to restricted state Y
- Set major system options N

- Additional display messages could be shown.

Press Enter after each message to continue.

- The System i Main Menu (or the menu you chose as your initial menu) appears on your console.

Type CHGMSGQ QSYSOPR *BREAK SEV(95) and press Enter.

- A message display could appear. Press Enter.

- The System i Main Menu (or the menu you chose as your initial menu) appears again.

Type GO LICPGM and press Enter.

- The Work with Licensed Programs display appears.

```

LICPGM                                Work with Licensed Programs                System:  XXXX
Select one of the following:

Manual Install
  1. Install all

Preparation
  5. Prepare for install

Licensed Programs
 10. Display installed licensed programs
 11. Install licensed programs
 12. Delete licensed programs
 13. Save licensed programs

```

If you are using primary language media, type 11, press Enter, and go to step 9.

If you are using secondary language media, type 1, press Enter and go to step 12.

9. The Install Licensed Programs display appears. Type 1 in the option column next to the IBM products and options that have *COMPATIBLE or *INSTALLED as the installed status value and which exist on the media you will use for the installation. Press Enter.
10. The Confirm Install of Licensed Programs display appears. Press Enter to confirm your choices or press F12 to return to the Install Licensed Programs display and change your choices.
11. The Install Options display appears.

```

                                Install Options                                System:  XXXX
Type choices, press Enter.

Installation device . . . OPT01      Name
Objects to install . . . . 3         1=Programs and language objects
                                       2=Programs
                                       3=Language objects

Nonaccepted agreement. . . 2         1=Do not install licensed program
                                       2=Display software agreement

Automatic IPL . . . . . N           Y=Yes
                                       N=No

```

Type the following on this display:

- Installation device: OPT01 (In this example, OPT01 is used for the installation device. If you use a different naming convention, type the name that you have assigned to the installation device.)
 - Objects to install: 3
 - Nonaccepted agreement: 2
12. One or both of the following displays show the status of the licensed programs and language objects as they are being installed on the system. You do not need to respond to these status displays.

```

Installing Licensed Programs
System: XXXX
Licensed programs processed . . . . . : 0 of XXX
Licensed program install in progress

```

The following display is an example of the display that appears during the installation process.

```

Installing Licensed Programs
System: XXXX
Licensed programs processed . . . . . : X
Licensed
Program Option Description Type
5761SS1 i5/OS - Library QUSRSYS 2922

```

- If you see the following message, load the next volume of the language media and continue the installation. Be certain that the label on the next volume is for the same language.

```

Display Messages
System: XXXX
Queue . . . . . : QSYSOPR Program . . . . . : *DSPMSG
Library . . . . . : QSYS Library . . . . . :
Severity . . . . . : 95 Delivery . . . . . : *BREAK
Type reply (if required), press Enter.
Load the next volume in optical device OPT01 (X G)
Reply . . . . G

```

Type G and press Enter. After you load each volume, type G and press Enter. If there are no more volumes to load that contain licensed programs, or if you want to end the loading process, type X and press Enter.

- The Work with Licensed Programs display appears on your console when the language objects for all of the licensed programs are installed. One of the following messages appears on the bottom of the Work with Licensed Programs display:

Work with licensed programs function has completed. Press F3 (Exit) to return to the System i Main Menu.

Work with licensed programs function not complete. Go to Chapter 14, "Troubleshooting software installation problems," on page 157 to determine the problem.

You have completed this task.

To complete your installation, go to "Checklist: Completing the i5/OS installation" on page 138 and follow the instructions there.

Chapter 13. Deleting software related to the i5/OS operating system

Use this information to help you determine if you need to delete an unwanted part of a licensed program. These requirements are not always apparent. You can also use the procedures in this topic to delete the parts of licensed programs you no longer need.

Determining what unused parts of products to delete

You might be able to delete some optional parts of i5/OS licensed programs to give you more storage.

Depending on your business needs, you might be able to delete some of the optional parts of the licensed programs that are shown in Table 5. (Table 5 shows V6R1 product identifiers, but the information in the table applies to deleting unwanted parts either before or after installing the new release of software.) For example, you can delete the licensed programs for any System i Access Family clients that you do not use. Deleting unwanted licensed programs or optional parts will give you more storage for your business needs.

Before you delete anything, read the following:

- If you do not have the original or a current copy of i5/OS software distribution media, make sure that you first save the affected licensed program. Type GO LICPGM on the i5/OS control language (CL) command line and select option 13 (Save licensed programs). You will need extra tapes for this save operation. To save these licensed programs to tape can take several hours. At a later time, if you need any of the licensed programs or deleted optional parts, you can install them from these tapes. To install them, use GO LICPGM and select option 11 (Install licensed programs).
- System backup tapes come with some systems. These backup tapes are not the same as software distribution media. While you can use software distribution media to reinstall individual licensed programs or optional parts, you cannot use system backup tapes. If you cannot locate or your system did not come with the original installation media, you must save the licensed programs and optional parts before you delete them. You will need the saved copy, if you need to restore the licensed programs or optional parts at a future time.

Use the information in “Installation notes about the i5/OS release” on page 209 and Table 5 to help you determine which programs or optional parts you might want to delete.

Table 5. Deleting unwanted licensed programs and optional parts after the installation is complete

Licensed program or optionally installable product part	Product option	Deletion information
5761-SS1 i5/OS		You cannot delete the entire operating system. You can delete optional parts, but you cannot delete i5/OS option 1 or option 3.

Table 5. Deleting unwanted licensed programs and optional parts after the installation is complete (continued)

Licensed program or optionally installable product part	Product option	Deletion information
Extended Base Support	1	You cannot delete the entire operating system. You can delete optional parts, but you cannot delete i5/OS option 1 or option 3.
Online Information (Online help information)	2	If you delete this optional part, you must first remove QHLPSYS from the system library list. Refer to "Considerations for deleting licensed programs" on page 155 for more information.
Extended Base Directory Support	3	You cannot delete the entire operating system. You can delete optional parts, but you cannot delete i5/OS option 1 or option 3.
System/36 Environment and System/38 Environment	5 and 6	Delete this optional part if you are running only System i applications.
Example Tools Library	7	This optional part is needed only by software developers.
AFP Compatibility Fonts	8	Do not delete this optional part if you are using the Print Services Facility™
*PRV CL Compiler Support	9	Delete this part if you do not need to compile CL programs for a previous release.
Host Servers	12	IBM recommends that you do not delete this part. Do not delete if you are using IBM System i Access Family products.
System Openness Includes	13	This optional part is needed only by software developers.
GDDM®	14	You can delete this if you are not using it.
i5/OS optional parts 21, 22, 31, 34, 35, and 43.	21 - 43	You can delete these if you are not using them.
i5/OS optional part 30 (Qshell)	30	This option should not be deleted as it is sometimes used by other licensed programs.
i5/OS optional part 33 (Portable App Solutions Environment)	33	This option should not be deleted as it is sometimes used by other licensed programs.
i5/OS optional part 46 (Performance Viewer Open Source Components)	46	For complete functionality of the IBM Systems Director Navigator for i5/OS, it is recommended that you keep this option.
International Components for Unicode	39	This optional part is needed if you use Unicode applications.
5761-XE1 System i Access for Windows	Base	If you are not using this specific client, you can delete the complete licensed program for that client.

Considerations for deleting licensed programs

Review these notes to determine unique situations that can occur when deleting some licensed programs that are related to the i5/OS operating system.

Do not attempt to use the Delete Library (DLTLIB) command to remove a licensed program or optional part of a licensed program from the system. Some licensed programs copy objects into other libraries; the DLTLIB command will not delete the duplicated objects. Using the DLTLIB command to delete a licensed program or optional part could leave the licensed program in a partially installed condition.

If you are unable to delete a licensed program, it might be because the library for the licensed program exists in one of the library lists. Do the following:

1. Use the WRKSYSVAL command to check both the system library and the user library lists.
2. When the Work with System Values display appears, type a 5 next to the QSYSLIBL and QUSRLIBL system values to display the associated libraries.
3. If the library for the licensed program is listed on this display, press Enter to return to the Work with System Values display.
4. Type a 2 to change the system value.
5. When the Change System Value display appears, use the spacebar to remove that licensed program library from the library list.

You will be able to delete your licensed program after your next IPL.

Deleting licensed programs

Follow these instructions to delete a licensed program that is related to the i5/OS operating system.

1. Type GO LICPGM and press Enter. The Work with Licensed Programs menu appears.
2. Select option 12 (Delete licensed programs). The Delete Licensed Programs display appears.
3. Type 4 (Delete) in the Option column in front of each licensed program that you want to delete. Page down to display additional licensed programs.
4. Press Enter. You are shown the Confirm Delete of Licensed Programs display.
5. Press Enter if your selections are correct. Press F12 to make corrections.
6. You receive confirmation messages from the system when the licensed programs are deleted.
7. Press F12 to return to the Work with Licensed Programs menu.

If you have difficulty deleting a licensed program following these steps, type ENDSBS *IMMED and press Enter. Then proceed with step 1 again.

Chapter 14. Troubleshooting software installation problems

This information describes common problem scenarios, recovery methods, and ways to get help if you encounter a problem during i5/OS software installation.

Error messages and reference codes (also known as system reference codes or SRCs) let you know that an error occurred during the installation process. Use the error messages or reference codes to determine which part of the process failed.

Where to begin recovery

When you determine that you have an i5/OS software installation error, first you need to determine what your first step to recovery should be.

Type of installation failure	
When failure occurred	What to do
Saving the system before installation	If a problem occurs while you are saving the system, review your job log to determine what caused the failure. Correct the error and complete your system save procedure. Do not continue to replace the new release until you have a complete backup copy of your system. If you cannot complete installing the new release, you will need this backup copy to restore the system to the previous release.
Installing new release or licensed program	Use the next table on this page to direct you to the recovery information that you need to find the problem, determine what caused it, correct the problem, and then complete installing this release.
Power failure during an installation process	If you have a power failure anytime during the installation process, go to the next table on this page to determine where to start the installation again. You should be able to start with the task where you were when the failure occurred. For example, if you had completed installing the operating system when the power failed, and are now installing licensed programs, start with the task to install licensed programs. If you are using the automatic process, start at the beginning. The system can determine which tasks have not been completed and will resume at the appropriate task.

If the installation process fails and you cannot continue the current installation, refer to Recovering your system in the i5/OS Information Center and your system's backup copy to restore the previous release.

In the farthest left column of the following table, locate the installation section you were using when the failure occurred. In the second column, locate which task you were performing in that section. Locate the first task that failed during your installation and then use the information in the last column to determine your recovery starting point.

Where to start recovery		
Installation procedure in use	Task number in use at time of failure	Where to start
Using image catalogs to install		"Image catalog recovery"
Using Operations Console during installation		"Operations Console recovery" on page 159
Replacing a release using automatic installation	Task 1. Using automatic installation	"Starting point for automatic installation recovery" on page 161
Replacing a release using manual installation	Task 1. Replacing the Licensed Internal Code	"Licensed Internal Code recovery" on page 162
	Task 2. Replacing the operating system	"Operating system recovery" on page 164
	Task 3. Replacing the licensed programs	"Licensed programs, PTFs, and secondary language recovery" on page 166
Installing software on a new system (with the operating system already installed)	Task 1. Doing the initial program load (IPL)	"Operating system recovery" on page 164
Installing software on a new system (without the operating system installed)	Task 1. Installing the operating system	"Operating system recovery" on page 164
Changing your primary language	Task 1. Changing the primary language	"Operating system recovery" on page 164
	Task 2. Installing the licensed programs	"Licensed programs, PTFs, and secondary language recovery" on page 166
Installing additional licensed programs	Task 1. Installing IBM licensed programs	"Licensed programs, PTFs, and secondary language recovery" on page 166
	Task 2. Installing non-IBM licensed programs	Look at the messages for the command
Installing a secondary language	Task 1. Using the Work with Licensed Programs Menu	"Licensed programs, PTFs, and secondary language recovery" on page 166
	Task 2. Using the Restore Licensed Program command	Look at the messages for the command

Image catalog recovery

If you used an image catalog to install i5/OS software, follow these procedures to determine where the failure occurred and the appropriate recovery action.

The following table lists the error messages that could occur if you are using an image catalog to install.

Table 6. Image Catalog Verification Recovery

Message	Description
CPF9897 CPDDBD1E	<p>Cause (Reason code 01): The load-source disk unit must have at least 1536 MB of free storage space to be able to install from an image catalog (virtual media device).</p> <p>Recovery:</p> <ol style="list-style-type: none"> 1. To determine if you have enough free space available, see “Freeing up space on the load-source disk unit for an image catalog” on page 41. 2. Perform the procedure for freeing up space on the load-source disk unit and try your request again. The topic, “Cleaning up disk storage space” on page 51, contains the procedure. <p>Cause (Reason code 02): Installation of the release requires additional allocation of space for License Internal Code.</p> <p>Recovery: Follow the directions in the error message. More information is in the topic, “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53.</p> <p>Cause (Reason code 03): The Licensed Internal Code media is not supported for installation over the current version, release, and modification that is installed or System i model.</p> <p>Recovery: Try your request again with a supported release.</p>
CPF3DE5	<p>Cause: The Licensed Internal Code and i5/OS software agreements have not been accepted.</p> <p>Recovery: Perform the steps “Required: Accepting software agreements” on page 49.</p>
CPD4F23	<p>Cause: The release is not supported on this server model.</p> <p>Recovery: Specify a supported release or server model. Then try the request again.</p>
CPD4F1C	<p>Cause: One or more PTFs on the system are delayed PTFs and require an IPL action. An installation from virtual media cannot be done when delayed PTFs exist.</p> <p>Recovery: Perform an unattended IPL, then retry your request</p>

Operations Console recovery

Following are common problems that can occur when using Operations Console during an i5/OS installation or upgrade.

Symptom: No connection between the system and Operations Console PC.

Action: When you receive the release upgrade, the shipped service tools user IDs (except 1111111) are expired. For all upgrades and installations, you need to establish a connection between the system and Operations Console PC by using 1111111 (eight 1's) for both the service tools user ID and the default password. This ensures a successful authentication of the subsequent connection of the client to the system. This is especially important for automatic installations.

Symptom: Reference code A6005008

Use this table if you received reference code A6005008. If an IPL did not find a console and if the console type is set to anything except a 1, the system displays code A6005008.

- If you are attempting to use a twinaxial console the only data relevant in this reference code is word 16. Use the table below to determine the twinaxial failure. The first 4 characters of this word contain the last 4 characters of the original failure type. For example, if word 16 contained 50010001, the twinaxial-related reference code would be A6005001 and the console type is set to use a twinaxial console. Refer to that reference code.
- If you are attempting to use Operations Console, select the appropriate section in the following table based on this information:
 - Local console on a network uses words 13, 14, and 15.
 - Local console directly attached to the server uses words 17, 18, and 19.

Note: If you just replaced the LAN adapter associated with Operations Console (LAN), you need to wait at least 35 minutes for the system to find and use the new LAN adapter card. Once the system is satisfied, it starts using the new adapter, the console should start, and the reference code disappears.

Table 7. Reference code A6005008: LAN

LAN			
If Word 13 value is:	Failure	Word 14 means:	Word 15 means:
1	No supported hardware detected or hardware detected is not expected (for example, you replaced the LAN IOA and the serial number is different)		In some cases the serial number of the expected adapter may be shown.
2	LAN IOA failed to report		
3	Hardware error	Common error codes: 53001A80,53002AC0 Network, cable, or the LAN adapter may not be operational. Error code 00000000 indicates the adapter reported but has not been initialized yet. This is not considered an error at this time. The adapter should be activated shortly. For other error codes, contact your service provider.	Card position or serial number of adapter

Table 7. Reference code A6005008: LAN (continued)

LAN			
If Word 13 value is:	Failure	Word 14 means:	Word 15 means:
4	BOOTP status: If the number of attempts are zero, BOOTP is ready when called. If attempts have a value, the PC did not respond	Attempts	Adapter position or serial number of adapter
5	Server's LAN connection is active but the PC failed to connect. Are the PC and server on the same network? Are they using the same protocol? Can the PC ping the server? (ping serverhostname)	IP address	Card position or serial number of adapter
Word 16		<p>The twinaxial-related reference code is represented by the first 4 characters. The console type value is represented by the last 4 characters in the form xxxx xxxx.</p> <p>00 indicates not defined by user (old default value) 01 indicates twinaxial console 02 indicates Operations Console (direct) 03 indicates Operations Console (LAN) 04 indicates Hardware Management Console (HMC)</p>	

Table 8. Reference code A6005008: Cable

Cable			
If Word 17 value is:	Failure	Word 18 means:	Word 19 means:
1	Asynchronous adapter not detected		
2	No cables detected	Adapter position	Adapter type
3	Wrong cable detected	Adapter position	Cable ID
4	Port in use	Adapter position	Adapter type
FA	Not configured for direct cable		

Starting point for automatic installation recovery

If you used the automatic installation process (replacing an i5/OS release using automatic installation), use the following information to determine where the failure occurred and the appropriate recovery action.

After you have the problem corrected, go to “Starting the automatic installation process again” on page 171.

- To use automatic installation recovery, you must use the same version, release, and modification distribution media that caused the failure.
- If you have a failure during the automatic installation process and sign on to do problem analysis, your system will be running under the QSYSSBSD controlling subsystem. When your system completes an IPL after the installation has completed successfully, your controlling subsystem is active again.

Where to start recovery for the automatic installation process	
Finding the problem (symptom)	Where to start
Reference code B608 1105	“Licensed Internal Code recovery”
Reference codes other than B900 xxxx	“Licensed Internal Code recovery”
Reference codes starting with B900 3xxx	“Operating system recovery” on page 164
Messages starting with CPZ20xx	“Operating system recovery” on page 164
Message that indicates the load source disk unit needs additional space for Licensed Internal Code.	“Licensed Internal Code recovery”
Message that indicates the Licensed Internal Code and operating system software agreements have not been accepted.	“Licensed Internal Code recovery”
Message that indicates automatic installation is not complete.	“Licensed programs, PTFs, and secondary language recovery” on page 166

Licensed Internal Code recovery

Use this procedure if an error occurred when you installed the Licensed Internal Code.

1. Use the following table to determine the action to take if the Install Licensed Internal Code - Error display shows the following message: An unrecoverable error occurred. The error reason code is listed below. This install cannot be completed. Give the reason code to your authorized service provider. Do not re-IPL the system until your authorized service provider can retrieve any needed information.

Return code for Licensed Internal Code - Error display	
Reason code	Action
51 52 53 54	If you are using optical media, clean the media. If you are using tape, clean the tape device. Then retry the installation.
All others	Retry the installation. If the installation fails again with the same reason code, retry the installation with another set of media. If the same failure occurs, contact your authorized service provider.

2. If you received a message that indicates the load source disk unit needs additional space for Licensed Internal Code, follow the directions in the error message. Ensure that you have adequate disk storage before you allocate the additional space for the Licensed Internal Code. The tasks for this are described in the topic “Ensuring the system meets disk storage requirements for upgrades” on page 50. The tasks for allocating additional space are in the topic, “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53.

3. If you received a message that indicates the Licensed Internal Code and operating system software agreements have not been accepted, perform the steps “Required: Accepting software agreements” on page 49.
4. Find the reference code that is shown on the control panel display and take the appropriate recovery action. If the reference code indicates that you have a media error, thoroughly clean the installation device. If you are using optical media, clean the media. If you are using tape, clean the tape head and tape path thoroughly. Then continue with the next step. If you receive another error message that indicates a media error on the same media, get another set of media to complete the installation process.

For a complete list of Licensed Internal Code reference codes, go to Analyzing and handling problems in the i5/OS Information Center and follow the instructions.

5. You are trying to do one of the following:
 - Install from optical media when an alternate installation device is enabled.
 - Use an alternate installation device which is not enabled.

Go to “Setting up an alternate installation device” on page 202 or “Disabling an alternate installation device” on page 205 and perform the appropriate procedure.

If you cannot find the address information or the configuration has changed and the address is wrong, you must determine the address by physical inspection. This inspection can be difficult and could vary depending on your system model and the specific configuration of your IO buses. For this reason, IBM recommends that you call your next support level for help in determining the addresses for the alternate installation device. A service agreement might be required for this type of assistance.

6. Start the installation process again.

If you were using the automatic installation process, go to “Starting the automatic installation process again” on page 171 to start the installation process again. You must load the first volume in the installation device to start the automatic recovery installation process.

If you were using the manual installation process, go to “Starting the manual installation process again” on page 172 to start the installation process again.

The following table lists error messages that could occur during the installation of Licensed Internal Code when using image catalogs.

Error messages	
Message	Description
B60041FD	<p>Cause: This reference code occurs when the decompression of Licensed Internal Code fails when performing an installation using image catalogs. A main storage dump occurs. This should be copied to the auxiliary storage pool (ASP) or media. Words 12 and 13 of the reference code contain reason codes that indicate why the failure occurred. If you plan to contact your authorized service provider, write down the 8 numbers from word 13.</p> <p>Recovery: No Licensed Internal Code has been installed yet. You can either restart the system by using the currently installed Licensed Internal Code (perform a B-side IPL) or by using the physical media to install.</p>

Error messages	
Message	Description
B60041FC	<p>Cause: This reference code occurs when the Licensed Internal Code installation fails when performing an installation using image catalogs. Words 12 and 13 of the reference code contain reason codes that indicate why the failure occurred. If you plan to contact your authorized service provider, write down the 8 numbers from word 13.</p> <p>Recovery: Use physical media to perform the installation.</p>

Operating system recovery

Use this procedure if an error occurred when you installed the i5/OS operating system.

1. If a problem occurs when you are replacing or installing the operating system, a reference code appears on the control panel display, or an error message appears on the console. Use the following tables to determine the cause of the problem and take the action indicated. Then continue with the next step in this list.
2. If you were using the automatic installation process, start the process again using the instructions in “Starting the automatic installation process again” on page 171.
3. Start the manual installation again using the following steps.

Attention: If you do this on a primary partition when secondary partitions are active, this will cause all partitions to IPL immediately. If you have active secondary partitions, power them off before you use this procedure.

- a. Load the first volume (B29xx_01) into the installation device for the alternate IPL. Prepare the device.
- b. Use the control panel to set the mode to **Manual** and select function **03**. Press Enter on the control panel.
- c. Return to the task that failed and start the task again at the step where the IPL or Install the System display appears on the console.
- d. After you respond to the Confirm Install of the Operating System display, you should see the Select a Language Group display. Verify that the language feature that is displayed matches the language feature for the i5/OS installation media that you are using.

Operating system problems	
Symptom	Action
B900 3000 through B900 308F	The reference codes in this range are displayed by the installation of the operating system process. Review the information in Analyzing and handling problems in the i5/OS Information Center. Take the appropriate recovery action. Then start the installation process again.
B900 3100 through B900 37FF	The reference codes in this range are displayed by the start operating system process. Go to Analyzing and handling problems in the i5/OS Information Center. Take the appropriate recovery action.

Operating system problems	
Symptom	Action
Other reference codes not listed in this table.	If the reference code is not in the range of reference codes listed in this table, go to Analyzing and handling problems in the i5/OS Information Center.

The following table contains some of the error messages that could occur during the installation of the operating system.

Error messages	
Message	Description
CPA3DE6	<p>Cause: Software agreements were not found on the volume loaded in the alternate IPL device.</p> <p>Recovery: Read the instructions for the message that is displayed on the console. Perform the recovery action described in the message to correct the problem.</p>
CPZ2003 CPZ2004 CPZ2005 CPZ2010 CPZ2011	<p>Cause: The installation process received a tape or optical media error code. Recovery for Error Code Ex10 0019 or Ex10 001A:</p> <ol style="list-style-type: none"> Clean the media. <ul style="list-style-type: none"> If you are using tape, clean the tape head and tape path thoroughly. If you are using optical media, clean the media with a clean lint-free cloth. Gently wipe the disc from the center to the outside of the disc. Try the installation process again. <ul style="list-style-type: none"> If you were using the automatic installation process, go to “Starting the automatic installation process again” on page 171. If you were using the manual installation process, go to step 3 in “Licensed Internal Code recovery” on page 162 to start the installation process again. <p>If you receive another error message indicating a media error on the same installation media, contact your software provider to get another set of installation media to complete the installation process.</p> <p>Recovery for all other error codes: Contact your authorized service provider.</p>
CPZ2022	<p>Cause: The restore options read from the installation profile are not valid.</p> <p>Note: If you create distribution media and specify *NONE for the installation profile name, the media will contain an empty installation profile. These media cannot be used to perform an automatic installation.</p> <p>Recovery: Record the recovery information for the error message. Try to install the operating system again using the manual installation process. You can also try to use the automatic installation process with a different set of media. If the problem occurs again during an automatic installation process, contact your next level of service.</p>

Error messages	
Message	Description
CPZ2023	<p>Cause: The installation options read from the installation profile are not compatible with the current state of the system.</p> <p>The installation requested by the options read from the installation profile cannot be performed. For example, this condition can occur when an installation is requested that does not load program objects and that results in the QSYS library being damaged.</p> <p>Recovery: Try to install the operating system again using the manual installation process.</p>
CPZ20xx	<p>Cause: These termination messages are displayed by the installation of the operating system process. Print the display if possible; otherwise, copy all of the information.</p> <p>Recovery: Read the instructions for the messages that are displayed on the console. Perform the recovery action described in the message to correct the problem and then try the installation process again.</p> <p>Note: A short time after you press Enter, a B900 xxxx reference code is displayed. Analyzing and handling problems in the i5/OS Information Center contains additional information.</p>

Licensed programs, PTFs, and secondary language recovery

Use this procedure if an error occurred when you installed an i5/OS licensed program, PTF, or secondary language.

1. Type G0 LICPGM on an i5/OS control language (CL) command line.
2. On the Work with Licensed Programs menu, type 50 (Display log for messages). Press Enter.
3. The Display Install History display appears. Press Enter.
4. The Display History Log Contents display appears. Look at the messages to determine the installation status of the licensed programs and PTFs. The messages show what part of the licensed program installation function has failed. Areas where the failure could have occurred include the following:
 - Installing the IBM-supplied libraries
 - Installing the licensed programs
 - Installing PTFs
 - Installing a secondary language
 - Initialization process

If a problem such as a power failure occurs during a process in the preceding list, you could see a message that the process has started. An example of such a message is Licensed program installation process started. However, the failed or completed status message might not be displayed.

5. There should be one or more messages that indicate which IBM-supplied library or licensed program failed. Be sure to look at all of the messages. Use F10 (Display all) to see all messages.
6. To see the online help information, move the cursor to the message and press the Help key. Look at the online help information for the error message to get

the message identifier and more information about the cause and recovery for the failure. Go to the error messages table in this topic to review the list of possible messages that you could see.

7. A copy of the job log has been spooled to an output queue.

To locate and display the job log, enter one of the following Work with Spool File (WRKSPLF) commands:

- For automatic installation, type the following command and press Enter:
WRKSPLF SELECT(QLPAUTO) ASTLVL(*INTERMED)
- For manual installation, type the following command and press Enter:
WRKSPLF SELECT(QSECOFR) ASTLVL(*INTERMED)
- For the PTF process, type the following command and press Enter: WRKSPLF
SELECT(QSYS *ALL *ALL SCPF) ASTLVL(*INTERMED)

If the bottom of the display shows More..., page down (Roll up) until Bottom... appears. Select option 5 (5=Display) on the last entry.

Note: Ignore any error messages listed in the nnnnnn/QSYS/QLPINSTALL job log. These messages are not installation error messages.

Scan the job log for error messages. Determine the cause and recovery for each error message in the job log. Go to the error messages table in this topic for a list of possible messages that you might see. Be sure to scan the entire job log. There could be more than one failure. Scan the job log by using the message ID. Remember that the message ID is case-sensitive.

8. Select option 10 (Display installed licensed programs) on the Work with Licensed Programs display. The Installed Status column indicates which licensed programs and optional parts are installed. The Installed Status column also indicates whether each licensed program installed successfully and whether it is compatible with the installed operating system. Refer to “Installed status values” on page 219 for a description of the installed status values.

You can press the F11 key to see a view of the display that shows the Installed Release column. The version, release, and modification value appears for licensed programs that are either installed compatibly or are installed at a back level. Page down (Roll up) through all of the displays to see the status of your licensed programs.

Check to see if the licensed program that you are installing had a different language feature code than your primary language feature code. If it does, the licensed program either is flagged as *ERROR or the column is blank. The language objects for the licensed program are installed in a secondary language library. Obtain distribution media with the correct primary language feature code. Press the F3 key to return to the Work with Licensed Programs menu.

9. After you determine the cause of the error and complete the recommended recovery action, resume the installation process. If you were using automatic installation, go to “Starting the automatic installation process again” on page 171. If you were using the manual installation process, go to “Starting the manual installation process again” on page 172.

The following table contains some of the error messages with possible causes of the errors. Look at the messages on your system to determine the exact cause and recovery.

Error messages	
Message	Description
CPA3DD2 CPA3DD3	<p>Cause: The system could not identify the last volume loaded in the device.</p> <p>Recovery: Open the device door, verify that correct volume is loaded, and close the device door.</p>
CPA3DDD CPA3DDF	<p>Cause: The installation process is expecting more licensed programs to be loaded.</p> <p>Recovery: If you have more media that contains licensed programs, load the volume and type G to continue the installation process. If you do not have any more volumes that contain licensed programs, type X to indicate that there is no more media to load. When the installation process is completed, use option 50 of the LICPGM menu to verify messages in the installation history log.</p>
CPA3DE1	<p>Cause: The volume that is loaded does not contain licensed programs that are supported through the Work with Licensed Programs (LICPGM) menu.</p> <p>Recovery: Load the optical media that contains licensed programs.</p>
CPDB6DA	<p>Cause: During a manual installation, the software agreement for a licensed program was not accepted and cannot be installed.</p> <p>Recovery: Follow the instructions in “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128 to accept the software agreement and retry the installation.</p>
CPDB6DB	<p>Cause: During an automatic installation, the software agreement for a licensed program was not accepted and cannot be installed.</p> <p>Recovery: Follow the instructions in “Using the Work with Licensed Programs menu to install IBM licensed programs” on page 128 to accept the software agreement and retry the installation.</p>
CPD4F39	<p>Cause: The volumes located in a network optical device are not in the correct sort order for the program temporary fix (PTF) package application.</p> <p>Recovery: Follow these steps:</p> <ol style="list-style-type: none"> 1. Find the catalog that owns the images loaded in the device. 2. Use the Verify Image Catalog (VFYIMGCLG) command to sort the volume list for the type Program Temporary Fix. 3. Use the Vary Configuration (VFYCFG) command to vary off and vary on the device.
CPF3DC1	<p>Cause: Directory objects for product 5761SS1 option *BASE release V6R1M0 failed to install. The system will not install library QGPL and will not allow licensed programs to be installed until the directory objects have been installed.</p> <p>Recovery: See previous messages in the job log to determine the cause of the failure. Correct the errors</p>

Error messages	
Message	Description
CPF3DC2	<p>Cause: Required user library cannot be installed. The system will not install library QGPL and will not allow licensed programs to be installed because the operating system directory installation was not successful.</p> <p>Recovery:Examine the history log for errors that occurred while operating system directories were being installed. Correct the errors.</p>
CPD32B0 reason code 7 CPF327E reason code 3	<p>Cause: 5761SS1 option 1, Extended Base Support, failed to install.</p> <p>Recovery: Use the Reclaim Storage (RCLSTG) command and try to install option 1 again.</p>
CPD3713	<p>Cause: The licensed program is currently installed on your system and was not found on the distribution media.</p> <p>Recovery: Get another set of distribution media that contains the licensed program. Either install the licensed program again from "Installing additional licensed programs" on page 127 or delete the licensed program from your system if you no longer want it.</p>
CPD3D82 CPF3D8F	<p>Cause: These messages could be shown if you did not end all of the subsystems before you started the installation process.</p> <p>Recovery: End all subsystems and start installing the licensed programs again.</p>
CPF371C CPF3731	<p>Cause: Look at the messages previously listed in the job log to determine the failure.</p> <p>Recovery: Take the recommended recovery action.</p> <p>If you received one of these messages, the installation process ended before you completed installing the licensed programs.</p>
CPF371D CPF371E	<p>Cause: These messages could be shown if the wrong volume is loaded. The online information of the message can help determine the cause.</p> <p>Recovery: Load the correct volume and start the process again.</p>
CPF3D96	<p>Cause: Errors occurred during the restoring process for a licensed program.</p> <p>Recovery: Take the recommended recovery action explained in the online help information.</p> <p>If you received these messages, the installation continued with the other licensed programs if the problem was not too severe. However, problems with the tape or system storage level would have caused the installation to end.</p>

Error messages	
Message	Description
CPF3D81 CPF3D84 CPF3D8B CPF3D8C CPF3D90 CPF3D91	<p>Cause: Errors occurred when restoring a licensed program or PTFs.</p> <p>Recovery: Use the Display Job (DSPJOB) command. Enter DSPJOB nnnnnn/QLPINSTALL/QBCHINST or DSPJOB nnnnnn/QLPINSTALL/QLPINSTALL where nnnnnn is the job number of the job log in the message help of the error message. Select option 4 on the Display Job display to display spooled files. Select option 5 on the Display Job Spooled Files display to determine the cause of the failure. Correct the error and start the installation process again. Ignore error messages in the nnnnnn/QSYS/QLPINSTALL job log. These messages are not installation error messages.</p>
CPF3D82 CPF3D83	<p>Cause: There is not enough auxiliary storage to install the licensed programs that you selected.</p> <p>Recovery: Go to “Licensed program releases and sizes” on page 181 to determine the space requirements for each licensed program that you want to install. Obtain additional auxiliary storage and start the installation process again.</p>
CPF3D85 CPF3D86 CPF3D8E	<p>Cause: An object or PTF is not installed because it requires successful installation of a licensed program. That licensed program might not be installed or might be installed at the wrong release.</p> <p>Recovery: See the previous messages in the job log to determine if the licensed program is installed successfully. Correct any errors or install the required licensed program and start the installation process again.</p>
CPF3DD3	<p>Cause: The device description could not be found or could not be used.</p> <p>Recovery: Create a device description for the installation device (optical or tape). Use the CRTOPTDEV command to create a device description for the optical device that supports the optical media class. Use the CRTDEVTAP command to create a device description for the tape device. Then start the process again.</p>
CPI3D82 CPI3D84 CPI3D85	<p>Cause: A licensed program that is included on the distribution media was not currently installed on the system.</p> <p>Recovery: Use the online information of the message for recovery help. Use the topic “Installing additional licensed programs” on page 127 to install the licensed program.</p>
Media error messages	<p>Cause: A media error occurred during the installation process.</p> <p>Recovery: If you are using optical media, clean the disc, and then follow the recovery actions that are indicated for this message. If you are using tape, clean the tape head and tape path thoroughly. If you receive another error message that indicates a media error on the same tape, get another set of tapes to complete the installation.</p>

Starting the automatic installation process again

If you want to start the i5/OS automatic installation process again after recovering from an error, use one of these methods.

Methods for starting the automatic installation process again	
Method	Instructions
Method 1: Licensed Internal Code	<p>When to use: This method should be used if the Licensed Internal Code needs to be installed again. If you are sure the Licensed Internal Code has been successfully installed, you do not need to use this method. No message indicates that the Licensed Internal Code has been installed successfully; however, messages do indicate that the operating system has been installed successfully. If the operating system has been installed successfully, so has the Licensed Internal Code.</p> <p>How to use: To start an installation process again, use the instructions in Chapter 6, “Upgrading or replacing software using automatic installation,” on page 57.</p>
Method 2: Operating System	<p>When to use: If you are sure the Licensed Internal Code has been installed successfully, use Method 2 to install the operating system again. Method 2 is faster than using Method 1 because the Licensed Internal Code does not need to be installed again. No message indicates that the Licensed Internal Code has been installed successfully; however, messages do indicate that the operating system has been installed successfully. If the operating system has been installed successfully, so has the Licensed Internal Code.</p> <p>How to use:</p> <ol style="list-style-type: none"> 1. Use the control panel to set the mode selector to Manual. The function selected should be 03 (Start IPL). If you are upgrading a logical partition, use the virtual control panel function of your primary partition or HMC. 2. Start the IPL. 3. Load the volume B29xx_01 in the installation device. 4. When the IPL or Install the System display is shown, set the mode selector to Normal. 5. Select option 4 (Perform an automatic install of the operating system) on the IPL or Install the System display. 6. Continue with step 11 (begins with loading the next volume (B29xx_01) under “Replacing software using the automatic installation method” on page 58.
Method 3: Licensed Programs	<p>When to use: Use the Work with Licensed Programs display to install only the licensed programs that failed to install. Make sure the Licensed Internal Code and the operating system are successfully installed.</p> <p>How to use: Determine which products failed to install. Use option 11 (Install licensed programs) on the Work with Licensed Programs display. To install the licensed programs from a list, refer to “Installing additional licensed programs” on page 127.</p>

Starting the manual installation process again

If you want to start the i5/OS manual installation process again after you recover from an error while installing licensed programs, PTFs, or secondary languages, use one of these methods.

Methods for starting the manual installation process again	
Method	Instructions
Method 1	<p>When to use: This method should be used if several licensed programs are not installed.</p> <p>How to use: To start an installation process again using method 1, use option 1 (Install all) on the Work with Licensed Programs display. Refer to “Manual installation Option 1. Install all” on page 222.</p>
Method 2	<p>When to use: This method should be used if one or more licensed programs are not installed and you want to install only those licensed programs or optional parts that failed.</p> <p>How to use: To start the installation of only those licensed programs or optional parts that failed, use the instructions in “Installing additional licensed programs” on page 127. Complete all of the instructions in that part.</p>
Method 3	<p>When to use: This method can be used if only one or two licensed programs had PTFs that failed to install. Consider installing PTFs for only those licensed programs that failed.</p> <p>How to use: To install PTFs for selected licensed programs, use the GO PTF menu and select option 7 (Install a program temporary fix from a list).</p>
Method 4	<p>When to use: This method should be used if several licensed programs had PTFs that failed to install. Consider installing the entire cumulative PTF package again.</p> <p>How to use: To install the cumulative PTF package, use the instructions in the <i>System PTF Shipping Information Letter</i>.</p>

Initialize System (INZSYS) recovery

In an i5/OS software upgrade, the installation is complete when the licensed program portion of the installation process and the INZSYS process is completed successfully. If the INZSYS process did not complete, follow these procedures.

The installation process must end before the INZSYS process is automatically started. This process is initiated during each IPL after you install the QUSRSYS library until the INZSYS process has successfully completed. The INZSYS process will not be initiated during the IPL if the system is in the restricted state. If the INZSYS process is initiated during the IPL, it runs in the SCPF system job.

Note: If you perform an IPL before installing a cumulative PTF package, make sure that the INZSYS process has completed before you start to install the PTF package. Using any PTF commands before the INZSYS process is completed causes the INZSYS to fail.

The completion time for INZSYS varies. Allow sufficient time for this process to complete.

When you select option 50 (Display log for messages) on the Work with Licensed Programs menu, you should see the message Initialize System (INZSYS) started. Later, you should see the message Initialize System (INZSYS) processing completed successfully (CPC37A9). If you do not see the completed message, or if the message Initialize System (INZSYS) failed appears, look at the job log to determine the problem. Use the information in the job log to correct the problem. Then start the conversion process again.

To start the conversion process yourself, you can either use a batch job or enter INZSYS on the i5/OS control language (CL) command line. If you use a batch job, you can use your workstation while the process is running, but the system cannot be in a restricted state. Batch jobs do not run when the system is in a restricted state. If you enter INZSYS from a CL command line, IBM recommends that the system be in a restricted state. Setting the system to a restricted state reduces the time that is needed for the INZSYS process to complete. Before you use the INZSYS command, set the mode selection to **Normal** and set the IPL type to **B** (or the IPL type that you use for everyday operation).

To set the system to restricted state, do the following:

1. Type `CHGMSGQ QSYSOPR *BREAK SEV(60)` and press Enter.
2. A message display could be shown. Press Enter. (Ignore the messages that are shown.)
3. Type the End Subsystem (ENDSBS) command: `ENDSBS *ALL *IMMED`.
The message System ended to restricted condition appears.
Press Enter to continue.

To start the conversion process again, do the following:

1. Type INZSYS and press Enter.
2. Use option 50 (Display log for messages) on the Work with Licensed Programs menu to make sure that the process is completed successfully.

Do not attempt to save your system until the INZSYS process has completed successfully.

Disk configuration warning and error messages

You see a disk configuration warning or an error report on a display when your system detects errors or warning conditions in your disk configuration. You might see this display immediately after the hardware upgrade procedure or while you are installing the i5/OS operating system.

Perform the actions necessary if you see a disk configuration warning or an error report. The action you take for each message depends on the upgrade method that you are using. The following table lists the messages that you might see on the display and the actions that you should take. For each message, you can select option 5 (Display Detailed Report) to see more information about why the message occurred and what possible actions are available.

Attention: Are you using Option 1? When you are installing the Licensed Internal Code by using option 1 from the Install the Licensed Internal Code (LIC) menu, disk configuration warning messages might mean that the system will not be able to recover its ability to access the data on your disk units. **Important:** Do not ignore these messages or attempt to resolve them without consulting the table. An incorrect response will probably require you to reload your data.

Disk configuration warning messages	
Warning messages	Your action: Option 1 (Restore Licensed Internal Code)
Disk unit not formatted for optimal performance	Do the following: 1. Type a 5 (Display Detailed Report). 2. Write down the disk units that should be reformatted. 3. Press F12 to return to the warning report display. 4. Press F10 to accept the warning and continue. You cannot reformat the disk units during the upgrade procedure.
Unit possibly configured for PowerPC® AS	Contact software support before you proceed.
Unit possibly configured for IMPI	Contact software support before you proceed.
Missing disk configuration	Contact hardware support before you proceed.
Unknown load source status	Contact hardware support before you proceed.
Load source failure	Contact hardware support before you proceed.
Restore load source	Contact software support before you proceed.
Missing disk units in the configuration	Contact hardware support before you proceed.
Restore in progress	View the online information and take the appropriate recovery action.
Device parity protected units in exposed mode	You have a failed unit in a parity set. You can ignore this message and continue the upgrade procedure. However, you should contact hardware support immediately after the upgrade procedure.
No alternatives available	Contact software support before you proceed.
New disk configuration	Contact software support before you proceed.
Incorrect Licensed Internal Code installed	Contact hardware support before you proceed. The load-source disk unit and its mirrored pair might be configured incorrectly.
Change load source location	Contact hardware support before you proceed. Your load-source disk unit might be configured incorrectly.
Bad load source configuration	Contact hardware support before you proceed. Your load-source disk unit might be configured incorrectly.
Overflowed ASPs	Wait to correct the problem until after the upgrade process is completed. For further instructions, refer to Resetting an overflowed user auxiliary storage pool (ASP) during an initial program load (IPL) in the i5/OS Information Center.
Lower level of protection	Ignore during the installation procedure. However, you should analyze your mirrored configuration after the installation procedure.

Disk configuration warning messages	
Warning messages	Your action: Option 1 (Restore Licensed Internal Code)
Logical partition configuration error (only System i 8xx or earlier models)	<p>Do the following:</p> <ol style="list-style-type: none"> 1. Type 5 (Display Detailed Report). 2. Write down the disk units that contain the error. 3. Press F12 to return to the warning report display. 4. Press F10 to accept the warning and continue. <p>Refer to Troubleshooting logical partitions in the i5/OS Information Center.</p>
Unit is missing connection.	Contact hardware support before you proceed.

Starting from a power-off condition

If your system must be powered on, perform these steps.

1. Use the control panel to set the IPL type to **B** and to either one of these modes:
 - **Normal**. On some models, this will appear as **BN**.
 - **Manual**. On some models, this will appear as **BM**
2. Press Enter on the control panel.
3. On your console, ensure that you have a connection to the system.

Reference codes for i5/OS software installation

If a reference code appeared during the automatic or manual installation, use these procedures.

This information gives a brief explanation of the common reference codes (also known as system reference codes or SRCs) that you might see while upgrading or replacing a release.

Common reference codes for i5/OS software installation

This table identifies the most common reference codes related to an i5/OS software installation or upgrade.

If you are looking at reference codes on a system with logical partitions, the reference code gives an indication of the type of partition to which it pertains. For example, the reference code B1xx xxxx indicates a primary partition. The reference code B2xx xxxx indicates a secondary partition.

Table 9. Common reference codes

Symptom	Action
A1xx 19xx A12x 19xx (x is any character)	<p>These reference codes appear if the installation device for an alternate IPL is not ready. Check the following:</p> <ul style="list-style-type: none"> • Is the correct media volume loaded? • Is the device ready? • Is the device being used for a different purpose than the device was used for during the previous IPL? • Is the installation media loaded in the alternate IPL or alternate installation device allocated for that partition? <p>Any of these situations can cause these reference codes to appear. In the first two examples, ensure that the media volume is loaded correctly and that the device is ready. In the last example, you need to wait while the system finds the new installation device.</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes” on page 178.</p>
A600 1103	<p>This reference code appears when Licensed Internal Code is damaged. Use the control panel or virtual control panel (Work with Partition Status display) to set the IPL type to D and to set the mode to Manual. Then use the instructions for Chapter 7, “Upgrading or replacing software using manual installation,” on page 67.</p>
A600 1104	<p>This reference code appears if the installation media is not readable. Either the media is dirty or damaged, or there is an error with the optical device. Clean the media or acquire a new set of media.</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes” on page 178.</p>
B101 4500	<p>This reference code appears when an error is detected with the System i integration with BladeCenter and System x solution.</p> <p>Make sure that you vary off the integrated server before you perform the function that resulted in this reference code. If the reference code still occurs, try the installation again. If the same error occurs again, contact your authorized service provider.</p> <p>Note: System i integration with BladeCenter and System x solution is the new name for Integrated xSeries® Server for iSeries, Integrated PC Server (IPCS), or File Server Input/Output Processor (FSIOP).</p>
B1xx 4504 B1xx 1933	<p>This reference code appears when the system cannot locate the device used for the alternate IPL. Check that the installation media is loaded in correct device and, if necessary, make the device ready.</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes” on page 178.</p>
B1xx 4505	<p>These reference codes appear if the installation media is dirty or if the wrong media was loaded. Verify that the correct media is loaded. If the problem still remains, clean the optical disk. If you are using tape, clean the tape head and tape path.</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes” on page 178.</p>

Table 9. Common reference codes (continued)

Symptom	Action
B1xx 4507	<p>These reference codes appear if the tape device for the alternate IPL was not found or was not ready. Make sure the tape device is powered on and the correct tape is loaded and ready. To make tape devices ready, you might need to open and close the tape device door.</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes” on page 178.</p>
B2pp 1310 (pp is the partition ID)	<p>No alternate IPL device IOP was selected. The IPL will attempt to continue, but there might not be enough information to find the correct alternate IPL load source. Configure an alternate IPL device IOP for the logical partition. Then, retry the partition IPL. If it continues to fail, contact your service provider.</p> <p>For System i 8xx models that support i5/OS V6R1, refer to Manage logical partitions in the i5/OS Information Center for more information. For all other systems, see Logical partitioning in the IBM Systems Hardware Information Center.</p>
B2pp 1320 (pp is the partition ID)	<p>No default load source IOP was selected for a type A or type B IPL. The IPL will attempt to continue, but there might not be enough information to find the correct load source. Configure a load source IOP for the logical partition. Then retry the partition IPL. If it continues to fail, contact your service provider.</p> <p>For System i 8xx models that support i5/OS V6R1, refer to Manage logical partitions in the i5/OS Information Center for more information. For all other systems, see Logical partitioning in the IBM Systems Hardware Information Center.</p>
B2pp 3110 (pp is the partition ID)	<p>The power-on operation for the logical partition failed. Scan the reference code history list of the logical partition for previous B2ppxxxx failure reference codes. Resolve each problem found, and then retry the partition IPL. If it continues to fail, contact your service provider.</p>
B2pp 3200 (pp is the partition ID)	<p>The logical partition failed to initialize a program load.</p> <ol style="list-style-type: none"> 1. If you performed a power-on operation from IPL type D, remove the installation media (optical or tape media), clean the device and clean the media if possible. Insert the media again and attempt to power on using IPL type D. 2. Verify that the device is addressed correctly. 3. Verify that the media is in the correct device. 4. Verify that the media in the device is compatible. 5. Verify that the IOP selected as the IPL resource is correct. 6. Retry the partition IPL.
B2xx xxxx	<p>All other reference codes: If you performed a D-mode IPL, clean the device and media, and then retry the same type of power-on operation. For more information, refer to the following topics:</p> <ul style="list-style-type: none"> • For System i 8xx models that support i5/OS V6R1, see Logical partitions in the i5/OS Information Center. • For all other systems, see Logical partitioning in the IBM Systems Hardware Information Center.

Table 9. Common reference codes (continued)

Symptom	Action
B608 1105	<p>This reference code occurs when you exit from the automatic installation because an alternate installation device that is attached to the system has one of the following problems:</p> <ul style="list-style-type: none"> • The device is enabled, but it is not ready because the tape is not loaded. • The device is not enabled as an alternate installation device. • The device itself has a problem. <p>To use the alternate installation device, do the following:</p> <ol style="list-style-type: none"> 1. Power off the system. 2. If necessary, fix the device. 3. Power on the system. 4. Verify that the alternate installation device is enabled as an alternate installation device. 5. Load the tape media in the alternate installation device and start the installation procedure again.
B900 3121	<p>This reference code occurs when an IPL is attempted after an installation failure. You need to reinstall some or all of the operating system. Start with the media volume containing the base operating system. (For optical media, this volume is labeled B29xx_01.)</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes.”</p>
2644 3136	<p>This reference code appears if the tape device is assigned to another system or partition. Go to the other system or partition and vary off this tape device. Make sure the correct tape is loaded.</p> <p>Then perform the appropriate procedure under “i5/OS installation recovery after using reference codes.”</p>
Any other reference code	<p>Go to Chapter 14, “Troubleshooting software installation problems,” on page 157, and follow the instructions there.</p>

i5/OS installation recovery after using reference codes

After taking the corrective action for a reference code, perform one of these procedures to continue the i5/OS installation or upgrade. Use the procedure that is appropriate for the installation process that was in use when the reference code appeared.

If you used automatic installation:

1. Set the mode selector or toggle on the control panel to **Manual**.
2. Press the power switch to delayed off, press it again, and wait for the entire system to power off.
3. Set the mode selector or toggle on the control panel to **Normal**.
4. Press the power switch on and make the installation device ready. If the system attention light appears and the same reference code appears again, go to “Licensed Internal Code recovery” on page 162. Otherwise, continue with step 11 on page 61.

If you used manual installation:

1. Make sure that the media is loaded in the installation device for the alternate IPL.
2. Press the power switch to delayed off, press it again, and wait for the entire system to power off.
3. Press the power switch on and make the installation device ready. If the system attention light appears and the same reference code appears again, go to "Licensed Internal Code recovery" on page 162. Otherwise, continue with step 11 on page 71.

Chapter 15. i5/OS software reference

This topic contains a collection of supporting information about the concepts and tasks related to upgrading or installing i5/OS software.

Licensed program releases and sizes

The following licensed programs are available this release and are compatible with the i5/OS operating system.

To help you plan for installing your new release, use this information to find the release and current size of the licensed programs that are listed.

Product	Option	Version	Status	Storage (MB)	Description
5761	9999	V6R1M0	Refreshed	4080.0	Licensed Internal Code
5761	SS1 Base (QGPL, QUSRSYS, QSYS)	V6R1M0	Refreshed	3012.6	i5/OS
5761	SS1 option 1	V6R1M0	Refreshed	175.5	Extended Base Support
5761	SS1 option 2	V6R1M0	Refreshed	44.3	Online Information
5761	SS1 option 3	V6R1M0	Refreshed	2315.0	Extended Base Directory Support
5761	SS1 option 5	V6R1M0	Refreshed	25.5	System/36 Environment
5761	SS1 option 6	V6R1M0	Refreshed	13.1	System/38 Environment
5761	SS1 option 7	V6R1M0	Refreshed	10.2	Example Tools Library
5761	SS1 option 8	V6R1M0	Refreshed	18.5	AFP Compatibility Fonts
5761	SS1 option 9	V6R1M0	Refreshed	92.6	*PRV CL Compiler Support
5761	SS1 option 12	V6R1M0	Refreshed	18.6	Host Servers
5761	SS1 option 13	V6R1M0	Refreshed	424.8	System Openness Includes
5761	SS1 option 14	V6R1M0	Refreshed	15.6	GDDM
5761	SS1 option 18	V6R1M0	Refreshed	1.9	Media and Storage Extensions
5761	SS1 option 21	V6R1M0	Refreshed	117.9	Extended G11N Support
5761	SS1 option 22	V6R1M0	Refreshed	3.4	ObjectConnect
5761	SS1 option 23	V6R1M0	Refreshed	10.9	OptiConnect
5761	SS1 option 26	V6R1M0	Refreshed	1.0	DB2 Symmetric Multiprocessing
5761	SS1 option 27	V6R1M0	Refreshed	1.2	DB2 Multisystem
5761	SS1 option 29	V6R1M0	Refreshed	111.5	Integrated Server Support
5761	SS1 option 30	V6R1M0	Refreshed	17.5	Qshell
5761	SS1 option 31	V6R1M0	Refreshed	38.2	Domain Name System
5761	SS1 option 33	V6R1M0	Refreshed	368.3	Portable App Solutions Environment
5761	SS1 option 34	V6R1M0	Refreshed	36.0	Digital Certificate Manager
5761	SS1 option 35	V6R1M0	Refreshed	26.5	CCA Cryptographic Service Provider

Product	Option	Version	Status	Storage (MB)	Description
5761	SS1 option 36	V6R1M0	Refreshed	1.1	PSF for i5/OS 1-55 IPM Printer Support
5761	SS1 option 37	V6R1M0	Refreshed	1.0	PSF for i5/OS 1-100 IPM Printer Support
5761	SS1 option 38	V6R1M0	Refreshed	1.0	PSF for i5/OS Any Speed Printer Support
5761	SS1 option 39	V6R1M0	Refreshed	488.8	International Components for Unicode
5761	SS1 option 41	V6R1M0	Refreshed	1.1	HA Switchable Resources
5761	SS1 option 42	V6R1M0	Refreshed	1.2	HA Journal Performance
5761	SS1 option 43	V6R1M0	Refreshed	644.4	Additional Fonts
5761	SS1 option 44	V6R1M0	New	1.1	Encrypted Backup Enablement
5761	SS1 option 45	V6R1M0	New	0.9	Encrypted ASP Enablement
5761	SS1 option 46	V6R1M0	New	9.6	Performance Viewer Open Source Components
5761	AF1 base	V6R1M0	Refreshed	19.8	IBM Advanced Function Printing Utilities
5761	AP1 base	V6R1M0	Refreshed	15.9	IBM Advanced DBCS Printer Support for iSeries
5761	AP1 option 1	V6R1M0	Refreshed	2.0	Adv DBCS Printer Support - IPDS
5761	BR1 base	V6R1M0	Refreshed	240.2	IBM Backup Recovery and Media Services for i5/OS
5761	BR1 option 1	V6R1M0	Refreshed	1.1	BRMS - Network Feature
5761	BR1 option 2	V6R1M0	Refreshed	0.9	BRMS - Advanced Feature
5722	BZ1 base	V5R1M0	Ship level	8.6	IBM Business Solutions
5761	CM1 base	V6R1M0	Refreshed	14.4	IBM Communications Utilities for System i
5761	DB1 base	V6R1M0	Refreshed	82.5	IBM System/38 Utilities for System i
5761	DE1 base	V6R1M0	Refreshed	1.8	IBM DB2 Extenders™ Version 9.1 for i5/OS
5761	DE1 option 1	V6R1M0	Refreshed	29.5	DB2 Text Extender
5761	DE1 option 2	V6R1M0	Refreshed	30.2	DB2 XML Extender
5761	DE1 option 3	V6R1M0	Refreshed	115.6	Text Search Engine
5761	DFH base	V6R1M0	Refreshed	52.5	IBM CICS® Transaction Server for i5/OS
5761	DFH option 1	V6R1M0	Refreshed	8.5	CICS - Sample Applications
5761	DG1 base	V6R1M0	Refreshed	96.3	IBM HTTP Server for i5/OS
5761	DG1 option 1	V6R1M0	Refreshed	16.3	Triggered Cache Manager
5761	DP4 base	V6R1M0	Refreshed	21.9	IBM DB2 DataPropagator for iSeries, V8.1
5761	DS2 base	V6R1M0	Refreshed	8.7	IBM Business Graphics Utility for System i

Product	Option	Version	Status	Storage (MB)	Description
5769	FN1 base	V4R2M0	Ship level	2.0	IBM Advanced Function Printing DBCS Fonts for AS/400
5769	FN1 option 1	V4R2M0	Ship level	100.2	AFP DBCS Fonts - Japanese
5769	FN1 option 2	V4R2M0	Ship level	35.3	AFP DBCS Fonts - Korean
5769	FN1 option 3	V4R2M0	Ship level	18.6	AFP DBCS Fonts - Traditional Chinese
5769	FN1 option 4	V4R2M0	Ship level	12.4	AFP DBCS Fonts - Simplified Chinese
5769	FN1 option 5	V4R2M0	Ship level	6.1	AFP DBCS Fonts - Thai
5769	FNT base	V4R2M0	Ship level	2.0	IBM Advanced Function Printing Fonts for AS/400
5769	FNT option 1	V4R2M0	Ship level	8.3	AFP Fonts - Sonoran Serif
5769	FNT option 2	V4R2M0	Ship level	6.8	AFP Fonts - Sonoran Serif Headliner
5769	FNT option 3	V4R2M0	Ship level	8.1	AFP Fonts - Sonoran Sans Serif
5769	FNT option 4	V4R2M0	Ship level	6.7	AFP Fonts - Sonoran Sans Serif Headliner
5769	FNT option 5	V4R2M0	Ship level	6.4	AFP Fonts - Sonoran Sans Serif Condensed
5769	FNT option 6	V4R2M0	Ship level	5.4	AFP Fonts - Sonoran Sans Serif Expanded
5769	FNT option 7	V4R2M0	Ship level	6.1	AFP Fonts - Monotype Garamond
5769	FNT option 8	V4R2M0	Ship level	6.5	AFP Fonts - Century Schoolbook
5769	FNT option 9	V4R2M0	Ship level	2.6	AFP Fonts - Pi and Specials
5769	FNT option 10	V4R2M0	Ship level	6.14	AFP Fonts - ITC Souvenir
5769	FNT option 11	V4R2M0	Ship level	6.3	AFP Fonts - ITC Avant Garde Gothic
5769	FNT option 12	V4R2M0	Ship level	5.7	AFP Fonts - Math and Science
5769	FNT option 13	V4R2M0	Ship level	1.7	AFP Fonts - DATA1
5769	FNT option 14	V4R2M0	Ship level	2.4	AFP Fonts - APL2®
5769	FNT option 15	V4R2M0	Ship level	1.6	AFP Fonts - OCR A and OCR B
5761	HAS base	V6R1M0	New	35.8	IBM System i High Availability Solutions Manager
5722	IP1 base	V5R3M0	Ship level	85.7	IBM Infoprint Server for iSeries
5722	IP1 option 1	V5R3M0	Ship level	1.4	PS to AFP Transform
5761	JC1 base	V6R1M0	Refreshed	41.1	IBM Toolbox for Java
5761	JS1 base	V6R1M0	Refreshed	105.6	IBM Advanced Job Scheduler for i5/OS
5761	JV1 base	V6R1M0	Refreshed	34.7	IBM Developer Kit for Java

Product	Option	Version	Status	Storage (MB)	Description
5761	JV1 option 6	V6R1M0	Refreshed	176.6	Java Developer Kit 1.4
5761	JV1 option 7	V6R1M0	Refreshed	46.4	Java Developer Kit 5.0
5761	JV1 option 8	V6R1M0	Refreshed	250.0	J2SE 5.0 32 bit
5761	JV1 option 9	V6R1M0	New	256.7	J2SE 5.0 64 bit
5761	JV1 option 10	V6R1M0	New	266.8	Java SE Development Kit 6
5761	JV1 option 11	V6R1M0	New	411.5	Java SE 6 32 bit
5761	JV1 option 12	V6R1M0	New	408.5	Java SE 6 64 bit
5761	LSV base	V6R1M0	Refreshed	16.9	IBM Extended Integrated Server Support for i5/OS
5761	MG1 base	V6R1M0	Refreshed	40.8	IBM Managed System Services for i5/OS
5761	NAE base	V6R1M0	Refreshed	172.4	IBM Network Authentication Enablement for i5/OS
5761	PT1 base	V6R1M0	Refreshed	12.9	IBM Performance Tools for i5/OS
5761	PT1 option 1	V6R1M0	Refreshed	17.0	Performance Tools - Manager Feature
5761	PT1 option 2	V6R1M0	Refreshed	2.3	Performance Tools - Agent Feature
5761	PT1 option 3	V6R1M0	New	0.9	Performance Tools - Job Watcher
5761	PT1 option 4	V6R1M0	New	0.9	Performance Tools - Reserved
5761	PT1 option 5	V6R1M0	New	0.9	Performance Tools - Reserved
5761	QU1 base	V6R1M0	Refreshed	11.6	IBM Query for i5/OS
5761	RD1 base	V6R1M0	Refreshed	25.7	IBM DB2 Content Manager OnDemand for i5/OS
5761	RD1 option 10	V6R1M0	Refreshed	122.2	OnDemand Common Server Feature
5761	RD1 option 11	V6R1M0	Refreshed	49.0	OnDemand Web Enablement Kit
5761	RD1 option 12	V6R1M0	Refreshed	0.3	OnDemand PDF Indexer Feature
5733	SC1 base	V6R1M0	Refreshed	3.2	IBM Portable Utilities for i5/OS
5733	SC1 option 1	V6R1M0	Refreshed	124.8	OpenSSH, OpenSSL, zlib functions
5761	SM1 base	V6R1M0	Refreshed	8.0	IBM System Manager for i5/OS
5761	ST1 base	V6R1M0	Refreshed	20.6	IBM DB2 Query Manager and SQL Development Kit for i5/OS
5761	TC1 base	V6R1M0	Refreshed	43.9	IBM TCP/IP Connectivity Utilities for i5/OS
5761	TS1 base	V6R1M0	New	4.4	IBM Transform Services for i5/OS
5761	TS1 option 1	V6R1M0	New	21.5	Transforms - AFP to PDF Transform

Product	Option	Version	Status	Storage (MB)	Description
5722	UME base	V1R2M0	New	288.4	IBM Universal Manageability Enablement for i5/OS
5722	VI1 base	V5R3M0	Ship level	25.5	IBM Content Manager for iSeries
5722	VI1 option 1	V5R3M0	Ship level	85.0	Content Manager for iSeries
5722	VI1 option 2	V5R3M0	Ship level	46.5	Content Manager for iSeries
5722	VI1 option 3	V5R3M0	Ship level	¹	Content Manager for iSeries Client for Windows
5722	VI1 option 4	V5R3M0	Ship level	¹	Content Manager for iSeries Workflow Builder
5761	WDS base	V6R1M0	Refreshed	31.4	IBM WebSphere Development Studio for System i
5761	WDS option 21	V6R1M0	Refreshed	38.8	Application Development ToolSet
5761	WDS option 31	V6R1M0	Refreshed	16.5	ILE RPG
5761	WDS option 32	V6R1M0	Refreshed	7.4	System/36 Compatible RPG II
5761	WDS option 33	V6R1M0	Refreshed	7.2	System/38 Compatible RPG III
5761	WDS option 34	V6R1M0	Refreshed	7.7	RPG/400 [®]
5761	WDS option 35	V6R1M0	Refreshed	23.8	ILE RPG *PRV Compiler
5761	WDS option 41	V6R1M0	Refreshed	25.2	ILE COBOL
5761	WDS option 42	V6R1M0	Refreshed	8.3	System/36 Compatible COBOL
5761	WDS option 43	V6R1M0	Refreshed	7.4	System/38 Compatible COBOL
5761	WDS option 44	V6R1M0	Refreshed	9.1	OPM COBOL
5761	WDS option 45	V6R1M0	Refreshed	47.3	ILE COBOL *PRV Compiler
5761	WDS option 51	V6R1M0	Refreshed	13.0	ILE C
5761	WDS option 52	V6R1M0	Refreshed	41.1	ILE C++
5761	WDS option 56	V6R1M0	Refreshed	2.0	IXLC for C/C++
5761	WDS option 60	V6R1M0	Refreshed	0.3	Workstation Tools - Base
5761	XE1 base	V6R1M0	Refreshed	497.9	IBM System i Access for Windows
5761	XH2 base	V6R1M0	Refreshed	354.9	IBM System i Access for Web
5722	XP1 base	V5R3M0	Ship level	2.6	IBM System i Access for Wireless
5761	XW1 base	V6R1M0	Refreshed	2.1	IBM System i Access Family
5761	XW1 option 1	V6R1M0	Refreshed	0.9	System i Access Enablement Support

¹Storage size was not available at the time of publication.

Estimates for i5/OS software installation time

It is difficult to accurately estimate the amount of time needed to install a new release of software. Many variables combine to create a unique set of circumstances for each system. Use this information to help you estimate the time it will take to install your new i5/OS release.

“Minimizing software installation time” on page 37 can help you make the best use of the time you spend on software installation.

Common methods of estimating i5/OS installation time

The most common ways to estimate your total installation time for an upgrade are described in this list. This time includes analyzing your system and other preparation steps before the installation, the actual installation and possible down times, and postinstallation procedures.

- For V6R1, base your estimate on the results of analyzing your system for object conversions before the installation and optionally running conversion tools after the installation. IBM highly recommends that you allow adequate time to prepare your system for the V6R1 object conversions. To estimate your total time, add your object conversion estimate to one of the other suggested ways to estimate that are included in this list.
- Base your estimate on the installation time of a previous release. If the system configuration and load remain similar, you can use the installation time of a previous release on this system *as the start* of your estimate. If you rely on only the installation time of the previous release, your estimate might not be accurate. This method is not accurate if many data conversions occur during the installation process. If you are skipping a release level, generally the time is longer. Be sure to add information for conversions that occur in the release you are skipping and for the new release.
- Base your estimate on the installation time for a similar system. If your enterprise has multiple systems, you can record the actual time to install the new release on one system. You can use this to estimate the time that is needed to install the new release on a system with a similar configuration and load. Of course, you cannot use this method until you complete the installation on the first system.
- Estimate time using a formula. You can use the information in the following sections to estimate how long it will take to install this release on your system. Keep in mind that the number at which you arrive will vary from your actual installation time because of the variables that affect installation time.
- Combine one or more of the methods that are listed above.

Conditions that affect i5/OS installation time

Several major factors can affect installation performance.

The amount of time it takes to install the licensed programs depends on your system configuration and the licensed programs you are installing. That is, the larger models with more system capacity have a shorter installation time than smaller models loading the same licensed programs. The major factors that affect installation performance are:

- Installation device
- Number and type of disk unit I/O processors
- Processing unit capacity

- Disk unit space available
- Main storage available in base pool
- Human interaction
- Licensed programs to be installed
- Number of object conversions and how the conversions are done

i5/OS installation processes

The system determines the type of installation process it uses based on available system resources and the types of products being installed.

A *single-process installation* is when licensed programs are installed one at a time (sequentially). A *multiprocess installation* is when the system starts multiple jobs to perform the installation of two or more licensed programs at the same time.

Licensed Internal Code and the base part of the operating system are always installed using single-process installation. Licensed programs (including libraries QGPL and QUSRSYS and optional parts of the operating system) can be installed using either single-process or multiprocess installation.

If you are installing only one licensed program, the system uses single-process installation. If you are installing more than one licensed program, multiprocess installation is used if system resources are available. If system resources are not available, single-process installation is used. A single-process installation is used when a system's main storage or auxiliary storage is limited and when a licensed program exceeds the requirements for multiprocess installation. For any set of licensed programs, if the system must use single-process installation, the installation takes longer.

Multiprocess installation

The operating system determines if your system configuration has enough system capacity to use multiprocess installation to install licensed programs. If your system has the required resources, the licensed programs are installed concurrently by doing the following tasks:

- Loading the licensed program installation files from the media to temporary save files.
- Using multiple batch jobs to concurrently install licensed programs from the save files. The save files are deleted during the installation process when they are no longer needed.

During installation, a status panel indicates the licensed programs that are currently being installed from save files. The display lists the licensed programs and the type of item being installed for each, as follows:

*PGM Program objects

*LNG Language objects

If your system does not have the required resources for a multiprocess installation, the licensed programs are installed sequentially from the installation media (single-process). In single-process installation, the status panel indicates the licensed program that is currently being installed from the media.

Checklist: Estimating i5/OS installation time

Follow these directions to help you estimate the approximate installation time of this release.

This information is provided to assist you in estimating the approximate preparation, installation, and postinstallation time of this release on your system. Use the following checklist as a guide. The checklist refers you to other information or work sheets to obtain values.

The checklist assumes that you are not changing the primary language of your system. The estimate you arrive at by using this checklist is based on the assumption that your system must perform a single-process installation. If your system is able to use multiprocess installation, your time will be less.

The checklist and supporting work sheets do not include the amount of time that is spent on loading the next volumes, media errors, or recovery procedures. User data is not included. The time needed for INZSYS to complete is also not included.

To estimate your total installation time, follow these steps:

1. Estimate the amount of time you need to save your system before you install the new release. Time for saving the system depends on how much storage you have and what percentage of the storage you are using. Use the amount of time from the last backup of your system.

Time: _____

2. Estimate the amount of time to replace Licensed Internal Code. Allow 30 minutes for smaller servers. The average time for larger servers is about 15 minutes.

Time: _____

3. Add the estimated amount of time to replace the operating system, which is approximately the same for all systems.

Note: This installation time is based on using optical installation media. If you install from tape (such as a distribution tape created by a central site), these numbers are not valid. The speed of the optical drive is 600 kilobytes per second, which is the same rate as the 6390 tape drive (8mm). The next closest tape speed is 300 kilobytes per second for the 6380 tape drive (1/4 inch).

Time: __80 minutes__

4. Use "Times for installing licensed programs" on page 189 to estimate this time. Be sure to include all the licensed programs and optional parts that you intend to install.

Time: _____

5. Add time for planning and analyzing your system for object conversion before the upgrade and a separate amount of time for possible work after the upgrade. Follow the steps in "Times for conversions" on page 194 to determine how much time you need to add for the following conversions:

- "Program conversions" on page 194

Time for analyzing your system and making possible adjustments to your programs before the upgrade: _____

Time for conversion work such as running the Start Object Conversion (STROBJCVN) command after the upgrade: _____

- "Spooled file conversions" on page 195

Time for spooled file conversion: _____

- “Conversion of objects that contain SQL statements” on page 198

Time for SQL conversion: _____

- “Database file conversions” on page 199

Time for database file conversion: _____

- “IBM Backup Recovery and Media Services for i5/OS conversions” on page 199

Time for IBM Backup Recovery and Media Services for i5/OS conversion:

Some licensed programs such as Lotus Domino and related products (Lotus Sametime[®], LEI, Lotus Quickr, and others) require additional time for conversion and might require the installation of certain PTFs. For additional information about IBM products that are not identified in either step 4 on page 188 or step 5 on page 188, see the Memo to users and the IBM Redpaper publication *i5/OS Program Conversion: Getting Ready for i5/OS V6R1*. For additional information about Domino products, see the Lotus Domino for

i5/OS  Web site (www.ibm.com/servers/eserver/iserie/domino/support/).

6. If your system uses mirroring or an implementation of a RAID 5 or RAID 6 technique on the disk units in the system ASP, add extra time as described in “Data protection mechanisms” on page 200.

Time: _____

7. Consider the time required for your system to perform an IPL. If your system takes more than 20 minutes to perform an IPL, include the amount of time that exceeds 20 minutes. For example, if your system takes 45 minutes to perform an IPL, enter the difference of 25 minutes for the time (45 - 20 = 25).

Time: _____

8. Add time for saving your system after the installation. Be aware that data conversions can occur during the save operation that could increase the time needed for saving your system.

Time: _____

9. Determine the amount of time required to install the cumulative PTF package. Use the timing information in the *PTF Shipping Information Letter*.

Time: _____

10. Add time for any extra clean-up work and to re-customize your system.

Time: _____

The total of these steps is your estimated time for installing your new release.

Estimated time: _____

If you have data protection mechanisms, add the value you obtained from the information in “Data protection mechanisms” on page 200): _____

Total estimated time: _____

Times for installing licensed programs

This information can be used to determine the estimated maximum value (in minutes) for installing your licensed programs that are related to the i5/OS operating system.

The following table includes data that was available at the time of publication. Use this data to complete step 4 on page 188.

The estimated values are for individual process times for each licensed program to install. Expect some variation in the values. These values are not accurate if you install from tape, such as for distribution tapes created by a central site.

If you are viewing the following table online, use the information in Interactive calculation of total licensed program installation time to calculate the installation time for your licensed programs.

Note:

1. The values were created by using images that were preloaded into an image catalog.
2. A hyphen indicates that no value can be calculated.

Table 10. Licensed program time information

Product	Option	Description	Value for replacing licensed program (in minutes)	Value for adding licensed program (in minutes)
5761-SS1	Library	i5/OS - Library QGPL	—	—
5761-SS1	Library	i5/OS - Library QUSRSYS	—	—
5761-SS1	0	Application Server Key		
5761-SS1	0	Per Processor Pricing Key	—	—
5761-SS1	0	User Based Pricing Key		
5761-SS1	1	Extended Base Support	3.5	1.7
5761-SS1	2	Online Information	0.4	0.3
5761-SS1	3	Extended Base Directory Support	26.0	14.0
5761-SS1	5	System/36 Environment	1.6	1.4
5761-SS1	6	System/38 Environment	1.5	0.9
5761-SS1	7	Example Tools Library	0.6	0.8
5761-SS1	8	AFP Compatibility Fonts	0.5	0.6
5761-SS1	9	*PRV CL Compiler Support	11.1	4.8
5761-SS1	12	Host Servers	1.2	0.8
5761-SS1	13	System Openness Includes	23.2	14.9
5761-SS1	14	GDDM	1.0	1.9
5761-SS1	18	Media and Storage Extensions	0.4	0.8
5761-SS1	21	Extended G11N Support	2.1	0.8
5761-SS1	22	ObjectConnect	0.3	0.2
5761-SS1	23	OptiConnect	0.6	0.7
5761-SS1	26	DB2 Symmetric Multiprocessing	0.2	0.3
5761-SS1	27	DB2 Multisystem	0.2	0.3
5761-SS1	29	Integrated Server Support	5.6	4.9
5761-SS1	30	Qshell	1.4	0.8
5761-SS1	31	Domain Name System	1.6	2.3

Table 10. Licensed program time information (continued)

Product	Option	Description	Value for replacing licensed program (in minutes)	Value for adding licensed program (in minutes)
5761-SS1	33	Portable App Solutions Environment	10.1	13.0
5761-SS1	34	Digital Certificate Manager	2.4	2.8
5761-SS1	35	CCA Cryptographic Service Provider	2.8	2.4
5761-SS1	36	PSF for i5/OS 1-55 IPM Printer Support	0.5	0.5
5761-SS1	37	PSF for i5/OS 1-100 IPM Printer Support	0.4	0.6
5761-SS1	38	PSF for i5/OS Any Speed Printer Support	0.4	0.6
5761-SS1	39	International Components for Unicode	3.8	3.8
5761-SS1	41	HA Switchable Resources	0.4	0.8
5761-SS1	42	HA Journal Performance	0.3	0.4
5761-SS1	43	Additional Fonts	7.9	8.3
5761-SS1	44	Encrypted Backup Enablement	0.2	0.3
5761-SS1	45	Encrypted ASP Enablement	0.2	0.2
5761-SS1	46	Performance Viewer Open Source Components	0.4	0.6
5761-AF1	Base	IBM Advanced Function Printing Utilities	2.1	0.9
5761-AP1	Base	IBM Advanced DBCS Printer Support for iSeries	1.4	0.6
5761-AP1	1	Adv DBCS Printer Support - IPDS	0.3	0.2
5761-BR1	Base	IBM Backup Recovery and Media Services for i5/OS	12.1	6.5
5761-BR1	1	BRMS - Network Feature	0.3	0.2
5761-BR1	2	BRMS - Advanced Feature	0.1	0.1
5722-BZ1	Base	IBM Business Solutions	0.7	0.5
5761-CM1	Base	IBM Communications Utilities for System i	1.2	0.4
5761-DB1	Base	IBM System/38 Utilities for System i	1.0	0.8
5761-DE1	Base	IBM DB2 Extenders Version 9.1 for i5/OS	0.3	0.3
5761-DE1	1	DB2 Text Extender	0.5	0.6
5761-DE1	2	DB2 XML Extender	0.6	0.9
5761-DE1	3	Text Search Engine	1.2	1.3
5761-DFH	Base	IBM CICS Transaction Server for i5/OS	0.8	0.6
5761-DFH	1	CICS - Sample Applications	0.2	0.1
5761-DG1	Base	IBM HTTP Server for i5/OS	8.1	6.2
5761-DG1	1	Triggered Cache Manager	1.2	1.0
5761-DP4	Base	IBM DB2 DataPropagator for iSeries, V8.1	1.2	0.8
5761-DS2	Base	IBM Business Graphics Utility for System i	0.2	0.2
5769-FN1	Base	IBM Advanced Function Printing DBCS Fonts for AS/400	0.1	0.1
5769-FN1	1	AFP DBCS Fonts - Japanese	0.6	0.8
5769-FN1	2	AFP DBCS Fonts - Korean	0.3	0.3
5769-FN1	3	AFP DBCS Fonts - Traditional Chinese	0.1	0.2

Table 10. Licensed program time information (continued)

Product	Option	Description	Value for replacing licensed program (in minutes)	Value for adding licensed program (in minutes)
5769-FN1	4	AFP DBCS Fonts - Simplified Chinese	0.1	0.2
5769-FN1	5	AFP DBCS Fonts - Thai	0.1	0.1
5769-FNT	Base	IBM Advanced Function Printing Fonts for AS/400	0.1	0.1
5769-FNT	1	AFP Fonts - Sonoran Serif	0.2	0.1
5769-FNT	2	AFP Fonts - Sonoran Serif Headliner	0.1	0.1
5769-FNT	3	AFP Fonts - Sonoran Sans Serif	0.2	0.1
5769-FNT	4	AFP Fonts - Sonoran Sans Serif Headliner	0.1	0.1
5769-FNT	5	AFP Fonts - Sonoran Sans Serif Condensed	0.1	0.1
5769-FNT	6	AFP Fonts - Sonoran Sans Serif Expanded	0.1	0.1
5769-FNT	7	AFP Fonts - Monotype Garamond	0.1	0.2
5769-FNT	8	AFP Fonts - Century Schoolbook	0.1	0.1
5769-FNT	9	AFP Fonts - Pi and Specials	0.1	0.1
5769-FNT	10	AFP Fonts - ITC Souvenir	0.1	0.1
5769-FNT	11	AFP Fonts - ITC Avant Garde Gothic	0.1	0.1
5769-FNT	12	AFP Fonts - Math and Science	0.1	0.1
5769-FNT	13	AFP Fonts - DATA1	0.1	0.1
5769-FNT	14	AFP Fonts - APL2	0.1	0.1
5769-FNT	15	AFP Fonts - OCR A and OCR B	0.1	0.1
5761-HAS	Base	IBM System i High Availability Solutions Manager	1.4	1.9
5761-HAS	1	IBM System i HASM - Planning	0.2	0.3
5722-IP1	Base	IBM Infoprint Server for iSeries	5.4	3.0
5722-IP1	1	PS to AFP Transform	0.6	0.4
5761-JC1	Base	IBM Toolbox for Java	2.4	2.0
5761-JS1	Base	IBM Advanced Job Scheduler for i5/OS	7.9	4.6
5761-JV1	Base	IBM Developer Kit for Java	3.3	1.3
5761-JV1	6	Java Developer Kit 1.4	4.3	3.1
5761-JV1	7	Java Developer Kit 5.0	2.2	2.1
5761-JV1	8	J2SE 5.0 32 bit	4.2	3.2
5761-JV1	9	J2SE 5.0 64 bit	3.7	3.0
5761-JV1	10	Java SE Development Kit 6	2.9	3.7
5761-JV1	11	Java SE 6 32 bit	3.0	3.8
5761-JV1	12	Java SE 6 64 bit	3.9	3.9
5761-LSV	Base	IBM Extended Integrated Server Support for i5/OS	0.3	0.4
5761-MG1	Base	IBM Managed System Services for i5/OS	1.3	0.7

Table 10. Licensed program time information (continued)

Product	Option	Description	Value for replacing licensed program (in minutes)	Value for adding licensed program (in minutes)
5761-NAE	Base	IBM Network Authentication Enablement for i5/OS	6.7	5.3
5761-PT1	Base	IBM Performance Tools for i5/OS	1.6	0.8
5761-PT1	1	Performance Tools - Manager Feature	0.7	0.7
5761-PT1	2	Performance Tools - Agent Feature	0.2	0.3
5761-PT1	3	Performance Tools - Job Watcher	0.2	0.1
5761-PT1	4	Performance Tools - Reserved	0.2	0.2
5761-PT1	5	Performance Tools - Reserved	0.2	0.7
5761-QU1	Base	IBM Query for i5/OS	0.7	0.4
5761-RD1	Base	IBM DB2 Content Manager OnDemand for i5/OS	0.8	0.8
5761-RD1	10	OnDemand Common Server Feature	3.4	3.1
5761-RD1	11	OnDemand Web Enablement Kit	0.8	0.8
5761-RD1	12	OnDemand PDF Indexer Feature	1.4	1.3
5761-SM1	Base	IBM System Manager for i5/OS	0.6	0.4
5761-ST1	Base	IBM DB2 Query Manager and SQL Development Kit for i5/OS	0.7	0.8
5761-TC1	Base	IBM TCP/IP Connectivity Utilities for i5/OS	1.9	1.0
5761-TS1	Base	IBM Transform Services for i5/OS	0.4	0.4
5761-TS1	1	Transforms - AFP to PDF Transform	0.7	0.7
5722-UME	Base	IBM Universal Manageability Enablement for i5/OS	4.4	4.6
5722-VI1	Base	IBM Content Manager for iSeries	0.6	0.3
5722-VI1	1	Content Manager for iSeries	0.9	0.9
5722-VI1	2	Content Manager for iSeries	0.1	0.1
5722-VI1	3	Content Manager for iSeries Client for Windows	¹ See note.	¹ See note.
5722-VI1	4	Content Manager for iSeries Workflow Builder	¹ See note.	¹ See note.
5761-WDS	Base	IBM WebSphere Development Studio for System i	3.1	1.0
5761-WDS	21	Application Development ToolSet	1.7	1.2
5761-WDS	31	ILE RPG	0.6	0.6
5761-WDS	32	System/36 Compatible RPG II	0.7	0.6
5761-WDS	33	System/38 Compatible RPG III	0.5	0.5
5761-WDS	34	RPG/400	0.7	0.4
5761-WDS	35	ILE RPG *PRV Compiler	0.4	0.4
5761-WDS	41	ILE COBOL	0.6	0.4
5761-WDS	42	System/36 Compatible COBOL	0.5	0.4
5761-WDS	43	System/38 Compatible COBOL	0.4	0.3
5761-WDS	44	OPM COBOL	0.5	0.3

Table 10. Licensed program time information (continued)

Product	Option	Description	Value for replacing licensed program (in minutes)	Value for adding licensed program (in minutes)
5761-WDS	45	ILE COBOL *PRV Compiler	0.4	0.4
5761-WDS	51	ILE C	0.3	0.6
5761-WDS	52	ILE C++	0.6	0.7
5761-WDS	56	IXLC for C/C++	0.1	0.1
5761-WDS	60	Workstation Tools - Base	0.3	0.4
5761-XE1	Base	IBM System i Access for Windows	3.7	3.3
5761-XH2	Base	IBM System i Access for Web	7.6	5.4
5722-XP1	Base	IBM System i Access for Wireless	0.5	0.8
5761-XW1	Base	IBM System i Access Family	0.3	0.2
5761-XW1	1	System i Access Enablement Support	0.3	0.1

¹Value was not available at the time of publication.

Total licensed program installation time: _____

Times for conversions

The conversions on your system can have a significant effect on the amount of time required before the upgrade and during normal operations after you upgrade.

For V6R1, unique conversions will occur with programs in libraries, Java programs in directories, spooled files, and integrated file system names in file systems that are not case-sensitive.

Some conversions might have a significant performance affect when program objects are not converted until accessing the program for the first time after an upgrade. To make your conversions run as smoothly as possible, follow the recommendations in the IBM Redpaper publication i5/OS Program Conversion:

Getting Ready for i5/OS V6R1  .

More conversions occur if you are skipping a release level. You need to consider the time for conversions in both the release you are skipping and in the new release. To estimate the additional time that conversions might require, you can gather information about specific object types on your system. To review conversion information from a skipped release, see the software upgrade

information in the i5/OS Information Center  (<http://www.ibm.com/systems/i/infocenter/>) for that release.

Program conversions:

The program conversions in V6R1 will refresh programs to take advantage of the latest system enhancements.

Program conversion includes the conversion of programs in libraries and conversion of Java programs in directories. The conversions of Java programs in directories, however, do not affect the actual i5/OS upgrade time.

Before you upgrade to V6R1, it is highly recommended that you allow up to several weeks to analyze your system and plan your strategy for program object conversions. Information APAR II14306 describes the Analyze Object Conversion (ANZOBJCVN) tool for V5R3 and V5R4. This tool helps you identify potential conversion difficulties, if any, and estimates the time required for program conversion.

After you upgrade, program conversion can be accomplished by one of these methods:

- Running the Start Object Conversion (STROBJCVN) command to manually initiate conversion of program objects in libraries.
- During a restore operation.
- On the first use of an object.

The overall analysis and work before the upgrade and the conversion process after the upgrade to V6R1 could lengthen your total i5/OS upgrade time. For example, you might need to make adjustments to some of your application programs before your upgrade.

To begin the steps of preparing your systems for V6R1 object conversions of programs in libraries, follow these general directions.

1. Review Information APAR II14306 for the commands and function included with the conversion PTFs. This information APAR is in the preventive service planning information about the **Support for IBM System i**  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).
2. Follow the directions in the IBM Redpaper publication i5/OS Program Conversion: Getting Ready for i5/OS V6R1 .

All Java programs that reside in directories can be converted in a short amount of time. Additional information about their conversion can also be found in Information APAR II14306 and the IBM Redpaper publication.

Spooled file conversions:

With V6R1, spooled file operations are processed more efficiently than in previous releases due to conversions that can be done either during the release upgrade or after the upgrade.

After the conversion, long-running operations such as displaying a list of all the spooled files on the system, for example, should not affect another job's ability to perform a spooling operation such as creating, deleting, or printing a spooled file.

Before you upgrade to the new release, it is recommended that you analyze your system before you upgrade by following the directions in Information APAR II14306 and the IBM Redpaper publication i5/OS Program Conversion: Getting Ready for i5/OS V6R1 . The information APAR is in the preventive service

planning information about the **Support for IBM System i**  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).

The planning PTFs for program object conversion that are described in the Redpaper publication include tools to collect and report the number of spooled files on your system and the time to convert them for V6R1. The times can vary depending on the workload of the system, and post-IPL or post-vary-on operation times could be longer than estimated.

Several options for converting your spooled files are available. Table 11 and Table 12 on page 197 compare the possible options.

Note: Only newly created spooled files or spooled files that have been converted can be seen and used after the upgrade. Until the conversion is complete, unconverted spooled files appear to not exist. If a data area is used to direct the conversion, delete the data area after the conversion has occurred.

Table 11. Spooled file conversion options that do not apply to independent auxiliary storage pools (ASPs)

When to convert spooled files	Description
During the upgrade (this is the default option for the options in this table)	<p>Action: Perform a standard upgrade with no unique additional procedures.</p> <p>Result: All spooled files are converted after the upgrade is complete.</p>
After the upgrade when the system is removed from the restricted state	<p>Action: Before the upgrade, create the QSPL/QSPLDFRCVN data area with the type Logical (*LGL) and the value set to 1: CRTDTAARA DTAARA(QSPL/QSPLDFRCVN) TYPE(*LGL) VALUE('1').</p> <p>Result: Spooled files are converted after the upgrade when the system is no longer in a restricted state.</p>
After the upgrade with your control	<p>Action: Before the upgrade, create the QSPL/QSPLDFRCVN data areas with the type Logical (*LGL) and the value set to 0: CRTDTAARA DTAARA(QSPL/QSPLDFRCVN) TYPE(*LGL) VALUE('0').</p> <p>After the upgrade, change the data areas to have a value of 1. When you want the spooled files to be converted, enter the Start Spool Reclaim command: STRSPLRCL OUTQ(*ALL/*ALL).</p> <p>Result: The spooled files are converted by the QSPRC00001 system job. If the command is never called and the data area is never deleted or changed to 1, the spooled files are not converted.</p>

Table 11. Spooled file conversion options that do not apply to independent auxiliary storage pools (ASPs) (continued)

When to convert spooled files	Description
During a subsequent IPL	<p>Action: Before the upgrade, create the QSPL/QSPLDFRCVN data area with the type Logical (*LGL) and the value set to 0: CRTDTAARA DTAARA(QSPL/QSPLDFRCVN) TYPE(*LGL) VALUE('0').</p> <p>Before the IPL during which the spooled files are to be converted, delete the data area.</p> <p>Result: The spooled files are converted during the C900 2AAA step of the next IPL.</p>
After a subsequent IPL	<p>Action: Before the upgrade, create the QSPL/QSPLDFRCVN data area with the type Logical (*LGL) and the value set to 0: CRTDTAARA DTAARA(QSPL/QSPLDFRCVN) TYPE(*LGL) VALUE('0').</p> <p>Before the IPL after which the spooled files are to be converted, change the data area to have a value of 1.</p> <p>Note: If you call STRSPLRCL OUTQ(*ALL/*ALL), the spooled files are converted.</p> <p>Result: The spooled files are converted after the IPL when the system is not in a restricted state. The spooled files are converted by the QSPRC00001 system job.</p>

Table 12. Spooled file conversion options for independent auxiliary storage pools (ASPs)

When to convert spooled files	Description
During a vary-on operation (this is the default option for the options in this table)	<p>Action: No action required.</p> <p>Result: The spooled files are converted during the vary-on operation.</p>
After a vary-on operation.	<p>Action: Before the installation, create the QSPLxxxx/QSPLDFRCVN data area in the primary ASP device. The xxxx refers to the ASP number of the primary ASP in the ASP group.</p> <p>Result: The spooled files are converted in system job QSPRCxxxxx after the vary-on operation. The xxxxx refers to the independent ASP number of the primary independent ASP.</p>

Spooled files restored to the V6R1 release are automatically converted. It is possible that the time for the spooled file conversion process can be lessened by saving and deleting the spooled files before you upgrade from V5R4 and then restoring them after you have V6R1 installed.

Integrated file system conversions:

Integrated file system conversions should not affect the overall length of time for an i5/OS upgrade, but it might be advantageous for you to analyze and possibly change certain file names before you upgrade. As of V6R1, file systems that are not case sensitive in the integrated file system support Unicode Standard 4.0 for names stored in directories.

In i5/OS releases before V6R1, the integrated file system stores all names in Unicode and supported Unicode Standard 2.0. After upgrading to V6R1, an automatic conversion will run to update the integrated file system directories in file systems that are not case-sensitive to support Unicode Standard 4.0. The file systems included in this conversion are "root" (/) and user-defined file systems (UDFS). These file systems are in any auxiliary storage pool that is created with the parameter value CASE(*MONO) on the Create User-defined File System (CRTUDFS) command.

Unicode Standard 4.0 defines additional characters and updated casing rules. If a system was preinstalled with V6R1 i5/OS, the directories support Unicode Standard 4.0 for the names.

Before you upgrade to V6R1, it is recommended that you review Information APAR II14306 and the IBM Redpaper publication i5/OS Program Conversion:

Getting Ready for i5/OS V6R1 . These resources will help you to analyze your system and to identify objects that are going to be affected by the Unicode conversion. You can then decide if you want to change the names of the affected objects before you upgrade or let the automatic conversion occur. The information APAR is in the preventive service planning information on the **Support for IBM System i**  Web page. Select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).

The conversion of the directories automatically begins for any of the file systems shortly after V6R1 is installed. This conversion runs in the background during normal operations and should not significantly affect your system activity. For more information about integrated file system directory conversions, see Converting names to support additional characters in the i5/OS Information Center.

Conversion of objects that contain SQL statements:

In i5/OS V5R4, the internal representation of SQL statements was changed to support statements up to 2 097 152 bytes in length. The resulting conversion of objects that contain SQL statements affects V5R3-to-V6R1 upgrades.

The first time these objects are referenced after an upgrade to the new release, the internal representation of SQL statements in programs, service programs, Distributed Relational Database Architecture™ (DRDA®) packages, and extended dynamic packages that were created before V5R4 is converted automatically to the new format. This conversion should not significantly affect the time to install the release, but could be noticed after the installation is complete and objects that contain SQL statements are referenced for the first time.

The information described in the IBM Redpaper publication i5/OS Program

Conversion: Getting Ready for i5/OS V6R1  describes how to download the correct planning PTFs and then use the Analyze Object Conversion command

(ANZOBJCVN) before the upgrade. By using this command, you can collect information about SQL packages (*SQLPKG), identify any potential conversion issues, and estimate conversion times.

To control when these object conversions are performed, use the Start Object Conversion (STROBJCVN) command after you upgrade.

Further information about conversions is described in Information APAR II14080, which is located on the Support for IBM System i  Web site (www.ibm.com/systems/support/i/). In the navigation bar, select the link for technical databases; then select the link for Authorized Problem Analysis Reports (APARs).

Database file conversions:

If you are upgrading from i5/OS V5R3 to V6R1, database files that were created on a release earlier than V5R4 are converted to eliminate a performance degradation that might occur due to enhanced hardware storage protection support.

Because database files (*FILE objects) consist of many machine interface (MI) objects, the time to convert them might be significant when an application is started the first time after V6R1 is installed. Also, because the MI objects will have their header size increased to 4K during the conversion, each MI object associated with a database file will grow in size by 4K (4096 bytes).

To spread the MI object conversions out over a period of time, the database file conversion support is designed to be done when the database MI objects are first accessed or used after V6R1 is installed. If you would like to evaluate the impact that the database file conversions might have on one or more of your applications and determine if you have enough time during your upgrade window to take the necessary steps to eliminate the startup performance degradation for your more critical applications, run the QDBFIMIC program that is included in PTF SI18615. The cover letter for this PTF (and all other PTFs) is on the Support for IBM System i  Web site (www.ibm.com/servers/support/i/). In the navigation bar, click **Technical databases**; then click **PTF Cover Letters**.

IBM Backup Recovery and Media Services for i5/OS conversions:

If you have this licensed program installed, review the following information about product initialization.

If you are upgrading IBM Backup Recovery and Media Services for i5/OS (BRMS), 5761-BR1, product initialization is required after a software upgrade before you can use the BRMS functions. BRMS product initialization was removed from the installation time to improve the time required to complete software upgrades that include BRMS.

The Planning for the Installation section in Chapter 2 of the Backup, Recovery, and Media Services for i5/OS book has more information about BRMS product initialization and methods for determining the estimated product initialization time.

Data protection mechanisms

If your system uses mirroring or an implementation of a RAID 5 or RAID 6 technique on the disk units in the system ASP, your i5/OS installation time can be longer.

This amount of time will vary depending on your configuration, but if the disk units are protected with RAID 5 or RAID 6, the total installation time (for Licensed Internal Code, the i5/OS operating system, and licensed programs) will be approximately 15 percent longer. If the disk units are mirror protected, the total installation time will be approximately 10 percent longer. Mirroring and implementations of the RAID 5 or RAID 6 techniques do not affect the duration of save operations.

Using the percents given, include a time estimate for your system in “Checklist: Estimating i5/OS installation time” on page 188.

Installation devices and media

These devices can be used to install the i5/OS release.

“Types of software installation devices” on page 10 provides an overview of the devices available and their naming conventions.

Optical media

This topic includes tips for using optical devices and optical media to install an i5/OS release, install PTFs (fixes), or install single licensed programs.

The optical device used with the optical media class is considered the alternate IPL device.

Keep optical media in its protective case when not in use. When handling optical media, do not touch the surface. If the media has dust or fingerprints on it, it can be cleaned with a lint free cloth (the tape cleaning cloth can be used). Gently wipe the media from the center to the outside of the disc.

When you install from optical media, it is important to know what each media volume contains so that you do not exit the installation process prematurely. The process of creating a master installation list will help you become familiar with what software is contained on each media volume.

The system must be powered on before you can load optical media in the media drawer. “Starting from a power-off condition” on page 175 describes how to start the system when power is off.

If you are using DVD, verify that you insert the media in the correct media drive.

Tape or tape libraries

This topic includes i5/OS requirements for tape devices or tape libraries.

If you use tape for your installation, you need to determine which tape unit to use for the alternate IPL. The tape unit for the alternate IPL is either an internal or an external tape unit attached to a storage IOA on system bus 1. If you have only one tape unit, use it as the tape unit for the alternate IPL. If you do not know which tape unit to use, contact your marketing representative or authorized service provider.

| **Note:** You can use a tape image catalog and a virtual tape device to install PTF
| fixes, to install single licensed programs, or to install or upgrade an i5/OS
| release.

To help prevent media errors, be sure to clean the heads on your alternate IPL tape drive before you begin the installation process. Refer to your tape drive reference guide if you need more information on how to clean the heads. If you receive a media error message during your installation process, see Chapter 14, “Troubleshooting software installation problems,” on page 157 for recovery information.

Sharing a tape device

If you have an alternate installation tape device that you are sharing, make sure other users do not assign or try to use the tape drive during the installation because the installation process might fail.

Setting up your tape library for installation

When you install a release using a tape library device, do not use the device in library mode or random mode. The 3494 tape library should use stand-alone mode. The 3490 and 35xx tape libraries should use either automatic, sequential, or manual mode. Refer to the operator's guide for the media library device for information on setting up and using the correct mode.

Non-IBM tape device

This topic provides recommendations for non-IBM tape device use during an i5/OS upgrade.

| If you are using a non-IBM tape device, read informational APAR II09685 for more
| details on installing a release. This informational APAR states that it is for V3R2,
| V3R6, and V3R7. The instructions, however, are also valid for this release.

| If your tape device emulates an IBM tape device, you might experience problems
| during the i5/OS installation process, and receive message CPF5401. If this occurs,
| contact your vendor to confirm whether your tape drive is compatible with V6R1.

Image catalog for a virtual device

| You can use either an optical image catalog or a tape image catalog to perform an
| i5/OS software upgrade, install PTFs (fixes), or install single licensed programs.

An *image catalog* is an object on the system that contains optical images. Each catalog is associated with one user-specified integrated file system directory. The system-recognized identifier for the object type is *IMGCLG.

Image catalog requirements:

- An image catalog upgrade works like a D-mode IPL without a console during the installation of Licensed Internal Code. Reference codes are used to display the status.
- Installations done by using image catalogs require an i5/OS control language (CL) command line to initiate the installation.
- An installation cannot be performed if an independent auxiliary storage pool (ASP) is accessible. Image files cannot reside in an independent ASP.
- Virtual media devices do not support the following:

- | – Write operations (before V5R3)
- | – The LODRUN command using multiple media.
- | – Changing a primary language from secondary language media.
- | • To perform an installation using image catalogs, you must have at least 1536 MB
- | of free storage on the load-source disk unit. “Preparing to upgrade or replace
- | software using an image catalog” on page 41 describes how to calculate storage
- | requirements and free up space in the load-source disk unit for an image
- | catalog. “Cleaning up disk storage space” on page 51 describes other general
- | considerations on how to free up space in the load-source disk unit.

Using an alternate installation device

You can learn how to set up, disable, verify, and select an alternate installation device.

Alternate installation device: Overview

You can perform installation and recovery procedures by using the primary installation device along with an alternate installation device that you define.

The alternate installation device can be a tape device or an optical device. Some systems, typically with faster devices attached, might see a performance improvement when using an alternate installation device. You can use the alternate installation device for any installation or recovery that requires replacing Licensed Internal Code. Some models might require that you set up an alternate installation device.

When you use an alternate installation device, the system might use the primary installation device to load a small portion of the Licensed Internal Code during an IPL-type D and then continues the installation by using the media in the alternate installation device. The media in the alternate installation device can be SAVSYS media or distribution media created by a central site.

Notes:

- | • Starting with POWER6 models, you can do an IPL-type D from a tape
- | device attached by a Fibre Channel interface only when it is attached to
- | an adapter without an input/output processor (IOP). For other system
- | models and configurations, a tape device attached by a Fibre Channel
- | interface needs to be set up as an alternate installation device.
- | • If you use an alternate installation device, you need to ensure that you
- | set up the device and that you enable the device. You also need to have
- | the optical media or tape media that contains the Licensed Internal Code
- | and your save media.

Setting up an alternate installation device

Before you use an alternate installation device, you need to ensure that you define it on a bus, and you must enable the device.

You need to record and keep the logical address of the system bus and system card at which the alternate installation device is attached. If you have the device set up on a different bus and you do not have this information available, you will not be able to complete installations or recoveries.

It is helpful to record the tape or optical drive's serial number that you plan to use as the alternate installation device.

If you change the configuration of your system, you need to ensure that this information is correct before you start to use the alternate installation device.

To set the addresses and enable the alternate installation device, perform the following steps:

Note: You need to know the password for dedicated service tools (DST) to perform this procedure.

1. Place the media that contains the current release Licensed Internal Code into the primary installation device.
2. Set the system mode to Manual. Then perform an initial program load (IPL) using this command:


```
PWRDWNSYS OPTION(*IMMED) RESTART(*YES) IPLSRC(B)
```

Alternatives:

- The default value for the Power Down System (PWRDWNSYS) command is to display a confirmation. This can be changed by specifying *NO for the Confirm (CONFIRM) parameter: CONFIRM(*NO).
- An alternative to this step is to select function 21 (Dedicated service tools). If you use this alternative, the next step is step 4. You will not need to perform step 12.

Logical partition users:

- If you are going to use this command on a primary partition, be sure to power off all secondary partitions before running the command.
 - If you are using Hardware Management Console (HMC), see the Managing the Hardware Management Console (HMC) topic.
3. When the IPL or Install the System display appears, select option 3 (Use dedicated service tools (DST)) and press the Enter key.
 4. The Dedicated Service Tools (DST) Sign On display appears.

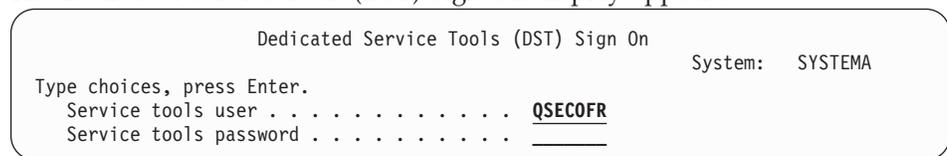

Sign on using the QSECOFR user profile.

Note: Do not sign on with a profile other than QSECOFR.

5. The Use Dedicated Service Tools (DST) menu appears. From the Use Dedicated Service Tools (DST) menu, perform the following tasks:
 - a. Select option 5 (Work with DST environment).
 - b. Select option 2 (System devices) on the Work with DST Environment display.
 - c. Select option 5 (Alternate installation device) on the Work with System Devices display.
 - d. Select your device type on the Select Media Type display.
6. From the Select Alternate Installation Device display, type a 1 (Select) next to the resource you want and press the Enter key.

Select Alternate Installation Device

System: SYSTEMA

Additional devices may be available for use. Press F5 to see if any additional devices have been detected.

Type option, press Enter.
1=Select 5=Display details

Option	Bus Number	Resource Name	Type	Model	Serial Number	Selected
	16	TAP22	3592	01A	13-1300283	
	16	TAP23	3592	E05	13-1350492	
	16	TAP24	3592	01A	13-1300291	
	16	TAP25	3592	E05	13-1350477	
	16	TAP26	3580	002	00-0110666	
	16	TAP27	3590	E1A	13-C1610	
	16	TAP28	3590	E1A	13-C1599	
	16	TAP29	3590	01A	13-AB733	
	16	TAP30	3590	01A	13-AB388	
	16	TAP31	3580	003	00-19944	

More...

F2=Deselect device F3=Exit F5=Refresh F12=Cancel

7. The Display Device Details display appears.

Display Device Details

System: SYSTEMA

Resource Name	Type	Model	Serial Number
TAP23	63A0	001	13-1355555

Location : UTMP3.C01.01B7A4G-DB3-D41

Logical address:

Bus:

System bus	16
System board	0
System card	32

Storage:

I/O bus number	0
Controller	14
Device address	0

F3=Exit F12=Cancel

You need to have a record of the addresses assigned to the alternate installation device selected for installing a system. Record the following information:

- Type/Model: _____
- System bus: _____
- System card: _____
- Serial number: _____

Notes:

- You might want to repeat this process to record the addresses for all alternate installation devices that appear in step 6. You should store this information in a safe place, such as the location where your recovery information and recovery media are stored.
- If more than one alternate installation device is defined, only one can be enabled.

- You should ensure that only one device contains valid installation media. This prevents you from loading the wrong version of the Licensed Internal Code.

Press the Enter key.

8. The Select Alternate Installation Device display appears. Type 1 (Select) next to the resource you want and press the Enter key.
9. You should see the following message at the bottom of the display:
Alternate installation device selected
10. Press F3 (Exit) to return to the Use Dedicated Service Tools (DST) display.
11. Press F3 (Exit) again. The Exit Dedicated Service Tools (DST) display appears.



Type 1 (Exit Dedicated Service Tools (DST)) and press the Enter key.

12. The next display you see is the IPL or Install the System display. Type 1 (Perform an IPL) and press the Enter key to complete the procedure.

Disabling an alternate installation device

If you need to disable an alternate installation device, follow these steps.

You might need to disable an alternate installation device for one of the following reasons:

- To continue with an installation using the primary installation device.
 - To enable a different device as an alternate installation device.
 - To correct the logical address if hardware has been moved or changed.
1. Use the system or logical partition control panel to set the mode to Manual. Then perform an attended initial program load (IPL) using the command:
PWRDWN SYS OPTION(*IMMED) RESTART(*YES) IPLSRC(B).

Alternatives:

- For V6R1, the default value for the Power Down System (PWRDWN SYS) command is to display a confirmation. This can be changed by specifying *NO for the Confirm (CONFIRM) parameter: CONFIRM(*NO). The default value for V5R3 and V5R4 is not to display a confirmation.
- An alternative to this step is to select function 21 (Dedicated service tools). If you use this alternative, skip steps 2 and 9.

Logical partition users:

- If you are going to use this command on a primary partition, be sure to power off all secondary partitions before running the command.
- If you are using Hardware Management Console (HMC), see the Managing the Hardware Management Console (HMC) topic.


2. When the IPL or Install the System display appears, select option 3 (Use dedicated service tools (DST)) and press the Enter key.

3. The Dedicated Service Tools (DST) Sign On display appears. Sign on using the QSECOFR user profile.
4. The Use Dedicated Service Tools (DST) menu appears. From the Use Dedicated Service Tools (DST) menu, perform the following tasks:
 - a. Select option 5 (Work with DST Environment).
 - b. Select option 2 (System devices) on the Work with DST Environment display.
 - c. Select option 5 (Alternate installation device) on the Work with System Devices display.
5. At the Select Alternate Installation Device display, press F2 (Deselect device).
6. You should see the following message at the bottom of the display:
Alternate installation device deselected
7. Press F3 (Exit) to return to the Use Dedicated Service Tools (DST) display.
8. Press F3 (Exit) again. The Exit Dedicated Service Tools (DST) display appears. Type 1 (Exit DST) and press the Enter key.
9. The next display you see is the IPL or Install the System display. Type 1 (Perform an IPL) and press the Enter key to complete the procedure.

Verifying and selecting an alternate installation device during a manual installation

To verify and select an alternate installation device during a manual installation, follow these steps.

1. The Install Licensed Internal Code display appears.

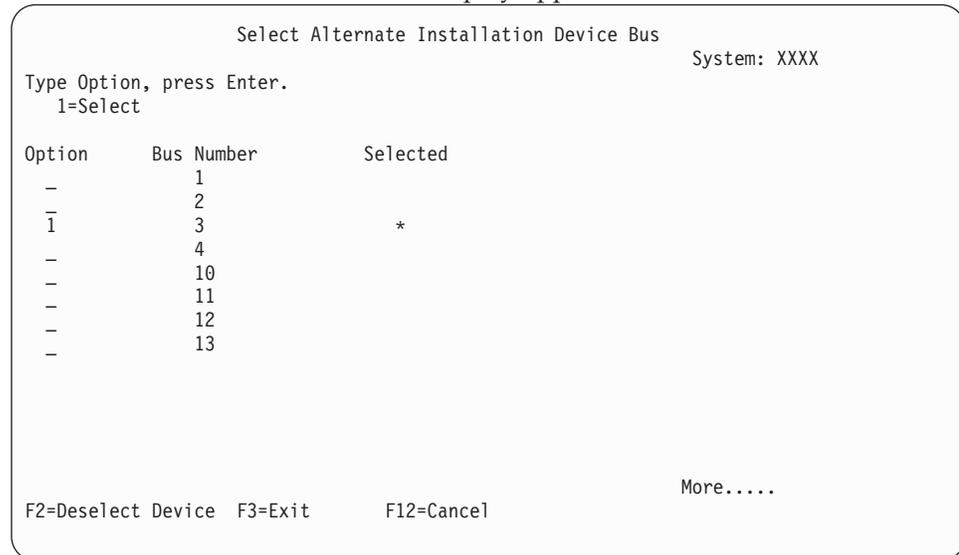

Type 3, and press Enter. This will verify the address of an alternate installation device attached to the system and determine whether it is enabled or disabled.

2. Verifying and selecting alternate installation device: The Select Alternate Installation Device Bus display appears.

```

Select Alternate Installation Device Bus
System: XXXX

Type Option, press Enter.
1=Select

Option      Bus Number      Selected
-           1
-           2
1           3           *
-           4
-           5
-           6
-           7
-           8
-           9
-           A
-           B
-           C
-           D

More.....

F2=Deselect Device  F3=Exit      F12=Cancel

```

- a. Verify that the selected device is on the correct system bus. Type 1 in the **Options** field next to the selected bus, and press Enter to view information about the device that is attached to the bus. This might take several minutes. If you see the message
No alternate installation device configured
, wait one minute and refresh the display.
- b. Select the media type on the Select Media Type display.
- c. The Select Alternate Installation Device display appears. Use this display to verify the resource name, type, model, and serial number for the device.

```

Select Alternate Installation Device
System: SYSTEMA

Additional devices might be available for use. Press F5 to see
if any additional devices have been detected.

Type option, press Enter.
1=Select 5=Display details

Option      Bus      Resource      Type      Model      Serial      Selected
Number      Name
-           1      OPT08        6330     002        00-11111
-           3      TAP19        3570     B11        13-22222           *

F2=Deselect device  F3=Exit  F5=Refresh  F12=Cancel

```

- d. Type 1 to select the device and make any needed corrections to select, enable, or disable the device. Press Enter to confirm the changes.
- e. The message
Alternate installation device selected

appears. Press F3 to return to the Install Licensed Internal Code display.
- f. Type 1 and press Enter to install the Licensed Internal Code.
End of verifying and selecting alternate installation device.

If you are using an Hardware Management Console (HMC) to perform an IPL of the system from alternate media, complete the following steps:

1. Expand *your management environment in your HMC*.
2. Expand *your system*.
3. Expand **System and Partition**.
4. Click **System Management**.
5. Expand **Partitions**.
6. Select the partition.
7. Right click the partition and select **Properties**.
8. In the Partition Properties window, click the **Settings** tab.
9. Under the Boot category, change the **Keylock position** to Manual and the **IPL source** to D.
10. Click **OK**.
11. Expand the partition.
12. Right-click the partition profile and select **Properties**.
13. Select the **Tagged I/O** tab.
14. Under the Alternate restart device category press **Select**.
15. Expand the unit.
16. Expand the bus.
17. Select the Slot with your input/output processor (IOP).
18. Press **Select**.
19. Press **OK**.
20. If your system is powered off, right-click the partition, and select **Activate**. If your system is running, select **Shut down partition**, and then select **Activate**.

i5/OS release interoperability

A system interoperates with another system when you exchange data or when you save and restore objects. Review the supported combinations of OS/400® and i5/OS releases.

Interoperability is the ability of one system to exchange data or objects with another system. The exchange can be performed electronically or by physical media (such as tape). Either system can initiate the exchange.

A system also interoperates with another system when it saves and restores objects.

If you have several systems in a network, they must be at compatible releases. This is necessary if objects and data are to be interchanged between systems. You can use option 10 (Display licensed programs) on the Work with Licensed Programs menu (type G0 LICPGM) to see the installed release of your licensed programs.

The releases on systems must all be supported when data is exchanged

The source system (the system that sends the information) and the target system (the system that receives the information) must be within the supported releases.

For example, PCs that have V6R1 System i Access for Windows installed support functions on systems running i5/OS V5R3 or later.

Requirements for saving and restoring objects to be interoperable with previous releases

To be interoperable, objects must be saved by specifying either a specific release or *PRV for the value of the target release (TGTRLS) parameter.

You can save and restore licensed programs just like other objects as long as the release is compatible with the operating system release. “Licensed program releases and sizes” on page 181 contains more information about compatible releases of licensed programs.

For more information about supported combinations of i5/OS releases or saving objects to a system that is running a previous release, see the Release-to-release support topic in the i5/OS Information Center.

Installation notes about the i5/OS release

This information describes miscellaneous requirements or changes to the i5/OS release.

Note: The system must be in a restricted state to install the QGPL and QUSRSYS libraries, and to install Option 12 (Host Servers).

5761-SS1, i5/OS Option 1

This option installs automatically when you install the new release of the operating system. You cannot delete this option.

5761-SS1, i5/OS Option 3

This option installs automatically when you install the new release of the operating system. This option contains integrated file system directories. You cannot delete this option.

5722-CR1, IBM Cryptographic Support for AS/400

This licensed program has been removed. If you are looking for a cryptographic API set, consider the following alternatives:

- i5/OS Cryptographic Services API
- Common Cryptographic Architecture (CCA) API for the iSeries Cryptographic coprocessors
- Java Cryptography Extension (JCE)

For more information on the first two alternatives, refer to Cryptographic Services APIs.

Tivoli® Management Agent, TME-LCF

This licensed program is no longer included with the i5/OS installation media. However, it can now be ordered and installed as part of the Tivoli Management Environment Framework.

IBM DB2 Content Manager OnDemand for i5/OS

The function in previous options 1, 2, 3, 4, and 5 is now available in others parts of the product. Options 10, 11, and 12 are available in addition to the base product.

5722-SS1, i5/OS Option 25

NetWare Enhanced Integration has been removed. It is recommended that you use a version of Linux with Novell's Open Enterprise Server.

To find other information about what's new or changed this release, see the Memo to Users in the information center. For more information about products or features that might not be supported in future releases of the operating system or on future models, on Product Previews, and on Statements of Directions, see System i

Support Planning  (<http://www.ibm.com/systems/support/i/planning/>).

Media labels and their contents

This information lists the optical media that you receive with your i5/OS order.

If you requested electronic software delivery, refer to the Electronic software delivery 

Web site for the list of filenames associated with the standard set and keyed set (http://www.ibm.com/servers/support/software/delivery/en_US/downloadinfo.html)

products.

Your media for installation needs to be arranged in the order that is listed.

Release identifier for V6R1: R01M00

Distribution media labels indicate the release and modification level in a format that is different from what appears on displays during installation. The release and modification level are shown in the format R0xM00.

Media type identifiers

Labels on the distribution media that are used for installation have unique identifiers. Media type identifiers are located on the center of the label. These identifiers help you determine when to use each media volume. The identifiers on the label are as follows: I_BASE_01, B29xx_01, B29xx_02, F29xx_01, and so on.

Note: With your V6R1 software order, you receive the *Prepare for install PTFs for V5R1, V5R2, and V5R3, SK3T-8163*, CD-ROM. This media is for V5R3-to-V6R1 upgrades and contains PTFs that you temporarily apply to be able to accept the online software agreements for V6R1 licensed programs.

When you are ready to install your new software, arrange the media in this order:

1. I_BASE_01 Licensed Machine Code

This language-independent Licensed Machine Code (Licensed Internal Code) supports all national language features. The Licensed Machine Code is part of the standard set of media.

Table 13. I_BASE_01

Product	Description
5761999	Licensed Machine Code

2. B29xx_01 IBM i5/OS

This media contains the base part of the i5/OS operating system, IBM-supplied libraries QGPL and QUSRSYS, and all i5/OS no-charge options.

Table 14. B29xx_01

Product	Description
5761SS1	i5/OS
5761SS1	i5/OS - Library QGPL
5761SS1	i5/OS - Library QUSRSYS
5761SS1 option 1	i5/OS - Extended Base Support
5761SS1 option 2	i5/OS - Online Information
5761SS1 option 3	i5/OS - Extended Base Directory Support
5761SS1 option 5	System/36 Environment
5761SS1 option 6	System/38 Environment
5761SS1 option 7	Example Tools Library
5761SS1 option 8	AFP Compatibility Fonts
5761SS1 option 9	*PRV CL Compiler Support
5761SS1 option 12	Host Servers
5761SS1 option 13	System Openness Includes
5761SS1 option 14	GDDM
5761SS1 option 18	Media and Storage Extensions ¹
5761SS1 option 21	Extended G11N Support
5761SS1 option 22	ObjectConnect
5761SS1 option 29	Integrated Server Support
5761SS1 option 30	Qshell
5761SS1 option 31	Domain Name System
5761SS1 option 33	Portable Application Solutions Environment
5761SS1 option 34	Digital Certificate Manager
5761SS1 option 35	CCA Cryptographic Service Provider
5761SS1 option 36	PSF for i5/OS 1-55 IPM Printer Support ¹
5761SS1 option 37	PSF for i5/OS 1-100 IPM Printer Support ¹
5761SS1 option 38	PSF for i5/OS Any Speed Printer Support ¹
5761SS1 option 39	International Components for Unicode
5761SS1 option 41	HA Switchable Resources ¹
5761SS1 option 42	HA Journal Performance ¹
5761SS1 option 46	Performance Viewer Open Source Components
¹ Indicates that the option requires a software license key. Note: 5761SS1 options 23, 26, 27, 44, and 45 (if ordered) are delivered on separate media. 5761SS1 option 43 is on the next (B29xx_02) DVD.	

3. B29xx_02

This media contains the no-charge licensed programs and keyed products.

Table 15. B29xx_02

Product	Description
5761SS1 option 43	Additional Fonts
5761AF1 *BASE	IBM Advanced Function Printing Utilities ¹

Table 15. B29xx_02 (continued)

Product	Description
5761AP1 *BASE (if media is in double-byte character set language)	IBM Advanced DBCS Printer Support for iSeries ¹
5761AP1 option 1 (if media is in double-byte character set language)	Advanced DBCS Printer Support - IPDS ¹
5761BR1 *BASE	IBM Backup Recovery and Media Services for i5/OS ¹
5761BR1 option 1	BRMS - Network Feature ¹
5761BR1 option 2	BRMS - Advanced Feature ¹
5722BZ1 *BASE	IBM Business Solutions
5761CM1 *BASE	IBM Communications Utilities for System i ¹
5761DE1 *BASE	IBM DB2 Extenders Version 9.1 for i5/OS ¹
5761DE1 option 1	DB2 Text Extender ¹
5761DE1 option 2	DB2 XML Extender ¹
5761DE1 option 3	Text Search Engine ¹
5761DG1 *BASE	IBM HTTP Server for i5/OS
5761DG1 option 1	Triggered Cache Manager
5761DP4 *BASE	IBM DB2 DataPropagator for iSeries V8.1 ¹
5761HAS *BASE	IBM System i High Availability Solutions Manager ¹
5722IP1 *BASE	Infoprint Server for iSeries ¹ Note: Option 1 (PS to AFP Transform), if ordered, is delivered on separate media.
5761JC1 *BASE	IBM Toolbox for Java
5761JS1 *BASE	IBM Advanced Job Scheduler for i5/OS ¹
5761JV1 *BASE	IBM Developer Kit for Java
5761JV1 option 6	Java Developer Kit 1.4
5761JV1 option 7	Java Developer Kit 5.0
5761JV1 option 8	J2SE 5.0 32 bit
5761JV1 option 9	J2SE 5.0 64 bit
5761JV1 option 10	Java SE Development Kit 6
5761JV1 option 11	Java SE 6 32 bit
5761JV1 option 12	Java SE 6 64 bit
5761LSV *BASE	IBM Extended Integrated Server Support for i5/OS
5761NAE *BASE	IBM Network Authentication Enablement for i5/OS
5761PT1 *BASE	IBM Performance Tools for i5/OS ¹
5761PT1 option 1	Performance Tools - Manager Feature ¹
5761PT1 option 2	Performance Tools - Agent Feature ¹
5761PT1 option 3	Performance Tools - Job Watcher ¹
5761QU1 *BASE	IBM Query for i5/OS ¹
5733SC1 *BASE	IBM Portable Utilities for i5/OS

Table 15. B29xx_02 (continued)

Product	Description
5733SC1 option 1	OpenSSH, OpenSSL, zlib functions
5761ST1 *BASE	IBM DB2 Query Manager and SQL Development Kit for i5/OS ¹
5761TC1 *BASE	IBM TCP/IP Connectivity Utilities for i5/OS
5761TS1 *BASE	IBM Transform Services for i5/OS
5761TS1 option 1	Transforms - AFP to PDF Transform
5722UME *BASE	IBM Universal Manageability Enablement for i5/OS
5761WDS *BASE	IBM WebSphere Development Studio for System i ¹
5761WDS option 21	Application Development ToolSet ¹
5761WDS option 31	ILE RPG ¹
5761WDS option 32	System/36 Compatible RPG II ¹
5761WDS option 33	System/38 Compatible RPG III ¹
5761WDS option 34	RPG/400 ¹
5761WDS option 35	ILE RPG *PRV Compiler ¹
5761WDS option 41	ILE COBOL ¹
5761WDS option 42	System/36 Compatible COBOL ¹
5761WDS option 43	System/38 Compatible COBOL ¹
5761WDS option 44	OPM COBOL ¹
5761WDS option 45	ILE COBOL *PRV Compiler ¹
5761WDS option 51	ILE C ¹
5761WDS option 52	ILE C++ ¹
5761WDS option 56	IXLC for C/C++ ¹
5761WDS option 60	Workstation Tools - Base ¹
5761XE1 *BASE	IBM System i Access for Windows
5761XH2 *BASE	IBM System i Access for Web ¹
5722XP1 *BASE	IBM System i Access for Wireless
5761XW1 *BASE	IBM System i Access Family ¹
5761XW1 option 1	System i Access Enablement Support ¹
¹ Indicates that the licensed program or option requires a software license key.	

4. F_MULTI_NLV

This media contains some additional no-charge licensed programs and keyed products.

Table 16.

Product	Description
5761JV1 option 13	J2SE 1.4.2 64 bit
5733QU2 *BASE	IBM DB2 Web Query for System i ¹
5733QU2 option 1	Active Reports ¹
5733QU2 option 2	OLAP Module ¹

Table 16. (continued)

Product	Description
5733QU2 option 4	Run Time User Enablement ¹
5733QU3 *BASE	IBM DB2 Web Query Report Broker ¹
5733QU4 *BASE	IBM DB2 Web Query Software Development Kit ¹
¹ Indicates that the licensed program or option requires a software license key.	

5. F29xx_01 Single licensed programs

This media contains individual products that you ordered. The first media volume is labeled as F29xx_01. If you receive more than one media volume for a single licensed program, the additional volumes are labeled F29xx_02, F29xx_03, and so on. Refer to “Licensed program releases and sizes” on page 181 for the single products available this release.

6. N29xx_01 Secondary Language Media

This media contains only language objects for the indicated secondary language. For secondary language media, the value for 29xx is the feature code of the secondary language as used for installation. “Feature codes for national language version” contains a listing of the specific national language feature codes.

7. SK3T-4091 i5/OS Information Center

This media volume comes with all i5/OS orders. This package includes the i5/OS Information Center and PDF versions of System i topics and manuals.

Notes:

1. Keep all of your distribution media. You might need them for recovery procedures.
2. Media identifiers that contain the string 29xx (where xx are numerals) indicate language-specific media. This string indicates the national language feature code for the primary language. For example, media labeled B2928_01 would be i5/OS with French as the primary language.
3. You might receive additional media volumes that do not conform to these descriptions. Examples include media that contain PRPQs or media for System i Access products that are installed on workstations. Also, IBM Business Partners might label the media differently.
4. Julian dates are shown in the form *yddd*. The *y* is the last digit of the year (0 through 9), and *ddd* is the day of the year (0 through 366). For example, the Julian date for 6 April 1998 would be shown as 8096 because 06 April is the 96th day of the year 1998.

Feature codes for national language version

Use this table to locate the appropriate i5/OS feature code for your primary or secondary language.

Note: Labels on the installation media indicate the feature code for the primary language (29xx). When you install the i5/OS operating system, the system prompts for the primary language in the form 29xx.

The secondary language feature code is only used when ordering secondary languages (55xx). When you install the secondary language, you select a feature code, in the form 29xx, from a list of national language feature code

identifiers. For example, if you ordered French as a secondary language, the secondary language media volume would be labeled N2928, and you would select 2928 from the list of feature codes when you install the secondary language.

Primary language feature code	Secondary language feature code	National language
2902	5502	Estonian
2903	5503	Lithuanian
2904	5554	Latvian
2905	5505	Vietnamese
2906	5506	Lao
2909	5509	Belgian English
2911	5511	Slovenian
2912	5512	Croatian
2913	5513	Macedonian
2914	5514	Serbian Cyrillic
2922	5522	Portuguese
2923	5523	Dutch Netherlands
2924	5524	English
2925	5525	Finnish
2926	5526	Danish
2928	5528	French
2929	5529	German
2930	5530	Japanese Universal
2931	5531	Spanish
2932	5532	Italian
2933	5533	Norwegian
2937	5537	Swedish
2938	5538	English Uppercase DBCS
2939	5539	German Multinational Character Set
2940	5540	French Multinational Character Set
2942	5542	Italian Multinational Character Set
2954	5554	Arabic
2956	5556	Turkish
2957	5557	Greek
2958	5558	Icelandic
2961	5561	Hebrew
2962	5662	Japanese Kanji
2963	5563	Belgian Dutch
2966	5566	Belgian French

Primary language feature code	Secondary language feature code	National language
2972	5572	Thai
2974	5574	Bulgarian
2975	5575	Czech
2976	5576	Hungarian
2978	5578	Polish
2979	5579	Russian
2980	5580	Brazilian Portuguese
2981	5581	Canadian French
2984	5584	English DBCS
2986	5586	Korean
2987	5587	Traditional Chinese
2989	5589	Simplified Chinese
2992	5592	Romanian
2994	5594	Slovakian
2995	5595	Albanian
2996	5596	Portuguese Multinational Character Set
2998	5598	Farsi

Blank displays

During an i5/OS installation, you will see blank displays at times.

If the blank displays are predictable, instructions give an approximate amount of time when there appears to be no installation activity. Other blank displays are less predictable because of unique situations on your system. If the processor light is blinking or reference codes are changing, the installation process is active. If the processor light goes out, the attention light turns on, and a reference code appears on the control panel, go to Chapter 14, "Troubleshooting software installation problems," on page 157 and follow the instructions.

Using D-mode IPL to refresh the vital product data

If you installed or upgraded to a POWER6 model and are starting the system for the first time, follow these steps to start your system and locate the load source.

Before you begin this procedure, be sure that you have completed the necessary hardware planning procedures and that you are familiar with how to set up and operate the Hardware Management Console (HMC). For more information about using the HMC as your i5/OS console, see the Operations Guide for i5/OS Consoles.


Ensure that your service representative has completed the hardware upgrade installation instructions and that your system is in Standby status.

To start your system and locate the load source, follow these steps:

1. Verify that your i5/OS system console is set up correctly and is ready.

If you are not using an HMC, the remaining console options are:

- Operations Console – LAN Attach
 - Operations Console – Direct Attach
2. Ensure that the alternate installation device is set up correctly. For instructions, see “Using an alternate installation device” on page 202 and then return here.
 3. Make sure that the I_BASE_01 Licensed Internal Code optical media is loaded into the device that is defined for the system.
 4. (Using an HMC only) On the HMC, in the Navigation area, expand the **Systems Management** folder.
 - a. In the Navigation area, click **Servers**. Select the server.
 - b. In the Contents area, select the logical partition that you want to start.
 - c. Select **Tasks > Operations > Activate**.
 - d. Under activation option, click **Manufacturing Default Configuration**. For the Keylock position, select **Manual**. For the IPL type, select **D: IPL from the alternate load source (CD or tape) for install**.
 - e. Click **OK** to activate the system. This IPL can take several minutes.
 5. (Using an HMC only) On the HMC console, open the console window.
 - a. On the HMC, in the Navigation area, expand the **Systems Management** folder.
 - b. In the Navigation area, click **Servers**. Select the server.
 - c. In the Contents area, select the logical partition that you want to start.
 - d. Select **Tasks > Console window > Open dedicated 5250 console**.
 6. The Select a Language Group display appears on the console device.

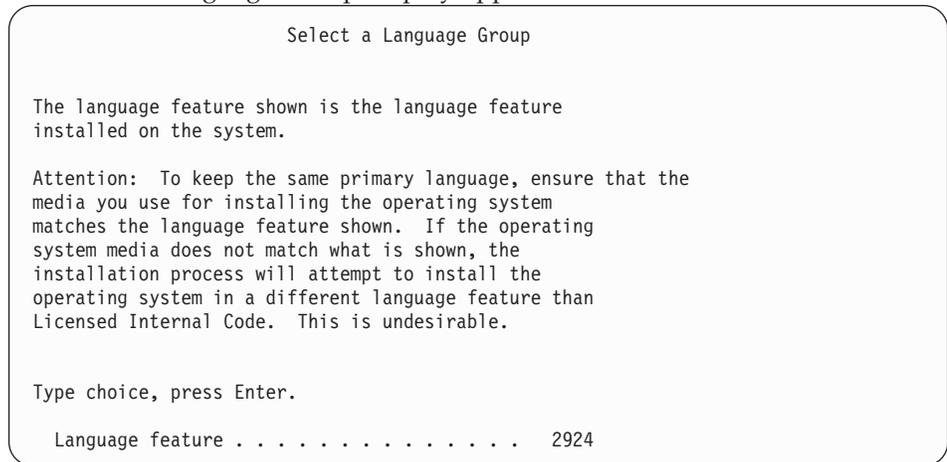


The language feature 2924 (English) is the default for this display.

Note: The installation media for Licensed Internal Code is now language-independent. It is important that you complete this step carefully.

To change the service tools language to match the primary language, type the language feature that appears on the media that contains the operating system.


Press Enter.

7. After you enter the language feature, the Confirm Language Group display appears.

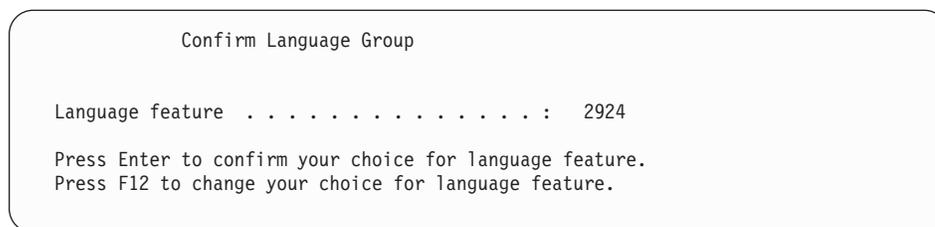

Press Enter.

8. The Install Licensed Internal Code display appears.

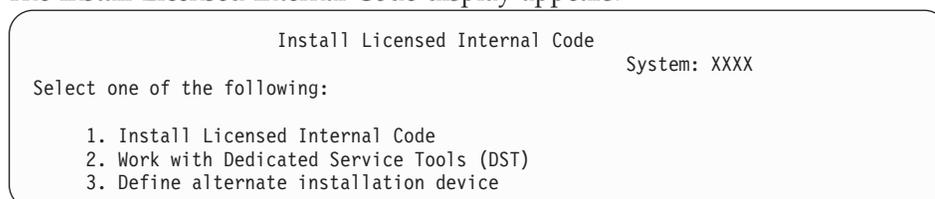

Select option 2 (Work with Dedicated Service Tools (DST)) and press Enter.

9. At the Sign On display, sign on as the security officer (QSECOFR for the service tools user and QSECOFR for the service tools password).
10. Select option 2 (Work with Disk Units) and press Enter.
11. Select option 8 (Update system vital product data) to identify the location of the load-source disk unit. Press Enter.
12. The Update System Vital Product Data display appears. Press Enter to confirm that the vital product data should be written. Press F12 twice. Then press 1 and Enter to exit DST.
13. (Using an HMC only) On the HMC, in the Navigation area, expand the **Systems Management** folder.
 - a. In the Navigation area, click **Servers**. Select the server.
 - b. In the Contents area, select the logical partition you want to start.
 - c. Select **Tasks > Properties**.
 - d. Select **Setting**. Change the IPL source to **B** and the keylock position to **Manual**.
 - e. Click **OK**.
14. (Using an HMC only) On the HMC, in the Navigation area, expand the **Systems Management** folder.
 - a. In the Navigation area, click **Servers**. Select the server.
 - b. In the Contents area, select the logical partition that you want to start.
 - c. Select **Tasks > Operations > Shutdown** to power off the logical partition.
15. (Using an HMC only) On the Shutdown Partitions window, under **Shutdown options**, select **Delayed**. Click **OK**.
16. (Using an HMC only) On the HMC, in the Navigation area, expand the **Systems Management** folder.
 - a. In the Navigation area, click **Servers**. Select the server.
 - b. Select **Tasks > Operations > Power On**.
 - c. Select **Partition auto start** and click **OK**.
17. (Not using an HMC only) Using the control panel, set IPL source to B - Manual and initiate Reboot.

Continue with your installation or hardware upgrade instructions.

System password

The system password identifies all model changes to help maintain the quality and integrity of the system. The system password also ensures the protection of IBM's intellectual property, including IBM Licensed Internal Code and licensed programs.

Support exists to detect processor model changes on all System i models through the use of a 16-character system password. New systems from the factory come with the correct system password already installed. A new system password is required for each model change or for conditions that indicate probable change of ownership. If you do not have the system password at the first IPL, contact your marketing representative to place a system password RPQ (Request for Price Quotation) order. IBM manufacturing receives the RPQ order and sends the system password to you for installation. If the correct system password is not entered, you can select a system-password bypass period to allow you to obtain the correct system password from your marketing representative. If the correct password is not available and the bypass period expires, the system will not complete the next IPL unless the correct password is installed. While in bypass mode, the system uses operator messages to indicate the time that remains until the bypass period expires.

Installed status values

Use these values to determine whether you can use a software product or whether you need to upgrade a licensed program.

Following is a description of the installed status values you might see on the LICPGM displays. You can use these values to determine whether you can use a product or whether you need to upgrade a licensed program. If you do not see a value of *COMPATIBLE, you can check the other installed status values for how to proceed.

***COMPATIBLE**

The product is installed. Its version, release, and modification is compatible with the installed level of the operating system. You can use this program with the installed level of the operating system.

***INSTALLED**

The product is installed, but might or might not be compatible with the installed level of the operating system.

Note: Licensed programs that are part of the single set will be listed on the display panel as *INSTALLED. You will need to verify that the release level of the licensed program is compatible with the release level of the operating system. For IBM products, either check the current release levels for licensed programs in the topic, "Licensed program releases and sizes" on page 181, or check with your software supplier before you use the licensed program.

***ERROR**

Either the product has not installed successfully or the product is only partially installed. For example, a language or a language object for the product is not installed. Use the Check Product Option (CHKPRDOPT) command to determine the cause of the failure. To determine the cause of a missing object, enter GO LICPGM and select options 10 and 50.

Note: The product lists now show many products, such as Programming Request for Price Quotations (PRPQ), licensed program offerings (LPO), and non-IBM products. This *ERROR status might have existed before the upgrade to the current operating system release, but was not detected. Use the CHKPRDOPT command to find out why the product shows an *ERROR, and contact your software provider if you need help correcting the problem.

***BACKLEVEL**

The product is installed. Its version, release, and modification is not compatible with the currently installed level of the operating system. To correct this problem, install a current release of this product. And if you have secondary languages, install a new release of these languages as well, using LICPGM menu option 21.

Note: If you use a licensed program that is listed as *BACKLEVEL, you run the risk of having an information mix up between release levels, or some portions of the licensed program might not work properly. An installed status value of *COMPATIBLE is desired.

***BKLVLOPT**

The product is installed. Its version, release, and modification is not compatible with the currently installed level of the base product that is associated with the option. To correct this problem, install a current release of this option.

***BKLVLBASE**

The product is installed, but its associated base product is not compatible with this option. To correct this problem, install a current release of the base product.

Blank (on LICPGM menu, option 11)

If no value is shown, a blank in the installed status column means that the product is not installed.

***NOPRIMARY**

The product is installed, but the language for the product is not the same as the primary language of the operating system. To correct this problem, install the primary language for the product by using the Restore Licensed Program (RSTLICPGM) command or from the LICPGM menu.

Note: If this product is an LPO, PRPQ or non-IBM product, it is possible that the licensed program (from the manufacturer) is not available in the primary language of the operating system.

Options on the Prepare for Install menu

Use this information to understand the different i5/OS functions on the Prepare for Install menu.

Highlights of this function include the following:

- Customizing an installation list. Preselecting licensed programs or options to be installed during the automatic installation process.
- Verifying the contents of the media before starting an installation.
- Determining additional storage requirements for the licensed programs that you plan to install.

This function appears as option 5 (Prepare for Install) on the Work with Licensed Programs menu. The Prepare for Install display appears when you select this option.

```

                                Prepare for Install
                                System:  XXXXXXXX

Type option, press Enter.
  1=Select

Opt   Description
-     Work with licensed programs for target release
-     Work with licensed programs to delete
-     List licensed programs not found on media
-     Display licensed programs for target release
-     Work with software agreements
-     Work with user profiles
-     Verify system objects
-     Estimate storage requirements for system ASP
-     Allocate additional space for LIC
-     Keep disk configuration

                                Bottom

F3=Exit  F9=Command line  F10=Display job log  F12=Cancel

```

For the instructions to use Option 5, Prepare for install, see “Required: Creating a custom list of software to install” on page 45.

With the **Work with licensed programs for target release** option, you can work with a list of the licensed programs for the target release. Use this option to verify the contents of the installation media and to create a customized list of licensed programs to install for the target release. The system can use the list you create to allow the installation processes that replace a release of software to also install the selected additional licensed programs. For more information, refer to “Verifying the contents of your software order” on page 27.

Note: This list does not include all products. Among those are programming request for price quotations (PRPQ), licensed program offerings (LPO), and licensed programs on the single set. If you want to install these products for the first time, use the G0 LICPGM menu, options 1 or 11.

With the **Work with licensed programs to delete** option, you can work with a list of installed licensed programs that should not remain on the system because either they are no longer supported or you chose not to replace them. This list also includes products for which no replacement was found on the distribution media. The display indicates the reason why a licensed program is included in this list, as well as provides options to save and delete any of the products listed. For more information, refer to “Cleaning up disk storage space” on page 51.

With the **List licensed programs not found on media** option, you can display a list of licensed programs that could replace existing products but that were not found on the optical distribution media. For more information on licensed program availability, refer to Chapter 15, “i5/OS software reference,” on page 181.

With the **Display licensed programs for target release** option, you can display the list of licensed programs that will be installed when you install the target release. For each licensed program in the list, you can display information such as the expected action during the installation process and whether a product option must be separately ordered. Use this option to verify your installation plans.

With the **Work with software agreements** option, you can review and accept software agreements prior to the installation of the target release. The agreements can be printed or displayed in different languages provided by the software provider. Any software agreement not accepted or specifically declined will result in the licensed program not being installed during the upgrade to the target release. If the Licensed Internal Code and i5/OS software agreements are not accepted, the upgrade to the target release is not allowed.

With the **Work with user profiles** option, you can work with a list of user profiles on the system and work with the objects owned by each user profile. Use this option to clean up user profiles that are no longer needed on the system before you install the target release. For more information, refer to “Cleaning up disk storage space” on page 51.

With the **Verify system objects** option, the system verifies that the system directory entries include the user profiles needed by the installation process. The system also checks database cross reference files for errors. If necessary, the QSECOFR and QLPINSTALL user profiles are added to the system distribution directory. For more information, refer to “Verifying user profiles and checking cross-reference files” on page 35.

With the **Estimate storage requirements for system ASP** option, you can determine whether additional storage is needed before you begin the installation process. This option helps you plan for growth in licensed programs that are listed on the Work with Licensed Programs for Target Release display. This option does not consider licensed programs that are not in the standard set or keyed set, Programming Request for Price Quotations (PRPQs), licensed program offerings (LPOs), or system conversion growth such as spooled files. The option also does not consider storage required for temporarily applied program temporary fixes (PTFs).

The **Allocate additional space for LIC** option is one method that can be used to allocate additional space that is needed before upgrading the release. However, on V5R3, this option does not provide status on whether the space can be allocated. If you are upgrading from V5R3, the preferred method of allocating additional space is to use the Allocate Licensed Internal Code (LIC) Space API (QLPALCSP). Directions for doing this are included in “Required (if upgrading from V5R3M0): Allocating additional space for Licensed Internal Code” on page 53.

With the **Keep disk configuration** option, you can change your disk configuration before you upgrade or replace a release.

Options on Work with Licensed Programs menu


Use this information to determine when and how you can use these options.

For each display, you can use the Help key for more information about the display.

Manual installation Option 1. Install all

Option 1 (Install all) on the Work with Licensed Programs menu enables you to install all of the licensed programs and optional parts of the licensed programs from distribution media.

Secondary languages on distribution media can also be installed with this option.

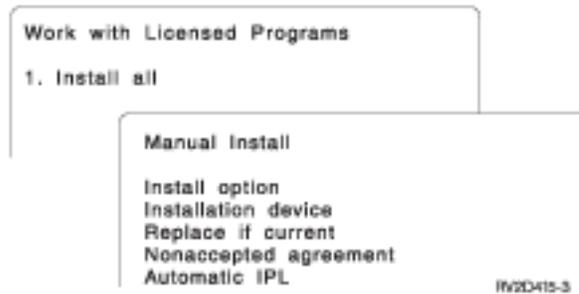

The Manual Install display allows you to make choices for the prompts in the following list. Use the Help key for more information about each prompt.

1. Install option

This option determines what types of licensed programs and optional parts are installed from the distribution media. You can choose to install only new releases of products that already exist on your system, install all products, install only new products, or install new releases of products that exist on your system plus additionally selected products.

Note:

- a. The *Install option* does not apply to the QGPL and QUSRSYS libraries. QGPL and QUSRSYS libraries are always installed if they are found on the media. For all *Install option* choices, only new objects are installed in the QGPL and QUSRSYS libraries.
- b. To complete the installation successfully, the installation media must contain all renewed products that are currently installed on your system. The installation media might contain products whose version, release, and modification is earlier than that of the new operating system release. (The products did not renew at the same time as the operating system.)

2. Installation device

The examples in this topic use OPT01 for the name of the installation device. For more information about the installation device naming convention, see “Types of software installation devices” on page 10.

3. Replace if current

By specifying *NO, the licensed programs that are currently installed and that are at the same release level on the installation media will not be replaced during an upgrade. You can change the *Replace if Current* parameter to *YES if you want to replace licensed programs that are already installed, including products installed at the same release level as on the installation media. By choosing *YES, you might have to reapply PTFs to some licensed programs that were replaced from the media.

4. Nonaccepted agreement

During the installation of licensed programs, if the software agreement has not been previously accepted, the nonaccepted agreement option determines if you will be prompted to accept or decline the software agreement, or if the installation will continue without installing the licensed program. A value of 1 indicates that you do not want to install the licensed program. A value of 2 indicates that you want to display the licensed program and accept the software agreement.

5. Automatic IPL

This option determines whether the system will automatically IPL when the installation process has completed successfully.

Attention: If you do this on a primary partition when secondary partitions are active, this will cause all partitions to do an IPL immediately. If you have active secondary partitions, power them off prior to using this procedure.

If you are using the Hardware Management Console, refer to Managing your server using the Hardware Management Console in the IBM Systems Hardware Information Center.

Automatic installation options

The i5/OS Prepare for Install option helps you to create an installation list and select the programs that you want to install during the automatic installation process.

The Prepare for Install option also helps you verify the contents of the installation media and determine the storage requirements, among other necessary tasks in preparation for automatic installation. “Options on the Prepare for Install menu” on page 220 describes Option 5 (Prepare for Install) in more detail.

Option 5. Prepare for Install

“Required: Creating a custom list of software to install” on page 45 provides the instructions for using Option 5 (Prepare for Install).

Options for displaying, installing, deleting, and saving from a list

Licensed programs can be displayed, installed, deleted, or saved from a list through the Work with Licensed Programs menu.

Option 10. Display installed licensed programs

After an i5/OS installation process has completed, it is often necessary to determine if a licensed program is installed successfully on your system. To do this, select option 10 (Display installed licensed programs) on the Work with Licensed Programs menu.

The Display Installed Licensed Programs display shows the licensed programs, optional parts, and IBM-supplied user libraries that are installed on your system.

The Installed Status column indicates whether the licensed program is successfully installed. Refer to “Installed status values” on page 219 for a description of the installed status values.

If a licensed program did not install successfully, use the recovery procedures in Chapter 14, “Troubleshooting software installation problems,” on page 157 to install the licensed program again.

You can use the F11 key to view the Installed Release column. This column shows the release and modification of each installed licensed program. The F11 key has a third view, also, that shows the product option number of each licensed program.


Option 11. Install licensed programs

Option 11 (Install licensed programs) on the Work with Licensed Programs display shows a list of licensed programs and optional parts of licensed programs that

were supported by the LICPGM installation processes at the time your currently installed i5/OS operating system became available.

Note: Before you install any licensed programs, be sure to check the product documentation in the i5/OS Information Center and also the documentation that comes with the product for any special instructions.

You can use this list to select licensed programs and optional parts to be installed on your system. You can also use this list to install a licensed program that did not successfully install during a previous installation process.

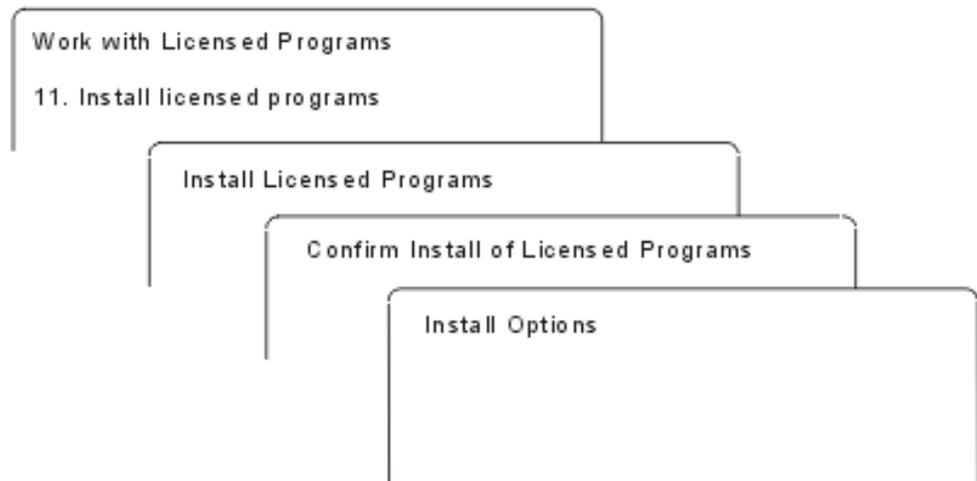

To install one or more licensed programs from the list, type a 1 in the Option column next to the licensed programs and any optional parts that you want to install. For a list of the licensed programs that are on the media, refer to "Licensed program releases and sizes" on page 181.

A licensed program you want to install might not be listed on the Install Licensed Programs display. If a licensed program is not listed, it can be added to the list by entering information into the blank fields at the top of the list. After you press Enter, this product then appears on the list with the other products.

1. Type 1 in the Option column
2. Type the product identifier in the Licensed Program column
3. Type the product option value in the Product Option column
4. Press Enter

When you are typing the product option, the system accepts only the following three values: *BASE, option number, or *ALL.

- A value of *BASE installs only the base product of the associated product identifier.
- The product option number installs only the particular option of the associated product identifier. To be able to install options, you must install the base product (*BASE).
- A value of *ALL installs the base product and all options of the associated product identifier that are found on the media.

Keep in mind that licensed programs that you add will appear on the list with only the product identifier and will not give a descriptive name of the product.

The Confirm Install of Licensed Programs display shows which licensed programs you selected to install. If you do not need to make any changes, press Enter to confirm your choices.

Fill in the following choices on the Install Options display. Use the Help key for more information about each prompt on this display.

1. Installation Device

The examples in this topic use OPT01 for the name of the installation device. For more information about the installation device naming convention, see “Types of software installation devices” on page 10.

2. Objects to install

This option allows you to choose to install both programs and language objects, only programs, or only language objects.

3. Automatic IPL

This option determines if the system automatically IPLs after the installation process has completed successfully.

When the licensed programs are installed, the Work with Licensed Programs menu or the Sign On display appears again. To verify that all of the licensed programs are installed successfully, use option 50 (Display log for messages). (More information about that option is available in “Completion status” on page 230.) If an error occurs, you will see the message Work with licensed program function not complete, on the bottom of the Work with Licensed Programs display. Go to Chapter 14, “Troubleshooting software installation problems,” on page 157 to determine the problem.

If you install a licensed program or optional part again, you must also install the PTFs for that licensed program again.


Option 12. Delete licensed programs

Option 12 on the Work with Licensed Programs menu is used to delete a licensed program or optional part of a licensed program that is installed on a system.

Note: Before you delete a licensed program, review “Considerations for deleting licensed programs” on page 155 and then return here.

When you select this option, the Delete Licensed Programs display appears. The list shows the licensed programs and optional parts that are installed on your system. Use this list to select licensed programs or optional parts to delete.

If you delete a (*BASE) licensed program that has optional parts, the system deletes all of the optional parts for that licensed program. If you delete only an optional part, the base program and other optional parts remain on your system. This option deletes all objects that are associated with the licensed program or optional part you select.

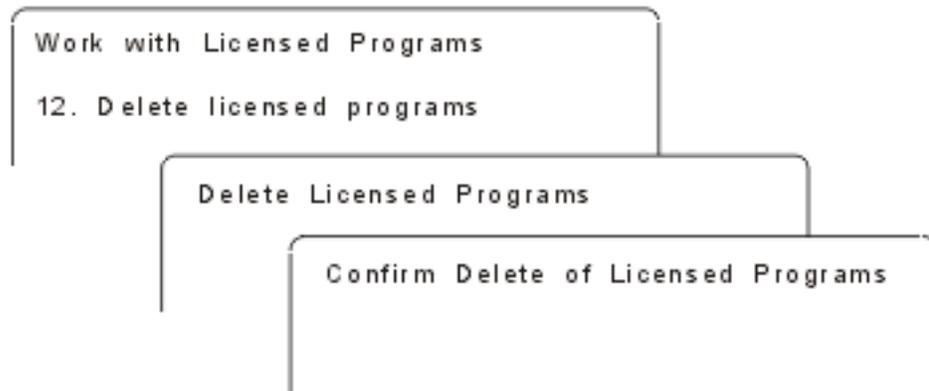


Type a 4 in the Option column next to the licensed program or optional part of a licensed program that you want to delete from your system.

The Confirm Delete of Licensed Programs display shows you which licensed programs or optional parts you selected to delete. Press Enter to delete the licensed programs or optional parts.

Option 13. Save licensed programs

Option 13 on the Work with Licensed Programs menu is used to save one or more licensed programs for redistribution.

The Save Licensed Programs display lists the licensed programs and optional parts that are installed on your system. Use this list to select licensed programs or optional parts to save. Type a 1 in the option column on the Save Licensed Programs display next to the licensed programs that you want to save.

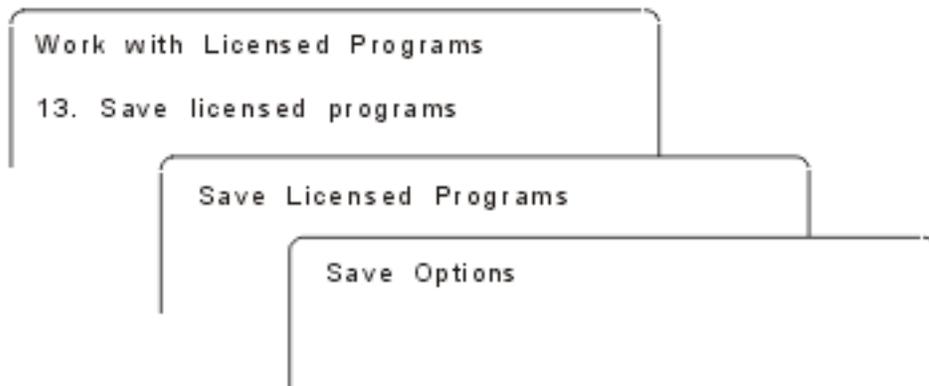

Fill in the information on the Save Options display by using the following information.

Use the Help key for more information for each of the prompts on the display.

1. Device

The examples in this topic use TAP01 for the name of the tape device. For more information about the tape device naming convention, see “Types of software installation devices” on page 10.

2. Sequence number

Use *Default, or enter your choice for the sequence number to be used for the save process.

3. End of media option

Tape: Determines the automatic positioning operation that is done on the tape volume when the save operation is completed. In the case of a multiple-volume save operation, this parameter applies to the last volume only. All other volumes rewind and unload if the tape reaches its end. You can specify these values:

- *REWIND: The tape automatically rewinds after the operation ends, but it does not unload the tape.
- *LEAVE: The tape does not rewind or unload after the operation ends. It remains at the current position on the tape drive.
- *UNLOAD: The tape automatically rewinds and unloads after the operation ends.

Optical: Specifies the operation that is automatically performed on the optical volume after the save operation ends. Optical devices only support the special value *UNLOAD. They ignore *REWIND and *LEAVE. Some optical devices will eject the volume after the operation ends.

Notes:

1. Licensed programs and optional parts that are shipped independently of an operating system release or modification are not displayed. Use the Save Licensed Program (SAVLICPGM) command to save independently shipped IBM licensed programs and optional parts.
2. This option should not be used for backup and recovery. It is only for redistribution. More information about redistribution is available in the Distributing software topic in the i5/OS Information Center. For information about saving your system, refer to the Backing up your system topic in the i5/OS Information Center.


Options for secondary languages

Secondary languages on an i5/OS system can be displayed, installed, or deleted.

Option 20. Display secondary languages

After an i5/OS installation process has completed, it is often necessary to determine if a secondary language is installed successfully on your system. To do this, select option 20 on the Work with Licensed Programs menu.

The Display Installed Secondary Languages display shows the primary and any secondary languages that are installed on your system.

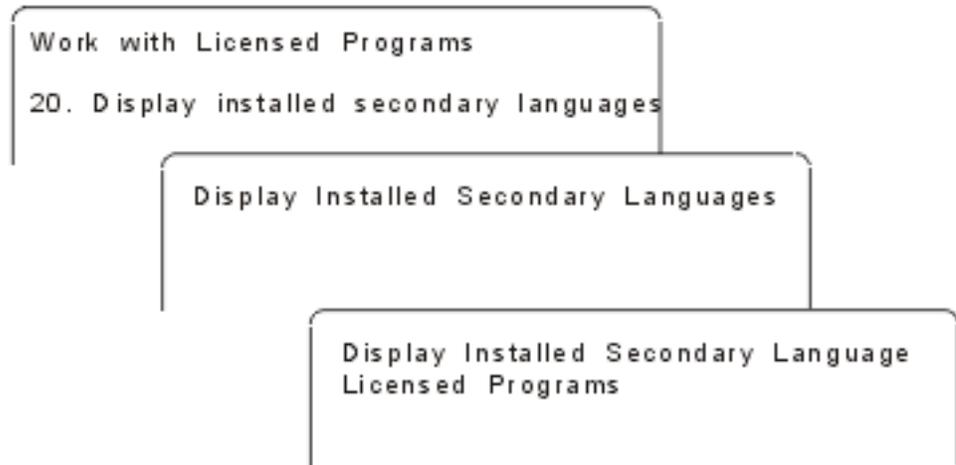


Type 5 in the Option column next to a secondary language, and press Enter to see the licensed programs that are installed with the particular secondary language. This information is shown on the subsequent display, Display Installed Secondary Language Licensed Programs. By pressing the F11 key a few times, you will see this display change information. This display shows the secondary language library, product release, installed status value, or product option.

For a description of the installed status values, refer to “Installed status values” on page 219.

Option 21. Install secondary languages

Option 21 on the Work with Licensed Programs display is used to selectively install a secondary language for the licensed programs that are installed on a system.

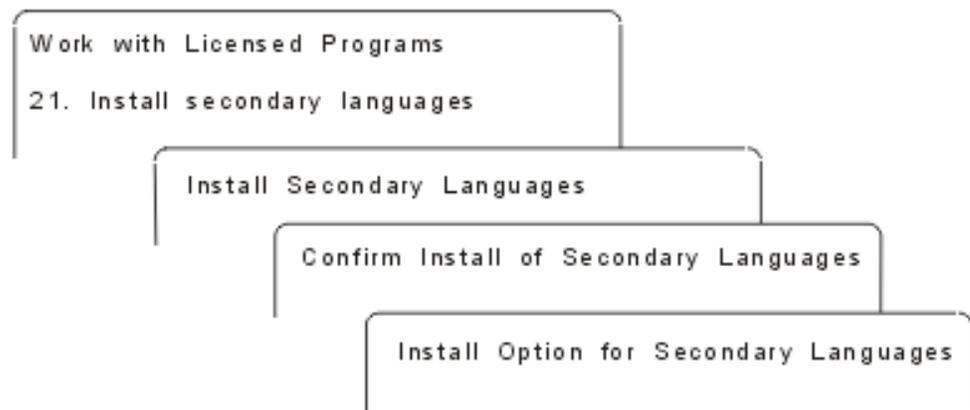

Type 1 by the language you want to install, and press Enter. Only one secondary language can be installed at a time. The Confirm Install of Secondary Language display shows the following:


- The language you selected to install
- The library where it will be installed
- The release level of the language

On the Install Option for Secondary Languages display, select your installation device and specify yes or no for the Replace if current parameter.

The examples in this topic use OPT01 for the name of the installation device. "Types of software installation devices" on page 10 contains more information about the installation device naming convention. By specifying *NO to the Replace if current parameter, the secondary languages that are currently installed and at the same release as on the installation media are not be replaced during an upgrade. You can change the Replace if current parameter to *YES if you want to replace secondary languages that are already installed, including secondary languages installed at the same release as on the installation media.

Option 22. Delete secondary languages

Option 22 on the Work with Licensed Programs display is used to delete secondary languages that you no longer want installed on your system.

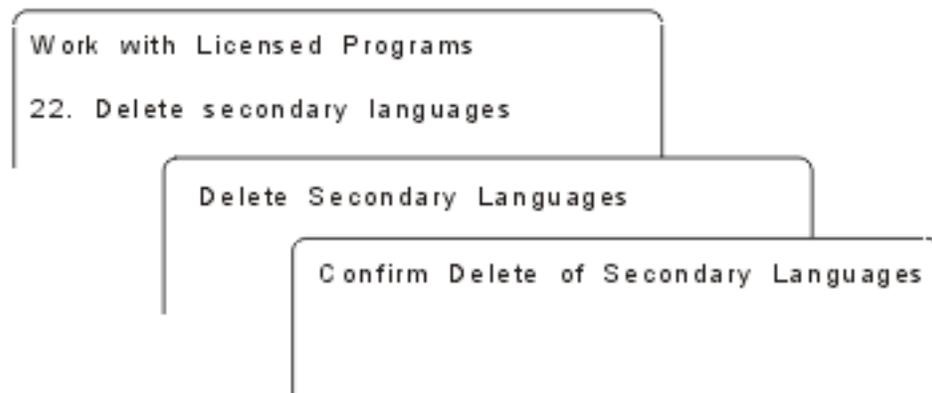

On the Delete Secondary Languages display, type 4 to select the secondary language that you want to delete. Press Enter. Press Enter again at the confirmation display.


More information about secondary language libraries in user profiles is available in the i5/OS Globalization topic in the i5/OS Information Center.

Completion status

When you install licensed programs, a secondary language, or PTFs, make sure that the i5/OS installation process has successfully completed to avoid problems when you begin using the system.

Option 50. Display log for messages

Selecting option 50 shows the Display Install History display. Press Enter to view the installation start and completion messages on the Display History Log Contents display. This option displays specific messages that are shown in the history log.

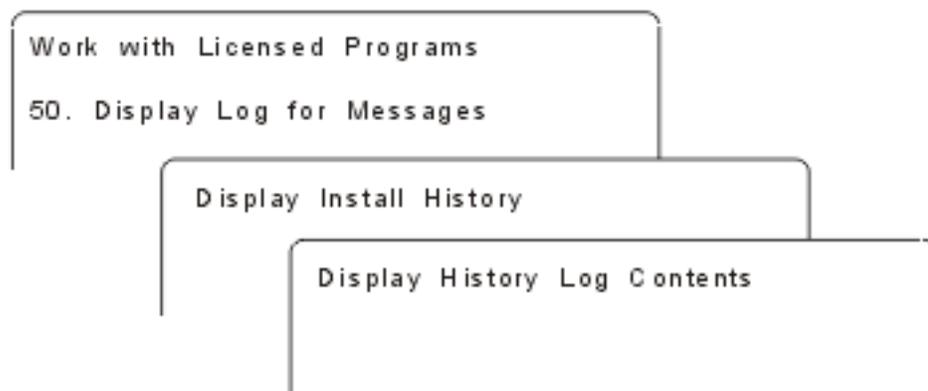

Each part of the installation process (such as licensed programs, PTFs, Initialize System (INZSYS)) should have a completion message. If you do not see the message on the display, wait a few minutes and select option 50 again. If you still do not see a completion message, use the recovery procedures in Chapter 14, “Troubleshooting software installation problems,” on page 157 to install any licensed programs or PTFs that were not successfully installed.

Commands related to the Work with Licensed Programs menu

Options 70, 71, and 72 display menus of additional i5/OS commands that you can use.

Option 70 shows the Save and Restore Commands display. This display shows a list of related command menus you can use.

Option 71 shows the Program Temporary Fix Commands display. You can use these commands to work with one or more individual PTFs. For ore information about fixes, see Using software fixes in the i5/OS Information Center.

Option 72 shows the Licensed Commands display.

More information about the following commands is available in the topic Control language (CL) in the i5/OS Information Center.

CPYPTFSAVF	Copy PTF to Save File
CRTPTF	Create Program Temporary Fix
CRTPTFPKG	Create PTF Package
HLDPTF	Hold Program Temporary Fix
ORDSPTPTF	Order Supported Product PTFs
RLSPTF	Release Program Temporary Fix
SNDPTF	Send Program Temporary Fix

Chapter 16. Related information for Installing, upgrading, or deleting i5/OS and related software

This list includes related sources of information for i5/OS software installation or upgrades.

Manuals

- **Memo to Users** (about 50 pages)
This document provides information about software and hardware changes that might potentially affect your system operations.

IBM Redbooks

- **i5/OS Program Conversion: Getting Ready for i5/OS V6R1** 
This Redpaper contains suggestions and instructions for analyzing and converting programs for V6R1.
- **IBM System i5 Handbook**  (V5R4)
This book provides a product overview of the eServer and IBM Systems i5 and System i servers. It discusses the features, functions, and technical specifications for server models offered today, and identifies the software supported by the current product line. Use this Web page (<http://publib-b.boulder.ibm.com/cgi-bin/searchsite.cgi?query=iseries+AND+handbook>) to search for the correct version.
- **iSeries and TotalStorage: A Guide to Implementing External Disk on eServer i5; SG24-7120** 
This book is used for planning and implementation considerations when booting to i5/OS from the load-source disk unit that is attached via the 2847 I/O processor.

Web sites

- **Support for IBM System i**  (<http://www.ibm.com/systems/support/i>)
This Web site contains tools and resources such as preventive service planning (PSP) information and authorized problem analysis reports (APARs) that help you with your software installation.
- **IBM System i Support: Planning**  (<http://www.ibm.com/systems/support/i/planning/>)
This Web site provides links to a variety of planning tools and information. The page on Upgrade planning - i5/OS and OS/400 level mapping shows which releases of i5/OS or OS/400 are supported by each of the System i, iSeries, and AS/400 RISC models.
- **System i Support Planning: Migration and Upgrades** 
(<http://www.ibm.com/systems/support/i/planning/migrationupgrade.html>)

This Web site provides product previews, Statements of Directions, and information about products or features that might not be supported in future releases of the i5/OS operating system or on future System i models.

- **IBM Electronic Service Agent for iSeries**  (<http://publib.boulder.ibm.com/isrvagt/sdsadoc.html>)

This Web site provides information on Electronic Service Agent™, which is part of the i5/OS operating system. Electronic Service Agent provides a hardware problem reporting function that predicts and prevents hardware errors by early detection of potential problems, downloads, fixes, and automatically calls IBM Service when necessary. Supplemental service information to aid in problem determination is sent and made available to IBM support centers for timely and proactive problem resolution.

- **Entitled software support**  (<http://www.ibm.com/eserver/ess>)

From this Web site you can download licensed programs, manage your software keys, and manage your Proofs of Entitlement. If you have a Software Maintenance Agreement (SWMA), you can order software upgrades.

- **Electronic software delivery** 

(http://www.ibm.com/systems/support/software/delivery/en_US/downloadinfo.html)

This Web site provides additional information on downloading IBM licensed programs and preparing for installation.

- **Installing from virtual optical storage using the Network File System** 

(ftp.software.ibm.com/systems/support/power/i/nfs_optical_upgrade.pdf)

This document provides information about installing IBM i5/OS software from virtual optical storage using the Network File System.

Other information in the i5/OS Information Center

- **Backup and recovery**

This category contains information about how to plan a backup and recovery strategy, how to set up disk protection for your data, how to back up your system, and how to control your system shutdown in the event of a failure. It also includes information about the Backup, Recovery, and Media Services plug-in to System i Navigator.

- **Basic system operations**

This topic collection contains information about i5/OS basic operations, concepts, and analyzing and reporting system problems.

- **Distributing software**

The Distributing software topic collection describes how you can distribute some or all of the programs on a system, including the operating system, to another system.

- **Logical partitions**

The Logical partitions topic collection describes how you distribute resources within a single system to make it function as if it were two or more independent systems.

- **Maintaining and managing i5/OS and related software**

This topic collection indicates how you can manage and maintain fixes and licensed programs in your network.

|
|
|
|

- **Storage solutions**

The Storage solutions category steps you through the world of system storage. It helps you make choices about which storage technologies are right for your company now and which technologies might be useful in the future.

Chapter 17. Code license and disclaimer information

IBM grants you a nonexclusive copyright license to use all programming code examples from which you can generate similar function tailored to your own specific needs.

SUBJECT TO ANY STATUTORY WARRANTIES WHICH CANNOT BE EXCLUDED, IBM, ITS PROGRAM DEVELOPERS AND SUPPLIERS MAKE NO WARRANTIES OR CONDITIONS EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT, REGARDING THE PROGRAM OR TECHNICAL SUPPORT, IF ANY.

UNDER NO CIRCUMSTANCES IS IBM, ITS PROGRAM DEVELOPERS OR SUPPLIERS LIABLE FOR ANY OF THE FOLLOWING, EVEN IF INFORMED OF THEIR POSSIBILITY:

1. LOSS OF, OR DAMAGE TO, DATA;
2. DIRECT, SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES, OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES; OR
3. LOST PROFITS, BUSINESS, REVENUE, GOODWILL, OR ANTICIPATED SAVINGS.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, SO SOME OR ALL OF THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Appendix. Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.

For license inquiries regarding double-byte (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

IBM World Trade Asia Corporation
Licensing
2-31 Roppongi 3-chome, Minato-ku
Tokyo 106-0032, Japan

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

IBM Corporation
Software Interoperability Coordinator, Department YBWA
3605 Highway 52 N
Rochester, MN 55901
U.S.A.

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement, IBM License Agreement for Machine Code, or any equivalent agreement between us.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

COPYRIGHT LICENSE:

This information contains sample application programs in source language, which illustrate programming techniques on various operating platforms. You may copy, modify, and distribute these sample programs in any form without payment to IBM, for the purposes of developing, using, marketing or distributing application programs conforming to the application programming interface for the operating platform for which the sample programs are written. These examples have not been thoroughly tested under all conditions. IBM, therefore, cannot guarantee or imply reliability, serviceability, or function of these programs.

Each copy or any portion of these sample programs or any derivative work, must include a copyright notice as follows:

© (your company name) (year). Portions of this code are derived from IBM Corp. Sample Programs. © Copyright IBM Corp. _enter the year or years_. All rights reserved.

Programming interface information

This Installing, upgrading, or deleting i5/OS and related software publication documents intended Programming Interfaces that allow the customer to write programs to obtain the services of i5/OS.

Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

400
Advanced Function Printing
AFP
AIX
APL2
AS/400
CICS
DataPropagator
DB2
DB2 Extenders
Distributed Relational Database Architecture
Domino
DRDA
Electronic Service Agent
eServer
GDDM
i5/OS
IBM
IBM (logo)
ImagePlus
Infoprint
IPDS
iSeries
Lotus
OS/400
POWER
PowerPC
POWER5
POWER6
Redbooks
RPG/400
Sametime
System i
System/36
System/38
Tivoli
Tivoli Management Environment
VisualAge
VisualInfo
WebSphere
xSeries

Adobe, Acrobat, Portable Document Format (PDF), and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States, other countries, or both.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft, Windows, and the Windows logo are trademarks of Microsoft Corporation in the United States, other countries, or both.

Java and all Java-based trademarks are trademarks of Sun Microsystems, Inc. in the United States, other countries, or both.

Other company, product, and service names may be trademarks or service marks of others.

Terms and conditions

Permissions for the use of these publications is granted subject to the following terms and conditions.

Personal Use: You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of IBM.

Commercial Use: You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.

Index

A

- additional licensed programs,
 - installing 127
- alternate installation device 202
 - automatic installation 58, 68
 - how to verify and select, during a manual installation 206
 - IPL-type D from devices without IOP 202
- automatic installation 57
 - before you begin 57
 - recovery 162
 - steps to replace a release 58

B

- Backup Recovery and Media Services for i5/OS
 - conversion time 199
- blank display, response to 216

C

- changing primary language 143
- checklist
 - completing installation 138
 - estimating installation time 188
- checklist, readiness
 - new software installation 99
 - software upgrade or replacement 23
 - software upgrade or replacement of same release 93
- command, CL
 - Delete Library (DLTLIB)
 - when not to use 155
 - Display Software Resources (DSPSFWRSC) 224
 - restore licensed program (RSTLICPGM) command
 - to install secondary languages 137
- common method
 - estimating installation time 186
- completion status
 - display log for messages using option 50 230
- compressed objects and storage space
 - concepts 18
- concepts for software installation
 - compressed objects and storage space 18
 - contents of software order 12
 - globalization
 - changing primary language 20
 - installing secondary language 20
 - overview 19
 - IBM-supplied object 17
 - media distribution set 14
 - mixed-release environment 16
 - object conversion 21

- concepts for software installation
 - (continued)
 - overview 7
 - product documentation 15
 - releases supported,i5/OS
 - upgrades 16
 - skipping release 15
 - software installation device 11
 - software installation process 7
 - software licensing documents 12
- condition
 - affecting installation time 186
- contents of software order
 - concepts 12
 - verifying 27, 101
- conversion
 - Backup Recovery and Media Services for i5/OS 199
 - database file 199
 - integrated file system 198
 - objects that contain SQL statements 198
 - program 195
 - spooled file 195
 - times 194
- CPA9E1B message 89, 97, 140
- cross-reference file
 - checking before upgrade 35
- cumulative PTF packages
 - ordering 103
- custom list
 - software for installation 45

D

- data protection mechanism
 - installation time 200
- database file
 - conversion 199
- Delete Library (DLTLIB) command
 - when not to use 155
- deleting
 - licensed program 155
 - determining unused parts 153
 - licensed program from list 226
 - licensed programs and optional parts
 - notes about 155
 - using option 12 155
 - using the DLTICPGM command 155
 - secondary languages
 - using option 22 230
 - software related to i5/OS 153
- disk configuration
 - choosing before upgrade 54
 - warning and error messages 173
- display
 - blank 216
- Display Software Resources (DSPSFWRSC) command 224

- displaying
 - installed licensed programs using option 10 224
 - installed secondary languages using option 20 228
- DLTLIB (Delete Library) command
 - when not to use 155
- document
 - software installation 102
 - software upgrade or replacement 27
- DSPSFWRSC (Display Software Resources) command 224

E

- environment, mixed release
 - overview 16
- estimating installation time
 - common methods 186
 - how process affects 187
- estimating installation time :
 - checklist 188

F

- fast path
 - installation, upgrade, or deletion tasks 3
- feature code
 - national language version 214
- fixes (PTFs)
 - obtaining record for upgrading same release 95
 - required for upgrades 30

G

- globalization
 - changing primary language 20
 - installing secondary language 20
 - preparing 40
 - software installation concepts 19
- GO LICPGM (Go Licensed Program) menu
 - completion status options
 - using option 50 230
 - licensed programs options
 - using option 10 224
 - using option 11 225
 - using option 12 226
 - using option 13 227
 - related commands
 - using option 70 231
 - using option 71 231
 - secondary languages options
 - using option 20 228
 - using option 21 229
 - using option 22 230

I

- i5/OS upgrade
 - supported releases 16
- IBM-supplied object
 - concepts 17
- image catalog
 - preparing optical 42
 - recovery 158
 - scenario for upgrade 41
 - space required for installation 41
 - virtual media device 201
- image catalog (virtual media device)
 - automatic installation 57
- image catalog (virtual optical device)
 - automatic installation 67
 - licensed program installation 128
- image catalog recovery 158
- information resource
 - software installation 102
 - software upgrade or replacement 27
- Initialize System (INZSYS)
 - recovery 172
- install option
 - displaying, installing, deleting, and saving from list 224
- installation
 - completion checklist 138
 - licensed program
 - from list 225
- installation device
 - alternate 202
 - choosing 40
- installation method
 - choosing 40
- installation note
 - i5/OS 209
- installation problems
 - troubleshooting 157
- installation process
 - estimating installation time 187
- installation tasks
 - initial 103
- installation time
 - common methods of estimating 186
 - conditions that affect 186
 - data protection mechanism 200
 - estimating 188
 - how process affects 187
- installation, new software
 - overview 101
- installing
 - licensed programs and optional parts
 - using option 11 225
 - secondary languages
 - using Work with Licensed Programs menu 134
 - secondary languages using option 21 229
- installing additional licensed programs 127
- installing Licensed Internal Code
 - new logical partition 105
- installing licensed program
 - times for 190
- installing secondary language 134

- installing software
 - new logical partition or system 112
 - new system without operating system 112
- installing the i5/OS release 105
- installing, software
 - new system with operating system 123
 - before you begin 123
- integrated file system conversion 198
- interoperability
 - description 108
- INZSYS (Initialize System)
 - recovery 172

K

- keys, software license
 - verifying 29, 102

L

- license agreement
 - accepting 49
- license keys
 - verifying 29, 102
- Licensed Internal Code
 - installing on new logical partition 105
 - recovery 162
 - space for 53
- licensed program
 - adding additional to installation list 48
 - deleting 52
 - from list 226
 - notes about 155
 - procedures for 155
 - using option 12 155
 - using the DLTLICPGM command 155
 - determining unused parts to delete 153
 - fix support 33
 - installation
 - from list 225
 - installing after changing primary language 148
 - preselecting 46
 - recovery 166
 - releases and sizes 181
 - restoring
 - using option 11 225
 - using the RSTLICPGM command 225
 - saving
 - using option 13 228
 - using the SAVLICPGM command 228
 - times for installing 190
- licensed program documentation
 - concepts 15
- licensed programs, installing additional 127

LICPGM menu

- using
 - to install secondary languages 134
- list, custom
 - software for installing 45
- load-source disk requirement 50, 103
- load-source verification
 - space available for upgrade 41
- logical partition
 - automatic installation 58, 68, 105
 - installing Licensed Internal Code 105
 - installing software 112
 - licensed program installation 128

M

- manual installation 67
- media distribution set
 - concepts 14
- media label
 - overview 210
- method
 - estimating installation time 186
- mixed-release environment
 - concepts 16

N

- national language version
 - feature codes 214
- national language version feature code
 - where used 115, 135
- non-IBM tape device
 - description 201

O

- object
 - concepts for software installation 17, 18, 21
- object conversion
 - concepts 21
- object, system
 - verifying integrity before upgrade 35
- operating system
 - installing on new system 112
 - installing software on new system 123
 - recovery 164
 - replacing i5/OS when adding new release 76
- Operations Console
 - automatic installation 54, 58, 68, 104, 105
 - recovery 159
- optical device
 - description 200
- optical devices
 - virtual 11
- optical distribution media
 - verifying for new installation 102
 - verifying for software upgrade or replacement 28
- optical image catalog
 - preparing for upgrade 42

- optical media
 - overview of i5/OS 210
- order, software
 - verifying 27, 101
- OS/400 (i5/OS) upgrade
 - nonsupported models 17
- overview
 - new software installation 101
 - software installation 7

P

- password
 - description of system 219
- performance data
 - collecting before upgrade 38
- power-off condition
 - starting from 175
- Prepare for Install menu
 - automatic installation 224
 - overview 220
- preparing
 - software upgrade or replacement 27
- preventing problems
 - blank display 216
- preventive service planning information
 - new installations 103
- primary language
 - changing 143
 - using secondary language media 144
 - installation concepts for changing 20
 - installing licensed programs after
 - changing 148
 - what's new 19
- process
 - installation time 187
- product
 - releases and sizes 181
 - times for installing 190
- product documentation
 - concepts 15
- product library
 - system ASP 36
- program conversion 195
- program temporary fix (PTF)
 - commands 231
 - permanently applying 32
 - software agreement 32
- PTF (program temporary fix)
 - commands 231
 - permanently applying 32
 - recovery 166
 - required for upgrades 30
 - software agreement 32
 - support for licensed program 33

R

- recovery
 - after using reference codes 178
 - automatic installation 162
 - image catalog 158
 - Initialize System (INZSYS) 172
 - INZSYS (Initialize System) 172
 - Licensed Internal Code 162

- recovery (*continued*)
 - licensed program 166
 - operating system 164
 - Operations Console 159
 - PTF 166
 - secondary language 166
 - starting the manual installation
 - process again 172
 - where to begin 157
- reference code
 - recovery after using 178
 - software installation 175
- related information 233
- release
 - installation notes 209
- release, installing i5/OS 105
- release, skipping
 - concepts 15
- releases supported, i5/OS upgrades 16
- replacing a release
 - using automatic installation 57
 - using manual installation
 - replacing i5/OS operating system 76
 - replacing licensed programs 82
 - verifying installation 85
- replacing release
 - same release 96
 - using manual installation 67
- resource, information
 - software installation 102
 - software upgrade or replacement 27
- restarting from power-off condition 175
- restore licensed program (RSTLICPGM)
 - command 137
- restoring
 - licensed programs and optional parts
 - using option 11 225
 - using the RSTLICPGM command 225
- RSTLICPGM (restore licensed program)
 - command 137

S

- saving
 - licensed programs and optional parts
 - using option 13 227, 228
 - using the SAVLICPGM command 228
- saving the system
 - before upgrade 56
- secondary language
 - installation concepts 20
 - installing 134
 - recovery 166
 - using options on GO LICPGM menu 228
- security level 120, 125
- size
 - licensed programs 181
- skipping release
 - concepts 15
- software
 - deleting 153
 - installing on new logical partition or system 112

- software agreement
 - accepting 49
 - required PTF for 32
- software installation
 - concepts 7
 - new system with operating system 123
 - new system without operating system 112
 - reference codes 175
 - related information 233
- software installation device
 - concepts 11
- software installation problems
 - troubleshooting 157
- software installation process
 - overview 7
- software installation time
 - ways to minimize 37
- software installation, new
 - checklist 99
 - overview 101
- software license keys
 - verifying 29, 102
- software licensing documents
 - concepts 12
- software upgrade or replacement
 - checklist 23
 - checklist for same release 93
 - preparation steps 27
- space required for image catalog 41
- spooled file conversion 195
- SQL
 - conversion of objects 198
 - SQL statement conversion 198
 - starting from power-off condition 175
- status value
 - installed 219
- storage space
 - cleaning up 51
 - determining for installation 103
 - determining for upgrade 50
 - determining for upgrade to same release 95
 - image catalog 41
 - Licensed Internal Code 53
 - upgrades 50
- System i integration with BladeCenter and System x
 - preparing to upgrade 55
- system object
 - verifying integrity before upgrade 35
- system password
 - description 219
- system preparation steps
 - upgrade or replacement 29
- system value
 - changing before upgrade 33
 - recording and printing before upgrade 33
 - tasks before upgrade 33

T

- tape device
 - non-IBM 201

- tape devices
 - virtual 11
- tape image catalog
 - image catalog
 - preparing tape 44
 - preparing for upgrade 44
- tape or tape library
 - description 200
- time
 - Backup Recovery and Media Services
 - for i5/OS conversion 199
 - conversion of objects that contain SQL
 - statements 198
 - conversions 194
 - database file conversion 199
 - installing licensed programs 190
 - installing software 37
 - integrated file system conversion 198
 - program conversion 195
 - spooled file conversion 195
 - ways to minimize 37
- troubleshooting
 - software installation problems 157
- two-phase commit integrity
 - ensuring before upgrade 36

- Work with Licensed Programs menu
 - (continued)
 - using
 - to install secondary
 - languages 134

Y

- Year offset value
 - non-Gregorian calendar
 - setting Year offset value 35
 - setting 35
 - setting the Year offset value 35

U

- upgrade
 - supported release 16
- upgrade or replacement
 - software
 - preparation steps 27
 - system preparation steps 29
- upgrade tasks
 - initial 40
- user profile
 - checking before upgrade 36
 - cleaning up 52
 - verifying before upgrade 35

V

- verify
 - installation using option 50 230
- virtual media
 - scenario for upgrade 41
- virtual media device
 - image catalog 201
- virtual optical devices 11
- virtual tape devices 11

W

- warning and error messages
 - disk configuration 173
- what's new
 - Licensed Internal Code storage
 - requirements viii
 - primary languages 19
 - server firmware viii
- where to begin
 - recovery 157
- Work with Licensed Programs menu
 - description 223
 - introduction of options 222

Readers' Comments — We'd Like to Hear from You

i5/OS
i5/OS and related software
Installing, upgrading, or deleting i5/OS and related software
Version 6 Release 1

Publication No. SC41-5120-10

We appreciate your comments about this publication. Please comment on specific errors or omissions, accuracy, organization, subject matter, or completeness of this book. The comments you send should pertain to only the information in this manual or product and the way in which the information is presented.

For technical questions and information about products and prices, please contact your IBM branch office, your IBM business partner, or your authorized remarketer.

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you. IBM or any other organizations will only use the personal information that you supply to contact you about the issues that you state on this form.

Comments:

Thank you for your support.

Submit your comments using one of these channels:

- Send your comments to the address on the reverse side of this form.
- Send a fax to the following number: United States and Canada: 1-800-937-3430
Other countries or regions: 1-507-253-5192
- Send your comments via email to: RCHCLERK@us.ibm.com

If you would like a response from IBM, please fill in the following information:

Name

Address

Company or Organization

Phone No.

Email address



Fold and Tape

Please do not staple

Fold and Tape




NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

IBM CORPORATION
ATTN DEPT 542 IDCLERK
3605 HWY 52 N
ROCHESTER MN 55901-7829

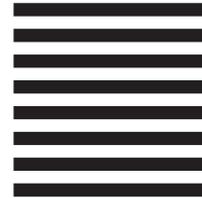

Fold and Tape

Please do not staple

Fold and Tape



Printed in USA

SC41-5120-10

