

Flexible PCB Design (FP9)

BPA Delivery 8 for V5R20 (V5.8)

Installation Guide

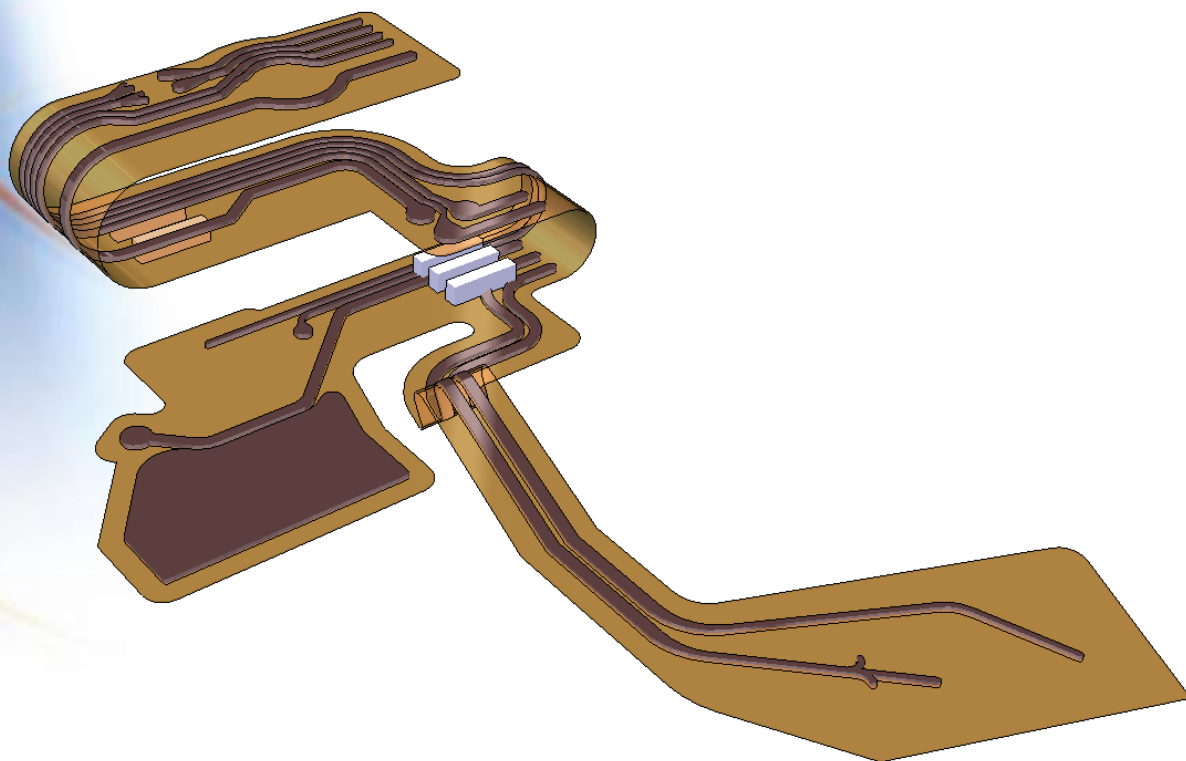


Table of Contents

FLEXIBLE PCB DESIGN (FP9)	1
BPA DELIVERY 8 FOR V5R20 (V5.8)	1
Installation Guide.....	1
Table of Contents	0
Copyright Notice	1
Introduction	2
Related Documentation	2
Prerequisites for Flexible PCB Design Installation	2
Flexible PCB Installation.....	3
License Management	7
Appendix A : Creating a Nodelock file.....	7
Appendix B : Enrolling a Concurrent license on the Network license server	8
Un-installing the Flexible PCB Design application	11
from the Control Panel -> Add or Remove Programs	11
From the FP9 installer	11
Troubleshooting	14
CATIA V5 installation not complete	14

Copyright Notice

© 2010. Dassault Systèmes, All Rights Reserved.

This guide is delivered subject to the following conditions and restrictions:

CONFIDENTIAL - This document contains unpublished, confidential and proprietary information of Dassault Systèmes.

This document or any part thereof shall not be reproduced or transferred to other documents or formats, disclosed to others or used for any purpose other than that for which it is furnished, without the prior written consent of Dassault Systèmes.

It shall be returned to Dassault Systèmes upon request.

Dassault Systèmes is a registered trademark of Dassault Systèmes.

All other trademarks belong to their respective owners.

CATIA is a registered trademark of Dassault Systèmes SA.

Introduction

This document describes the installation procedure for the Flexible PCB Design BPA.

Related Documentation

- CATIA V5 – Installation Guide
- CATIA V5 – Generative Sheetmetal Design User Guide
- CATIA V5 – Circuit Board Design User Guide
- Flexible PCB Design (FP9) user Guide

Prerequisites for Flexible PCB Design Installation

Hardware requirements

PC with Windows XP SP3

PC with Windows 7 Professional 64 bit

Software requirements

CATIA V5R20GA (pre-required) / SP4 (recommended) installation is the main prerequisite for Flexible PCB installation.

The Flexible PCB Design BPA is based on CATIA V5's advanced sheetmetal design features, as well as printed circuit board design features.

It has for pre-requisites the following CATIA V5R20GA (pre-required) / SP4 (recommended) workbenches:

- **CATIA Generative Sheetmetal Design**
- **CATIA Circuit Board Design**


Flexible PCB Installation

The Flexible PCB Design BPA does run on both Windows 32 bits and 64 bits operating systems. The installation procedure is the same on both platform, and will be managed accordingly.


1. Launch Setup.exe




2. Click Next

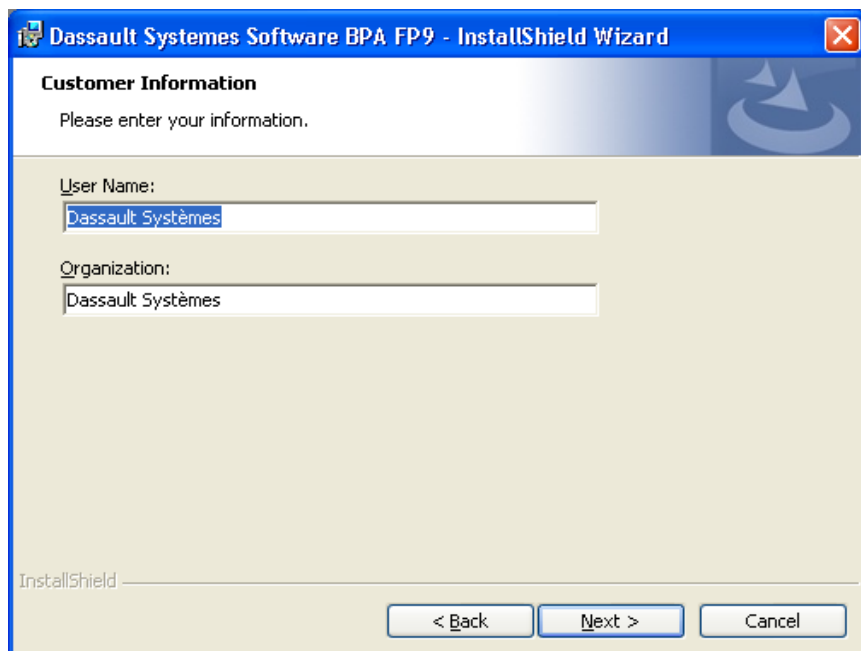


3. Fill Correct User Name and Company Name
4. Click Next
5. Choose Flexible PCB Design destination Folder.

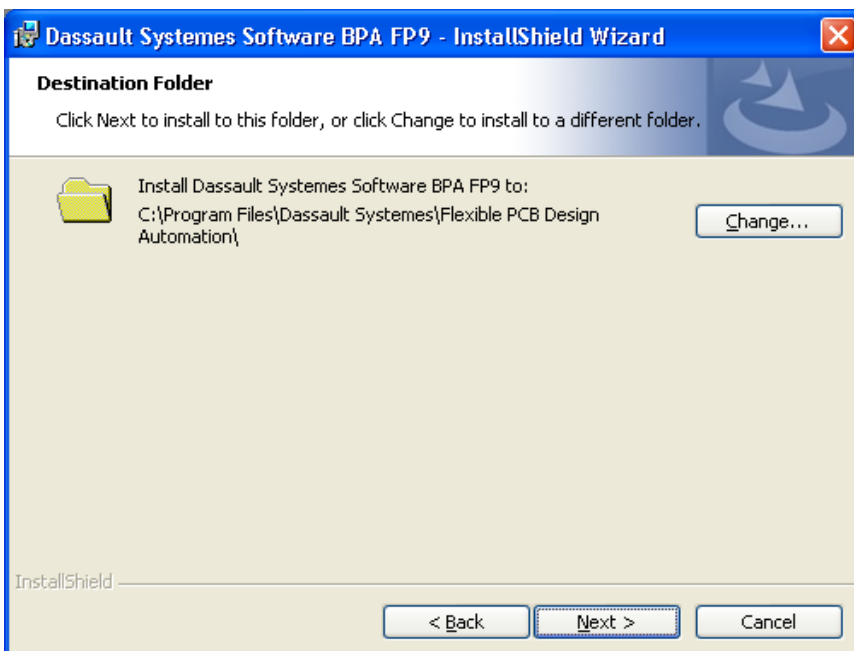


6. Click Next
7. Select CATIA V5R20SP4 Installation Path

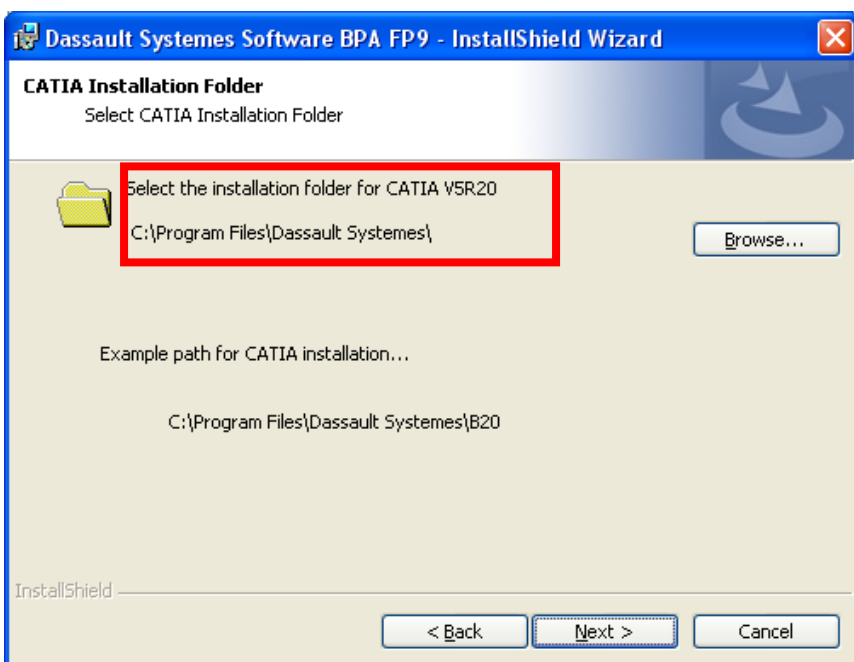

8. Select Next

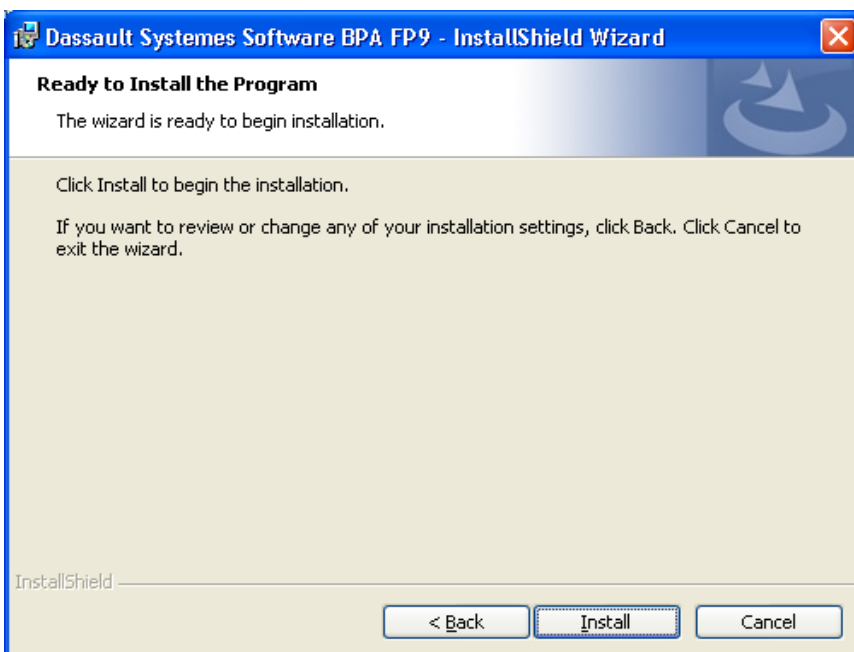

9. Select Install

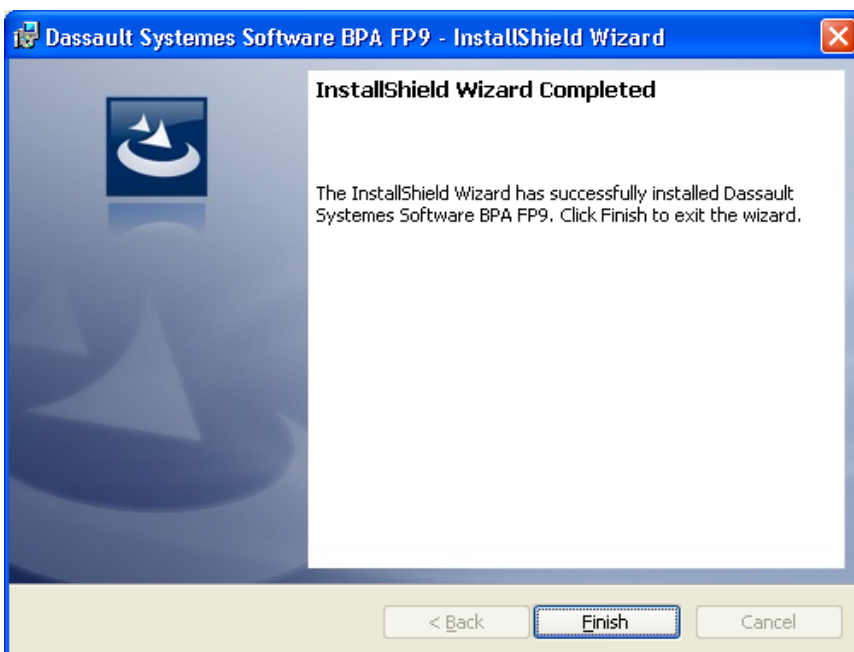

10. Select Finish

Administrators also have a choice to install/uninstall the BPA through command prompt window

Commands options for msixec

- /i install
- /x uninstall
- /a admin installation.

The msixec can be used to run the installer in different modes like

- silent mode /q
- basic ui mode /qb
- full ui mode

Also msixec logs the progress of an installation which is useful to detect errors if any during installation

- Msixec [.msi file name] /!v [log file name]

Example:

```
msixec /i "D:\Installables\intel_a\Dassault Systemes Software BPA FP9.msi" INSTALLDIR="C:\Program Files\Dassault Systemes\Flexible PCB" DASSAULT_SYSTEMES_BXX="D:\Program Files\Dassault Systemes\B20" /!v C:\Log.txt /qb
```

Where in:

PROPERTY NAME	PROPERTY Value	Example
INSTALLDIR	The Installation Directory for the application	"C:\Program Files\Dassault Systemes\Flexible PCB"
DASSAULT_SYSTEMES_BXX	The Installation Directory for the CATIA application (upto Dassault Systemes\B20)	"C:\Program Files\Dassault Systemes\B20"

License Management

Information

Software Requirements

- The license server should have IBM LUM 4.6.8.3 installed

Flex PCB Design V5.8 or higher requires a license.

To ask a license, the following information must be provided:

- Product Name: This is the BPA trigram.
- License Type: Nodelock or concurrent.
- Number of License: 1 for Nodelock , >0 for Concurrent
- LUM targetID: Provide the target id (run i4target in a DOS window)
 - On Client side for Nodelock
 - On Server side for Concurrent

On receiving the license:

- For Nodelock type of license
 - Modify/ Create Nodelock file by inserting necessary information (VendorID, ProductPassword) - See Appendix A
- For Concurrent type of license
 - Enroll the license on the LUM server - See Appendix B


Appendix A : Creating a Nodelock file

Nodelock file : how to proceed

You should input yourself the parameters of your License into the nodelock file (create it if doesn't exist)

- This file is located in
 - For Windows XP 32 and 64 OS - C:\Documents and Settings\All Users\Application Data\IBM\LUM\nodelock
 - For Windows 7 64 bit OS - C:\ProgramData\IBM\LUM for WIN7
- You should extract from the .lic file the following informations :
 - VendorID (looks like an UUID)
 - ProductPassword (a crypted key)
 - ProductAnnotation (should be unset)
 - ProductVersion (should be set to 1)
- And insert them in nodelock file by respecting the order
 - # comment : put your BPA trigram and its range date
 - vendorID ProductPassword ProductAnnotation ProductVersion

Example:

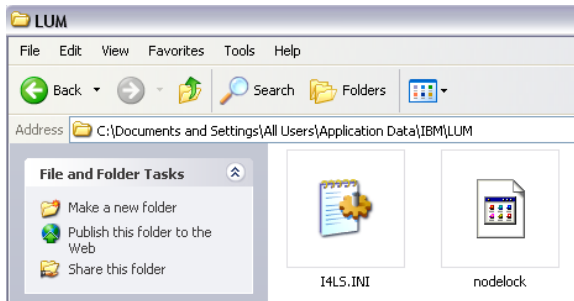


CP9 from 15-Jul-08 to 14-Jul-09
c6c8ef44bcb7.4a.74.95.13.1f.00.00.00 r8ezikjzgsvk9fzf7fe3p2gn3eaa "" "1"

Appendix B : Enrolling a Concurrent license on the Network license server


Setting up the Network License server:

Start > Programs> License Use Runtime > Configuration tool


- Stop the service if needed using the Service Manager Tool.
- Ensure that the option for Network License Server is selected

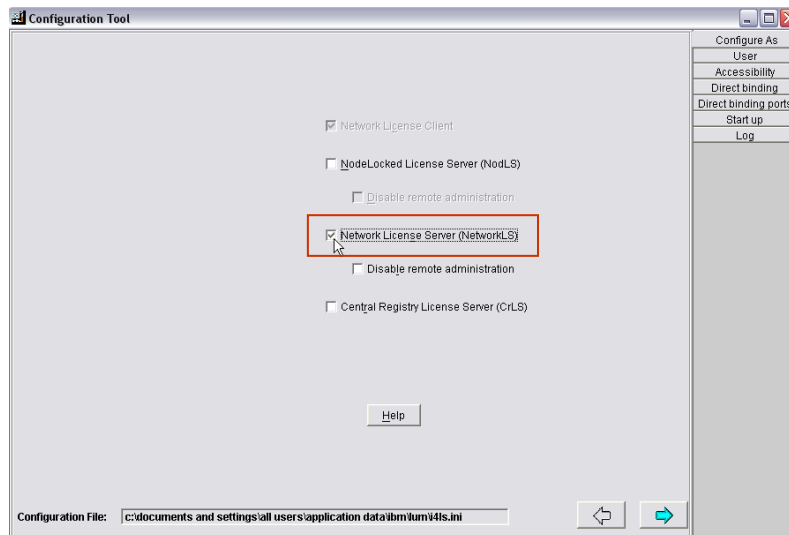



- Switch to the Direct Binding tab.
- In the Name field enter the machine name
- Check the box for NetworkLS and click on Add button

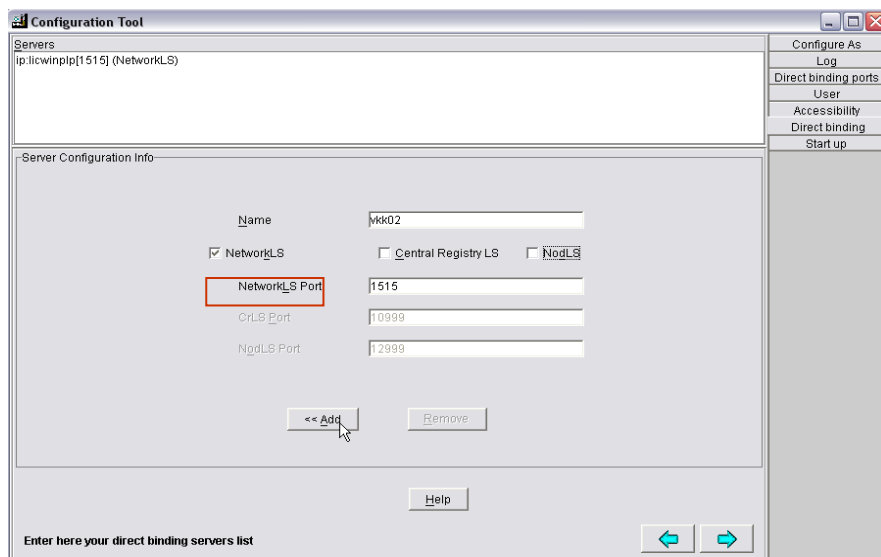

- Close the Configuration Tool window and validate accepting the changes

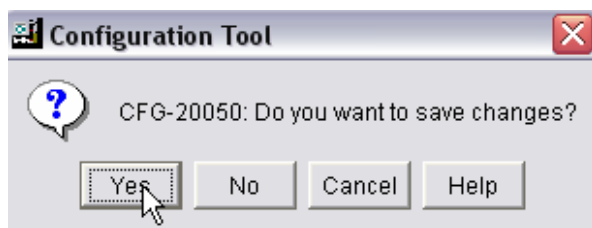


- Pass the message to restart the service (if previously it was stopped)

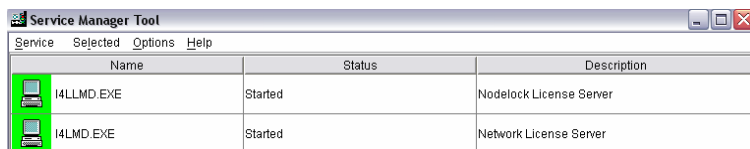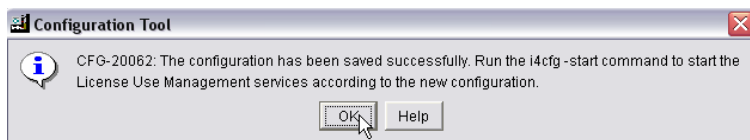


Enrolling the Concurrent License

Start > Programs> License Use Runtime > Basic License Tool

- Select Product / Enroll/
 - Choose Single or Multiple depending on whether you want to enroll a single or multiple licenses at a time.

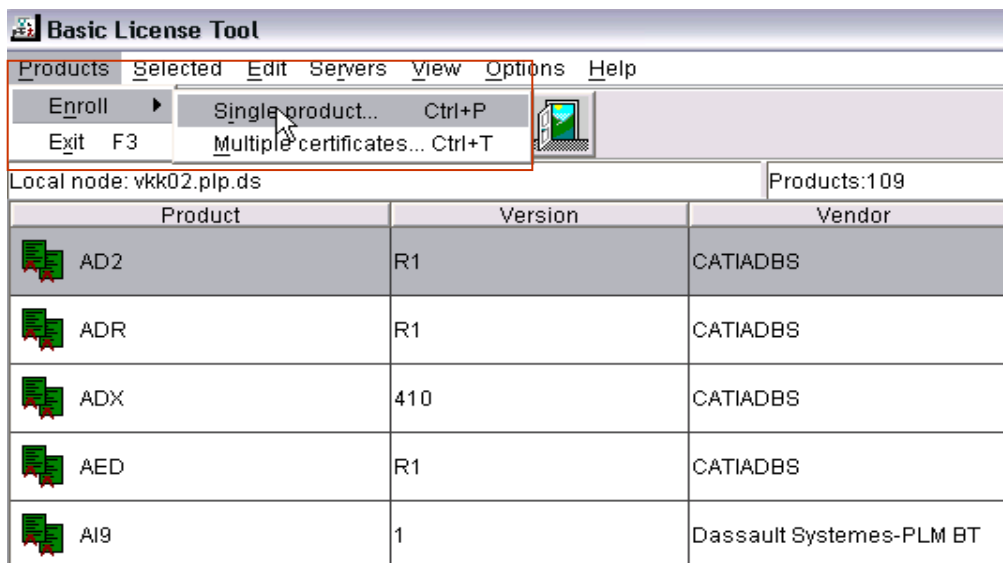

- Click on Import button

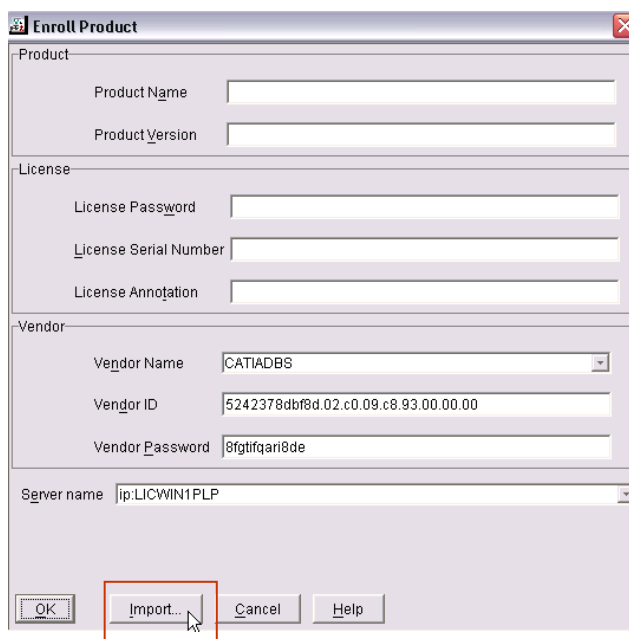


Un-installing the Flexible PCB Design application

Un-installation must be run:

from the Control Panel -> Add or Remove Programs

1. Select the *Dassault Systemes Software BPA FP9* application, and click on "Remove"

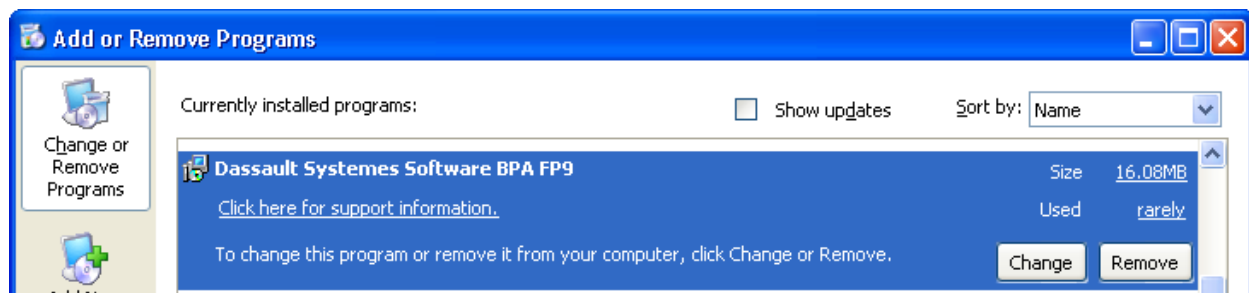


2. FP9 BPA is un-installed.

From the FP9 installer


1. Launch Setup.exe




2. Select Next

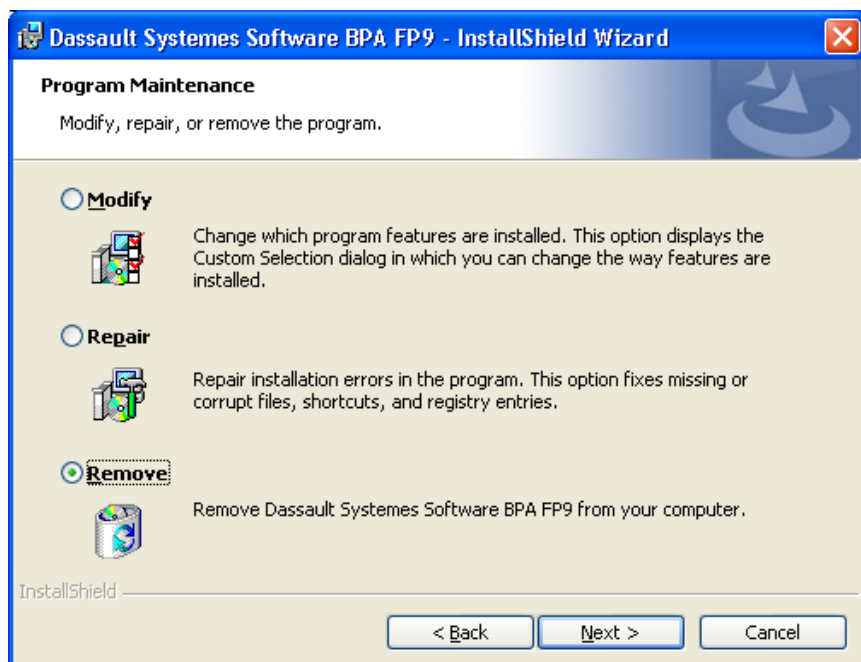

3. Select Remove and then Next

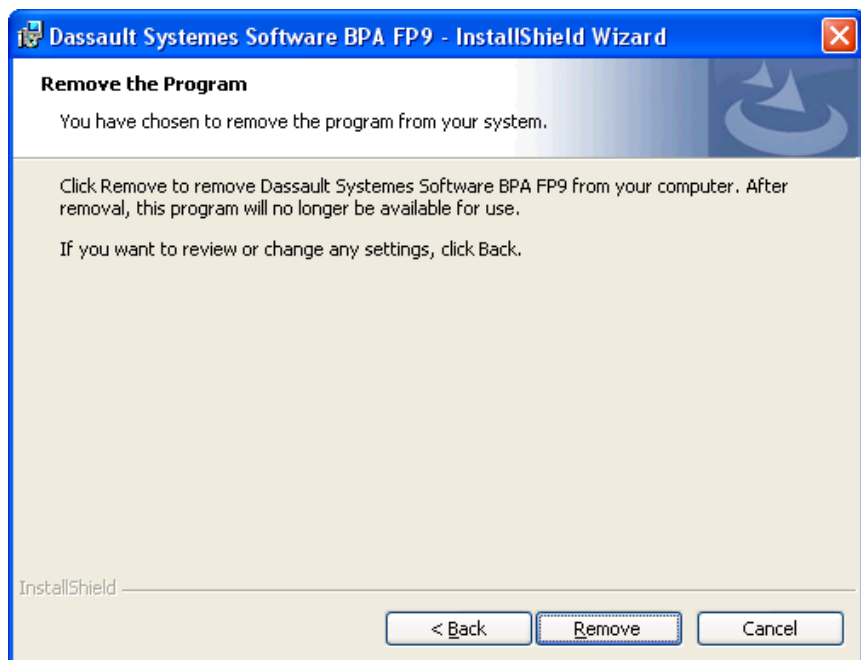

4. Select Remove

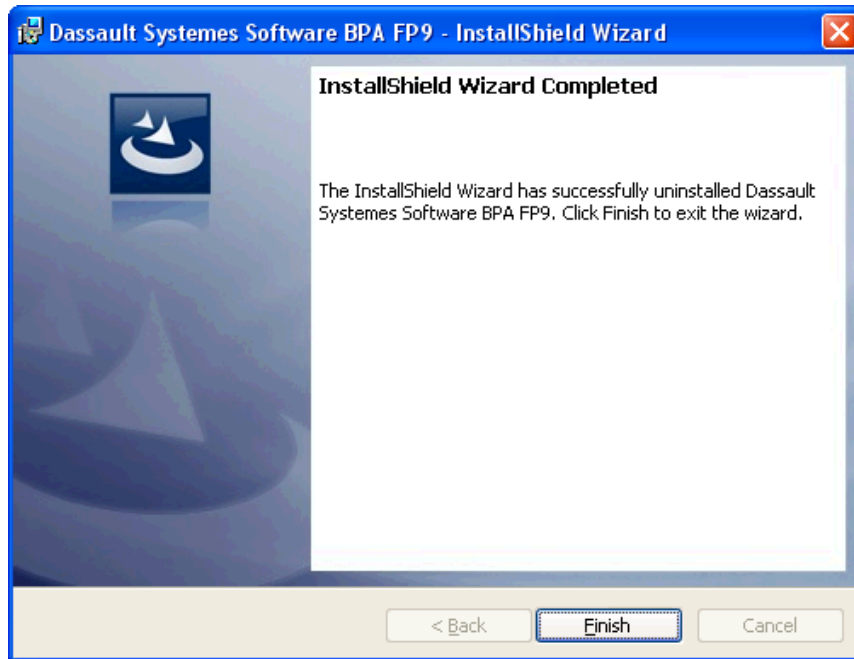


5. Select Finish
6. FP9 BPA is un-installed.

Troubleshooting

CATIA V5 installation not complete

If, at step 8.0 of the installation procedure, the following error message appears:

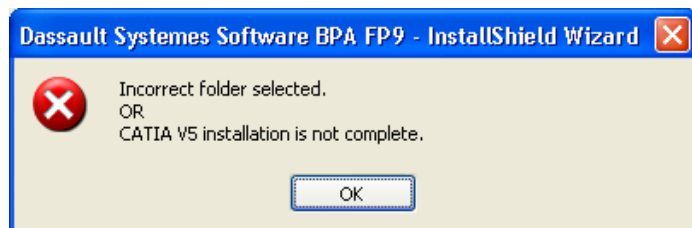

Please make sure that you defined the appropriate path for the CATIA V5R20SP4 installation in the following window:

