



AS4600-54T
48 GE port with 4*10G SFP+
with 2 Expansion Slots
Data Center Switch

Installation Guide

Installation Guide

AS4600-54T

48 GE port with 4*10G SFP+ with 2 Expansion Slots Data Center Switch
with 48 10/100/1000BASE-T (RJ-45) Ports,
4 10GBASE SFP+ Ports,
2 Slots for Optional Single-Port 40GBASE QSFP+ Modules
2 Power Supply Units,
and 2 Fan Trays (F2B or B2F Airflow)

How to Use This Guide

This guide includes detailed information on the switch hardware, including network ports, power, cabling requirements, as well as plug-in modules and transceivers. This guide also provides general installation guidelines and recommended procedures. To deploy this switch effectively and ensure trouble-free operation, you should first read the relevant sections in this guide so that you are familiar with all its hardware components.

Who Should Read This Guide? This guide is for network administrators and support personnel that install, operate, and maintain network equipment. The guide assumes a basic working knowledge of LANs (Local Area Networks) and can be read by those that are new to network equipment, or those with more experience.

How This Guide is Organized The organization of this guide is based on the switch's main hardware components. Each chapter includes information about a specific component with relevant specifications and installation procedures. A switch overview section is also provided.

For Users New to Switches—If you are new to network switches, it is recommended that you first read all chapters in this guide before installing the switch.

For Experienced Users—If you are already familiar with installing and operating network switches, the Switch Description and Installation Overview chapters provide you with enough information to install the switch. Other chapters can be left for reference, when needed.

The guide includes these chapters:

- ◆ **Chapter 1 - Switch Description**—Includes a switch overview, key component identification, key technical specifications, and switch deployment information.
- ◆ **Chapter 2 - Installation Overview**—Includes details of the package contents and an outline of switch installation tasks.
- ◆ **Chapter 3 - Switch Chassis**—Includes switch chassis rack installation, and system cooling requirements.
- ◆ **Chapter 4 - Power and Grounding**—Includes information on AC power supply unit installation, switch grounding, and powering on the switch.

- ◆ [Chapter 5 - Port Connections](#)—Includes information on network interfaces, installing optional transceivers, and cabling specifications.
- ◆ [Chapter 6 - Switch Management](#)—Connecting to the switch for management, and information on the system status LEDs.
- ◆ [Appendix A - Troubleshooting](#)—Information for troubleshooting switch installation and operation.

Related Documentation

This guide focuses on switch hardware and installation, it does not cover software configuration of the switch. For specific information on how to operate and use the management functions of the switch, see the following guides:

*CLI Command Reference
Administrator's Guide*

For all safety information and regulatory statements, see the following document:

*Quick Start Guide
Safety and Regulatory Information*

Conventions The following conventions are used throughout this guide to show information:



Note: Emphasizes important information or calls your attention to related features or instructions.



Caution: Alerts you to a potential hazard that could cause loss of data, or damage the system or equipment.



Warning: Alerts you to a potential hazard that could cause personal injury.

Revision History This section summarizes the changes in each revision of this guide.

December 2013 Revision

This is the first revision of this guide.

Contents

How to Use This Guide	3
Contents	5
Figures	7
Tables	9
1 Switch Description	10
Overview	10
Key Hardware Components	11
Key Technical Specifications	13
Data Center Deployment	14
Rack Cooling	15
2 Installation Overview	17
Package Contents	17
Switch Installation Tasks	17
3 Switch Chassis	24
General Installation Guidelines	24
How to Install the Switch in a Rack	25
Rack-Mounting Items	25
Rack-Mount Procedure	25
Switch Cooling Requirements	27
Rack Cooling	28
Fan Trays	28
How to Replace a Fan Tray	29
Optional Expansion Module	30
How to Install an Optional Expansion Module	30
4 Power and Grounding	32
Power Supply Units	32

Grounding the Chassis	34
How to Connect to AC Power	35
5 Port Connections	37
Cable Labeling and Connection Records	38
Understanding the Port Status LEDs	39
How to Install an SFP/SFP+/QSFP+ Transceiver	40
How to Connect to Twisted-Pair Copper Ports	41
Copper Cabling Guidelines	42
10/100BASE-TX Pin Assignments	42
1000BASE-T Pin Assignments	43
Connection Procedure	44
How to Connect to SFP/SFP+ Fiber Optic Ports	44
Connection Procedure	45
How to Connect to QSFP+ Fiber Optic Ports	47
Connection Procedure	47
DAC Connections	49
Making DAC Connections	49
6 Switch Management	51
Understanding the System Status LEDs	52
How to Connect to the Console Port	53
How to Connect to the Mgmt Port	55
A Troubleshooting	56
Diagnosing LED Indicators	56
System Self-Diagnostic Test Failure	56
Power and Cooling Problems	57
Installation	57
In-Band Access	57
Index	58

Figures

Figure 1: Front Panel	11
Figure 2: Rear Panel	12
Figure 3: Cloud Data Center Deployment	14
Figure 4: Converged Ethernet Data Center Deployment	15
Figure 5: F2B Airflow Cooling	16
Figure 6: B2F Airflow Cooling	16
Figure 7: Installing the Switch in a Rack	18
Figure 8: Grounding Terminal	19
Figure 9: Connecting AC Power	20
Figure 10: System LEDs	21
Figure 11: Console Port	21
Figure 12: Making a Connection to an SFP+ Port	22
Figure 13: Making a Connection to an QSFP+ Port	23
Figure 14: Attaching the Brackets	26
Figure 15: Installing the Switch in a Rack	26
Figure 16: Switch Cooling	27
Figure 17: Fan Tray	29
Figure 18: Expansion Modules	30
Figure 19: Installing an Optional Module	31
Figure 20: AC Power Supply Unit	33
Figure 21: Grounding Terminal	34
Figure 22: AC PSU and Power Socket	35
Figure 23: Port Status LEDs	39
Figure 24: RJ-45 Connector	42
Figure 25: Making Twisted-Pair Connections	44
Figure 26: Making Connections to an SFP+ Transceiver	46
Figure 27: Connecting to a QSFP+ Transceiver	48
Figure 28: Making DAC Connections (10G)	50
Figure 29: Making DAC Connections (40G)	50

Figure 30: System Status LEDs	52
Figure 31: Console Port	53
Figure 32: Console Port Connection	54
Figure 33: Management Port	55

Tables

Table 1: Key Technical Specifications	13
Table 2: AC Power Supply Unit Specifications	33
Table 3: Power Supply Unit LED	33
Table 4: Port Status LEDs	39
Table 5: Maximum Twisted-Pair Copper Cable Lengths	41
Table 6: 10/100BASE-TX MDI and MDI-X Port Pinouts	43
Table 7: 1000BASE-T MDI and MDI-X Port Pinouts	43
Table 8: Maximum 10 Gigabit Ethernet Fiber Cable Lengths	44
Table 9: Maximum Gigabit Ethernet Fiber Cable Lengths	45
Table 10: Maximum 40 Gigabit Ethernet Fiber Cable Lengths	47
Table 11: Maximum 10GBASE-CR 10 Gigabit Ethernet Cable Lengths	49
Table 12: Maximum 40GBASE-CR4 40 Gigabit Ethernet Cable Lengths	49
Table 13: System Status LEDs	52
Table 14: Console Cable Wiring	53
Table 15: Troubleshooting Chart	56

Switch Description

This chapter includes these sections:

- ◆ [“Overview” on page 10](#)
- ◆ [“Key Technical Specifications” on page 13](#)
- ◆ [“Data Center Deployment” on page 14](#)

Overview

Thank you for choosing the AS4600-54T switch system. This switch is built with leading-edge technology to deliver reliable high-performance connectivity for your data network.

The AS4600-54T switch is a high-performance top-of-rack switch, designed for data center operating environments. The switch provides 48 10/100/1000BASE-T RJ-45 ports, four 10 Gigabit Small Form Factor Pluggable Plus (SFP+) ports, and two expansion slots for optional single-port 40G Quad-SFP+ (QSFP+) modules. The switch can also be configured with two hot-swappable power supply units (PSUs) that operate in a dual load-sharing mode.


The switch supports a full set of Layer 2 switching, data center bridging, and Layer 3 routing features. The switch can be deployed as a top-of-rack (TOR) or distributed spine switch to form a network fabric that can reduce infrastructure expenses and power consumption in the data center. This network fabric can be used to interconnect tens of thousands of servers delivering cloud computing services.

The switch further offers an option of front-to-back (F2B) or back-to-front (B2F) airflow cooling for rack deployment with either blade servers or other switches, allowing cool aisles to be maintained without creating “hot loops.”

Key Hardware Components

The switch consists of several key hardware components. This manual describes each specific component, or related components, together with their installation requirements and procedures in each chapter. To understand each component in detail, refer to the relevant section.

Figure 1: Front Panel

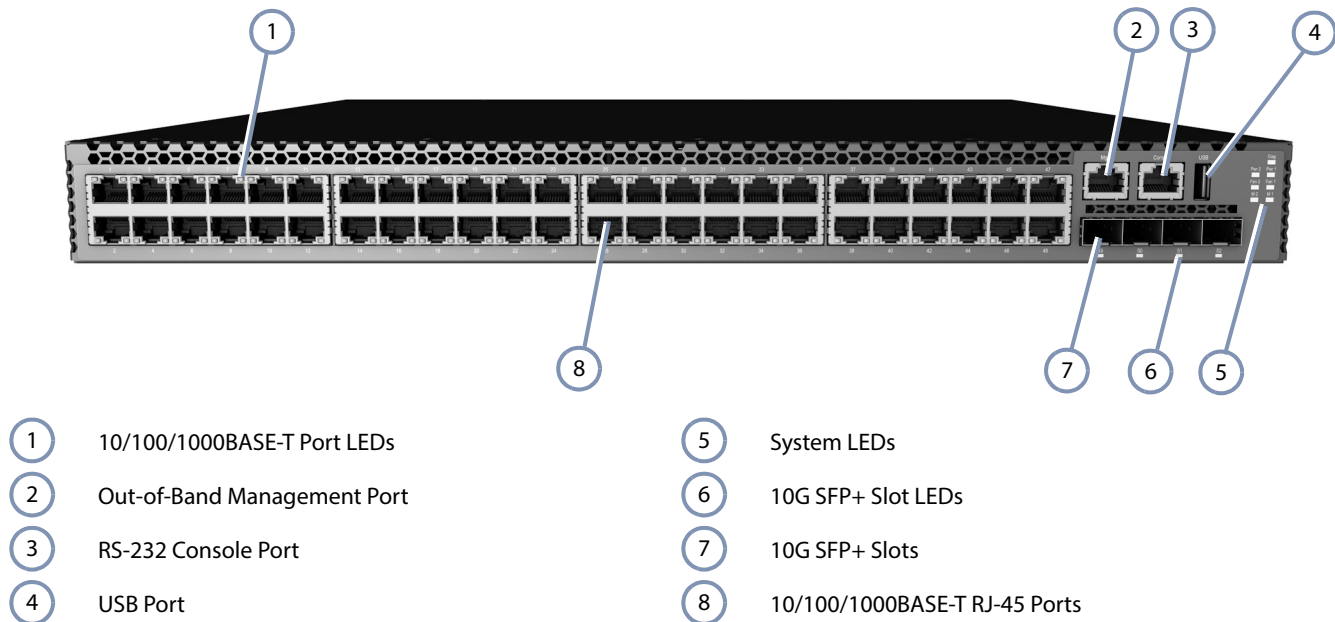

10/100/1000BASE-T RJ-45 Ports

The switch contains 48 10/100/1000BASE-T RJ-45 ports that support Gigabit Ethernet copper links to other devices. For more information, see [“How to Connect to Twisted-Pair Copper Ports”](#) on page 41.

10G SFP+ Slots

The switch contains four Small Form Factor Pluggable Plus (SFP+) transceiver slots that operate up to 10 Gbps full duplex. For more information, see [“How to Connect to SFP/SFP+ Fiber Optic Ports”](#) on page 44.

System LEDs

For information on system status LED indicators, see [“Understanding the System Status LEDs”](#) on page 52.

Port LEDs

For information on port status LED indicators, see [“Understanding the Port Status LEDs”](#) on page 39.

Console Port

The RJ-45 connector on the front panel labeled “Console” provides an out-of-band serial connection to a terminal or a PC running terminal emulation software. The port can be used for performing switch monitoring and configuration. For more information, see [“How to Connect to the Console Port” on page 53](#).


Management Port

The RJ-45 connector on the front panel labeled “Mgmt” provides an out-of-band Ethernet connection to a management PC. The port can be used exclusively for performing switch monitoring and configuration. For more information, see [“How to Connect to the Mgmt Port” on page 55](#).

USB Port

A single USB port is provided on the switch front panel. This port is non-functional. It is reserved for future use.

Figure 2: Rear Panel

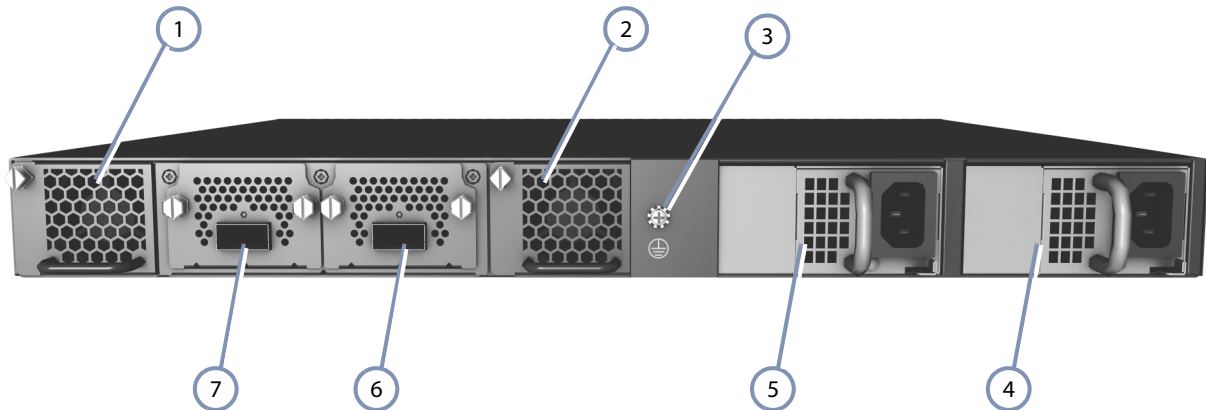

- | | | | |
|---|---------------------|---|-----------------------------|
| 1 | Fan Tray 1 | 5 | Power Supply Unit 2 |
| 2 | Fan Tray 2 | 6 | 40G QSFP+ Slot 1 (Optional) |
| 3 | Grounding Terminal | 7 | 40G QSFP+ Slot 2 (Optional) |
| 4 | Power Supply Unit 1 | | |

Fan Trays

The dual fan trays provide air cooling for the switch system. For more information, see [“Switch Cooling Requirements” on page 27](#).

40G QSFP+ Slots (Optional)

The switch contains four Quad Small Form Factor Pluggable Plus (QSFP+) transceiver slots that operate up to 40 Gbps full duplex. For more information, see [“How to Connect to QSFP+ Fiber Optic Ports” on page 47](#).

Power Supply Units

The switch supports dual hot-swappable AC power supply units (PSUs). You can install up to two PSUs with matching airflow direction in the switch. For more information on the switch power supplies, how to install them, and how to power-on the switch, see [“Power Supply Units” on page 32](#).

Grounding Terminal

The switch includes a grounding terminal that must be connected to a ground source that provides local earth potential. For more information, see [“Ground the Switch” on page 19](#).

Key Technical Specifications

The following table contains key system specifications for the switch.

Table 1: Key Technical Specifications

Item	Specification
Ports	48 10/100/1000BASE-T RJ-45 ports 4 10 Gbps SFP+ transceiver slots 1 10/100/1000 Mbps RJ-45 Management port 2 expansion slots for single-port 40 Gbps QSFP+ modules
Network Interface	Ports 1~48 <ul style="list-style-type: none"> 10/100/1000BASE-T, RJ-45 connector Ports 49~52 <ul style="list-style-type: none"> 10 Gbps SFP+ transceivers: 10GBASE-CR, 10GBASE-SR 1 Gbps SFP transceivers: 1000BASE-SX, 1000BASE-LX Management port <ul style="list-style-type: none"> 10/100/1000BASE-T, RJ-45 connector
Buffer Architecture	4 MB packet buffer
MAC Address Entries	64K
Aggregate Bandwidth	180 Gbps
LEDs	System: Diag (Diagnostic), Pwr 1, Pwr 2 (Power), Fan 1, Fan 2, M1, M2 Ports 1~52: Status (link, activity, speed)
Power Supply Unit	100-240 VAC, 50-60 Hz, auto-sensing; hot pluggable
Power Consumption	130 Watts maximum
Weight	8.5 kg (18.74 lb), with two installed power supply modules (no 40G modules)
Size	W x D x H: 440 x 280 x 44 mm (17.32 x 11.02 x 1.73 inches)


Table 1: Key Technical Specifications

Item	Specification
Temperature	Operating: 0 °C to 50 °C (32 °F to 122 °F) Storage: -40 °C to 70 °C (-40 °F to 158 °F)
Humidity	Operating: 10% to 90% (non-condensing)
Out-of-Band Management	RS-232 RJ-45 console port Ethernet RJ-45 Management port
In-Band Management	SSH, Telnet, SNMP, or HTTP
Software Loading	HTTP, FTP/TFTP in-band
Forwarding Mode	Store-and-forward
Throughput	Wire speed
Flow Control	Full Duplex: IEEE 802.3x Half Duplex: Back pressure

Data Center Deployment


The switch is designed for high-availability data center environments with a high port density. The switch includes redundant, hot-swappable, load-sharing AC PSUs, two hot-swappable fan trays where the direction of the cooling airflow can be set to either port-to-power or power-to-port options. Meeting the network scaling requirements of enterprise and cloud data centers, the switch can be deployed as a top-of-rack switch or as part of a distributed spine network, providing full line-rate switching at Layer 2 or Layer 3 across all ports.

Figure 3: Cloud Data Center Deployment

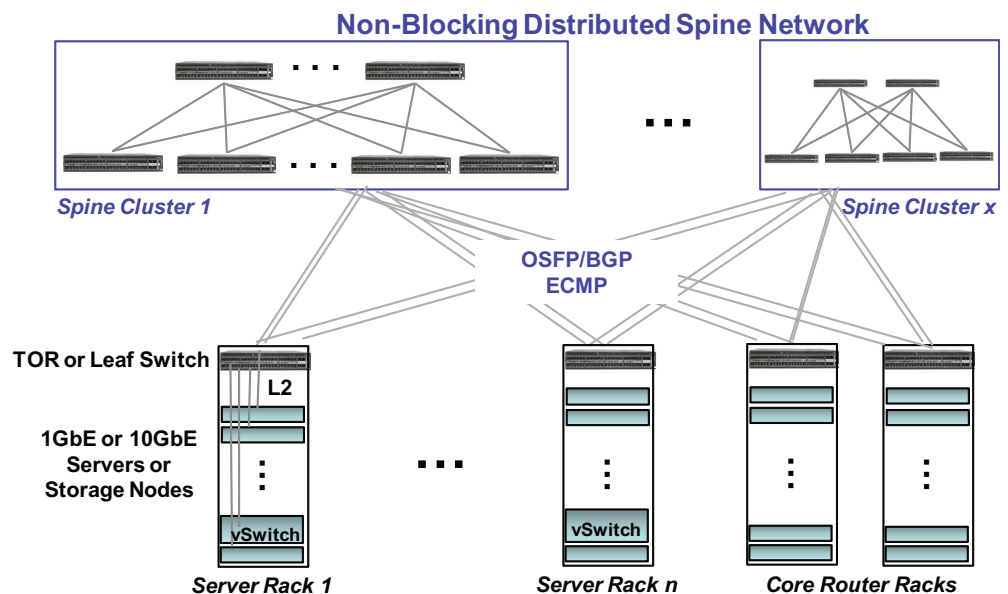

In many data center configurations, Ethernet connections link servers and data networks, and Fibre Channel connections link servers to storage networks. This switch enables the creation of a converged network, which employs lossless Ethernet connections between FCoE storage, servers, and other data network switches.


Figure 4: Converged Ethernet Data Center Deployment

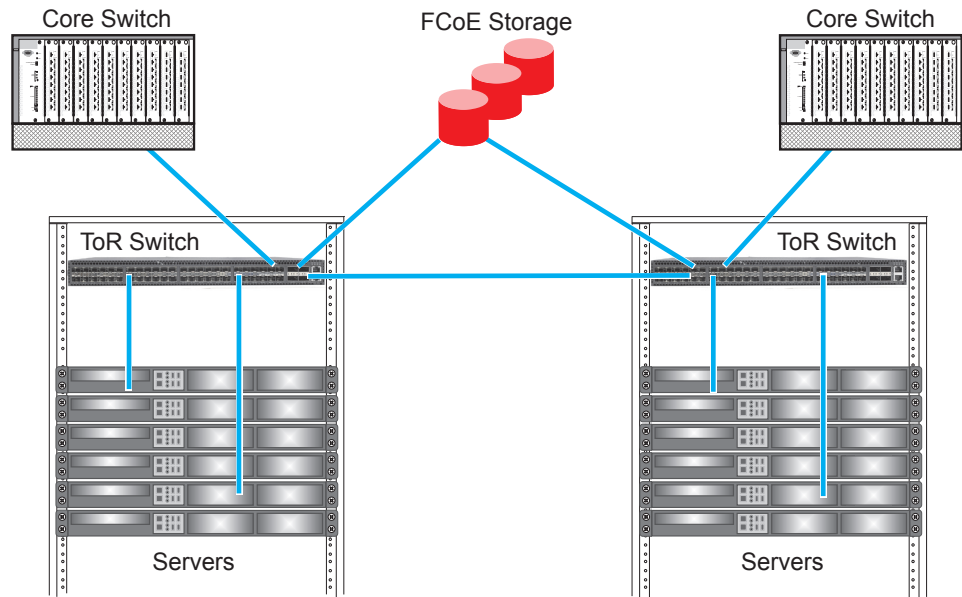

Rack Cooling The top-of-rack switch is a high-performance, high-density unit that generates a substantial amount of heat. When mounted in a rack with other equipment, it is important that the switch has the same airflow direction to avoid “hot loops” in the data center aisles. Hot loops increase cooling requirements since warm air is drawn into rack devices instead of cool air.


Most rack-mounted blade servers draw cool air from the front and expel hot air at the rear. The top-of-rack switch includes two fan trays that have a front-to-back (F2B) airflow direction that maintains cool aisles in the data center.

Figure 5: F2B Airflow Cooling

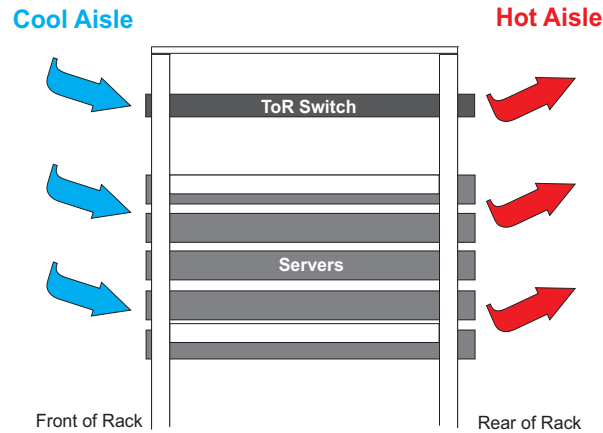

When mounted in a rack with other network equipment that may have a back-to-front (B2F) airflow direction, the top-of-rack switch includes two fan trays that reverse the airflow direction through the switch. This enables flexible deployment options for the switch in the data center.

Figure 6: B2F Airflow Cooling

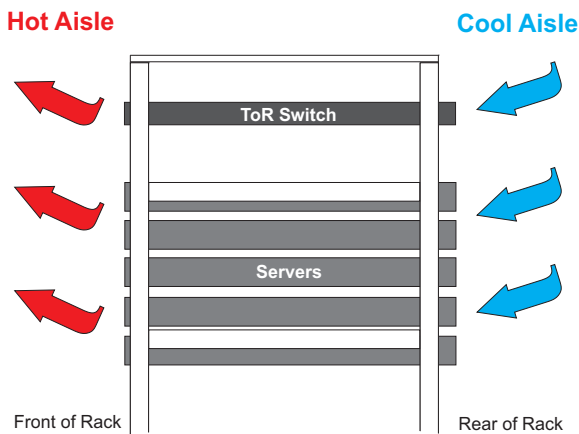

Installation Overview

This chapter includes these sections:

- ◆ [“Package Contents” on page 17](#)
- ◆ [“Switch Installation Tasks” on page 17](#)

Package Contents

After unpacking the switch, check the contents to be sure you have received all the components.

- ◆ AS4600-54T Top-of-Rack Switch equipped with either one or two PSUs
- ◆ Rack Mounting Kit containing two standard brackets and eight screws for attaching the brackets to the switch
- ◆ Grounding wire
- ◆ Power cord—either Japan, US, Continental Europe, or UK
- ◆ Console cable (RJ-45 to DB-9)
- ◆ Safety and Regulatory Information
- ◆ Quick Start Guide

Switch Installation Tasks

Follow these tasks to install the switch in your network. For full details on each task, go to the relevant chapter or section by clicking on the link.



Caution: Before installing your switch, first review all the safety statements and guidelines in the *Safety and Regulatory Information* document.

Task 1 Unpack Package and Check Contents

Unpack your switch and check the package contents to be sure you have received all the items. See [“Package Contents”](#) on page 17.

Task 2 Install the Chassis

The switch is designed to be installed in a standard 19-inch equipment rack. If you intend to install the switch in a rack, plan your rack installation and mount the switch chassis in the rack. Be sure to take into account switch cooling requirements.




Caution: The switch includes plug-in power supply and fan tray modules that are installed into its chassis. All installed modules must have a matching airflow direction. That is, all modules must have a front-to-back (F2B) airflow direction, or all modules must have a back-to-front (B2F) airflow direction. The airflow direction of PSU and fan tray modules is indicated by labels on the modules.



Go to the chapter [“Switch Chassis”](#)

Figure 7: Installing the Switch in a Rack

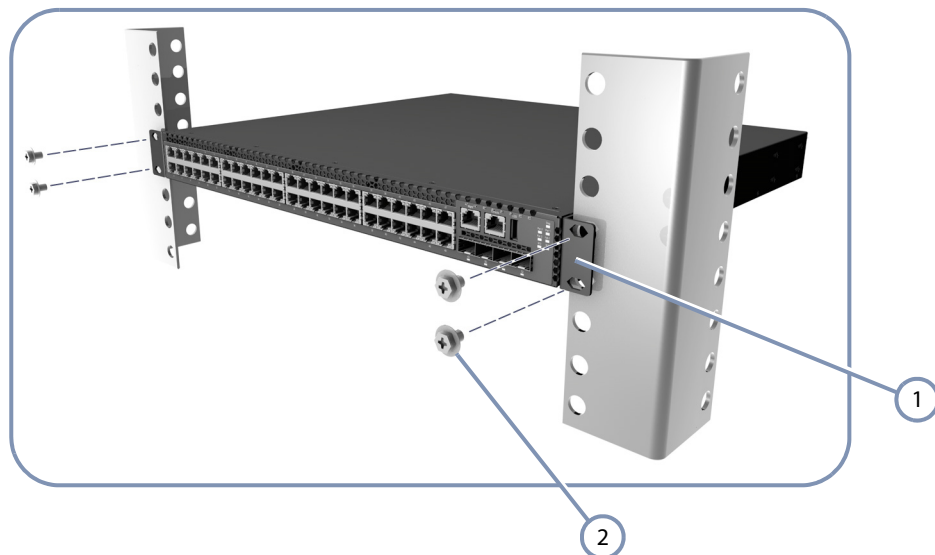

1 Attach the brackets to the switch.

2 Use the rack mounting screws supplied with the rack to secure the switch in the rack.


Task 3 Ground the Switch

Before powering on the switch, ground the switch to earth. Ensure the rack in which the switch is to be mounted is properly grounded and in compliance with ETSI ETS 300 253. Verify that there is a good electrical connection to the grounding point on the rack (no paint or isolating surface treatment).



Caution: The earth connection must not be removed unless all supply connections have been disconnected.

Figure 8: Grounding Terminal

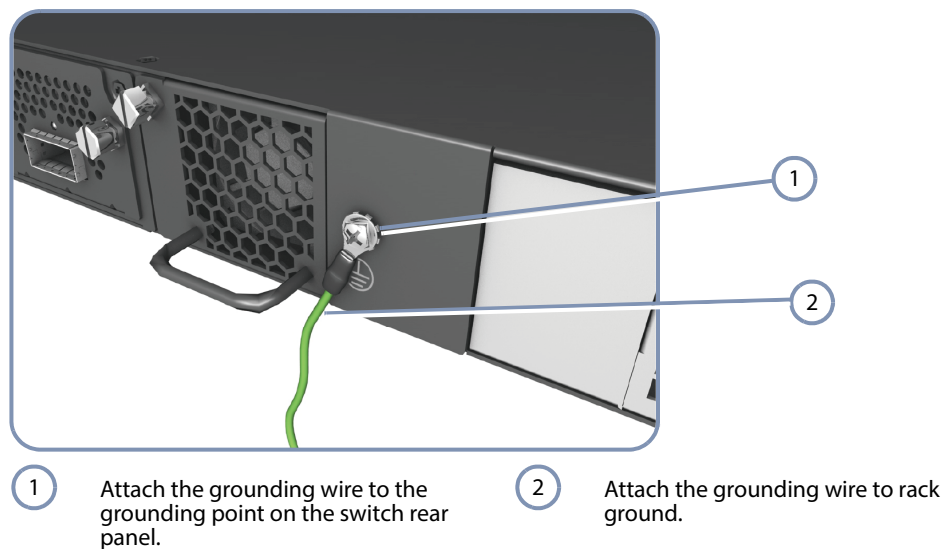


Task 4 Install Power Supply Units and Power On

Install power supply units (PSU), then power on. The switch supports up to two PSUs.



Go to the chapter [“Power and Grounding”](#)

Figure 9: Connecting AC Power

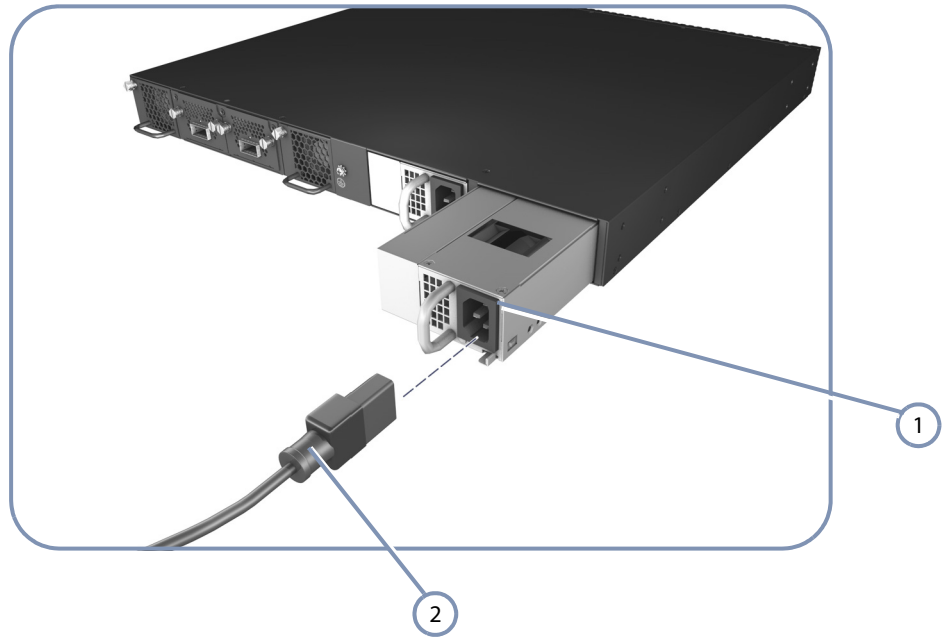

1

Install one or two universal AC power supply units in the switch.

2

Connect an external AC power source to the power supply units.

Task 5

Verify Switch Operation

Verify basic switch operation by checking the system LEDs.

When operating normally, the Pwr 1/Pwr 2, Diag, and Fan 1/Fan 2 LEDs should all be on green. If any of the LEDs are on amber, see [“Diagnosing LED Indicators” on page 56](#).




Note: Pwr and Fan LEDs will be off if the corresponding power supply unit or fan tray is not installed.



Go to the section [“Understanding the System Status LEDs”](#)

Figure 10: System LEDs

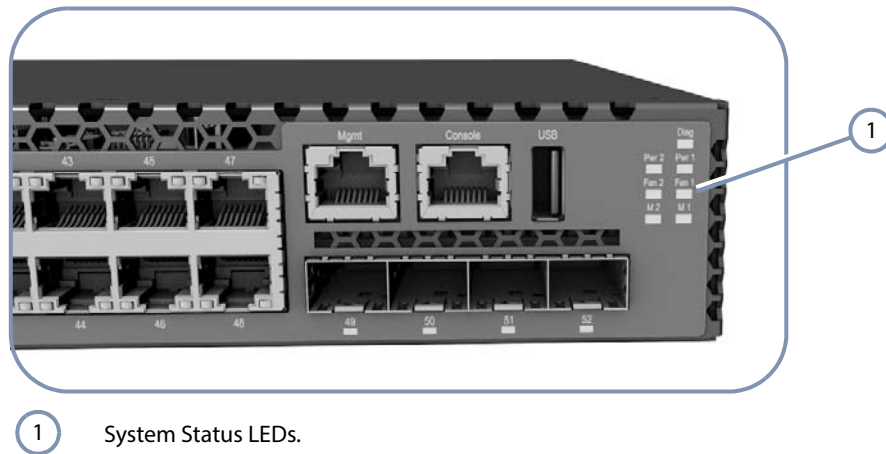

1 System Status LEDs.

Task 6 Make Initial Configuration Changes


At this point you may need to make a few basic switch configuration changes before connecting to the network. It is suggested to connect to the switch console port to perform this task.

The serial port's configuration requirements are as follows: 115200 bps, 8 characters, no parity, one stop bit, 8 data bits, and no flow control.

You can log in to the command-line interface (CLI) using default settings: User "admin" with no password.

➡ Go to ["How to Connect to the Console Port"](#)

Figure 11: Console Port

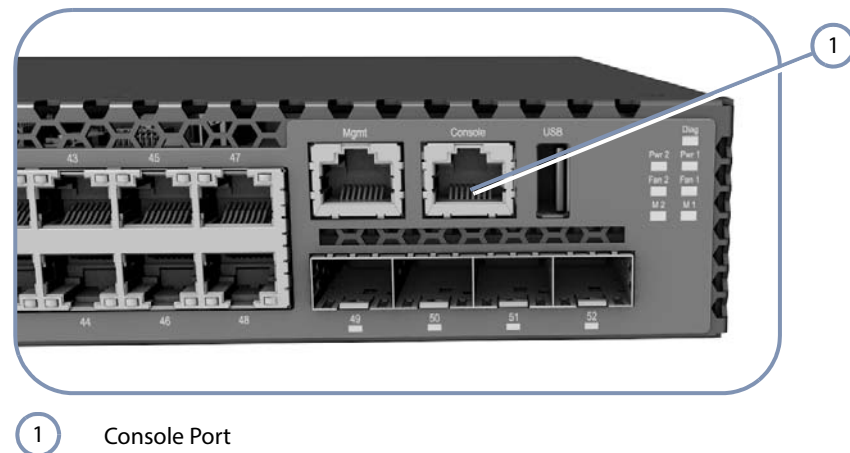

1 Console Port

For information on initial switch configuration:

➡ Refer to the *Administrator's Guide*.

Task 7 Install Transceivers and Connect Cables


Install SFP+ or QSFP+ transceivers and connect network cables to port interfaces:

- ◆ For RJ-45 ports, use 100-ohm Category 3, 5 or 5e twisted-pair cable for 10BASE-T connections, or Category 5, 5e or better cable for 100/1000BASE-T connections.
- ◆ Connect DAC cables to the SFP+ /QSFP+ slots. Or first install SFP+ /QSFP+ transceivers and then connect fiber optic cabling to the transceiver ports.

As connections are made, check the port status LEDs to be sure the links are valid.

➡ Go to the chapter "[Port Connections](#)"


Figure 12: Making a Connection to an SFP+ Port

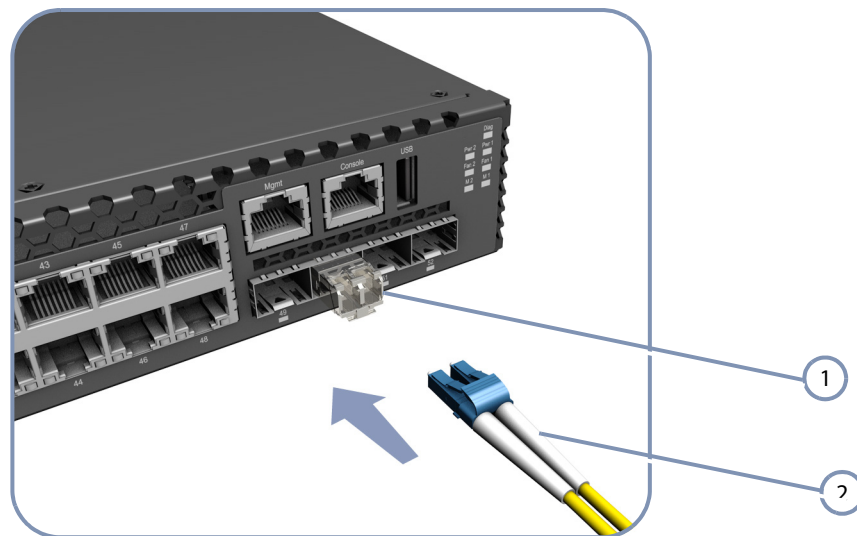

1 Install SFP+ transceivers.

2 Connect fiber optic cabling to the ports.

Figure 13: Making a Connection to an QSFP+ Port

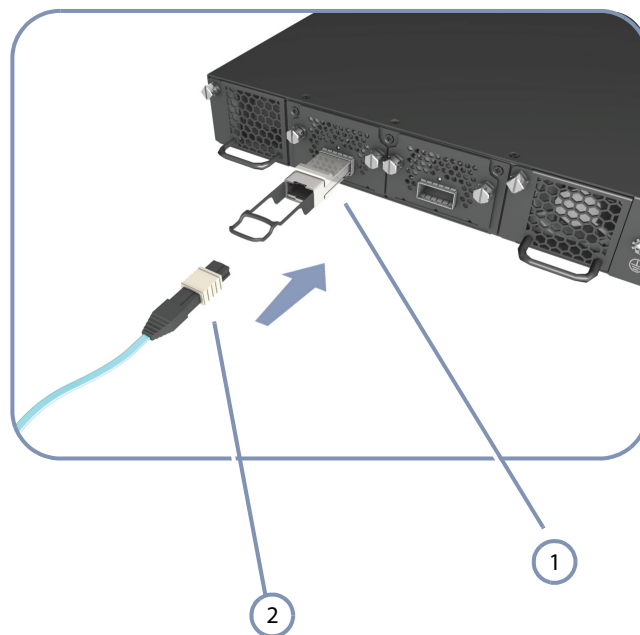

- (1) Install QSFP+ transceivers. (2) Connect fiber optic cabling to the ports.

The switch is designed to be installed in a standard 19-inch equipment rack.

Before continuing with switch installation, first review the general guidelines and switch cooling requirements in this chapter.

This chapter includes these sections:

- ◆ [“General Installation Guidelines” on page 24](#)
- ◆ [“How to Install the Switch in a Rack” on page 25](#)
- ◆ [“Optional Expansion Module” on page 30](#)
- ◆ [“How to Install an Optional Expansion Module” on page 30](#)

General Installation Guidelines

Be sure to follow the guidelines below when choosing a location.

- ◆ The installation location should:
 - be able to maintain its temperature within 0 to 50 °C (32 to 122 °F) and its humidity within 10% to 90%, non-condensing.
 - provide adequate space (approximately five centimeters or two inches) on all sides for proper air flow.
 - be accessible for installing, cabling and maintaining the device.
 - allow the status LEDs to be clearly visible.
- ◆ Make sure twisted-pair cable is always routed away from power lines, fluorescent lighting fixtures and other sources of electrical interference, such as radios and transmitters.
- ◆ Make sure that the unit is connected to a separate grounded power outlet and is powered from an independent circuit breaker. As with any equipment, using a filter or surge suppressor is recommended. Verify that the external power requirements for the switch can be met as listed under [“Power Supply Units” on page 32](#).

How to Install the Switch in a Rack

When rack mounting the switch, pay particular attention to the following factors:

- ◆ **Rack Types:** You can use any standard EIA 19-inch equipment rack with either two or four posts. The bracket hole pattern should be spaced 1U (1.75 in. or 4.45 cm) apart.
- ◆ **Rack Stability:** Whenever possible, secure the rack to the building ceiling or floor, particularly if you are located in a region where earthquakes are common.
- ◆ **Rack Planning:** When installing equipment in a rack, first plan how units can be best arranged. Try to always mount the heaviest equipment at the bottom of the rack.
- ◆ **Temperature:** Since the temperature within a rack assembly may be higher than the ambient room temperature, check that the rack-environment temperature is within the specified operating temperature range. See [“Switch Cooling Requirements” on page 27](#).
- ◆ **Mechanical Loading:** Do not place any equipment on top of a rack-mounted unit.
- ◆ **Circuit Overloading:** Be sure that the supply circuit to the rack assembly is not overloaded.
- ◆ **Grounding:** Rack-mounted equipment should be properly grounded.

Rack-Mounting Items Before you start to rack-mount the switch, be sure to have the following items available:

- ◆ Four mounting screws for each device you plan to install in a rack—these are not included. Be sure to use the rack mounting screws that are supplied with the rack.
- ◆ A screwdriver (Phillips or flathead, depending on the type of screws used).


Rack-Mount Procedure To rack mount the switch, follow these steps:



Caution: Installing the switch in a rack requires two people: One should position the switch in the rack, while the other secures it using the mounting screws.


1. Attach the brackets to the device using the screws provided in the Rack Mounting Kit.

Figure 14: Attaching the Brackets

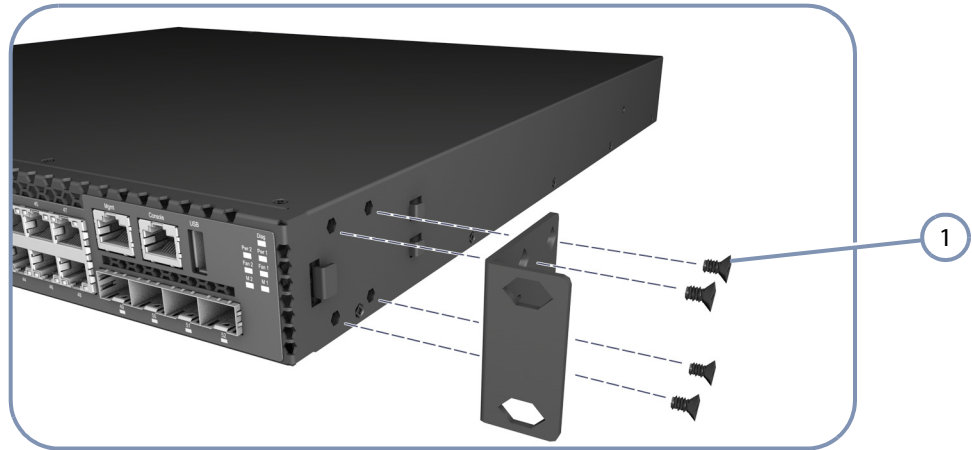

- 1 Use the screws provided in the Rack Mounting Kit.
2. Following your rack plan, mark the holes in the rack where the switch will be installed.
3. One person should lift the switch into the rack so that it is aligned with the marked holes.
4. The second person should secure the switch in the rack, using four rack-mounting screws (not provided).

Figure 15: Installing the Switch in a Rack

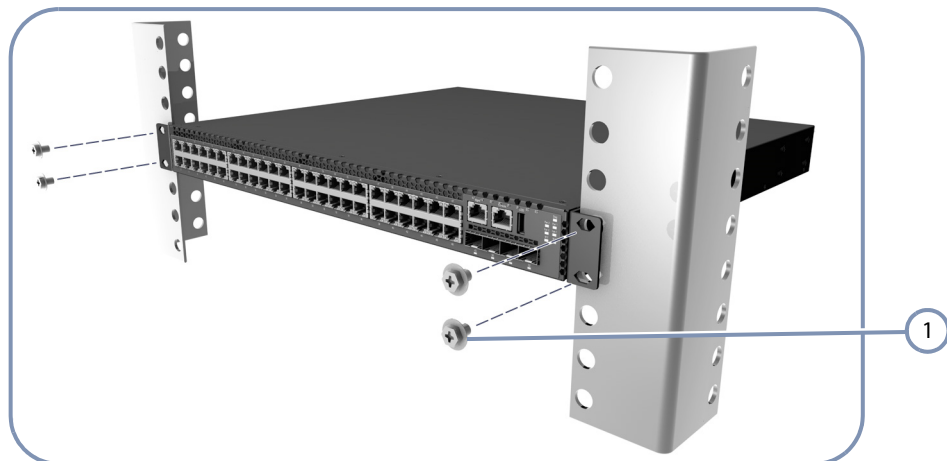

- 1 Use the rack mounting screws supplied with the rack.

5. If installing a single switch only, go to [“Power and Grounding” on page 32](#).

6. If installing multiple switches, repeat steps 1 to 4 to mount the switches following your rack plan.


Switch Cooling Requirements

Wherever the switch is located, be sure to pay close attention to switch cooling requirements. The location should be well ventilated and provide unrestricted air flow at the front, back, and sides of the switch. If the air flow is insufficient, it may cause the switch to overheat and possibly fail.

The switch includes two removable fan trays located in the rear of the switch. The fan tray options may have either a front-to-back (F2B) airflow direction or a back-to-front (B2F) airflow direction. For proper switch cooling, all installed fan trays must have a matching airflow direction.

The following figure shows the airflow through the switch.

Figure 16: Switch Cooling

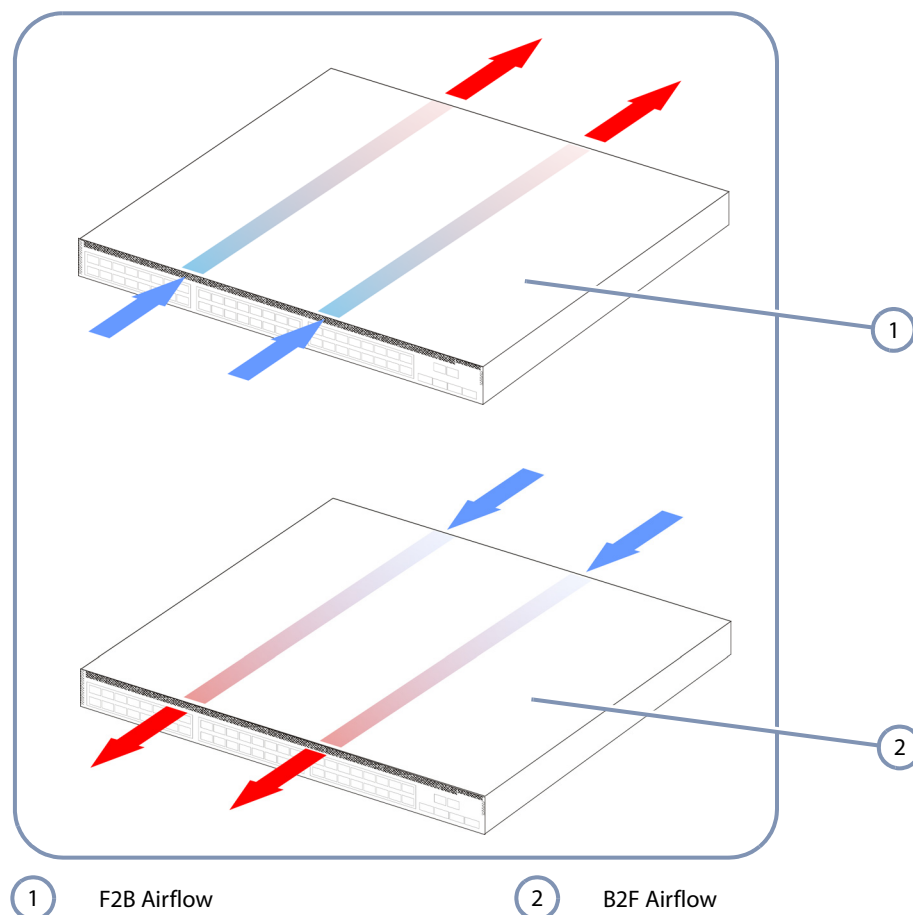

Rack Cooling When mounting the switch in an enclosed rack or cabinet, be sure to check the following guidelines to prevent overheating:

- ◆ Make sure that enough cool air can flow into the enclosure for the equipment it contains.
- ◆ Check that the rack or cabinet allows the hot air to exit the enclosure (normally from the top) without circulating back into equipment.
- ◆ If the enclosure has sides or doors with ventilation holes, make sure they are not blocked by cables or other obstructions.
- ◆ Route cables within the rack or cabinet to maximize the air flow.
- ◆ When possible, do not completely fill the rack or cabinet with equipment, allow some unused space within the enclosure for better air flow.

Fan Trays The fan trays are an important part of the switch air cooling system. Two fan trays must be installed in the switch at all times. If a fan should fail, the entire fan tray must be replaced as soon as possible.

The fan trays used must have matching airflow direction. You must only install and use either two front-to-back airflow or two back-to-front airflow fan trays :

- ◆ AS4600-54TS-FANTRAY (front-to-back airflow)
- ◆ AS4600-54TSR-FANTRAY (back-to-front airflow)

The airflow direction of the fan tray is indicated by labels attached to the fan tray (see [Figure 17 on page 29](#)).




Caution: All installed fan trays must have a matching airflow direction. Installing a front-to-back (F2B) tray with a back-to-front (B2F) fan tray may result in overheating and subsequent damage to the switch.

Each of the removable fan trays, located at the rear of the switch, include dual in-line fans and support fan speed control. The fan speed is dynamically controlled as a function of temperature: the higher the internal temperature, the faster the speed of the fans. The fan trays do not include LED indicators.

The following figure shows a fan tray being installed in the switch.

Figure 17: Fan Tray

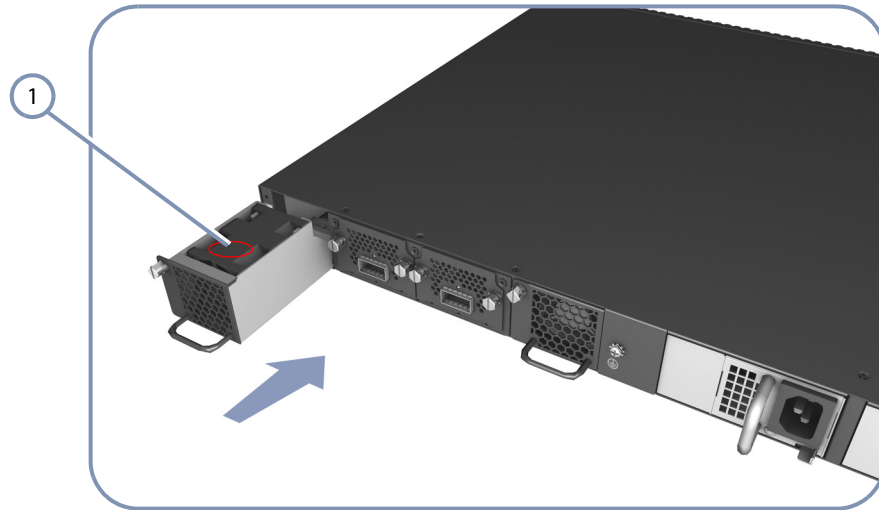

1 Label indicates airflow direction

How to Replace a Fan Tray The switch system is shipped with two fan trays installed. If a fan failure is detected (see [“Understanding the System Status LEDs” on page 52](#)), the fan tray should be replaced immediately.

Follow this procedure to replace a fan tray:


1. Loosen the retaining screw on the front panel of the fan tray.
2. Pull firmly on the fan tray handle until the fan tray is free.
3. Slide the fan tray out of the switch.
4. Insert the replacement fan tray into the slot and slide it slowly into the chassis.
5. Push firmly until the fan tray slides into place. The fans should immediately start to operate.
6. Tighten the retaining screw to secure the fan tray in the chassis.

Optional Expansion Module

The switch supports two optional hot-swappable, single-port 40G QSFP+ media expansion modules that install in the rear of the switch chassis.

The module's QSFP+ port supports standard 40G QSFP+ transceivers. The 40GBASE transceivers can operate at 40 Gbps or 4x10 Gbps full duplex, with support for flow control.

Figure 18: Expansion Modules

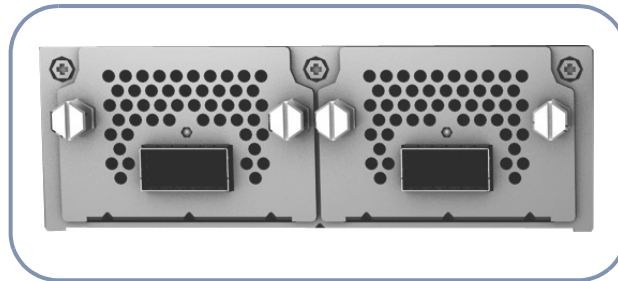

How to Install an Optional Expansion Module




Note: The slide-in modules are hot-swappable, you do not need to power off the switch before installing or removing a module.

To install an optional module into the switch, do the following:

1. Remove the blank metal plate (or a previously installed module) from the appropriate slot by unscrewing the two captive screws with a flat-head screwdriver.
2. Before opening the package that contains the module, touch the bag to the switch casing to discharge any potential static electricity. Also, it is recommended to use an ESD wrist strap during installation.
3. Remove the module from the anti-static shielded bag.

Figure 19: Installing an Optional Module

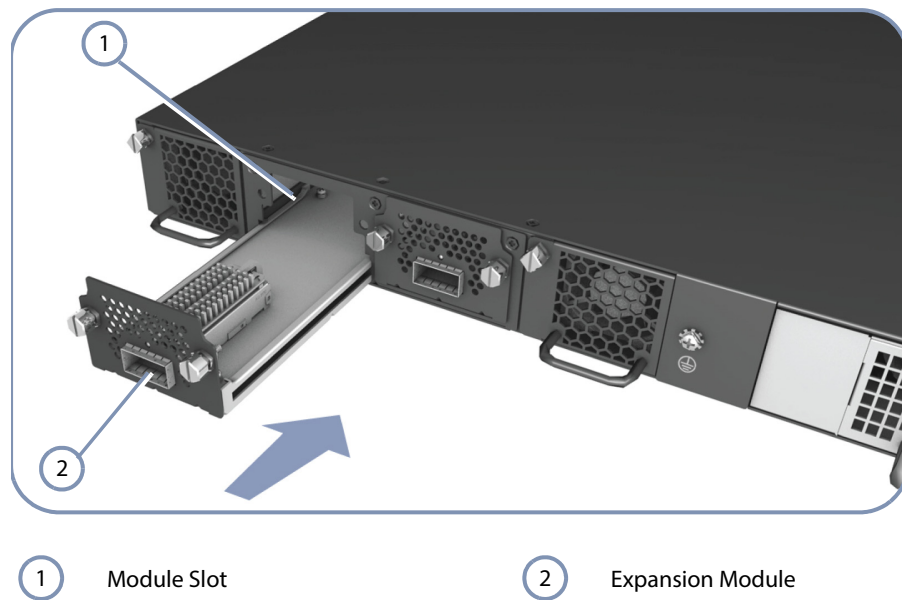

4. Holding the module level, guide it into the carrier rails on each side and gently push it all the way into the slot, ensuring that it firmly engages with the connector.
5. If you are sure the module is properly mated with the connector, tighten the captive screws to secure the module in the slot.
6. The Module LED on the switch's front panel should turn green to confirm that the module is correctly installed and ready to use.

Power and Grounding

This chapter focuses on the switch power supplies, how to install them, and how to power-on the switch. Connecting the switch to ground is also covered.

This chapter includes these sections:

- ◆ “Power Supply Units” on page 32
- ◆ “Grounding the Chassis” on page 34
- ◆ “How to Connect to AC Power” on page 35

Power Supply Units

The switch supports hot-swappable power supply units (PSUs). You can install up to two PSUs with matching airflow direction in the switch. When two PSUs are installed, the PSUs operate in a load-sharing mode and provide 1+1 redundancy.



Note: 1+1 redundancy is a system where a switch power supply is backed up by another switch power supply in a load-sharing mode. If one power supply fails, the other power supply takes over the full load of the switch.

The AC PSUs require power from an external AC power supply that can meet the requirements as listed in [Table 2](#). A standard AC power socket is located on the rear panel of the PSU. The power socket is for the AC power cord.

Figure 20: AC Power Supply Unit

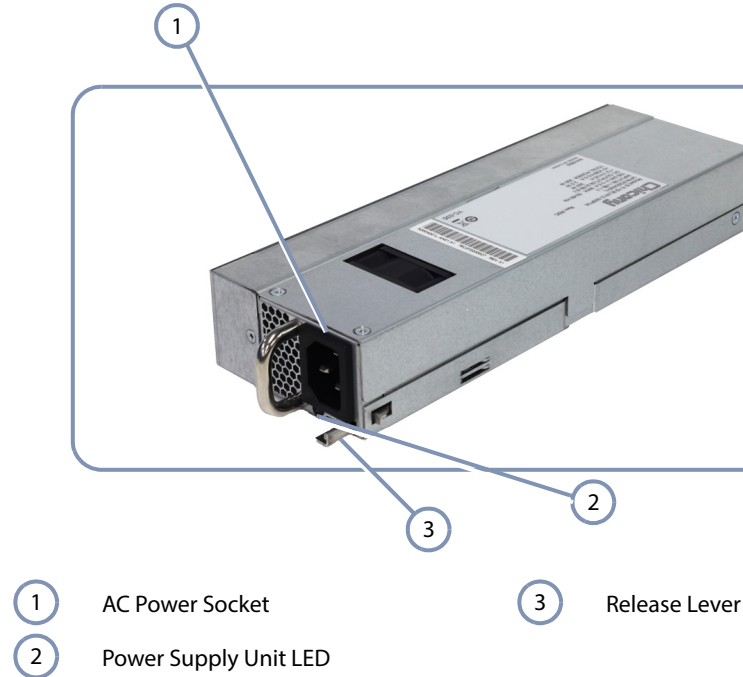


Table 2: AC Power Supply Unit Specifications

Item	Description
AC Input	100-240 VAC, 50-60 Hz, 3.5 A
DC Output	5 VDC @ 0.5 A 12 VDC @ 25 A
Power Supply	100-240 VAC, 50-60 Hz, auto-sensing; hot pluggable
Power Consumption	300 Watts maximum
Maximum Current	3.2 A @ 100 VAC 1.7 A @ 240 VAC
Size	W x D x H: 54.5 x 240 x 40 mm (2.15 x 9.45 x 1.57 inches)

The PSUs also include an AC power status LED. This LED is described in the following table.

Table 3: Power Supply Unit LED


LED	Condition	Status
PSU Rear LED	On Green	External AC input parameters and DC output parameters are within acceptable range and the PSU cooling fan is operating correctly.
	On Red	The AC input parameters and/or DC output parameters are not within operating limits or the PSU cooling fan has failed.
	Off	External power is not connected or has failed.

Grounding the Chassis

The switch chassis must be connected to ground to ensure proper operation and to meet electromagnetic interference (EMI) and safety requirements.

The rear panel of the switch chassis includes a single-screw grounding terminal. It must be connected to ground to ensure proper operation and to meet electromagnetic interference (EMI) and safety requirements.

Figure 21: Grounding Terminal

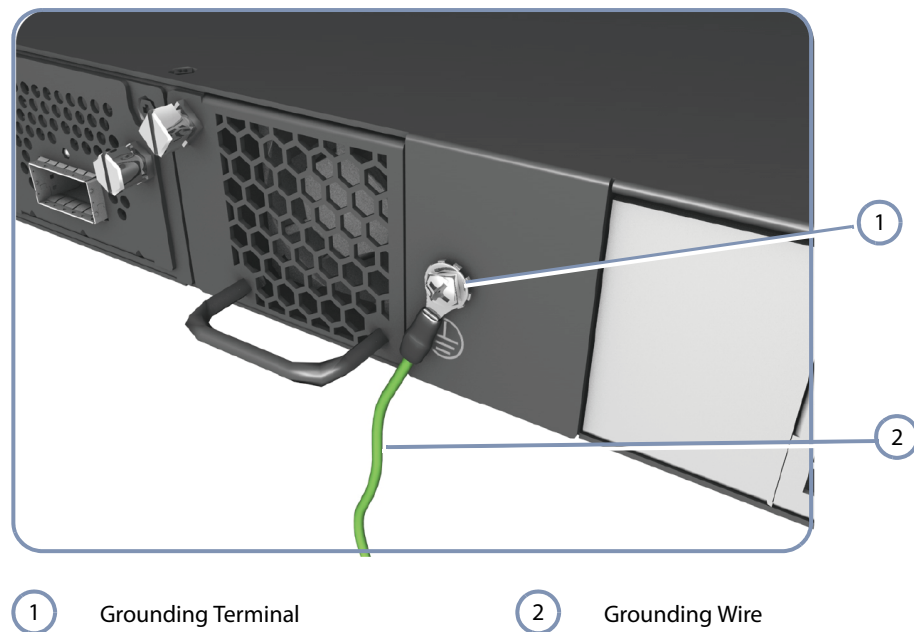

Before powering on the switch, ground the switch to earth as described below.

1. Ensure that the rack on which the switch is to be mounted is properly grounded and in compliance with ETSI ETS 300 253.
2. Ensure that there is a good electrical connection to the grounding point on the rack (no paint or isolating surface treatment).
3. Disconnect all power cables to the switch.
4. This circuit is connected to the single-screw grounding terminal on the rear panel of the switch (left of the AC power socket). The surface area around this terminal is not painted in order to provide for a good connection. Attach a 6 AWG stranded copper wire to the grounding terminal on the switch.
5. Then attach the grounding wire to the ground point on the rack.



Caution: The earth connection must not be removed unless all supply connections have been disconnected.

How to Connect to AC Power

To supply AC power to the switch, first verify that the external AC power supply can provide the power requirement as listed in [Table 2](#) for each PSU installed.



Note: For electrical safety purposes, please pay attention to the following warning notice, printed on the switch unit.




CAUTION

CAUTION: TO DISCONNECT POWER, REMOVE BOTH POWER CORDS FROM UNIT.
ATTENTION: DÉBRANCHER LES DEUX CORDONS D'ALIMENTATION POUR DÉCONNECTER L'UNITÉ DU SECTEUR.
注意：電源を切る場合は、二本の電源コードを本装置から抜いてください。
注意：如要切断电源，請將兩根電源線都從機器上拔掉。
当心：如要切断电源，請將兩根電源線都從機器上拔掉。

To connect the switch to a power source:

1. Install one or two AC PSU units. Slide them into the PSU slots at the rear of the switch until they click into place. (Push the release lever to remove a PSU from the switch.)

Figure 22: AC PSU and Power Socket

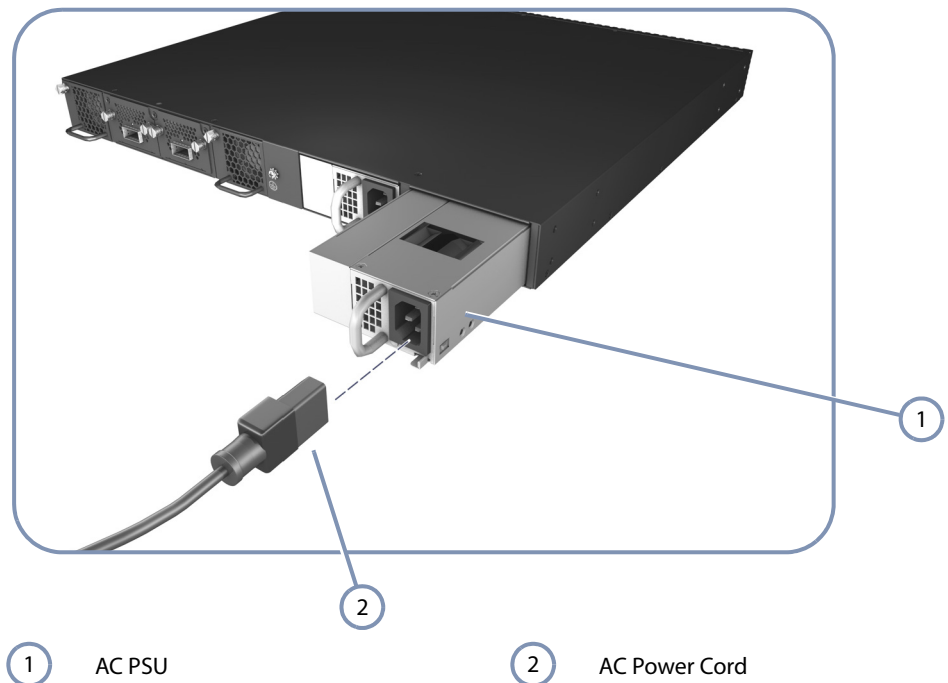

2. Plug the power cord into a grounded, 3-pin, AC power source.



Note: For international use, you may need to change the AC power cord. You must use a cord set that has been approved for the socket type in your country.

3. Insert the plug on the other end of the power cord directly into the socket on the AC PSU.
4. Check the LED indicators on the PSU and switch front panel as the unit is powered on to verify that power is being received. If not, recheck the PSU and power cord connections at the AC supply source and PSU.
5. If you have installed a second PSU, repeat steps 2 to 4.

Port Connections

This chapter focuses on making connections to switch network interfaces, including how to install optional transceivers, and details on network cable specifications.

This chapter includes these sections:

- ◆ [“Cable Labeling and Connection Records” on page 38](#)
- ◆ [“Understanding the Port Status LEDs” on page 39](#)
- ◆ [“How to Install an SFP/SFP+/QSFP+ Transceiver” on page 40](#)
- ◆ [“How to Connect to Twisted-Pair Copper Ports” on page 41](#)
- ◆ [“How to Connect to SFP/SFP+ Fiber Optic Ports” on page 44](#)
- ◆ [“How to Connect to QSFP+ Fiber Optic Ports” on page 47](#)
- ◆ [“DAC Connections” on page 49](#)

Cable Labeling and Connection Records

When planning a network installation, it is essential to label the opposing ends of cables and to record where each cable is connected. Doing so will enable you to easily locate inter-connected devices, isolate faults and change your topology without need for unnecessary time consumption.

To best manage the physical implementations of your network, follow these guidelines:

- ◆ Clearly label the opposing ends of each cable.
- ◆ Using your building's floor plans, draw a map of the location of all network-connected equipment. For each piece of equipment, identify the devices to which it is connected.
- ◆ Note the length of each cable and the maximum cable length supported by the switch ports.
- ◆ For ease of understanding, use a location-based key when assigning prefixes to your cable labeling.
- ◆ Use sequential numbers for cables that originate from the same equipment.
- ◆ Differentiate between racks by naming accordingly.
- ◆ Label each separate piece of equipment.
- ◆ Display a copy of your equipment map, including keys to all abbreviations at each equipment rack.

Understanding the Port Status LEDs

The switch includes LED indicators for each port to indicate link status and network activity. The port LEDs are shown below and described in the following table.

Figure 23: Port Status LEDs

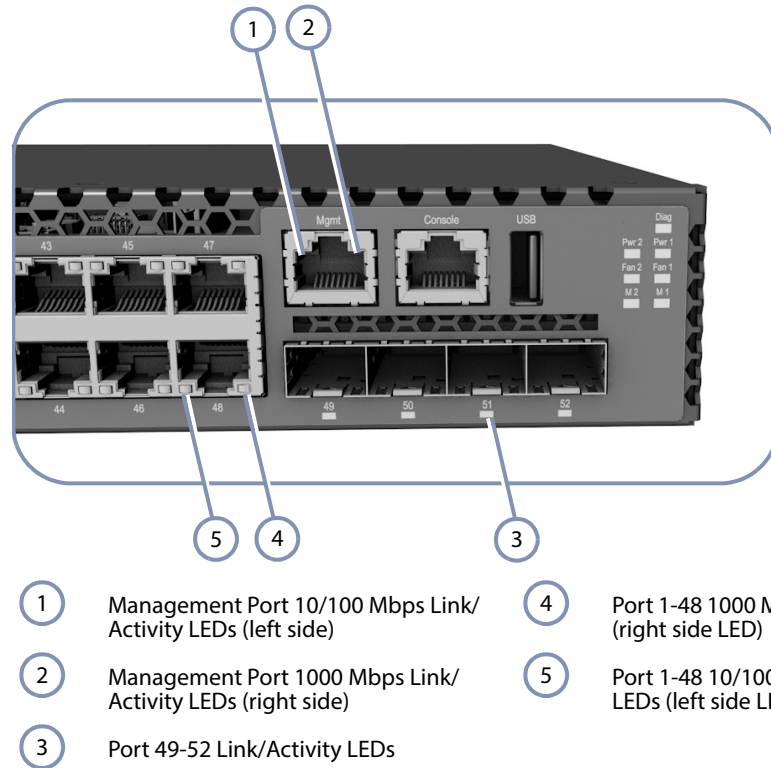


Table 4: Port Status LEDs

LED	Condition	Status
10/100/1000BASE-T RJ-45 Ports (1-48) - right side LED		
Link/Activity (1000 Mbps)	On/Blinking Green	Port has a valid 1000 Mbps link. Blinking indicates activity on the port.
	Off	The link is down.
10/100/1000BASE-T RJ-45 Ports (1-48) - left side LED		
Link/Activity (10/100 Mbps)	On/Blinking Amber	Port has a valid 10/100 Mbps link. Blinking indicates activity on the port.
	Off	The link is down.

Table 4: Port Status LEDs (Continued)

LED	Condition	Status
10G SFP+ Ports (49-52)		
Link/Activity (1/10 Gbps)	On/Blinking Green	Port has a valid 10 Gbps link. Blinking indicates activity on the port.
	On/Blinking Amber	Port has a valid 1000 Mbps link. Blinking indicates activity on the port.
	Off	The link is down.
40G QSFP+ Ports (on optional expansion module)		
Link/Activity	On Green	Port has a valid 40G link.
	Flashing Green	Flashing indicates activity on the port
	Off	The link is down.
Management Port - Right Side LED		
Link/Activity (1000 Mbps)	On/Blinking Green	Port has a valid 1000 Mbps link. Blinking indicates activity on the port.
	Off	The link is down.
Management Port - left side LED		
Link/Activity (10/100 Mbps)	On/Blinking Amber	Port has a valid 10/100 Mbps link. Blinking indicates activity on the port.
	Off	The link is down.

How to Install an SFP/SFP+/QSFP+ Transceiver

The switch provides slots for optional SFP, SFP+ and QSFP+ transceivers. The supported transceiver types are listed below:

40 Gbps Ethernet SFP+ transceivers

- ◆ 40GBASE-CR4 (Direct Attached Copper or DAC)
- ◆ 40GBASE-SR4

10 Gbps Ethernet SFP+ transceivers

- ◆ 10GBASE-SR
- ◆ 10GBASE-CR (Direct Attached Copper or DAC)

Gigabit Ethernet SFP Options

- ◆ 1000BASE-SX

- ◆ 1000BASE-LX
- ◆ 100BASE-FX
- ◆ 1000BASE-T



Note: SFP/SFP+/QSFP+ transceivers are hot-swappable. The switch does not need to be powered off before installing or removing a transceiver.

Note: SFP/SFP+/QSFP+ transceivers are not provided in the switch package.

Note: Transceiver slots used for 10G or 40G DAC connections are described in the section [“DAC Connections” on page 49](#).

To install an SFP/SFP+/QSFP+ transceiver, do the following:

1. Consider network and cabling requirements to select an appropriate transceiver type that is also compatible with the switch transceiver support.
2. If the SFP/SFP+/QSFP+ slot is covered with a rubber protective cap, remove the cap and keep it for later replacement.
3. Insert the transceiver with the optical connector facing outward and the slot connector facing down. Note that SFP/SFP+/QSFP+ transceivers are keyed so they can only be installed in the correct orientation.
4. Slide the transceiver into the slot until it clicks into place. If you do not immediately connect a cable to the port, use a rubber protective cap to keep the transceiver optics clean.

How to Connect to Twisted-Pair Copper Ports

The RJ-45 management port on the switch supports automatic MDI/MDI-X pinout configuration, so you can use standard straight-through twisted-pair cables to connect to any other network device (PCs, servers, switches, routers, or hubs).

The connection requires an unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable with RJ-45 connectors at both ends.

Table 5: Maximum Twisted-Pair Copper Cable Lengths

Cable Type	Maximum Cable Length	Connector
1000BASE-T		
Category 5, 5e, or 6 100-ohm UTP or STP	100 m (328 ft)	RJ-45
100BASE-TX		
Category 5 or better 100-ohm UTP or STP	100 m (328 ft)	RJ-45

Table 5: Maximum Twisted-Pair Copper Cable Lengths (Continued)

Cable Type	Maximum Cable Length	Connector
10BASE-T		
Category 3 or better 100-ohm UTP	100 m (328 ft)	RJ-45

Copper Cabling Guidelines

To ensure proper operation when installing the switch into a network, make sure that the current cables are suitable for 10BASE-T, 100BASE-TX, or 1000BASE-T operation. Check the following criteria against the current installation of your network:

- ◆ Cable type: Unshielded twisted pair (UTP) or shielded twisted pair (STP) cables with RJ-45 connectors; Category 5, 5e or better cable for 1000BASE-T connections, Category 5 or better for 100BASE-TX connections, and Category 3 or better for 10BASE-T connections.
- ◆ Protection from radio frequency interference emissions
- ◆ Electrical surge suppression
- ◆ Separation of electrical wires (switch related or other) and electromagnetic fields from data based network wiring
- ◆ Safe connections with no damaged cables, connectors or shields

10/100BASE-TX Pin Assignments

All 100BASE-TX RJ-45 ports support automatic MDI/MDI-X operation, so you can use straight-through or crossover cables for all network connections to PCs, switches, or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3, and 6 at the other end of the cable.

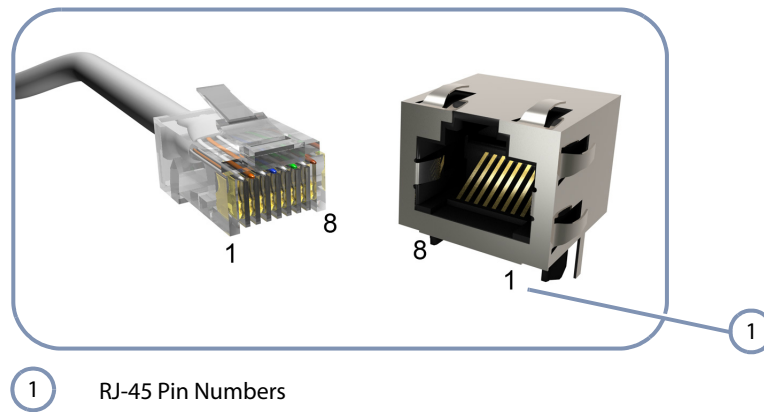
Figure 24: RJ-45 Connector

Table 6: 10/100BASE-TX MDI and MDI-X Port Pinouts

Pin	MDI Signal Name ^a	MDI-X Signal Name
1	Transmit Data plus (TD+)	Receive Data plus (RD+)
2	Transmit Data minus (TD-)	Receive Data minus (RD-)
3	Receive Data plus (RD+)	Transmit Data plus (TD+)
6	Receive Data minus (RD-)	Transmit Data minus (TD-)
4,5,7,8	Not used	Not used

a. The "+" and "-" signs represent the polarity of the wires that make up each wire pair.

1000BASE-T Pin Assignments

All 1000BASE-T ports support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs, servers, or switches.

The table below shows the 1000BASE-T MDI and MDI-X port pinouts. These ports require that all four pairs of wires be connected. Note that for 1000BASE-T operation, all four pairs of wires are used for both transmit and receive.

Table 7: 1000BASE-T MDI and MDI-X Port Pinouts

Pin	MDI Signal Name	MDI-X Signal Name
1	Bi-directional Pair A Plus (BI_DA+)	Bi-directional Pair B Plus (BI_DB+)
2	Bi-directional Pair A Minus (BI_DA-)	Bi-directional Pair B Minus (BI_DB-)
3	Bi-directional Pair B Plus (BI_DB+)	Bi-directional Pair A Plus (BI_DA+)
4	Bi-directional Pair C Plus (BI_DC+)	Bi-directional Pair D Plus (BI_DD+)
5	Bi-directional Pair C Minus (BI_DC-)	Bi-directional Pair D Minus (BI_DD-)
6	Bi-directional Pair B Minus (BI_DB-)	Bi-directional Pair A Minus (BI_DA-)
7	Bi-directional Pair D Plus (BI_DD+)	Bi-directional Pair C Plus (BI_DC+)
8	Bi-directional Pair D Minus (BI_DD-)	Bi-directional Pair C Minus (BI_DC-)


1000BASE-T Cable Requirements

All Category 5 UTP cables that are used for 100BASE-TX connections should also work for 1000BASE-T, providing that all four wire pairs are connected. However, it is recommended that for all critical connections, or any new cable installations, Category 5e (enhanced Category 5) or Category 6 cable should be used. The Category 5e and 6 specifications include test parameters that are only recommendations for Category 5. Therefore, the first step in preparing existing Category 5 cabling for running 1000BASE-T is a simple test of the cable installation to be sure that it complies with the IEEE 802.3-2008 standards.

Connection Procedure Follow these steps to connect cables to 1000BASE-T RJ-45 twisted-pair copper ports.

- 1. Attach one end of a twisted-pair cable segment to the device's RJ-45 connector.

Figure 25: Making Twisted-Pair Connections

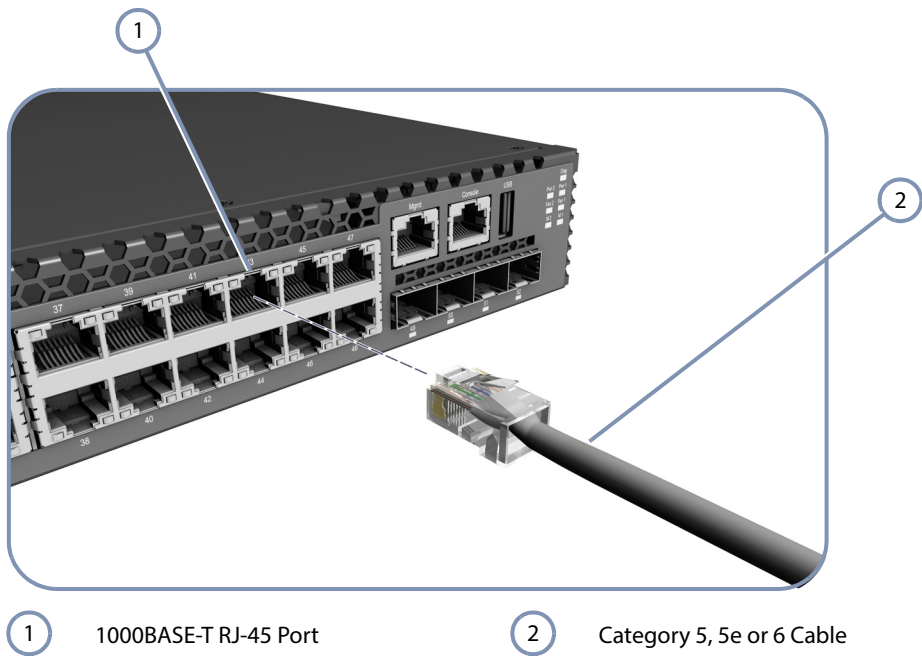

- 2. Attach the other end to an available port on the switch.

Make sure each twisted pair cable does not exceed 100 meters (328 ft) in length.

- 3. As each connection is made, the Link LED (on the switch) corresponding to each port will turn on green or amber to indicate that the connection is valid.

How to Connect to SFP/SFP+ Fiber Optic Ports

The AS4600-54T switch includes 4 slots for 10 Gigabit Ethernet SFP+ or Gigabit Ethernet SFP fiber-optic transceivers.

Note that all 10GBASE fiber optic ports and 1000BASE fiber optic ports operate at 10 and 1 Gbps full duplex respectively.

Table 8: Maximum 10 Gigabit Ethernet Fiber Cable Lengths

Fiber Size	Fiber Bandwidth	Maximum Cable Length	Connector
10GBASE-SR			
62.5/125 micron multimode	160 MHz/km	2-26 m (7-85 ft.)	LC

Table 8: Maximum 10 Gigabit Ethernet Fiber Cable Lengths (Continued)

Fiber Size	Fiber Bandwidth	Maximum Cable Length	Connector
62.5/125 micron multimode	200 MHz/km	2-33 m (7-108 ft.)	LC
50/125 micron multimode	400 MHz/km	2-66 m (7-216 ft.)	LC
50/125 micron multimode	500 MHz/km	2-82 m (7-269 ft.)	LC
50/125 micron multimode	2000 MHz/km	2-300 m (7-984 ft.)	LC

Table 9: Maximum Gigabit Ethernet Fiber Cable Lengths

Cable Type	Fiber Bandwidth	Maximum Cable Length	Connector
1000BASE-SX			
62.5/125 micron multimode	160 MHz/km	2-220 m (7-722 ft)	LC
	200 MHz/km	2-275 m (7-902 ft)	LC
50/125 micron multimode	400 MHz/km	2-500 m (7-1641 ft)	LC
	500 MHz/km	2-550 m (7-1805 ft)	LC
1000BASE-LX			
9/125 micron single-mode	N/A	2 m - 10 km (7 ft - 6.2 miles)	LC



Note: The length of fiber optic cable for a single switched link should not exceed the relevant standards specified in this section. However, power budget constraints should also be considered when calculating the maximum fiber optic cable length for a particular link.

Connection Procedure Follow these steps to connect cables to SFP/SFP+ transceiver ports.




Warning: This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.

Warning: When selecting a fiber SFP/SFP+ device, considering safety, please make sure that it can function at a temperature that is not less than the recommended maximum operational temperature of the product. You must also use an approved Laser Class 1 SFP/SFP+ transceiver.

1. Remove and keep the fiber port's rubber cover. When not connected to a fiber cable, the rubber cover should be replaced to protect the optics.

2. Check that the fiber terminators are clean. You can clean the cable plugs by wiping them gently with a clean tissue or cotton ball moistened with a little ethanol. Dirty fiber terminators on fiber cables will impair the quality of the light transmitted through the cable and lead to degraded performance on the port.
3. Connect one end of the cable to the LC connector on one of the switch's SFP transceivers and the other end to the LC port on the other device. Since both LC connectors are keyed, the cable can only be attached in the correct orientation.

Figure 26: Making Connections to an SFP+ Transceiver

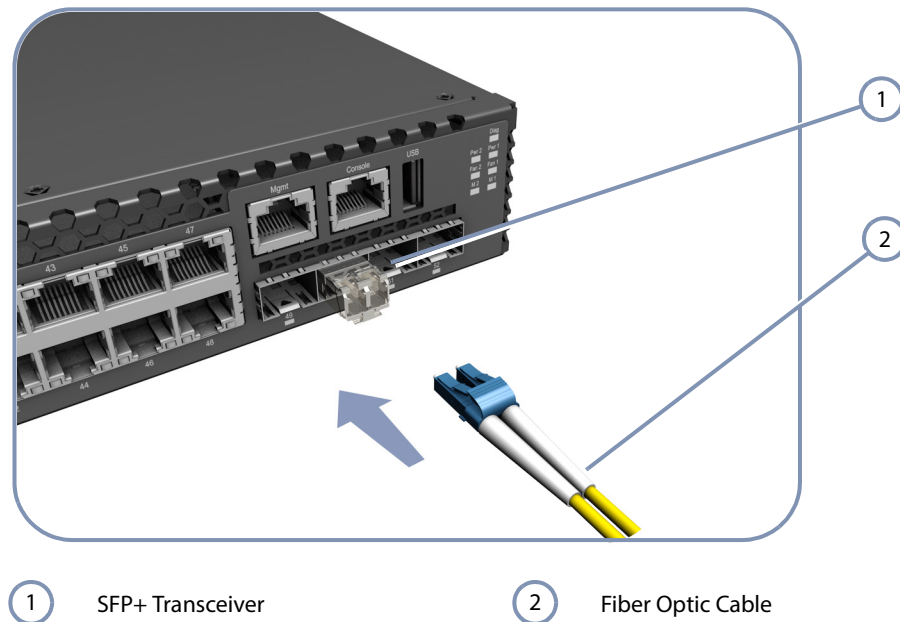

4. As a connection is made, check the Link LED on the switch corresponding to the port to be sure that the connection is valid.



Note: Be sure to secure cables properly and route them away from the switch without exceeding the minimum bending radius for fiber cables (typically a few inches). Use cable ties to bundle cables together and secure coiled loops of excess cable. Do not let cables hang free supporting their own weight or pull in any way that puts stress on the connectors.

How to Connect to QSFP+ Fiber Optic Ports

The switch includes two slots for expansion modules that support 40G QSFP+ fiber-optic transceivers. Note that 40G fiber optic ports can provide either one 40 Gbps full-duplex link, four independent 10G fiber optic links. Connecting a 40G QSFP+ port to four 10G SFP+ ports requires the use of a breakout cable.

Table 10: Maximum 40 Gigabit Ethernet Fiber Cable Lengths

Fiber Size	Fiber Bandwidth	Maximum Cable Length	Connector
40GBASE-SR4			
62.5/125 micron multimode	160 MHz/km	2-26 m (7-85 ft.)	LC
62.5/125 micron multimode	200 MHz/km	2-33 m (7-108 ft.)	LC
50/125 micron multimode	400 MHz/km	2-66 m (7-216 ft.)	LC
50/125 micron multimode	500 MHz/km	2-82 m (7-269 ft.)	LC
50/125 micron multimode	2000 MHz/km	2-300 m (7-984 ft.)	LC



Note: The length of fiber optic cable for a single switched link should not exceed the relevant standards specified in this section. However, power budget constraints should also be considered when calculating the maximum fiber optic cable length for a particular link.

Connection Procedure Follow these steps to connect cables to QSFP+ transceiver ports.




Warning: This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.

Warning: When selecting a fiber QSFP+ device, considering safety, please make sure that it can function at a temperature that is not less than the recommended maximum operational temperature of the product. You must also use an approved Laser Class 1 QSFP+ transceiver.

1. Remove and keep the port's protective cover. When not connected to a fiber cable, the cover should be replaced to protect the optics.
2. Check that the fiber terminators are clean. You can clean the cable plugs by wiping them gently with a clean tissue or cotton ball moistened with a little ethanol. Dirty fiber terminators on fiber cables will impair the quality of the light transmitted through the cable and lead to degraded performance on the port.

3. Connect one end of the cable to the QSFP+ port on the switch and the other end to the QSFP+ port on the other device. Since QSFP+ connectors are keyed, the cable can only be attached in the correct orientation.

Figure 27: Connecting to a QSFP+ Transceiver

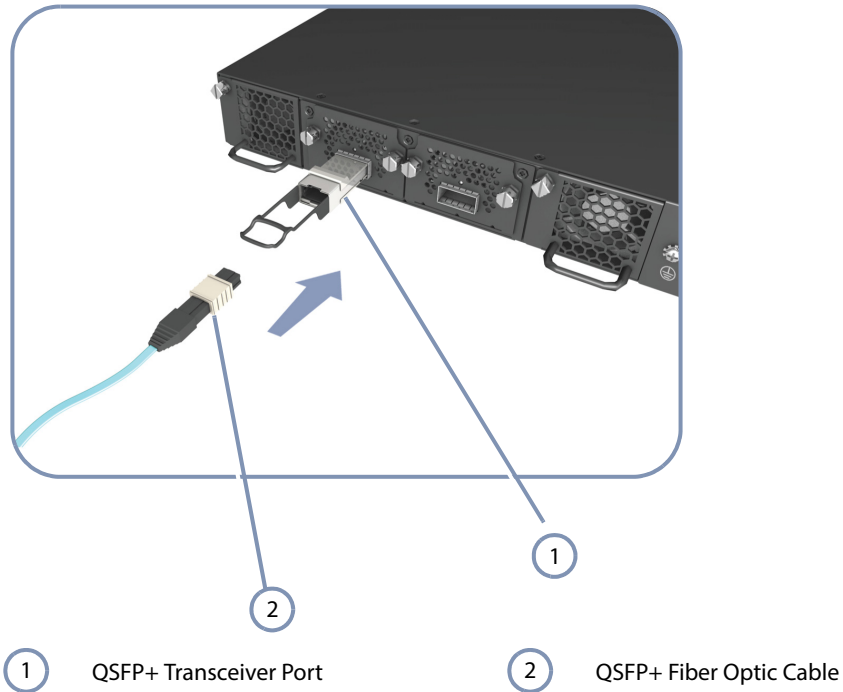

4. As a connection is made, check the Link LED on the switch to be sure that the connection is valid.



Note: Be sure to secure cables properly and route them away from the switch without exceeding the minimum bending radius for fiber cables (typically a few inches). Use cable ties to bundle cables together and secure coiled loops of excess cable. Do not let cables hang free supporting their own weight or pull in any way that puts stress on the connectors.

DAC Connections

Direct Attach Cable (DAC) is a method of connecting two SFP+/QSFP+ interfaces without using optics and fiber cable. A fixed length of twinax copper cable is terminated at each end with physically-compliant SFP+/QSFP+ transceivers that do not include all their normal electronic and optical components. The result is a low cost, low-latency, 10G/40G Ethernet solution for short distances, ideal for connections within the data center.

A 10G DAC connection is also known as twinax copper or 10GBASE-CR. DAC copper cables are available in pre-terminated lengths up to 7 m (22.9 ft).

For 40G DAC, or 40GBASE-CR4, copper cables are also available in pre-terminated lengths up to 7 m (22.9 ft).

Table 11: Maximum 10GBASE-CR 10 Gigabit Ethernet Cable Lengths

Cable Type	Cable Lengths	Connector
Pre-terminated Direct Attach Cable (DAC) — (twinax copper cable)	1 m (3.28 ft)	SFP+
	2 m (6.56 ft)	
	3 m (9.8 ft)	
	5 m (16.4 ft)	
	7 m (22.9 ft)	


Table 12: Maximum 40GBASE-CR4 40 Gigabit Ethernet Cable Lengths

Cable Type	Cable Lengths	Connector
Pre-terminated Direct Attach Cable (DAC) — (twinax copper cable)	1 m (3.28 ft)	QSFP+
	2 m (6.56 ft)	
	3 m (9.8 ft)	
	5 m (16.4 ft)	
	7 m (22.9 ft)	

Making DAC Connections


1. Plug the SFP+/QSFP+ transceiver connector on one end of a twinax copper cable segment into an SFP+/QSFP+ slot on the link device.

Figure 28: Making DAC Connections (10G)

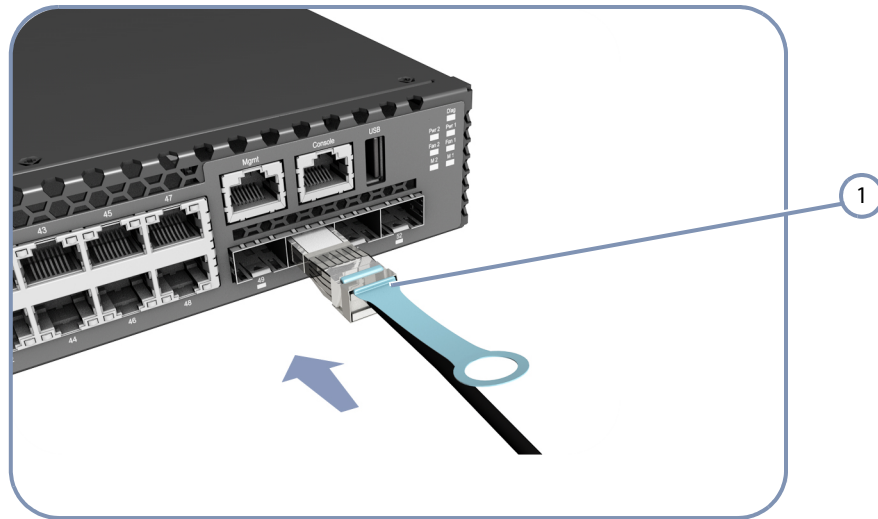

1 10G SFP+ DAC Cable

Figure 29: Making DAC Connections (40G)

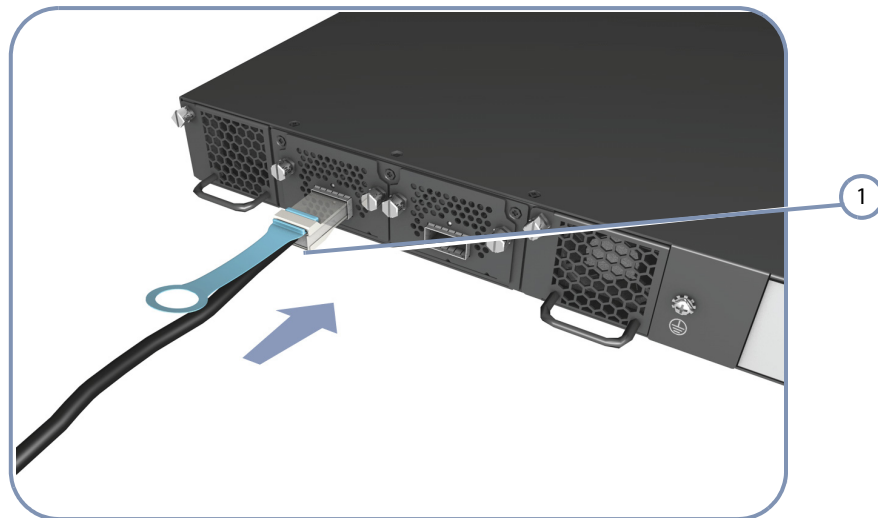

1 40G SFP+ DAC Cable

2. Plug the other end of the twinax cable into an SFP+/QSFP+ slot on the switch.
3. Check that the Link LED on the switch turns on green to indicate that the connection is valid.



Note: Connecting a 40G QSFP+ port to four 10G SFP+ ports requires the use of a breakout DAC cable.

Switch Management

The switch includes a management agent that allows you to configure or monitor the switch using its embedded management software. To manage the switch, you can make a direct connection to the console port (out-of-band), or you can manage it through a network connection (in-band) using Telnet, Secure Shell (SSH), a web browser, or SNMP-based network management software.

For a detailed description of the switch's software features, refer to the *Administrator's Guide*.


This chapter includes these sections:

- ◆ ["Understanding the System Status LEDs" on page 52](#)
- ◆ ["How to Connect to the Console Port" on page 53](#)
- ◆ ["How to Connect to the Mgmt Port" on page 55](#)

Understanding the System Status LEDs

The switch includes a display panel of key system LED indicators. The LEDs, which are located on the front panel, are shown below and described in the following table.

Figure 30: System Status LEDs

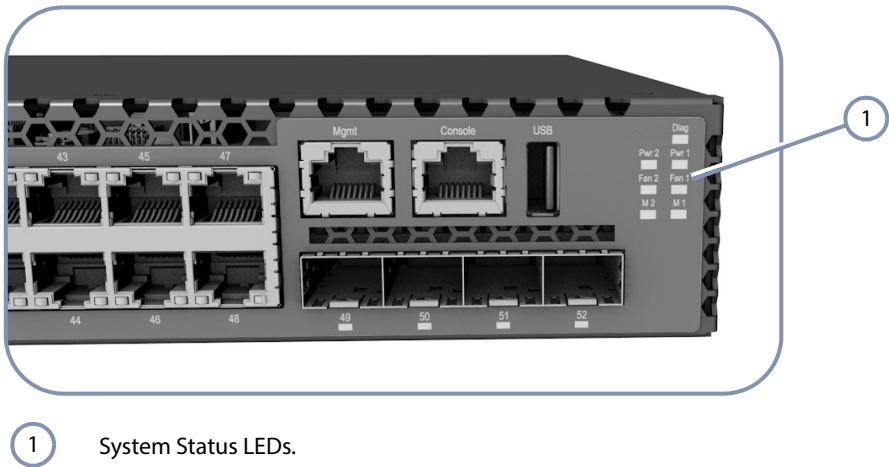

1 System Status LEDs.

Table 13: System Status LEDs

LED	Condition	Status
Diag	On Green	The system diagnostic test has completed successfully.
	On Amber	System diagnostic is in progress
	Flashing Amber	The system self-diagnostic test has detected a fault.
	Alternate Green Amber	The system is booting-up.
Pwr 1/Pwr 2	On Green	Power supply 1/2 is installed and operating normally.
	On Amber	The power supply has detected a fault.
	Off	The power supply unit is not installed.
Fan 1 / Fan 2	On Green	Fan tray 1/2 is installed and operating normally.
	On Amber	The fan tray has detected a fault.
	Off	The fan tray is not installed.
M1 / M2	On Green	Expansion port module installed and operating normally.
	On Amber	Expansion port module has detected a fault.
	Off	The expansion port module is not installed.


How to Connect to the Console Port

The RJ-45 Console port on the switch's front panel is used to connect to the switch for out-of-band console configuration. The console device can be a PC or workstation running a VT-100 terminal emulator, or a VT-100 terminal. A console cable is supplied with the switch for connecting to a PC's RS-232 serial DB-9 DTE (COM) port.



Note: To connect to notebooks or other PCs that do not have a DB-9 COM port, use a USB-to-male DB-9 adapter cable (not included with the switch).

Figure 31: Console Port

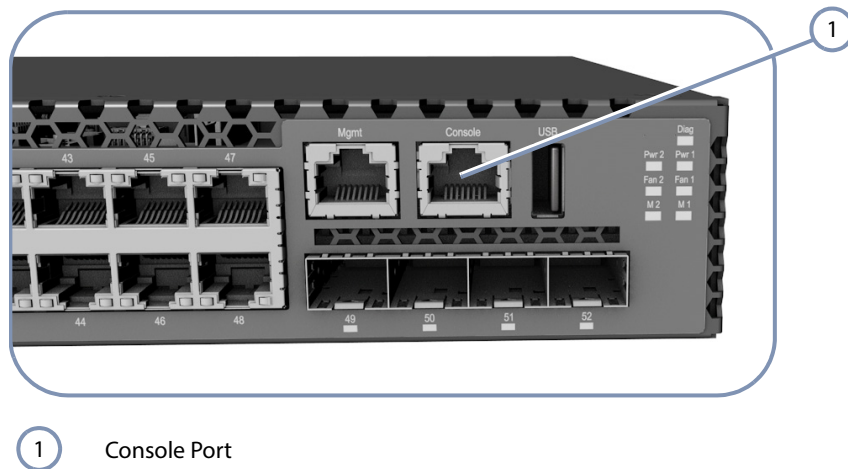

1 Console Port

The following table describes the pin assignments used in the console cable.

Table 14: Console Cable Wiring


Switch's RJ-45 Console Port	Null Modem	PC's 9-Pin DTE Port
6 RXD (receive data)	<-----	3 TXD (transmit data)
3 TXD (transmit data)	----->	2 RXD (receive data)
4,5 SGND (signal ground)	-----	5 SGND (signal ground)
No other pins are used.		

The serial port's configuration requirements are as follows:

- ◆ Default Baud rate—115200 bps
- ◆ Character Size—8 Characters
- ◆ Parity—None

- ◆ Stop bit—One
- ◆ Data bits—8
- ◆ Flow control—none

Figure 32: Console Port Connection

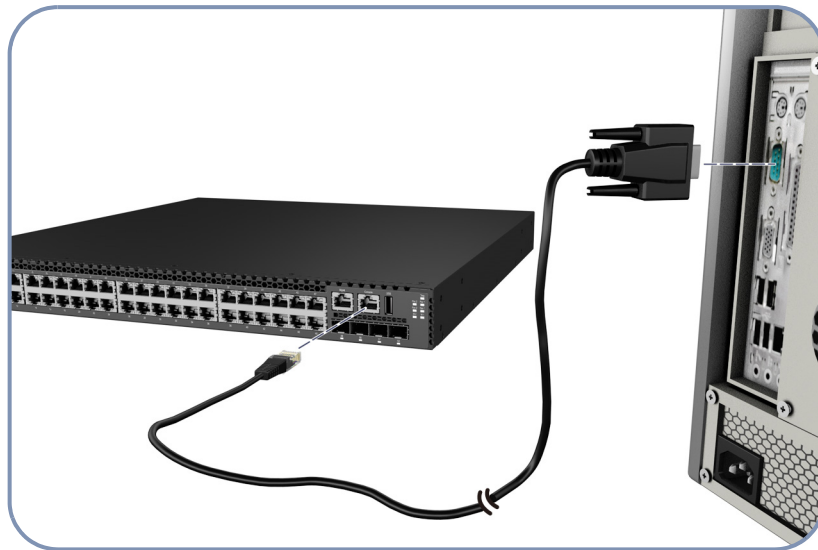

Follow these steps to connect to the Console port:

1. Attach one end of the included RJ-45-to-DB-9 serial cable to a DB-9 COM port connector on a management PC.
2. Attach the other end of the serial cable to the Console port on the switch.
3. Configure the PC's COM port required settings using VT-100 terminal emulator software (such as HyperTerminal) running on the management PC. The switch's default console port settings are:
 - 115200 bps, 8 characters, no parity, one stop bit, 8 data bits, and no flow control
4. Log in to the command-line interface (CLI) using default settings:
 - User—admin
 - Password—*null* (there is no default password)

For a detailed description of connecting to the console and using the switch's command line interface (CLI), refer to the *Administrator's Guide*.

How to Connect to the Mgmt Port


The port on the switch's front panel labeled "Mgmt" provides an out-of-band network connection to the management agent of the switch using TCP/IP over Ethernet. You can access the switch from anywhere in the attached network using Telnet, a web browser, or other network management tools.

When using the switch's command-line interface (CLI), the Mgmt port is identified as the "serviceport" and there is no default IP address. The "serviceport protocol" is set to DHCP enabled as default.



Note: The management port provides direct TCP/IP over Ethernet access to the switch's configuration. To prevent unauthorized access, it is recommended that it only be connected to a secure private network.

Figure 33: Management Port

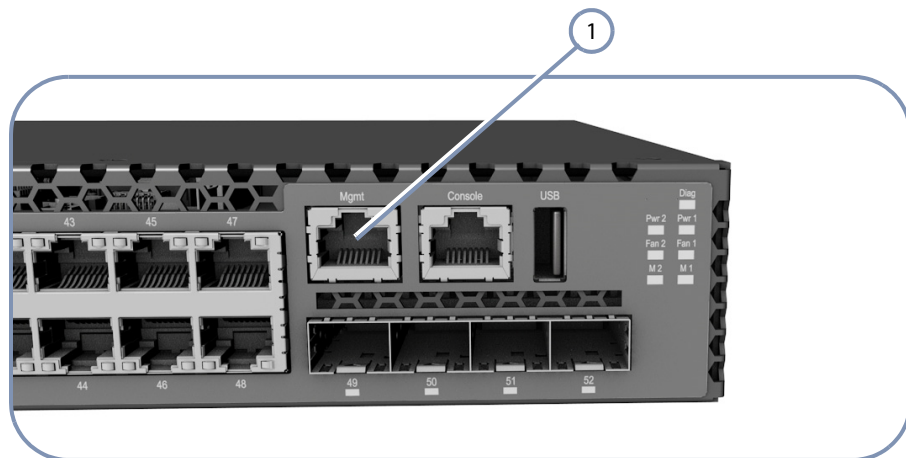

1 Management Port

Management port access procedure.

1. Verify that the serviceport has a configured IP address. For more information, see the *Administrator's Guide*.
2. Connect a management PC or network to the Mgmt port. (See ["How to Connect to Twisted-Pair Copper Ports"](#) on page 41 for details.)
3. Use an appropriate software tool to access the switch management interface.
4. Log in using the default username and password.



Troubleshooting

Diagnosing LED Indicators

Table 15: Troubleshooting Chart

Symptom	Action
Pwr 1/Pwr 2 LED is Off	<ul style="list-style-type: none">◆ Check connections between the PSU, the power cord and the wall outlet.◆ Contact your dealer for assistance.
Pwr 1/Pwr 2 LED is on Amber	<ul style="list-style-type: none">◆ Power cycle the PSU to try and clear the condition.◆ Replace the PSU.
Diag LED is flashing Amber	<ul style="list-style-type: none">◆ Power cycle the switch to try and clear the condition.◆ If the condition does not clear, contact your dealer for assistance.
Fan 1/ Fan 2 LED is on Amber	<ul style="list-style-type: none">◆ Check fans in the fan tray.◆ Replace the fan tray as soon as possible.
Link/Act LED is Off	<ul style="list-style-type: none">◆ Verify that the switch and attached device are powered on.◆ Be sure the cable is plugged into both the switch and corresponding device.◆ Verify that the proper cable type is used and its length does not exceed specified limits.◆ Check the attached device and cable connections for possible defects. Replace the defective cable if necessary.
PSU LED is on Red	<ul style="list-style-type: none">◆ Check AC input voltage.◆ Replace the PSU as soon as possible.
PSU LED is off	<ul style="list-style-type: none">◆ Check AC input voltage.◆ Replace the PSU as soon as possible.

System Self-Diagnostic Test Failure

If the Diag LED indicates a failure of the system power-on-self-test (POST), you can use a console connection to view the POST results. The POST results may indicate a failed component or help troubleshoot the problem. For more information on connecting to the console port and using the CLI, refer to the *Administrator's Guide*.

Note a POST failure normally indicates a serious hardware fault that cannot be rectified or worked around. If you encounter a POST failure, you should contact your dealer for assistance.

Power and Cooling Problems

If a power indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or PSU. However, if the switch powers off after running for a while, check for loose power connections, power losses or surges at the power outlet. If you still cannot isolate the problem, the PSU may be defective.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (such as the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

In-Band Access

You can access the management agent in the switch through a connection to any port using Telnet, a web browser, or other network management software tools. However, you must first configure the switch with a valid IP address, subnet mask, and default gateway. If you have trouble establishing a link to the management agent, check to see if you have a valid network connection. Then verify that you entered the correct IP address. Also, be sure the switch port has not been disabled. If it has not been disabled, then check the network cabling that runs between your remote location and the switch.



Note: It is recommended that you use the out-of-band Management port as described in the section: [“How to Connect to the Mgmt Port” on page 55.](#)

Index

Numerics

10/100 PIN assignments [42](#)
1000BASE-SX fiber cable Lengths [45](#)
1000BASE-T PIN assignments [43](#)
10GBASE fiber cable lengths [44](#), [47](#)
10GBASE-LR fiber cable lengths [49](#)

A

air flow requirements [24](#)

B

brackets, attaching [26](#)
buffer size [13](#)

C

cable
 Ethernet cable compatibility [42](#)
 labeling and connection records [38](#)
 lengths [44](#), [47](#)
cleaning fiber terminators [46](#), [47](#)
console port
 pin assignments [53](#), [55](#)
console port, pin assignments [53](#), [55](#)
contents of package [17](#)
cord sets, international [36](#)

D

diagnosing LED indicators [56](#)

E

electrical interference, avoiding [24](#)
equipment checklist [17](#)

F

fan tray [28](#)

I

in-band access [57](#)
indicators, LED [39](#), [52](#)

installation

 power requirements [24](#)
 site requirements [24](#)
installation troubleshooting [57](#)
introduction [10](#), [17](#)

L

laser safety [45](#), [47](#)
LC port connections [44](#)
LED indicators
 DIAG [52](#)
 port [39](#), [40](#)
 power [33](#)
 PWR [52](#)
location requirements [24](#)

M

management
 out-of-band [51](#)
 web-based [51](#)

O

out-of-band management [51](#)

P

package contents [17](#)
pin assignments
 console port [53](#), [55](#)
power
 indicators [33](#)
power and cooling problems [57](#)

R

rear panel socket [32](#)

S

screws for rack mounting [25](#)
SFP
 transceiver connections [44](#)
site selection [24](#)

specifications
 environmental 14
status LEDs 39, 52
surge suppressor, using 24

W

web-based management 51



Declaration of Conformity (DoC) can be obtained from www.edge-core.com -> support -> download -> declarations & certifications

AS4600-54T
E122013-AP-R01
150200000566